



GE VERNOVA

8 Series 889

Instruction Manual

Generator Protection System

Hardware Version: C

Firmware Version: 4.30

Publication Reference: 889-1601-0320-C430-3



Copyright statement

Copyright © 2025 GE Vernova. All rights reserved.

GridBeats, Universal Relay, Multilin, MiCOM, S1 Agile, P40 Agile, DS Agile, EnerVista, CyberSentry, HardFiber, FlexLogic, FlexElement, FlexCurve, FlexAnalog, FlexInteger and FlexState are trademarks or registered trademarks of GE Vernova.

The contents of this manual are the property of GE Vernova. This documentation is furnished on license and may not be reproduced in whole or in part without the permission of GE Vernova. The content of this manual is for informational use only and is subject to change without notice.

Disclaimer

It is the responsibility of the user to verify and validate the suitability of all GE Vernova products. This equipment must be used within its design limits. The proper application including the configuration and setting of this product to suit the power system assets, is the responsibility of the user, who is also required to ensure that all local or regional safety guidelines are adhered to. Incorrect application of this product could risk damage to property, the environment, personal injuries or fatalities and it is the sole responsibility of the person/entity applying and qualifying the product for use.

The content of this document has been developed to provide guidance to properly install, configure and maintain this product for its intended applications. This guidance is not intended to cover every possible contingency that may arise during commissioning, operation, service, or maintenance activities. Should you encounter any circumstances not clearly addressed in this document, please contact your local GE Vernova service site.

It is the sole responsibility of the user to secure their network and associated devices against cybersecurity intrusions or attacks. GE Vernova and its affiliates are not liable for any damages or losses arising from or related to such security intrusion or attacks.

The information contained in this document is subject to change without notice.

Warranty

GE Vernova warrants most of its manufactured products for 10 years.

For warranty details including any limitations and disclaimers, see the Terms and Conditions at <http://www.gevernova.com/gegridsolutions.com/multilin/warranty.htm>

Major changes

For information on the updates included in this release of the manual, please refer to the latest release notes.

Contents

Chapter 1	Introduction	1
1.1	Chapter Overview	2
1.2	Foreword	3
1.2.1	Target Audience	3
1.2.2	Typographical conventions	3
1.2.3	Nomenclature	4
1.3	Product overview	5
1.4	General description of the 8 Series	6
1.5	Functions and features	8
1.6	Security Overview	13
1.7	Order Codes	15
1.8	Cautions, warnings and notes	19
1.8.1	Safety words and definitions	19
1.8.2	General Cautions and Warnings	19
1.9	Must-read Information	22
1.9.1	Storage	22
1.10	For Further Assistance	23
1.10.1	Repairs	23
Chapter 2	Installation	24
2.1	Chapter Overview	26
2.2	Product Identification	27
2.3	Dimensions	28
2.4	Mounting	29
2.4.1	Standard Panel Mount	29
2.5	Draw-out Unit Withdrawal and Insertion	34
2.6	Removable Power Supply	36
2.7	Removable Magnetic Module	37
2.8	Remote Module I/O (RMIO)	40
2.9	IP20 Back Cover	42
2.10	Arc Flash Sensor	43
2.11	Physical considerations of wiring	52
2.11.1	Terminal Strip Types	53
2.11.2	Wire Size	54
2.12	Terminal connections	55
2.12.1	General connections	56
2.13	Terminal Identification	58
2.14	RMIO Module Installation	61
2.15	Phase Sequence and Transformer Polarity	63
2.16	Zero-Sequence CT Installation	67
2.17	Voltage Inputs	68
2.18	RTD sensor connections	69
2.19	Control Power	72
2.20	Contact Inputs	73
2.21	Output Relays	75
2.22	Serial Communications	78
2.23	IRIG-B	79
2.24	Typical Wiring Diagrams	80
Chapter 3	Interfaces	81
3.1	Chapter Overview	82

3.2	First access	83
3.3	Front panel options	84
3.3.1	Graphical Display Pages	85
3.3.1.1	Menu hierarchy	86
3.3.1.2	Working with Graphical Display Pages	87
3.3.1.3	Single Line Diagram	89
3.3.2	Three-pushbutton front panel LEDs	91
3.3.3	Ten-pushbutton front panel LEDs	93
3.3.4	Home screen icons	95
3.3.5	Relay Messages	95
3.3.5.1	Target Messages	95
3.3.5.2	Self-test errors	96
3.3.5.3	Out of Service	100
3.3.5.4	Flash Messages	100
3.3.6	Label Removal	100
3.4	Software Interface	102
3.4.1	EnerVista D&I Setup	102
3.4.1.1	Hardware & Software Requirements	102
3.4.1.2	Installing EnerVista D&I Setup	102
3.4.1.3	Upgrading EnerVista D&I Setup	103
3.4.2	Connecting EnerVista D&I Setup to the relay	103
3.4.2.1	Using the Quick Connect Feature	103
3.4.2.2	Configuring Ethernet Communications	103
3.4.2.3	Connecting to the Relay	104
3.4.2.4	Configuring USB Address	104
3.4.3	Working with Setpoints	106
3.4.3.1	Engaging a Device	106
3.4.3.2	Entering Setpoints	106
3.4.3.3	Using Setpoint Files	108
3.4.3.4	Downloading and saving Setpoint files	109
3.4.3.5	Adding Setpoint files to the environment	109
3.4.3.6	Creating a new Setpoints file	109
3.4.3.7	Upgrading Setpoint files to a new revision	110
3.4.3.8	Printing Setpoints	110
3.4.3.9	Printing values from a connected device	110
3.4.3.10	Loading Setpoints from a File	111
3.4.3.11	Uninstalling files and clearing data	111
3.4.4	Quick Setup	111
3.4.5	Upgrading relay firmware	111
3.4.5.1	Loading new relay firmware	112
3.4.6	SLD Configurator	113
3.4.6.1	Control Objects	114
3.4.6.2	Status Objects	116
3.4.6.3	Metering Objects	116
3.4.6.4	Device Status Object	117
3.4.6.5	Static Objects	117
3.4.6.6	Front Panel Interaction	117
3.4.7	FlexCurve Editor	119
3.4.8	Transient Recorder (Waveform Capture)	120
3.4.9	Protection Summary	123
3.4.10	FlexLogic Favourites	124
3.4.11	Offline Settings File Conversion	124
3.4.11.1	Converting legacy files	124
3.4.11.2	Conversion Summary Report	125
3.4.11.3	Results Window	125
3.4.11.4	Self-test errors	125
3.4.11.5	Self-test errors	130

Chapter 4	Cyber-security	135
4.1	Overview	136
4.2	The Need for Cyber-Security	137
4.3	Standards	138
4.3.1	NERC Compliance	138
4.3.1.1	CIP 002	139
4.3.1.2	CIP 003	139
4.3.1.3	CIP 004	139
4.3.1.4	CIP 005	139
4.3.1.5	CIP 006	140
4.3.1.6	CIP 007	140
4.3.1.7	CIP 008	140
4.3.1.8	CIP 009	140
4.3.2	IEEE 1686-2013	140
4.3.3	IEC 62351	141
4.4	Cybersecurity Implementation	146
4.4.1	RBAC Functionality	146
4.4.2	Basic Security Implementation	147
4.4.2.1	Device/Local Authentication	147
4.4.2.2	Four-level Access	147
4.4.2.3	Bypass Access	148
4.4.2.4	Enhanced Password Security	149
4.4.2.5	Disabling Physical and Logical Ports	149
4.4.2.6	Non-Encrypted/Clear Text Modbus	150
4.4.2.7	Security Events	150
4.4.3	Advanced Cybersecurity Implementation	151
4.4.3.1	Permissions Vs Access Matrix/Permission Assignment	151
4.4.3.2	Server/Remote Authentication	152
4.4.3.3	Server/Remote Authentication (RADIUS)	152
4.4.3.4	Server/Remote Authentication (LEGACY LDAP PULL MODEL)	153
4.4.4	Unique Configurable Usernames	156
4.4.5	Secure Encrypted Communication	156
4.4.5.1	ModBus/SSH	156
4.4.5.2	SFTP	156
4.4.6	Syslog	157
4.4.7	Increased product hardening	158
4.4.7.1	Additional Features	158
4.4.8	Lost Password	159
4.4.9	Loading Factory Configuration	159
4.4.10	Additional Features	159
4.4.10.1	Lost Password	159
4.4.10.2	Loading Factory Configuration	159
4.5	RBAC User Management Cybersecurity Configuration Tool	160
4.5.1	Cybersecurity Modbus Settings Configuration	160
4.5.1.1	Cybersecurity Non-Modbus Settings Configuration	160
4.5.1.2	User Management Configuration	161
4.5.1.3	Roles Configuration	163
4.5.1.4	Security Settings Configuration	166
4.5.1.5	Syslog Configuration	169
Chapter 5	About Setpoints	171
5.1	Chapter Overview	172
5.2	About Setpoints	173
5.3	Setpoints Entry Methods	174
5.4	Common Setpoints	175
5.5	Logic Diagrams	177

Chapter 6	Device Setpoints	178
6.1	Chapter Overview	179
6.2	Device menu hierarchy	180
6.3	Custom Configuration	181
6.4	Real-time Clock	184
6.4.1	PTP Configuration	184
6.4.2	Clock	186
6.4.3	SNTP Protocol	187
6.5	Communications	189
6.5.1	General	189
6.5.2	Modbus Protocol	189
6.5.3	Modbus configurable parameters	190
6.5.4	RS485	192
6.5.5	Wi-Fi	192
6.5.6	Wi-Fi Quick Start Procedure	194
6.5.7	USB	195
6.5.8	Ethernet Ports	196
6.5.8.1	Network Settings Menu	196
6.5.9	Routing	199
6.5.10	DNP Protocol settings	201
6.5.11	DNP and IEC104 point lists	204
6.5.12	IEC60870-5-104	207
6.5.13	IEC60870-5-103	208
6.5.14	IEC 103 Point Lists	209
6.5.14.1	Binary Input Points	209
6.5.14.2	Measurands	209
6.5.14.3	Commands	210
6.5.15	IEC 103 Disturbance Recorder	210
6.5.16	GOOSE Subscribe	211
6.5.16.1	Remote Inputs	211
6.5.16.2	Remote Inputs DPS	211
6.5.16.3	GOOSE Analog	211
6.5.17	Remote Modbus Device	213
6.5.17.1	Remote Modbus Device Editor	213
6.5.18	IEC 61850 MMS	215
6.5.19	TFTP	215
6.5.20	SFTP/SSH	215
6.5.21	SNMP	215
6.5.21.1	SNMP MIB	217
6.5.22	OPC-UA	221
6.5.23	EthernetIP	221
6.5.24	IEC 61850	221
6.5.24.1	IEC61850 Configurator	222
6.6	Transient Recorder	225
6.7	Data Logger	227
6.8	Fault Reports	230
6.9	Event Data	232
6.10	Flex states	233
6.11	Front Panel	234
6.11.1	Programmable LEDs	234
6.11.1.1	LED allocation tables	235
6.11.2	Programmable Pushbuttons	236
6.11.3	Tab Pushbuttons	242
6.11.4	Annunciator	245
6.11.5	Display Properties	249
6.11.5.1	Support for Cyrillic languages	250

6.11.6	Default Screens	250
6.11.7	Home Screens	251
6.11.8	FlexScreens	252
6.12	Resetting	254
6.13	Installation	255
6.14	Self-Test Monitor	257
6.15	Clear Records	258

Chapter 7 System Setpoints **259**

7.1	Chapter Overview	260
7.2	System menu hierarchy	261
7.3	Current Sensing	262
7.4	Voltage sensing	264
7.5	Power Sensing	266
7.6	Power System	267
7.7	Generator Setup	268
7.8	Transformer	269
7.9	Breakers	270
7.10	Switches	273
7.11	FlexCurves	277

Chapter 8 Input and Output Setpoints **280**

8.1	Chapter Overview	281
8.2	Inputs	282
8.2.1	Contact Inputs	282
8.2.2	Virtual Inputs	285
8.2.3	Analog Inputs	286
8.2.4	Remote Inputs	292
8.3	Outputs	293
8.3.1	Output Relays	293
8.3.1.1	Output Relay Availability	296
8.3.1.2	Critical failure relay	296
8.3.1.3	Relay selected for breaker Trip	297
8.3.1.4	Relay selected for breaker close	300
8.3.2	Virtual Outputs	301
8.3.3	Analog Outputs	302

Chapter 9 Protection **305**

9.1	Chapter Overview	306
9.2	Protection	307
9.3	Generator Elements Overview	308
9.3.1	Percent Differential	308
9.3.1.1	Saturation detector	312
9.3.2	Thermal Model (49)	314
9.3.2.1	Trip Function	315
9.3.2.2	Overload Curve	315
9.3.2.3	Overload Curve	317
9.3.2.4	Curve K Factor	317
9.3.2.5	IEC Curve Time Constant	318
9.3.2.6	TD Multiplier	319
9.3.2.7	Unbalance Bias K Factor	321
9.3.2.8	Cool Time Constant Running	322
9.3.2.9	Cool Time Constant Stopped	323
9.3.2.10	Hot/Cold Safe Stall Ratio	324

9.3.2.11	RTD Bias Settings	325
9.3.2.12	Voltage Dependent Settings	328
9.3.2.13	Alarm and Trip Settings	332
9.3.2.14	Thermal Reset	332
9.3.2.15	Block, Events and Targets settings	332
9.3.2.16	Thermal Model Logic Diagram	335
9.3.3	Overall Percent Differential	336
9.3.4	Inadvertent Energization (50/27)	347
9.3.5	Generator Unbalance (46)	349
9.3.6	Loss of Excitation (40)	354
9.3.7	Third Harmonic Neutral Undervoltage (27TN)	359
9.3.8	Third Harmonic Voltage Difference	362
9.3.9	Offline Overcurrent (50OFL)	367
9.3.10	Overload Alarm	369
9.4	Current elements overview	372
9.4.1	Inverse Time Overcurrent Curves	372
9.4.2	Phase Time Overcurrent Protection (51P)	385
9.4.3	Phase Instantaneous Overcurrent Protection (50P)	390
9.4.4	Phase Directional Overcurrent Protection (67P)	392
9.4.5	Neutral Time Overcurrent Protection (51N)	396
9.4.6	Neutral Instantaneous Overcurrent Protection (50N)	400
9.4.7	Neutral Directional Overcurrent Protection (67N)	402
9.4.8	Load Encroachment	407
9.4.9	Ground Time Overcurrent Protection (51G)	411
9.4.10	Ground Instantaneous Overcurrent Protection (50G)	415
9.4.11	Ground Directional Overcurrent Protection (67G)	417
9.4.12	Sensitive Ground Time Overcurrent Protection (51SG)	419
9.4.13	Sensitive Ground Instantaneous Overcurrent Protection (50SG)	423
9.4.14	Sensitive Ground Directional Overcurrent Protection (67SG)	425
9.4.15	Restricted Ground Fault (87G)	430
9.4.16	Negative Sequence Instantaneous Overcurrent Protection (50_2)	435
9.4.17	Negative Sequence Directional Overcurrent Protection (67_2)	438
9.4.18	Load Encroachment	442
9.5	Voltage elements overview	447
9.5.1	Undervoltage Curves	447
9.5.2	Phase Reversal (47)	448
9.5.3	Phase Undervoltage Protection (27P)	450
9.5.4	Auxiliary Undervoltage (27X)	453
9.5.5	Phase Overvoltage Protection (59P)	455
9.5.6	Auxiliary Overvoltage Protection (59X)	460
9.5.7	Neutral Overvoltage Protection (59N)	462
9.5.8	Negative Sequence Overvoltage Protection (59_2)	466
9.5.9	Volts per Hertz (24)	469
9.6	Impedance elements	475
9.6.1	Out-of-step (78)	475
9.6.2	Phase Distance (21)	479
9.7	Power elements	487
9.7.1	Directional Power (32)	487
9.7.2	Reactive Power (40Q)	491
9.8	Frequency elements	495
9.8.1	Frequency Protection Common Setup	495
9.8.2	Underfrequency (81U)	495
9.8.3	Overfrequency (81O)	498
9.8.4	Frequency Rate of Change (81R)	501

Chapter 10 Monitoring

506

10.1	Chapter Overview	507
10.2	Monitoring Overview	508
10.3	Generator Monitoring	509
10.3.1	Running Hours	509
10.3.2	Frequency Out-of-band Accumulation (81A)	511
10.3.3	Thermal Overload Protection (49TOL)	513
10.3.4	Power Factor	518
10.3.5	Speed	524
10.3.6	Speed	529
10.4	Breaker monitoring	535
10.4.1	Trip and Close Circuit Monitoring	535
10.4.2	Breaker Arcing Current	540
10.4.3	Breaker Health	543
10.5	Functions	548
10.5.1	Power Factor	548
10.5.2	Demand	554
10.5.2.1	Current Demand	555
10.5.2.2	Real Power Demand	557
10.5.2.3	Reactive Power	559
10.5.2.4	Apparent Power Demand	561
10.5.3	Pulsed Outputs	563
10.5.4	Digital Counters	566
10.6	Harmonic Detection	570
10.7	Speed	573
10.8	RTD Temperature	578
10.9	RTD Trouble	583
10.10	Loss of Communications	584

Chapter 11 Control 586

11.1	Chapter Overview	587
11.2	Control Overview	588
11.3	Setpoint Group	589
11.4	Generator control	591
11.4.1	Field Breaker Discrepancy	591
11.4.2	Sequential Shutdown	593
11.5	Local Control Mode	596
11.6	Breaker Control	606
11.6.1	Control Authority	610
11.7	Switch Control (89)	611
11.8	Virtual Input Control	615
11.9	Trip Bus	616
11.10	Breaker Failure (50BF)	619
11.10.1	Breaker Failure Setup	620
11.10.2	Initiate	623
11.11	Arc Flash Protection	625
11.12	Synchrocheck (25)	628
11.13	VT Fuse Failure (VTFF)	633
11.13.1	VT Fuse Failure settings	633
11.14	Digital Elements	636

Chapter 12 Flexlogic 639

12.1	Chapter Overview	640
12.2	FlexLogic	641
12.2.1	Timers	644
12.2.2	Non-volatile Latches	644

12.2.3	FlexLogic Equation	645
12.2.4	Viewing FlexLogic Graphics	647
12.2.5	FlexElements	648
12.2.5.1	FlexElement settings	649
12.2.5.2	FlexElements - Examples	651

Chapter 13 Testing 655

13.1	Chapter Overview	656
13.2	Testing display hierarchy	657
13.3	Simulation	658
13.3.1	Simulation Setup	658
13.3.2	Simulation Pre-Fault	659
13.3.3	Simulation Fault	660
13.3.4	Simulation Post-Fault	660
13.4	General	662
13.5	Test LEDs	664
13.6	Contact Inputs	665
13.7	Output Relays	666
13.8	GOOSE	667

Chapter 14 Status 668

14.1	Chapter Overview	669
14.2	Summary	670
14.3	Generator status	673
14.4	Breaker status	675
14.5	Information	676
14.6	Communications status	679
14.6.1	GOOSE	679
14.6.2	Communications Status settings	679
14.7	Other status settings	683

Chapter 15 Metering 688

15.1	Chapter Overview	689
15.2	Metering Overview	690
15.3	Metering Summary	693
15.4	Generator functions	694
15.4.1	General	694
15.4.2	Percent Differential Current	694
15.4.3	Overall Differential Current	694
15.4.4	Speed	695
15.4.5	Frequency OOB Accumulation	695
15.4.6	Stator Ground 3rd Harmonic	696
15.5	Impedance/admittance	697
15.5.1	Impedance/admittance	697
15.5.2	Phase Distance	697
15.6	Currents	699
15.7	Neutral IOC	701
15.8	Voltages	702
15.9	Frequency	705
15.9.1	High-speed frequency	706
15.9.2	Volts Per Hertz	706
15.10	Harmonics	707
15.10.1	Harmonic Detection	707
15.11	Synchrocheck	708

15.12	Inter-Turn Fault Detection	709
15.13	Power functions	712
15.13.1	Power	712
15.13.2	Power Factor	714
15.13.3	Directional Power	715
15.14	Energy	716
15.14.1	Energy (X)	716
15.14.2	Energy Log	716
15.15	Demand	719
15.15.1	Current Demand	719
15.15.1.1	Current Demand 1(X)	719
15.16	Power Demand	720
15.17	Voltage Transformer Fuse Failure	721
15.18	Arc Flash	722
15.19	Resistance Temperature Detectors	723
15.20	Resistance Temperature Detectors	724
15.21	Resistance Temperature Detectors	725
15.22	Resistance Temperature Detectors	726
15.23	Analog Inputs	727
15.24	FlexElements	728

Chapter 16 Records 729

16.1	Chapter Overview	730
16.2	Events	731
16.2.1	Event Viewer	731
16.3	Transient Records	735
16.4	Fault Reports	736
16.5	Data Logger	738
16.6	Breakers	739
16.6.1	Breaker Arcing Current	739
16.6.2	Breaker Health	739
16.7	Digital Counters	741
16.8	Remote Modbus Device	742
16.9	Clear Records	745

Chapter 17 Maintenance 746

17.1	Chapter Overview	747
17.2	Environmental Health Report	748
17.3	General maintenance	750
17.3.1	In-service Maintenance	750
17.3.2	Out-of-service Maintenance	751
17.3.3	Unscheduled Maintenance (System Interruption)	751

Chapter 18 Specifications 752

18.1	Device	753
18.1.1	Annunciator panel	753
18.1.2	Custom configurations	753
18.2	Protection elements	754
18.2.1	Thermal overload protection	754
18.2.2	Percent differential (87G)	754
18.2.3	Overall percent differential	754
18.2.4	Generator unbalance	755
18.2.5	Inadvertent energization	755
18.2.6	Third harmonic neutral undervoltage	755

18.2.7	Third harmonic voltage difference	756
18.2.8	Offline overcurrent	756
18.2.9	Current unbalance (46)	756
18.2.10	Speed protection	757
18.2.11	Loss of excitation (40)	757
18.2.12	Out-of-step (78)	757
18.2.13	Overload alarm	758
18.2.14	Phase reversal (47)	758
18.2.15	Phase Instantaneous Overcurrent (50P)	758
18.2.16	Neutral Instantaneous Overcurrent (50N)	758
18.2.17	Ground Instantaneous Overcurrent (50G)	759
18.2.18	Phase time overcurrent (51P/V)	759
18.2.19	Neutral/ground time overcurrent (51N/G)	759
18.2.20	Phase directional overcurrent (67P)	760
18.2.21	Neutral directional overcurrent (67N)	760
18.2.22	Ground directional overcurrent (67G)	761
18.2.23	Negative sequence instantaneous overcurrent	761
18.2.24	Sensitive ground directional overcurrent (67SG)	762
18.2.25	Phase overvoltage (59P)	763
18.2.26	Neutral overvoltage (59N)	763
18.2.27	Auxiliary overvoltage (59X)	764
18.2.28	Negative sequence overvoltage (59_2)	764
18.2.29	Phase undervoltage (27P)	764
18.2.30	Voltage Interruption	765
18.2.31	Volts per Herz (24)	765
18.2.32	Overfrequency (81O)	765
18.2.33	Underfrequency (81U)	766
18.2.34	Rate of change of frequency (81R)	766
18.2.35	Directional power	767
18.2.36	Reactive power (40Q)	767
18.2.37	RTD protection	767
18.2.38	Arc flash HS phase/ground instantaneous overcurrent (50P/50G)	767
18.3	Control	769
18.3.1	Field breaker discrepancy	769
18.3.2	Sequential shutdown	769
18.3.3	Synchrocheck	769
18.3.4	Breaker control	769
18.3.5	Local control mode	769
18.3.6	Switch control	770
18.3.7	Trip bus	770
18.3.8	Digital Elements	770
18.4	Monitoring	771
18.4.1	Frequency OOB Accumulation	771
18.4.2	Breaker arcing current	771
18.4.3	Breaker failure	771
18.4.4	Breaker health	771
18.4.5	Trip circuit monitoring	772
18.4.6	Close circuit monitoring	772
18.4.7	Demand	772
18.4.8	Harmonic detection	772
18.4.9	Power factor (55)	772
18.5	Recording	774
18.5.1	Transient recorder	774
18.5.2	Data logger	774
18.5.3	Event recorder	774
18.5.4	Last trip data	774

18.5.5	Fault reports	775
18.6	User-programmable elements	776
18.6.1	FlexLogic	776
18.6.2	FlexElements	776
18.6.3	FlexStates	776
18.6.4	FlexCurves	776
18.6.5	Non-volatile latches	777
18.6.6	User-programmable LEDs	777
18.6.7	Tab pushbuttons	777
18.6.8	User-programmable pushbuttons	777
18.7	Metering	778
18.7.1	RMS parameters	778
18.7.2	Phasors	779
18.7.3	Frequency	779
18.7.4	Current and voltage harmonics	779
18.8	Inputs	780
18.8.1	AC currents	780
18.8.2	AC voltages	780
18.8.3	Analog inputs	780
18.8.4	Input frequency	780
18.8.5	Arc flash sensor/fiber	781
18.8.6	Contact Inputs	781
18.8.7	IRIG-B input	781
18.8.8	RTD inputs	782
18.9	Outputs	783
18.9.1	Analog outputs	783
18.9.2	Form C output relays	783
18.9.3	Form A voltage monitor	784
18.9.4	Solid state relays	784
18.9.5	Pulsed outputs	784
18.9.6	Coil actuator outputs	784
18.10	Power supply	786
18.10.1	Voltage supplies	786
18.10.2	Power consumption	786
18.10.3	Voltage loss ride-through	786
18.11	Communications	787
18.11.1	Ethernet	787
18.11.2	USB	787
18.11.3	Serial	787
18.11.4	WiFi	788
18.11.5	Remote Modbus	788
18.11.6	Controller Area Network	788
18.12	Certifications and approvals	789
18.12.1	Approvals	789
18.12.2	Testing and Certification	789
18.13	Environmental	791
18.14	Long-term storage	792
Chapter 19	Appendices	793
19.1	Abbreviations	794
19.2	Revision History	803

CHAPTER 1

INTRODUCTION

1.1 **CHAPTER OVERVIEW**

This chapter provides some general information about the technical manual and an introduction to the device(s) described in this technical manual.

This chapter contains the following sections:

Chapter Overview	2
Foreword	3
Product overview	5
General description of the 8 Series	6
Functions and features	8
Security Overview	13
Order Codes	15
Cautions, warnings and notes	19
Must-read Information	22
For Further Assistance	23

1.2 FOREWORD

This technical manual provides a functional and technical description of the relay, as well as a comprehensive set of instructions for using it. The level at which this manual is written assumes that you are already familiar with protection engineering and have experience in this discipline. The description of principles and theory is limited to that which is necessary to understand the product. For further details on general protection engineering theory, we refer you to the publication, Protection and Automation Application Guide, which is available online.

We have attempted to make this manual as accurate, comprehensive and user-friendly as possible. However we cannot guarantee that it is free from errors. Nor can we state that it cannot be improved. We would therefore be very pleased to hear from you if you discover any errors, or have any suggestions for improvement. Our policy is to provide the information necessary to help you safely specify, engineer, install, commission, maintain, and eventually dispose of this product. We consider that this manual provides the necessary information, but if you believe that more details are needed, please contact us.

1.2.1 TARGET AUDIENCE

This manual is aimed towards all professionals charged with installing, commissioning, maintaining, troubleshooting, or operating any of the products within the specified product range. This includes installation and commissioning personnel as well as engineers who will be responsible for operating the product.

The level at which this manual is written assumes that installation and commissioning engineers have knowledge of handling electronic equipment. Also, system and protection engineers have a thorough knowledge of protection systems and associated equipment.

1.2.2 TYPOGRAPHICAL CONVENTIONS

The following typographical conventions are used throughout this manual.

- Description of software menu items, buttons, labels or hardware keys and buttons written in bold type and colored in Vernova dark green.
For example: Select **Save** from the file menu
- The names for special keys, appear in in upper case bold type and colored in Vernova dark green.
For example: **ENTER**
- Filenames, paths, code, and text that appears on a command line interface use the courier font
For example: `Example\File.text`
- Special terminology is written with leading capitals
For example: Line Differential Relay
- If reference is made to the relay's internal settings database on the relay's LCD screen, the menu items are written in bold italics
For example: ***SECURITY*** (on the relay's LCD screen), or ***Security*** (in the EnerVista D&I Setup software)
- Menu paths are shown with > separators. This applies to both software menu paths and relay menu paths
For example: ***SETTINGS > SYSTEM SETUP > AC INPUTS*** (for relay path), or **File > Save** (for software path)
- Setting values are written with the courier font and are italicized
For example: `Enabled`
- The products, use Flexlogic operands. Flexlogic operands are written in dark Vernova green uppercase courier font
For example: `PUSHBUTTON 1 ON`
- Sometimes it is beneficial to emphasize some words. Depending on the case in question, this may be done with bold, italic or upper case font attributes.
- Notes are written in italic in, and are surrounded by a border.
For example:

Note:
This is a note

1.2.3 NOMENCLATURE

Due to the technical nature of this manual, many special terms, abbreviations and acronyms are used throughout the manual. Some of these terms are well-known industry-specific terms while others may be special product-specific terms used by GE Vernova. The first instance of any acronym or term used in a particular chapter is explained.

We would like to highlight the following changes of nomenclature however:

- The word *relay* and *IED* (Intelligent Electronic Device) are both used to describe the protection device. The term *IED* is associated with the IEC61850 standard, whereas the term *relay* is the long-used traditional term. It may also be referred to simply as the *device* or the *product*.
- American English and spelling is used throughout this manual.
- The term 'Earth' and American term 'Ground' are equivalent. You may find either used in the manual.
- When depicting a generic instance of a number of items, this manual uses <n> where n can be any integer.

1.3 PRODUCT OVERVIEW

The Multilin 889 is a microprocessor-based unit intended for the primary protection of small, medium and large sized generators. Base relay models provide standard generator protection functions plus a number of current and voltage based backup functions.

1.4 GENERAL DESCRIPTION OF THE 8 SERIES

Each relay provides protection, control, and monitoring functions with both local and remote human interfaces. They also display the present trip/alarm conditions, and most of the more than 35 measured system parameters. Recording of past trip, alarm or control events, maximum demand levels, and energy consumption is also performed.

To meet diverse utility standards and industry requirements, you can program these relays to meet specific requirements. This flexibility will naturally make a piece of equipment difficult to learn. To aid new users in getting basic protection operating quickly, setpoints are set to typical default values and advanced features are disabled. You can reprogram these settings any time.

It is possible for you to program these relays using the front panel keys and display. However, due to the numerous settings, this manual method can be laborious. To simplify programming and provide a more intuitive interface, you can enter setpoints with a PC running the EnerVista D&I Setup. Even with minimal computer knowledge, this menu-driven software provides easy access to all front panel functions. Actual values and setpoints can be displayed, altered, stored, and printed. If settings are stored in a setpoint file, they can be downloaded at any time to the front panel program port of the relay via a computer cable connected to the USB port of any personal computer.

Analog Input and Waveform Capture

Magnetic transformers are used to scale-down the incoming analog signals from the source instrument transformers. The analog signals are then passed through a 11.5 kHz low pass analog anti-aliasing filter. All signals are then simultaneously captured by sample and hold buffers to ensure there are no phase shifts. The signals are converted to digital values by a 16-bit A/D converter before finally being passed on to the CPU for analysis.

The raw samples are scaled in software, then placed into the waveform capture buffer, thus emulating a fault recorder. The waveforms can be retrieved from the relay via the software for display and diagnostics.

Frequency

Frequency measurement is accomplished by measuring the time between zero crossings of the composite signal of three-phase bus voltages, line voltage or three-phase currents. The signals are passed through a low pass filter to prevent false zero crossings. Frequency tracking utilizes the measured frequency to set the sampling rate for current and voltage which results in better accuracy for the Discrete Fourier Transform (DFT) algorithm for off-nominal frequencies.

The main frequency tracking source uses three-phase bus voltages. The frequency tracking is switched automatically by an algorithm to the alternative reference source, i.e., three-phase currents signal or line voltage for the configuration of tie-breaker, if the frequency detected from the three-phase voltage inputs is declared invalid. The switching will not be performed if the frequency from the alternative reference signal is detected invalid. Upon detecting valid frequency on the main source, the tracking will be switched back to the main source. If a stable frequency signal is not available from all sources, then the tracking frequency defaults to the nominal system frequency.

Phasors, Transients, and Harmonics

All waveforms are processed eight times every cycle with a DC decaying removal filter and a DFT. The resulting phasors have fault current transients and all harmonics removed. This results in an overcurrent relay that is extremely secure and reliable and one that will not overreach.

Processing of AC Current Inputs

The DC Decaying Removal Filter is a short window digital filter, which removes the DC decaying component from the asymmetrical current present at the moment a fault occurs. This is done for all current signals used for overcurrent protection; voltage signals use the same DC Decaying Removal Filter. This filter ensures no overreach of the overcurrent protection.

The DFT uses exactly one cycle of samples to calculate a phasor quantity which represents the signal at the fundamental frequency; all harmonic components are removed. All subsequent calculations (e.g. power, etc.) are

based upon the current and voltage phasors, such that the resulting values have no harmonic components. RMS (root mean square) values are calculated from one cycle of samples prior to filtering.

Protection Elements

All voltage, current and frequency protection elements are processed eight times every cycle to determine if a pickup has occurred or a timer has expired. The voltage and current protection elements use RMS current/voltage, or the magnitude of the phasor.



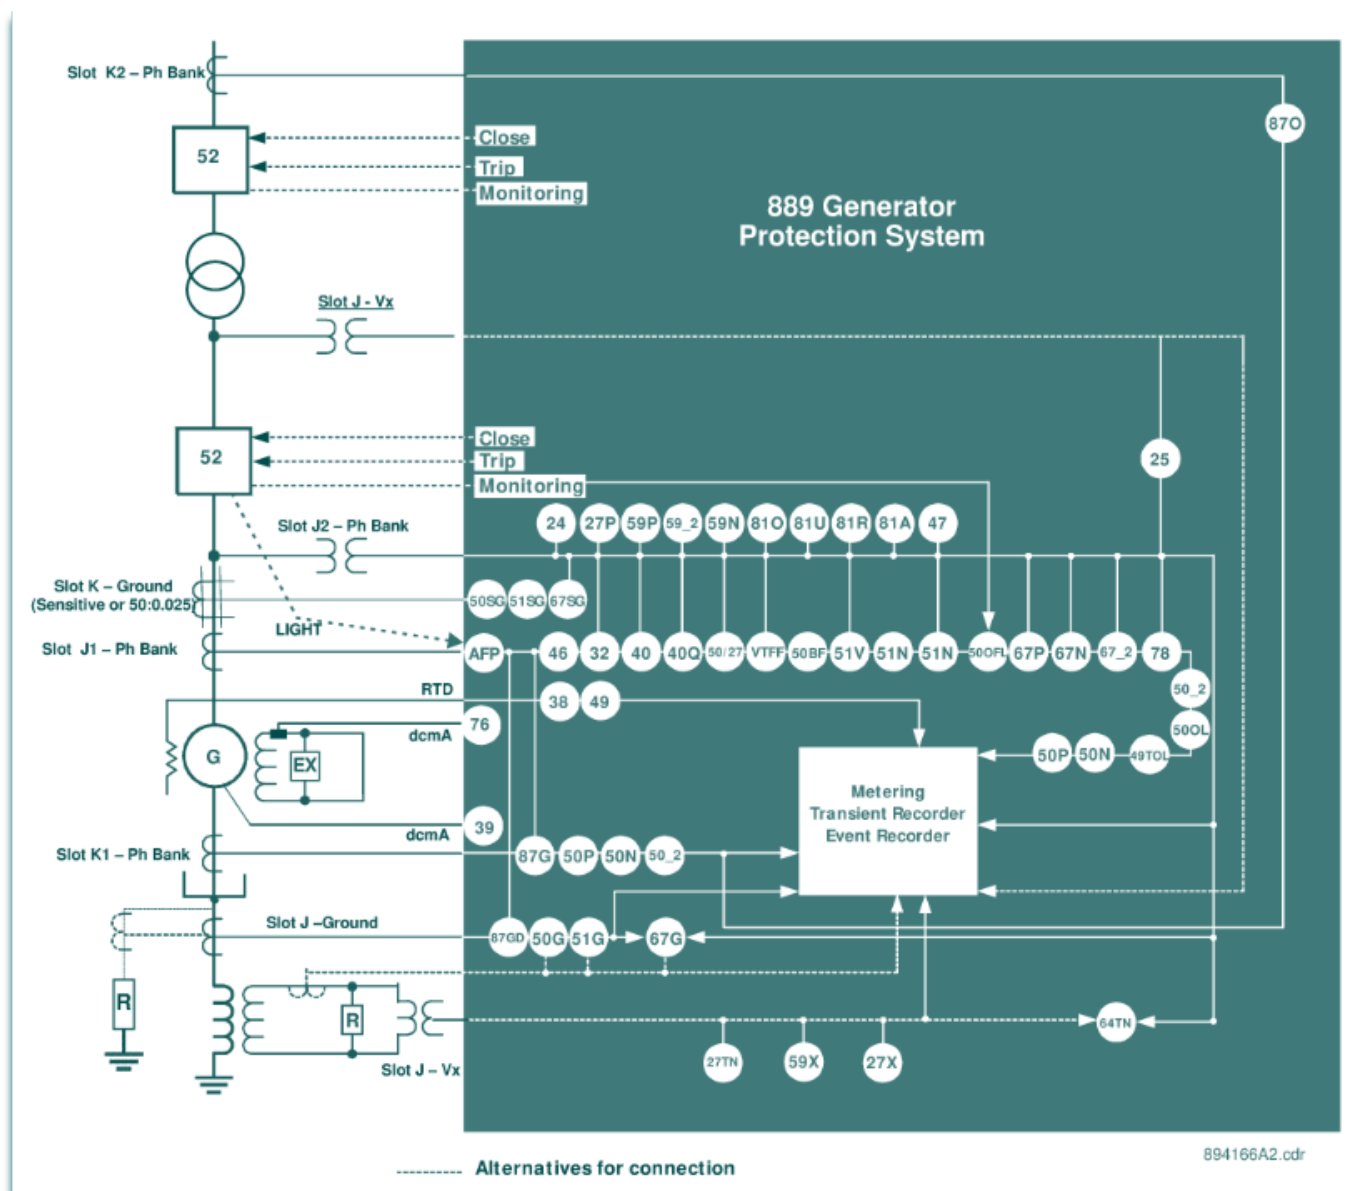


Figure 2: Single Line Diagram with order code option R1/R5)

ANSI Device Numbers and Functions


ANSI Device	Description	ANSI Device	Description
24	Volts per Hertz	51SG	Sensitive Ground Time Overcurrent
25	Synchrocheck	51V	Voltage Restrained Time Overcurrent
27P	Phase Undervoltage	55	Power Factor
27X	Auxiliary Undervoltage	59N	Neutral Overvoltage
27TN	Third Harmonic Neutral Undervoltage	59P	Phase Overvoltage
32	Directional Power	59X	Auxiliary Overvoltage
38	Bearing Overtemperature (RTD)	59_2	Negative Sequence Overvoltage
39	Bearing Vibration (dcmA)	64TN	100% Stator Ground using 3rd Harmonic Voltage Differential
40	Loss of Excitation	67G	Ground Directional Element

ANSI Device	Description	ANSI Device	Description
40Q	Reactive Power	67N	Neutral Directional Element
46	Generator Unbalance	67P	Phase Directional Element
47	Phase Reversal	67SG	Sensitive Ground Directional Element
49	Thermal (RTD)	67_2	Negative Sequence Directional Element
49TOL	Thermal Overload	76	Excitation Current Protection (dcmA)
50/27	Inadvertent Energization	78	Out-of-step Protection
50BF	Breaker Failure	81A	Frequency out-of-band
50G	Ground Instantaneous Overcurrent	81O	Overfrequency
50SG	Sensitive Ground Instantaneous Overcurrent	81U	Underfrequency
50N	Neutral Instantaneous Overcurrent	81R	Frequency Rate of Change
50P	Phase Instantaneous Overcurrent	87G	Generator Stator Differential
50_2	Negative Sequence Instantaneous Overcurrent	87O	Overall Unit (Gen-Xfrm) Protection
50OFL	Offline Overcurrent	87GD	Restricted Ground Fault (RGF)
50OL	Overload	AFP	Arc Flash Protection
51G	Ground Time Overcurrent	VTFF	VT Fuse Failure
51N	Neutral Time Overcurrent		

Other Device Functions

Description
Analog Input
Analog Output
Breaker Arcing Current ($I/2t$)
Breaker Control
Breaker Health
Data Logger
Demand
Digital Counters
Event Recorder
Fault Report
FlexElements
FlexLogic Equations
Flex States
Generator Health Report
IEC 61850 Communications
Metering: current, voltage, power, PF, energy, frequency, harmonics, THD
Modbus User Map
Non-volatile Latches
OPC-UA Communications
Output Relays
RTD Temperature
Setpoint Groups (6)

Description
Trip Bus (6)
Transient Recorder (Oscillography)
Trip and Close Coil Monitoring
User-programmable LEDs
User-programmable Pushbuttons
Virtual Inputs (32)
Virtual Outputs (32)

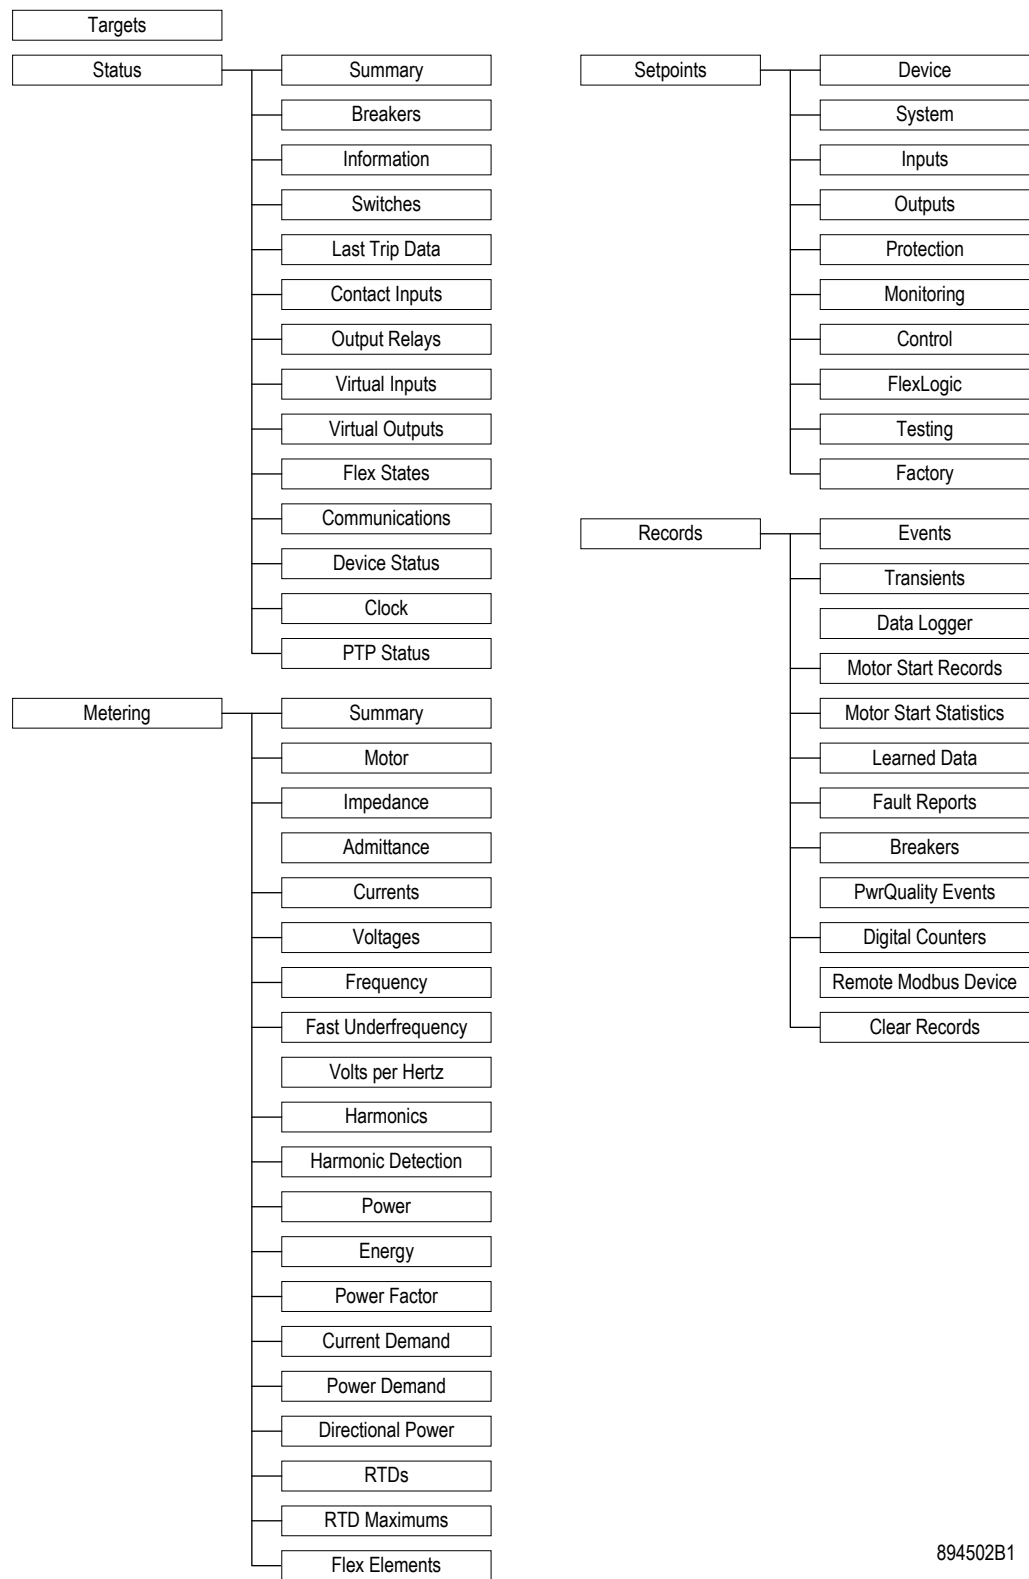

894502B1

Figure 3: Main Menu Hierarchy

1.6 SECURITY OVERVIEW

The following security features are available:

BASIC SECURITY

The basic security feature is present in the default offering of the relay. The relay introduces the notion of roles for different levels of authority. Roles are used as login names with associated passwords stored on the device. The following roles are available at present: Administrator, Engineer, Operator, Factory and Viewer, with a fixed permission structure for each one. Note that the Factory role is not available for users, but strictly used in the manufacturing process.

The relay can still use the **SETPOINT ACCESS** switch feature, but enabling the feature can be done only by an Administrator. Setpoint access is controlled by a keyed switch to offer some minimal notion of security.

CYBERSENTRY

The CyberSentry Embedded Security feature is a software option that provides advanced security services. When the software option is purchased, the Basic Security is automatically disabled.

CyberSentry provides security through the following features:

- An Authentication, Authorization, Accounting (AAA) Remote Authentication Dial-In User Service (RADIUS) client that is centrally managed, enables user attribution, and uses secure standards based strong cryptography for authentication and credential protection.
- A Role-Based Access Control (RBAC) system that provides a permission model that allows access to device operations and configurations based on specific roles and individual user accounts configured on the AAA server. At present the defined roles are: Administrator, Engineer, Operator and Viewer.
- Strong encryption of all access and configuration network messages between the EnerVista software and devices using the Secure Shell (SSH) protocol, the Advanced Encryption Standard (AES), and 128-bit keys in Galois Counter Mode (GCM) as specified in the U.S. National Security Agency Suite B extension for SSH and approved by the National Institute of Standards and Technology (NIST) FIPS-140-2 standards for cryptographic systems.
- Security event reporting through the Syslog protocol for supporting Security Information Event Management (SIEM) systems for centralized cyber security monitoring.

There are two types of authentication supported by CyberSentry that can be used to access the device:

- Device Authentication – in which case the authentication is performed on the device itself, using the predefined roles as users (No RADIUS involvement).
 - Device authentication using local roles may be done either from the front panel or through EnerVista.
- Server Authentication - in which case the authentication is done on a RADIUS server, using individual user accounts defined on the server. When the user accounts are created, they are assigned to one of the predefined roles recognized by the relay.
 - Device authentication using RADIUS server may be done only through EnerVista.

Note:

EnerVista Viewpoint Monitor does not currently support CyberSentry security.

With the CyberSentry security option, many communication settings cannot be changed remotely. All communication settings can still be changed through the relay front panel.

When both device and server authentication are enabled, the relay automatically directs authentication requests to the device or the respective RADIUS server, based on user names. If the user ID credential does not match one of the device local accounts, the relay automatically forwards the request to a RADIUS server when one is provided. If a RADIUS server is provided, but is unreachable over the network, server authentication requests are denied. In this situation, use local device accounts to gain access to the system.

USER ROLES

User Access Levels are used to grant varying permissions to specific user roles. User roles are used by both Basic Security and CyberSentry.

The following user roles are supported:

- **Administrator:** The Administrator role has complete read and write access to all settings and commands. The role does not allow concurrent access. The Administrator role also has an operand to indicate when it is logged on.
- **Engineer:** This role has similar rights to the Administrator role, except that some commands, the security settings modification and firmware upload are not allowed.
- **Operator:** The Operator role is present to facilitate operational actions that may be programmed and assigned to buttons on the front panel. The Operator has read/write access to all settings under the command menu/section. The Operator can also use the Virtual Input command under the control menu/section. The Operator can view settings from EnerVista or the front panel but does not have the ability to change any settings. This role is not a concurrent role.
- **Viewer:** The Viewer role has read-only access to all 8 Series settings. This role allows concurrent access. The Viewer is the default role if no authentication has been done to the device. This role can download settings files and records from the device.
- **Factory:** This is an internal non-user accessible role used for manufacturing diagnostics. The ability to enable or disable this role is a security setting that the Administrator controls.

GENERAL RULES FOR USER ROLES WITH CYBERSENTRY

1. The only concurrent role is Observer. If the user is logged in through serial, front panel, or over the network, that counts as the role being logged in for concurrency reasons.
2. Both EnerVista and the front panel provide a one-step logoff. For the front panel, the root menu has a logoff command. From EnerVista right-clicking on a device and providing a logoff function from the context menu is sufficient.
3. The EnerVista Login Screen has **User Name:** and **Password:** fields for the default remote (Radius) authentication, but when a **Local Authentication** checkbox is selected the **User Name:** field changes to a drop down menu where the user can select one of the predefined roles.

1.7 ORDER CODES

Support of some of the features are order code dependent. Each relay is ordered with a number of required and optional modules. Each of these modules can be supplied in a number of configurations specified at the time of ordering. The information to specify a relay model is provided in the following Order Code table:

ORDER CODE FOR 889 GENERATOR PROTECTION SYSTEM																						
Pos.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	
889	E	P5	P5	G5	H	N	N	A	L	A	G	A	P	F	A	2	E	S	N	A	N	Example 889
																						APPLICATION
	E																					Standard
																						PHASE CURRENTS - SLOT J
		P1																				1A three-phase current inputs (J1), voltage inputs (J2)
		P5																				5A three-phase current inputs (J1), voltage inputs (J2)
																						PHASE CURRENTS - SLOT K
			P1																			1A three-phase current inputs (K1), voltage inputs (K2)
			P5																			5A three-phase current inputs (K1), voltage inputs (K2)
			R1																			1A three-phase current inputs (K1), 1A three-phase current inputs (K2)
			R5																			5A three-phase current inputs (K1), 5A three-phase current inputs (K2)
																						GROUND CURRENTS
				G1																		1A ground input (1 per phase current bank)
				G5																		5A ground input (1 per phase current bank)
				S1																		1A ground input (J1), 1A sensitive ground input (K1)
				S5																		5A ground input (J1), 5A sensitive ground input (K1)
				B1																		1A ground input (J1), 50:0.025 ground input (K1)
				B5																		5A ground input (J1), 50:0.025 ground input (K1)
																						POWER SUPPLY
					H																	125 to 250 V DC/100 to 240 V AC
					R																	125 to 250 V DC/100 to 240 V AC - Extended Ride-through
					L																	24 to 48 VDC
																						SLOT B
						N																None
						S																6 X RTDs (Pt100, Ni100, Ni120, Cu10)
						C																15 Digital Inputs (24 V DC, Ext Supply)
																						SLOT C
							N															None
							S															6 X RTDs (Pt100, Ni100, Ni120, Cu10)
							C															15 Digital Inputs (24 V DC, Ext Supply)
																						SLOT F
								A														2 Form A (Vmon) Relays, 2 Form C Relays, 1 Critical Failure Relay, 7 Digital Inputs (Int/Ext Supply)
								M														4 SSR (High-Speed, High-Break), 1 Critical Failure Relay, 7 Digital Inputs (Int/Ext Supply)
																						SLOT G

ORDER CODE FOR 889 GENERATOR PROTECTION SYSTEM																					
Pos.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
									N												None
									A												2 Form A Relays, 3 Form C Relays, 7 Digital Inputs (Int/Ext Supply)
									B												9 Form A Relays, 10 Digital Inputs
									D												8 Double Pole Outputs
									T												4 SSR (High-Speed, High-Break), 2 Form A Relay, 4 Arc Flash Inputs (Point and Loop Sensors)
									K												5 Form A Relays, 1 Form C Relay, 10 Digital Inputs
									L												7 DcmA O/P, 4 DcmA I/P, 1 RTD
									M												4 SSR (High-Speed, High-Break), 1 Form C Relay, 7 Digital Inputs (Int/Ext Supply)
									P												8 Double Pole Outputs - C
																					SLOT H
									N												None
									A												2 Form A Relays, 3 Form C Relays, 7 Digital Inputs (Int/Ext Supply)
									B												9 Form A Relays, 10 Digital Inputs
									D												8 Double Pole Outputs
									F												10 Digital Inputs, 4 Arc Flash Inputs (Point Sensors)
									T												4 SSR (High-Speed, High-Break), 2 Form A Relay, 4 Arc Flash Inputs (Point and Loop Sensors)
									K												5 Form A Relays, 1 Form C Relay, 10 Digital Inputs
									M												4 SSR (High-Speed, High-Break), 1 Form C Relay, 7 Digital Inputs (Int/Ext Supply)
									P												8 Double Pole Outputs - C
																					FACEPLATE
									M												Basic: Membrane Keypad with 3 Pushbuttons
									A												Advanced: Membrane Keypad with 10 Pushbuttons
																					CURRENT PROTECTION
											M										Standard: 38 (RTD) (1), 39 (Anlp) (1), 46 (Gen. Unbl.) (1), 50/27 (1), 50OFL (1), 50OL (1), 50P (2/CT bank), 50N (1/CT bank), 50G (2), 50SG (1), 50_2 (1/CT bank), 51V (2), 51N (2), 51G (2), 51SG (1), 67N (1), 67G (1), 67SG (1), 76 (Anlp) (1), 87G (1)
											A										Advanced: Standard, 67P (1), 67_2 (1), 87GD (RGF) (1), 87O, Load Encroachment
																					VOLTAGE MONITORING AND PROTECTION
												S									Standard: 24 (2), 25 (1), 27TN (1), 27P (2), 27X (2), 32 (2), 40Q (1), 40 (1), 47 (1), 59X (2), 81O (2), 81U (4)
												P									Advanced: Standard, 21P, 55, 59P (2), 59N (1), 59_2 (1), 64TN (100% stator ground) (1), 78 (1), 81R (2),
																					CONTROL
													F								Standard: Setpoint Group Control, Virtual Inputs Control, Trip Bus, FlexLogic, VTFF (1), 50BF (1), Sequential Shutdown, Field Breaker Discrepancy, Breaker Control, Digital Elements

ORDER CODE FOR 889 GENERATOR PROTECTION SYSTEM																					
Pos.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
														T							
																					Advanced HMI: Standard, Tab Pushbuttons, Annunciator Panel, Configurable SLDs with Bay Control
																					MONITORING
															B						Basic: Breaker Coil and Arcing Monitoring, Demand, Digital Counters, Running Hours
															C						Standard: Basic, Breaker Health Report, 49TOL (Thermal Overload) (1)
															A						Advanced: Standard, 81A, Harmonic Detection
															E						Extended: Advanced, ESA Functions
																					COMMUNICATIONS
															S	E					Standard: Front USB, 1x Rear RS485 (Modbus RTU/TCP, DNP 3.0, IEC 60870-5-103), 1x Ethernet RJ45 port (Modbus TCP, DNP).
															1	E					Advanced: Standard + IEC 60870-5-104, 1588, SNTP, OPC-UA,SNMP
															1	P					Advanced + PRP + HSR +RSTP
															3	A					Advanced + IEC 61850
															3	E					Advanced + PRP + HSR + RSTP+ IEC 61850
															3	F					Advanced + PRP+HSR+RSTP+IEC61850+EthernetIP
															4	E					Advanced + 1x additional RS485 Port + HSR + PRP +RSTP + IEC 61850
															4	F					Advanced + 1x additional RS485 Port + HSR + PRP +RSTP + IEC 61850 + EthernetIP
																					ADVANCED COMMUNICATIONS CONNECTOR
																	N				None. No additional communication ports. RJ45 Port 1 Enabled, RJ45 Port 2 disabled
																	S				ST, Multi-mode 1310nm - With 1E to 3E, 3F,the user gets 2x Fiber ST Ports. RJ45 ports 1 and 2 are disabled. With 4E,4F user gets 2x Fiber ST ports and 2xRJ45 Ports
																	C				RJ45, Copper 10/100M - With 1E to 3E, 3F, the user gets 2x RJ45 ports. RJ45 ports 1 and 2 are disabled. With 4E, 4F, user gets 4x RJ45 Ports
																	T				1x additional RS485 Port and 1x additional RJ45 Copper 10/100M port
																					WIRELESS COMMUNICATION:
																		N			None
																		W			WiFi 802.11
																					SECURITY
																			B		Basic
																			A		Advanced: CyberSentry Level 1
																					FW OPTION
																				N	FW version 3.xx or earlier
																				4	FW version 4.xx

- Harsh Environment Coating is a standard feature on all relays.
- Advanced security is only available with advanced communications (1E, 1P, 3A, 3E, 3F, 4E, 4F).
- Retrofit order codes must be configured using the GE VERNOVA Online Store (OLS) based on the existing relay order code and additional requirements. Refer to the GE VERNOVA website and search for the **Buy Retrofit Kit** for further information.

Remote Module I/O (RMIO)

The Remote RTD module provides additional protection.

	RMIO ¹	-	*	G	G	*	*	
Power Supply	L							24 - 48 V DC
	H							110 - 250 V DC / 110 - 230 V AC
I/O Module 1			G					Remote Module I/O (3 - 100 Ohm Platinum RTDs)
I/O Module 2				G				Remote Module I/O (3 - 100 Ohm Platinum RTDs)
I/O Module 3 ²					G			Remote Module I/O (3 - 100 Ohm Platinum RTDs)
						X		None
I/O Module 4						G		Remote Module I/O (3 - 100 Ohm Platinum RTDs)
						X		None

1. RMIO requires firmware version 2.00 and later and hardware version B. Check the hardware version under **Status > Information > Main CPU**. If RMIO support is required for relays with earlier hardware versions, contact the factory.

2. RMIO comes standard with 6 RTDs (Modules 1 and 2).

892800RMIO-A1.fm

Other Accessories

- 18J0-0030 8 Series Depth Reducing Collar - 1 3/8"
- 18J0-0029 8 Series Depth Reducing Collar - 3"
- 8 Series Retrofit Kit, 750/760 to 850
- 8 Series Retrofit Kit, 735 to 850

1.8 CAUTIONS, WARNINGS AND NOTES

Before attempting to install or use the device, review all safety indicators in this document to help prevent injury, equipment damage, or downtime.

1.8.1 SAFETY WORDS AND DEFINITIONS

The following symbols and formatting are used in this document indicate certain types of information:



Caution:
Refer to equipment documentation. Failure to do so could result in damage to the equipment



Warning:
Risk of electric shock



Warning:
Risk of damage to eyesight

Note:
Indicates practices not related to personal injury.

1.8.2 GENERAL CAUTIONS AND WARNINGS

The following general safety precautions and warnings apply.



Caution:
Before attempting to use the equipment, it is important that all danger and caution indicators are reviewed.
If the equipment is used in a manner not specified by the manufacturer or functions abnormally, proceed with caution. Otherwise, the protection provided by the equipment may be impaired and can result in impaired operation and injury.



Warning:
Hazardous voltages can cause shock, burns or death.



Caution:
Installation/service personnel must be familiar with general device test practices, electrical awareness and safety precautions must be followed.
Before performing visual inspections, tests, or periodic maintenance on this device or associated circuits, isolate or disconnect all hazardous live circuits and sources of electric power.



Warning:

Failure to shut equipment off prior to removing the power connections could expose you to dangerous voltages causing injury or death.

Ensure that all connections to the product are correct so as to avoid accidental risk of shock and/or fire, for example from high voltage connected to low voltage terminals.



Caution:

Follow the requirements of this manual, including adequate wiring size and type, terminal torque settings, voltage, current magnitudes applied, and adequate isolation/clearance in external wiring from high to low voltage circuits.

Use the device only for its intended purpose and application.

Ensure that all ground paths are un-compromised for safety purposes during device operation and service.

All recommended equipment that should be grounded and must have a reliable and un-compromised grounding path for safety purposes, protection against electromagnetic interference and proper device operation.

Equipment grounds should be bonded together and connected to the facility's main ground system for primary power.

Keep all ground leads as short as possible.

In addition to the safety precautions mentioned all electrical connections made must respect the applicable local jurisdiction electrical code.

It is recommended that a field external switch, circuit breaker be connected near the equipment as a means of power disconnect. The external switch or circuit breaker is selected in accordance with the power rating.

This product itself is not Personal Protective Equipment (PPE). However, it can be used in the computation of site specific Arc Flash analysis when the arc flash option is ordered. If a new appropriate Hazard Reduction Category code for the installation is determined, user should follow the cautions mentioned in the arc flash installation section.

The critical failure relay must be connected to annunciate the status of the device for ALL applications. This is particularly important for when the Arc Flash option is ordered.

Ensure that the control power applied to the device, the AC current, and voltage input match the ratings specified on the relay nameplate. Do not apply current or voltage in excess of the specified limits.

Only qualified personnel are to operate the device. Such personnel must be thoroughly familiar with all safety cautions and warnings in this manual and with applicable country, regional, utility, and plant safety regulations.



Warning:

Hazardous voltages can exist in the power supply and at the device connection to current transformers, voltage transformers, control, and test circuit terminals. Make sure all sources of such voltages are isolated prior to attempting work on the device.

Hazardous voltages can exist when opening the secondary circuits of live current transformers. Make sure that current transformer secondary circuits are shorted out before making or removing any connection to the current transformer (CT) input terminals of the device.



Caution:

For tests with secondary test equipment, ensure that no other sources of voltages or currents are connected to such equipment and that trip and close commands to the circuit breakers or other switching apparatus are isolated, unless this is required by the test procedure and is specified by appropriate utility/plant procedure.

When the device is used to control primary equipment, such as circuit breakers, isolators, and other switching apparatus, all control circuits from the device to the primary equipment must be isolated while personnel are working on or around this primary equipment to prevent any inadvertent command from this device. Use an external disconnect to isolate the mains voltage supply.



Warning:

LED transmitters are classified as IEC 60825-1 Accessible Emission Limit (AEL) Class 1M. Class 1M devices are considered safe to the unaided eye. Do not view directly with optical instruments.

Note:

To ensure the settings file inside the relay is updated, wait 30 seconds after a setpoint change before cycling power. This product is rated to Class A emissions levels and is to be used in Utility, Substation Industrial environments. Not to be used near electronic devices rated for Class B levels.

1.9 MUST-READ INFORMATION

The following general statements apply and are repeated in the relevant sections of the manual.

- Before upgrading firmware, it is very important to save the current settings to a file on your PC. After the firmware has been upgraded, it is necessary to load this file back into the device.
- The **SNTP** and **IRIG-B** settings take effect after rebooting the relay.
- Commands may be issued freely through other protocols than Modbus (i.e., DNP, IEC 104, and, IEC 61850) without user authentication or encryption of data taking place, even if the relay has the advanced security feature enabled.
- Note that the factory role password may not be changed.
- Both DNP and IEC104 protocols can work at the same time, but consider that there is only one point map. So, both protocols use the same configured points.
- The 52b contact is closed when the breaker is open and open when the breaker is closed.
- The Phase Directional element responds to the forward load current. In the case of a following reverse fault, the element needs some time – in the order of 8 ms – to change the directional signal. Some protection elements such as Instantaneous Overcurrent may respond to reverse faults before the directional signal has changed. A coordination time of at least 10 ms must therefore be added to all the instantaneous protection elements under the supervision of the Phase Directional element. If current reversal is a concern, a longer delay – in the order of 20 ms – is needed.
- The same curves used for the time overcurrent elements are used for Neutral Displacement. When using the curve to determine the operating time of the Neutral Displacement element, substitute the ratio of neutral voltage to Pickup level for the current ratio shown on the horizontal axis of the curve plot.
- The relay is not approved as, or intended to be, a revenue metering instrument. If used in a peak load control system, consider the accuracy rating and method of measurement employed, and the source VTs and CTs, in comparison with the electrical utility revenue metering system.
- In bulk oil circuit breakers, the interrupting time for currents is less than 25% of the interrupting rating and can be significantly longer than the normal interrupting time.
- For future reference, make a printout of the conversion report immediately after the conversion in case conversion reports are removed or settings modified from the 8 Series Setup Software.
- If the 3-phase VT uses a delta connection and **FREQUENCY INPUT** is set to $J2-3VT$, the positive sequence voltage is used as the supervision voltage. In such conditions, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage. (869, 889 only)
- To monitor the trip coil circuit integrity, use the relay terminals “FA_1 NO” and “FA_1 COM” to connect the Trip coil, and provide a jumper between terminals “FA_1 COM” and “FA_1 OPT/V” voltage monitor).
- WiFi and USB do not currently support CyberSentry security. For this reason WiFi is disabled by default if the CyberSentry option is purchased. WiFi can be enabled, but be aware that doing so violates the security and compliance model that CyberSentry is supposed to provide.
- In Power factor monitoring, **SWITCH-IN** and **SWITCH-OUT** are mutually exclusive settings. (845, 850)

1.9.1 STORAGE

Store the unit indoors in a cool, dry place. If possible, store in the original packaging. Follow the storage temperature range outlined in the Specifications.

If applicable, use the factory-provided dust caps on all Arc Flash sensor fiber and connectors when not in use, to avoid dust contamination in the transceiver and sensor plugs.

1.10 FOR FURTHER ASSISTANCE

For product support, contact us as follows:

GE Vernova

650 Markland Street

Markham, Ontario

Canada L6C 0M1

Worldwide telephone: +1 905 927 7070

Europe/Middle East/Africa telephone: +34 94 485 88 54

North America toll-free: 1 800 547 8629

Fax: +1 905 927 5098

Worldwide e-mail: ga.support@gevernova.com

Website: <https://www.gevernova.com>

1.10.1 REPAIRS

The firmware and software can be upgraded without return of the device to the factory.

For issues not solved by troubleshooting, the process to return the device to the factory for repair is as follows:

- Contact a GE Vernova Grid Solutions Technical Support Center. Contact information is found in the first chapter.
- Obtain a Return Materials Authorization (RMA) number from the Technical Support Center.
- Verify that the RMA and Commercial Invoice received have the correct information.
- Tightly pack the unit in a box with bubble wrap, foam material, or styrofoam inserts or packaging peanuts to cushion the item(s). You may also use double boxing whereby you place the box in a larger box that contains at least 5 cm of cushioning material.
- Ship the unit by courier or freight forwarder, along with the Commercial Invoice and RMA, to the factory.
- Customers are responsible for shipping costs to the factory, regardless of whether the unit is under warranty.
- Fax a copy of the shipping information to the GE Vernova Grid Solutions service department.

Use the detailed return procedure outlined at



<https://www.gevernova.com/grid-solutions/return-procedures>

The current warranty and return information are outlined at

<https://www.gevernova.com/grid-solutions/multilin/warranty>


CHAPTER 2

INSTALLATION

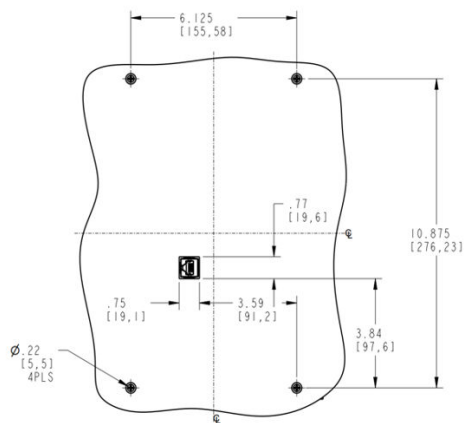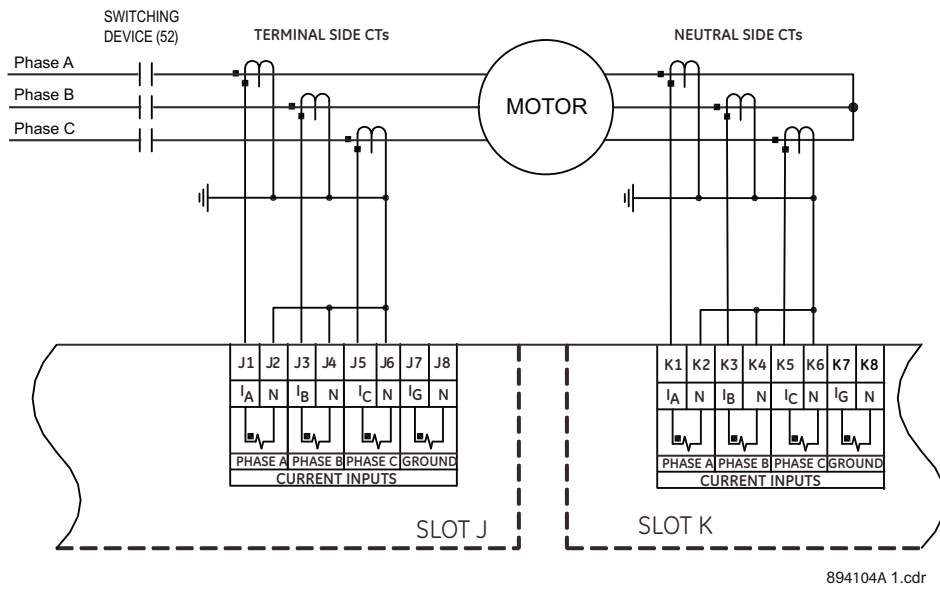

DISPLAY MODULE

use 4 screws (out of bag of 8) provided with the unit to mount the display

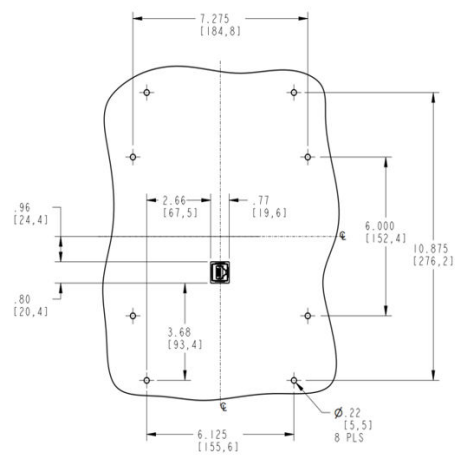

I/O HOUSING

to mount the I/O HOUSING suggest using 8 #10x1/2" (or M5x12mm) screws spring washers and nuts

2.1 CHAPTER OVERVIEW

This chapter describes the mechanical and electrical installation of the relay.

This chapter contains the following sections:

Chapter Overview	26
Product Identification	27
Dimensions	28
Mounting	29
Draw-out Unit Withdrawal and Insertion	34
Removable Power Supply	36
Removable Magnetic Module	37
Remote Module I/O (RMIO)	40
IP20 Back Cover	42
Arc Flash Sensor	43
Physical considerations of wiring	52
Terminal connections	55
Terminal Identification	58
RMIO Module Installation	61
Phase Sequence and Transformer Polarity	63
Zero-Sequence CT Installation	67
Voltage Inputs	68
RTD sensor connections	69
Control Power	72
Contact Inputs	73
Output Relays	75
Serial Communications	78
IRIG-B	79
Typical Wiring Diagrams	80

2.2 PRODUCT IDENTIFICATION


The product identification label is located on the side panel of the relay. This label indicates the product model, serial number, and date of manufacture. The following figure shows an example of such a label.

Note:
This example label is specific to a particular order of the 850 and may not represent your model.



Figure 4: Product label example

2.3 DIMENSIONS

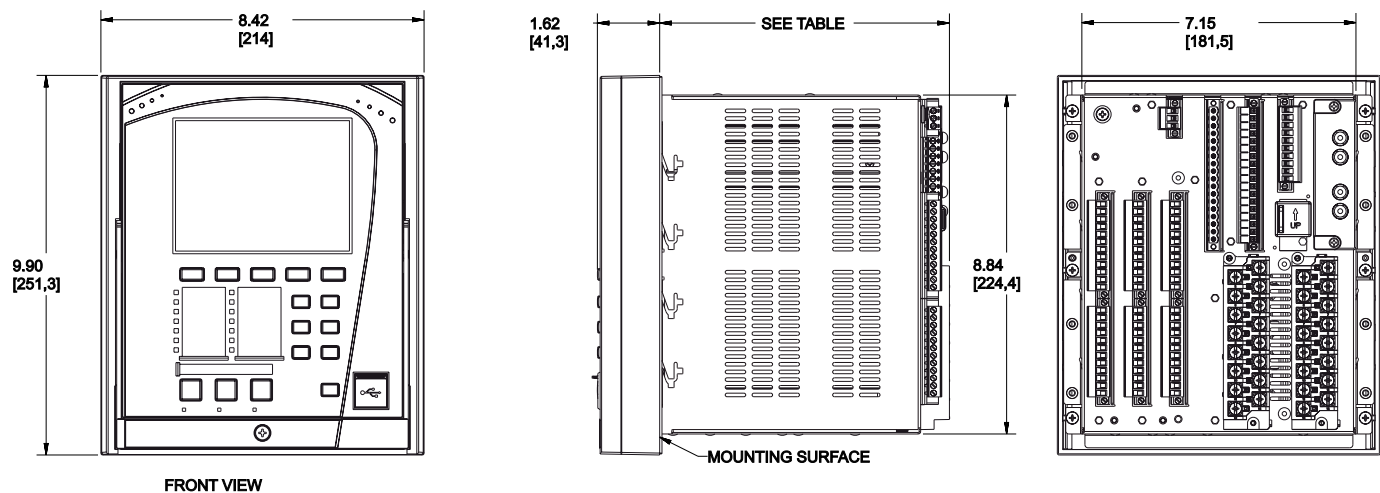

892704B1

The relay dimensions are shown below. Additional dimensions for mounting, and panel cutouts, are shown in the following sections.

Figure 5: Relay Dimensions

2.4 MOUNTING

The relay can be mounted two ways: standard panel mount or optional tab mounting, if required.

- **Standard panel mounting:** From the front of the panel, slide the empty case into the cutout. From the rear of the panel, screw the case into the panel at the 8 screw positions.
- **Optional tab mounting:** The V tabs are located on the sides of the case and appear as shown in the following figure. Use needle nose pliers to bend the retaining V tabs outward to about 90°. Use caution and do not bend and distort the wall of the enclosure adjacent to the tabs. The relay can now be inserted and can be panel wired.

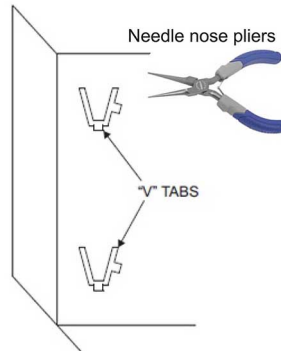


Figure 6: V Tabs Located on Case Side

2.4.1 STANDARD PANEL MOUNT

The standard panel mount and cutout dimensions are illustrated below.



Caution:

To avoid the potential for personal injury due to fire hazards, ensure the unit is mounted in a safe location and/or within an appropriate enclosure.

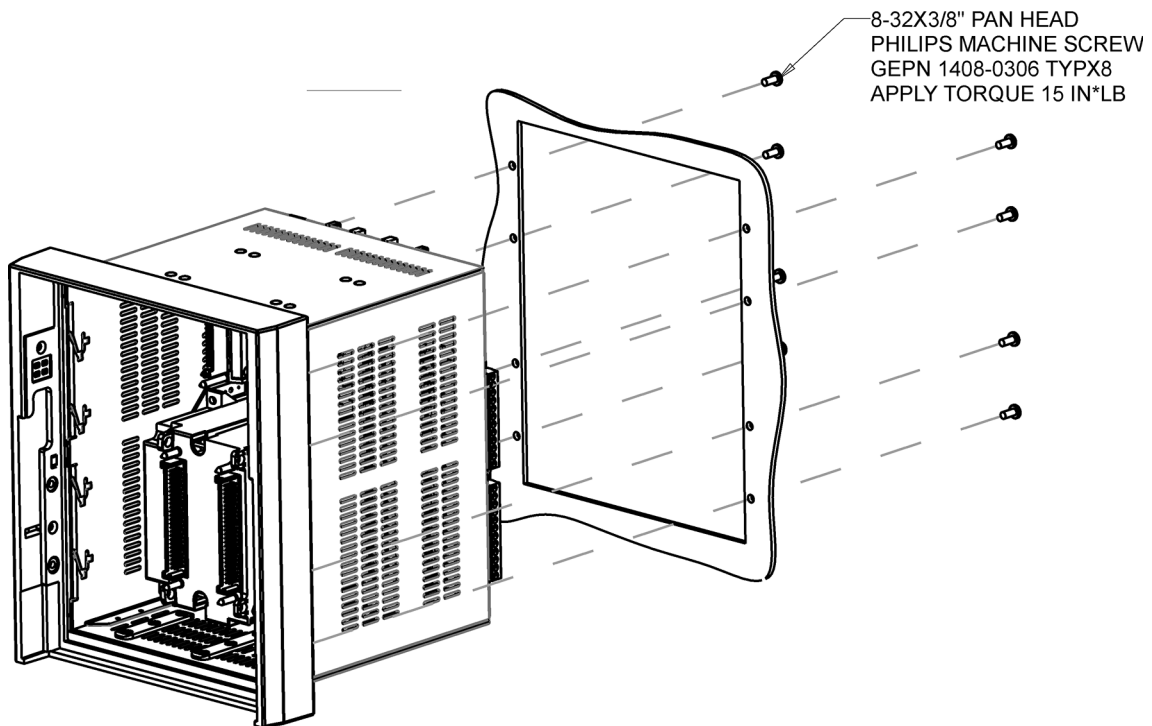


Figure 7: Standard panel mount

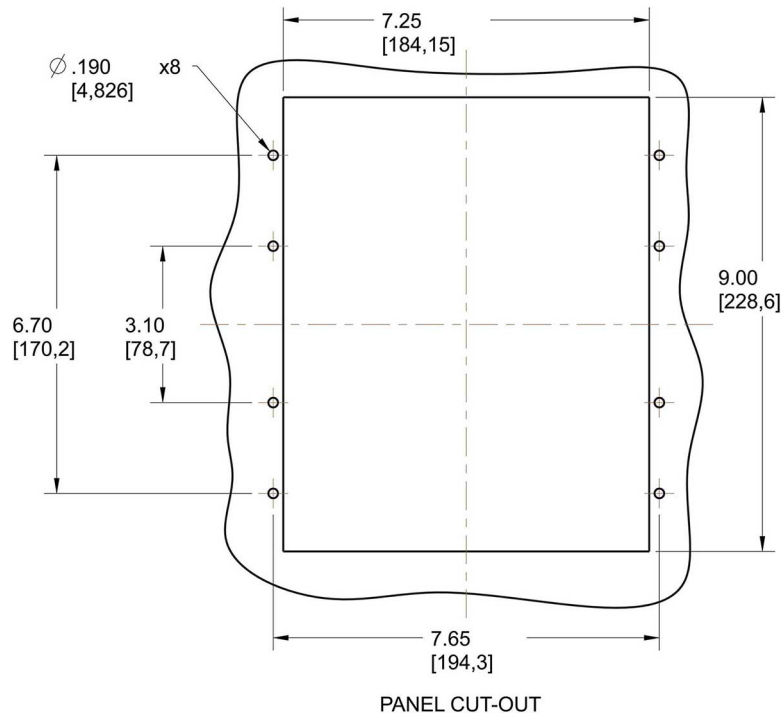



Figure 8: Panel cutout dimensions

Depth reducing collar

Three different sizes of optional depth reducing collar are available for mounting relays in narrow-depth service panels, or wherever space is an issue.

Note:
The drill hole locations are different when a depth reducing collar is used. See the Depth reducing collar panel cutout figure below.

- 18J0-0030 8 Series Depth Reducing Collar - 1 3/8"
- 18J0-0029 8 Series Depth Reducing Collar - 3"
- 18J0-0184 8 Series Depth Reducing Collar - 3 3/4"

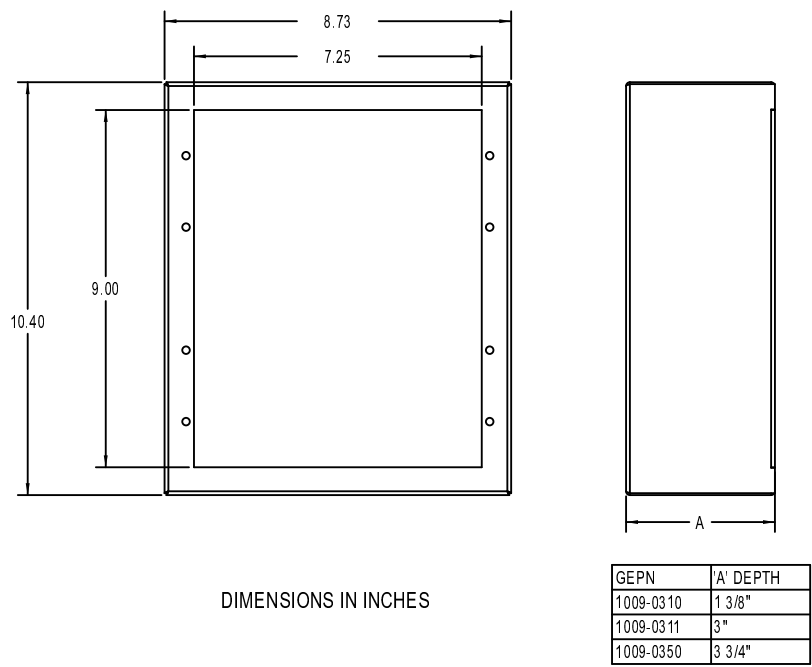

892703A2.cdr

Figure 9: Depth reducing collar dimensions


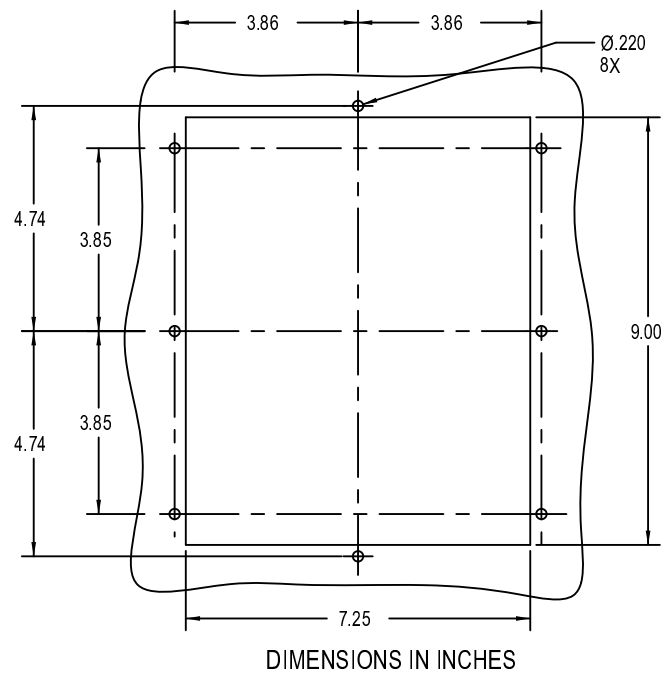


Figure 10: Depth reducing collar panel cutout

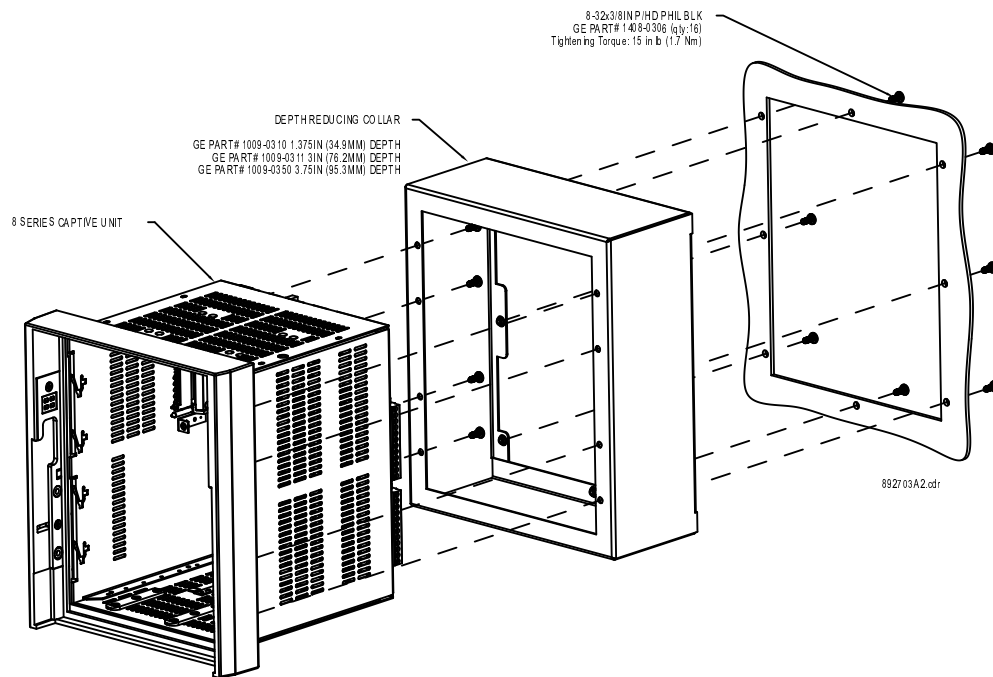

- PANEL MOUNTING WITH DEPTH REDUCING COLLAR
1. DRILL MOUNTING HOLES AS SHOWN ON THE PANEL CUTOUT DRAWING
 2. MOUNT THE COLLAR TO THE CAPTIVE UNIT USING 8 SCREWS AS SHOWN
 3. MOUNT COMBINATION OF UNIT AND COLLAR TO THE PANEL USING 8 SCREWS AS SHOWN

Figure 11: Depth reducing collar installation

To mount an 8 Series relay with a depth reducing collar, follow these steps:

1. Drill mounting holes as shown on the Depth reducing collar panel cutout figure above.
2. Mount the collar on the captive unit using eight screws.
3. Mount the combined unit and collar on the panel using eight screws.


2.5 DRAW-OUT UNIT WITHDRAWAL AND INSERTION

Caution:


Turn off control power before drawing out or re-inserting the relay to prevent mal-operation.

Follow the steps outlined in the diagrams below to insert and withdraw.

STEP 1

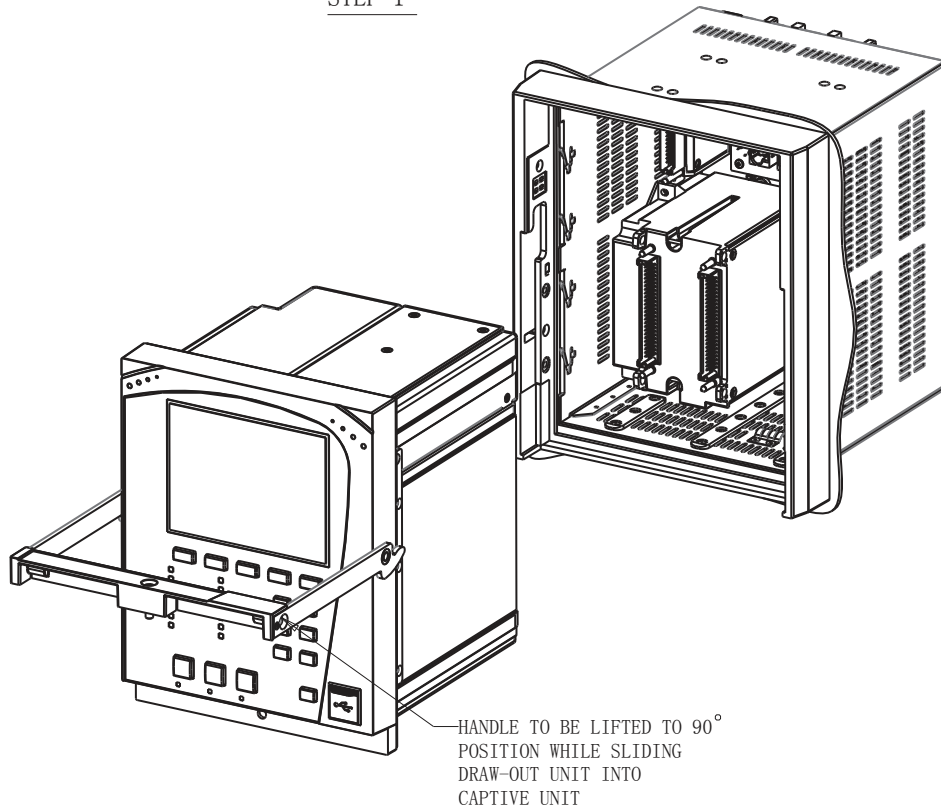

STEP 2

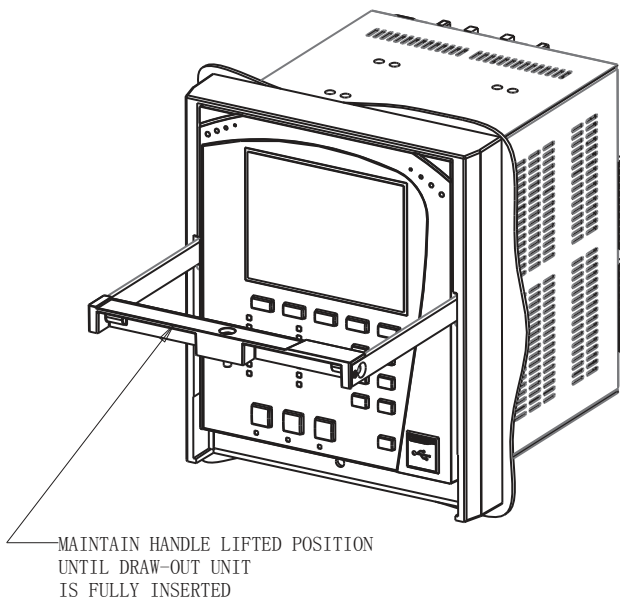

STEP 3

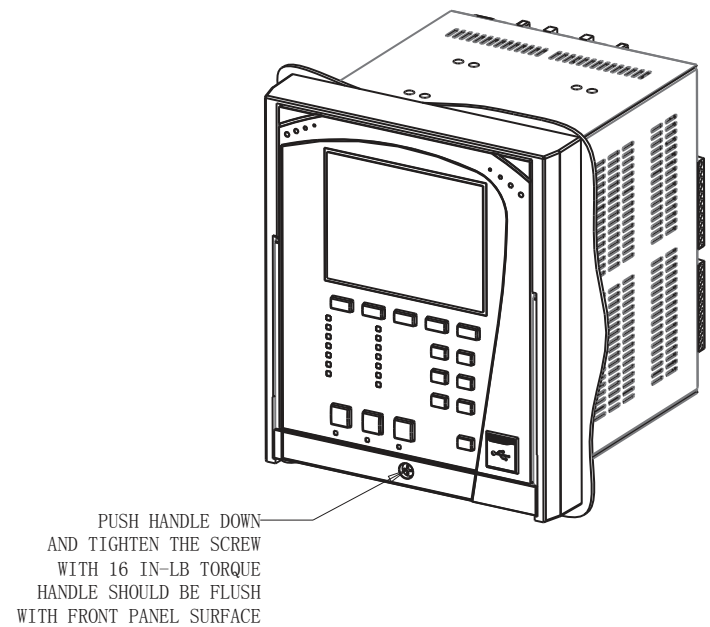


Figure 12: Unit withdrawal and insertion diagram

2.6 REMOVABLE POWER SUPPLY

Follow the steps outlined in the below diagram to insert (#1) or remove (#2) the power supply from the unit.

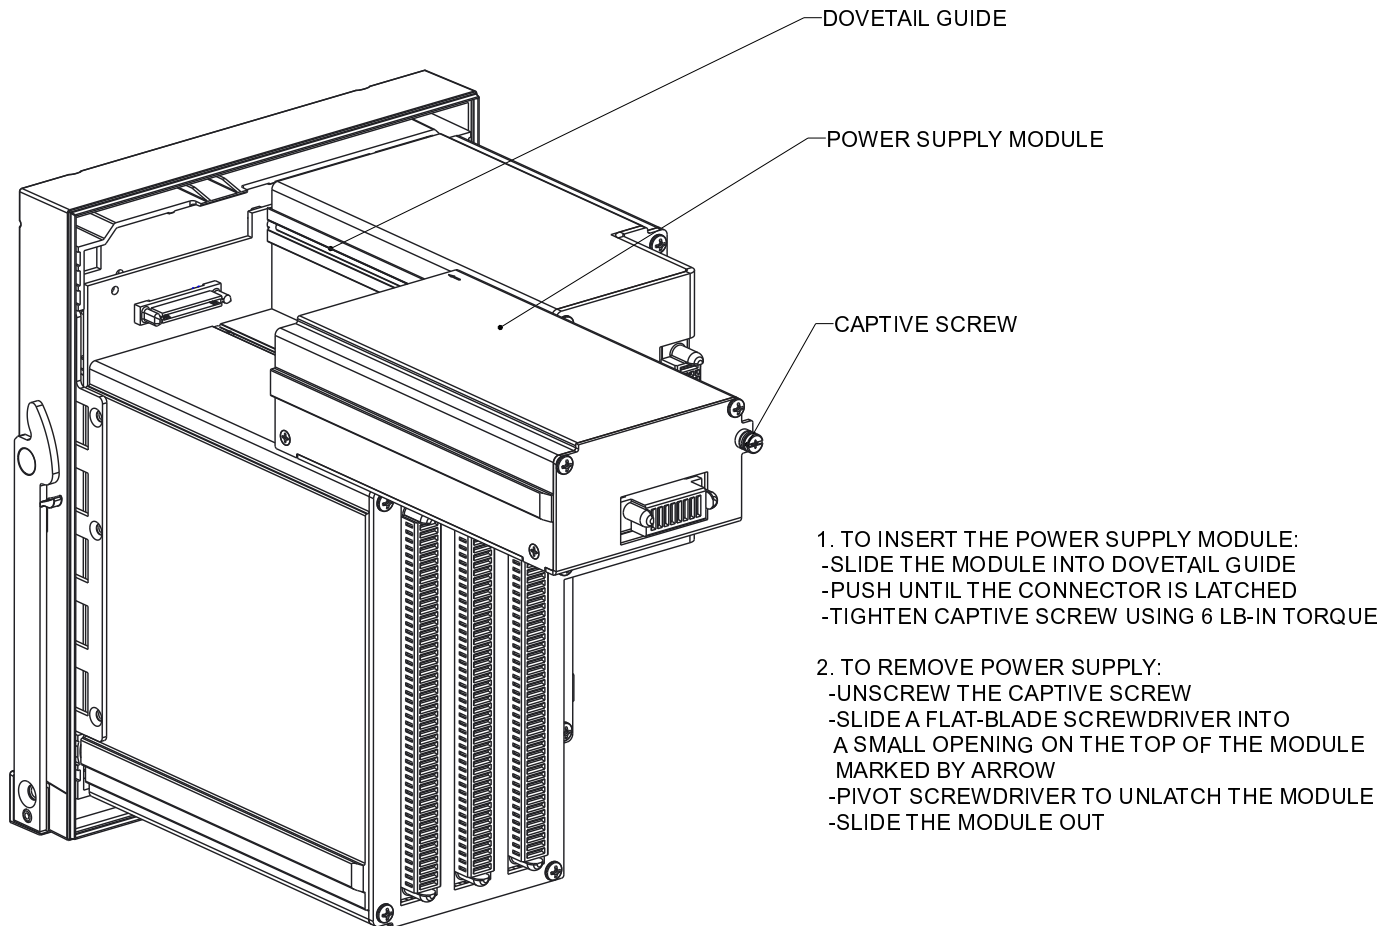


Figure 13: Insert or Remove the Power Supply

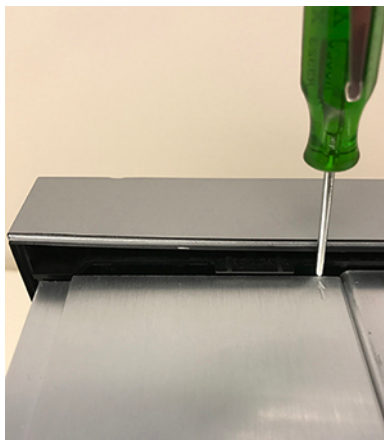


Figure 14: Unlatch Module

2.7 REMOVABLE MAGNETIC MODULE



Warning:
You must follow all preparation steps before removing the CT/VT magnetic module.

Warning:
You must identify all current and voltage sources connected to the relay before starting the removal process.

Warning:
Only suitably-qualified personnel may remove the magnetic module from an installed relay.

Warning:
Appropriate PPE is required based on the arc flash calculations.



Caution:
LOTO (Lockout Tag Out) of the system is required prior to module removal/replacement.

Follow the procedures outlined below to remove or replace the CT/VT magnetic module.

PREPARATION

1. Shut down and de-energize all systems connected to the relay.
2. Review all cautions and warnings in the introduction.



Warning:
A relay, with the magnetic module removed, does NOT have an internal automatic CT shorting mechanism.

Warning:
Hazardous voltages may exist when opening the secondary circuits of live current transformers.

Warning:
Make sure that in-field current transformer secondary circuits are shorted out before making or removing any connection to the current transformer (CT) input terminals.

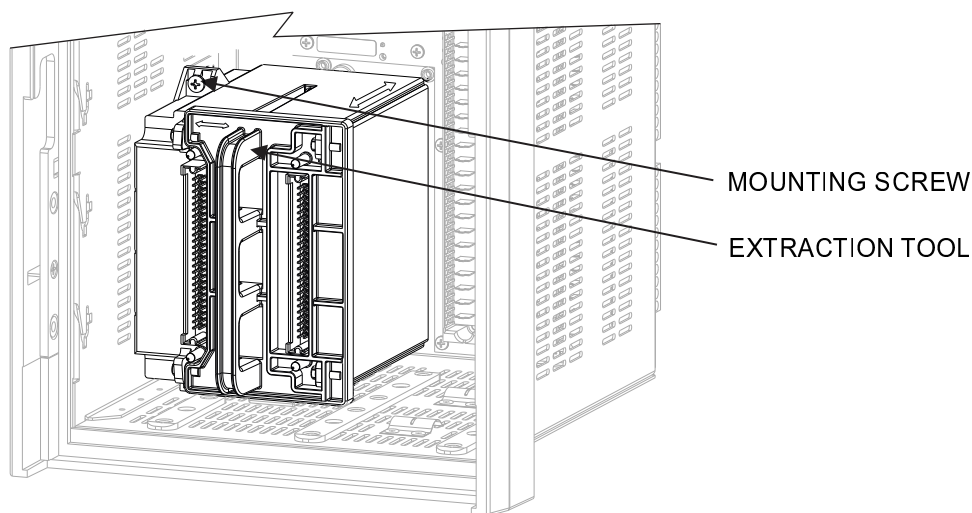


Figure 15: Removing/replacing the CT/VT Magnetic Module

REMOVAL



Caution:

LOTO (Lockout Tag Out) of the system is required prior to module removal/replacement.

1. Remove the draw-out unit from the chassis. Carefully set aside.
2. Within the captive chassis, unscrew the mounting screw (as indicated in the following figure).
3. Insert the magnetic module extractor tool as shown in the following figure, without engaging the pins.
4. Slide the tool to the left, engaging the pins fully (see arrow in figure).
5. Pull the tool handle towards the operator to disengage the module, and carefully remove the module from the chassis.
6. Remove the tool from the module, and save for future use.

REPLACEMENT



Caution:

LOTO (Lockout Tag Out) of the system is required prior to module removal/replacement.

Ensure the replacement CT /VT module is the same type as the removed module. Alternate models and configurations may be unsafe for use.

1. Insert the extractor tool into the front of the module, then slide the tool to the left to engage the tool pins.
2. Place the module/tool at the front of the chassis so that it is flush with the left and bottom sides.
3. Slide the module/tool into the back of the chassis as far as it will go, making sure the connectors mate while keeping the module flush to the left and bottom sides of the chassis.
4. Tighten the captive mounting screw using a torque of 6 in-lbs.
5. Remove the tool from the magnetics module and save for future use.
6. Insert the draw-out unit.
7. Re-energize the relay system.
8. Remove the external shorting equipment from the CT inputs.

9. Ensure the In Service LED on the relay front panel is green.
10. Navigate to the Target message screen (press **Home** and then **Targets**) and check that the Target screen does not show any Self-Test errors. Self-Test errors may indicate that the module has not been mounted properly.
11. Verify that CTs and VTs, digital inputs and other circuits are all metering correctly.

2.8 REMOTE MODULE I/O (RMIO)

If using the Remote RTD module, follow these installation steps.

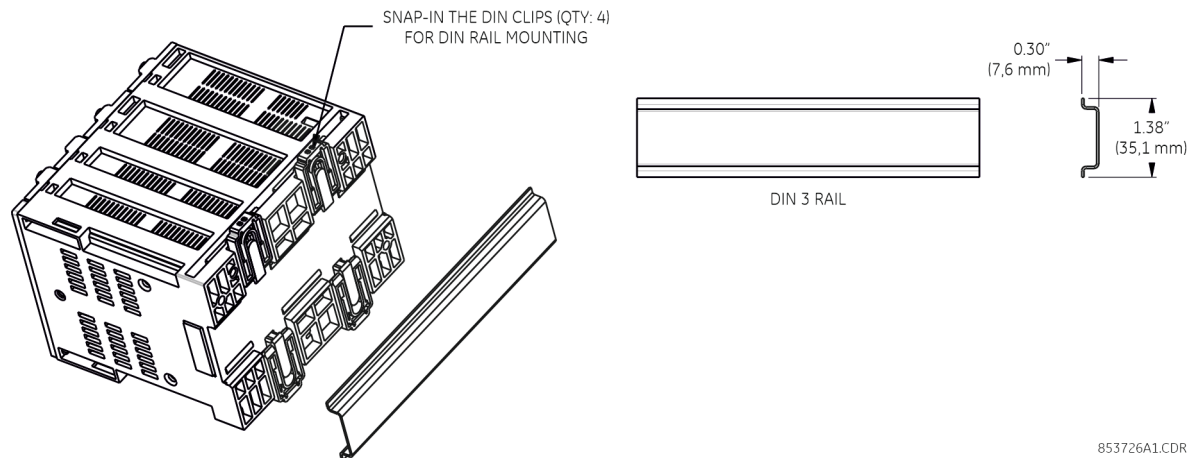


Figure 16: RMIO - DIN rail mounting - Base & Expansion units

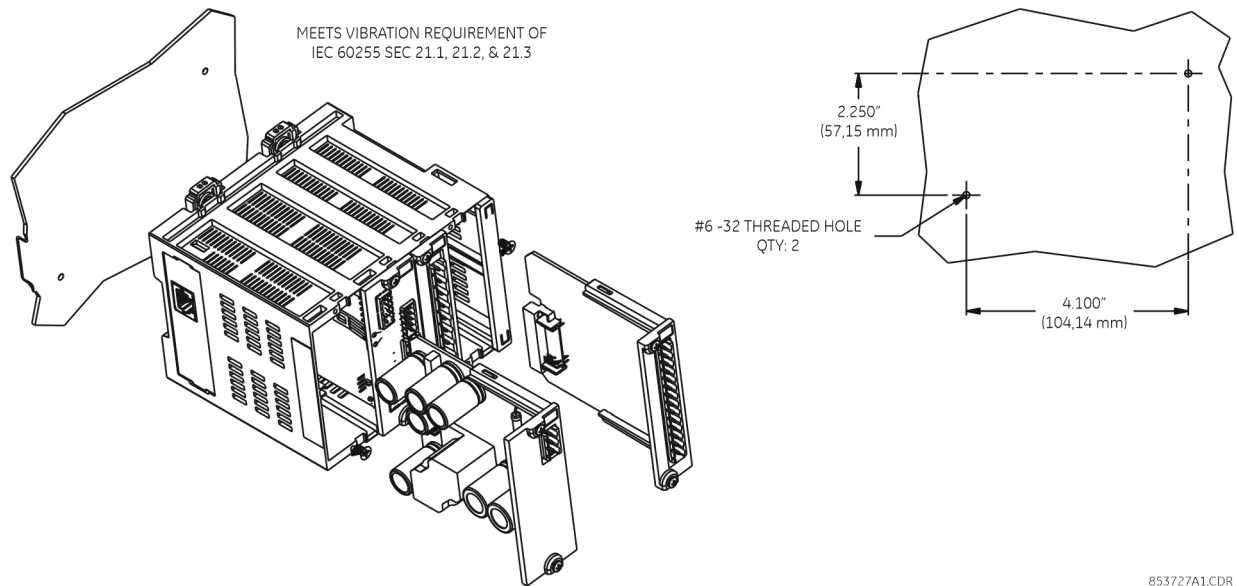


Figure 17: RMIO - Base Unit screw mounting

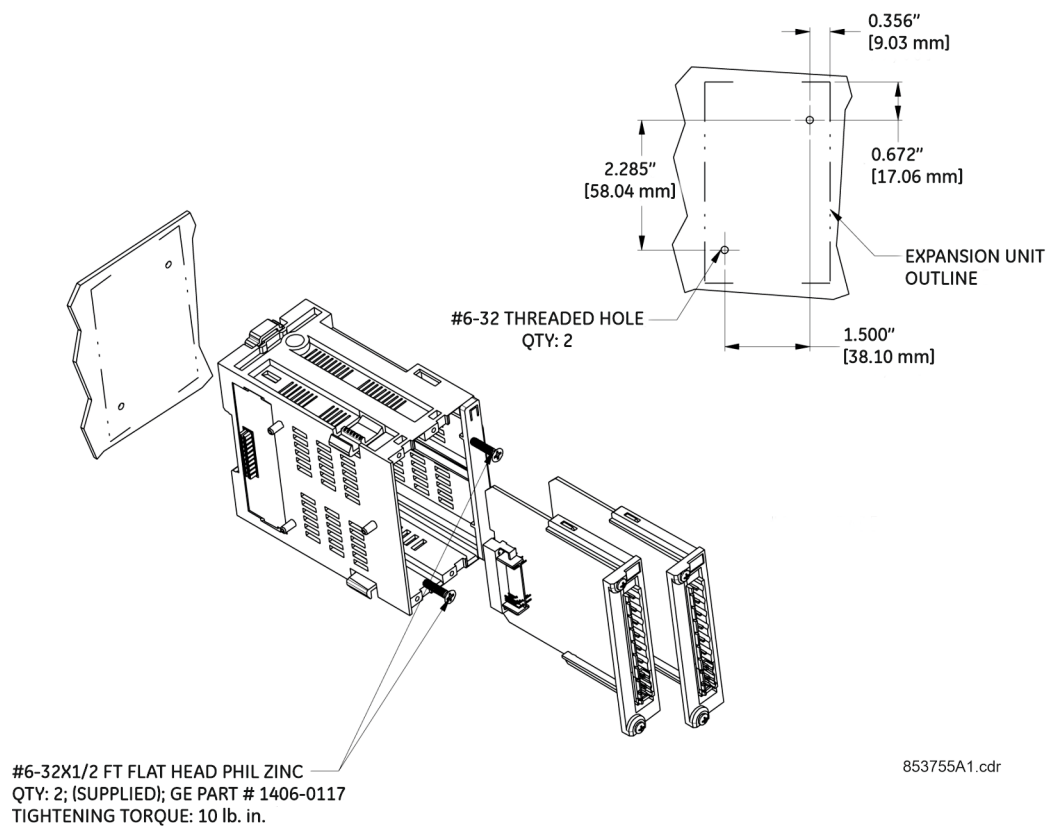


Figure 18: RMIO - Expansion Unit screw mounting

2.9 IP20 BACK COVER

If using the IP20 back cover, follow these installation steps.

1. Place the IP20 cover in the orientation shown over the CT/VT terminal blocks, routing wiring through the cover slots.
2. Secure the cover with the 4 screws provided. Suggested tightening torque is 8 lb-in (0.9 Nm).

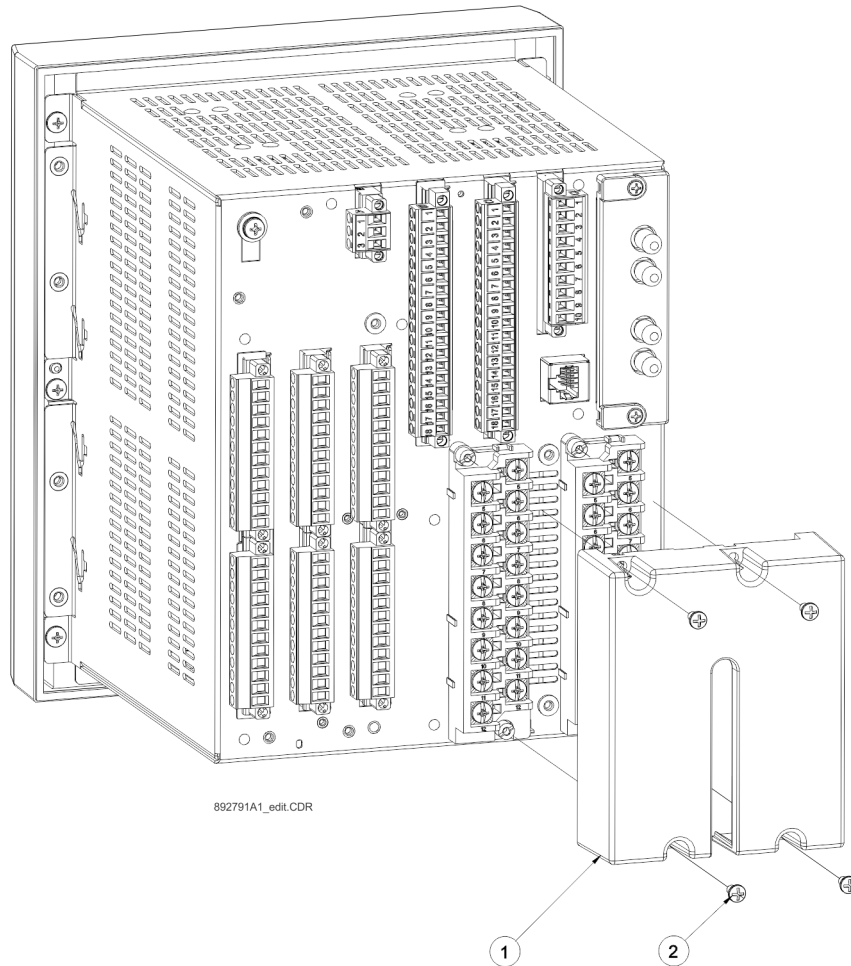


Figure 19: IP20 Back Cover installation

2.10 ARC FLASH SENSOR

The Arc Flash sensor houses the fiber optics that are used to detect the arc flash, there are two types of the sensors: loop sensor and point sensor.



Caution:

If the Arc Flash Protection is used, operands for Arc Flash sensor failures must be assigned to an auxiliary output relay. This must be connected to the control logic of the breaker equipment to ensure safe operations when the output relay is asserted. In the event of this assertion, the Hazard Reduction Category code cannot be maintained unless backup protection is continuing to maintain it.



Caution:

This product uses optical electronic devices (loop or point sensors) to sense arc flash fault conditions. It is recommended to follow proper housekeeping measures & establish a regularly scheduled preventive maintenance routine to ensure proper device operation .

Caution:

Read the following guidelines fully before proceeding.

Care must be taken when handling the Arc Flash sensor fiber, which can be damaged if twisted, bent, or clamped tightly during installation.

- Do not bend sensor fiber sharply, or with a radius of less than 35 mm (1½ inches). Sharp bends can damage the fiber. Do not pull or tug loops of sensor fiber, as sharp bends may result.
- Do not clamp sensor fiber tightly during installation. Sensor fiber should be held in place loosely for the best long-term performance. Avoid over-tightening ties which may deform or break the sensor fiber.
- Do not pull or tug sensor fiber with force, as this may cause internal damage or separate the fiber from the cable connector.
- Do not twist the sensor fiber, as twisting can damage the fiber resulting in substandard performance.
- Do not attach sensor fiber directly to the bus or live conductors.
- Avoid installing sensor or sensor fiber on surfaces where temperatures might go above 70 °C or 158 °F to prolong the life of the fiber.
- Secure all sensor fibers (loosely but securely) away from any moving parts.
- When holes are drilled for sensor fiber installation, install rubber grommets around the drilled holes to protect the sensor fiber.
- Before installing arc flash sensor units, ensure that all other drilling and installation is complete to minimize possible damage to the sensitive unit and connected sensor fiber cable.
- Ensure that sensor fiber cable is installed clear from any switchgear moving parts, and can't be snagged or damaged during any switchgear operations, including maintenance activities.
- Ensure there is no dirt or dust inside the point sensor or on the surface of both the point sensor head and transparent loop sensors because it reduces the capturing efficiency of the device, increases its transmission loss, or both. If the sensor is covered with dust, clean it by blowing or wiping the dust off the point sensor. Dish soap or organic solvents (ethanol based) can be used. Avoid using any other type of corrosive solvents.

- For each of the sensors, plan the path of the sensor carefully, keeping it as short as possible for the point sensor, however extra looping is recommended for the loop sensor
- If a sensor fiber extension is used, ensure that it is long enough to reach the loop sensor without pulling or bending sharply.
- If the bulkhead connectors are used to connect the fiber extension to a loop sensor, mount the bulkhead connector through the drilled ends of the switch gear chamber (if needed to extend from one to another chamber) using below dimensions. Keep in mind that the maximum thickness the bulkhead connector can tolerate is 4.11mm (0.16"), and space the bulkhead connector holes properly to allow for the 11mm (0.42") installation washers.

Sensor Type

Arc flash sensors are available in two different configurations, point and loop. Loop sensors can be used with a black-coated sensor fiber extension to connect the ends of the loop sensor to the 8 Series relay through panels up to 51 mm (2 inches) thick.

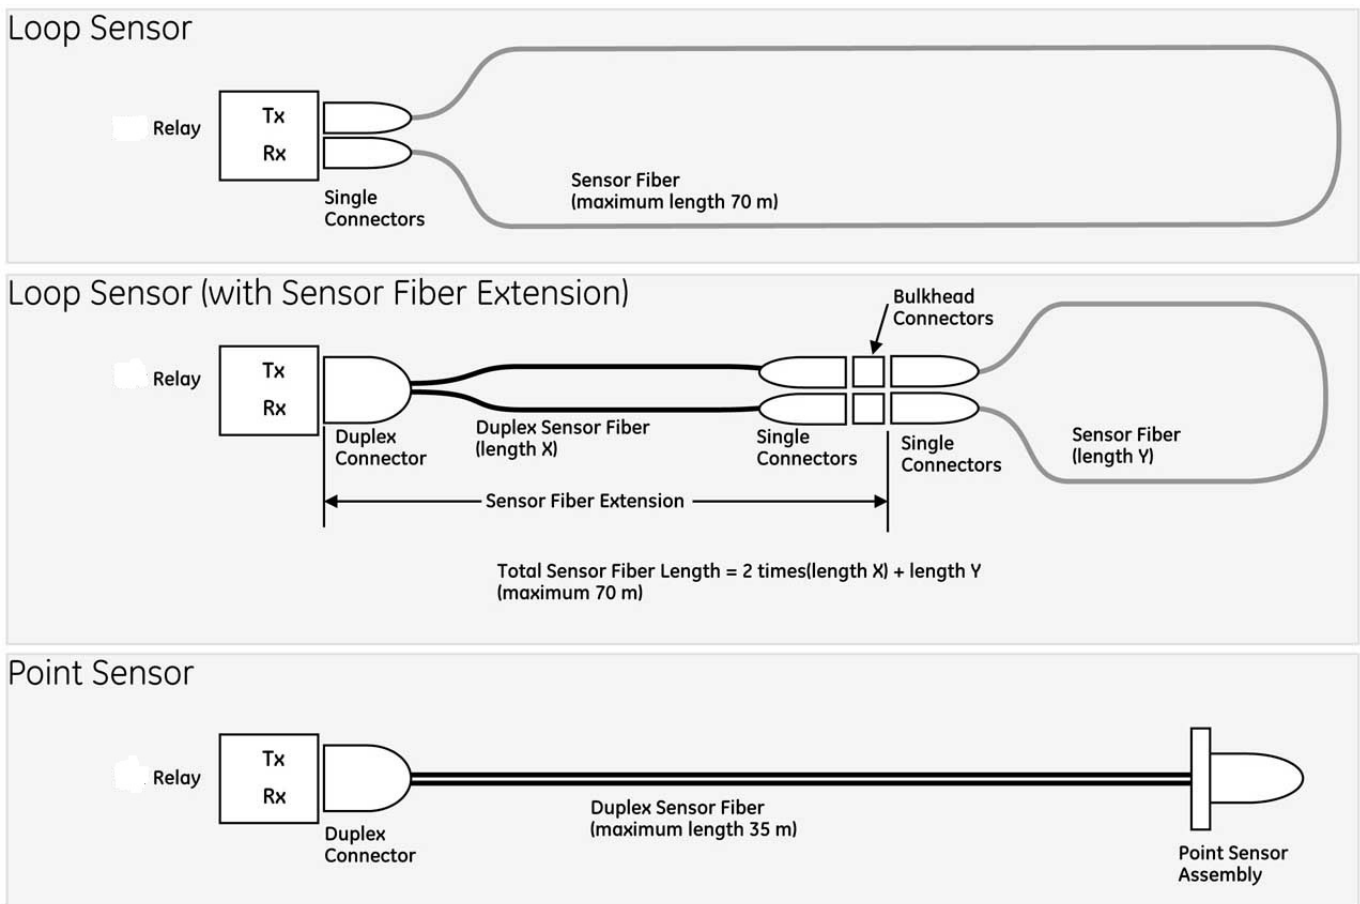


Figure 20: Arc Flash Loop and Point Sensors

Arc flash sensors of either type can be connected to any of the four or eight arc flash ports on the back of the 8 Series relay, as shown.



Figure 21: Arc Flash Sensors connected to the 8 Series relay

Point Sensor Installation



Figure 22: Order code T type Arc Flash point sensor without sensor fiber connected

Figure 23:

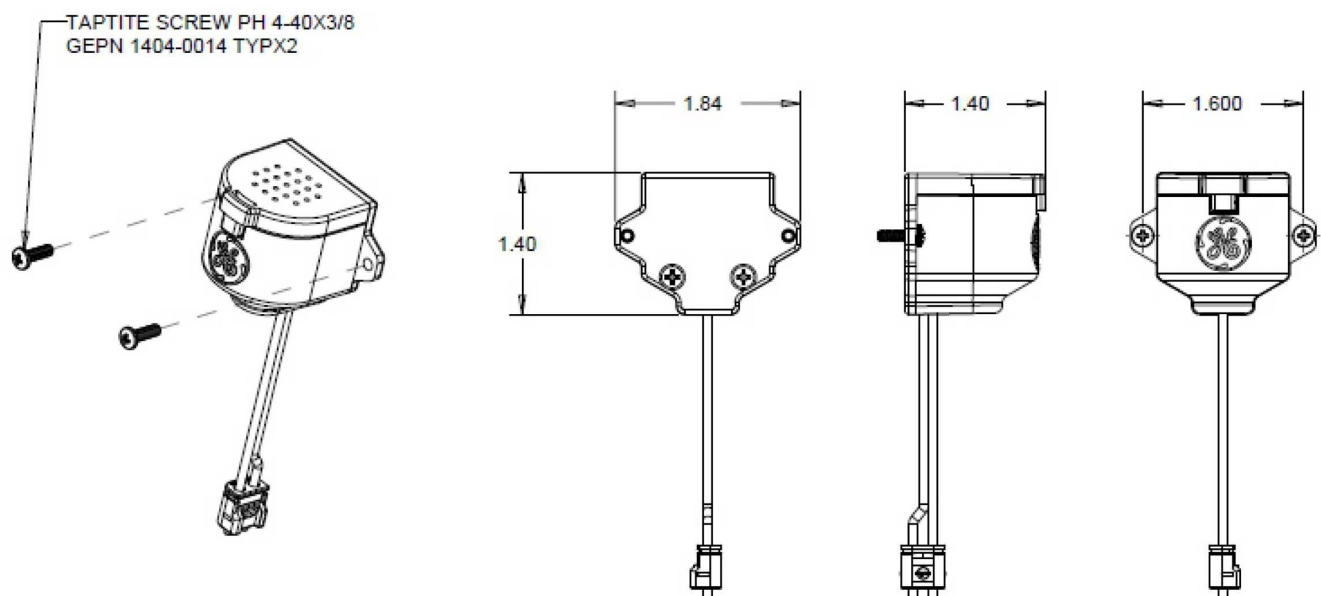


Figure 24: Order code F type Point Sensor - dimensions of sensor tip.

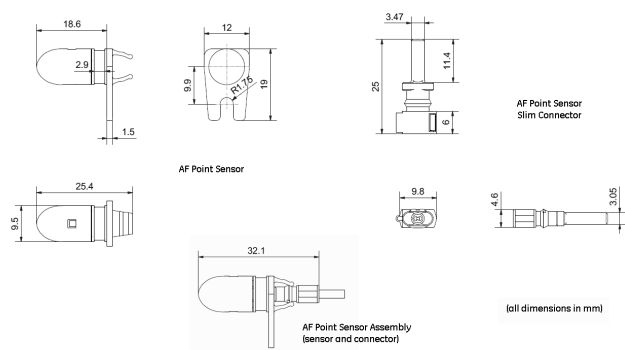


Figure 25: Order code T type Point sensor and slim connector dimensions

Figure 26:

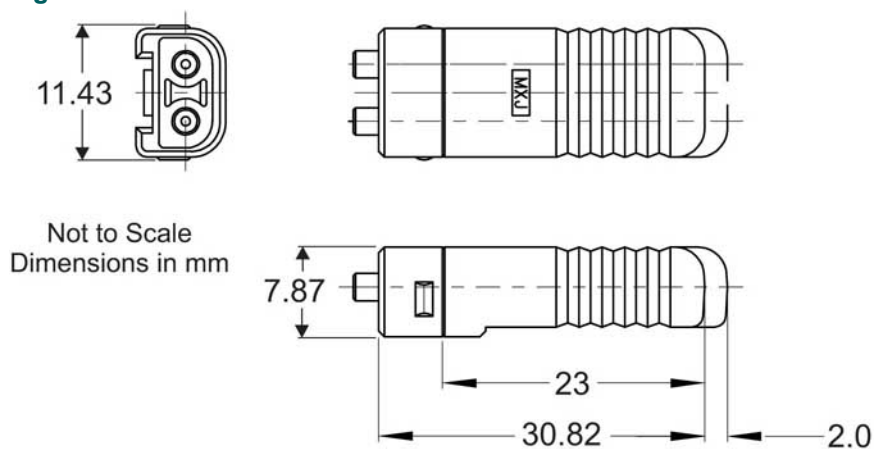


Figure 27: Order code T type Point sensor - dimensions of sensor tip

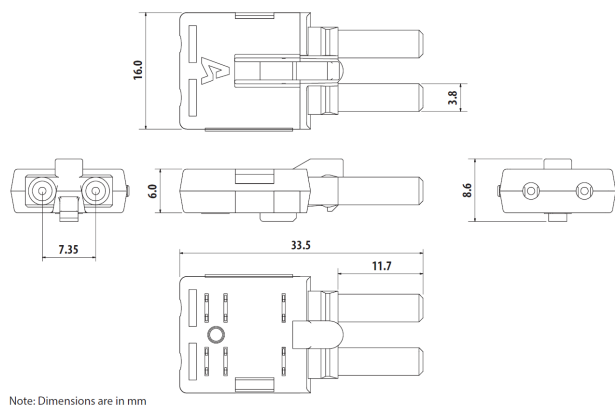


Figure 28: Duplex connector dimensions (point sensor, and sensor fiber extension for loop sensor)

The point sensor fiber includes a duplex connector to connect to the back of the 8 Series relay on one end, and a compressed slim connector that connects to the sensor itself on the other end.

Before installing the AF sensor units, ensure that all other drilling and installation is complete to minimize possible damage to the sensitive unit and connected sensor fiber cable. Choose a location for the sensor clear of any obstructions that could shield the sensor from arc flash light.

Note:

Sensor fiber should be held in place loosely for the best long-term performance. Avoid over-tightening ties which may deform or break the sensor fiber.

General installation

1. Choose a location for the point sensor. Arc flash point sensors should be installed clear of any obstructions that could shield the sensor from arc flash light, and less than 2m (6ft 6") from any potential arc flash source. The sensor head should be pointed towards the most likely source of arc flash.
2. Remove the slim connector from the point sensor assembly.
3. Carefully route the duplex sensor fiber from the point sensor location to the back of the relay unit, minimizing loops and curves for the strongest possible signal. Ensure all sensor fiber handling precautions are followed. The slim connector fits through holes with a diameter of 11 mm or greater, and can be threaded through holes drilled in any panels between the relay and arc flash detection location.
4. Mount the point sensor using either a cable tie mount or through-hole mount, as detailed below.
5. Reconnect the slim connector to the point sensor.

Note:

Install protective grommets when routing sensor fiber through metal walls.

Arc flash point sensors can be installed in one of two ways, using a cable tie mount or a through-hole mount.

Cable tie mount

- Requires a 2.5-mm-wide cable tie.
- Mount the sensor on a stick or similar using the cable tie, as shown in the following figure.



Figure 29: AF point sensor, cable tie mount

Through-hole mount

- Requires a standard or self-tapping M3 screw, and optionally an M3 washer.
- Mount the sensor through a 10 mm hole made in the surface of any mechanical structure inside the switchgear or on the surface of one side of the switchgear itself, as shown in the following figure.

Figure 30:

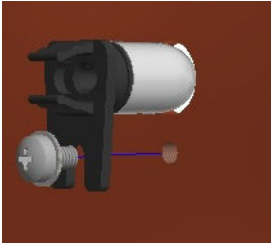


Figure 31: AF point sensor, through-hole mount


Make sure there is no dirt or dust inside the point sensor or on the surface because it reduces the capturing efficiency of the device, increases its transmission loss, or both. If the point sensor is covered with dust, clean it by blowing or wiping the dust off the point sensor.

Note:

The material of the point sensor is not affected by water-based cleaning agents, dish soap, or organic solvents with an alcohol (ethanol) base. Do not use solvents or solvent mixtures that contain acids because they can attack or dissolve the optical plastic material.

Loop sensor installation

The loop sensor transparent sensor fiber has a single connector on either end. The sensor fiber extension has a duplex connector on one end, two single connectors on the other end, and comes with two single bulkhead connectors. Both come in custom lengths, which can be ordered to fit your installation.

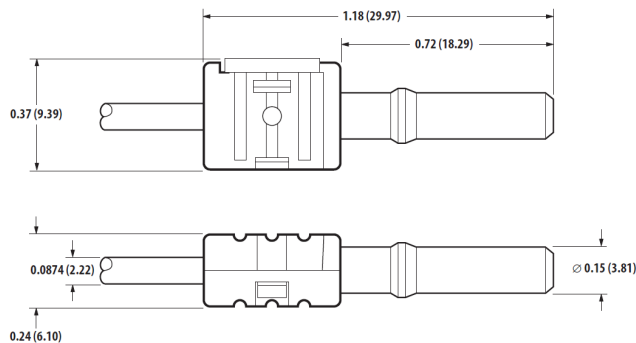

All dimensions are in inches and (millimeters).

Figure 32: Single connector dimensions (loop sensor, and sensor fiber extension for loop sensor)

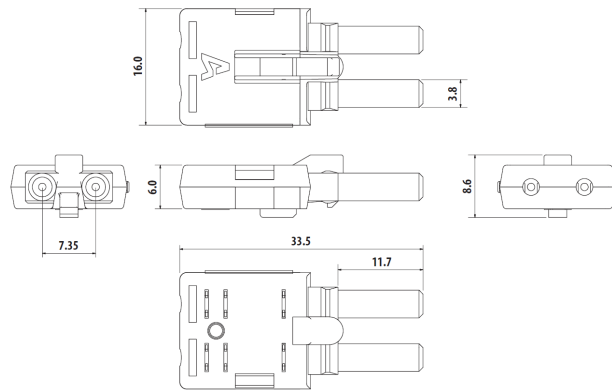


Figure 33: Duplex connector dimensions (point sensor, and sensor fiber extension for loop sensor)

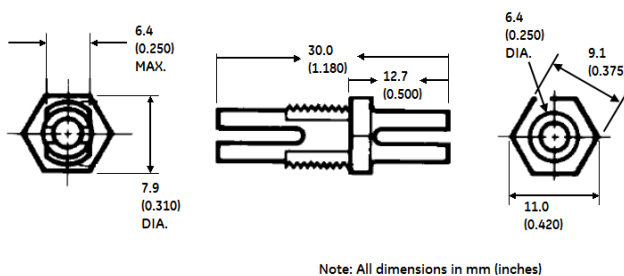


Figure 34: Single bulkhead connector dimensions

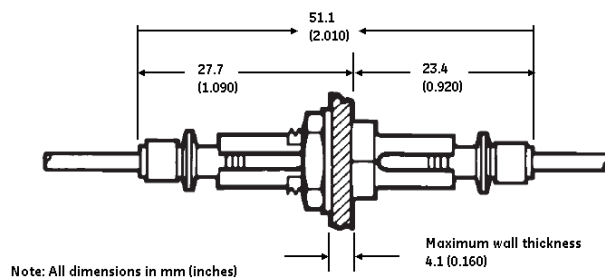


Figure 35: Single bulkhead connector with single connectors and sensor fiber

Before installing the AF sensor units, ensure that all other drilling and installation is complete to minimize possible damage to the sensitive unit and connected sensor fiber cable.

Note:

Sensor fiber should be held in place loosely for the best long-term performance. Avoid over-tightening ties which may deform or break the sensor fiber.

Note:

The loop sensor fiber can be connected directly to the 8 Series relay without a sensor fiber extension, however, care must be taken to ensure correct alignment of the loop sensor single connectors into the relay light sensor input.

Installing the loop sensor fiber without an extension

1. Plan the path of the loop sensor fiber, looping through the chamber or chambers requiring arc flash detection.

2. Ensure that both ends of the loop remain close together and can reach the 8 Series relay light sensor inputs.
3. Install the loop sensor carefully, following all sensor fiber handling guidelines.
4. Plug the single connectors into the back of the 8 Series relay.

Installing the loop sensor fiber with a sensor fiber extension

1. Plan the path of the loop sensor fiber, looping through the chamber or chambers requiring arc flash detection.
2. Ensure that both ends of the loop remain close enough together to be reached by the sensor fiber extension. If needed, gently pull apart the duplex sensor fiber extension from the end with two single connectors, being careful not to bend the fiber with a radius of less than 35 mm (1.3 inches).
3. Ensure that the sensor fiber extension is long enough to reach the 8 Series relay from the bulkhead connector location.
4. Mount the bulkhead connector on the side of the chamber, following the drill hole dimensions provided. Note that the single bulkhead connector uses washers 11.0 mm (0.420 in) wide, so the drill holes must be spaced accordingly if the loop sensor path begins and ends in the same place.

Note: All dimensions in mm (inches)

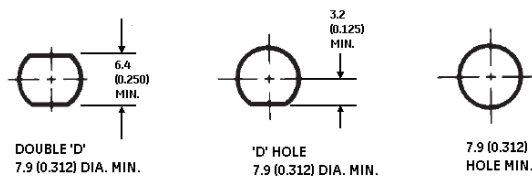


Figure 36: Bulkhead connector cutout

5. Install the loop sensor carefully, following all sensor fiber handling guidelines.
6. Plug the ends of the loop sensor into the bulkhead connectors.
7. Plug the single connectors on the sensor fiber extension into the other sides of the bulkhead connectors, and the duplex connector into the back of the 8 Series relay.

2.11 PHYSICAL CONSIDERATIONS OF WIRING

When installing two lugs on one terminal, both lugs must be oriented as shown in the picture below. This is to ensure the adjacent lower terminal block does not interfere with the lug body.

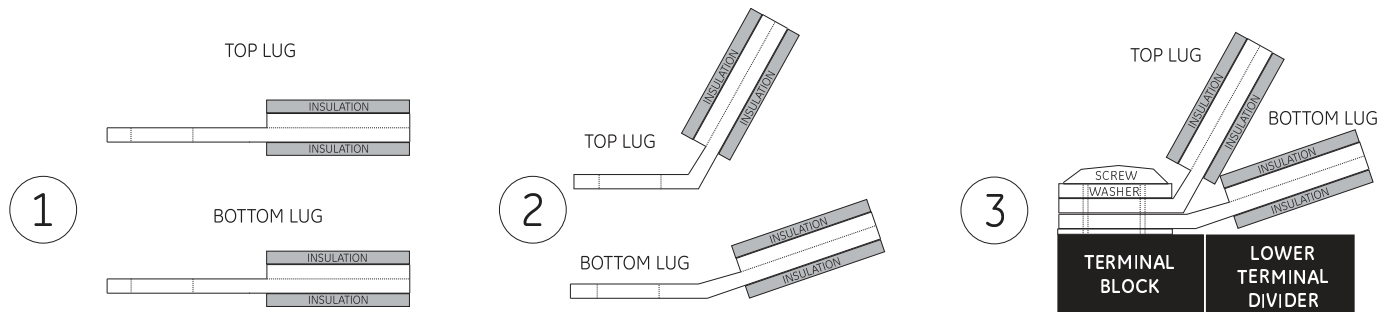


Figure 37: Positioning the lugs correctly



Figure 38: Correct Installation Method

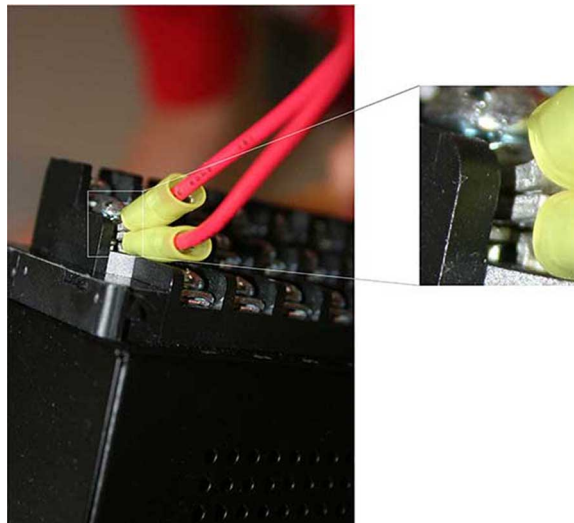


Figure 39: INCORRECT INSTALLATION METHOD (lower lug reversed)

2.11.1 TERMINAL STRIP TYPES

There are two types of removable terminal strips as shown: right-angle plugs with side screw connections, and straight plugs with front screw connections.

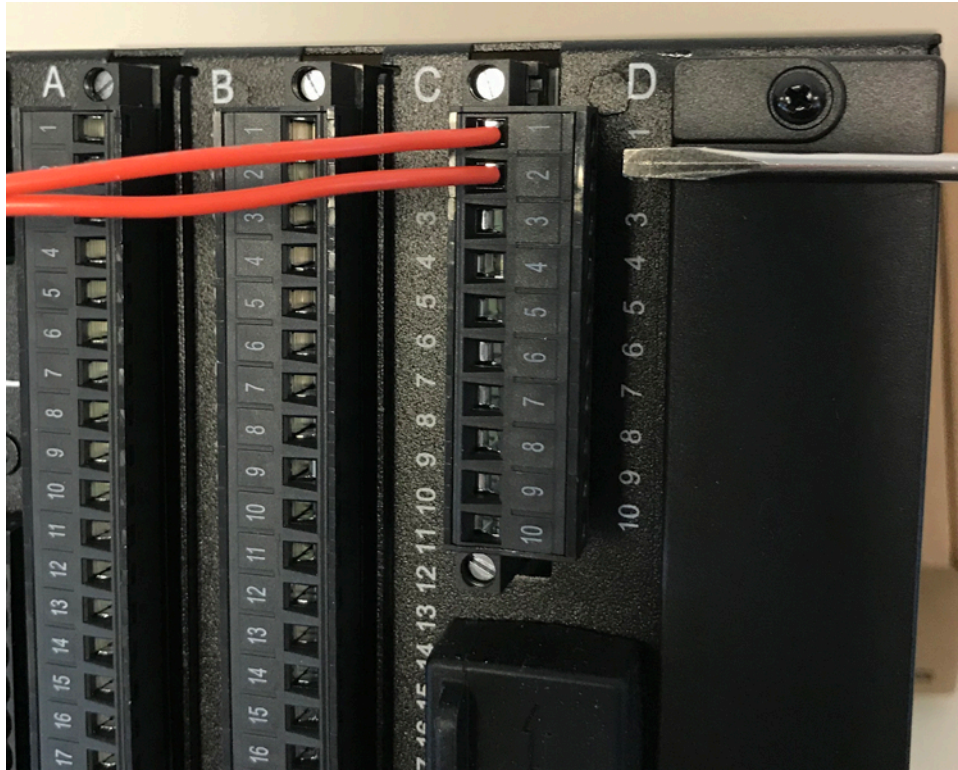


Figure 40: Right-angle plugs with side screw connections

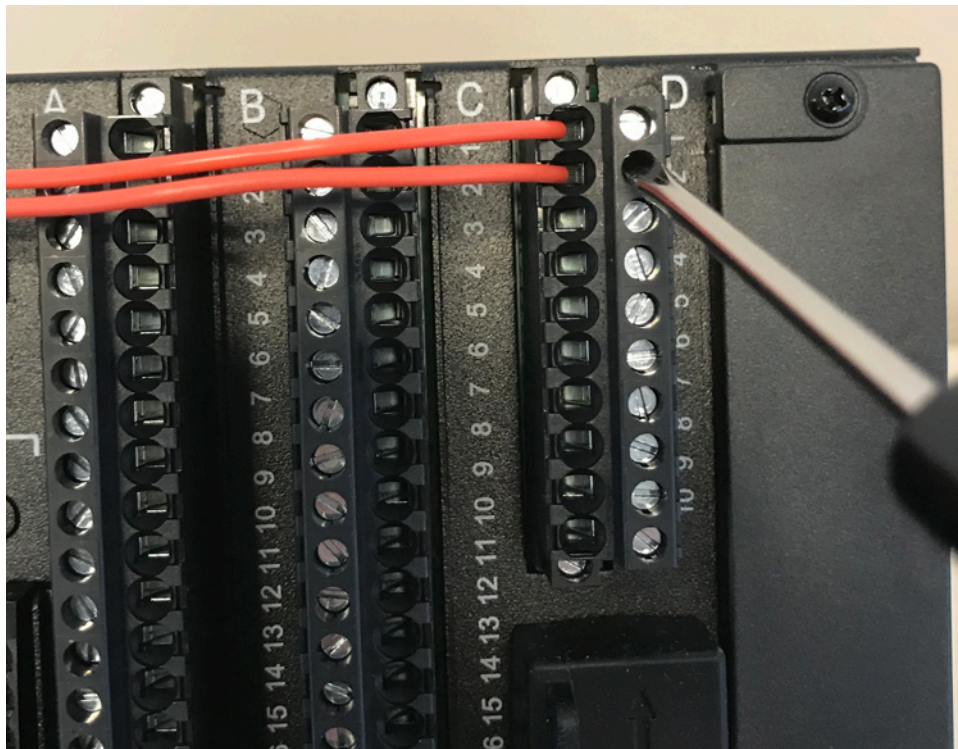


Figure 41: Straight plugs with front screw connections

2.11.2 WIRE SIZE

Use the following guideline for wiring to terminal strips A, B, C, D, F, G, H:

- 12 AWG to 24 AWG
- Suggested wiring screw tightening torque: 4.5 in-lbs (0.5 N-m)
- Usage of ferrules or pin terminals is recommended
- Suggested wire stripping / pin contact length:
 - Right-angle connection type plug: 7 to 8 mm
 - Front connection type plug: 12 mm

Use the following guideline for wiring to terminal blocks J, K:

- 12 AWG to 22 AWG (3.3 mm² to 0.3 mm²): Single wire termination with/without 9.53 mm (0.375") maximum diameter ring terminals.
- 14 AWG to 22 AWG (2.1 mm² to 0.3 mm²): Multiple wire termination with 9.53 mm (0.375") maximum diameter ring terminals. Two ring terminals maximum per circuit.
- Suggested wiring screw tightening torque: 15 in-lb (1.7 N-m)
- Suggested mounting screw tightening torque (to attach terminal block to chassis): 8 in-lb (0.9 N-m)

2.12 TERMINAL CONNECTIONS

All the terminal strips are labeled with a slot letter to identify the module slot position and numbers to identify the terminals within the module.

Note:

Make sure that the first letter on the terminal strip corresponds to the slot location identified on the chassis silkscreen.

Due to the possible number of applications, it is not possible to present typical connections for all possible schemes. The information in this section covers the main aspects of interconnectivity, in the general areas of inputs, outputs, communications and grounding. The figure below shows the rear terminal layout of the 8 Series platform.



Power Supply

H - HV Power Supply		L - LV Power Supply	
Terminal	Description	Terminal	Description (DC Voltage input polarity)
1	Line	1	+ve (positive)
2	Neutral	2	-ve (negative)
3	Ground	3	Ground

Communications

Terminal s	Order Code : SE-N	Order Code : SE- T	Order Code: 1E/1P/2A/2E/3E/3A - S/C	Order Code : 1E/1P/3E/3A -T	Order Code : 4E/4F - S/C
1	IRIG-B (+)	IRIG-B (+)	IRIG-B (+)	IRIG-B (+)	IRIG-B (+)
2	IRIG-B (-)	IRIG-B (-)	IRIG-B (-)	IRIG-B (-)	IRIG-B (-)
3	RS485_1 (+)	RS485_1 (+)/ RS422_Rx(+)	RS485_1 (+)	RS485_1 (+)	RS485_1 (+)/ RS422_Rx(+)
4	RS485_1 (-)	RS485_1 (-)/ RS422_Rx(-)	RS485_1 (-)	RS485_1 (-)	RS485_1 (-)/ RS422_Rx(-)
5	RS485_1 COM	RS485_1 COM	RS485_1 COM	RS485_1 COM	RS485_1 COM
6	RESERVED	RS422_Tx(+)	RESERVED	RS422_Tx(+)	RS422_Tx(+)
7	RESERVED	RS422_Tx(-)	RESERVED	RS422_Tx(-)	RS422_Tx(-)
8	RMIO shield	COM/shield	RMIO shield	COM/shield	COM/shield
9	RMIO +	RS485_2(+)/RMIO +	RMIO +	RS485_2(+)/RMIO +	RS485_2(+)/RMIO +
10	RMIO -	RS485_2(-)/RMIO -	RMIO -	RS485_2(-)/RMIO -	RS485_2(-)/RMIO -
RJ45 - P1	ETHERNET	ETHERNET	NOT USED	ETHERNET	ETHERNET
RJ45 - P2	NOT USED	ETHERNET	NOT USED	ETHERNET	ETHERNET
RJ45 - P4	N/A	N/A	ETHERNET	N/A	ETHERNET
RJ45 - P5	N/A	N/A	ETHERNET	N/A	ETHERNET

2.13 TERMINAL IDENTIFICATION

Optional I/O Card A, slot F, G, or H				Optional I/O Card M, slot F, G, or H				Optional I/O Card L, slot G			
F/G/H1	NO	TRIP		F/G/H1	COMMON	HSHB 1 (with Vmon)		G1	+	ANALOG OUTPUT 1	
F/G/H2	COMMON			F/G/H2	NO			G2	+	ANALOG OUTPUT 2	
F/G/H3	OPT/V			F/G/H3	RESERVED			G3	+	ANALOG OUTPUT 3	
F/G/H4	NO	CLOSE /AUX		F/G/H4	COMMON	HSHB 2 (with Vmon)		G4	+	ANALOG OUTPUT 4	
F/G/H5	COMMON			F/G/H5	NO			G5	+	ANALOG OUTPUT 5	
F/G/H6	OPT/V			F/G/H6	RESERVED			G6	+	ANALOG OUTPUT 6	
F/G/H7	NC	AUX		F/G/H7	COMMON	HSHB 3 (w/o Vmon)		G7	+	ANALOG OUTPUT 7	
F/G/H8	COMMON			F/G/H8	NO			G8	-	RETURN	
F/G/H9	NO			F/G/H9	RESERVED			G9	-	SHIELD	
F/G/H10	NC	AUX		F/G/H10	COMMON	HSHB 4 (w/o Vmon)		G10	+	ANALOG INPUT 1	
F/G/H11	COMMON			F/G/H11	NO			G11	+	ANALOG INPUT 2	
F/G/H12	NO			F/G/H12	RESERVED			G12	+	ANALOG INPUT 3	
F/G/H13	+	THRESHOLD SETTING GROUP 1		F/G/H13	+	THRESHOLD SETTING GROUP 1		G13	+	ANALOG INPUT 4	
F/G/H14	+			F/G/H14	+			G14	-	RETURN	
F/G/H15	+			F/G/H15	+			G15		SHIELD	
F/G/H16	+			F/G/H16	+			G16	+	OHMS INPUT	
F/G/H17	+			F/G/H17	+			G17	-	OHMS INPUT	
F/G/H18	+			F/G/H18	+			G18		SHIELD	
F/G/H19	+			F/G/H19	+			G19	+	HOT	
F/G/H20	-			F/G/H20	-			G20	+	COMP	
F/G/H21	+	AUX*		F/G/H21	+	FORM C CFR*		G21	-	RETURN	
F/G/H22	NC			F/G/H22	NC			G22	-	SHIELD	
F/G/H23	COMMON			F/G/H23	COM			G23		RESERVED	
F/G/H24	NO			F/G/H24	NO			G24		RESERVED	

Optional I/O Card R or S**, slot B or C				Optional I/O Card F, slot H				Optional I/O Card C, slot B or C			
B1/C1	HOT	RTD 1		H1	+	DIGITAL INPUTS		B/C1	+	THRESHOLD SETTING GROUP 1	
B2/C2	COMP			H2	+			B/C2	+		
B3/C3	RETURN	RTD 1/2		H3	+			B/C3	+		
B4/C4	HOT			H4	+			B/C4	+	THRESHOLD SETTING GROUP 2	
B5/C5	COMP	RTD 2		H5	+			B/C5	+		
B6/C6	HOT			H6	+			B/C6	-		
B7/C7	COMP	RTD 3		H7	+			B/C7	+	THRESHOLD SETTING GROUP 3	
B8/C8	RETURN			H8	+			B/C8	+		
B9/C9	SHIELD	RTD 3/4		H9	+			B/C9	+		
B10/C10	HOT			H10	+			B/C10	+	THRESHOLD SETTING GROUP 3	
B11/C11	COMP	RTD 4		H11	-			B/C11	+		
B12/C12	HOT			H12	+			B/C12	-		
B13/C13	COMP	RTD 5				ARC FLASH		B/C13	+	THRESHOLD SETTING GROUP 3	
B14/C14	RETURN			CH1				B/C14	+		
B15/C15	HOT	RTD 6		CH2				B/C15	+		
B16/C16	COMP			CH3				B/C16	+	THRESHOLD SETTING GROUP 3	
B17/C17	SHIELD	RTD 6		CH4				B/C17	+		
B18/C18	RESERVED							B/C18	-		

NOTES:

- Digital Input/Output numbering is sequential starting with Slot F.
- RTD numbering is sequential starting with Slot B.
- * This output is the Critical Fail Relay (CFR) when used in Slot F only
- ** Card S also supports 10 Ohm Copper RTD

894213C1.CDR

Figure 43: Optional I/O card terminal mappings

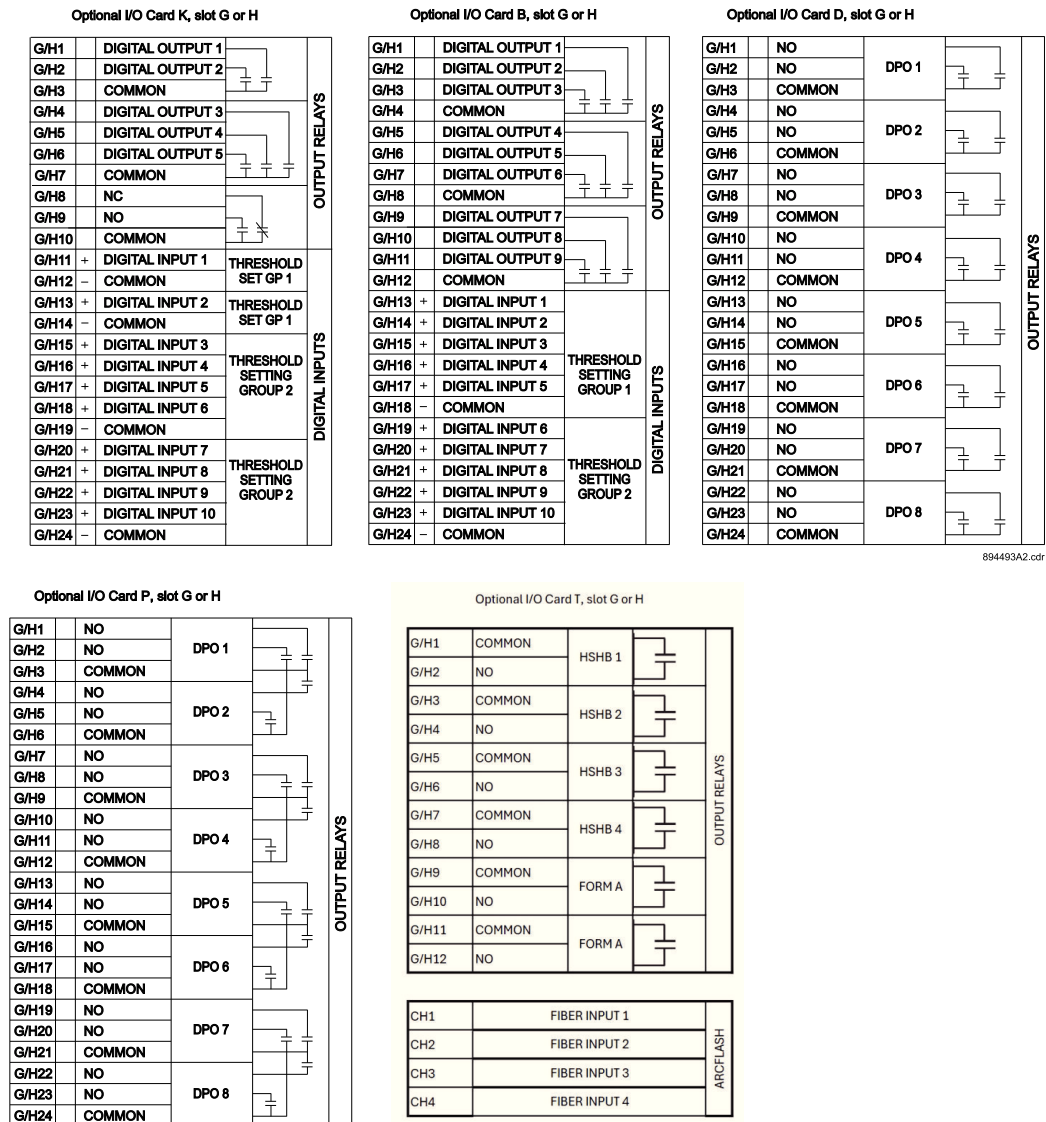


Figure 44: Optional I/O card terminal mappings

AC Analog

AC Inputs - 1 X 3-Phase 1/5A CT, 4 VT (Slot J)		AC Inputs - 1 X 3-Phase 1/5A CT, 4 VT (Slot K-P1/P5)		AC Inputs -2 X 3 - Phase 1/5A CT, 4 VT (Slot K - R1/R5)	
Terminal	Description	Terminal	Description	Terminal	Description
1	CT1 PhA	1	CT2 PhA	1	CT2 PhA
2	CT1 PhA RETURN	2	CT2 PhA RETURN	2	CT2 PhA RETURN
3	CT1 PhB	3	CT2 PhB	3	CT2 PhB
4	CT1 PhB RETURN	4	CT2 PhB RETURN	4	CT2 PhB RETURN
5	CT1 PhC	5	CT2 PhC	5	CT2 PhC
6	CT1 PhC RETURN	6	CT2 PhC RETURN	6	CT2 PhC RETURN
7	CT1 N/G	7	CT2_N/G/SG/CBCT	7	CT2 N/G
8	CT1 N/G RETURN	8	CT2 N/G/SG/CBCT RETURN	8	CT2 N/G RETURN
9	VT1A IN	9	VT2A IN	9	CT3 PhA
10	VT1A RETURN	10	VT2A RETURN	10	CT3 PhA RETURN
11	VT1B IN	11	VT2B IN	11	CT3 PhB
12	VT1B RETURN	12	VT2B RETURN	12	CT3 PhB RETURN
13	VT1C IN	13	VT2C IN	13	CT3 PhC
14	VT1C RETURN	14	VT2C RETURN	14	CT3 PhC RETURN
15	VT1N IN	15	VT2N IN	15	CT3_N/G
16	VT1N RETURN	16	VT2N RETURN	16	CT3 N/G RETURN


2.14 RMIO MODULE INSTALLATION

The optional remote module (RMIO) is designed to be mounted near the load to be monitored. This eliminates the need for multiple RTD cables to run back from the installation, which may be in a remote location, to the switchgear.

Although the RMIO is internally shielded to minimize noise pickup and interference, it should be mounted away from high current conductors or sources of strong magnetic fields.



Figure 45: RMIO unit showing 2 IO_G modules

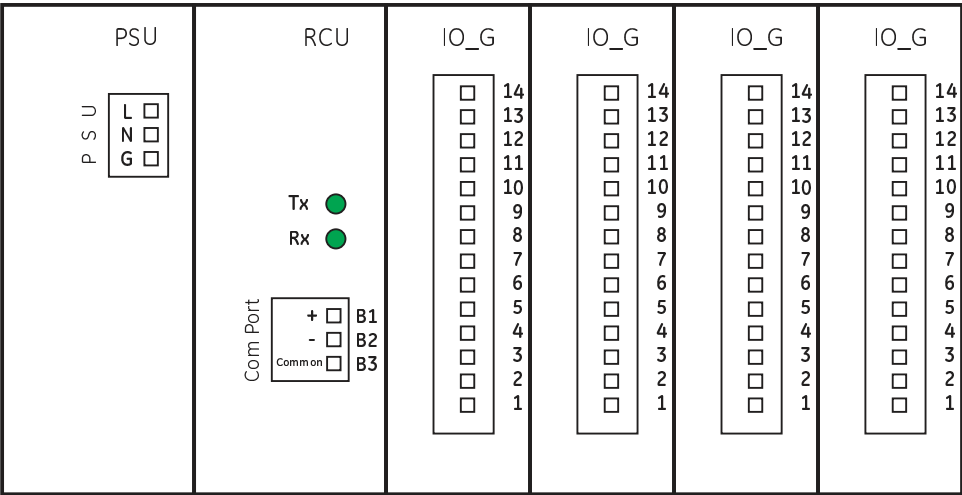

896750.cdr

Figure 46: RMIO terminal identification with 4 IO_G modules



2.15 PHASE SEQUENCE AND TRANSFORMER POLARITY

For correct operation of the relay features, follow the instrument transformer polarities, shown in the wiring diagrams. Note the solid square markings that are shown with all instrument transformer connections. When the connections adhere to the drawing, the arrow shows the direction of power flow for positive watts and the positive direction of lagging vars. The phase sequence is user programmable for either ABC or ACB rotation.

Depending on order code, the relay can have up to four (4) current inputs in each J slot and K slot. Three of them are used for connecting to the phase CT phases A, B, and C. The fourth input is a ground input that can be connected to either a ground CT placed on the neutral from a Wye connected transformer winding, or to a donut type CT measuring the zero sequence current from a grounded system. The relay CTs are placed in a packet mounted to the chassis of the relay. There are no internal ground connections on the current inputs. Current transformers with 1 to 12000 A primaries may be used.



Caution:

Verify that the relay's nominal input current of 1 A or 5 A matches the secondary rating of the connected CTs. Unmatched CTs may result in equipment damage or inadequate protection.

Caution:

IMPORTANT: The phase and ground current inputs correctly measure up to 46 times the current input's nominal rating. Time overcurrent curves become horizontal lines for currents above $20 \times \text{PKP}$.

Note:

The phase CTs should be chosen so the FLA is no less than 20% of the rated phase CT primary. Ideally, the phase CT primary should be chosen such that the FLA is 100% of the phase CT primary or slightly less, never more. This will ensure maximum accuracy for the current measurements.

The ground input (Terminals J7 and J8) is used in conjunction with a Zero Sequence CT as source, or in the neutral of wye-connected source CTs. The ground current input can be used to polarize both the neutral and sensitive ground directional elements. When using the residual connection, set the **GROUND CT PRIMARY** setpoint to a value equal to the **PHASE CT PRIMARY** setpoint. The sensitive ground current input is intended for use either with a CT in a source neutral of a high-impedance grounded system, or on ungrounded systems. On ungrounded systems it is connected residually with the phase current inputs. In this case, the **SENSTV GND CT PRIMARY** setpoint should be programmed to a value equal to the **PHASE CT PRIMARY** setpoint. The sensitive ground current input can be connected to a Zero Sequence CT for increased sensitivity and accuracy when physically possible in the system.


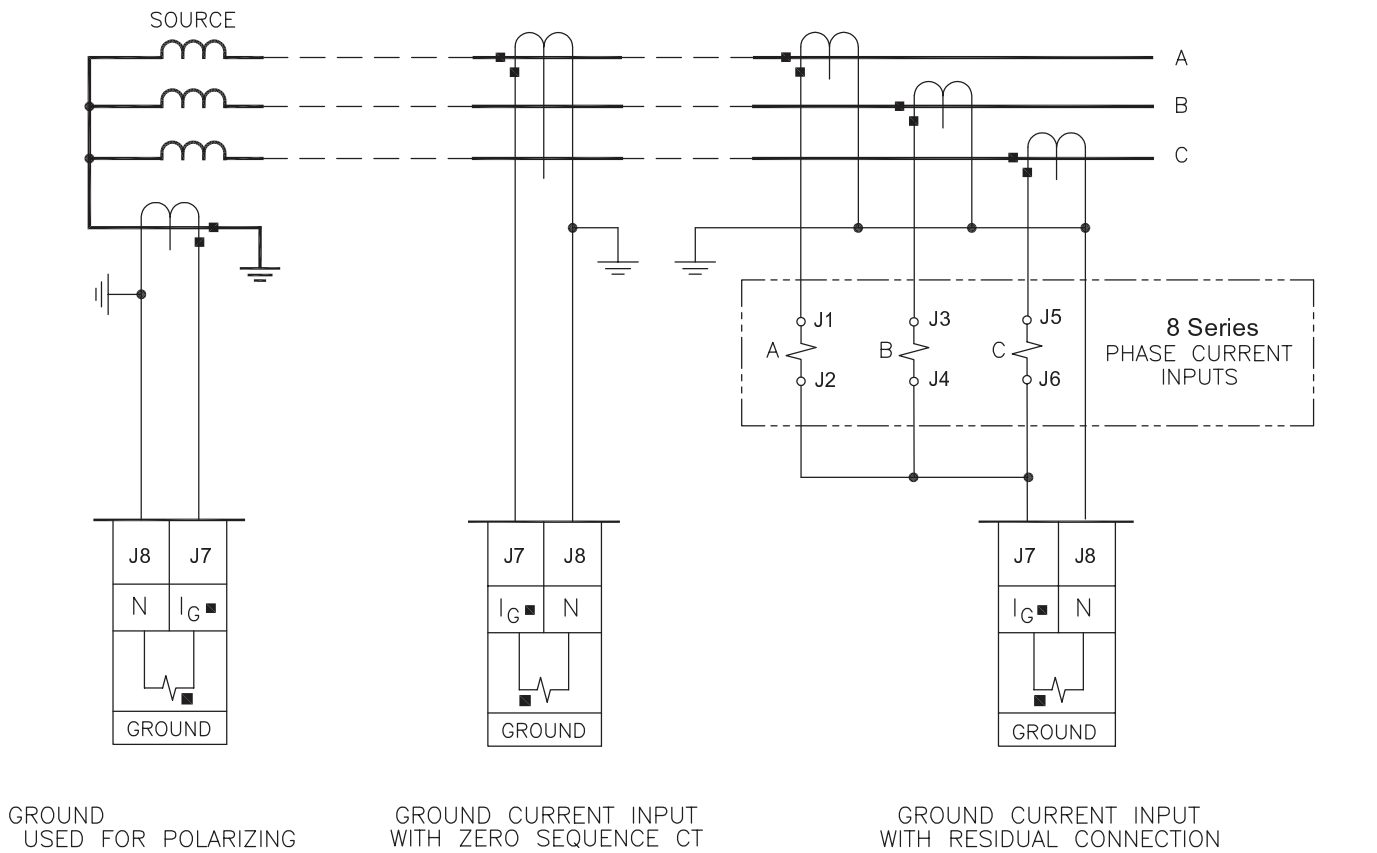


Figure 48: Ground inputs

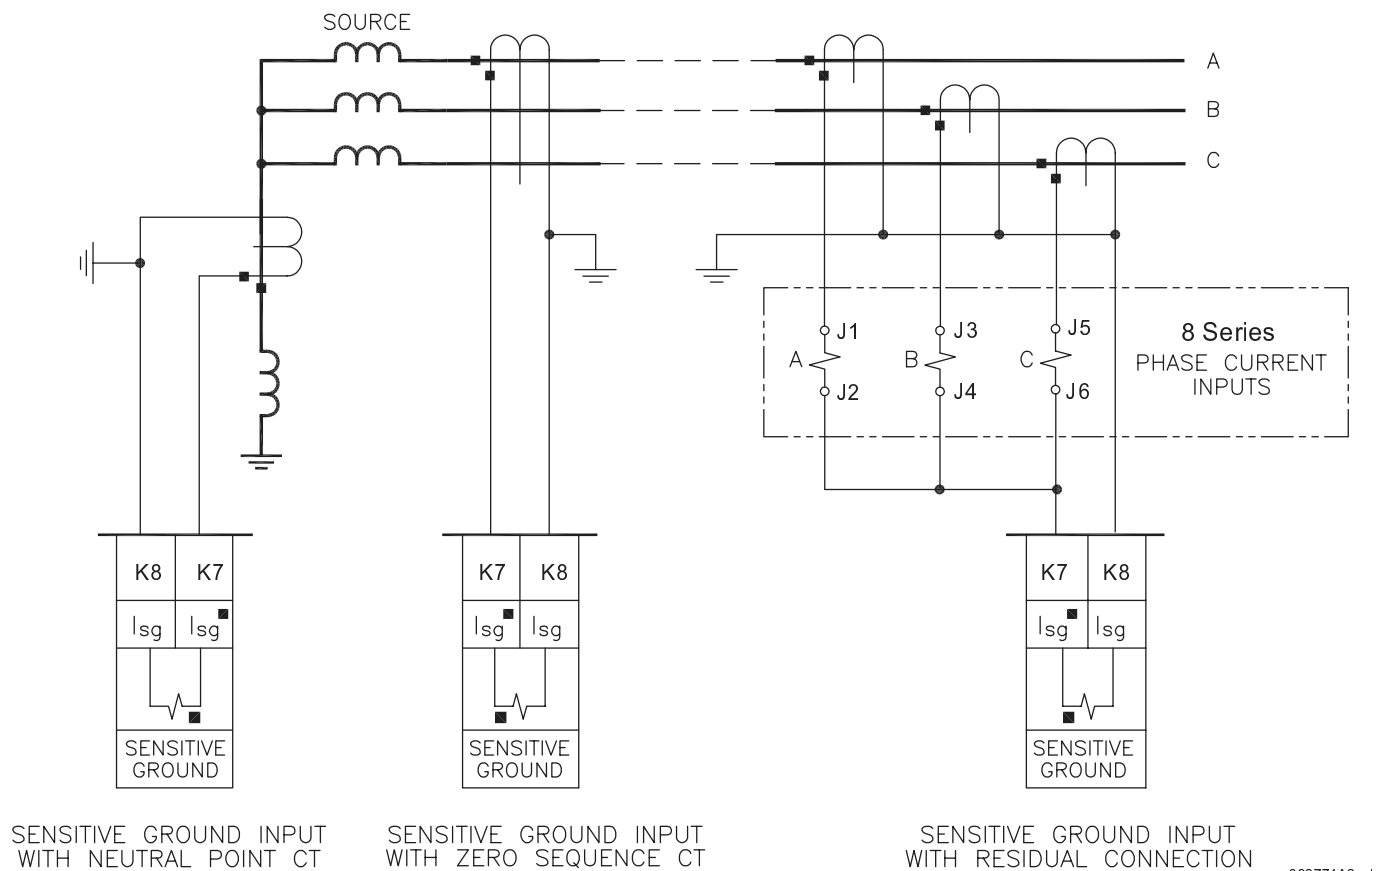

892774A2.cdr

Figure 49: Sensitive ground inputs

Alternatively, the 50:0.025 ground CT input has been designed for sensitive ground current detection on high resistance grounded systems where the GE Digital Energy 50:0.025 corebalance CT is to be used.

For example, in mining applications where earth leakage current must be measured for personnel safety, primary ground current as low as 0.5 A primary may be detected with the GE Digital Energy 50:0.025 CT. Only one ground CT input tap must be used on a given unit.

Note that when this CT input is selected for the Ground Fault function, fixed ratio of 50:0.025 A is used by the relay.

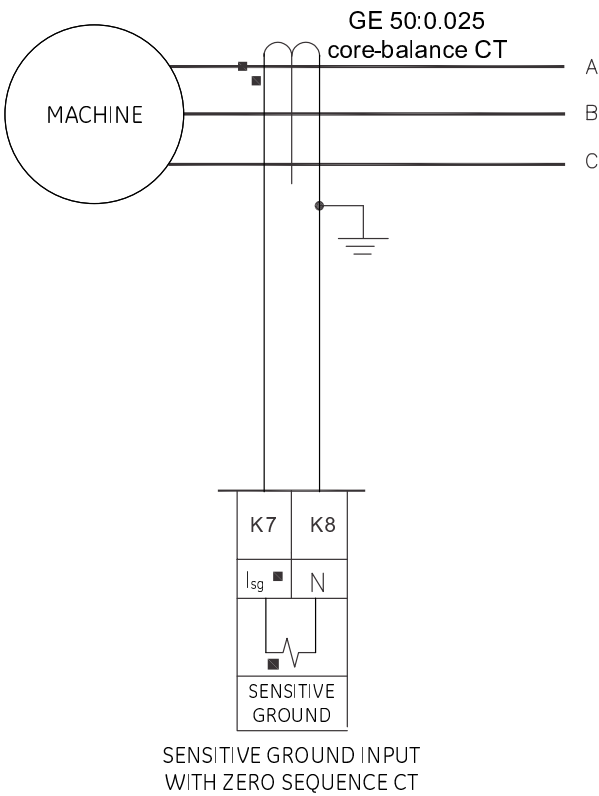


Figure 50: Sensitive Ground Current Input Connections

2.16 ZERO-SEQUENCE CT INSTALLATION

The figure below shows the various CT connections and the exact placement of a Zero Sequence current CT, so that ground fault current can be detected. Twisted pair cabling on the Zero Sequence CT is recommended.

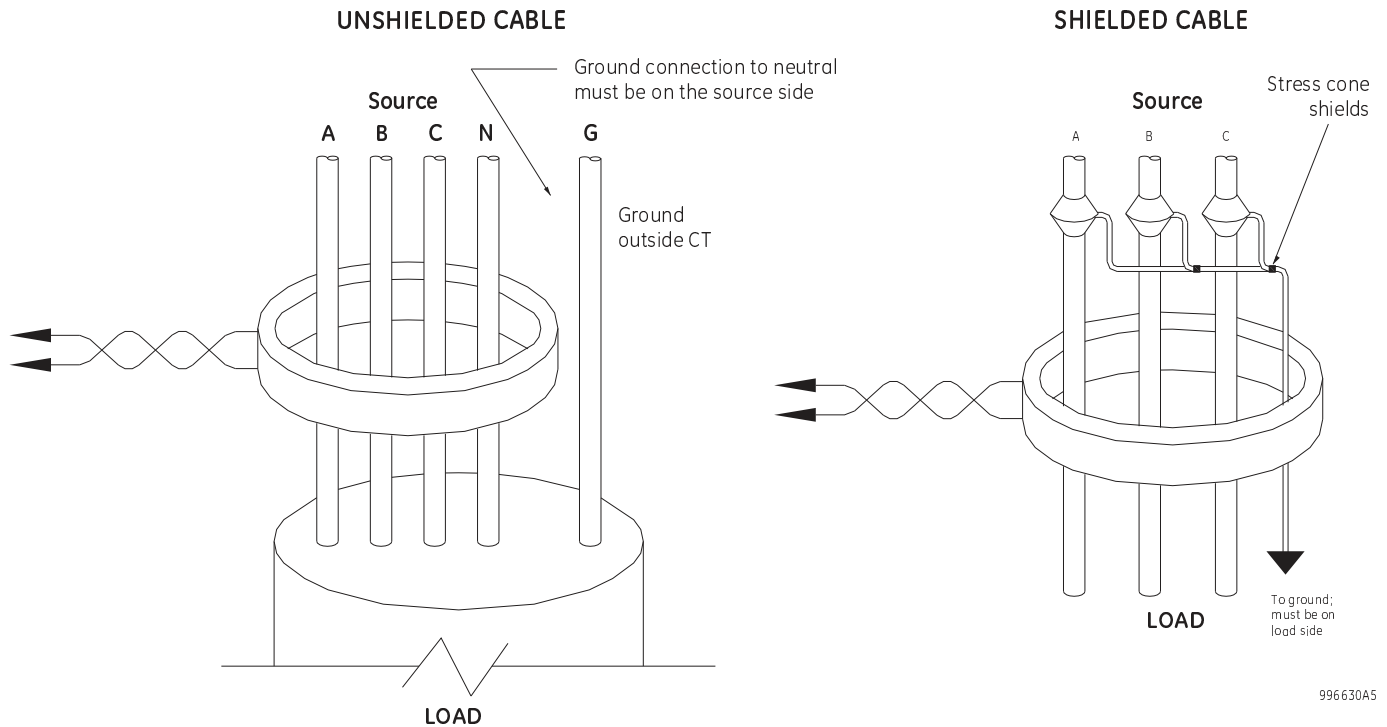


Figure 51: Zero Sequence (Core Balance) CT Installation

2.17 VOLTAGE INPUTS

The relays have four channels for AC voltage inputs, each with an isolating transformer. Voltage transformers up to a maximum 5000:1 ratio may be used. The nominal secondary voltage must be in the 10 to 240 V range.

The 869 supports wye and delta (or open delta) VT connections. The typical open delta VT wiring diagram is shown in the following figure: Open Delta VT Connections. The typical wye VT wiring diagram is shown in Typical Wiring Diagram.

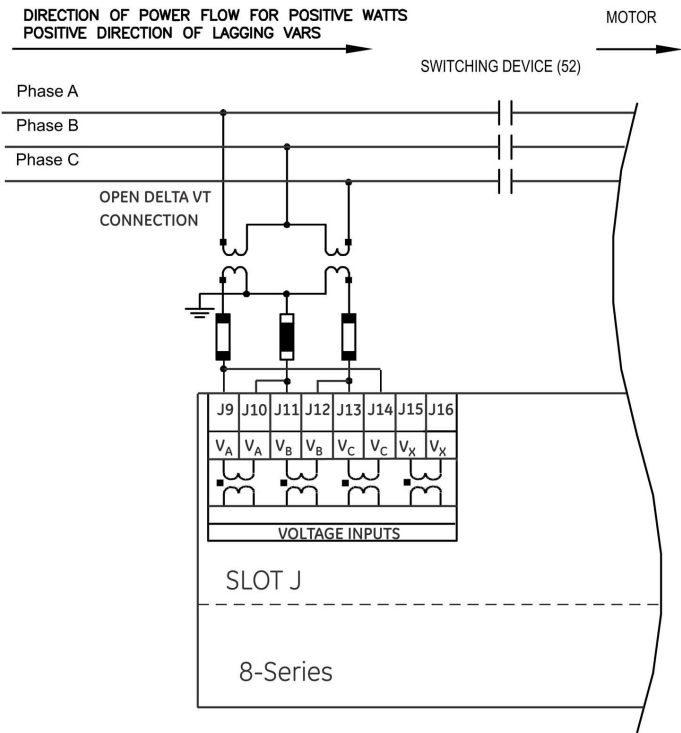


Figure 52: Open Delta VT Connections

2.18 RTD SENSOR CONNECTIONS

The relay monitors up to 12 or 13 RTD inputs (depending on model) for Stator, Bearing, Ambient, or other temperature monitoring. The type of each RTD is field programmable as 100 ohms Platinum, 100 ohms Nickel, 120 ohms Nickel, or 10 ohms Copper. RTDs must be three wire type. Every two RTDs shares a common return. The RTD circuitry compensates for lead resistance, provided that each of the three leads is the same length. Lead resistance should not exceed 25 ohms per lead for platinum/nickel RTDs or 3 ohms per lead for copper RTDs. Shielded cable should be used to prevent noise pickup in the industrial environment. RTD cables should be kept close to grounded metal casings and away from areas of high electromagnetic or radio interference. RTD leads should not be run adjacent to or in the same conduit as high current carrying wires.

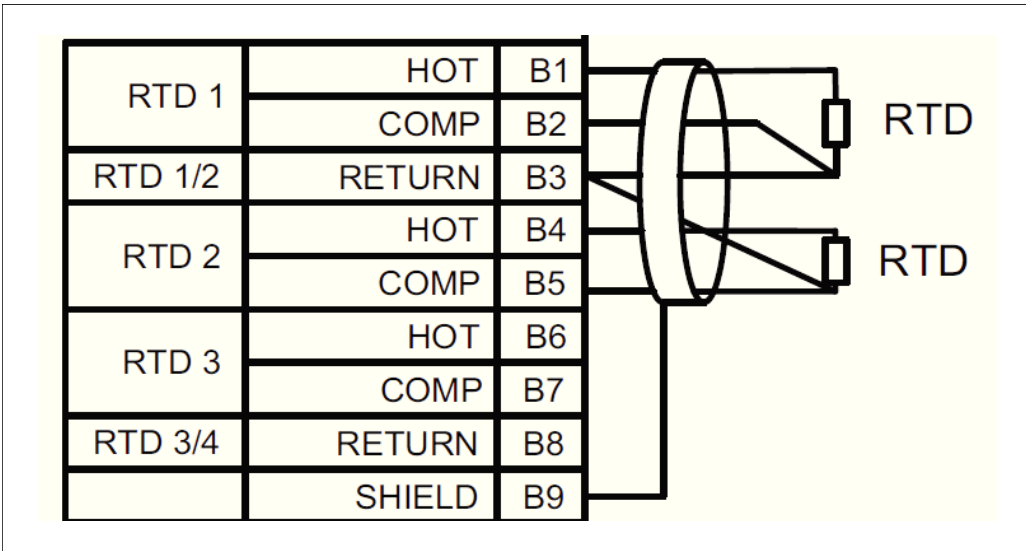


Figure 53: RTD Wiring

The relay requires three leads to be brought back from each RTD: Hot, Return and Compensation. In case when it is not possible to connect or bring all three RTD leads to the relay terminals, it is possible to reduce the number of leads required to 3 for the first RTD and 1 for each successive RTD. Refer to the figure below for wiring configuration for this application

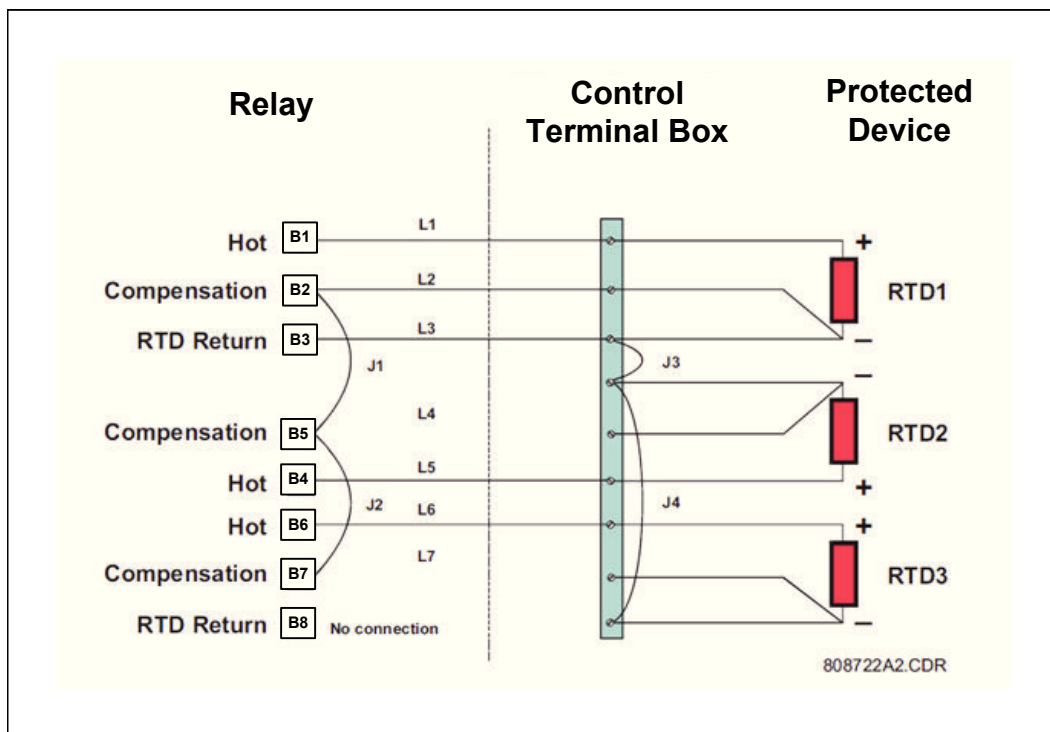


Figure 54: Reduced Wiring RTDs

The Hot line would have to be run as usual for each RTD. The Compensation and Return leads, however, need only be run for the first RTD. At the motor RTD terminal box, the RTD

Return leads must be connected together with jumpers that are as short as possible. The Compensation leads must be connected together with jumpers at the relay. Note that an error is produced on each RTD equal to the voltage drop across the jumper on the RTD return. This error increases with each successive RTD added.

$$VRTD1 = VRTD1$$

$$VRTD2 = VRTD2 + VJ3$$

$$VRTD3 = VRTD3 + VJ3 + VJ4, \text{ etc.}$$

This error is directly dependent on the length and gauge of the wire used for the jumpers and any error introduced by a poor connection. For RTD types other than 10 ohm Copper, the error introduced by the jumpers is negligible. Although this RTD wiring technique reduces the cost of wiring, the following disadvantages must be noted:

1. There will be an error in temperature readings due to lead and connection resistances. This technique is NOT recommended for 10 ohm Copper RTDs.
2. If the RTD Return lead or any of the jumpers break, all RTDs from the point of the break will read open.
3. If the Compensation lead or any of the jumpers break, all RTDs from the point of the break will function without any lead compensation.

Two-Wire RTD Lead Compensation

An example of how to add lead compensation to a two wire RTD may is shown in the figure below.

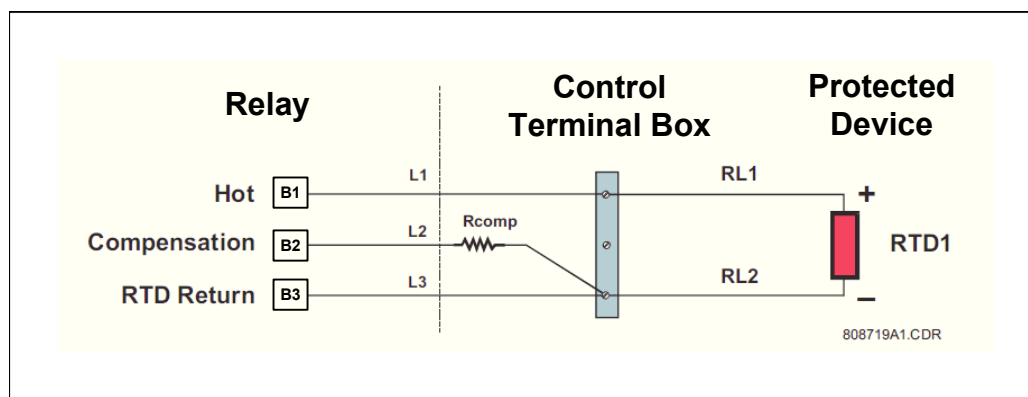


Figure 55: Two-Wire RTD Lead Compensation

The compensation lead L2 is added to compensate for Hot (L1) and Return (L3), assuming they are all of equal length and gauge. To compensate for leads RL1 and RL2, a resistor equal to the resistance of RL1 or RL2 could be added to the compensation lead, though in many cases this is unnecessary.

RTD Grounding

Grounding of one lead of the RTDs is done at either the 869 or at the motor. Grounding should not be done in both places as it could cause a circulating current. Only RTD Return leads may be grounded. When grounding at the relay only one Return lead need be grounded as they are hard-wired together internally. No error is introduced into the RTD reading by grounding in this manner.

If the RTD Return leads are tied together and grounded at the motor, only one RTD Return lead can be run back to the relay. Running more than one RTD Return lead to the relay causes significant errors as two or more parallel paths for the return current have been created. Use of this wiring scheme causes errors in readings equivalent to that in the Reduced RTD Lead Number application described earlier.

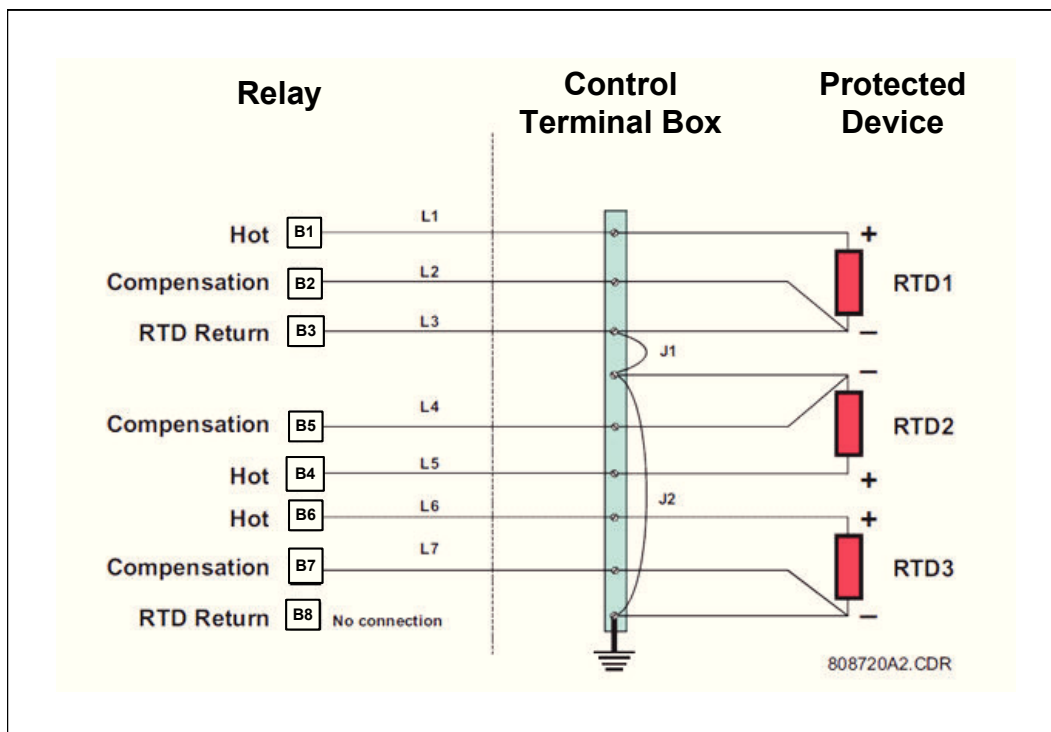


Figure 56: RTD Alternate Grounding

2.19 CONTROL POWER

Control power is supplied to the relay such that it matches the relay's installed power supply range.



Caution:

Control power supplied to the relay must match the installed power supply range. If the applied voltage does not match, damage to the unit may occur. All grounds **MUST** be connected for normal operation regardless of control power supply type.

For more details, please refer to the power supply section.



Caution:

The relay should be connected directly to the ground bus, using the shortest practical path. A tinned copper, braided, shielding and bonding cable should be used. As a minimum, 96 strands of number 34 AWG should be used. Belden catalog number 8660 is suitable.

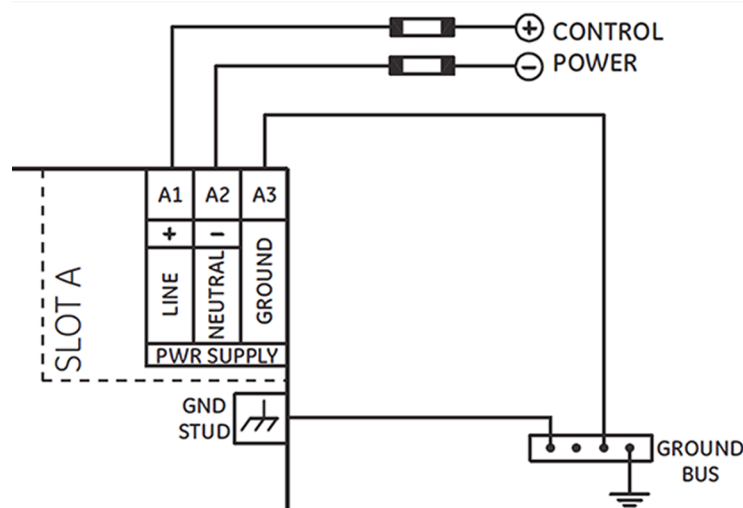


Figure 57: Control Power Connection

2.20 CONTACT INPUTS

Depending on the order code, the relay has a different number of contact inputs which can be used to operate a variety of logic functions for circuit switching device control, external trips, blocking of protection elements, etc. The relay has contact inputs and virtual inputs that are combined in a form of programmable logic to facilitate the implementation of various schemes.

The voltage threshold at which the contact inputs detect a closed contact input is programmable as 17 V DC for 24 V sources, 33 V DC for 48 V sources, 84 V DC for 110 to 125 V sources, and 166 V DC for 250 V sources.

Wet or Dry input signal types can be connected to contact input terminals as shown in the figure: Wet and Dry Contact Input Wiring Examples.

Dry inputs use an internal +24V supply. The voltage threshold must be set to 17V for the inputs to be recognized using the internal +24V.

Note:

The same type of input signal must be connected to all contact inputs on the same contact input card.

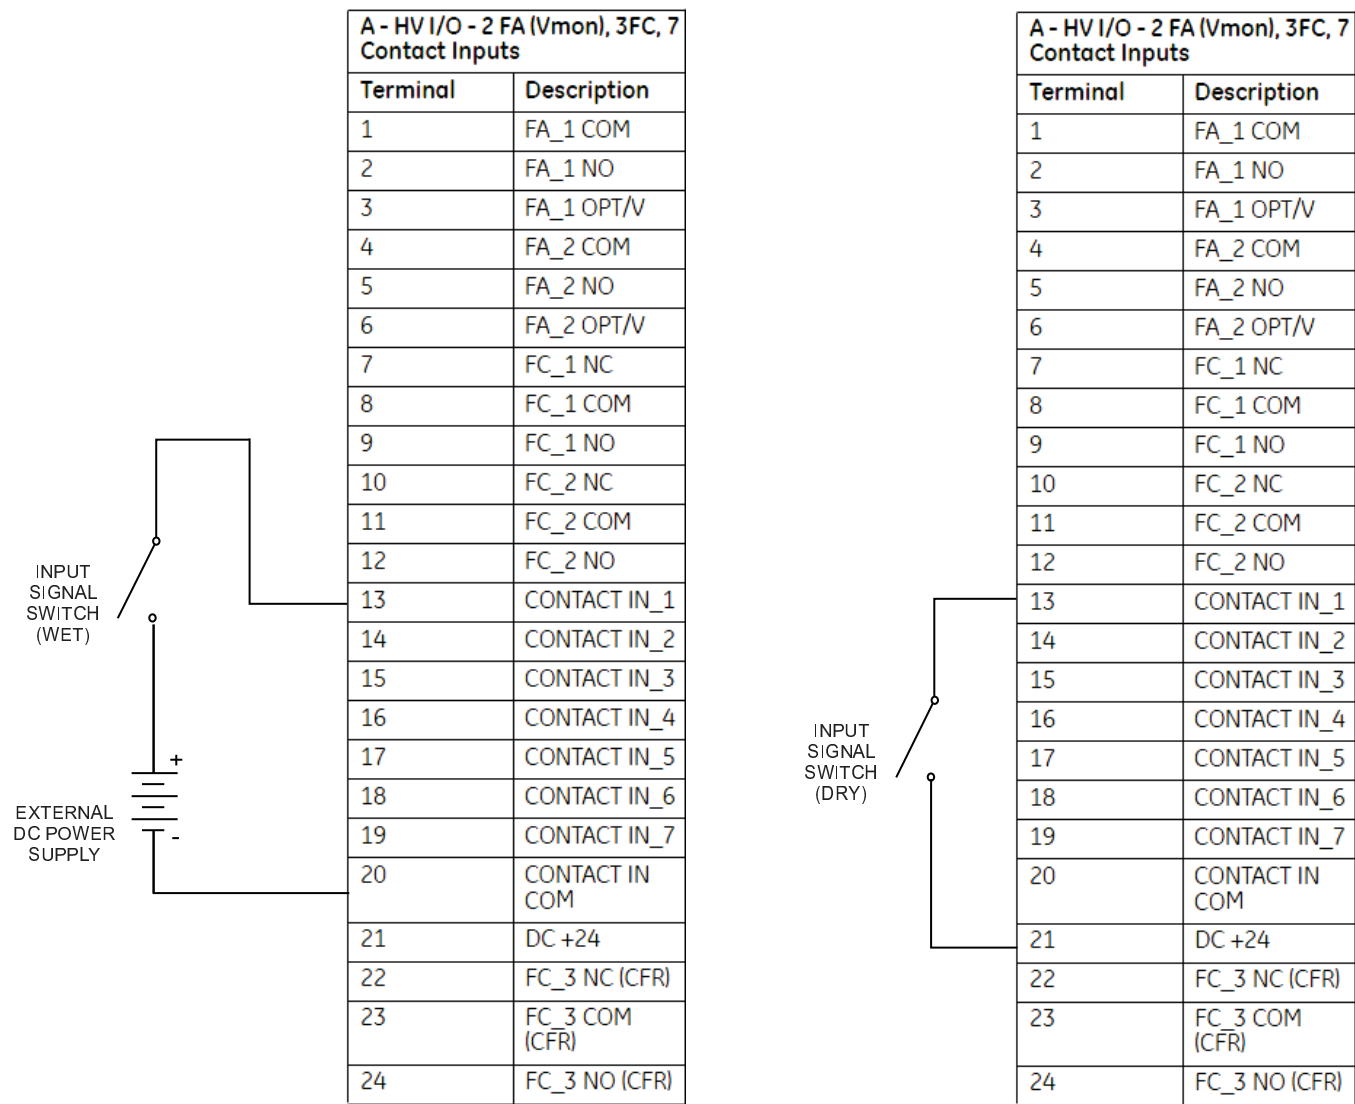


Figure 58: Wet and Dry Contact Input Wiring Examples

2.21 OUTPUT RELAYS

The locations of the output relays have a fixed assignment for the platform called the master identifier. I/O options that include inputs occupy the fixed assigned output locations so in these cases the relay assignment maps to the master identifier.

The critical failure output relay is reserved as Relay_8 and it is omitted and is not programmable.

Slots F, G, H Terminal Master Identifier				Slots F,G,H with I/O options A, A, A			
Terminal#	SLOT F	SLOT G	SLOT H	Terminal#	SLOT F	SLOT G	SLOT H
1	RELAY_1	RELAY_9	RELAY_17	1	RELAY_1	RELAY_9	RELAY_17
2	RELAY_1	RELAY_9	RELAY_17	2	RELAY_1	RELAY_9	RELAY_17
3	RELAY_1	RELAY_9	RELAY_17	3	RELAY_1	RELAY_9	RELAY_17
4	RELAY_2	RELAY_10	RELAY_18	4	RELAY_2	RELAY_10	RELAY_18
5	RELAY_2	RELAY_10	RELAY_18	5	RELAY_2	RELAY_10	RELAY_18
6	RELAY_2	RELAY_10	RELAY_18	6	RELAY_2	RELAY_10	RELAY_18
7	RELAY_3	RELAY_11	RELAY_19	7	RELAY_3	RELAY_11	RELAY_19
8	RELAY_3	RELAY_11	RELAY_19	8	RELAY_3	RELAY_11	RELAY_19
9	RELAY_3	RELAY_11	RELAY_19	9	RELAY_3	RELAY_11	RELAY_19
10	RELAY_4	RELAY_12	RELAY_20	10	RELAY_4	RELAY_12	RELAY_20
11	RELAY_4	RELAY_12	RELAY_20	11	RELAY_4	RELAY_12	RELAY_20
12	RELAY_4	RELAY_12	RELAY_20	12	RELAY_4	RELAY_12	RELAY_20
13	RELAY_5	RELAY_13	RELAY_21	13	Digital In_1	Digital In_8	Digital In_15
14	RELAY_5	RELAY_13	RELAY_21	14	Digital In_2	Digital In_9	Digital In_16
15	RELAY_5	RELAY_13	RELAY_21	15	Digital In_3	Digital In_10	Digital In_17
16	RELAY_6	RELAY_14	RELAY_22	16	Digital In_4	Digital In_11	Digital In_18
17	RELAY_6	RELAY_14	RELAY_22	17	Digital In_5	Digital In_12	Digital In_19
18	RELAY_6	RELAY_14	RELAY_22	18	Digital In_6	Digital In_13	Digital In_20
19	RELAY_7	RELAY_15	RELAY_23	19	Digital In_7	Digital In_14	Digital In_21
20	RELAY_7	RELAY_15	RELAY_23	20	Common	Common	Common
21	RELAY_7	RELAY_15	RELAY_23	21	+24V	+24V	+24V
22	RELAY_8	RELAY_16	RELAY_24	22	RELAY_8	RELAY_16	RELAY_24
23	RELAY_8	RELAY_16	RELAY_24	23	RELAY_8	RELAY_16	RELAY_24
24	RELAY_8	RELAY_16	RELAY_24	24	RELAY_8	RELAY_16	RELAY_24

Slots F, G, H with I/O options M, L, F				Slots F,G,H with I/O options A, L, A			
Terminal #	SLOT F	SLOT G	SLOT H	Terminal #	SLOT F	SLOT G	SLOT H
1	RELAY_1	Analog Out_1	Digital In_8	1	RELAY_1	Analog Out_1	RELAY_9

Slots F, G, H with I/O options M, L, F					Slots F,G,H with I/O options A, L, A			
Terminal #	SLOT F	SLOT G	SLOT H		Terminal #	SLOT F	SLOT G	SLOT H
2	RELAY_1	Analog Out_2	Digital In_9		2	RELAY_1	Analog Out_2	RELAY_9
3	Reserved	Analog Out_3	Digital In_10		3	RELAY_1	Analog Out_3	RELAY_9
4	RELAY_2	Analog Out_4	Digital In_11		4	RELAY_2	Analog Out_4	RELAY_10
5	RELAY_2	Analog Out_5	Digital In_12		5	RELAY_2	Analog Out_5	RELAY_10
6	Reserved	Analog Out_6	Digital In_13		6	RELAY_2	Analog Out_6	RELAY_10
7	RELAY_3	Analog Out_7	Digital In_14		7	RELAY_3	Analog Out_7	RELAY_11
8	RELAY_3	Return	Digital In_15		8	RELAY_3	Return	RELAY_11
9	Reserved	Shield	Digital In_16		9	RELAY_3	Shield	RELAY_11
10	RELAY_4	Analog In_1	Digital In_17		10	RELAY_4	Analog In_1	RELAY_12
11	RELAY_4	Analog In_2	Common		11	RELAY_4	Analog In_2	RELAY_12
12	Reserved	Analog In_3	+24V		12	RELAY_4	Analog In_3	RELAY_12
13	Digital In_1	Analog In_4	ARC FLASH Sensor 1 Sensor 2 Sensor 3 Sensor 4		13	Digital In_1	Analog In_4	Digital In_8
14	Digital In_2	Return			14	Digital In_2	Return	Digital In_9
15	Digital In_3	Shield			15	Digital In_3	Shield	Digital In_10
16	Digital In_4	Reserved			16	Digital In_4	Reserved	Digital In_11
17	Digital In_5	Reserved			17	Digital In_5	Reserved	Digital In_12
18	Digital In_6	Reserved			18	Digital In_6	Reserved	Digital In_13
19	Digital In_7	RTD_Hot			19	Digital In_7	RTD_Hot	Digital In_14
20	Common	RTD_Comp			20	Common	RTD_Comp	Common
21	+24V	RTD_Return			21	+24V	RTD_Return	+24V
22	RELAY_8	Shield			22	RELAY_8	Shield	RELAY_16
23	RELAY_8	Reserved			23	RELAY_8	Reserved	RELAY_16
24	RELAY_8	Reserved			24	RELAY_8	Reserved	RELAY_16

Slots F,G,H with I/O options A, A, F					Slots F, G, H with I/O options A, N, F		
Terminal #	SLOT F	SLOT G	SLOT H		Terminal #	SLOT F	SLOT H
1	RELAY_1	RELAY_9	Digital In_15		1	RELAY_1	Digital In_8
2	RELAY_1	RELAY_9	Digital In_16		2	RELAY_1	Digital In_9
3	RELAY_1	RELAY_9	Digital In_17		3	RELAY_1	Digital In_10
4	RELAY_2	RELAY_10	Digital In_18		4	RELAY_2	Digital In_11
5	RELAY_2	RELAY_10	Digital In_19		5	RELAY_2	Digital In_12
6	RELAY_2	RELAY_10	Digital In_20		6	RELAY_2	Digital In_13
7	RELAY_3	RELAY_11	Digital In_21		7	RELAY_3	Digital In_14

Slots F,G,H with I/O options A, A, F					Slots F, G, H with I/O options A, N, F		
Terminal #	SLOT F	SLOT G	SLOT H		Terminal #	SLOT F	SLOT H
8	RELAY_3	RELAY_11	Digital In_22		8	RELAY_3	Digital In_15
9	RELAY_3	RELAY_11	Digital In_23		9	RELAY_3	Digital In_16
10	RELAY_4	RELAY_12	Digital In_24		10	RELAY_4	Digital In_17
11	RELAY_4	RELAY_12	Common		11	RELAY_4	Common
12	RELAY_4	RELAY_12	+24V		12	RELAY_4	+24V
13	Digital In_1	Digital In_8	ARC FLASH Sensor 1 Sensor 2 Sensor 3 Sensor 4		13	Digital In_1	ARC FLASH Sensor 1 Sensor 2 Sensor 3 Sensor 4
14	Digital In_2	Digital In_9			14	Digital In_2	
15	Digital In_3	Digital In_10			15	Digital In_3	
16	Digital In_4	Digital In_11			16	Digital In_4	
17	Digital In_5	Digital In_12			17	Digital In_5	
18	Digital In_6	Digital In_13			18	Digital In_6	
19	Digital In_7	Digital In_14			19	Digital In_7	
20	Common	Common			20	Common	
21	+24V	+24V			21	+24V	
22	RELAY_8	RELAY_16			22	RELAY_8	
23	RELAY_8	RELAY_16			23	RELAY_8	
24	RELAY_8	RELAY_16			24	RELAY_8	

2.22 SERIAL COMMUNICATIONS

One two-wire RS485 port is provided. Up to thirty-two relays can be daisy-chained together on a communication channel without exceeding the driver capability. For larger systems, additional serial channels must be added. Commercially available repeaters can also be used to add more than 32 relays on a single channel. Suitable cable should have a characteristic impedance of 120 ohms and total wire length should not exceed 1,200 meters (4,000 ft).

Voltage differences between remote ends of the communication link are not uncommon. For this reason, surge protection devices are internally installed across all RS485 terminals. Internally, an isolated power supply with an opto-coupled data interface is used to prevent noise coupling.

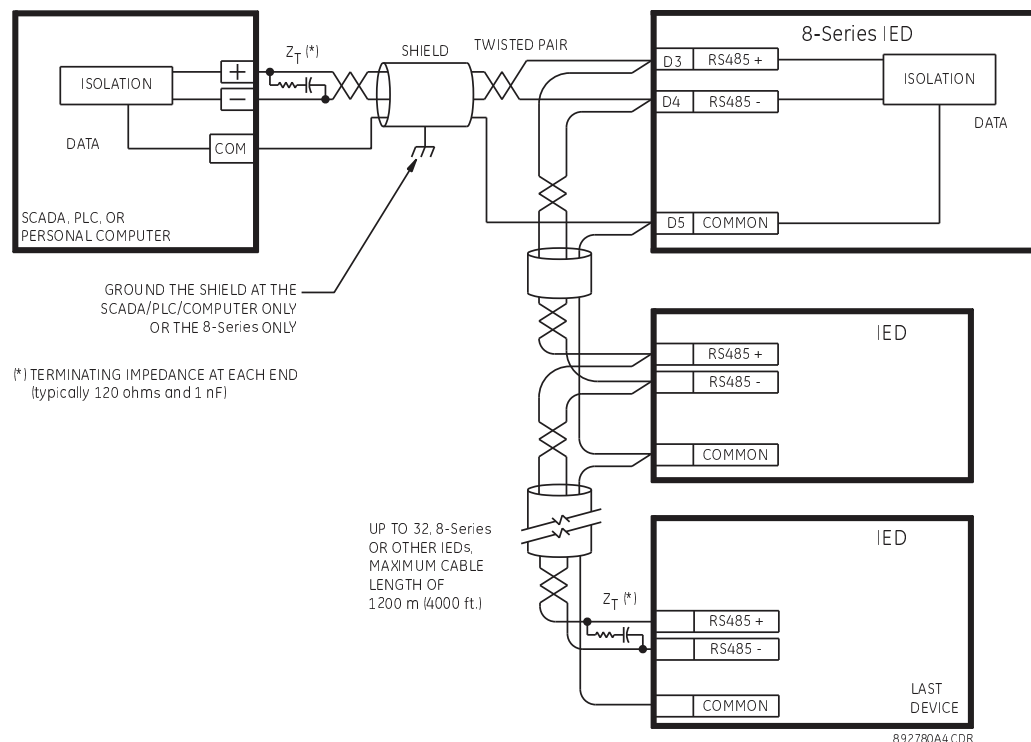


Figure 59: RS485 wiring diagram



Caution:

To ensure that all devices in a daisy-chain are at the same potential, it is imperative that the common terminals of each RS485 port are tied together and grounded at the master end. Failure to do so may result in intermittent or failed communications.

The source computer/PLC/SCADA system should have similar transient protection devices installed, either internally or externally. Ground the shield at one point only, as shown in the figure above, to avoid ground loops. Correct polarity is also essential. The relays must be wired with all the positive (+) terminals connected together and all the negative (–) terminals connected together. Each relay must be daisy-chained to the next one. Avoid star or stub connected configurations. The last device at each end of the daisy-chain should be terminated with a 120 ohm ¼ watt resistor in series with a 1 nF capacitor across the positive and negative terminals. Some systems allow the shield (drain wire) to be used as a common wire and to connect directly to the COM terminal; others function correctly only if the common wire is connected to the COM terminal, but insulated from the shield. Observing these guidelines ensure a reliable communication system immune to system transients.

2.23 IRIG-B

IRIG-B is a standard time code format that allows time stamping of events to be synchronized among connected devices within 1 millisecond. The IRIG-B time code formats are serial, width-modulated codes which can be either DC level shift or amplitude modulated (AM) form. The type of form is auto-detected by the relay. Third party equipment is available for generating the IRIG-B signal; this equipment may use a GPS satellite system to obtain the time reference so that devices at different geographic locations can also be synchronized.

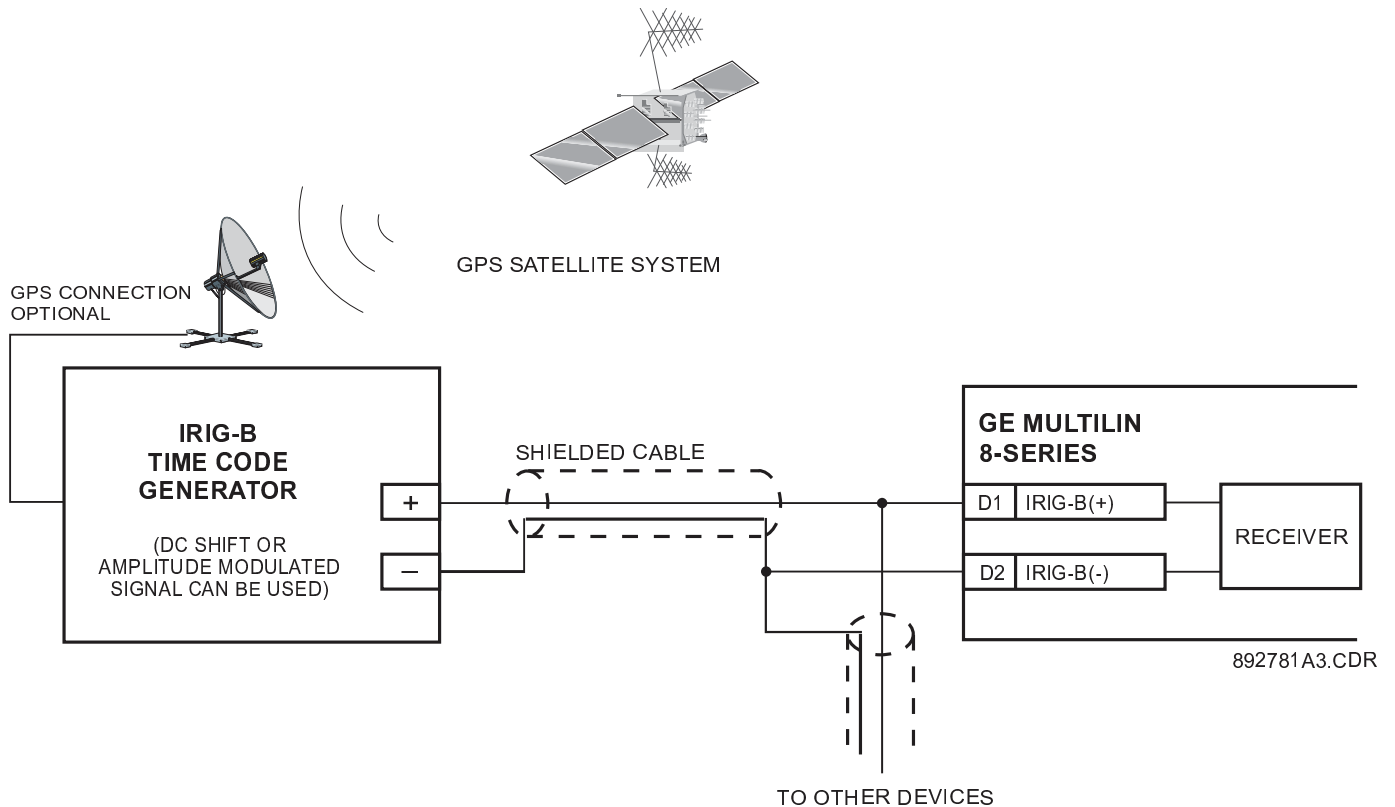


Figure 60: IRIG-B connection

2.24 TYPICAL WIRING DIAGRAMS

The following illustrates the electrical wiring of the Draw out unit.

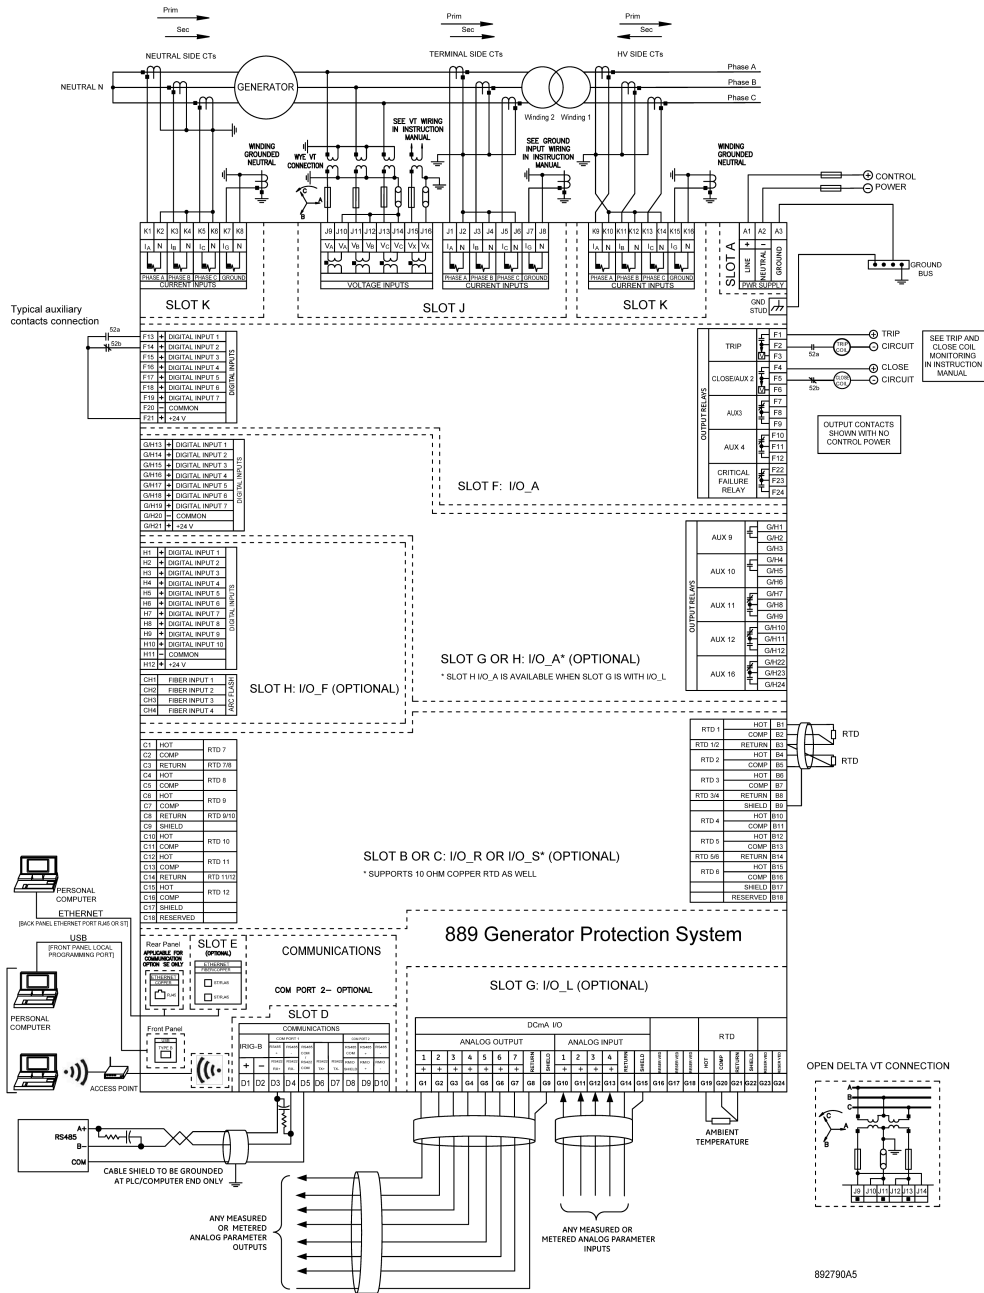


Figure 61: Overall Differential Typical Wiring (892790A5)

CHAPTER 3

INTERFACES

3.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	82
First access	83
Front panel options	84
Software Interface	102

3.2 FIRST ACCESS

There are two methods of interfacing with the relay.

- Using the relay keypad and display.
- Using the EnerVista D&I Setup software.

This section provides an overview of the interfacing methods using both of these methods.

When first accessing the relay, log in as Administrator either through the front panel or through EnerVista D&I Setup connected serially (so that no IP address is required). Use the default password (the default password is **0**).

Basic Security

If the relay is in the commissioning phase and you want to bypass authentication, switch the **SETPPOINT ACCESS** setting on or assign it to a contact input. Once the setting is on, you have complete administrator access from the front panel. If a contact input is chosen, the access is also conditional on the activation of the respective contact input.

CyberSentry

If logging in through EnerVista D&I Setup, choose Device authentication and login as Administrator.

Note:

If the relay is in the commissioning phase, to bypass authentication use the setpoint access feature to gain administrative access to the front panel in the same way as with basic security.

3.3 FRONT PANEL OPTIONS

Relays from hardware version C (firmware version 4 onwards) can be delivered with following different front panels:

- The 10-pushbutton membrane faceplate
- The 3-pushbutton membrane faceplate

The front panels provide menu navigation through a selection of navigation pushbuttons and a high quality graphical display. The 3-button faceplate includes 3 programmable function pushbuttons and 17 programmable LEDs.

The 10-Pushbutton Membrane faceplate includes 10 programmable function pushbuttons for a total of 22 programmable LEDs.

The front panel provides menu navigation through a selection of navigation pushbuttons and a high quality graphical display. A USB type B port allows connection to a PC with EnerVista D&I Setup software.

The following figures show the different options.

Note:

These figures are representative only. They may not reflect the exact model that this manual describes.



Figure 62: 3-pushbutton membrane front panel



Figure 63: 10-pushbutton membrane front panel

3.3.1 GRAPHICAL DISPLAY PAGES

The front panel liquid crystal display (LCD) allows visibility under various lighting conditions. When the keypad and display are not being used and there are no active Targets, the Home screen with system information is displayed after a user-defined period of inactivity. Pressing the **Escape** key during the display of the default message, returns the display to the previous display screen. Any Trip, Alarm, or Pickup operation causing a new active Target is displayed immediately, automatically overriding the Home screen.

3.3.1.1 MENU HIERARCHY

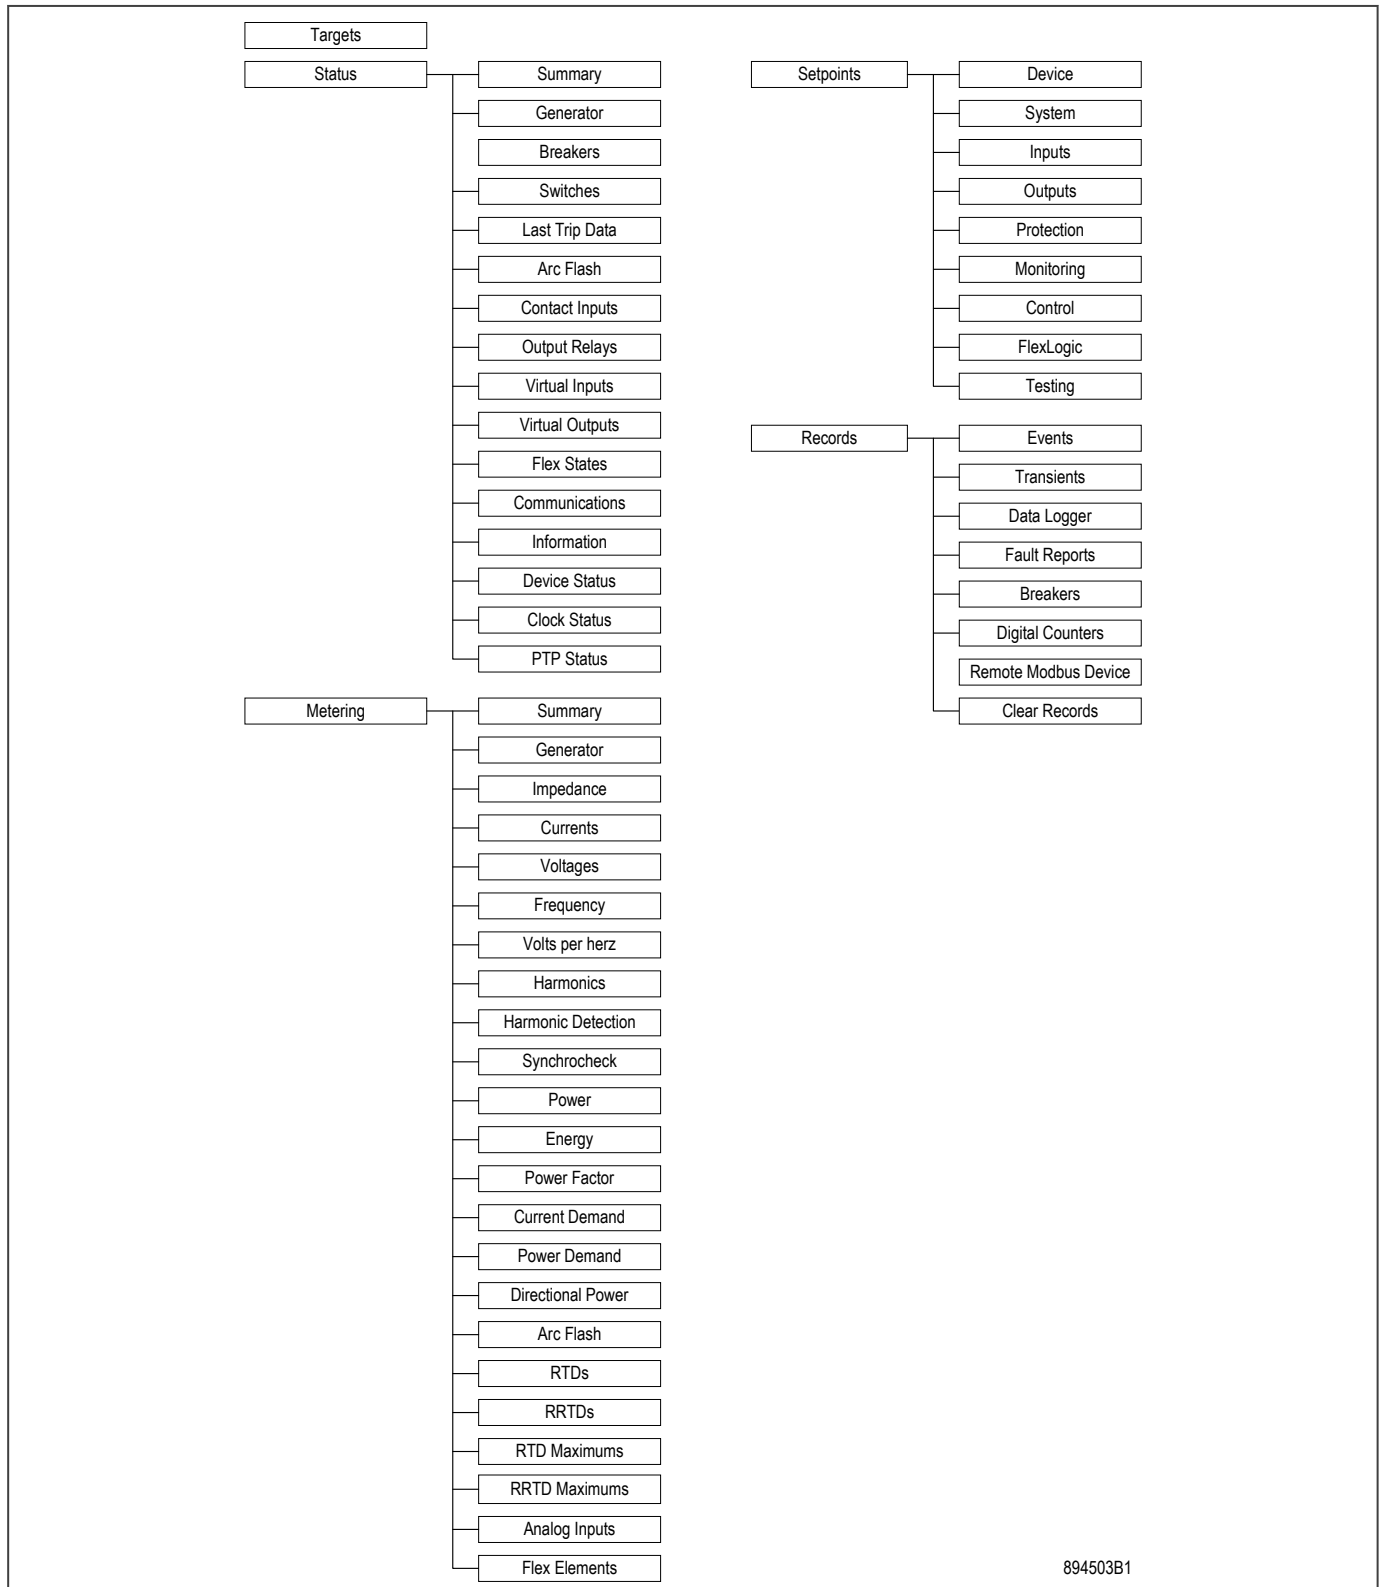


Figure 64: Menu hierarchy

3.3.1.2 WORKING WITH GRAPHICAL DISPLAY PAGES

The display contains five main menu items labeled Targets, Status, Metering, Setpoints, and Records located at the bottom of the screen. Choosing each main menu item displays the corresponding sub-menu.

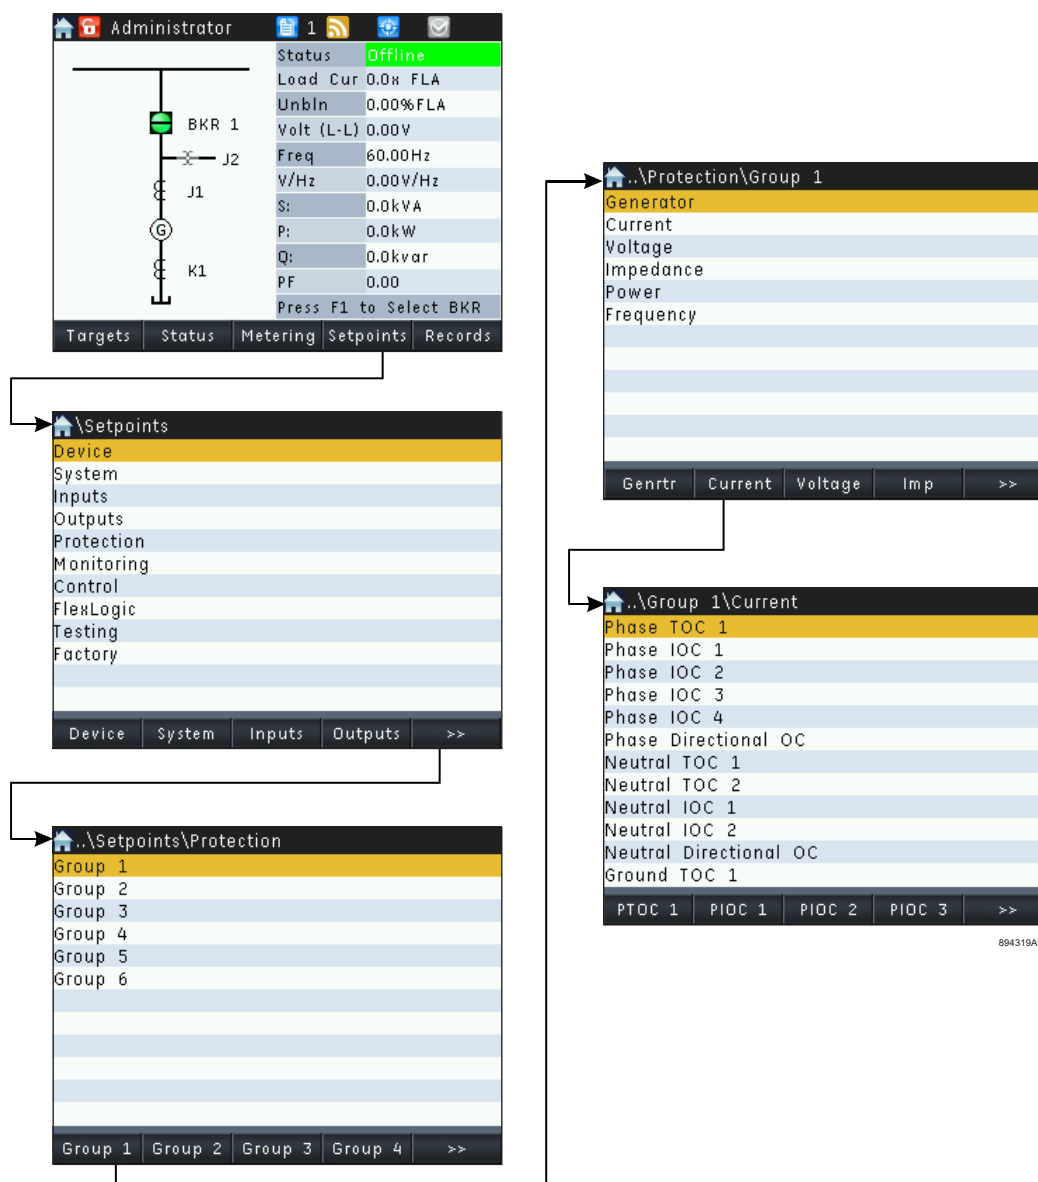


Figure 65: Typical paging

There are two ways of navigating through the menu:

- using the pushbuttons corresponding to the soft tabs from the screen
- by selecting the item from the list of items on the screen using the **Up** and **Down** pushbuttons to move the yellow highlighted line, and pressing the **Enter** pushbutton.


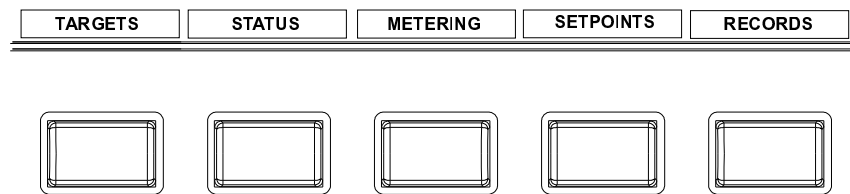


Figure 66: Tab Pushbuttons

The tab pushbuttons are used to enter the menu corresponding to the label on the tabs. If more than 5 tabs exist, the first and the last tab are labeled with arrows to allow you to scroll to the other tabs.

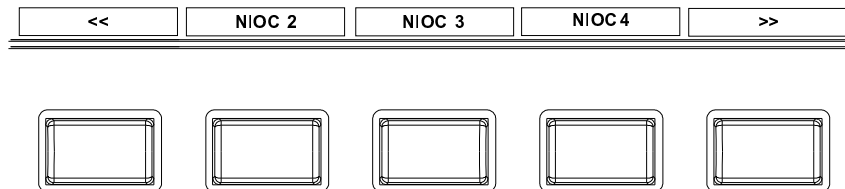

Membrane Faceplate



Figure 67: Keypad Pushbuttons

Each Keypad pushbutton serves the following function:

- The **Home** pushbutton is used to display the home screen, and all screens defined under the Front Panel/ Screens menu as default screens.
- The **Help** pushbutton is used to provide the Modbus address corresponding to the present location when in the Actual Values menu.
- The **Enter** pushbutton has a dual function. It is used to display a sub-menu when an item is highlighted. It is also used to save the desired value for any selected setpoint.

- The **Up**, and **Down** pushbuttons are used to select/highlight an item from a menu, as well as select a value from the list of values for a chosen item.
- The **Up**, **Down**, **Left** and **Right** pushbuttons on the membrane faceplate are used to move the yellow highlight. These pushbuttons are also used on special screens to navigate to multiple objects.
- The **Escape** pushbutton is used to display the previous menu. This pushbutton can also be used to cancel a setpoint change.
- The **Reset** pushbutton clears all latched LED indications, target messages, and latched output relays, providing the conditions causing these events are not present.

To change (or view) an item on (or from) the menus:

- Use the pushbuttons that correspond to the tabs (Targets, Status, Metering, Setpoints, Records) on the screen to select a menu.
- Use the **Up** and **Down** pushbuttons to highlight an item.
- Press **Enter** to view a list of values for the chosen item. (Some items are view-only.)
- Use the **Up** and **Down** pushbuttons to highlight a value.
- Press **Enter** to assign the highlighted value to the item.

3.3.1.3 SINGLE LINE DIAGRAM

BKR1 LED setting for Breaker symbol color configuration

In all devices the Breaker symbol color is configurable as per the color scheme setting in **Setpoints > Device > Front Panel > Display Properties > Color Scheme**.

Single Line Diagram for 889 and Breaker/Generator status color

The relay has a single line diagram (SLD) that represents the power system. The single line diagram provided is pre-configured to show:

- Breaker status
- Generator status
- AC input connection
- Summary of measured online parameters

Accompanying the single line diagram are typical metered values associated with the power system.

The single line diagram is configured as the default menu but this can be changed under **Setpoints > Device > Front Panel > Default Screen (3-P1/P5)**.

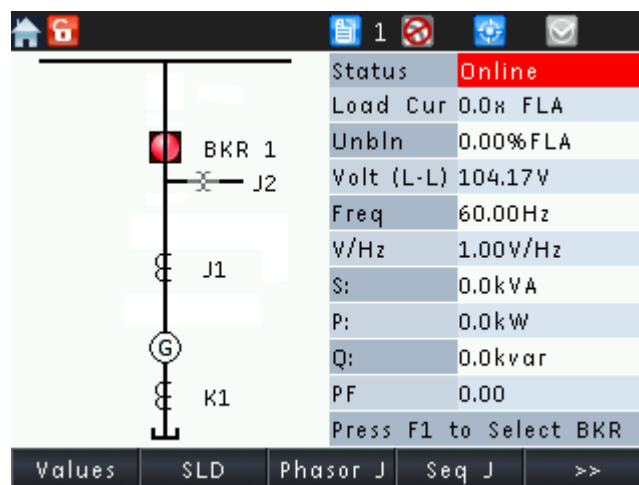


Figure 68: Single Line Diagram example, see order code (3-P1/P5) for slot K

Setpoints > Device > Front Panel > Default Screen (3-R1/R5)

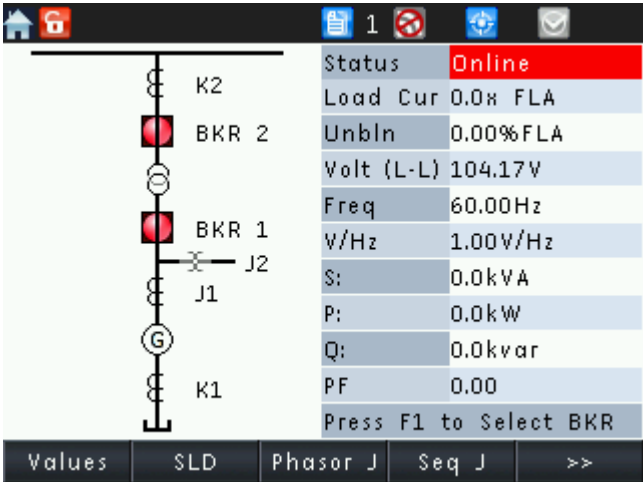


Figure 69: Single Line Diagram example, see order code (3-R1/R5) for slot K

The breaker status icon changes state according to the breaker status input and the color of the icon changes in accordance with the color scheme setting (**Setpoints > Device > Front Panel > Display Properties > Color Scheme**). The breaker and generator status color is based on the following logic.

Color Scheme	SLD Breaker Symbol Color				Generator Status			
	Open Color	Close Color	Not Configured	Unknown	Offline	Online	Tripped	Unknown
Red (Open)					Red	Green	Orange	White
Green (Open)					Green	Red	Orange	White

Note:
The Unknown status has a white background with black text.

When breaker detection Connected/Disconnected (Racked-In/Racked-Out) is configured, the symbols change with respect to the Connected/Disconnected state of the breaker. The following table further illustrates this with an example of the switching device Close state when the color scheme is set to *Green (Open)*.

Connected/Disconnected Detection	Breaker State	Symbol
Not Configured*	Connected*	
Configured	Connected	
Configured	Disconnected	

*8 Series considers the breaker state Connected when detection of the Connected/Disconnected state of the breaker is not configured. Connected/Disconnected detection is not configured when setpoint **Connected** (under **Setpoints > System > Breaker**) is set to *Off*.

The parameters displayed in the Front panel screen example are as follows.

Parameter	Input for the value
Load Cur	Metering\ Generator\ General\ Load Current
Unbln	Metering\ Generator\ General\ Unbalance Current
Volt (L-L)	Metering\ Ph VT Bnk1-J2\ J2 V AVG L-L
Freq	Metering\ Frequency 1-J\ J2-3VT Frequency
V/ Hz	Metering\ Volts per Hertz\ Volts Per Hertz 1
S:	Metering\ Power 1\ Pwr1 Apparent
P:	Metering\ Power 1\ Pwr1 Real
Q:	Metering\ Power 1\ Pwr1 Reactive
PF	Metering\ Power 1\ Pwr1 PF


3.3.2 THREE-PUSHBUTTON FRONT PANEL LEDS

Front panel LED details:

- Number of LEDs: 17
- Programmability: Any FlexLogic operand
- Reset mode: self-reset or latched

The front panel provides two columns of 7 LED indicators each, and 3 LED pushbutton indicators. The **IN-SERVICE** (LED 1) indicator from the first LED column is a non-programmable LED. LED 3 in the first LED column is programmable and defaulted to **PICKUP**. The bottom 3 LED indicators from the first column, and the 7 LED indicators from the second LED column are fully programmable. The indicators **TRIP** (LED 2), and **ALARM** (LED 3), are also programmable, and can be triggered by either a selection of FlexLogic operand assigned in their own menu, or by the operation of any protection, control or monitoring element with function selected as *Trip*, *Alarm*, or *Latched Alarm*.

The **RESET** key is used to reset any latched LED indicator or Target Message once the condition has been cleared (latched conditions can also be reset via the **RESETTING** menu).

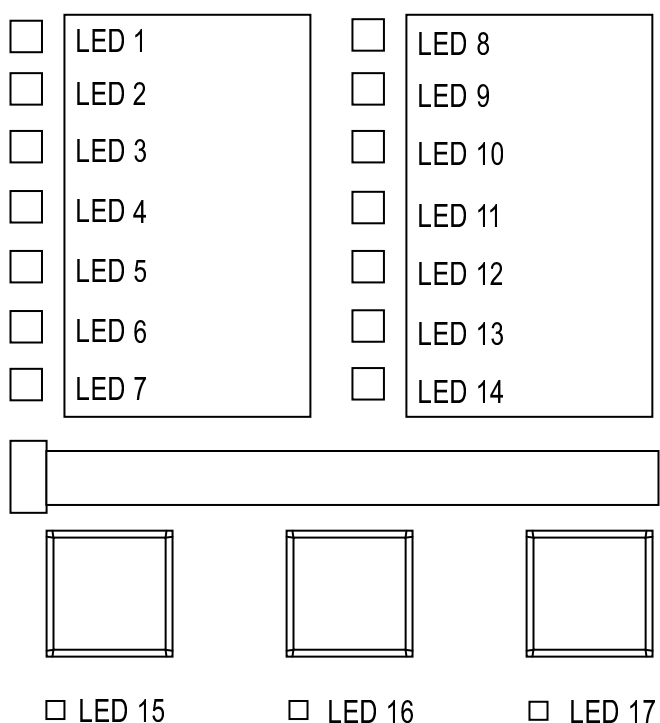

894286A1.CDR

Figure 70: LED numbering

Some status indicators are common while some are feature specific which depend on the availability in the order code. The common status indicators in the first column are described below.

Status Indicator	Description
IN SERVICE	Green color = Relay powered up, passed self-test has been programmed, and ready to serve. This LED indicates that control power is applied, all monitored inputs, outputs, and internal systems are OK, and that the device has been programmed. Red color = Relay failed self test, has not been programmed, or out of service.
TRIP	This LED indicates that the element selected to produce a trip has operated. This indicator always latches; as such, a Reset command must be initiated to allow the latch to be reset.
ALARM	This LED indicates that the FlexLogic™ operand serving as an Alarm switch has operated. Latching of the indicator depends on the selected protection function. A Reset command must be initiated to allow the latch to be reset.
PICKUP	This LED indicates that at least one element is picked up. This indicator is never latched.
TEST MODE	This LED indicates that the relay has been set into Test Mode.
MESSAGE	This LED indicates the presence of Target Messages detected by the relay.
LOCAL MODE	This LED indicates that the relay is operating in local mode.

Breaker status indication is based on the breaker's 52a and 52b contacts. With both contacts wired to the relay and configured, closed breaker status is determined by closed 52a contact and opened 52b contact. Vice-versa the open breaker status is determined by opened 52a contact and closed 52b contact. If both 52a and 52b contacts are open, due to a breaker being racked out from the switchgear, both the Breaker Open and Breaker Closed LED Indicators will be off.

The Event Cause indicators in the first column are described as follows:

Events Cause LEDs are turned *On* or *Off* by protection elements that have their respective target settings selected as either *Self-Reset* or *Latched*. If a protection element target setting has *Self-Reset* selected, then the corresponding Event Cause LEDs remain *On* as long as the operate operand associated with the element remains

asserted. If a protection element target setting is *Latched*, then the corresponding Event Cause LEDs turn *On* when the operate operand associated with the element is asserted and will remain *On* until the **RESET** button on the front panel is pressed after the operand is reset.

Default labels are shipped in the package of every product, together with custom templates. A custom LED template is available for editing and printing from the GE Vernova website. The default labels can be replaced by user-printed labels. Customization of LED operation is of maximum benefit in installations where languages other than English are used to communicate with operators.

3.3.3 TEN-PUSHBUTTON FRONT PANEL LEDs

Front panel LED details:

- Number of LEDs: 22 (LEDs 13 and 14 are not available)
- Programmability: Any FlexLogic operand
- Reset mode: self-reset or latched

The 10 Pushbutton-Membrane front panel provides one column of 12 multi-color LED indicators and 10 single-color LED pushbutton indicators. The **IN-SERVICE** (LED 1) and the **PICKUP** (LED 4) indicators from the first LED column are non-programmable LEDs. The indicators **TRIP** (LED 2), and **ALARM** (LED 3) are programmable, and can be triggered by either a selection of FlexLogic operand assigned in their own menu, or by the operation of any protection, control or monitoring element with function selected as *Trip*, *Alarm*, or *Latched Alarm*.

The **RESET** key is used to reset any latched LED indicator or Target Message once the condition has been cleared (latched conditions can also be reset via the **RESETTING** menu).

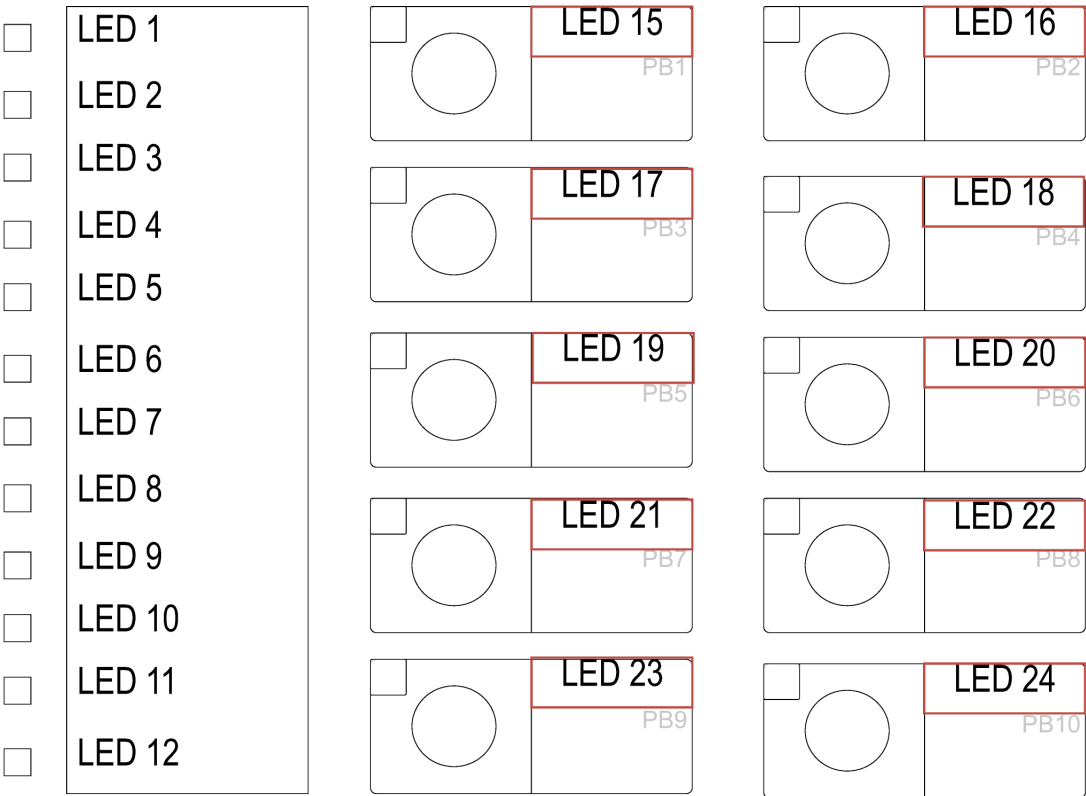


Figure 71: LED numbering

LED Labels without Autoreclose Function	LED Labels with Autoreclose Function
☐ IN SERVICE	☐ IN SERVICE
☐ TRIP	☐ TRIP
☐ ALARM	☐ ALARM
☐ PICKUP	☐ PICKUP
☐ TEST MODE	☐ TEST MODE
☐ MESSAGE	☐ MESSAGE
☐ PHASE A FAULT	☐ PHASE A FAULT
☐ PHASE B FAULT	☐ PHASE B FAULT
☐ PHASE C FAULT	☐ PHASE C FAULT
☐ GROUND FAULT	☐ GROUND FAULT
☐ 50P INST OC	☐ 50P INST OC
☐ 27 PHASE UV	☐ LOCKOUT

Figure 72: Typical LED Indicator Panel

Some status indicators are common while some are feature specific which is dependent upon the order code. The common status indicators in the first column are described below.

Status Indicator	Description
IN SERVICE	This LED indicates that control power is present, all monitored inputs, outputs, and internal systems are OK, and that the device is programmed.
TRIP	This LED indicates that the FlexLogic operand serving as a trip switch has operated. This indicator always latches so a reset command must be initiated to allow the latch to be reset.
ALARM	This LED indicates that the FlexLogic operand serving as an alarm switch has operated. Latching of the indicator depends on the selected protection function. The Reset command must be initiated to allow the latch to be reset.
PICKUP	This LED indicates that at least one element is picked up. This indicator is never latched.
TEST MODE	This LED indicates that the relay has been set into Test Mode.
MESSAGE	This LED indicates the presence of Target Messages detected by the relay.
PHASE A FAULT	This LED indicates that phase A of the Phase Time Overcurrent 1 function has operated.
PHASE B FAULT	This LED indicates that phase B of the Phase Time Overcurrent 1 function has operated.
PHASE C FAULT	This LED indicates that phase C of the Phase Time Overcurrent 1 function has operated.
GROUND FAULT	This LED indicates that the Ground Time Overcurrent 1 function has operated.
50P INST OC	This LED indicates that the Phase Instantaneous Overcurrent 1 function has operated.
27 PHASE UV (Order Code without Autoreclose)	This LED indicates that the Phase Undervoltage 1 function has operated.
LOCKOUT (Order Code with Autoreclose)	This LED indicates that the Autoreclose function has reached the lockout stage.

3.3.4 HOME SCREEN ICONS

The next figure shows the icons available on the front screen. For descriptions of these screen icons see the following table.

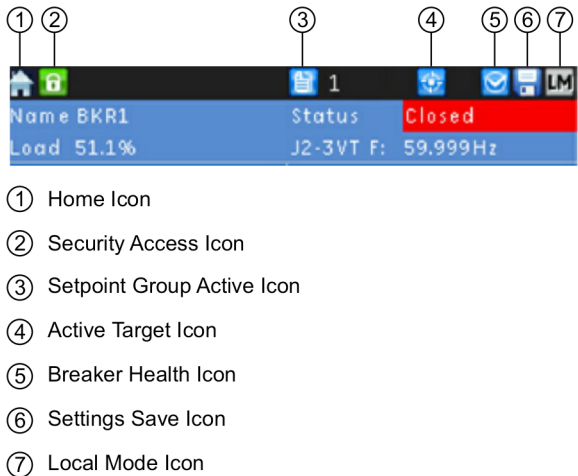


Figure 73: Home Screen Icons

Icon Type	Description of Icon
Security Access	User not logged in - green and locked User logged in - Icon is red and unlocked
Setpoint Group	Identifies the active setpoint group
Active Target	When the target auto navigation setting is disabled, the message LED and the Active Target icon are the only indication of active target messages.
Breaker Health	The Breaker Health icon is blue when the setting for the breaker health function is not disabled. When the setting is disabled the icon is gray.
Settings Save	Indicates that a setting is being saved on the relay (i.e., when changing one of relay settings). Icon is ON (relay is saving to flash memory) Icon is OFF (relay is not saving to flash memory)
Local Mode	Indicates that Local Mode is active. During Local Mode, the control for the breakers and disconnect switches can be performed only by the relay front panel.

Note:
The security icon only represents the security access level through the front panel.
Do not remove power from the relay whenever the Settings Save icon is ON. When power is removed the data being saved can also be lost.

3.3.5 RELAY MESSAGES

3.3.5.1 TARGET MESSAGES

Targets are messages displayed on the screen when any change of state of protection, control, monitoring, or digital signal takes place. Depending on the model, targets for each element are enabled, or latched by default. You can disable targets for any particular element if desired.

Target Messages are displayed in order of their activation, whereas in cases of simultaneous activation, they are displayed in the order outlined below (from highest to lowest priority):

1. Targets generated by pressing programmable pushbutton
2. Targets generated by Contact inputs
3. Targets generated by Protection, Control and Monitoring elements
4. Targets generated by communications.

In cases where the Pickup and Operate flags from an element are detected at the same time, the Pickup flag is not displayed. The Operate flag is displayed instead.

LED #6, from the first column of LEDs, is factory configured to be triggered by the FlexLogic operand ANY TARGET, to indicate the presence of at least one target message. This LED is labeled as **MESSAGE**. The LED can be programmed to any other FlexLogic operand by choice.

MESSAGE TIMEOUT

The timeout applies to every screen apart from the default screen. Examples include viewing, metering, or navigating to a screen with setting, etc. If no further navigation is performed, no pushbutton is touched, and/or no target is initiated for the time specified in the message timeout setpoint, the display goes back to the default screen (the metering summary screen).

The target message overrides the message timeout. The message timeout starts timing after each target message, and if no more activity is recorded for the specified time, the display goes back to the default screen.

Pressing a programmable pushbutton activates a new screen with a Target Message corresponding to the programmed pushbutton action. The pushbutton Target Message is displayed for 10 seconds then defaults to the screen that was displayed before pressing the pushbutton. The pushbutton Target Message is recorded in the list with other generated Target Messages.

Target Messages can be cleared either by pressing the pushbutton corresponding to the **CLEAR** tab, or by initiating a **RESET** command. The **CLEAR** command clears only the Target Messages, while initiating a **RESET** clears not only the Target Messages, but also any latched LEDs and output relays.

3.3.5.2 SELF-TEST ERRORS

The relay performs self-diagnostics at initialization (after power up), and continuously as a background task to ensure that the hardware and software are functioning correctly. There are two types of self-test warnings indicating either a minor or major problem. Minor errors indicate a problem with the relay that does not compromise protection and control functionality of the relay. Major errors indicate a problem with the relay which takes it out of service.



Caution:
Self-Test Warnings may indicate a serious problem with the relay hardware!

Upon detection of a minor problem, the relay does the following:

- Displays a detailed description of the error on the relay display as a target message
- Records the minor self-test error in the Event Recorder
- Flashes the **ALARM** LED

Upon detection of a major problem, the relay does the following:

- De-energizes critical failure relay
- De-energizes all output relays
- Blocks protection and control elements
- Turns the **IN SERVICE** LED to red
- Flashes the **ALARM** LED
- Displays **Major Self-test error** with the error code as a target message
- Records the major self-test failure in the Event Recorder

Note:
The Critical Failure Relay (Output Relay 8) is energized when the relay is in-service, and no major error is present

Under both conditions, the targets cannot be cleared if the error is still active.

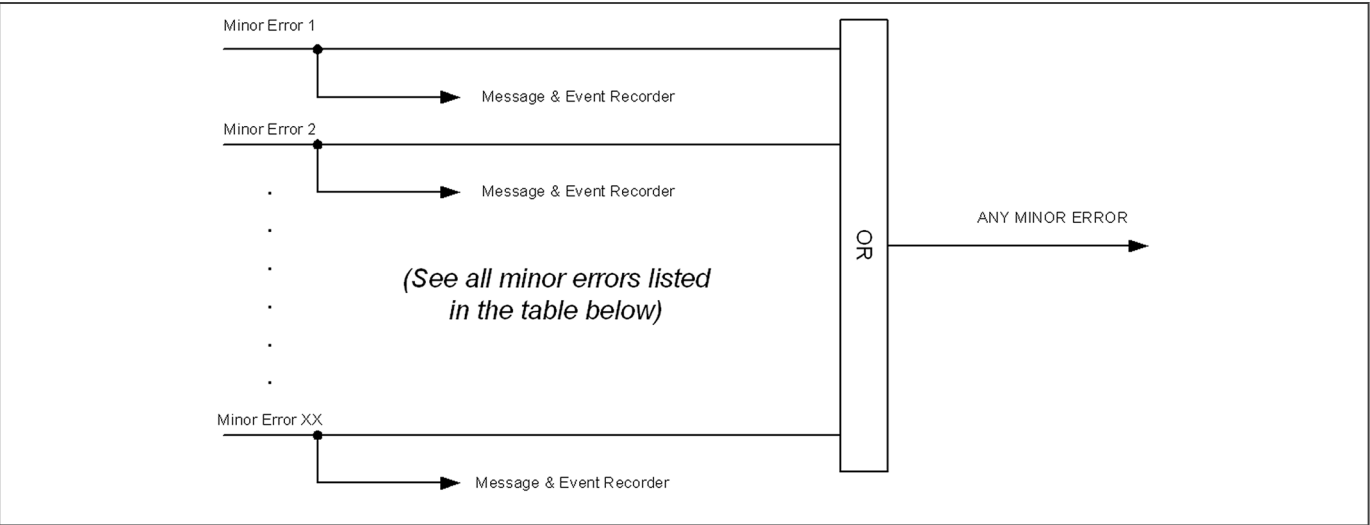


Figure 74: Minor Errors

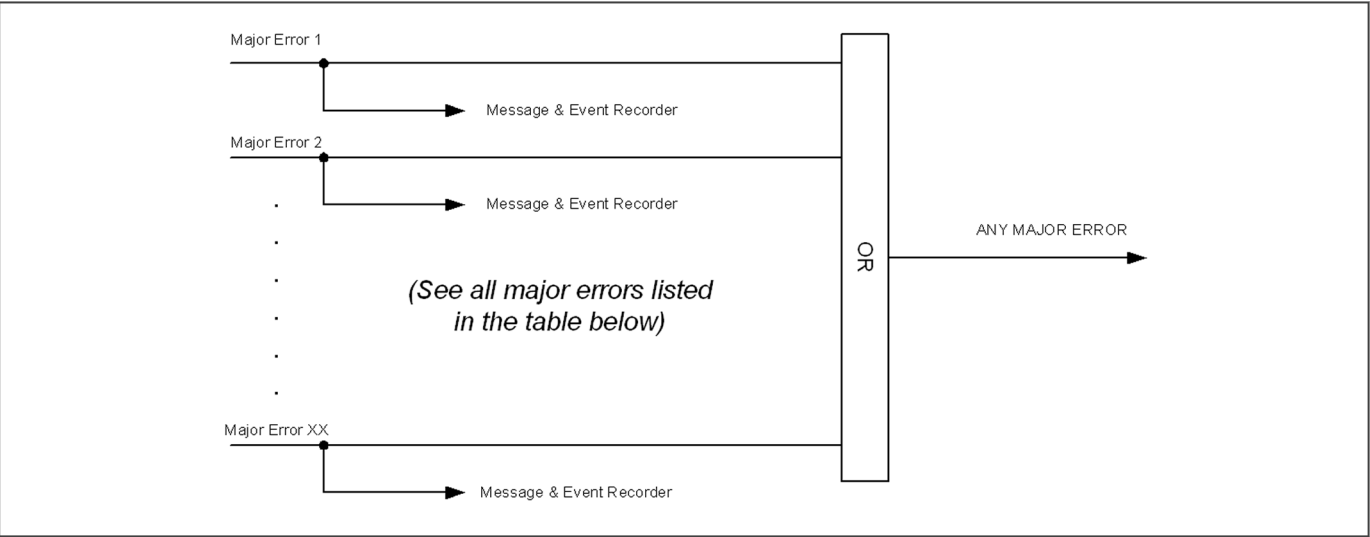


Figure 75: Major Errors

Minor self-test errors

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Order Code Error	Hardware doesn't match order code	Every 1 second	If alert doesn't self-reset then contact factory. Otherwise monitor re-occurrences as errors are detected and self-reset
CPU S/N Invalid	CPU card doesn't have valid data to match the order code.	Every 1 second	
Slot "\$" IO S/N Invalid ²	IO card located in slot \$ doesn't have valid data to match the order code.	Every 1 second	
Comms S/N Invalid	Comms card doesn't have valid data to match the order code.	Every 1 second	
CPanel S/N Invalid	Control Panel doesn't have valid data to match the order code.	Every 1 second	
PSU S/N Invalid	Power Supply Unit doesn't have valid data to match the order code.	Every 1 second	
RTC Error	The CPU cannot read the time from the real time clock	Every 1 second	
Product Serial Invalid	The product serial number doesn't match the product type	Every 1 second	
Comm Alert #1	Communication error between CPU and Comms board	Every 1 second	
Comm Alert #2		Every 1 second	
Comm Alert #3		Every 1 second	
FLASH Error	The permanent storage memory has been corrupted	Every 1 second	
SPI Error	Communication error between CPU and LEDs, Keypad or peripheral memory devices	Every 1 second	
Invalid MAC Address	MAC address is not in the product range	Every 1 second	
Calibration Error	Unit has default calibration values	Boot-up and every 1 second	
Clock Not Set	Clock has the default time	Every 1 second	Set clock to current time
IRIG-B Failure	A bad IRIG-B input signal has been detected	Every 1 second	Ensure IRIG-B cable is connected, check cable functionality (i.e. physical damage or perform continuity test), ensure IRIG-B receiver is functioning, and check input signal level (it may be less than specification). If none of these apply, contact the factory.
WiFi Default Settings	SSID and Passphrase is the factory default	Every 1 second	Set SSID and Passphrase

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Link Error Primary ³	Port 1 or Port 4 (depending on order code) is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Link Error Secondary	Port 5 is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Traffic Error Primary	Abnormally high amount of Broadcast and Uni-cast traffic on port 1 or port 4	Every 1 second	Contact site IT department to check network for malfunctioning devices
Traffic Error Secondary	Abnormally high amount of Broadcast and Uni-cast traffic on port 5	Every 1 second	Contact site IT department to check network for malfunctioning devices
Ambient Temperature >80C	The ambient temperature surrounding the product has exceeded 80C	Every 1 second	Inspect mounting enclosure for unexpected heat sources (i.e loose primary cables) and remove accordingly
High Rate Event	Abnormally high amounts of events have been generated so the relay has stopped logging to prevent further issues	Every 1 second	Ensure settings are not set close to nominal ratings. Ensure FlexLogic equations do not have impractical timing for status events
CAN_1 Error		Every 1 second	
CAN_2 Error		Every 1 second	
Version Mismatch	CPU and Comms do not have the same revision on firmware	Boot-up and Every 1 second	Ensure that both the CPU and Comms FW was uploaded during the upgrade process
SelfTestFWUpdate	The updating of the firmware failed	Every 1 second	Re-try uploading firmware. If the upload doesn't work a second time contact factory
Remote CAN IO Mismatch	RMIO card detection mismatch	Every 1 second	Check RRTD connections, check if the RRTD configuration is still valid, Validate CANBUS IO.

¹ Failure is logged after the detection of 5 consecutive failures

² \$ is the slot ID (i.e. F, G, H etc.)

^{3a} Link Error Primary can take up to 12 seconds to appear

^{3b} To disable Link Error Primary target when not in use with SE order code, change IP address to 127.0.0.1

Major self-test errors

Major Self-test Error Message	Latched Target Message	Description of Problem	Frequency of Test	What to do
Relay Not Ready	No	PRODUCT SETUP INSTALLATION setting indicates relay is not in a programmed state.	On power up and whenever the PRODUCT SETUP INSTALLATION setting is altered.	Program all required settings and then set the PRODUCT SETUP INSTALLATION setting to <i>Ready</i> .
Major Self-Test (error code)	Yes	Unit hardware failure detected	Every 1 second	Contact the factory and supply the failure code as noted on the display.

Note:

When a total loss of power is present, the Critical Failure Relay (Output Relay 8) is de-energized.

3.3.5.3 OUT OF SERVICE

When the relay is shipped from the factory, **DEVICE IN SERVICE** is set to *Not Ready*. The **IN SERVICE** LED will be orange and the critical fail relay will be de-energized but this will not be classified as a major self-test. An out of service event will be generated in the event recorder.

3.3.5.4 FLASH MESSAGES

Flash messages are warning, error, or general information messages displayed in response to pressing certain keys. The factory default flash message time is 2 seconds.

3.3.6 LABEL REMOVAL

For versions up to 3.xx, the front panels are supplied with a label removal tool for removing the LED label and user-programmable pushbutton label.

The following procedures describes how to use the label removal tool.

1. Bend the tabs of the tool upwards as shown in the image.



2. Slide the label removal tool under the LED label as shown in the next image. Make sure the bent tabs are pointing away from the relay. Move the tool inside until the tabs enter the pocket.




3. Remove the tool with the LED label.

The following describes how to remove the user-programmable pushbutton label from the front panel.

1. Slide the label tool under the user-programmable pushbutton label as shown in the next image. Make sure the bent tab is pointing away from the relay.

Remove the tool and user-programmable pushbutton label as shown in image.

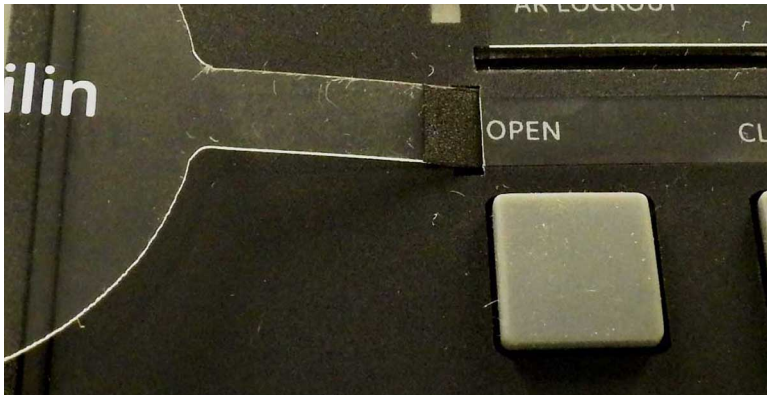

3.4 SOFTWARE INTERFACE

3.4.1 ENERVISTA D&I SETUP

Although you can enter settings manually using the control panel keys, you can also use a PC to download setpoints through the communications port. EnerVista D&I Setup is used to make this as convenient as possible. With EnerVista D&I Setup, it is possible to:

- Program and modify settings
- Load setting files from a computer
- Save setting files to a computer
- Read actual values
- Monitor status
- Read pre-trip data and event records
- Get help on any topic
- Upgrade the firmware

The software allows immediate access to all features with easy to use pull down menus in the familiar Windows environment. This section provides the necessary information to install the software, upgrade the relay firmware, and write and edit setting files.

The software can run without a relay connected to the computer. In this case, settings may be saved to a file for future use. If a relay is connected to a PC and communications are enabled, you can configure the relay from the setting screens. In addition, measured values, status and trip messages can be displayed with the actual value screens.

3.4.1.1 HARDWARE & SOFTWARE REQUIREMENTS

EnerVista D&I Setup has the following system requirements:

- Dual-core processor
- Microsoft Windows 10 or higher; 32-bit or 64-bit.
- At least 1 GB of free hard disk space is available.
- At least 2 GB of RAM is installed.
- 1280 x 800 display screen

The EnerVista D&I Setup can be installed from the GE Multilin website.

3.4.1.2 INSTALLING ENERVISTA D&I SETUP

Use the following procedure to install EnerVista D&I Setup using the EnerVista D&I Setup Launchpad application (found on the GE Multilin website).

1. Double-click the installation package and follow the instructions to install the software on the local PC.
2. When the installation is complete, start the EnerVista D&I Setup Launchpad application.
3. Click the **IED Setup** section of the LaunchPad toolbar.
4. In the EnerVista D&I Setup Launchpad window, click the **Add Product** button and select the required Protection System. Select the Web option to ensure the most recent software release.
5. Click the **Add Now** button to list software items. EnerVista D&I Setup Launchpad obtains the latest installation software from the Web and automatically starts the installation process. A status window with a progress bar is shown during the downloading process.

6. Select the complete path, including the new directory name, where the software is to be installed.
7. Click on **Next** to begin the installation. The files are installed in the directory indicated, the USB driver is loaded into the computer, and the installation program automatically creates icons and adds the EnerVista D&I Setup to the Windows start menu.
8. The required device is added to the list of installed IEDs in the EnerVista D&I Setup Launchpad IED Setup window.

If you are going to communicate from your computer to the relay using the USB port:

1. Connect the USB cable from your computer to the relay's USB port.
2. Launch EnerVista D&I Setup from the LaunchPad. Then in **EnerVista D&I Setup 8 Series setup software > Device Setup**, select **USB** as the Interface type.
3. Select the **Read Order Code** button.

3.4.1.3 UPGRADING ENERVISTA D&I SETUP

The latest software can be downloaded from the GE website.

After upgrading, check the version number under **Help > About**. If the new version does not display, try uninstalling the software and reinstalling the new version.

3.4.2 CONNECTING ENERVISTA D&I SETUP TO THE RELAY

3.4.2.1 USING THE QUICK CONNECT FEATURE

The **Quick Connect** button can be used to establish a fast connection through the front panel USB port of a relay.

Select **USB** and press the **Connect** button. Alternatively, Ethernet or WiFi (not all models) can be used as the interface.

When connected, a new site called **Quick Connect** appears in the **Site List** window.

The Site Device has now been configured via the Quick Connect feature for communications through whichever interface has been chosen.

3.4.2.2 CONFIGURING ETHERNET COMMUNICATIONS

Before starting, verify that the Ethernet cable is properly connected to the relevant Ethernet port.

Note:

The relay supports a maximum of 3 TCP/IP sessions.

1. Install and start the latest version of the software (available from the GE Multilin Website). See the previous section for the installation procedure.
2. Click on the **Device Setup** button to open the Device Setup window and click the **Add Site** button to define a new site.
3. Enter the desired site name in the Site Name field. If desired, a short description of the site can also be entered. In this example, we will use Substation 1 as the site name.
4. The new site appears in the upper-left list.
5. Click the **Add Device** button to define the new device.
6. Enter the desired name in the Device Name field, and a description (optional).
7. Select Ethernet from the Interface drop-down list. This displays a number of interface parameters that must be entered for proper Ethernet functionality.

8. Enter the IP address, slave address, and Modbus port values assigned to the relay (from the **Setpoints > Device > Communications** menu).
9. Click the **Read Order Code** button to connect to the relay and upload the order code. If a communications error occurs, ensure that the Ethernet communication values correspond to the relay setting values.
10. Click **OK** when the relay order code has been received. The new device will be added to the Site List window (or Online window) located in the top left corner of the main EnerVista D&I Setup window.

The Site Device has now been configured for Ethernet communications.

3.4.2.3 CONNECTING TO THE RELAY

Now that the communications parameters have been properly configured, communications with the relay can be initiated.


1. Expand the Site list by double clicking on the site name or clicking on the **+** box to list the available devices for the given site.
2. The required device trees can be expanded by clicking the **+** box. The following list of headers is shown for each device:
 - Device Definition
 - Status
 - Metering
 - Quick Setup
 - Setpoints
 - Records
 - Maintenance
3. Expand the **Setpoints > Device > Front Panel** list item and double click on **Display Properties** or **Default Screens** to open the settings window.
4. The settings window opens with a corresponding status indicator on the lower left of the EnerVista D&I Setup window.
5. If the status indicator is red, verify that the serial, USB, or Ethernet cable is properly connected to the relay, and that the relay has been properly configured for communications (steps described earlier).

The settings can now be edited, printed, or changed. Other setpoint and command windows can be displayed and edited in a similar manner. **Actual Values** windows are also available for display. These windows can be arranged and resized, if necessary.


3.4.2.4 CONFIGURING USB ADDRESS

By default, the relay USB port uses the network address 172.16.0.2. In some cases this IP is part of the corporate network for the computer and conflicts with existing computers or other devices on that network. To resolve this conflict, change the USB address to be in a different network. This change must be made to the computer settings, the relay settings, and the EnerVista D&I Setup settings in order to connect to the relay through the USB port.


1. Open the Windows Control Panel and select **Network and Internet > Network Sharing**. The exact path may vary depending on the version of Windows.

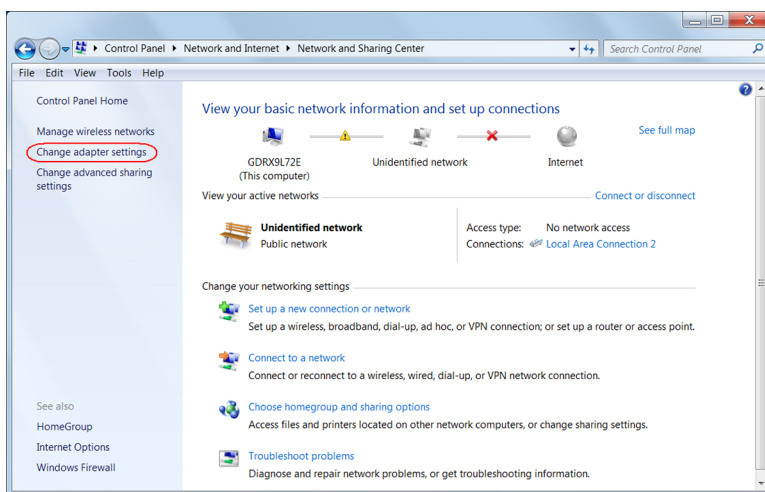


2. Click **Change adapter settings**.

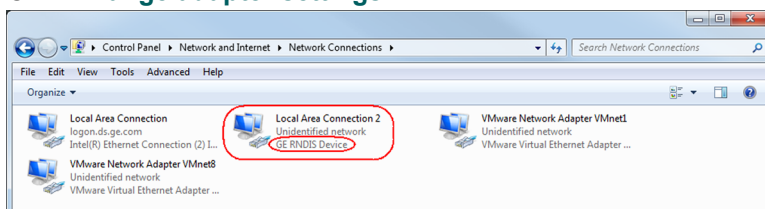

3. Find the **GE RNDIS Device** (or **GE RNDIS Device #2**) and right-click the network it is on to open the **Properties** window.
4. Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.

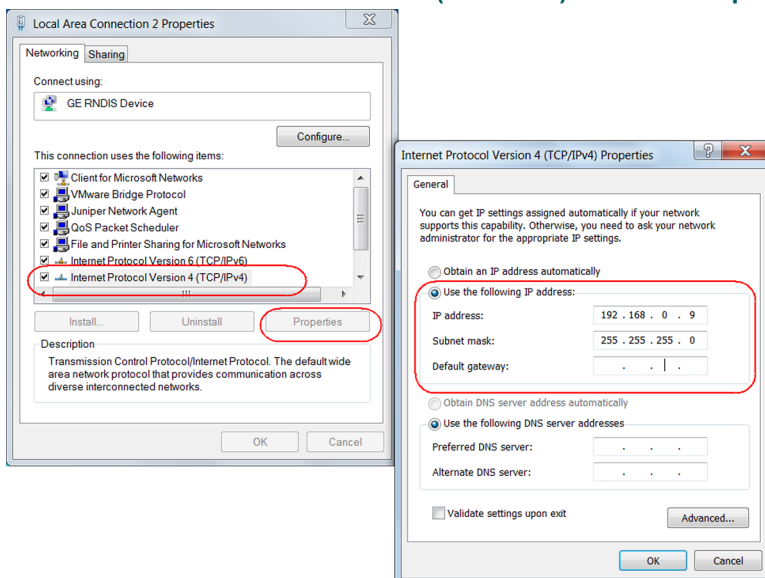

5. In the Internet Protocol Version 4 (TCP/IPv4) Properties window, ensure that **Use the following IP Address** is selected, and enter an appropriate IP address.
6. Click **OK** to save the new settings.
7. In the EnerVista D&I Setup, navigate to **File > Preferences > USB** and change the IP address to match. This address will now be used by EnerVista D&I Setup when the interface selected is USB.

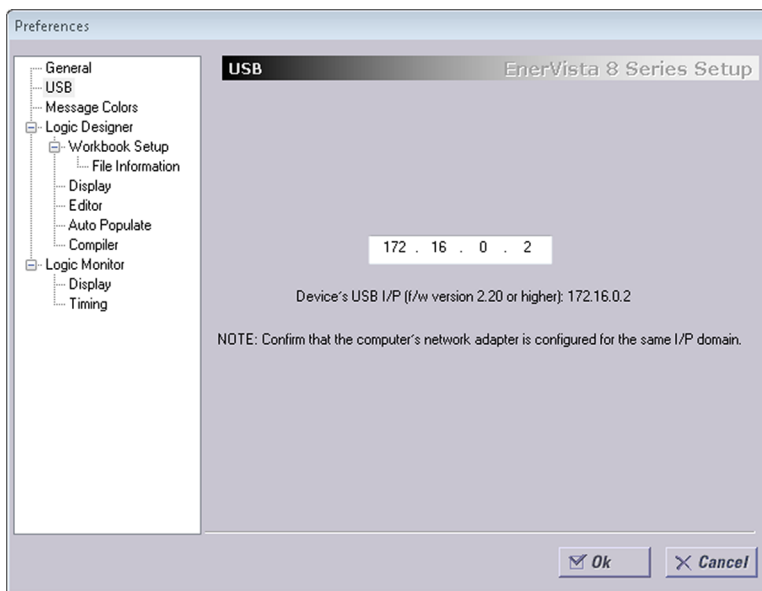

8. Click **OK** to save the new settings.
9. On the front panel of the relay, navigate to **Setpoint > Device > Communications > USB**.
10. Change both the **USB IP Address** and **USB GWY IP Address** setpoints to match the IP address the computer is now using.

The relay should now communicate with the computer through the USB port.

3.4.3 WORKING WITH SETPOINTS

When a settings file is being uploaded to a device, the **DEVICE IN SERVICE** setting switches to *Not Ready* for the duration of the upload. This ensures that all new settings are applied before the device is operational. A settings file uploads operations including the following:

- EnerVista D&I Setup menu option **Write Settings File to Device**
- Logic Designer changes saved online
- SLD configuration saved online
- IEC 61850 configuration saved online
- FlexLogic configuration saved online
- CID file uploaded to device

Individual setting changes from the device front panel or the EnerVista D&I Setup Online Window do not change the state of the **DEVICE IN SERVICE** setting.


3.4.3.1 ENGAGING A DEVICE

EnerVista D&I Setup may be used in on-line mode (relay connected) to directly communicate with a relay. Communicating relays are organized and grouped by communication interfaces and into sites. Sites may contain any number of relays selected from the product series.


3.4.3.2 ENTERING SETPOINTS

The following **System Setup** page is used as an example to illustrate entering setpoints. In this example, we will be changing the voltage sensing setpoints.


1. Establish communications with the relay.
2. Select the **Setpoint > System > Voltage Sensing** menu item.
3. Select the Aux. VT Secondary setpoint by clicking anywhere in the parameter box. This displays three arrows: two to increment/decrement the value and another to launch the numerical keypad.

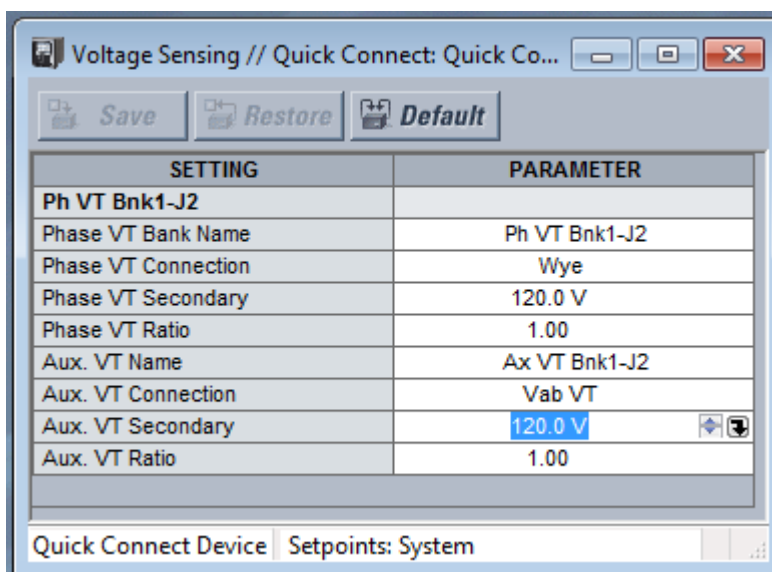

4. Clicking the arrow at the end of the box displays a numerical keypad interface used to enter values within the setpoint range displayed near the top of the keypad: Click **=** to exit from the keypad and keep the new value. Click on **X** to exit from the keypad and retain the old value.

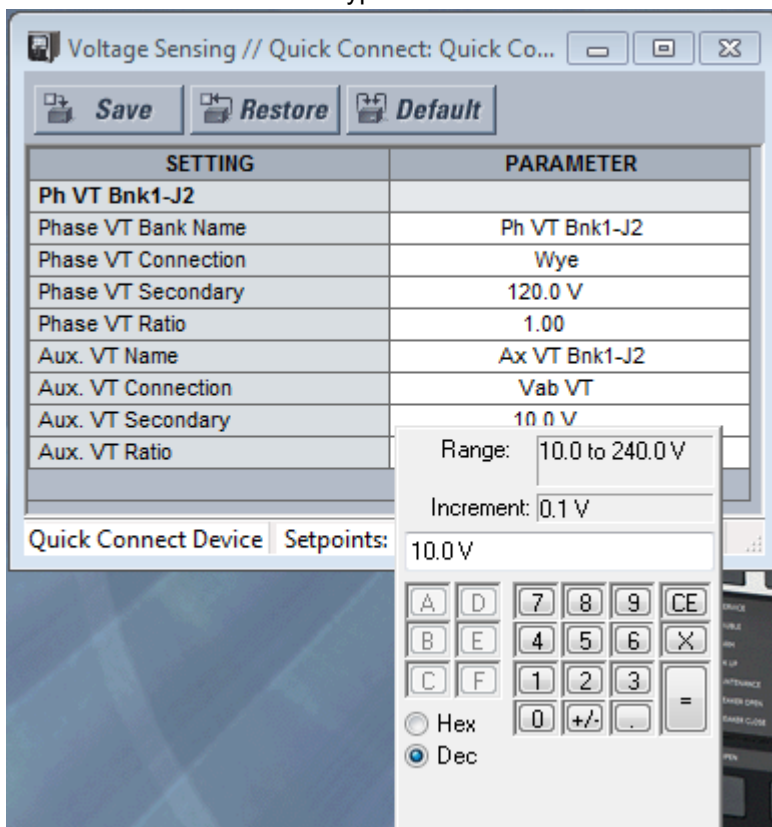

5. For setpoints requiring non-numerical pre-set values (e.g. **Phase VT Connection** below), clicking anywhere within the setpoint value box displays a drop-down selection menu arrow. Select the desired value from this list.

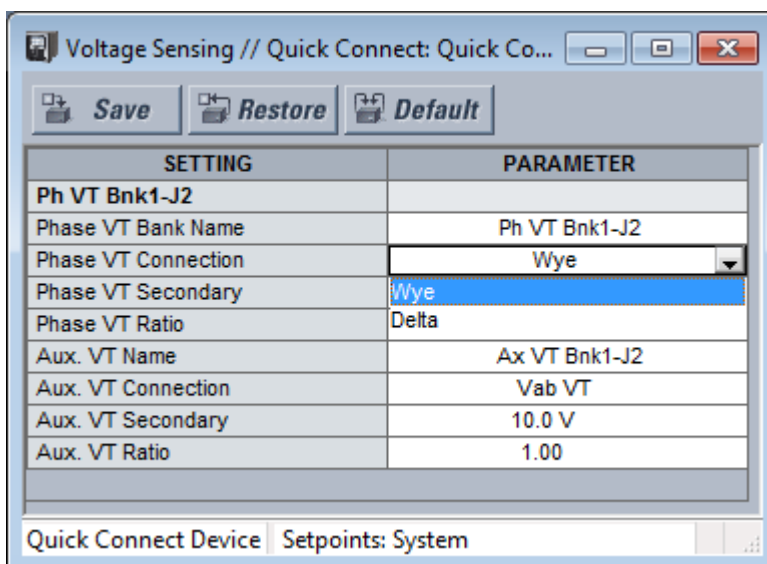

6. In the **Setpoints > System Setup > Voltage Sensing** dialog box, click on **Save** to save the values into the relay. Click **YES** to accept any changes and exit the window. Click **Restore** to retain previous values. Click **Default** to restore Default values.
7. For setpoints requiring an alphanumeric text string (e.g. relay name), the value may be entered directly within the setpoint value box.

Note:

When using Setpoint Groups, an element from one group can be dragged and dropped on the same element in another group, copying all settings.

3.4.3.3 USING SETPOINT FILES

The EnerVista D&I Setup interface supports three ways of handling changes to relay settings:

1. In off-line mode (relay disconnected) to create or edit relay settings files for later download to communicating relays.
2. Directly modifying relay settings while connected to a communicating relay, then saving the settings when complete.
3. Creating/editing settings files while connected to a communicating relay, then saving them to the relay when complete.

Setting files are organized on the basis of file names assigned by the user. A setting file contains data pertaining to the following types of relay settings:

- Device Definition
- Relay Setup
- System Setup
- Protection
- Control
- Inputs/Outputs
- Monitoring
- FlexLogic
- Quick setup

- Protection summary
- IEC 61850 configurator
- Modbus user map

Factory default values are supplied and can be restored after any changes.

The relay displays relay setpoints with the same hierarchy as the front panel display.

3.4.3.4 DOWNLOADING AND SAVING SETPOINT FILES

You should make a backup of the in-service settings before any changes are made or any work undertaken on commissioned devices. This section describes how to backup settings to a file and how to use that file to restore settings to the original relay or to a replacement relay.

Setpoints must be saved to a file on the local PC before performing any firmware upgrades. Saving setpoints is also highly recommended before making any setpoint changes or creating new setpoint files.

The setpoint files in the EnerVista D&I Setup window are accessed in the **Files** Window. Use the following procedure to download and save setpoint files to a local PC.

1. Ensure that the site and corresponding device(s) have been properly defined and configured.
2. Select the desired device from the site list.
3. Select **Read Device Settings** from the online menu item, or right-click on the device and select **Read Device Settings** to obtain settings information from the device.
4. After a few seconds, the software requests the name and destination path of the setpoint file. The corresponding file extension is automatically assigned. Press **Receive** to complete the process. A new entry is added to the tree, in the **File** pane, showing path and file name for the setpoint file.

3.4.3.5 ADDING SETPOINT FILES TO THE ENVIRONMENT

EnerVista D&I Setup allows you to review and manage a large group of setpoint files. Use the following procedure to add an existing file to the list.

1. In the offline pane, right-click on **Files** and select the **Add Existing Settings File** item.
2. The **Open** dialog box is displayed, prompting to select a previously saved setpoint file.
3. Browse for the file to be added then click **Open**. The new file and complete path will be added to the file list.

3.4.3.6 CREATING A NEW SETPOINTS FILE

Eenrvista allows you to create a new setpoint files independent of a connected device. These can be uploaded to a relay at a later date. The following procedure illustrates how to create new setpoint files.

1. In the Offline pane, right click and select the **New Settings File** item. The **Create New Settings File** box appears, allowing for the configuration of the setpoint file for the correct firmware version. It is important to define the correct firmware version to ensure that setpoints not available in a particular version are not downloaded into the relay.
2. Select the Firmware Version, and Order Code options for the new setpoint file.
3. For future reference, enter some useful information in the **Description** box to facilitate the identification of the device and the purpose of the file.
4. To select a file name and path for the new file, click the button beside the **File Name** box.
5. Select the file name and path to store the file, or select any displayed file name to replace an existing file. All setpoint files should have the extension **.CID**.
6. Click **OK** to complete the process. Once this step is completed, the new file, with a complete path, is added to the software environment.

Note:

Offline settings files can be created for invalid order codes in order to support file conversion from different products, upgrades, and special orders. To validate an order code, visit the GE Multilin online store. Filenames for setting files cannot have a period character (.) other than the one that is added in front of CID.

3.4.3.7 UPGRADING SETPOINT FILES TO A NEW REVISION

It is often necessary to upgrade the revision for a previously saved setpoint file after the firmware has been upgraded. This is illustrated in the following procedure:

1. Establish communications with the relay.
2. Select the **Status > Information > Main CPU** menu item and record the Firmware Version.
3. Load the setpoint file to be upgraded into the EnerVista D&I Setup 8 Series setup software environment.
4. In the File pane, select the saved setpoint file.
5. From the main window menu bar, select the **Offline > Edit Settings File Properties** menu item and note the File Version of the setpoint file. If this version is different from the Firmware Revision noted in step 2, select a New File Version that matches the Firmware Revision from the pull-down menu. For example, if the firmware revision is J0J08AA150.SFD (Firmware Revision 1.50) and the current setpoint file revision is 1.10, change the New File Version to 1.5x.
6. Enter any special comments about the setpoint file in the **Description** field.
7. Select the desired firmware version from the **New File Version** field.
8. When complete, click **OK** to convert the setpoint file to the desired revision.

3.4.3.8 PRINTING SETPOINTS

EnerVista D&I Setup allows you to print partial or complete lists of setpoints. Use the following procedure to print a list of setpoints:

1. Select a previously saved setpoints file in the File pane or establish communications with a relay.
2. If printing from an online device, select the **Online > Print Device Information** menu item. If printing from a previously saved setpoints file, select the **Offline > Print Settings File** menu item.
3. The Print/Export Options dialog box appears. Select **Setpoints** in the upper section and select either **Include All Features** (for a complete list) or **Include Only Enabled Features** (for a list of only those features which are currently used) in the filtering section and click **OK**.
4. Setpoint lists can be printed in the same manner by right clicking on the desired file (in the file list) or device (in the device list) and selecting the **Print Device Information** or **Print Settings File** options.

3.4.3.9 PRINTING VALUES FROM A CONNECTED DEVICE

A complete list of actual values can also be printed from a connected device with the following procedure:

1. Establish communications with the desired relay.
2. From the main window, select the **Online > Print Device Information** menu item
3. The Print/Export Options dialog box will appear. Select **Actual Values** in the upper section and select either **Include All Features** (for a complete list) or **Include Only Enabled Features** (for a list of only those features which are currently used) in the filtering section and click **OK**.

Actual values lists can be printed in the same manner by right clicking on the desired device (in the device list) and selecting the **Print Device Information** option.

3.4.3.10 LOADING SETPOINTS FROM A FILE

Note:

An error message occurs when attempting to upload a setpoint file with a revision number that does not match the relay firmware.

The following procedure illustrates how to load setpoints from a file. Before loading a setpoints file, it must first be added to the software environment.

1. Select the previously saved setpoints file from the File pane of the main window.
2. Select the **Offline > Edit Settings File Properties** menu item and verify that the corresponding file is fully compatible with the hardware and firmware version of the target relay.
3. Right-click on the selected file and select the **Write Settings File to Device** item.
4. Select the target relay from the list of devices shown and click **Send**. If there is an incompatibility, an Incompatible device order codes, versions or Serial Locks error will occur.

If there are no incompatibilities between the target device and the settings file, the data is transferred to the relay. An indication of the percentage completed is shown in the bottom of the main window.

3.4.3.11 UNINSTALLING FILES AND CLEARING DATA

The relay can be decommissioned by turning off the power to the unit and disconnecting the wires to it. Files can be cleared after uninstalling Emervista or the relay, for example to comply with data security regulations. On the computer, settings files can be identified by the `.CID` extension.

To clear the current settings file do the following:

1. Create a default settings file.
2. Write the default settings file to the relay.
3. Delete all other files with the `.CID` extension.
4. Delete any other data files, which can be in standard formats, such as `COMTRADE` or `.csv`.

You cannot directly erase the flash memory, but all records and settings in that memory can be deleted. Do this from the front panel or EnerVista D&I Setup using: **Command > Clear All Records**

3.4.4 QUICK SETUP

The **Quick Setup** item can be accessed online or offline in EnerVista D&I Setup. Settings changes can be made from both of these screens.

Quick Setup is designed for quick and easy user programming. Power system parameters, and settings for some simple overcurrent elements are easily set. The **Quick Setup** screen works as follows:

- Settings names and units can be viewed at this screen. To view the range of the settings, hover the cursor over the setpoint value field.
- Configure and save the settings as required.
- The **Save**, **Restore** and **Default** buttons function the same as in the individual setting setup screens.
- If you enter a setting value which exceeds the range, when you attempt to save it a warning dialog box will appear. You must correct the setting value to ensure that it is within the permissible range and save it to proceed.

3.4.5 UPGRADING RELAY FIRMWARE

To upgrade the firmware, follow the procedures listed in this section. Upon successful completion of this procedure, the relay will have new firmware installed with the factory default setpoints. The latest firmware files are available from the GE website.

Note:

EnerVista D&I Setup prevents incompatible firmware from being loaded into a relay.

Uploading firmware on a WiFi interface is not allowed.


Before upgrading firmware, it is very important to save the current settings to a file on your PC. After the firmware has been upgraded, it will be necessary to load this file back into the relay.

3.4.5.1 LOADING NEW RELAY FIRMWARE

Do the following to load new firmware into the relay's flash memory.

1. Connect the relay to the local PC and save the setpoints to a file.
2. Select the **Maintenance > Update Firmware** menu item. A screen appears with information on how long the upload will take. Select **OK** to proceed.
3. EnerVista D&I Setup requests the new firmware file. Locate the folder that contains the firmware file to load into the relay. The firmware filename has the following format.

J2 J08 A A 150 . SFD

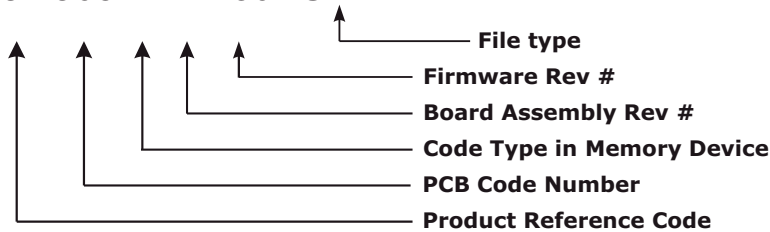

A screen appears advising that a backup of the settings file should be made before proceeding with the firmware upgrade. Select **YES** to proceed.

4. EnerVista D&I Setup now prepares the relay to receive the new firmware file. The front panel momentarily displays `Upload Mode`.
5. A screen appears confirming the firmware versions of the target device and the selected `.SFD`. Click **YES** to proceed with the firmware loading process.
6. EnerVista D&I Setup will prompt the user to reboot the relay after both the Boot 1 and Boot 2 uploads.

Note:

*The relay should be rebooted BEFORE pressing **OK**.*

7. Wait for the Comms upload process to complete.
8. Wait for the Mains upload process to complete.
9. EnerVista D&I Setup notifies you when the relay is successfully updated.

Note:

Wait for the relay to boot up, then cycle power to the relay to complete the firmware update process.

After successfully updating the firmware, the relay is not in service and requires setpoint programming. To communicate with the relay, the communication settings may have to be manually reprogrammed.

When communication is established, you must reload the saved setpoints back into the relay.

Modbus addresses assigned to features, settings, and corresponding data items (i.e. default values, min/max values, data type, and item size) may change slightly from version to version of firmware. The addresses are rearranged when new features are added or existing features are enhanced or modified.

3.4.6 SLD CONFIGURATOR

The SLD Configurator allows users to create customized single line diagrams (SLD) for the front panel display. The SLDs must be configured from the SLD Configurator in the EnerVista D&I Setup, located under **Setpoints > SLD Configurator**. The SLD Configurator allows breakers, switches, metering, and status items on the SLD.

SLDs are viewed from the relay front panel and individual SLD pages can be selected for the default home screen pages. The relay provides several SLD pages. Each page can have a combination of active and passive objects. Status, metering, and control objects are active while the static images for bus, generator, motor, transformer, ground, etc. are passive objects.

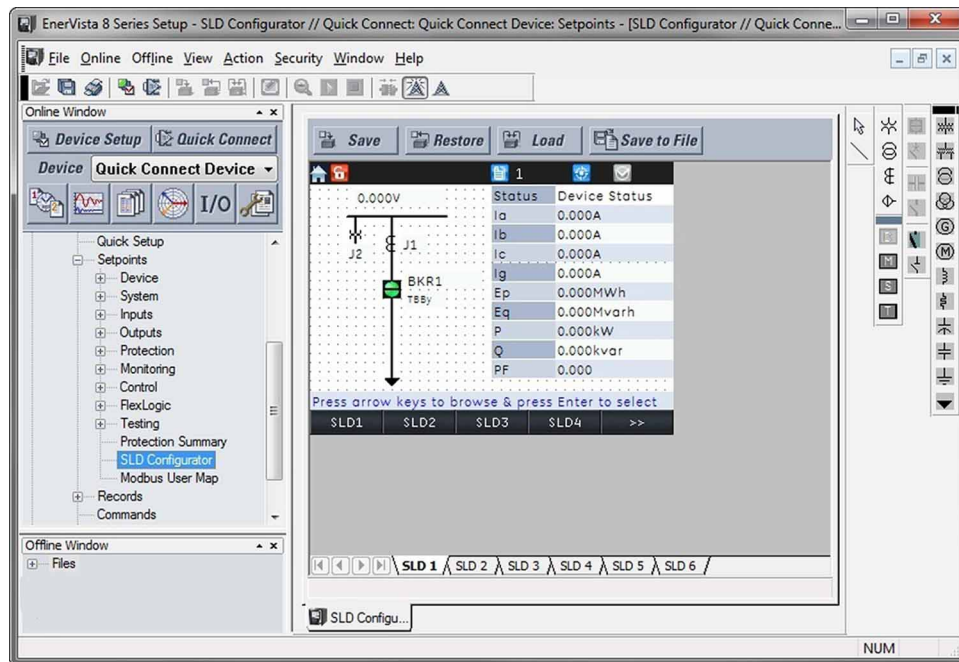


Figure 76: SLD Page

For optimum use, the first SLD page can be used for the overall SLD and the subsequent pages can be used for breaker/switch specific CT/VT placement, metering and status. Once the configurable SLDs are programmed, they are saved within the relay settings file. The SLD pages can also be saved individually as local XML files. The locally stored XML files can then be reloaded to generate another diagram. SLDs represent objects using GE symbols (similar to ANSI).

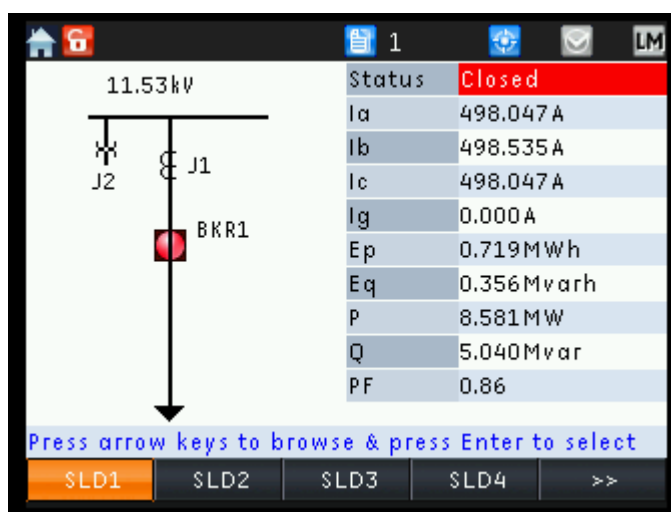


Figure 77: Template SLD

The following figure shows the objects that are available for design in the SLD Configurator and their maximum usage limits [X]. The maximum limit reflects the maximum possible order code.

Column1	Column2	Column3	Column4
Select	VT (GE) [12]	Breaker (GE) [1]	Transformer 2W (GE) [2]
Line [50]	VT (IEC) [12]	Breaker (IEC) [1]	Transformer 3W (GE) [2]
Separator	CT (GE) [12]	Separator	Transformer 2W (IEC) [2]
	CT (IEC) [12]		Transformer 3W (IEC) [2]
	Separator		Generator [2]
	Device Status [1]	Separator	Motor [2]
	Metering Object [15]	Disconnect Switch (GE) [9]	Reactor (for grounding) [5]
	Status Object [15]	Disconnect Switch (IEC) [9]	Resistor (for grounding) [5]
	Text Object [20]	Separator	Capacitor (polarity) [5]
	Remote Breaker (GE) [3] Remote Breaker (IEC) [3]		Capacitor (non-polarity) [5]
	Separator		Ground [10]
			Load [5]
			Separator

Figure 78: SLD Configurator Component Library

3.4.6.1 CONTROL OBJECTS

The control objects consist of selectable breakers and disconnect switches. The following figure shows the different symbols in the GE Standard style and IEC style. If the switching element is tagged, blocked, or bypassed, indicators with the letters **T**, **B**, and **By** appear on the lower right corner of the element. The breaker/switch name is displayed at the top of the object.

Note:

The displayed breaker name is configured in the setpoint **Setpoints > System > Breakers > Breaker[X] > Name**. This setpoint has a 13-character limit. The name should be kept to a minimum so that it appears properly on the SLD.

Component		Symbols	
		GE	IEC
Breaker	BKR Open		
	BKR Closed		
	BKR Bad Status		
	BKR Tagged (T) /Blocked (B) /Bypassed (By)		
Breaker (Truck)	BKR Racked Out & Open		
	BKR Racked Out & Closed		
	BKR Racked Out & Bad Status		
	BKR Racked In & Open		
	BKR Racked In & Closed		
	BKR Racked In & Bad Status		
Contactor	Contactor Open		
	Contactor Closed		
	Contactor Unknown Status		
Disconnect Switch	SW Open		
	SW Closed		
	SW Unknown Status		
	SW Intermediate		
	SW Tagged (T) /Blocked (B) /Bypassed (By)		

Figure 79: Control Object Symbols

Note:

GE symbols are color-coded ANSI symbols.

The control objects status follows the color scheme from the **Setpoints > Device > Front Panel > Display Properties > Color Scheme** setting. By default, this setting is set to *Green (open)*. If set to *Red (open)*, the status colors are reversed.

If the setting is used, the breaker symbols automatically change to the Truck CB symbols. The SLD assumes that if the Breaker Racked-In/Racked-Out input is used (anything other than *Off*), the appropriate Truck CB symbol will be used.

The following figure shows the orientation available for the control objects. The default position for the control objects is 0 degrees. Orientation in multiple directions allows for configuration of the single line diagram according to the existing drawings and ensure the correct side for the fixed/moving contacts.

Orientation	Breaker (IEC)	Breaker (GE)	Contactor (IEC)	Contactor (GE)	Switch (IEC)	Switch (GE)
0 degrees						
90 degrees						
180 degrees				0 Degrees		
270 degrees				90 Degrees		

Figure 80: Orientation for Breakers and Switches

3.4.6.2 STATUS OBJECTS

The status objects consist of digital operands. Up to 15 digital status elements can be configured per SLD page. The status object acts as an LED on the screen. If the diagram shows a gray circle, it means the assigned input is low. If it shows a red circle, the assigned input is high. The following figure shows an example of the Reclose Blocked signal in both On and Off state.

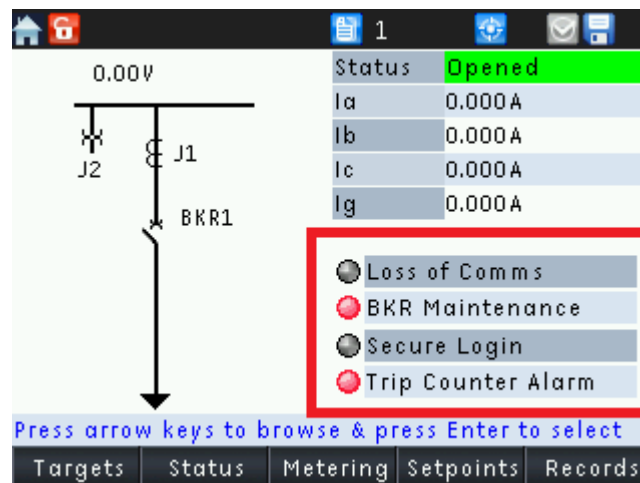


Figure 81: Reclose Blocked signal

In addition, Remote Breaker status objects are added for GE and IEC style. Remote breaker status allows monitoring of three distant breakers. These objects are not controllable and hence cannot be used for selection and operation.



3.4.6.3 METERING OBJECTS

The metering objects consist of metering elements. Up to 15 metering elements can be configured per SLD page. The metering object has an input for all the available FlexAnalog values. The units for these values are dynamically scaled as per the defaults. The following figure shows the metering element on a configured SLD.

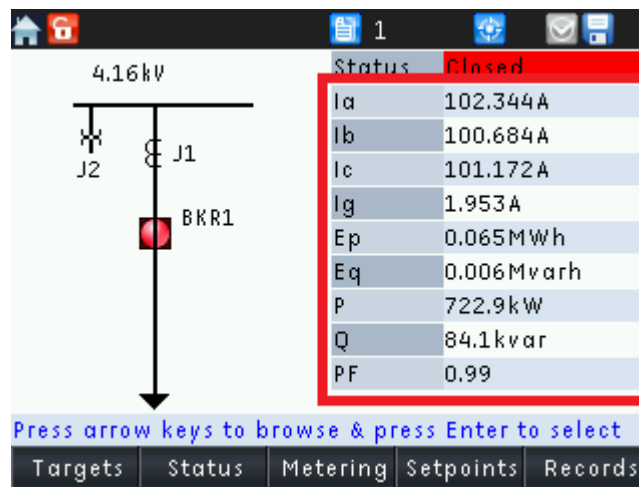


Figure 82: Metering Element on configured SLD

3.4.6.4 DEVICE STATUS OBJECT

The configurable SLD feature in the relay allows only one device status object per SLD page. The device status does not have any properties. It is simply shown as **Status: [device status]**.

3.4.6.5 STATIC OBJECTS

Static objects are used as simple bitmap images or text/drawing blocks to complete the single line diagram. There is no control associated with these static objects. The static objects consist of drawing tools, text object, and power system components.

3.4.6.6 FRONT PANEL INTERACTION

8 Series relays use the Select-Before-Operate (SBO) mechanism for local control of breakers and switches [IEC 61850-7-2]. Initially, the diagram can be browsed through all available breakers and switches by using the navigation keys. After navigation, selection must be made for the breaker or switch object by pressing the **Enter** key. After selecting the desired switch or breaker, control operations can then be carried out on the selected switch or breaker. The relay allows local opening, closing, tagging, blocking, and bypassing. Front panel control is only allowed when the relay is in Local Mode.

3.4.6.6.1 NAVIGATION

The SLD can be accessed in two ways from the front panel of the relay. The original location for the SLD pages is under **Status > Summary > SLD (Single Line Diagram) [x]**. However, a more convenient way to access an SLD page is by setting it as a default home screen at **Setpoints > Device > Front Panel > Home Screens > Home Screen1**. Pressing the home button more than once rotates through the configured home screens. If the desired SLD is set to **Home Screen 2** through **Home Screen 10**, it can be activated by pressing home button until it appears on the screen. If no home screen is configured, the default screens become active. If the default screens are disabled, **Status > Summary > Values** screen is shown.

3.4.6.6.2 BREAKER/SWITCH BROWSING AND SELECTION

While in the SLD screen, only one page is active at any point of time. If SLD1 is active, only breakers and switches on SLD1 can be operated and controlled. By default, when entering the SLD menu, the screen displays SLD1. SLD2 through SLD6 can be accessed through the navigation pushbuttons as shown in the **Active element selection with flash message** figure, found later in this section.

To browse through the control elements on the SLD page, the navigation keys can be used. On the rugged front panel, the up and down keys can be pressed for navigation and on the membrane front panel, up, down, left, and right keys can be pressed. With the rugged front panel navigation, pressing down sequentially rotates through all

the available breakers and switches on the screen. Pressing the up key rotates through in a reverse order. With the membrane front panel, the up, down, left, and right keys can navigate to the closest breaker/switch depending on the key press direction.

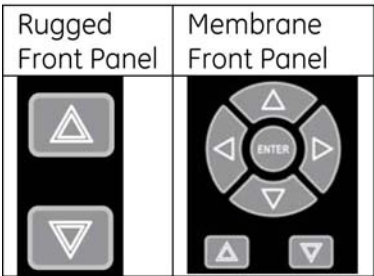


Figure 83: Navigation keys

While browsing through switches/breakers the active element is shown with a blue colored border around it. To select a breaker/switch, the browsing indicator border must be around the desired breaker or switch. The breaker or switch can then be selected by pressing the **Enter** key. As the breaker or switch is being selected, a flash message appears indicating that the breaker or switch has been selected as shown in the following figure. Once the element is selected for operation, the SLD control pushbuttons appear and the color of the highlighter will change to maroon indicating that the breaker or switch is selected. By default, the control pushbuttons are programmed for **Tag**, **Block**, and **Bypass**. For each control action, a flash message is displayed.

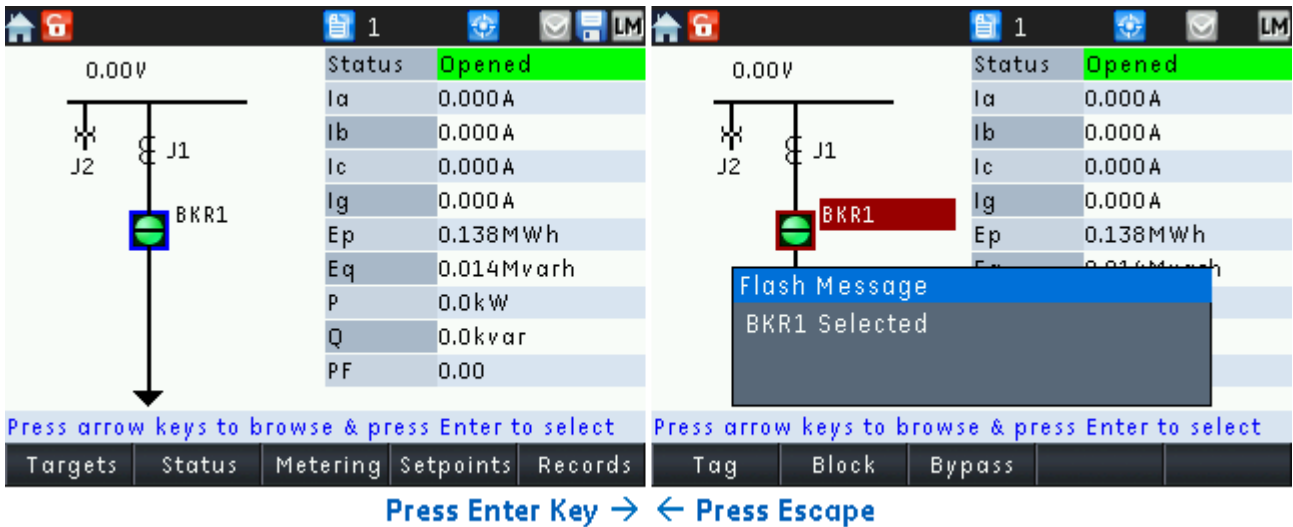


Figure 84: Active element selection with flash message

Browsing and selection is allowed only when the relay is in Local Mode and the user has security access of at least operator level. To check if the relay is in local mode, look for an **LM** symbol on the task pane at the top of the screen. Pressing navigation keys on SLD pages while in remote mode does nothing.

Control pushbuttons appearing on the SLD page are only active while a control object is selected.

The control object is deselected if you navigate to any screen other than the SLD or by pressing the **Escape** key. If no action is taken after selection, the object is automatically deselected after the Bkr/Sw Select timeout setting (**Setpoints > Control > Control Mode > Bkr/Sw Select Timeout**). Once deselected, the control pushbutton labels return to the SLD page navigation labels and the color of the box around the object changes back to blue for browsing. Pressing **Escape** once more removes the browsing highlight around the objects. If inactive during browsing for the timeout setting (**Setpoints > Device > Front Panel > Message Timeout**), the browsing highlight around the object disappears. If an object is selected, **Home** button operation is prohibited. The object must be deselected by pressing **Escape** in order for the **Home** button to function.

After upgrading from firmware versions 1.3x to 1.7x, the breaker/contactor starting/stopping operations from the front panel now follow a select-before-operate mechanism. The breaker/contactor must be first selected by browsing and pressing the **Enter** key for selection. Once selected, the function can be started or stopped with the front panel's pushbuttons.

3.4.6.6.3 CONTROL OPERATIONS

The control operations carried out through the front panel of the relay are done only in Local Mode (**Setpoints > Control > Local Control Mode > Local Mode**). Opening and closing operations can be carried out by pressing the **Open** and **Close** pushbuttons on the relay front panel. Other operations such as tagging, blocking and bypassing can be carried out by pressing the control pushbuttons that appear after the control object selection.

Note:

Remote operations are allowed for opening, closing, blocking, and bypassing. Tagging must be done locally.

It is recommended that tagging is only used for maintenance purposes. When a breaker or a switch is tagged, it cannot be bypassed although the letters **By** may appear below the element on SLD.

If breaker is selected and relay status is changed to Out-of-Service, the breaker control actions, such as tag, blocked, bypass and open/close are blocked. The breaker may remain in the selected state, but no action can be executed.

Once the selected breaker or switch is tagged, a letter **T** appears below the associated element. Similarly, for blocking, letter **B** appears and for bypassing, letters **By** appear below the associated breaker or switch as shown in the last column of the following figure. The blocking and bypassing letters also appear if the breakers/switches are blocked or bypassed remotely. These are linked to their respective breaker/switch in the SLD Configurator window so that when that breaker/switch is deleted, the letters also get deleted.

Permitted breaker/switch operations are described in the following figure when various letter indications are present under the control element.

Breaker/Switch Position	Letter Indication	Operation	Sample Indication
Open	B	Closing is blocked.	
Closed	B	Opening is blocked.	
Open	B By	Closing is blocked but bypassing is allowed. Closing is permitted.	
Closed	B By	Opening is blocked but bypassing is allowed. Opening is permitted.	
Open or Closed	T	Tagged by operator. No operation allowed.	
Open or Closed	T By	Tagged by operator. No operation allowed.	
Open or Closed	T B By	Tagged by operator. No operation allowed.	

Figure 85: Permitted operations

3.4.7 FLEXCURVE EDITOR

The FlexCurve Editor is designed to graphically view and edit the FlexCurve. The FlexCurve Editor screen is shown as follows for FlexCurves A, B, C, and D:

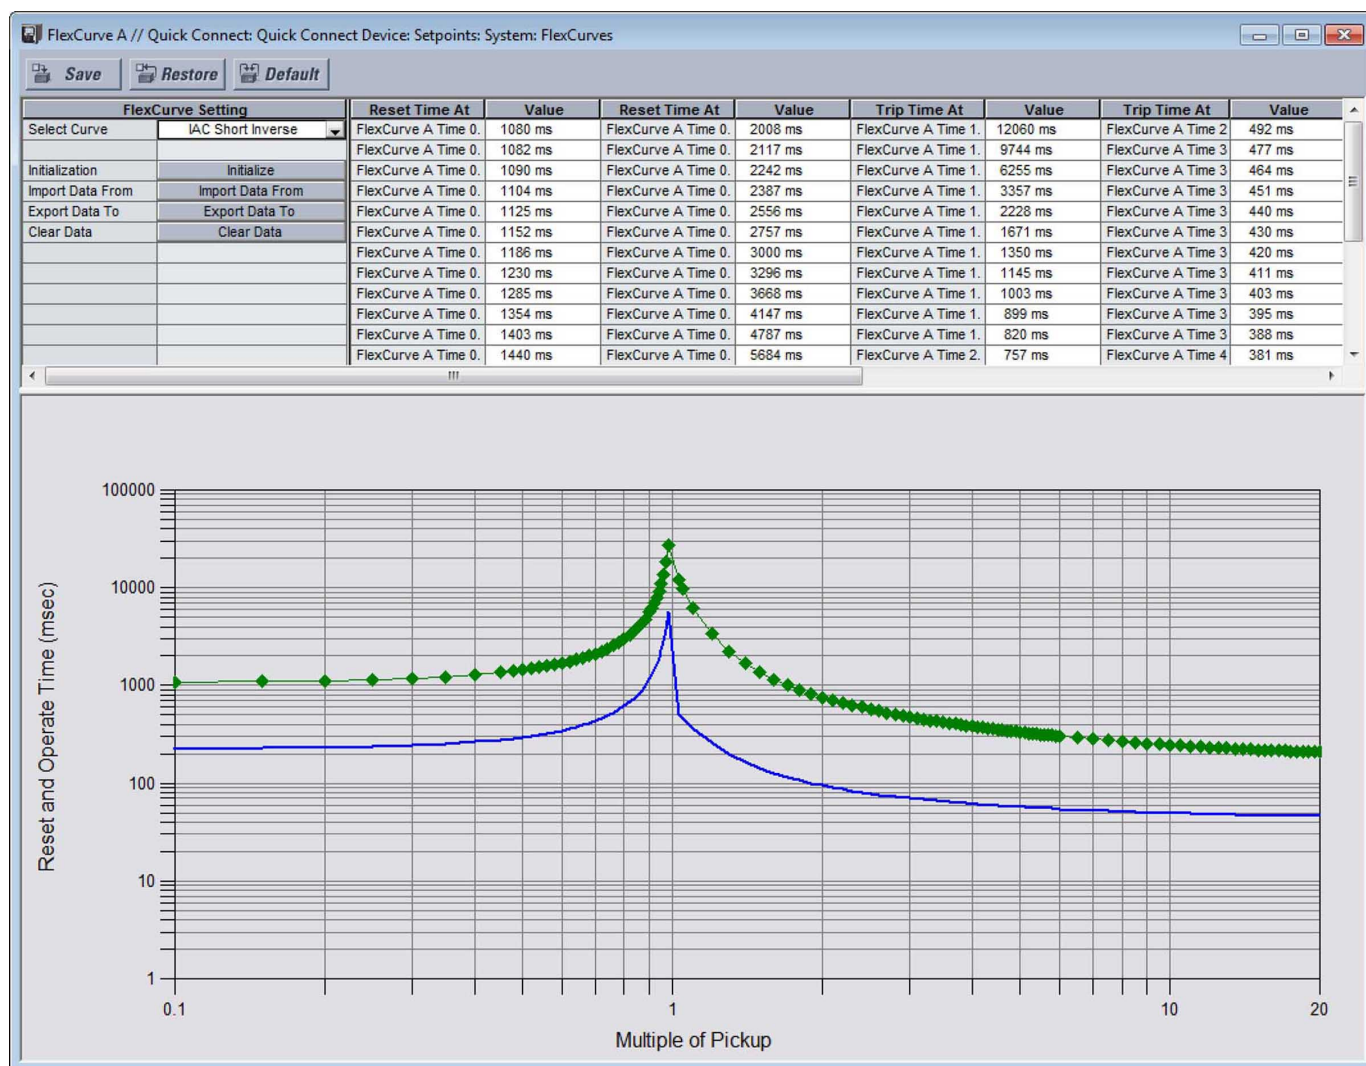


Figure 86: FlexCurve editor

- The Operate Curves are displayed, which can be edited by dragging the tips of the curves
- A Base curve can be plotted for reference, to customize the operating curve. The blue colored curve in the picture is a reference curve. It can be Extremely Inverse, Definite Time, etc.
- The Trip (Reset and Operate) Times in the tables and curves work interactively i.e., changing the table value affects the curve shape and vice versa.
- Save Configured Trip Times.
- Export Configured Trip Times to a CSV file
- Load Trip Times from a CSV File
- The screen above shows the model for viewing FlexCurves. Select **Initialize** to copy the trip times from the selected curve to the FlexCurve.

3.4.8 TRANSIENT RECORDER (WAVEFORM CAPTURE)

EnerVista D&I Setup can be used to capture waveforms (or view trace memory) from the relay at the instance of a pickup, trip, alarm, or other condition.

Note:

The COMTRADE Version used on 8 Series relays is C37.111-1999.

- With EnerVista D&I Setup running and communications established, select the **Records > Transients > Transient Records** menu item to open the Transient Recorder Viewer window.
- Click on **Trigger** to trigger a waveform capture.
- To view the captured waveforms, click on the **Launch Viewer** button. A detailed Waveform Capture window appears as shown below.
- Click on the **Save** button to save the selected waveform to the local PC. A new window appears, requesting the file name and path. One file is saved as a COMTRADE file, with the extension CFG. The other file is a DAT file, required by the COMTRADE file for proper display of waveforms.
- To view a previously saved COMTRADE file, click the **Open** button and select the corresponding COMTRADE file.

TRIGGER TIME & DATE

Displays the time and date of the Trigger.

VECTOR DISPLAY SELECT


Click here to open a new graph to display vectors.

CURSOR LINE POSITION

Indicates the cursor line position in time with respect to the beginning of the buffer.

DELTA

Indicates time difference between the two cursor lines.

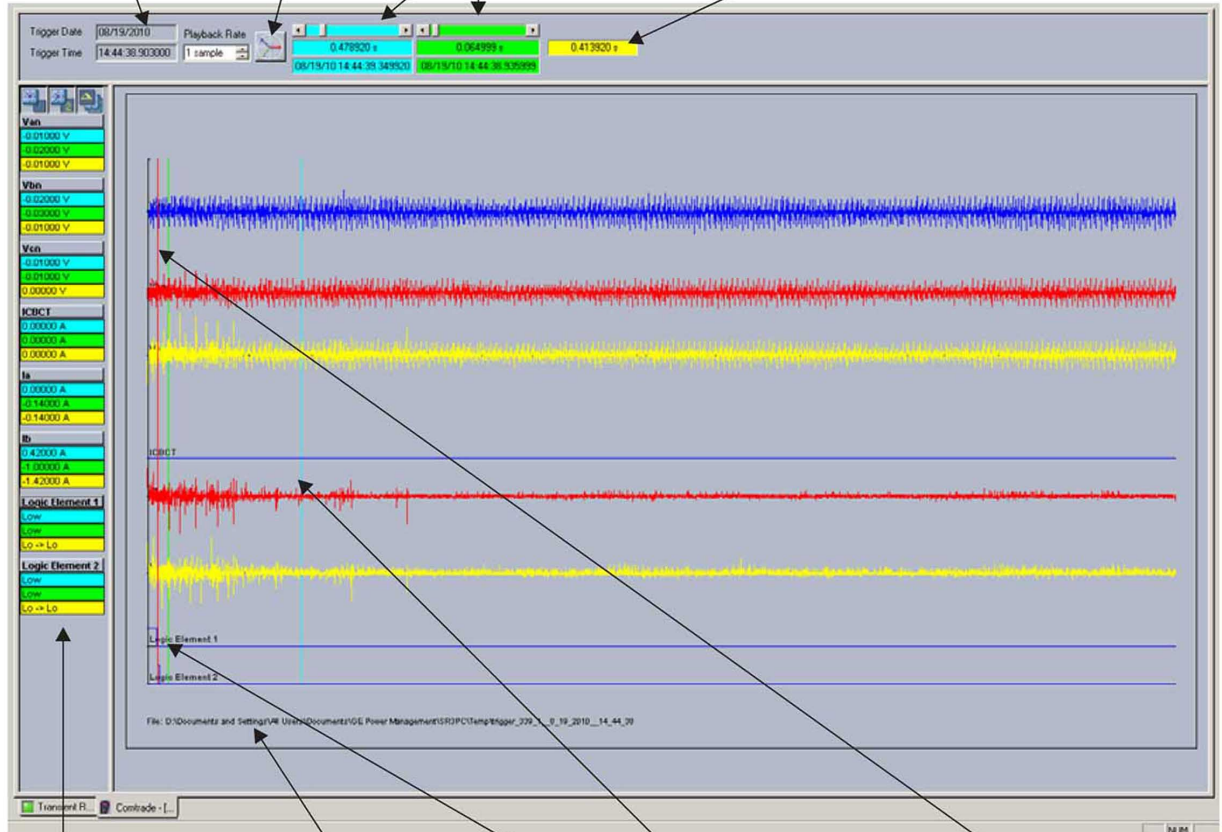

Display graph values at the corresponding cursor line. Cursor lines are identified by their colors.

FILE NAME
Indicates the file name and complete path (if saved).

CURSOR LINES
To move lines, locate the mouse pointer over the cursor line, then click and drag the cursor to the new position.


TRIGGER LINE
Indicates the point in time for the trigger.

Figure 87: Oscillography

- The red vertical line indicates the trigger point.
- The date and time of the trigger are displayed at the top left corner of the window. To match the captured waveform with the event that triggered it, make note of the time and date shown in the graph, then find the

event that matches the same time in the event recorder. The event record provides additional information on the cause and system conditions at the time of the event.

 - From the window main menu bar, press the **Preference** button



Preference Button

to open the COMTRADE Setup page, in order to change the graph attributes. Change the color of each graph as desired and select other options as required by checking the appropriate boxes. Click **OK** to store these graph attributes and to close the window. The Waveform Capture window reappears based on the selected graph attributes.

- To view a vector graph of the quantities contained in the waveform capture, press the **View Phasors** button to display the following window:

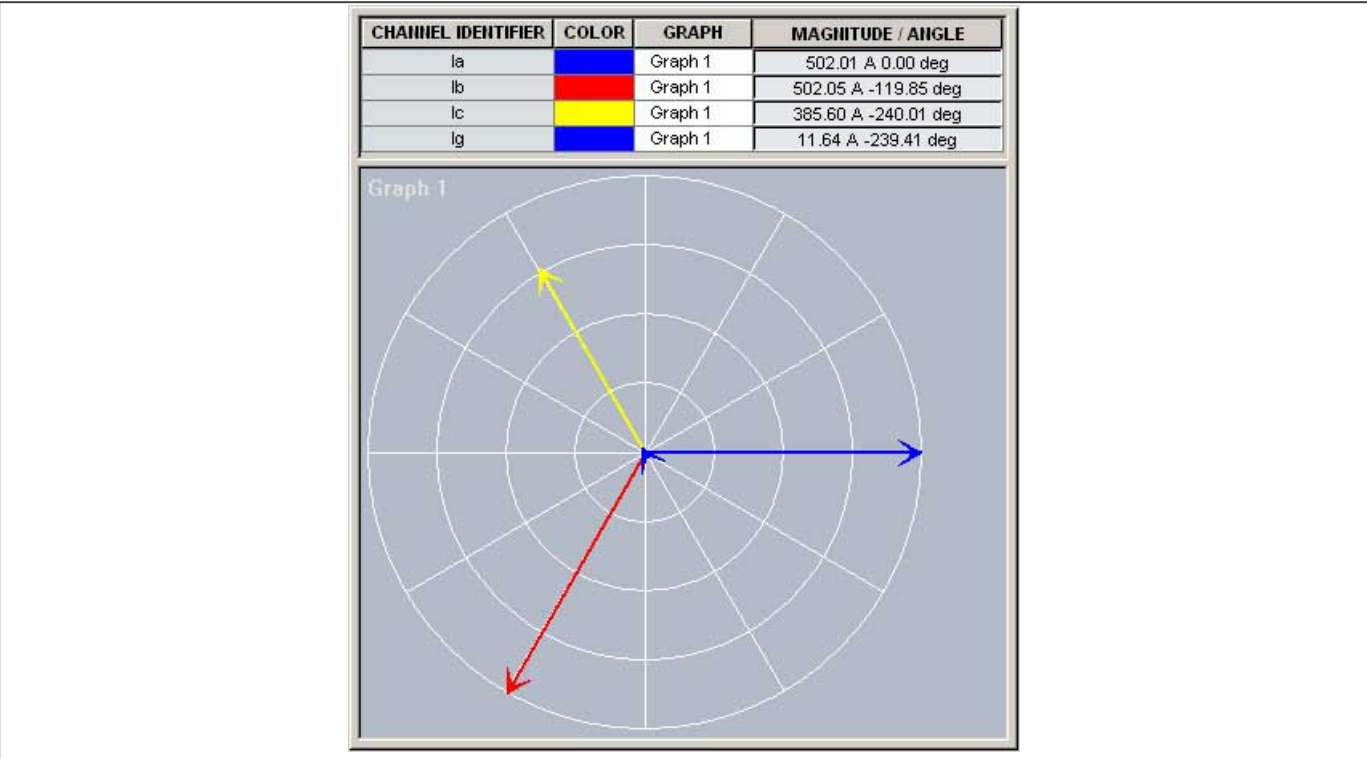


Figure 88: Vector graph

3.4.9 PROTECTION SUMMARY

Protection Summary is a single screen which holds the summarized information of different settings from Grouped Elements and Monitoring Elements.

The Protection Summary Screen allows the user to:

- view the output relay assignments for the elements
- modify the output relay assignments for the elements
- view the Function status for the elements
- navigate to the respective element screen on a button click.

With EnerVista D&I Setup running and communications established, select the **Setpoints > Protection Summary** menu item to open the Protection Summary window.

3.4.10 FLEXLOGIC FAVOURITES

With EnerVista D&I Setup version 2.70 and above, use the FlexLogic Favourites to create a customized list of FlexLogic operands that use Format Code FC142.

Select **Edit FlexLogic Favourites** from either the offline menu or the popup menu from an offline CID file to access a screen where the FlexLogic Favourite list can be modified. The FlexLogic Favourites screen includes a left tree that shows all the FlexLogic Operands available for the CID file. The right tree shows all the FlexLogic operands included in the Favourites list.

In the FlexLogic Favourites screen, press the **Smart Update** button to examine the CID file. Any FlexLogic operands associated with an enabled feature/element will be added to the FlexLogic Favourites list. Operands will never be automatically removed from the Favourites list, but can be removed manually by selecting the operand and pressing the << button. Operands can also be added to the Favourites list by selecting the operands in the left tree and pressing the >> button.

Select the check-box to use FlexLogic Favourites in any screen with a setting that is configured using the FlexLogic operand (FC142).

FlexLogic Favourites is enabled when the settings are shown in **BOLD** and the background color of the setting is brighter.

3.4.11 OFFLINE SETTINGS FILE CONVERSION

EnerVista D&I Setup supports conversion of offline settings files created in the SR Series platform. This feature allows the conversion of existing offline setting files to 8 Series files.

EnerVista D&I Setup reduces the manual effort required when moving from an older product to a newer product. The settings file conversion feature takes an existing settings file and generates a new settings file compatible with the relay specified with the order code. After the import is complete, the results are displayed in an interactive results window.

3.4.11.1 CONVERTING LEGACY FILES

EnerVista D&I Setup software version 1.6x and above supports conversion of SR 489 files above version 4.0 only to 889 settings files. For files below version 4.0x, first convert these files to version 4.0 or higher using the latest EnerVista D&I Setup 489 Setup software before doing the conversion.

The conversion can only be initialized with EnerVista D&I Setup from the Offline/New Settings File commands located in the taskbar, as follows:

1. In the menu taskbar, click on **Offline** and select the **New Settings File** item. The Create New Settings File dialog box appears, which allows for the setpoint file conversion.
2. Select the Firmware Version and Order Code option for the new setpoint file.
3. For future reference, enter some useful information in the Description box to facilitate the identification of the device and purpose for the file.
4. To select the file name and path for the new file, click the button beside the File Name box.
5. To select the SR settings file used for initialization, check the box to the left of Initialize Settings from SR Settings File.
6. To locate and select the file to convert, click the ellipsis button beside the Initialize Settings from SR Settings File box.
7. Click **OK** to begin the conversion and complete the process. Once this step is completed, the new file, with a complete path, is added to the EnerVista D&I Setup software environment.

Note:

If there are settings that are not applicable to the later model, they are ignored and will not appear in the settings list.

3.4.11.2 CONVERSION SUMMARY REPORT

At the end of the conversion process, the results are summarized in a Settings Conversion Report.

The report is found under Device Definition in the offline file window.

Note:

Print the Settings Conversion Report immediately following conversion for future reference in case the report is removed or the settings are modified from the EnerVista D&I Setup.

3.4.11.3 RESULTS WINDOW

The conversion summary results window has the following columns:

- **SettingName:** the same tree structure as in the offline window, but with status icons
- **SettingValue:** the converted value for the settings file
- **Original SettingName:** setting name of the input file
- **Original SettingValue:** setting value of the input file

Note:

All other settings available (not shown in the conversion report) in the file are set to default and must be verified before putting the relay into service.

Settings in the results window are linked to setting screens. Click in the results window to navigate to the corresponding settings window.

Status Icons

The status icons show the conversion results:

 Manual configuration required

 Successful conversion

 Value is not supported

Print Report

If desired, the conversion summary report can be printed using the File/Print command in the taskbar or it can be printed from the **GUI** print button.

Note:

Even if the report shows that a conversion has been successful (green checkbox icon), all settings must still be verified before putting the relay in service.

3.4.11.4 SELF-TEST ERRORS

The relay performs self-diagnostics at initialization (after power up), and continuously as a background task to ensure that the hardware and software are functioning correctly. There are two types of self-test warnings indicating either a minor or major problem. Minor errors indicate a problem with the relay that does not compromise protection and control functionality of the relay. Major errors indicate a problem with the relay which takes it out of service.



Caution:
Self-Test Warnings may indicate a serious problem with the relay hardware!

Upon detection of a minor problem, the relay does the following:

- Displays a detailed description of the error on the relay display as a target message
- Records the minor self-test error in the Event Recorder
- Flashes the **ALARM** LED

Upon detection of a major problem, the relay will:

- De-energize the relay assigned under setting Major Self-Test Relay if the relay is programmed for failsafe operation or energized if configured for non-failsafe operation.
- De-energize all output relays
- Turn off the **IN SERVICE** LED
- Flash the **TRIP** LED
- Assert the Self-Test Trip OP FlexLogic operand
- Display `Major Self-test error` with the error code as a target message
- Record the major self-test failure in the Event Recorder

When Alarm is selected as a function, upon detection of a major problem, the relay will:

- Flash the **ALARM** LED.
- Assert Self-Test Alarm OP FlexLogic operand.
- Display `Major Self-test error` with the error code as a target message
- Display `Major Self-test error` as a target message
- Record the major self-test failure in the Event Recorder.

Under both conditions, the targets cannot be cleared if the error is still active.

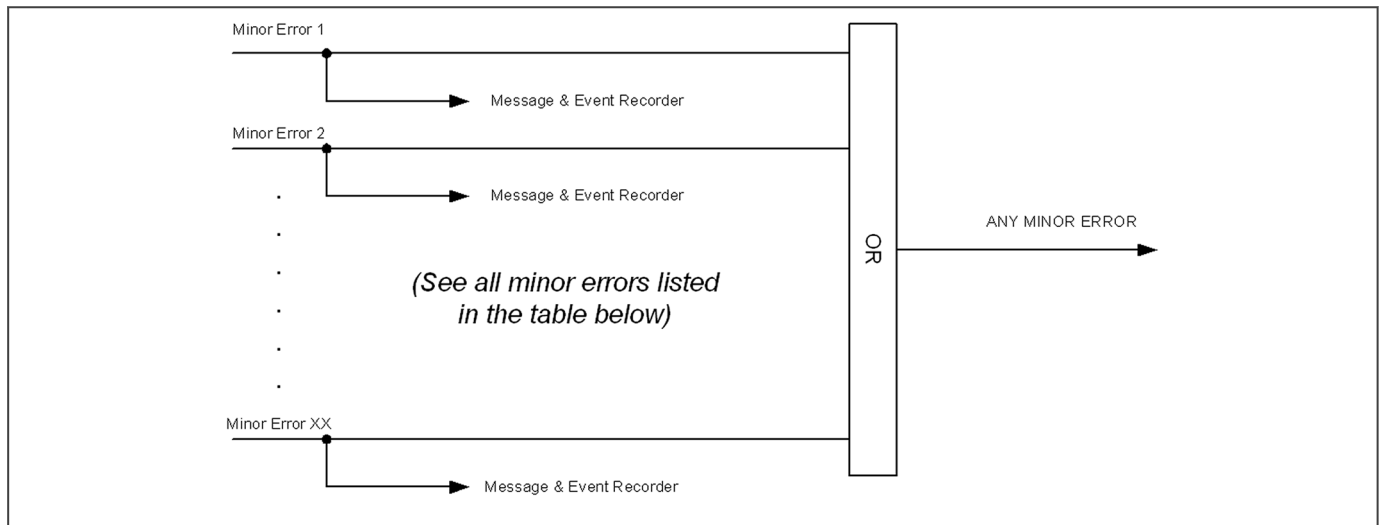


Figure 89: Minor Errors

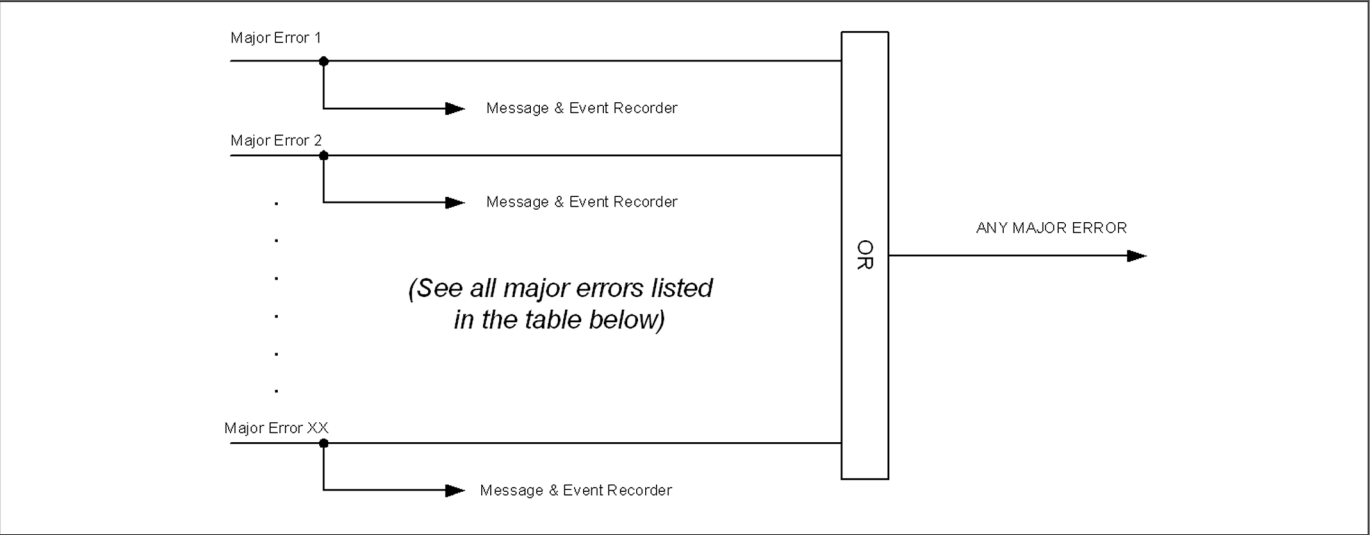


Figure 90: Major Errors

Minor self-test errors

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Order Code Error	Hardware doesn't match order code	Every 1 second	If alert doesn't self-reset then contact factory. Otherwise monitor re-occurrences as errors are detected and self-reset
CPU S/N Invalid	CPU card doesn't have valid data to match the order code.	Every 1 second	
Slot "\$" IO S/N Invalid ²	IO card located in slot \$ doesn't have valid data to match the order code.	Every 1 second	
Comms S/N Invalid	Comms card doesn't have valid data to match the order code.	Every 1 second	
CPanel S/N Invalid	Control Panel doesn't have valid data to match the order code.	Every 1 second	
PSU S/N Invalid	Power Supply Unit doesn't have valid data to match the order code.	Every 1 second	
RTC Error	The CPU cannot read the time from the real time clock	Every 1 second	
Product Serial Invalid	The product serial number doesn't match the product type	Every 1 second	
Comm Alert #1	Communication error between CPU and Comms board	Every 1 second	
Comm Alert #2		Every 1 second	
Comm Alert #3		Every 1 second	
FLASH Error	The permanent storage memory has been corrupted	Every 1 second	
SPI Error	Communication error between CPU and LEDs, Keypad or peripheral memory devices	Every 1 second	
Invalid MAC Address	MAC address is not in the product range	Every 1 second	
Calibration Error	Unit has default calibration values	Boot-up and every 1 second	
Clock Not Set	Clock has the default time	Every 1 second	Set clock to current time
WiFi Default Settings	SSID and Passphrase is the factory default	Every 1 second	Set SSID and Passphrase
Link Error Primary ³	Port 1 or Port 4 (depending on order code) is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Link Error Secondary	Port 5 is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Traffic Error Primary	Abnormally high amount of Broadcast and Uni-cast traffic on port 1 or port 4	Every 1 second	Contact site IT department to check network for malfunctioning devices
Traffic Error Secondary	Abnormally high amount of Broadcast and Uni-cast traffic on port 5	Every 1 second	Contact site IT department to check network for malfunctioning devices
Ambient Temperature >80C	The ambient temperature surrounding the product has exceeded 80C	Every 1 second	Inspect mounting enclosure for unexpected heat sources (i.e loose primary cables) and remove accordingly
High Rate Event	Abnormally high amounts of events have been generated so the relay has stopped logging to prevent further issues	Every 1 second	Ensure settings are not set close to nominal ratings. Ensure FlexLogic equations do not have impractical timing for status events
IRIG-B Failure	A bad IRIG-B input signal has been detected	Every 1 second	Ensure IRIG-B cable is connected, check cable functionality (i.e. physical damage or perform continuity test), ensure IRIG-B receiver is functioning, and check input signal level (it may be less than specification). If none of these apply, contact the factory.
<i>Note: IRIG-B is not available for the 859</i>			
CAN_1 Error		Every 1 second	
CAN_2 Error		Every 1 second	
Version Mismatch	CPU and Comms do not have the same revision on firmware	Boot-up and Every 1 second	Ensure that both the CPU and Comms FW was uploaded during the upgrade process
SelfTestFWUpdate	The updating of the firmware failed	Every 1 second	Re-try uploading firmware. If the upload doesn't work a second time contact factory
Remote CAN IO Mismatch	RMIO card detection mismatch	Every 1 second	Check RRTD connections, check if the RRTD configuration is still valid, Validate CANBUS IO.

¹ Failure is logged after the detection of 5 consecutive failures

² \$ is the slot ID (i.e. F, G, H etc.)

^{3a} Link Error Primary can take up to 12 seconds to appear

^{3b} To disable Link Error Primary target when not in use with SE order code, change IP address to 127.0.0.1

Major self-test errors

Major Self-test Error Message	Latched Target Message	Description of Problem	Frequency of Test	What to do
Relay Not Ready	No	PRODUCT SETUP INSTALLATION setting indicates relay is not in a programmed state.	On power up and whenever the PRODUCT SETUP INSTALLATION setting is altered.	Program all required settings and then set the PRODUCT SETUP INSTALLATION setting to <i>Ready</i> .
Major Self-Test (error code)	Yes	Unit hardware failure detected	Every 1 second	Contact the factory and supply the failure code as noted on the display.

The following note is applicable to all 8S products apart from the 859

Note:

When a total loss of power is present, the Critical Failure Relay (Output Relay 8) is de-energized.

3.4.11.5 SELF-TEST ERRORS

The relay performs self-diagnostics at initialization (after power up), and continuously as a background task to ensure that the hardware and software are functioning correctly. There are two types of self-test warnings indicating either a minor or major problem. Minor errors indicate a problem with the relay that does not compromise protection and control functionality of the relay. Major errors indicate a problem with the relay which takes it out of service.



Caution:
Self-Test Warnings may indicate a serious problem with the relay hardware!

Upon detection of a minor problem, the relay does the following:

- Displays a detailed description of the error on the relay display as a target message
- Records the minor self-test error in the Event Recorder
- Flashes the **ALARM** LED

Upon detection of a major problem, the relay does the following:

- De-energizes critical failure relay
- De-energizes all output relays
- Blocks protection and control elements
- Turns the **IN SERVICE** LED to red
- Flashes the **ALARM** LED
- Displays **Major Self-test error** with the error code as a target message
- Records the major self-test failure in the Event Recorder

Note:

The Critical Failure Relay (Output Relay 8) is energized when the relay is in-service, and no major error is present

Under both conditions, the targets cannot be cleared if the error is still active.

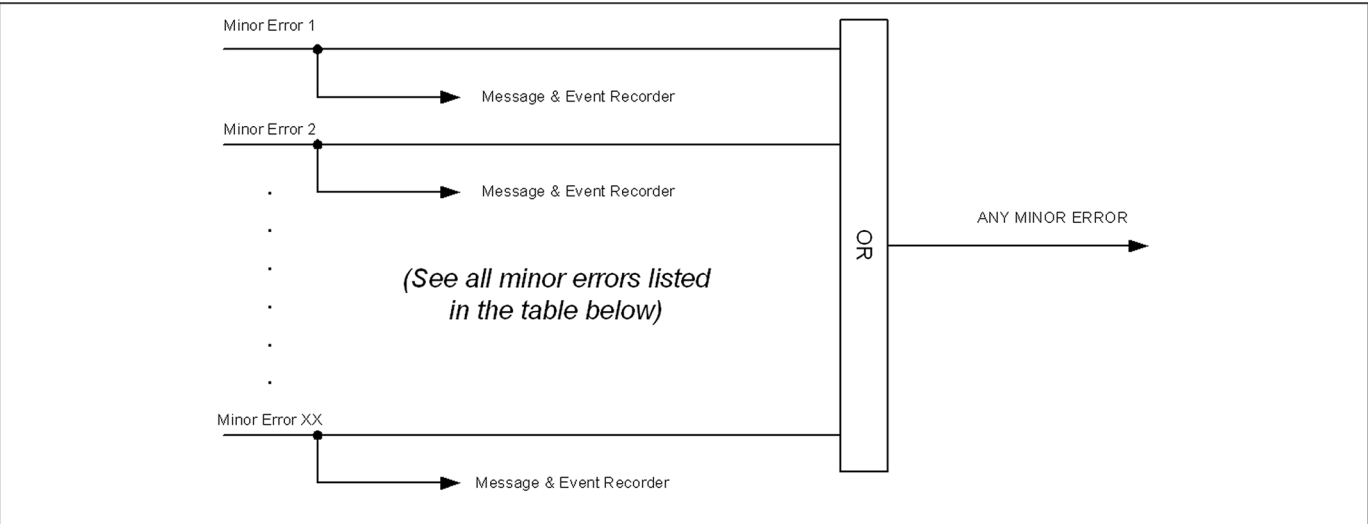


Figure 91: Minor Errors

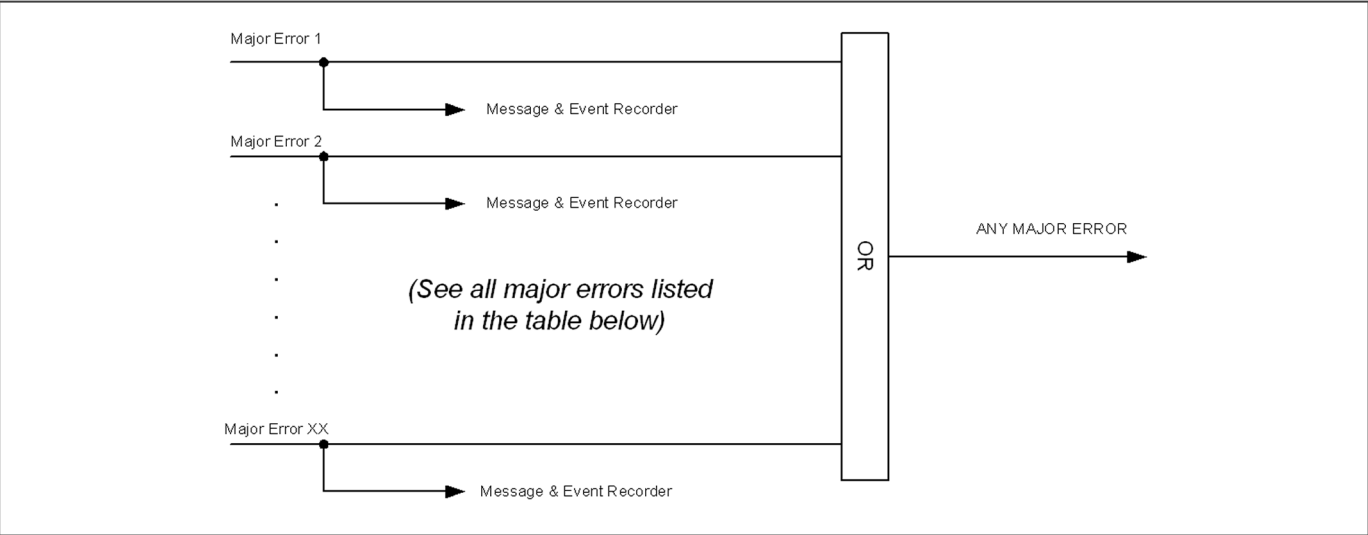


Figure 92: Major Errors

Minor self-test errors

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Order Code Error	Hardware doesn't match order code	Every 1 second	If alert doesn't self-reset then contact factory. Otherwise monitor re-occurrences as errors are detected and self-reset
CPU S/N Invalid	CPU card doesn't have valid data to match the order code.	Every 1 second	
Slot "\$" IO S/N Invalid ²	IO card located in slot \$ doesn't have valid data to match the order code.	Every 1 second	
Comms S/N Invalid	Comms card doesn't have valid data to match the order code.	Every 1 second	
CPanel S/N Invalid	Control Panel doesn't have valid data to match the order code.	Every 1 second	
PSU S/N Invalid	Power Supply Unit doesn't have valid data to match the order code.	Every 1 second	
RTC Error	The CPU cannot read the time from the real time clock	Every 1 second	
Product Serial Invalid	The product serial number doesn't match the product type	Every 1 second	
Comm Alert #1	Communication error between CPU and Comms board	Every 1 second	
Comm Alert #2		Every 1 second	
Comm Alert #3		Every 1 second	
FLASH Error	The permanent storage memory has been corrupted	Every 1 second	
SPI Error	Communication error between CPU and LEDs, Keypad or peripheral memory devices	Every 1 second	
Invalid MAC Address	MAC address is not in the product range	Every 1 second	
Calibration Error	Unit has default calibration values	Boot-up and every 1 second	
Clock Not Set	Clock has the default time	Every 1 second	Set clock to current time
IRIG-B Failure	A bad IRIG-B input signal has been detected	Every 1 second	Ensure IRIG-B cable is connected, check cable functionality (i.e. physical damage or perform continuity test), ensure IRIG-B receiver is functioning, and check input signal level (it may be less than specification). If none of these apply, contact the factory.
WiFi Default Settings	SSID and Passphrase is the factory default	Every 1 second	Set SSID and Passphrase

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Link Error Primary ³	Port 1 or Port 4 (depending on order code) is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Link Error Secondary	Port 5 is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Traffic Error Primary	Abnormally high amount of Broadcast and Uni-cast traffic on port 1 or port 4	Every 1 second	Contact site IT department to check network for malfunctioning devices
Traffic Error Secondary	Abnormally high amount of Broadcast and Uni-cast traffic on port 5	Every 1 second	Contact site IT department to check network for malfunctioning devices
Ambient Temperature >80C	The ambient temperature surrounding the product has exceeded 80C	Every 1 second	Inspect mounting enclosure for unexpected heat sources (i.e loose primary cables) and remove accordingly
High Rate Event	Abnormally high amounts of events have been generated so the relay has stopped logging to prevent further issues	Every 1 second	Ensure settings are not set close to nominal ratings. Ensure FlexLogic equations do not have impractical timing for status events
CAN_1 Error		Every 1 second	
CAN_2 Error		Every 1 second	
Version Mismatch	CPU and Comms do not have the same revision on firmware	Boot-up and Every 1 second	Ensure that both the CPU and Comms FW was uploaded during the upgrade process
SelfTestFWUpdate	The updating of the firmware failed	Every 1 second	Re-try uploading firmware. If the upload doesn't work a second time contact factory
Remote CAN IO Mismatch	RMIO card detection mismatch	Every 1 second	Check RRTD connections, check if the RRTD configuration is still valid, Validate CANBUS IO.

¹ Failure is logged after the detection of 5 consecutive failures

² \$ is the slot ID (i.e. F, G, H etc.)

^{3a} Link Error Primary can take up to 12 seconds to appear

^{3b} To disable Link Error Primary target when not in use with SE order code, change IP address to 127.0.0.1

Major self-test errors

Major Self-test Error Message	Latched Target Message	Description of Problem	Frequency of Test	What to do
Relay Not Ready	No	PRODUCT SETUP INSTALLATION setting indicates relay is not in a programmed state.	On power up and whenever the PRODUCT SETUP INSTALLATION setting is altered.	Program all required settings and then set the PRODUCT SETUP INSTALLATION setting to <i>Ready</i> .
Major Self-Test (error code)	Yes	Unit hardware failure detected	Every 1 second	Contact the factory and supply the failure code as noted on the display.

Note:

When a total loss of power is present, the Critical Failure Relay (Output Relay 8) is de-energized.

CHAPTER 4

CYBER-SECURITY

4.1 OVERVIEW

In the past, substation networks were traditionally isolated and the protocols and data formats used to transfer information between devices were often proprietary.

For these reasons, the substation environment was very secure against cyber-attacks. The terms used for this inherent type of security are:

- Security by isolation (if the substation network is not connected to the outside world, it cannot be accessed from the outside world).
- Security by obscurity (if the formats and protocols are proprietary, it is very difficult to interpret them).

The increasing sophistication of protection schemes, coupled with the advancement of technology and the desire for vendor interoperability, has resulted in standardization of networks and data interchange within substations. Today, devices within substations use standardized protocols for communication. Furthermore, substations can be interconnected with open networks, such as the internet or corporate-wide networks, which use standardized protocols for communication. This introduces a major security risk making the grid vulnerable to cyber-attacks, which could in turn lead to major electrical outages.

Clearly, there is now a need to secure communication and equipment within substation environments. This chapter describes the security measures that have been put in place for our range of Intelligent Electronic Devices (IEDs).

Note:

Cyber-security compatible devices do not enforce NERC compliance, they merely facilitate it. It is the responsibility of the user to ensure that compliance is adhered to as and when necessary.

This chapter contains the following sections:

Overview	136
The Need for Cyber-Security	137
Standards	138
Cybersecurity Implementation	146
RBAC User Management Cybersecurity Configuration Tool	160

4.2 THE NEED FOR CYBER-SECURITY

Cyber-security provides protection against unauthorized disclosure, transfer, modification, or destruction of information or information systems, whether accidental or intentional. To achieve this, there are several security requirements:

- Confidentiality (preventing unauthorized access to information)
- Integrity (preventing unauthorized modification)
- Availability/Authentication (preventing the denial of service and assuring authorized access to information)
- Non-repudiation (preventing the denial of an action that took place)
- Traceability/Detection (monitoring and logging of activity to detect intrusion and analyse incidents)

The threats to cyber-security may be unintentional (e.g. natural disasters, human error), or intentional (e.g. cyber-attacks by hackers).

Good cyber-security can be achieved with a range of measures, such as closing down vulnerability loopholes, implementing adequate security processes and procedures and providing technology to help achieve this.

Examples of vulnerabilities are:

- Indiscretions by personnel (users keep passwords on their computer)
- Bad practice (users do not change default passwords, or everyone uses the same password to access all substation equipment)
- Bypassing of controls (users turn off security measures)
- Inadequate technology (substation is not firewalled)

Examples of availability issues are:

- Equipment overload, resulting in reduced or no performance
- Expiry of a certificate preventing access to equipment

To help tackle these issues, standards organizations have produced various standards. Compliance with these standards significantly reduces the threats associated with lack of cyber-security.

4.3 STANDARDS

There are several standards, which apply to substation cyber-security. The standards currently applicable to GE Vernova's IEDs are NERC and IEEE1686.

Standard	Country	Description
NERC CIP (North American Electric Reliability Corporation)	USA	Framework for the protection of the grid critical Cyber Assets
BDEW (German Association of Energy and Water Industries)	Germany	Requirements for Secure Control and Telecommunication Systems
ANSI ISA 99	USA	ICS oriented then Relevant for EPU completing existing standard and identifying new topics such as patch management
IEEE 1686	International	International Standard for substation IED cyber-security capabilities
IEC 62351	International	Power system data and Comm. protocol
ISO/IEC 27002	International	Framework for the protection of the grid critical Cyber Assets
NIST SP800-53 (National Institute of Standards and Technology)	USA	Complete framework for SCADA SP800-82and ICS cyber-security
CPNI Guidelines (Center for the Protection of National Infrastructure)	UK	Clear and valuable good practices for Process Control and SCADA security

4.3.1 NERC COMPLIANCE

The North American Electric Reliability Corporation (NERC) created a set of standards for the protection of critical infrastructure. These are known as the CIP standards (Critical Infrastructure Protection). These were introduced to ensure the protection of 'Critical Cyber Assets', which control or have an influence on the reliability of North America's electricity generation and distribution systems.

These standards have been compulsory in the USA for several years now. Compliance auditing started in June 2007, and utilities face extremely heavy fines for non-compliance.

NERC CIP standards

CIP Standard	Description
CIP-002-1 Critical Cyber Assets	Define and document the Critical Assets and the Critical Cyber Assets
CIP-003-1 Security Management Controls	Define and document the Security Management Controls required to protect the Critical Cyber Assets
CIP-004-1 Personnel and Training	Define and Document Personnel handling and training required protecting Critical Cyber Assets
CIP-005-1 Electronic Security	Define and document logical security perimeters where Critical Cyber Assets reside. Define and document measures to control access points and monitor electronic access
CIP-006-1 Physical Security	Define and document Physical Security Perimeters within which Critical Cyber Assets reside
CIP-007-1 Systems Security Management	Define and document system test procedures, account and password management, security patch management, system vulnerability, system logging, change control and configuration required for all Critical Cyber Assets
CIP-008-1 Incident Reporting and Response Planning	Define and document procedures necessary when Cyber-security Incidents relating to Critical Cyber Assets are identified

CIP Standard	Description
CIP-009-1 Recovery Plans	Define and document Recovery plans for Critical Cyber Assets

4.3.1.1 CIP 002

CIP 002 concerns itself with the identification of:

- Critical assets, such as overhead lines and transformers
- Critical cyber assets, such as IEDs that use routable protocols to communicate outside or inside the Electronic Security Perimeter; or are accessible by dial-up

Power Utility Responsibilities	GE Vernova's Contribution
Create the list of the assets	We can help the power utilities to create this asset register automatically. We can provide audits to list the Cyber assets

4.3.1.2 CIP 003

CIP 003 requires the implementation of a cyber-security policy, with associated documentation, which demonstrates the management's commitment and ability to secure its Critical Cyber Assets.

The standard also requires change control practices whereby all entity or vendor-related changes to hardware and software components are documented and maintained.

Power Utility Responsibilities	GE Vernova's Contribution
To create a cyber-security policy	We can help the power utilities to have access control to its critical assets by providing centralized Access control. We can help the customer with its change control by providing a section in the documentation where it describes changes affecting the hardware and software.

4.3.1.3 CIP 004

CIP 004 requires that personnel with authorized cyber access or authorized physical access to Critical Cyber Assets, (including contractors and service vendors), have an appropriate level of training.

Power Utility Responsibilities	GE Vernova's Contribution
To provide appropriate training of its personnel	We can provide cyber-security training

4.3.1.4 CIP 005

CIP 005 requires the establishment of an Electronic Security Perimeter (ESP), which provides:

- The disabling of ports and services that are not required
- Permanent monitoring and access to logs (24x7x365)
- Vulnerability Assessments (yearly at a minimum)
- Documentation of Network Changes

Power Utility Responsibilities	GE Vernova's Contribution
To monitor access to the ESP To perform the vulnerability assessments To document network changes	To disable all ports not used in the IED To monitor and record all access to the IED

4.3.1.5 CIP 006

CIP 006 states that Physical Security controls, providing perimeter monitoring and logging along with robust access controls, must be implemented and documented. All cyber assets used for Physical Security are considered critical and should be treated as such:

Power Utility Responsibilities	GE Vernova's Contribution
Provide physical security controls and perimeter monitoring Ensure that people who have access to critical cyber assets don't have criminal records	GE Vernova cannot provide additional help with this aspect

4.3.1.6 CIP 007

CIP 007 covers the following points:

- Test procedures
- Ports and services
- Security patch management
- Antivirus
- Account management
- Monitoring
- An annual vulnerability assessment should be performed

Power Utility Responsibilities	GE Vernova's Contribution
To provide an incident response team and have appropriate processes in place	Test procedures, we can provide advice and help on testing Ports and services, our devices can disable unused ports and services Security patch management, we can provide assistance Antivirus, we can provide advice and assistance Account management, we can provide advice and assistance Monitoring, our equipment monitors and logs access

4.3.1.7 CIP 008

CIP 008 requires that an incident response plan be developed, including the definition of an incident response team, their responsibilities and associated procedures.

Power Utility Responsibilities	GE Vernova's Contribution
To provide an incident response team and have appropriate processes in place.	GE Vernova cannot provide additional help with this aspect.

4.3.1.8 CIP 009

CIP 009 states that a disaster recovery plan should be created and tested with annual drills.

Power Utility Responsibilities	GE Vernova's Contribution
To implement a recovery plan	To provide guidelines on recovery plans and backup/restore documentation

4.3.2 IEEE 1686-2013

IEEE 1686-2013 is an IEEE Standard for substation IEDs' cyber-security capabilities. It proposes practical and achievable mechanisms to achieve secure operations.

The following features described in this standard apply:

- Passwords are 8 characters long and can contain upper-case, lower-case, numeric and special characters.
- Passwords are never displayed or transmitted to a user.
- IED functions and features are assigned to different password levels. The assignment is fixed.
- The audit trail is recorded, listing events in the order in which they occur, held in a circular buffer.
- Records contain all defined fields from the standard and record all defined function event types where the function is supported.
- No password defeat mechanism exists. Instead a secure recovery password scheme is implemented.
- Unused ports (physical and logical) may be disabled.

4.3.3 IEC 62351

IEC 62351 is a standard developed for handling the security of IEC TC 57 series of protocols including IEC 60870-5 series, IEC 60870-6 series, IEC 61850 series, IEC 61970 series & IEC 61968 series. The different security objectives include authentication of data transfer through digital signatures, ensuring only authenticated access, prevention of eavesdropping, prevention of playback and spoofing, and intrusion detection.

The Roles described in chapter 62351-8 apply. The table below shows predefined roles, IDs and permissions assignment according to it:

VALUE	ROLE NAME (REVISION =1)	PERMISSION									
		LISTOBJECTS	READVALUES (READ)	DATASET	REPORTING	FILEREAD	FILEMNGT	CONTROL	CONFIG	SETTINGGROUP	SECURITY
<0>	VIEWER	x	C	x	C ₁						
<1>	OPERATOR	x	x	x	C ₁			x		x	
<2>	ENGINEER	x	x	x	X ₁	X ₁	X ₁		x	x	
<3>	INSTALLER	x	x	x	X ₂	X ₂			x	x	
<4>	SECADM	x	x		X ₄	X ₄	X ₄		x		x
<5>	SECAUD	x	x	x	X ₁						
<6>	RBACMNT	x	x				X ₄		x		
<7> (*1)	ADMINISTRATOR	x	x	x	x	x	x	x	x	x	x
<7, ..., 32767>	RESERVED	For future use of IEC defined roles.									
<-32768, ..., -1>	PRIVATE	Defined by external agreement. Not guaranteed to be interoperable.									

VALUE	ROLE NAME (REVISION =1)	PERMISSION									
		LISTOBJECTS	READVALUES (READ)	DATASET	REPORTING	FILEREAD	FILEMNGT	CONTROL	CONFIG	SETTINGGROUP	SECURITY

C = Conditional read access, clarification of specific data objects might be necessary (e.g., VIEWER may not access security settings, but process values)

C₁ = Conditional read access to files or filetype data

X₁ = Access to files of type data and config

X₂ = Access to files of type config and firmware (updates)

X₃ = Access to files of type audit log

X₄ = Access to files of type security (config)

(*1) ADMINISTRATOR is a LEGACY predefined role containing full permissions assignment. The ADMINISTRATOR is a pre-configured role using the <7> first available IEC RESERVED role. The role ID value is configurable in EnerVista for all roles (but the first 6 currently fixed by the standard), so the user can change the ID to another value if needed (from 7 till 32767 and from -1 till -32768).

Permissions Definition

As there is not enough granularity in the permissions to accomplish all the filters and assignments to the different roles, some new permissions have been added to the ones predefined by the standard, e.g. to differentiate the FILEMNGM, the FW Upgrade, etc.

Below is the list of permissions implemented:

Permission ID	Name	Comment
1	LISTOBJECTS	View settings names/traverse settings (except security settings)
2	READVALUES	View non security settings values, view PSL, view 61850
3	DATASET	Configure and edit 61850
4	REPORTING	View status, metering
5	FILEREAD	Read configuration file, read events reports, read waveforms reports, read fault reports, read disturbance records
6	FILEWRITE	Write configuration file, create/edit configuration project, import SCL
7	FILEMNGT	Clear records, restore defaults, export SCL, delete configuration project
8	CONTROL	Command Breaker, Reset
9	CONFIG	View non security settings, edit/configure all non-security settings, configure and Edit 61850, save settings
10	SETTINGGROUP	View non security settings, modify group control settings
11	SECURITY	View and modify security settings view, configure security, modify users and rbac
12 (*)	FILEREAD_SEC	Read sec audit log
13 (*)	FILEMNGT_SEC	Access to files of type security (config)
14 (*)	FWUPGRADE	Firmware upgrade

Note:

(*) ID's 1 to 11 are the set of permissions predefined by the standard, available for all device firmware releases. ID's 12 to 14 are new customized permissions added, available from 08A release on.

With this permissions definition the roles are defined as follow:

Legacy Roles (Basic Security)

ID	Role	Permissions
0	VIEWER	1, 2, 4, 5
1	ADMINISTRATOR	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14
2	ENGINEER	1, 2, 3, 4, 5, 6, 7, 8, 9, 10
3	OPERATOR	1, 2, 4, 5, 8, 10

Standard Roles (Advanced Security):

ID	Role	Permissions
0 (*1)	VIEWER	1, 2, 4, 5
1 (*1)	OPERATOR	1, 2, 4, 5, 8, 10
2 (*1)	ENGINEER	1, 2, 3, 4, 5, 6, 7, 9, 10
3 (*1)	INSTALLER	1, 2, 4, 5, 6, 9, 10, 14
4 (*1)	SECADM	1, 2, 3, 5, 6, 9, 11, 13
5 (*1)	SECAUD	1, 2, 4, 12
6 (*1)	RBACMNT	1, 2, 9, 13
7 (*2)	ADMINISTRATOR	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14

Note:

(*1) Role defined by the standard.

Note:

(*2) ADMINISTRATOR is a predefined role containing full permissions assignment. The ADMINISTRATOR role is pre-configured using the <7> first available IEC RESERVED role.

There are two Cybersecurity options available in the Cortec.

Basic Security where there are 4 fixed roles/users: Administrator, Engineer, Operator and Viewer.

Administrator: Has all the permissions to perform a firmware upgrade, change of parameters, change of security settings, CID read/write, read data files, issue commands, and read all the values from the device.

Engineer: Change of parameters, CID read/write, read data files, issue commands, and read values from the device.

Operator: Issue commands and read values of the device.

Viewer: This user can only read values from the device.

In Advanced Security the device has up to 20 configurable users. Each user will have a configurable username and password, and it could select one role from the standard and new user defined roles. As stated in the standard, there is the possibility to redefine new roles, adjusting the name, ID and permissions for each new defined role. There is no possibility of role combination.

For more detailed information of users and rights/permission definition see the list below:

User/Role Definition:

VIEWER (*1): Can view what objects are present within a Logical-Device by presenting the type ID of those objects.

OPERATOR (*1): An operator can view what objects and values are present within a Logical Device by presenting the type ID of those objects as well as perform control actions.

ENGINEER (*1): An engineer can view what objects and values are present within a Logical Device by presenting the type ID of those objects. Moreover, an engineer has full access to DataSets and Files and can configure the server locally or remotely.

INSTALLER (*2): An installer can view what objects and values are present within a Logical Device by presenting the type ID of those objects. Moreover, an installer can write files and can configure the server locally or remotely.

SECADM (*2): Security administrator can change subject-to-role assignments (outside the device) and role-to-right assignment (inside the device) and validity periods; change security setting such as certificates for subject authentication and access token verification.

SECAUD (*2): Security auditor can view audit logs.

RBACMNT (*2): RBAC management can change role-to-right assignment.

ADMINISTRATOR (*1): Has All read/write access.

RESERVED (*2): This user/role can be defined by the user adjusting name, ID and permissions for each new defining role.

Note:

*(*1) Roles applying to both Basic and Advanced Cybersecurity.*

Note:

*(*2) Roles only applying to Advanced Cybersecurity.*

Rights/Permissions Definition:

- **VIEW/LISTOBJECTS (*1):** Allows the subject/role to discover what objects are present within a Logical Device by presenting the type ID of those objects.
- **READ/READVALUES (*1):** Allows the subject/role to obtain all or some of the values in addition to the type and ID of objects that are present within a Logical-Device.
- **DATASET (*1):** Allows the subject/role to have full management rights for both permanent and non-permanent DataSets.
- **REPORTING (*1):** Allows a subject/role to use buffered reporting as well as un-buffered reporting.
- **FILEREAD (*1):** Allows the subject/role to have read rights for file objects.
- **FILEWRITE (*1):** Allows the subject/role to have write rights for file objects. This right includes the FILEREAD right.
- **FILEMNGT (*1):** Allows the role to transfer files to the Logical-Device, as well as delete existing files on the Logical- Device.
- **CONTROL (*1):** Allows a subject to perform control operations.
- **CONFIG (*1):** Allows a subject to locally or remotely configure certain aspects of the server.
- **SETTINGGROUP (*1):** Allows a subject to remotely configure Settings Groups.

- **SECURITY (*1):** Allows a subject/role to perform security functions at both a Server/Service Access Point and Logical-Device basis.
- **FILEREAD_SEC (*2):** Allows a subject/role to read sec audit log.
- **FILEMNGT_SEC (*2):** Allows a subject/role to access to files of type security (config).
- **FWUPGRADE (*2):** Allows a subject/role to perform firmware upgrade.

Note:

*(*1) Standard defined permissions. Available for all device firmware releases.*

Note:

*(*2) New customized permissions added. Available from 08A release on.*

4.4 CYBERSECURITY IMPLEMENTATION

GE Vernova's products have always been and will continue to be equipped with state-of-the-art security measures. Due to the ever-evolving communication technology and new threats to security, this requirement is not static. Hardware and software security measures are continuously being developed and implemented to mitigate the associated threats and risks.

This section describes the current implementation of Cybersecurity. The bulk of the implementation consists of RBAC (Role Based Access Control) Cybersecurity mode, Centralised Authentication, Remote Logging and System Hardening. The features are compliant with NERC-CIPv6 and IEEE 1686. This is valid for the release of platform software to which this manual pertains.

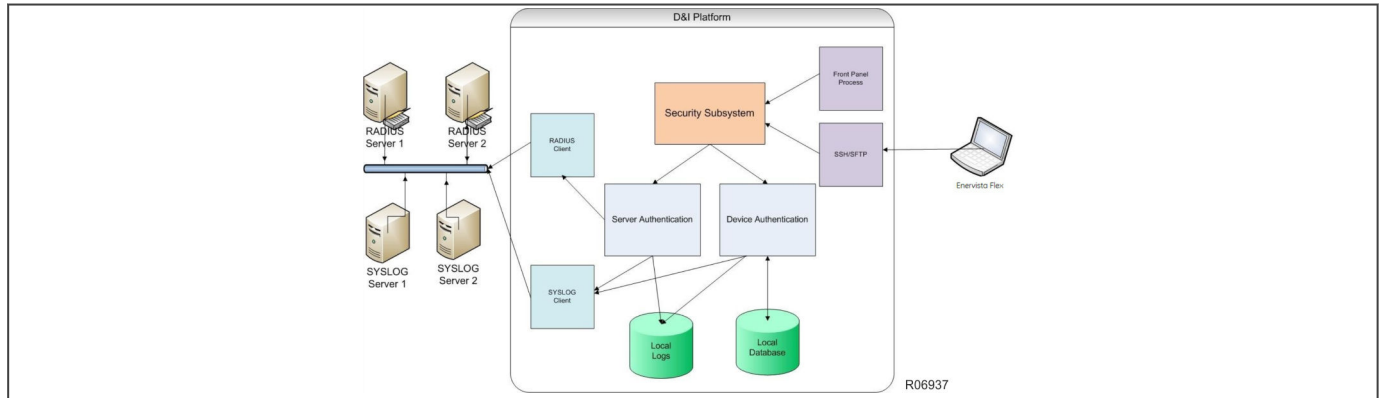


Figure 93: Cybersecurity implementation

Two levels of Cybersecurity are available:

- Basic Cybersecurity
- Advanced Cybersecurity

Basic Cybersecurity includes the following security features:

- Device/Local Authentication
- Four-level access: Fixed local users and roles (Administrator, Engineer, Operator, Viewer)
- ByPass Access
- Password complexity
- Disabling of unused physical and logical ports
- Flag for Failed authentication
- User lockout for configurable period
- Inactivity time out

Advanced security includes additional security features as follows:

- Remote/Server Authentication (supports RADIUS and Legacy LDAP)
- Local authentication with up to 20 configurable users, with configurable roles, username and passwords
- Secure encrypted communication (Modbus/SSH, SFTP)
- Syslog
- Increased product hardening

4.4.1 RBAC FUNCTIONALITY

Role based access control, RBAC, is the core of session management. Every login attempt will connect to the RBAC service and it will allow or deny the login of the user.

In Basic Security, default connection is done as Viewer, without password requirement.

In case of Advanced Security, a username and password will be required. If the login is successful, the access level will correspond to the role defined to this user.

The user cannot change its own role. So, in case of more rights needed, another different user with the corresponding role should be logged in.

The maximum number of concurrent sessions is only one for all roles, except of Viewer role, which has the limit of 5 sessions.

There is a session timeout adjustable by settings. This timeout means that open sessions are automatically closed if they remain inactive till the timer elapses. This inactivity timer defines the period that IED waits in idleness before a logged in user will be automatically logged out. This timeout is different for HMI interface and other interfaces (Serial, Ethernet, etc).

There is a lockout period adjustable by settings. For each account, when a maximum number of failed login attempts is reached, it is locked during the specified period. It doesn't matter the interface the login comes from. The account will be unlocked at the first successful login passed the lockout period.

If the Authentication Method setting is changed, the logged in user will be forced to logout.

4.4.2 BASIC SECURITY IMPLEMENTATION

4.4.2.1 DEVICE/LOCAL AUTHENTICATION

In Device Authentication mode, IED provide local RBAC Server security. The IED supports unique device usernames, and stores device passwords securely. For password encryption, PBKDF2 with SHA256 and a unique 64bits salt per user is used.

Only Administrator can change other user's passwords. All device users can change their own passwords. For password reset/recovery procedure the Administrator role will be required.

Viewer access level has no password associated and is the default connection to the device. Default password for Administrator, Engineer and Operator access levels is 0.

4.4.2.2 FOUR-LEVEL ACCESS

Basic IED Security supports 4 fixed roles: Administrator, Engineer, Operator and Viewer. The fixed local usernames match with these roles.

All the roles are password protected except the Viewer. A Viewer connection is directly logged in without entering a password using front panel or any communication port.

The different features of each role or access level are shown in the table below, for Basic Security (Legacy):

Feature		Administrator	Engineer	Operator	Viewer
Settings	Security settings	RW	R	R	R
	Change own PW	Yes	Yes	Yes	X
	Change own PW (Advanced security)	Yes	Yes	Yes	Yes
	Create New/Modify users, assign roles (advanced security OC)	RW	X	X	X
	Non-Security settings	RW	RW	R	R
	FlexLogic	RW	RW	R	R
	IEC 61850 settings	RW	RW	R	R
	Factory Settings	X	X	X	X
Commands	Date change	RW	RW	X	X
	BKR related	RW	RW	RW	X
	Clear records	RW	X	X	X
	Restore Defaults	RW	X	X	X
	RESET	W	W	W	X
File	Config File read	R	R	R	R
	Config File write	W	W	X	X
Firmware Upgrade		W	X	X	X
Upload FW		W	X	X	X
Actual Values	Status	R	R	R	R
	Metering	R	R	R	R
Reports	Events	R	R	R	R
	Waveforms	R	R	R	R
	Security Audit log	R	R	X	X

4.4.2.3 BYPASS ACCESS

This feature allows security authentication to be bypassed. Once this setting is anything other than *Disabled*, the user gets Administrator access rights on the configured interface for the period of time when the **SETPOINT ACCESS** setting is *On*. For example, if user configures **BYPASS ACCESS** as *Local*, then no user authentication is needed to access the device over USB or HMI when **SETPOINT ACCESS** is *On*. Another option is to configure **BYPASS ACCESS** as *HMI only* - enabling the user to view and modify all settings, view actual values or execute commands. The use of this feature should be restricted only in commissioning phase or when it is considered safe.

4.4.2.4 ENHANCED PASSWORD SECURITY

When Password complexity setpoint is set to 'Enabled', it allows user to configure password strings which adhere to complexity rules defined below. When the setting is configured as 'Disabled' then user can change the password to any string with max length of 20 characters.

Password complexity has the following features:

- Passwords cannot contain the user's account name or parts of the user's full name that exceed two consecutive characters.
- Must be at least 8 characters in length. Max length can be 20 ASCII char
- Passwords must contain characters from all four categories:
 - English uppercase characters (A through Z).
 - English lowercase characters (a through z).
 - Numeric: Base 10 digits (0 through 9).
 - Special non-alphanumeric (such as @,!,#,{, but not limited to only those, etc.)

The IED supports encryption for passwords. The encryption algorithm used is PBKDF2 with SHA256 and a unique 64bits salt per user, where this salt is generated randomly.

4.4.2.5 DISABLING PHYSICAL AND LOGICAL PORTS

To secure your system it is advised to harden the product (product hardening) by disabling the unused protocols and physical ports. This is the simplest method to ensure lesser security risk. The IED offers possibility to enable or disable protocols / ports based on the usage.

The IED supports the ability to turn off any of the following specific physical ports:

- front USB serial port
- rear port RS485
- Ethernet port

The IED supports the ability to turn off any of the following specific communication protocols:

- IEC 61850 (MMS and GOOSE)
- Modbus RTU
- Modbus TCP
- DNP3oE
- DNP3 Serial
- IEC 60870-5-103
- TFTP

Time synchronization protocols can be selectively enabled/disabled based on the configuration.

- IRIG-B
- SNTP

Services	Port Type	Port Numbers
Modbus TCP	TCP	502
DNP3oE	TCP	20000
	UDP	20000
IEC 61850 (MMS)	TCP	102
TFTP	UDP	69
SFTP (SSH)	TCP	22

Note:

For data protocols, service availability and detailed information, refer to the Communication Interfaces section in the Communications chapter.

4.4.2.6 NON-ENCRYPTED/CLEAR TEXT MODBUS

Due to customers' requests to use 'plain' or 'non-encrypted' Modbus communication with SCADA applications for certain scenarios, the Modbus TCP setting under the **DEVICE\COMMUNICATIONS\MODBUS** path supports the following options:

Disabled: when the **Modbus TCP** setting is set to Disabled, the port 502 will be closed.

Enabled: when the **Modbus TCP** setting is set to Enabled, the legitimate user can read or write over plain Modbus using port 502 on successful authentication.

Read-Only (*): when the **Modbus TCP** setting is set to Read-Only, the legitimate user can only read over plain Modbus using port 502.

By default, the **Modbus TCP** Setting is set to Enabled.

User with 'Administrator' role can configure this setting. Once the setting is configured to other than Disabled, the IED will allow communication with a 3rd party SCADA application in plain text Modbus over port 502. Also, for configuration change, the relay will register a security event to identify the user.

Note:

EnerVista Configuration software will always communicate with the IED over SSH using port 22.

Note:

(*) Read-Only option only available for Basic Cybersecurity Cortec options. Advanced Cybersecurity will have just Disabled and Enabled options.

4.4.2.7 SECURITY EVENTS

Security Events can be displayed in EnerVista Configuration software at RECORDS\SECURITY EVENTS path.

'securelog.csv' file stores security events information. A total of minimum 1024 events are stored in a circular buffer in non-volatile memory. Once the file reaches its max limit, oldest event Will get over-written by newest security event.

The security events information supported & stored in events file for each event contains: Priority, Version, Timestamp, Host, Process Name, Message Id, IEC@41912 ID, Text and UsrID.

The timestamp is the UTC time.

This file will be stored on the IED and will be accessible from EnerVista Configuration software for user with "Administrator" role. For Basic security, this is the only file to give security audit information to user. And this file will be useful for advanced security user if in case syslog is not configured or non-functional due to some issue.

Note:

For firmware release Multilin Agile 8A and 8-Series 4.20, the security events can be visualized at RECORDS\SECURITY EVENTS path. Security Events files (securelog) are available for download, in "csv" and "txt" format, from the Service Report zip file that can be downloaded from the Online Window of the EnerVista Configuration software, clicking on the last icon from the right, called "Service Report".

4.4.3 ADVANCED CYBERSECURITY IMPLEMENTATION

In advanced cybersecurity device authentication, all users: Viewer, Administrator, Engineer and Operator, need to enter username as well as password to get access privileges. Default advanced cybersecurity password is ChangeMe1#.

For firmware releases of Multilin Agile prior to 8A or 8 Series prior to 4.20: The Advanced Cybersecurity was built on top of Basic Cybersecurity, providing Basic Cybersecurity options plus extra properties for Advanced Cybersecurity that were not available in Basic Cybersecurity.

For firmware releases of Multilin Agile 8A or 8 Series 4.20 onwards: Basic Cybersecurity is a legacy implementation. Advanced Cybersecurity is a separate Cybersecurity implementation fully configurable following the IEC 62351-8 standard.

4.4.3.1 PERMISSIONS VS ACCESS MATRIX/PERMISSION ASSIGNMENT

In Basic (legacy) security the access is managed with a matrix table based on roles (see Four-level Access in Basic Security Implementation section).

In Advanced Security the access is managed through permission set. The following table shows the different features managed by EnerVista Configuration software, and the permissions that the user shall have in order to write or read values in the different screens:

Feature		Write Permissions ID	Read Permission ID
Settings	Security settings	11+13	11+13
	Change own PW	Current User	N.A.
	Change all PW	13	13
	Create new/modify users, assign roles (advanced security)	13	13
	Non-security settings	9	2
	Flexlogic	9	2
	IEC 61850 settings	3	2
	Settings group	10	2
Commands	Data change	9	N.A.
	BKR related	8	N.A.
	Clear records	7	N.A.
	Restore defaults	7	N.A.
	RESET	8	N.A.
File Operations	Config file	6	5
Firmware Upgrade	Firmware upgrade	14	N.A.
Actual Values	Status	N.A.	2
	Metering	N.A.	2
Reports	Events	N.A.	5
	Waveforms	N.A.	5
	Security audit logs	N.A.	12

Note:

For permissions definition see Permission Definition table in IEC 62351 section.

4.4.3.2 SERVER/REMOTE AUTHENTICATION

The Server/Remote Authentication implementation varies between earlier releases and later releases.

For firmware releases prior to Multilin Agile 8A and 8-Series 4.20: The Server Authentication Mode **uses only RADIUS**.

Where the following RADIUS servers can be set as customer's central authentication server:

- FreeRADIUS server
- Microsoft NPS server
- RSA Authentication Manager

And where the RADIUS implementation supports the following authentication protocols:

- PEAPv0 with inner authentication method MS-CHAPv2 (To support Microsoft NPS server)
- EAP-TTLS with inner authentication method PAP (To support RSA AM)
- EAP with inner authentication method GTC (To support RSA AM)
- PAP (unsecured, to support any RADIUS server)

For Multilin Agile 8A and 8-Series 4.20 firmware releases and later: The Server Authentication Mode can use either **RADIUS** or **LDAP** where:

RADIUS:

Servers used as a central authentication server can be:

- FreeRADIUS server
- RSA Authentication Manager

Implementation supports the authentication protocols:

- PEAPv0 with inner authentication method MS-CHAPv2
- EAP-TTLS with inner authentication method PAP (To support RSA AM)
- PAP (unsecured, to support any RADIUS server)

LDAP:

Servers used as a central authentication server can be:

- Microsoft Active Directory server
- OpenLDAP

Implementation supports the authentication protocols:

- TCP
- STARTTLS

4.4.3.3 SERVER/REMOTE AUTHENTICATION (RADIUS)

In Server Authentication mode, the IED authenticates the user using RADIUS server. RADIUS client resides in the product and connects to the RADIUS server.

Customer can use any of the following RADIUS servers as their central authentication server

- FreeRADIUS server
- RSA Authentication Manager

RADIUS users and passwords are created in the server (in the Active Directory). Each RADIUS user should have a password (that meets the password policy of the Active Directory) and specific role assigned to in the Active Directory.

The relay supports 2 servers in the configuration for redundancy. The IED will try each in sequence until one respond. When the first RADIUS server is unavailable, the next server in the list is tried for RADIUS Authentication.

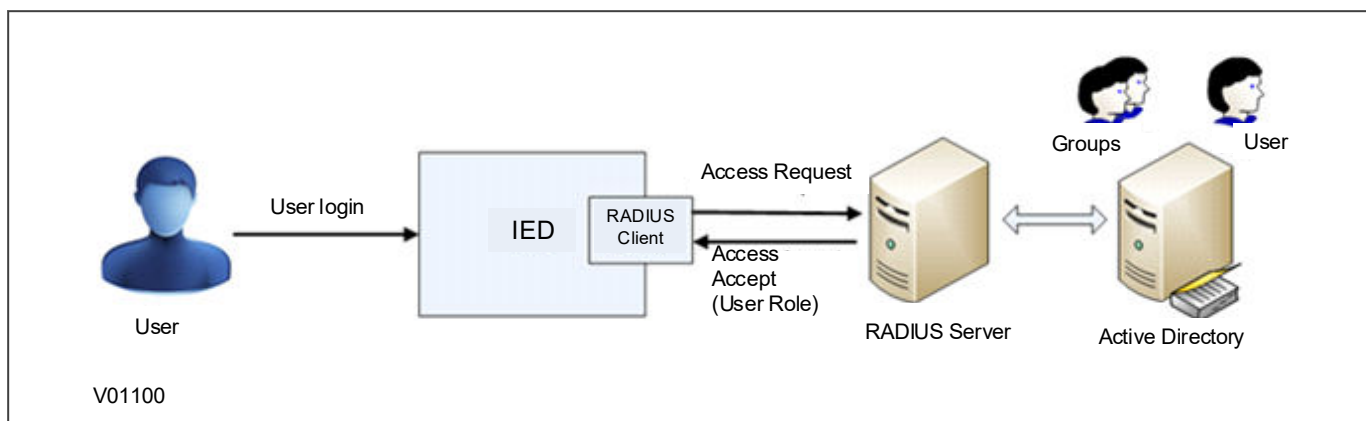


Figure 94: RADIUS server/client communication

The IED will first try the server 1 up to the configured number of retries leaving request timeout between each request. After this point, if it still does not have a valid answer from server 1, it switches to server 2 and repeats for up to the number of configured retries again. If it maxes out on retries on the second server, it gives up entirely on Server Authentication and fallback to device authentication (Only if Authentication Method Server and Device is selected). A "RADIUS Server unavailable" security event is also logged under this condition.

IED will authenticate and authorize RADIUS users using the following authentication stack:

- Primary Radius if enabled (stop on invalid credential failure, continue all other failures)
- Secondary Radius if enabled (stop on invalid credential failure, continue all other failures) The RADIUS implementation supports the following authentication protocols:
 - PEAPv0 with inner authentication method MS-CHAPv2 (To support Microsoft NPS server)
 - EAP-TTLS with inner authentication method PAP (To support RSA AM)
 - PAP (unsecured, to support any RADIUS server)

The RADIUS implementation will query the Role ID vendor attribute and establish the logged in user security context with that role.

In case of Server Authentication mode but if the RADIUS server is not operational, IED will try Device Authentication.

Note:

For releases Multilin Agile 8A and 8-Series 4.20 and later, the default security settings are different to releases Multilin Agile 6A and 8-Series 4.10 and earlier, (e.g., RADIUS Port Prim and Sec settings in Multilin Agile 8A and 8-Series 4.20 releases are 2083, whereas in Multilin Agile 6A and 8-Series 4.10 they are 1812). Check the Multilin Agile 8A and 8-Series 4.20 default values set in your device and update them to the value needed for your security configuration.

4.4.3.4 SERVER/REMOTE AUTHENTICATION (LEGACY LDAP PULL MODEL)

The relay supports Legacy LDAP Pull Model. The PULL model with LDAP is explained in the IEC 62351-8 section.

In legacy projects will an LDAP repository (e.g., Windows Active Directory), RBAC information is limited to roles, and they are returned in a simple LDAP response after successful authentication of the user. The relay implements this legacy usage of LDAP.

RBAC and Legacy LDAP

In the RBAC model, users are assigned to roles through which they acquire permissions. A mapping between these generic permissions and device-specific actions is used to determine if a user has the right to perform a given action on a resource (object).

The RBAC data that changes more frequently is stored outside the device in an identity provider repository which is the LDAP server in this case. This data includes user credentials, roles and associations between users and roles.

The table below explains the RBAC data versus LDAP data representation:

RBAC Data	LDAP Data
subject (user)	user
password	password
role	group
role-user association	membership (of a user in a group)

Communication Protocols

The implementation of LDAP supports two protocols: TCP and TCP over TLS, and For TCP over TLS supports STARTTLS.

TLSv 1.2 and above are supported. TLS versions below 1.2 are not supported.

LDAP Query and Access Token

For an already authenticated user, LDAP returns a token containing IEC 62351-8 groups that the user is a member of upon request (LDAP search request).

For better performance (faster queries) and to forge the correct LDAP query, the following input is required:

- **users OU:** The organizational unit where users reside. It is assumed that even in an existing LDAP server like Active Directory with a large number of users, users all reside in the same organizational unit.
- **roles OU:** The organizational unit where groups reside. Again, it is assumed that roles reside in one OU dedicated to this purpose.
- **base DN:** Ideally the nearest node to the above OUs that is also a direct or indirect parent of both. In fact, this value is used to limit the search area for user-group memberships. Consequently, both users and roles OU must be part of this domain.

The following figure shows an example LDAP tree:

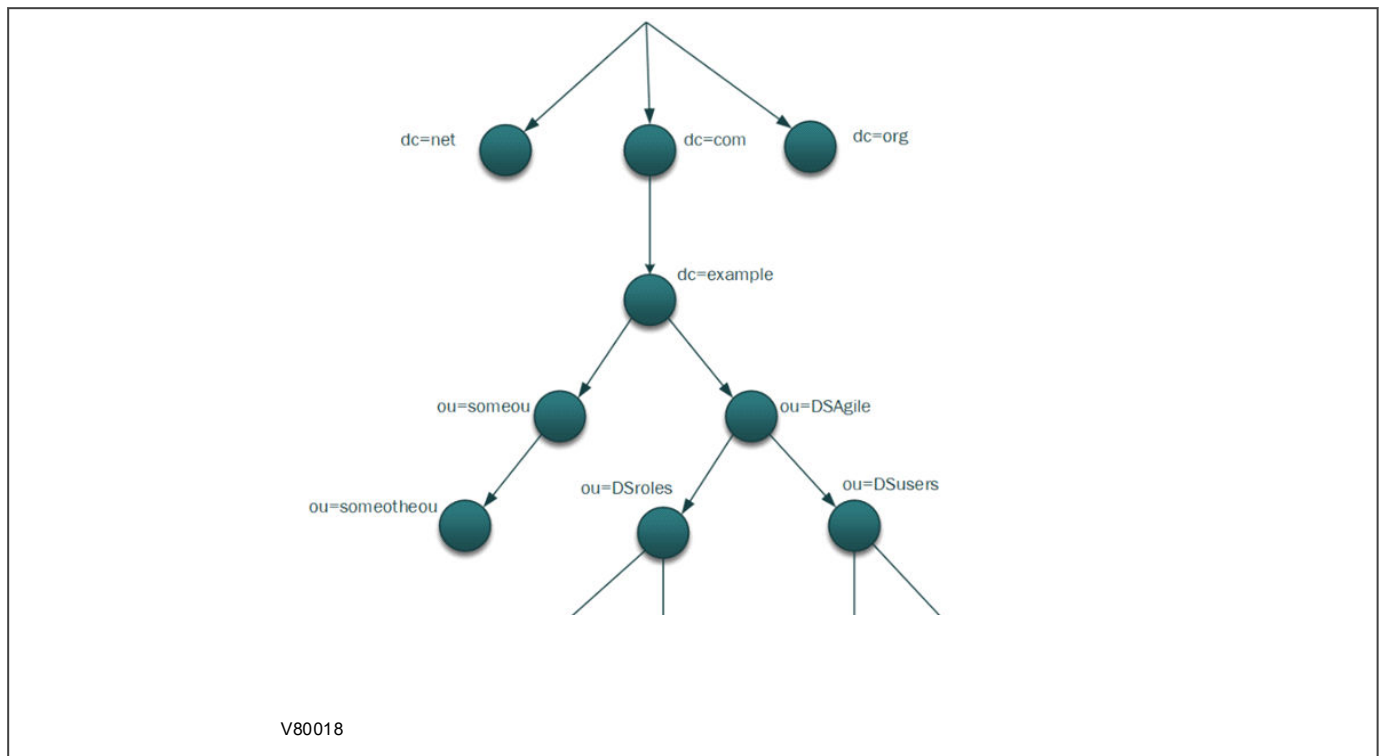


Figure 95: LDAP tree example

For the data structure shown above, the following shall be provided:

- **user OU:** ou=DSusers,ou=DSAgile,dc=example, dc=com
- **roles OU:** ou=DSroles,ou=DSAgile,dc=example, dc=com
- **based DN:** ou=DSAgile,dc=example,dc=com

Note:

For the base DN, we can also provide dc=example, dc=com but it will result in lower performance as the search area will be expanded unnecessarily.

Note:

In EnerVista configuration software user DN, roles DN and Based DN are to be provided for LDAP configuration. DN provided the full path, where OU provides the local path.

Configuration

The LDAP client in the device is configured using the "RBAC UserManagement" configuration tool embedded in the EnerVista configuration tool. For more information See LDAP configuration in the EnerVista configuration tool chapter.

Main and Backup Servers

Up to two LDAP servers can be defined. They will be called main and backup servers respectively. The main server is mandatory, and the backup server is optional.

At initialization, the main server is set as the working server.

If the main server becomes unavailable:

- The backup server is set as the working server.
- When the main server is up again, it will become the working server always taking precedence over the backup server.
- If the backup server also becomes inaccessible, the device will switch to local fallback mode.
- When the backup server is up again, it will become the working server and it will switch back to the remote mode, e.g. Legacy LDAP.

Summary:

- The main server always takes precedence over the backup server.
- Local fallback happens only when both servers are down.

An LDAP server can be considered down for a variety of reasons such as:

- It cannot be reached due to network issues or hardware issues.
- A secure TLS tunnel cannot be established due to a certificate issue, e.g., missing, invalid or revoked certificate, when communication protocol is set to StartTLS.

4.4.4 UNIQUE CONFIGURABLE USERNAMES

In 'Advanced Security', the user can configure up to 20 configurable user accounts. As part of this, user can configure a Username (length can be up to 20 ASCII char), Password for the username (in compliance with the Password complexity) and assign a supported user role (range: Administrator, Engineer, Operator, Viewer, any other role configured by the user).

The 'Administrator' is eligible to configure various accounts and modify passwords for all available accounts. Non-Admin users can only modify their own account password.

It is recommended to have more than one 'Administrator' account.

4.4.5 SECURE ENCRYPTED COMMUNICATION

4.4.5.1 MODBUS/SSH

Secure Shell (SSH) protocol provides a secure channel over an unsecured network by using a client-server architecture. The SSH server reside in the IED. It securely encrypts the Modbus commands and data between the Toolsuite and itself using port forwarding.

SSH architecture is described in RFC4251 and is composed of three components:

- The transport Layer protocol (SSH-TRANS) – RFC 4253
- The User Authentication Protocol (SSH-USERAUTH) – RFC 4252
- The Connection Protocol (SSH-CONNECT) – RFC 4254

The port forwarding feature is available only on TCP/IP frames. UDP is not supported. The SSH server on the product runs on port 22.

It supports the Encryption Ciphers: RSA 2048, AES-128-CBC or AES-128-GCM, HMAC-SHA-256.

The SSH server has a timeout for authentication and disconnect if the authentication has not been accepted within the timeout period.

4.4.5.2 SFTP

SFTP (SSH File Transfer Protocol) is the file transfer protocol used with SSHv2. Provides secure file access, file transfer, and file management.

The SFTP commands will be limited for a given period of time to avoid DOS attacks and also implement role-based access to the file.

4.4.6 SYSLOG

The IED supports security event reporting through the Syslog protocol for supporting Security Information Event Management (SIEM) systems for centralized cyber security Monitoring over UDP and TCP protocols.

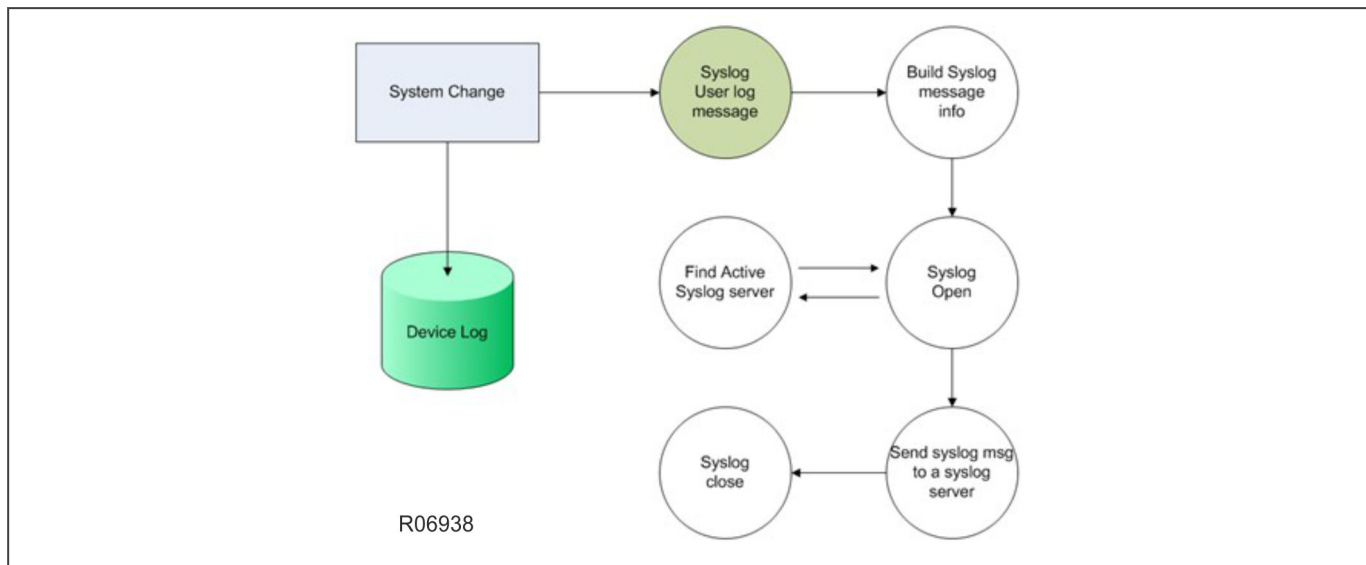


Figure 96: Syslog implementation

2 Syslog servers are supported in the configuration for redundancy. The IED will try each in sequence until one respond.

The IED logs to a remote syslog server:

- User log events, whether successful or unsuccessful
- Error log events
- Kernel error log events

Syslog Events

Mnemonic	LogType	IEC version	Severity	Cyber Security Event Numerical Event Identifier (ID)	Text (Single Space Between Each Consecutive Words)	Reference and Comments
LOGIN_OK	IEC 62351-14	1	notice	IEC 62351-14:1	Log-in successful	[IEEE 1686] specifies event logging for user successful login. In general, [IEC 62443-4-2] requires audit logs for access control.
LOGIN_OK_PW_EXPIRED	IEC 62351-14	1	notice	IEC 62351-14:2	Password expired, Log-in successful	[NERC-CIP-007-5] requires security policy. In case the entity local security policy allows a user to still login in, the course of its password expiry such as for handling a critical emergency situation, then this event would be useful. In general, [IEC 62443-4-2] requires audit logs for access control.
LOGIN_FAIL_WRONG_CR	IEC 62351-14	1	notice	IEC 62351-14:3	Log-in failed - wrong credentials	[NERC-CIP-007-5] requires cyber security respective logging for both successful and failed user logins. In general, [IEC 62443-4-2] requires audit logs for access control.
LOGIN_FAIL_3_TIMES	IEC 62351-14	1	alarm	IEC 62351-14:5	Log-in failed 3 times	[IEEE 1686] Although [IEEE 1686] mentions to log an event after 3 unsuccessful access attempts, the earlier this anomaly is logged the better cyber secured an entity can be.

Mnemonic	LogType	IEC version	Severity	Cyber Security Event Numerical Event Identifier (ID)	Text (Single Space Between Each Consecutive Words)	Reference and Comments
LOGIN_FAIL_SESSIONS_LIMIT	IEC 62351-14	1	alarm	IEC 62351-14:6	Log-in failed too many user sessions	[IEEE 1686] [NERC-CIP-007-5] requires cyber security respective logging for both successful and failed user logins. In general, [IEC 62443-4-2] requires audit logs for access control.
LOCK_USER_WRONG_CR	IEC 62351-14	1	alarm	IEC 62351-14:7	User locked - wrong credentials	[NERC-CIP-007-6] recommends limiting the number of unsuccessful access attempts and suggests measures for account lockout. In case the entity local security policy restricts its access to a user for a certain duration of time due to repeated certain failed number of logins attempts from that user, then it is necessary to generate a corresponding event. This type of event improves the security of an entity by reducing the brute force attack surface from an attacker.
LOGOUT_USER	IEC 62351-14	1	notice	IEC 62351-14:8	Log-out (user logged out)	[IEEE 1686] specifies event logging for user initiated log out.
LOGOUT_TIMEOUT	IEC 62351-14	1	notice	IEC 62351-14:9	Log-out by user inactivity (timeout)	[IEEE 1686] specifies event logging for user when the user is inactive after logging in for a certain duration of time.
SW_UPDATE_OK	IEC 62351-14	1	notice	IEC 62351-14:14	Software update was successful	[IEEE 1686] requires audit logging for firmware related aspects. A software is generic that also includes firmware.
SW_UPDATE_FAIL	IEC 62351-14	1	alarm	IEC 62351-14:15	Software update failed	
SYSLOG_EVENT_SETTING_CHANGE	IEC 62351-14	1	alarm	IEC 62351-14:1	Setting change	'Setting change'. An event to indicate setting change(s). Origin: Username and IP address.
SYSLOG_EVENT_CLEAR_EVENT_RECORDS	IEC 62351-14	1	notice	IEC62351-14:1	Clear events	'Clear events command'. Clear event records command was issued. Origin: Username and IP address.
SYSLOG_EVENT_CLEAR_TRANSIENT_RECORDS	IEC 62351-14	1	notice	IEC62351-14:1	Clear transient records	'Clear transient records command'. Clear transient records command was issued. Origin: Username and IP address.
SYSLOG_EVENT_MODBUSTCP_ENABLED	IEC 62351-14	1	alarm	IEC62351-14:1	Modbus TCP enabled	'ModbusTCP Enabled'. Port 502 has been opened for Read/ Write.
SYSLOG_EVENT_MODBUSTCP_DISABLED	IEC 62351-14	1	alarm	IEC62351-14:1	Modbus TCP disabled	'ModbusTCP Disabled'. Port 502 closed
SYSLOG_EVENT_MODBUSTCP_READONLY	IEC 62351-14	1	alarm	IEC62351-14:1	Modbus TCP read only	'ModbusTCP ReadOnly'. Port 502 has been opened for Read Only operations.
SYSLOG_EVENT_BYPASS_ACCESS_ENABLED	IEC 62351-14	1	alarm	IEC62351-14:1	ByPass access enabled	'Bypass Access activated'. Bypass access has been activated.
SYSLOG_EVENT_BYPASS_ACCESS_DISABLED	IEC 62351-14	1	alarm	IEC62351-14:1	ByPass access disabled	'Bypass Access deactivated'. Bypass access has been deactivated.
	IEC 62351-14	1	notice	IEC62351-14:1 [IEC@41912 ID="2910:6"]	Configuration update has failed	Couldn't update configuration from given file. INVALID_CONFIGURATION_XML" UsrID="Application
	IEC62351-14	1	notice	IEC62351-14:1 [IEC@41912 ID="2910:8"]	Application configuration is valid	

Note:

For release Multilin Agile 8A and 8-Series 4.20 and later, forward, clear events, clear transient records syslog events are available for the user. FlexLogic operands are not available.

For all firmware releases, bypass access disabled, and bypass access enabled syslog events are available for the user. FlexLogic operands are not available.

4.4.7 INCREASED PRODUCT HARDENING

In Advanced security, the IED supports the ability to turn off the added features in encrypted communication. SSH and SFTP protocols on port 22 can be disabled.

4.4.7.1 ADDITIONAL FEATURES

The Advanced security option provides the properties listed below.

4.4.8 LOST PASSWORD

The relays allow modification of all user account passwords by user with “Administrator” privileges. Also, non-Admin users can update their own passwords.

For 'Advanced Security', it is recommended to have more than one user with 'Administrator' role. This will help in case 'Administrator' password is lost. Other local 'Administrator' account or Remote authentication user 'Administrator' can modify the password for the 'Administrator' whose password is lost.

If Remote authentication server is not configured or is unreachable, and if there is a single 'Administrator' configured on IED for Local authentication, then the only way to reset 'Administrator' password is to execute 'Service command' **SETPPOINTS\DEVICE\INSTALLATION** path on HMI. This action will default passwords for all accounts.

To default passwords for all accounts, access IED from HMI as another role. Go to Settings -> Product setup -> Install: Screen will have option to enter 'Service command'. User can enter the command to reset passwords for all accounts.

Please, contact GE Vernova customer support to get the code to perform this action.

4.4.9 LOADING FACTORY CONFIGURATION

User needs to login as 'Administrator'. Go to Security screen and then 'Restore Defaults' can be set to 'Yes'.

4.4.10 ADDITIONAL FEATURES

In addition to all the Basic security features, the Advanced security option provides the properties listed below.

4.4.10.1 LOST PASSWORD

Multilin Agile IEDs allow modification of all user account passwords by user with “Administrator” privileges. Also, non-Admin users can update their own passwords.

For 'Advanced Security', it is recommended to have more than one user with 'Administrator' role. This will help in case 'Administrator' password is lost. Other local 'Administrator' account or Remote authentication user 'Administrator' can modify the password for the 'Administrator' whose password is lost.

If Remote authentication server is not configured or is unreachable, and if there is a single 'Administrator' configured on IED for Local authentication, then the only way to reset 'Administrator' password is to execute command from HMI. This action will default passwords for all accounts.

Access IED from HMI as another role. Go to Settings -> Product setup -> Install: Screen will have option to enter 'Service command'. User can enter the command to reset passwords for all accounts.

Please, contact GE customer support to get the code and perform this action.

4.4.10.2 LOADING FACTORY CONFIGURATION

User needs to login as 'Administrator'. Go to Security screen and then 'Restore Defaults' can be set to 'Yes'.

4.5 RBAC USER MANAGEMENT CYBERSECURITY CONFIGURATION TOOL

This section describes the "RBAC UserManagement" configuration tool used to configure Cybersecurity.

For Multilin Agile 8A release and later: The Cybersecurity configuration was done fully on Modbus settings placed at **SETPOINTS\DEVICE\SECURITY** path. See the figures below for more detail.

For firmware releases prior to Multilin Agile 8A: The Cybersecurity configuration is done partially using Modbus settings placed at **SETPOINTS\DEVICE\SECURITY** path, plus the use of the RBAC UserManagement Cybersecurity configuration tool through EnerVista software.

The "RBAC UserManagement" Cybersecurity configuration tool can be found at EnerVista configuration tool under Setpoints, this is at **SETPOINTS\RBAC USERMANAGEMENT** path. RBAC UserManagement is only accessible online when communicating with the device. The Modbus settings available at **SETPOINTS\DEVICE\SECURITY\SECURITY CONFIG** path, such as Bypass Access, Acc Timeout HMI, Pswd Complexity, Factory Service, Require PW for Reset Key, Require PW for D/T Change, Require PW for Control, are both available in the offline and online mode of EnerVista and can also be changed through the HMI menus.

Note:

The default security settings are different for later releases.

Note:

EnerVista Software configuration tool file conversion will not convert Cybersecurity settings from Multilin Agile 6A - 8A and 8-Series 4.10 - 4.20. The Cybersecurity settings for Multilin Agile 8A and 8-Series 4.20 should be entered directly on the device.

4.5.1 CYBERSECURITY MODBUS SETTINGS CONFIGURATION

For Multilin Agile 8A and 8-Series 4.20 the Modbus Cybersecurity settings are placed at **SETPOINTS\DEVICE\SECURITY\SECURITY CONFIG** path. All Modbus settings are the same for Basic and Advanced Cybersecurity, but the **Bypass PW for RC** setting is only available for Basic.

See the list of Modbus Cybersecurity settings below:

Setting Name	Default Value	Basic/Advanced
Factory Service	Disabled	Disabled
Restore Defaults	No	No
Acc Timeout HMI	5 min	5 min
Pswd Complexity	Enabled	Enabled
Bypass Access	Disabled	Disabled
Require PW for Reset Key	Enabled	Enabled
Require PW for D/T Change	Enabled	Enabled
Require PW for Control	Enabled	Enabled
Bypass PW For RC	Off	Off

4.5.1.1 CYBERSECURITY NON-MODBUS SETTINGS CONFIGURATION

For Multilin Agile 8A and 8-Series 4.20 the non-Modbus Cybersecurity settings can be configured when connecting online to the device through the EnerVista configuration software, using the **Rback UserManagement** configuration tool at **SETPOINTS\RBAC USERMANAGEMENT** path.

Below is an example of **RBAC UserManagement** screens for Cybersecurity configuration, for Users and Roles, Security Settings and Syslog Configuration.

4.5.1.2 USER MANAGEMENT CONFIGURATION

The **USER MANAGEMENT** screen initial screen is similar for Basic and Advanced security. The difference is that for Basic security the 4 fixed available users/roles can be used (Viewer, Administrator, Engineer and Operator) and for Advanced Cybersecurity up to 20 users can be created and managed.

Basic Security

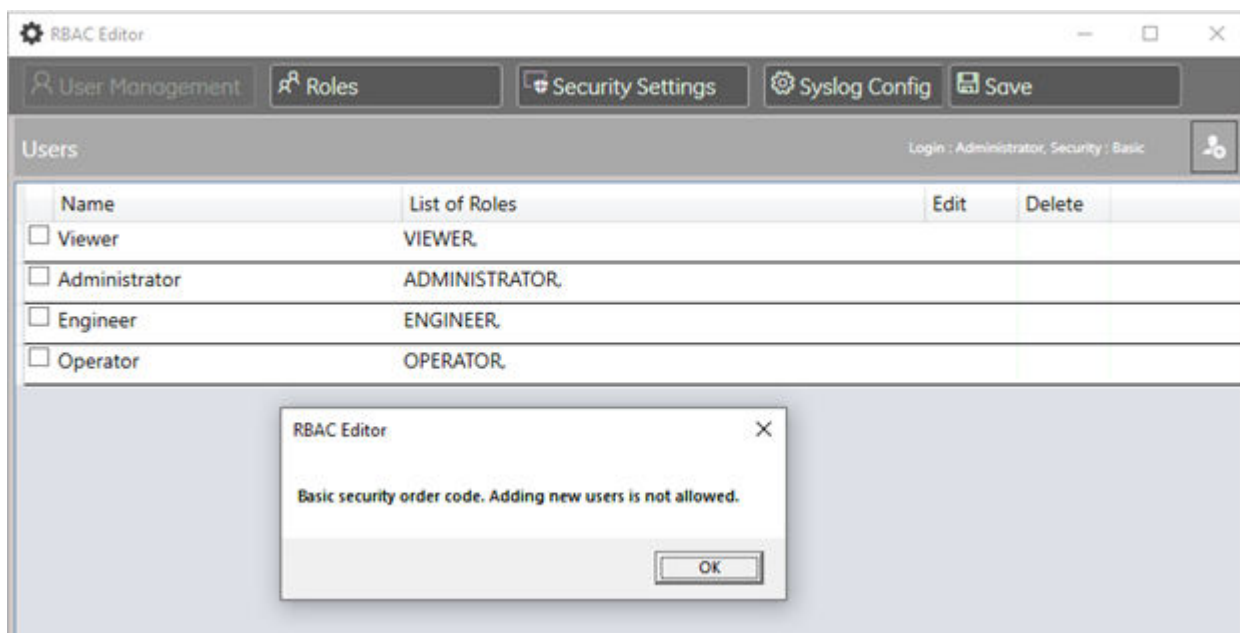


Figure 97: Basic security user management configuration (not configurable)

Advanced Security

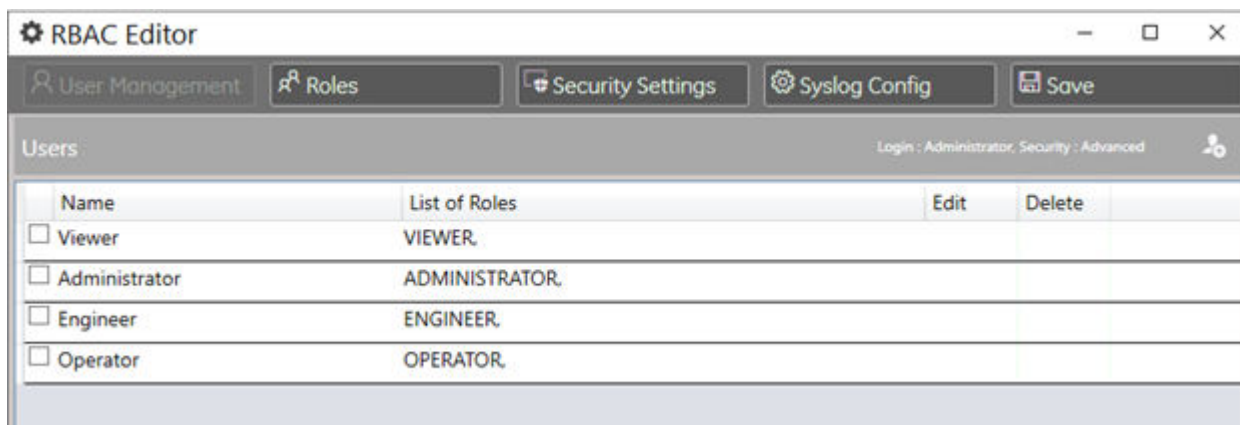


Figure 98: Advanced security user management configuration

In **Advanced Security** the device has up to 20 configurable users. Each user will have a configurable username and password, and can select one role from the standard and new user defined roles. As stated in the standard, there is the possibility to redefine new roles by adjusting the name, ID and permissions for each new defined role. It is not possible to combine roles.

The screens to configure new users in Advanced Security are as follows:

Click on the right side icon on the users screen:

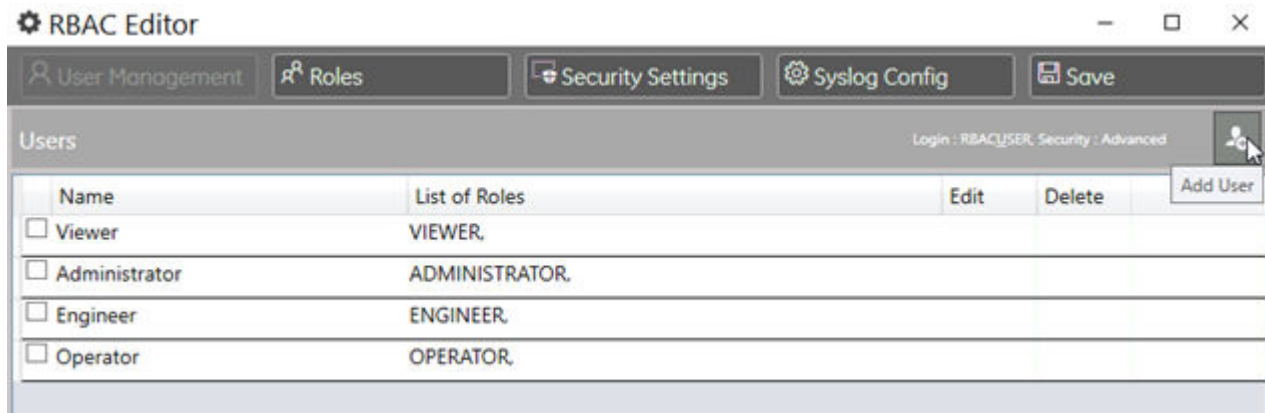


Figure 99: List of pre-configured users for advanced security

A **New User** window will open with a list of the already existing roles. In case a new role is needed it can be configured under the Roles window. See the list of pre-configured roles for Advanced Security.

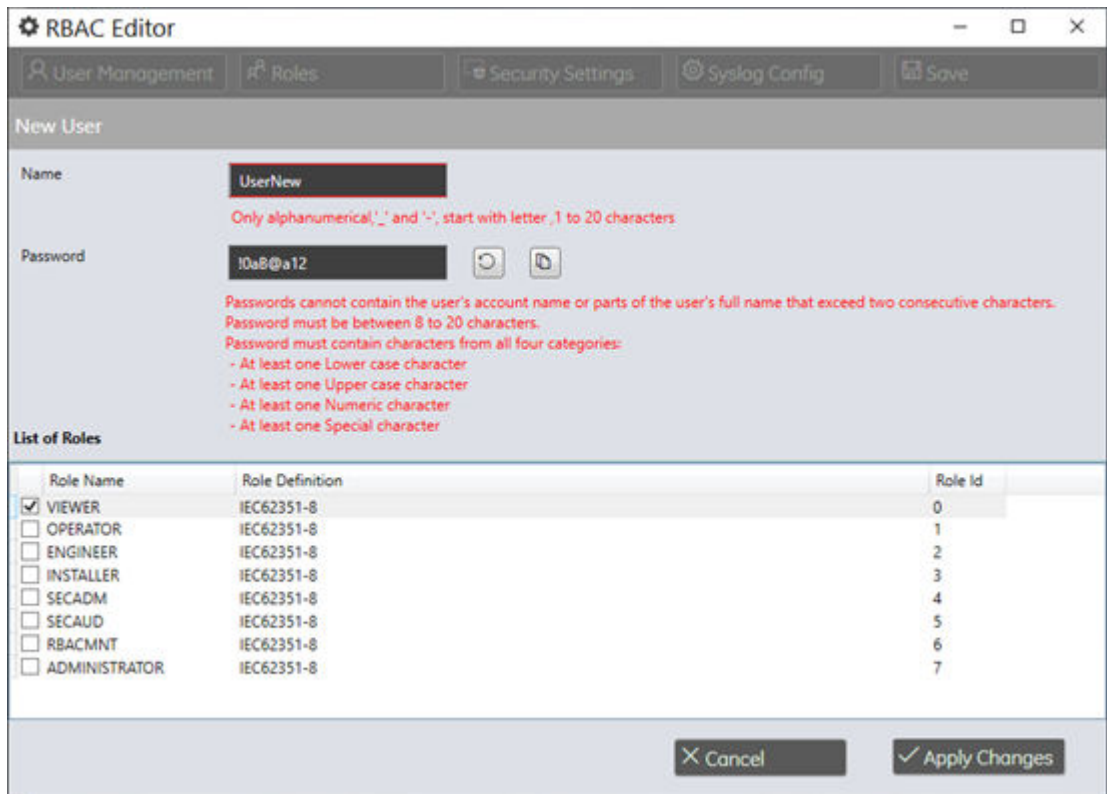


Figure 100: Entering new user name and password for advance security

Put a valid name following the rules for user's naming, select a valid password following the rules for passwords and click on the **Apply Changes** button that will be enabled when a valid name and password are entered. Once the changes are applied the new role will appear on the list of users available.

In this example a new user called "UserNew" has been created under the existing VIEWER role.

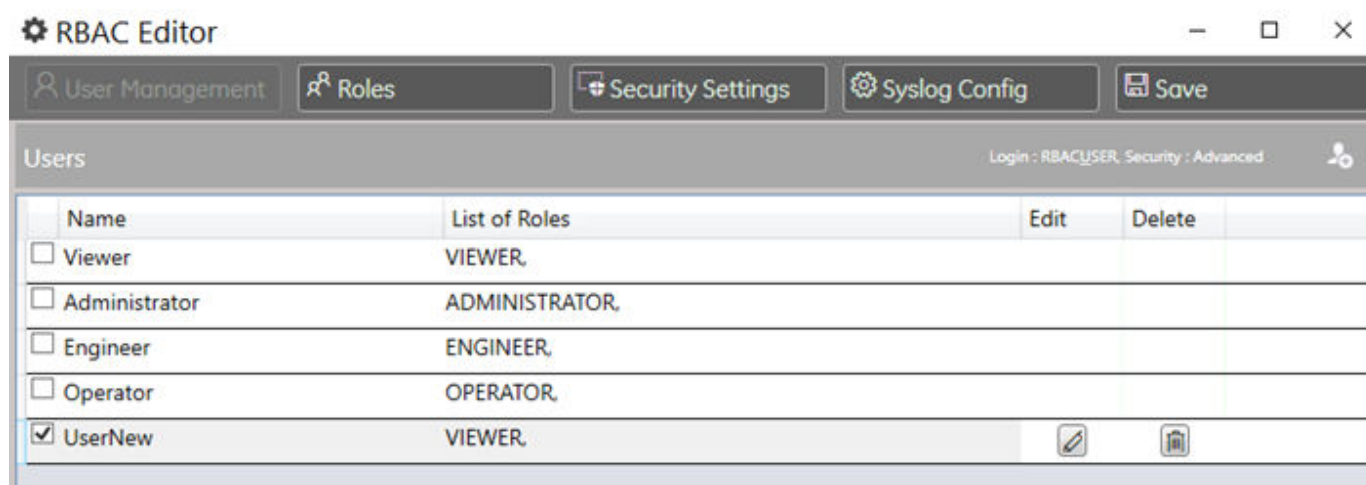


Figure 101: Example of new user creation for advanced security

For the configuration to be saved on the device, the **Save** button needs to be clicked, otherwise the configuration will not be saved. A warning message will appear if leaving the RBAC USERMANAGEMENT configurator without saving.

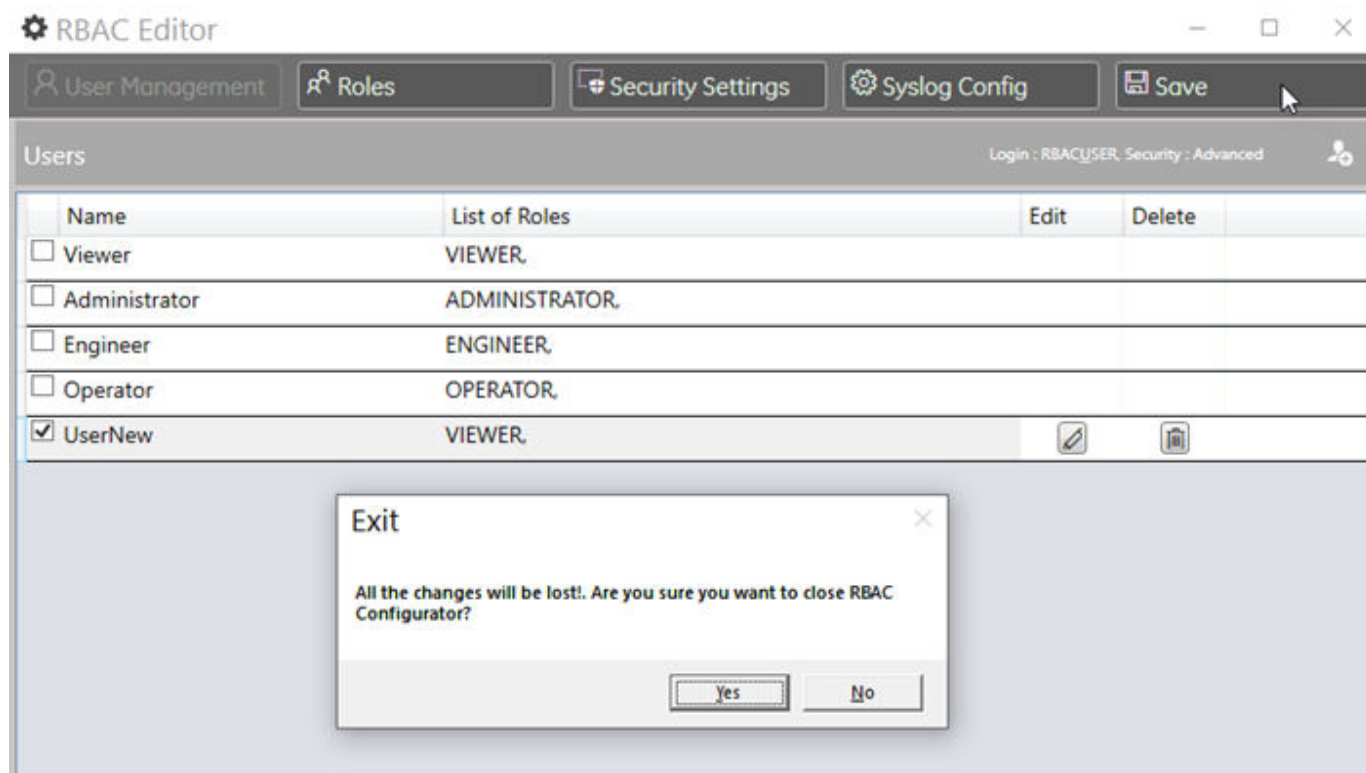


Figure 102: Save changes warning message before closing the RBAC USERMANAGEMENT configurator

4.5.1.3 ROLES CONFIGURATION

The **ROLES** initial screen is similar for Basic and Advanced security. The difference is that for Basic security the 4 fixed available roles can be used (VIEWER, ADMINISTRATOR, ENGINEER and OPERATOR) and they are not editable. For Advanced Cybersecurity 7 roles are pre-configured, the first 6 defined by the standard (VIEWER, OPERATOR, ENGINEER, INSTALLER, SECAUD, RBACMNT), and the 7th one (ADMINISTRATOR), predefined with Role ID 7 that can be changed to any of the available private values allowed by the standard (See the IEC 62351 table in the IEC 62351 section).

Basic Security

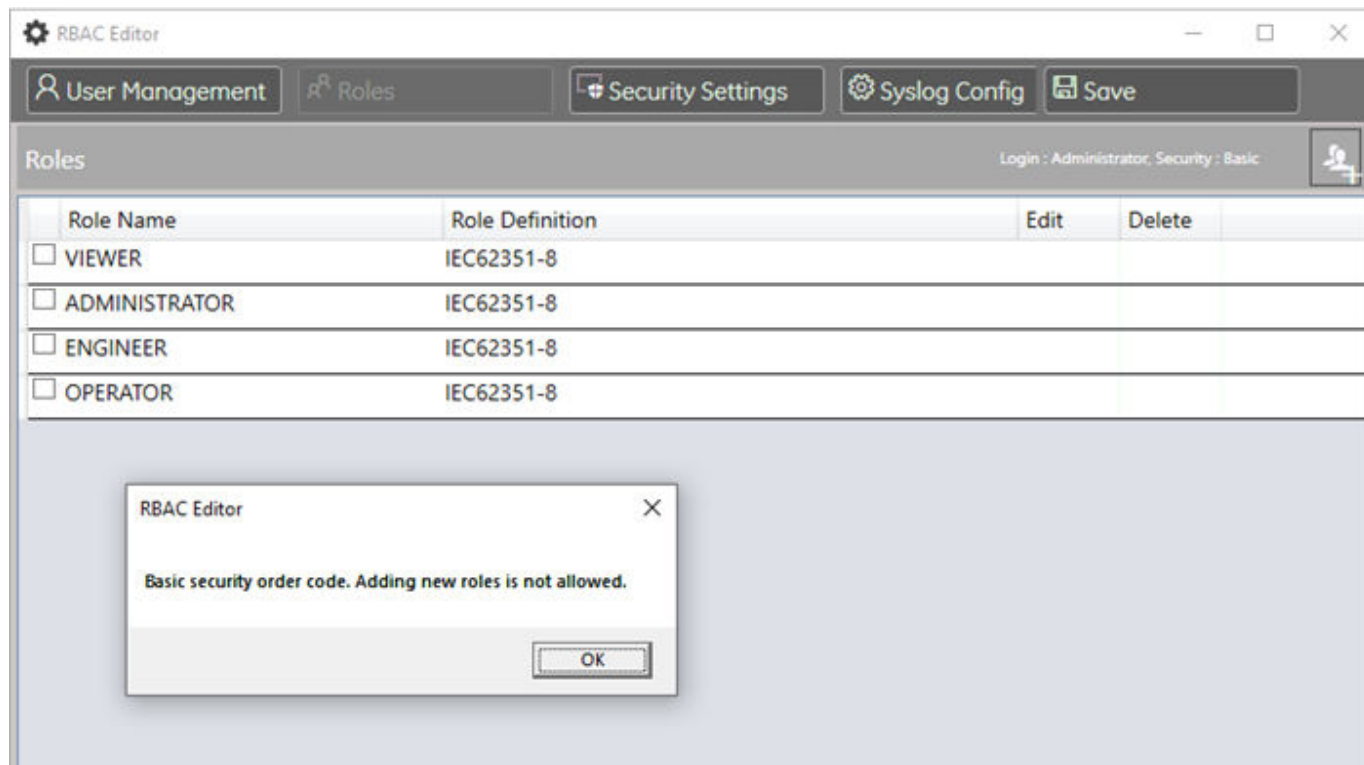


Figure 103: Basic security roles configuration (not configurable)

Advanced Security

The first 6 roles are defined by the standard and all their parameters are fixed. The 7th role, ADMINISTRATOR, is a pre-configured role to provide all of the set permissions together in a single role. The Role Name and Role Definition are not configurable, but the Role ID can be configured. The Role ID provided is set to 7, but it can be configured to -1 or any value from the Private Role ID's available.

To add a new role, click on the right side icon on the **Roles** window:

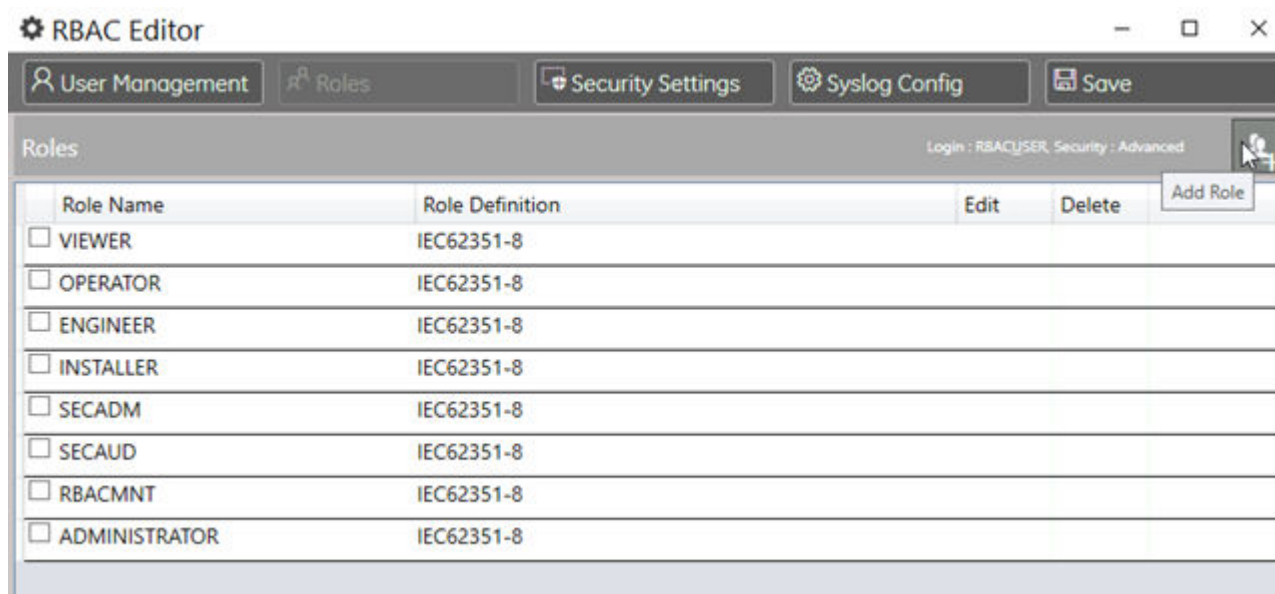


Figure 104: Advanced security roles configuration

A **New Role** window will open with a list of permissions that can be added to any role.

RBAC Editor

User Management Roles Security Settings Syslog Config Save

New Role

Role Name [Redacted]
Only alphanumeric, '_' and '-'; start with letter, 3 to 20 characters

Definition IEC62351-8 Role Id 0 [Redacted]
Forbidden role Id, reserved. Please change.

List of Permissions

Permission	Comment	ID
☒ LISTOBJECTS	View settings names / traverse settings (except security settings)	1
☒ READVALUES	View non security settings values, view PSL, view 61850	2
☐ DATASET	Configure and Edit 61850	3
☒ REPORTING	View Status, Metering	4
☒ FILEREAD	Read configuration file, Read Events Reports, Read Waveforms Reports, Read fault reports, Read secur	5
☐ FILEWRITE	Write configuration file, Upload firmware, create/edit configuration project, import SCL	6
☐ FILEMNGT	Clear records, Restore Defaults, export SCL, delete configuration project	7
☐ CONTROL	Command BKR, RESET	8
☐ CONFIG	View non security settings, edit/configure all non security settings, Configure and Edit 61850, save set	9
☐ SETTINGGROUP	View non security settings, modify group control settings	10
☐ SECURITY	View and modify security settings view, configure security, modify users and rbac, Read security audit	11
☐ FILEREAD_SEC	Read sec audit log	12
☐ FILEMNGT_SEC	Access to files of type security (cont	13
☐ FWUPGRADE	Firmware Upgrade	14

Use CTRL + Click to add a selection to existing set

Cancel Apply Changes

Figure 105: Advanced security new roles configuration

In order to select more than one of the available options, the CTRL+Click combination of keys must be selected. Only the Role Name and Role ID can be changed when a new role is created. The Role Definition is fixed to "IEC 62351-8" for all roles.

Follow the rules for Role Name and Role ID creation and press "Apply Changes". The new user will appear on the Roles' window:

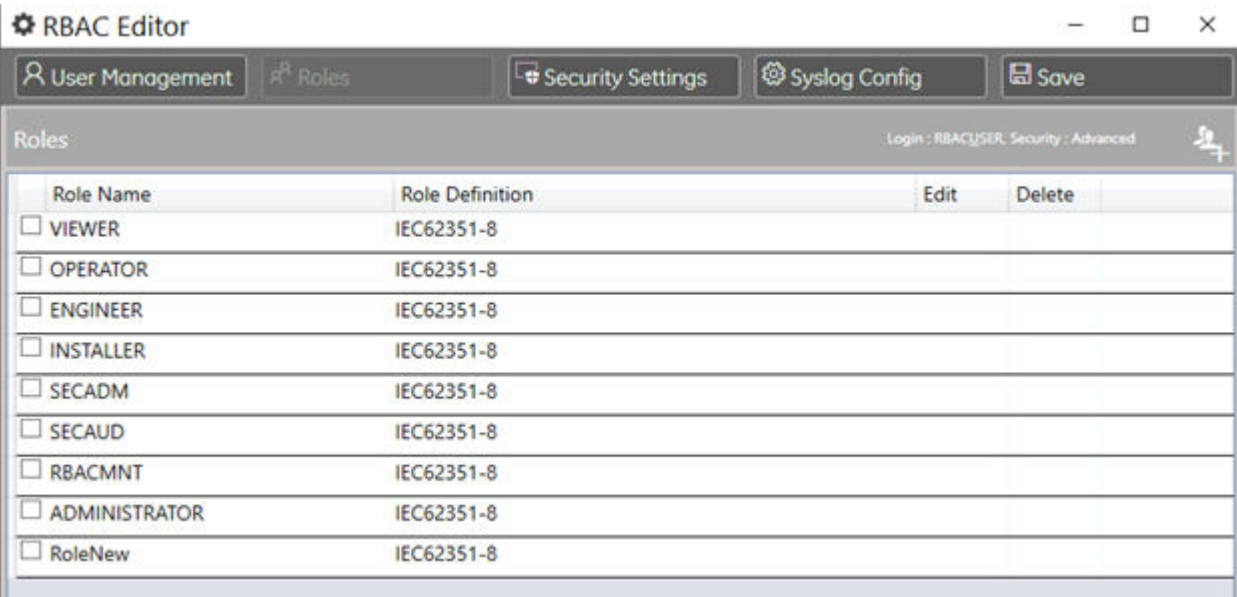


Figure 106: Example of new role creation for advance security

For the configuration to be saved on the device, the **Save** button needs to be clicked, otherwise the configuration will not be saved. A warning message will appear if leaving the RBAC USERMANAGEMENT configurator without saving.

4.5.1.4 SECURITY SETTINGS CONFIGURATION

Basic Security

For Basic Security **Access Lockout**, **Acc Lockout Time**, and **Acc Timeout**, other settings are available.

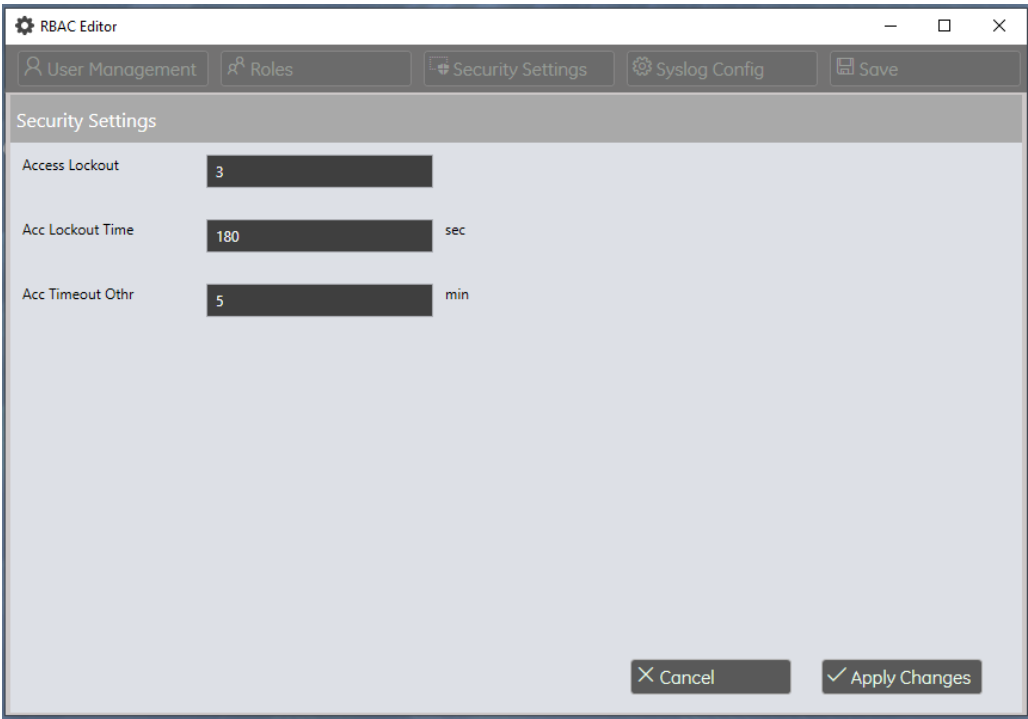


Figure 107: Basic Security Settings

Advanced Security

For Advance Cybersecurity, besides the **Access Lockout**, **Acc Lockout Time** and **Acc Timeout Othr**, an **Authentication Method** setting is provided. Depending on the **Authentication Method** setting selection (*LOCAL*, *RADIUS_LEGACY*, *LDAP_LEGACY*) different setting windows will be displayed.

Advanced Security Settings with Local Authentication Method

If the **Authen. Method** is set to *LOCAL*, **Access Lockout**, **Acc Lockout Time** and **Acc Timeout Othr** settings are displayed.

The screenshot shows the 'RBAC Editor' window with the 'Security Settings' tab selected. The settings are as follows:

Setting	Value	Unit
Access Lockout	3	
Acc Lockout Time	180	sec
Acc Timeout Othr	5	min
Authent. Method	LOCAL	

At the bottom right, there are 'Cancel' and 'Apply Changes' buttons.


Figure 108: Advanced security settings, authent. method set to local

Advance Security Settings with Radius Legacy Authentication Method

If the **Authen. Method** is set to *RADIUS_LEGACY*, the corresponding RADIUS setting will be displayed, number of retries, primary and secondary ports and IP addresses, path to certificate.

The Authentication Methods supported on *RADIUS_LEGACY* for the 8A release are as follows:

- PEAPv0 with inner authentication method MS-CHAPv2
- EAP-TTLS with inner authentication method PAP (To support RSA AM)
- PAP (unsecured, to support any RADIUS server)

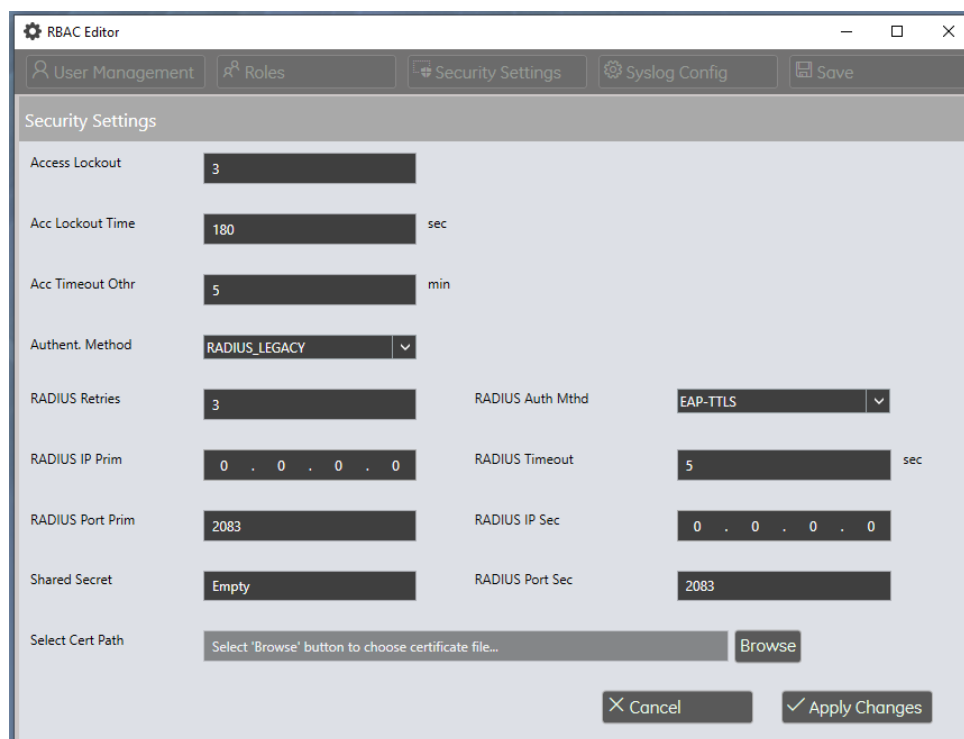

The RBAC Editor window shows the Security Settings tab. The settings are as follows:

Setting	Value	Unit
Access Lockout	3	
Acc Lockout Time	180	sec
Acc Timeout Othr	5	min
Authent. Method	RADIUS_LEGACY	
RADIUS Retries	3	
RADIUS Auth Mthd	EAP-TTLS	
RADIUS IP Prim	0 . 0 . 0 . 0	
RADIUS Timeout	5	sec
RADIUS Port Prim	2083	
RADIUS IP Sec	0 . 0 . 0 . 0	
Shared Secret	Empty	
RADIUS Port Sec	2083	
Select Cert Path	Select 'Browse' button to choose certificate file...	

Buttons: Cancel, Apply Changes

Figure 109: Advance security settings with radius legacy as authentication method

To select the certificate needed to communicate through RADIUS_LEGACY, click on the **Browse** button and select the path to a valid certificate. The certificate for RADIUS should have a *.der extension.


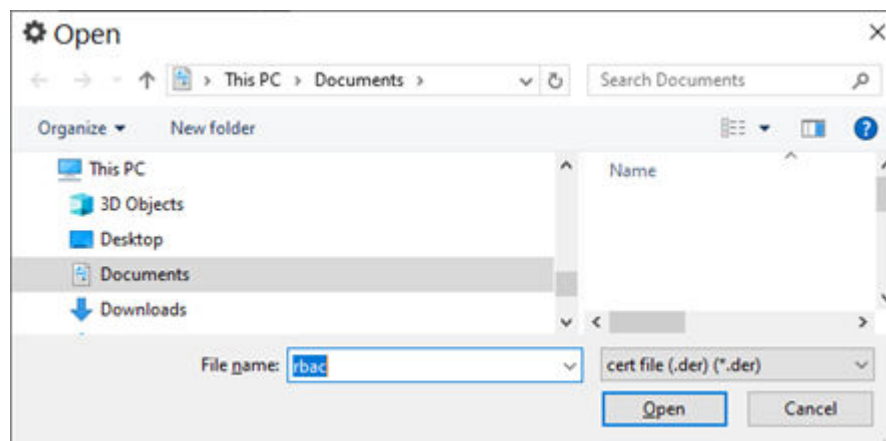


Figure 110: Advance security settings: radius legacy certificate

Advanced Security Settings with LDAP_LEGACY Authentication Method

If the **Authen. Method** is set to `LDAP_LEGACY`, the corresponding LDAP setting will be displayed, number of retries, primary and secondary ports and IP addresses, path to certificate, as well as the base DN, users DN, roles DN parameters. See the LDAP section for more details. The Certificate for LDAP should have a *.pem extension.

The LDAP Authentication Methods available are "TCP" and "STARTTLS".

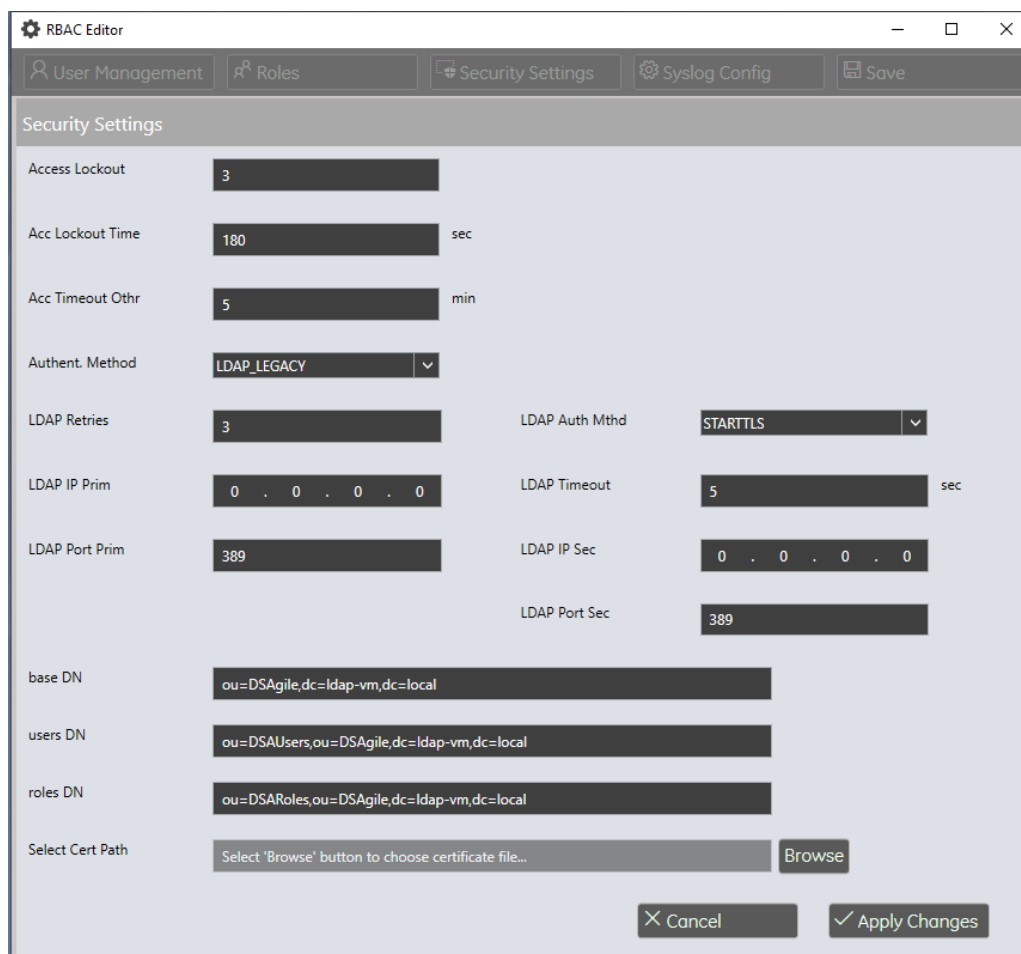

The RBAC Editor window displays the Security Settings tab. The settings are as follows:

Setting	Value	Unit
Access Lockout	3	
Acc Lockout Time	180	sec
Acc Timeout Othr	5	min
Authent. Method	LDAP_LEGACY	
LDAP Retries	3	
LDAP Auth Mthd	STARTTLS	
LDAP IP Prim	0 . 0 . 0 . 0	
LDAP Timeout	5	sec
LDAP Port Prim	389	
LDAP IP Sec	0 . 0 . 0 . 0	
LDAP Port Sec	389	
base DN	ou=DSAgile,dc=ldap-vm,dc=local	
users DN	ou=DSUsers,ou=DSAgile,dc=ldap-vm,dc=local	
roles DN	ou=DSARoles,ou=DSAgile,dc=ldap-vm,dc=local	
Select Cert Path	Select 'Browse' button to choose certificate file... Browse	

Buttons: Cancel Apply Changes

Figure 111: Advanced security settings, authen. method set to LDAP LEGACY

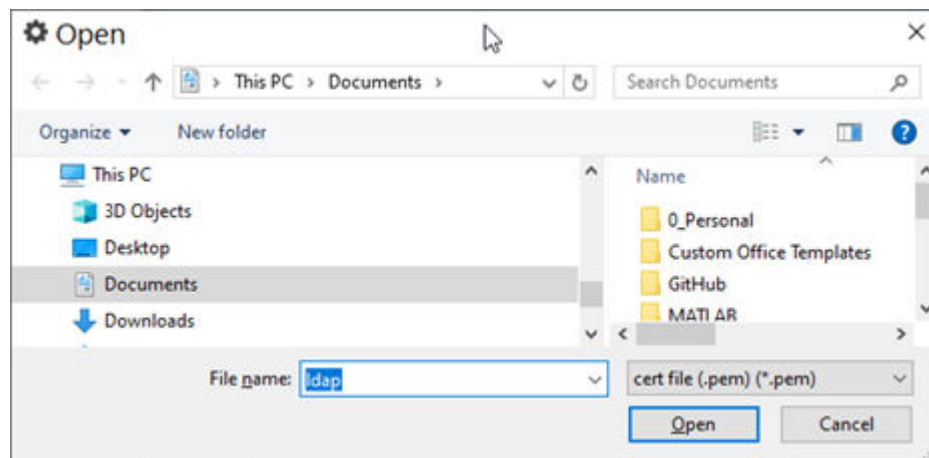


Figure 112: Advance security settings, LDAP LEGACY certificate

4.5.1.5 SYSLOG CONFIGURATION

The IED supports security event reporting through the Syslog protocol, supporting Security Information Event Management (SIEM) systems for centralized cyber security Monitoring over UDP and TCP protocols.

Note:

For Basic security for releases Multilin Agile 8A and 8-Series 4.20 and earlier, Syslog is not available. For releases Multilin Agile 8A and 8-Series 4.20 and later, Syslog is available for both Basic and Advanced Security.

Syslog configuration has the following settings:

- **Network Protocol:** Available protocols for syslog configuration, to be selected between UDP and TCP
- **Syslog IP Primary, Syslog IP Secondary:** IP Primary and secondary
- **Syslog Primary Port, Syslog Secondary Port:** Primary and secondary port for syslog

Note:

0.0.0.0 or 127.0.0.1 values are considered to be empty or unconfigured Ips. A valid IP value should be entered in each of the Syslog IP Primary and Syslog IP Secondary settings.

The screenshot shows the 'RBAC Editor' window with the 'Syslog Config' tab selected. The configuration fields are as follows:

Field	Value
Network Protocol	UDP
Syslog IP Primary	0 . 0 . 0 . 0
Syslog IP Secondary	0 . 0 . 0 . 0
Syslog Primary Port	514
Syslog Secondary Port	514

Buttons at the bottom: Cancel, Apply Changes.

Figure 113: Syslog configuration settings for both basic and advanced security

For any part of the Cybersecurity configuration to be saved on the device, the **Save** button needs to be clicked before leaving the **RBAC USERMANAGEMENT** configuration tool, otherwise the changes on the configuration will not be saved. A warning message will appear if the **RBAC USERMANAGEMENT** configurator is left without saving.

CHAPTER 5

ABOUT SETPOINTS

5.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	172
About Setpoints	173
Setpoints Entry Methods	174
Common Setpoints	175
Logic Diagrams	177

5.2 ABOUT SETPOINTS

The relay has a considerable number of programmable setpoints, all of which make the relay extremely flexible. These setpoints have been grouped into a variety of menus which are available from the paths shown below. Each setpoints menu has sub-sections that describe in detail the setpoints found on that menu.

Note:
Use the path provided to access the menus from the front panel and from the EnerVista D&I Setup software.
Certain named settings allow custom names. Do not create 13-character long names using the largest width characters (i.e. WWWWWWWWWWWWW). Doing so can cause the last 3 characters to overlap the setting name when viewed from the HMI or the EnerVista D&I Setup software.

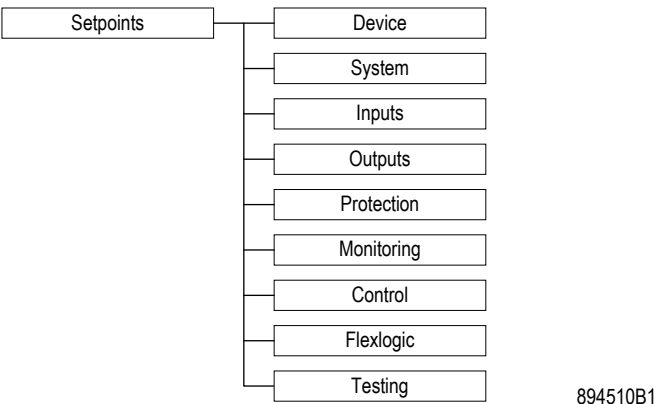


Figure 114: Main Setpoints Display Hierarchy

5.3 SETPOINTS ENTRY METHODS

Before placing the relay in operation, you must enter the setpoints, which define the system characteristics, inputs, relay outputs, and protection settings. You can use one of the following methods:

- Front panel, using the keypad and the display.
- Front USB port, connected to a portable computer running the EnerVista D&I Setup software.
- Rear Ethernet, copper or fiber port connected to portable computer running the EnerVista D&I Setup software.
- Rear RS485 port and a SCADA system running user-written software.
- If applicable for your model, using the Wi-Fi wireless connection to a portable computer running the EnerVista D&I Setup software.

Using a computer is the easiest method, as files can be stored and downloaded for fast, error free entry. To facilitate this process, the EnerVista D&I Setup software is available for download. The relay leaves the factory with setpoints programmed to default values, and it is these values that are shown in all the setpoint message illustrations.

At a minimum, you must set the **Setpoints > System** setpoints for the system to function correctly. To safeguard against the installation of a relay whose setpoints have not been entered, the **Out-Of-Service** self-test warning is displayed. In addition, the Critical Failure relay is de-energized. Once the relay has been programmed for the intended application, you should change the **Setpoints > Device > Installation > Device In Service** setpoint from *Not Ready* (the default) to *Ready*. Before putting the relay in the Ready state, you should work through each page of setpoint messages, entering values either by keypad or computer.

5.4 COMMON SETPOINTS

To make the application of this device as simple as possible, similar methods of operation and similar types of setpoints are incorporated in various features. Rather than repeat operation descriptions for this class of setpoint throughout the manual, a general description is presented in this overview. Details that are specific to a particular feature are included in the discussion of the feature. The form and nature of these setpoints is described below.

FUNCTION

The **<ELEMENT_NAME> FUNCTION** setpoint determines the operational characteristic of each feature. The range for this setpoint is: *Disabled*, *Trip*, *Latched Trip*, *Alarm*, *Latched Alarm* and *Configurable*.

If the **FUNCTION** setpoint is selected as *Disabled*, then the feature is not operational.

If **FUNCTION** is selected as *Trip* or *Latched Trip*, then the feature is operational. When the *Trip* or *Latched Trip* function is selected and the feature operates, the output relay #1 *Trip* operates (when selected as Trip Relay), and the **TRIP** LED is lit.

When the *Latched Trip* function is selected and the feature operates, the **TRIP** LED and trip output operands will remain latched. The *Latched Trip* can be reset by issuing the reset command.

If **FUNCTION** is selected as *Alarm* or *Latched Alarm*, then the feature is operational. When this function is selected and the feature operates, the **ALARM** LED is lit and any assigned auxiliary output relays operate. The Trip output relay does not operate, and the **TRIP** LED is not lit.

When **FUNCTION** is selected as *Latched Alarm*, operation of the Latched Alarm function depends on the selection of the setting **LATCH ALARM OPERATION**, configured under **Path: Setpoints > Device > Installation**. When the setting **LATCH ALARM OPERATION** is set to *Self-Reset* while an element is set to *Latched Alarm*, only the Alarm LED will remain latched. When setting **LATCH ALARM OPERATION** to *Latched*, both Alarm LED and element will remain latched.

When *Alarm* is selected and the feature operates, the **ALARM** LED flashes, and it self-resets when the operating conditions are cleared.

If **FUNCTION** is selected as *Configurable*, the feature is fully operational but outputs are not driving any action, such as output relay #1, **ALARM** LED or anything else. Operands from this element must be programmed to the required action which may be as simple as the auxiliary output relay from the list of available relays in the element itself; FlexLogic, Trip Bus etc.

Note:

The FlexLogic operands generated by the operation of each feature are active, and available to assign to outputs, or use in FlexLogic equations, regardless of the selected function, except when the function is set to *Disabled*.

PICKUP

The setpoint selects the threshold equal to or above (for over elements) or equal to or below (for under elements) which the measured parameter causes an output from the measuring element.

PICKUP DELAY

The setpoint selects a fixed time interval to delay an input signal from appearing as an output.

DROPOUT DELAY

The setpoint selects a fixed time interval to delay dropping out the output signal after being generated.

TDM

The setting provides a selection for Time Dial Multiplier which modifies the operating times per the selected inverse curve. For example, if an IEEE Extremely Inverse curve is selected with TDM=2, and the fault current is 5 times bigger than the pickup level, operation of the element can not occur until 2.59 s after pickup.

OUTPUT RELAYS

The **<ELEMENT_NAME> RELAYS** setpoint selects the relays required to operate when the feature generates an output. The range is *Operate* or *Do Not Operate*, and can be applied to any combination of the auxiliary output relays. The default setting is *Do Not Operate*.

The available auxiliary relays vary depending on the order code.

DIRECTION

The **<ELEMENT_NAME> DIRECTION** setpoint is available for overcurrent features which are subject to control from a directional element. The range is *Disabled*, *Forward*, and *Reverse*. If set to *Disabled*, the element is allowed to operate for current flow in any direction. There is no supervision from the directional element. If set to *Forward*, the OC element is allowed to operate when the fault is detected by the directional element in forward direction. In this mode, the OC element does not operate for fault in reverse direction. If set to *Reverse*, the OC element is allowed to operate when the fault is detected in reverse direction, and does not operate in forward direction.

RESET

Selection of an *Instantaneous* or a *Timed* reset is provided by this setting. If *Instantaneous* is selected, the element resets instantaneously providing the quantity drops below 97 to 98% of the pickup level before the time for operation is reached. If *Timed* is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

BLOCK

The **<ELEMENT_NAME> BLOCK** setpoint selects an operand from the list of FlexLogic operands, which when active, blocks the feature from running. When set to *On* the feature is always blocked; when set to *Off*, block is disabled.

EVENTS

The **<ELEMENT_NAME> EVENTS** setpoint can be set to *Enabled*, or *Disabled*. If set to *Enabled*, the events associated with the pickup, operation, or other conditions of the feature are recorded in the Event Recorder.

TARGETS

The **<ELEMENT_NAME> TARGETS** setpoint can be set to *Disabled*, *Self-Reset*, or *Latched*. If disabled, all the target messages are disabled and do not appear on screen. If set to *Self-Reset*, or *Latched*, the targets associated with the pickup, operation, or another condition of the feature are displayed on the screen of the relay. The targets disappear from the screen when *Self-Reset* is selected, and the conditions are cleared. The targets stay on the screen, when *Latched* is selected, and the conditions are cleared.

Note:

The targets of status, control and pickup conditions are always self-reset type, regardless of the *Self-Reset*, or *Latched* configuration of setpoint **<ELEMENT_NAME> TARGETS**.

To ensure the settings file inside the relay is updated, wait 30 seconds after a setpoint change before cycling power.

When IP addresses are changed and sent as a Settings file, the unit reboots twice.

5.5 LOGIC DIAGRAMS

Refer to the logic diagrams provided for a complete understanding of the operation of each feature. These sequential logic diagrams illustrate how each setpoint, input parameter, and internal logic is used in a feature to obtain an output. In addition to these logic diagrams, the Setpoints chapter provides written descriptions for each feature.

- **Setpoints:** Shown as a block with a heading labeled SETPOINT. The exact wording of the displayed setpoint message identifies the setpoint. Major functional setpoint selections are listed below the name and are incorporated in the logic.
- **Comparator Blocks:** Shown as a block with an inset box labeled RUN with the associated pickup/dropout setpoint shown directly above. Element operation of the detector is controlled by the signal entering the RUN inset. The measurement/comparison can only be performed if a logic 1 is provided at the RUN input. The relationship between a setpoint and input parameter is indicated by the following symbols: < (less than), > (greater than), etc.
- **Pickup and Dropout Time Delays:** Shown as a block with indication of two timers – the t_{PKP} (Pickup Delay), and t_{DPO} (Dropout Delay).
- **LED Indicators:** Shown as the following schematic symbol (X).
- **Logic:** Described with basic logic gates (AND, OR, XOR, NAND, NOR). The inverter (logical NOT), is shown as a circle: O
- **FlexLogic operands:** Shown as a block with a heading labeled FLEXLOGIC OPERANDS. Each feature produces output flags (operands) which can be used further for creating logic in the FlexLogic equation editor, or Trip Bus, or can be directly assigned to trigger an output. The operands from all relay features constitute the list of FlexLogic operands.

CHAPTER 6

DEVICE SETPOINTS

6.1 CHAPTER OVERVIEW

This chapter describes the Device setpoint menu settings in detail.

This chapter contains the following sections:

Chapter Overview	179
Device menu hierarchy	180
Custom Configuration	181
Real-time Clock	184
Communications	189
Transient Recorder	225
Data Logger	227
Fault Reports	230
Event Data	232
Flex states	233
Front Panel	234
Resetting	254
Installation	255
Self-Test Monitor	257
Clear Records	258

6.2 DEVICE MENU HIERARCHY

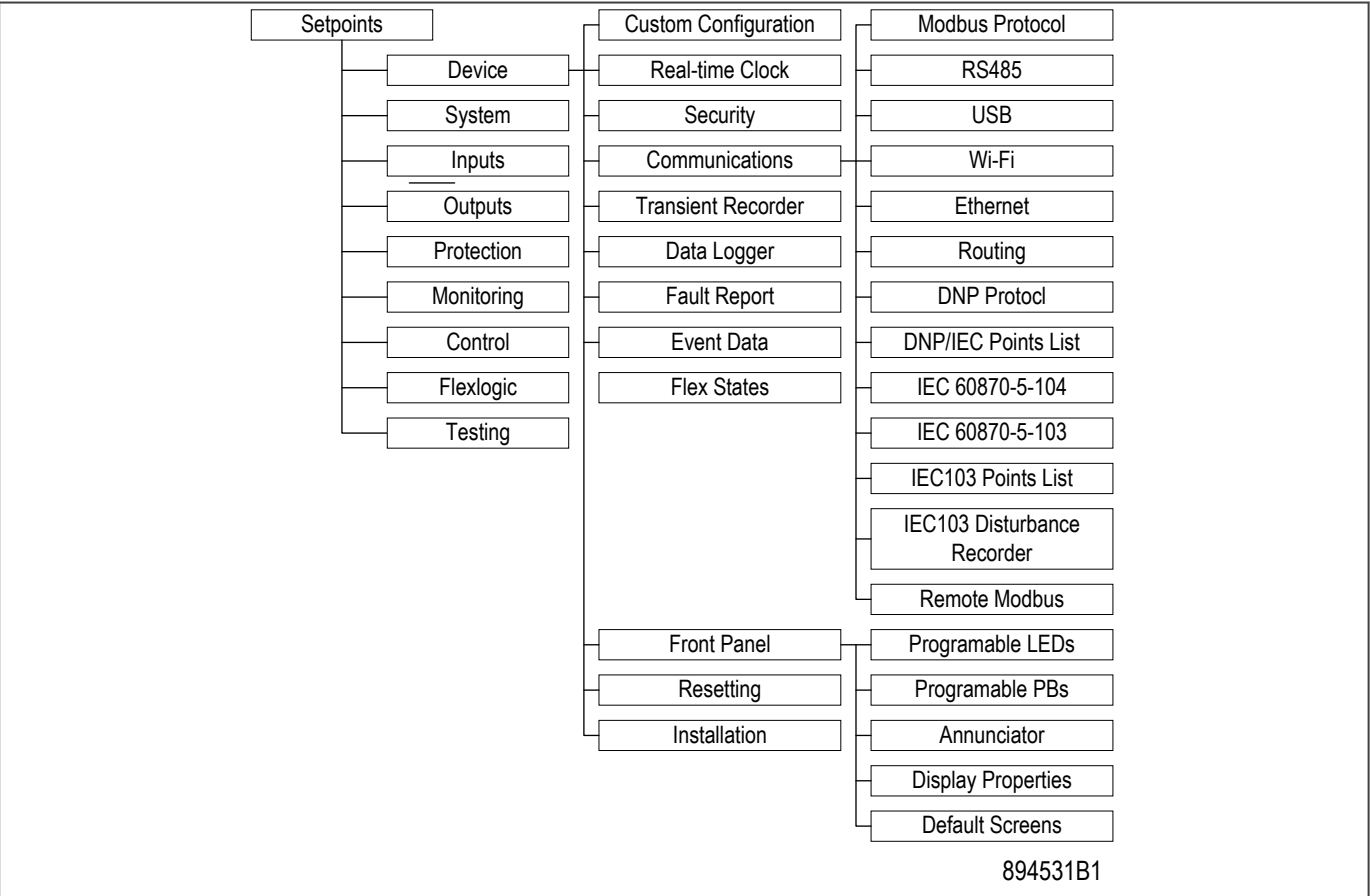


Figure 115: Device Display Hierarchy

6.3 CUSTOM CONFIGURATION

The custom configuration features allows you to customize the configurations as desired.

Configuration Mode

The 8-series platform, supports a multitude of functions and features including:

- Protection and Control (P&C)
- Asset Monitoring
- Flexible Logic Engine (FlexLogic)
- Records and Reporting
- Time Synchronization
- Testing/Simulation

Taking into consideration user experience, configuration mode controls how the Setpoints are presented by only displaying settings that are typically used, or settings that are important to configure.

Two configuration modes are supported:

- **Simplified** - In this mode, some of the functions, features and settings are hidden or made read-only (grayed out). All the settings made in Regular configuration mode are still applied during simplified mode (they are either hidden or read-only), so simplified configuration mode can also be seen as a way of locking advanced setpoints.
- **Regular** - In this mode, all function/features and setpoints of the device are editable and nothing is hidden or grayed out.

Configuration mode is applicable to the Setpoints items only and does not control view/presentation to other main menu items, such as Device Definition, Status, Metering, Records, Commands and Maintenance. The configuration mode setting is available to be changed by the Administrator role. The configuration mode control is applicable to device HMI and setup software, as well as online and offline setting files.

Note:

Configuration mode does not disable the device functionality or settings. It only controls the view or presentation on the HMI and setup software screens. Therefore, settings which are hidden or Read-only are preserved and applied within the device.

The home icon on the home page changes color according to the configuration mode. When in Simplified configuration mode, the home icon color is green. When in regular mode the home icon color is blue.

Example 1: Setting items view control

The **Phase TOC 1** function in Regular mode has 14 editable setpoints. In the Simplified mode this function has only 6 out of the 14 setpoints made available to edit. 5 setpoints are hidden, and 3 setpoints are read/view-only.

Note:

*All setpoints under Regular mode are still applied and used by the device. For example the **Input** is hidden but configured as **Phasor** during Regular mode, therefore **Phase TOC 1** still applies **Phasor** as an input. Similarly, **Reset** is read-only, and **Phase TOC 1** still applies **Instantaneous** for resetting. The read-only settings are greyed out.*

Regular			Simplified		
H:\Current\Phase TOC 1			H:\Current\Phase TOC 1		
Item Name	Value	Unit	Item Name	Value	Unit
Function	Disabled		Function	Disabled	
Signal Input	CT Bank 1 -J1		Signal Input	CT Bank 1 -J1	
Input	Phasor		Pickup	1.000	x CT
Pickup	1.000	x CT	Curve	IEEE Mod Inverse	
Curve	IEEE Mod Inverse		TDM	1.00	
TDM	1.00		Reset	Instantaneous	
Reset	Instantaneous		Direction	Disabled	
Direction	Disabled		Voltage Restraint	Disabled	
Voltage Restraint	Disabled		Relays	Do Not Operate	
Volt Lower Limit	0.1	p.u.	PTOC 1		
Block	Off				
Relays	Do Not Operate				
Events	Enabled				
Targets	Self-Reset				
PTOC 1					

Figure 116: Comparison of the setpoints for Regular and Simplified mode

Example 2: Function/Feature view control

The differences in the **Inputs** setpoint screens for Regular and Simplified mode are shown below. Under Simplified mode, the **Virtual Inputs** and **Remote Inputs** are hidden for any configuration change. However, the device will still accept and process virtual and remote inputs based on what is configured during Regular mode. This way, Simplified configuration mode does not change the behavior of the device.

Regular

Home icon

..\Setpoints\Inputs

Item Name

Contact Inputs

Virtual Inputs

Analog Inputs

Remote Inputs

Figure 117: Comparison of the Inputs screens for Regular and Simplified mode

CONFIG MODE

Path: *Setpoints > Device > Config Mode*

Range: Simplified, Regular

Default: Regular

This setting allows selection of the configuration mode while the device is accessed by the Administrator role. In *Regular* configuration mode, all values in settings/functions can be edited. In *Simplified* configuration mode, selected settings/functions are hidden or the values are read-only to enhance user experience with minimum setpoint changes.

6.4 REAL-TIME CLOCK

Path: *Setpoints > Device > Real Time Clock*

The relay is capable of receiving a time reference from several time sources in addition to its own internal clock for the purpose of time-stamping events, transient recorders and other occurrences within the relay. The accuracy of the time stamp is based on the time reference that is used. The relay supports an internal clock, SNTP, IRIG-B, and PTP IEEE 1588 (version 2) as potential time references.

If two or more time sources are available, the time source with the higher priority shown in Time Sources table is used where 1 is considered to be the highest priority. Please note that the time source priority of PTP and IRIG-B can be swapped. If both PTP and IRIG-B are available, by default the clock syncs to PTP over IRIG-B. If PTP is not available, the CPU syncs the internal clock to IRIG-B.

Time Sources

Time Source	Priority
PTP (IEEE1588)	1*
IRIG-B	2*
SNTP	3
Internal Clock	4

* The priority of IRIG-B and PTP can be swapped.

Note:

Synchronization by IEC103, DNP, Modbus and IEC104 is not going to be issued if there is a sync source from IRIG-B, SNTP or PTP.

6.4.1 PTP CONFIGURATION

Path: *Setpoints > Device > Real Time Clock > Precision Time*

PORT 4(5) PTP FUNCTION

Range: Disabled, Enabled

Default: Enabled

When the port setting is selected as *Disabled* PTP is disabled on the port. The relay does not generate, or listen to, PTP messages on the port.

PORT 4(5) PATH DELAY ADDER

Range: 0 to 60000 ns in steps of 1 ns

Default: 0 ns

The time delivered by PTP is advanced by the time value in the setting prior to the time being used to synchronize the relay's real time clock. This is to compensate for time delivery delays not compensated for in the network. In a fully compliant Power Profile (PP) network, the peer delay and the processing delay mechanisms compensate for all the delays between the grandmaster and the relay. In such networks, the setting is zero.

In networks containing one or more switches and/or clocks that do not implement both of these mechanisms, not all delays are compensated, so the time of message arrival at the relay is later than the time indicated in the message. The setting can be used to approximately compensate for the delay. Since the relay is not aware of network switching that dynamically changes the amount of uncompensated delay, there is no setting that always completely corrects for uncompensated delay. A setting can be chosen that reduces worst-case error to half of the range between minimum and maximum uncompensated delay if these values are known.

PORT 4(5) PATH DELAY ASYMMETRY

Range: -1000 to +1000 ns in steps of 1 ns

Default: 0 ns

The setting corresponds to Delay Asymmetry in PTP, which is used by the peer delay mechanism to compensate for any difference in the propagation delay between the two directions of a link. Except in unusual cases, the two fibers are of essentially identical length and composition, so the setting is set to zero.

In unusual cases where the length of link is different in different directions, the setting is to be set to the number of nanoseconds longer the Ethernet propagation delay is to the relay compared with the mean of path propagation delays to and from the relay. For instance, if it is known say from the physical length of the fibers and the propagation speed in the fibers that the delay from the relay to the Ethernet switch it is connected to is 9000 ns and that the delay from the switch to the relay is 11000 ns, then the mean delay is 10000 ns, and the path delay asymmetry is +1000 ns.

STRICT POWER PROFILE

Range: Enabled, Disabled

Default: Enabled

Power profile (IEEE Std C37.238™ 2011) requires that the grandmaster clock be power profile compliant, that the delivered time have a worst-case error of $\pm 1 \mu\text{s}$, and that the peer delay mechanism be implemented. With the strict power profile setting enabled, the relay selects as master only clocks displaying the IEEE_C37_238 identification codes. It uses a port only when the peer delay mechanism is operational. With the strict power profile setting disabled, the relay uses clocks without the power profile identification when no power profile clocks are present, and uses ports even if the peer delay mechanism is non-operational.

The setting applies to all of the relay's PTP-capable ports.

PTP DOMAIN NUMBER

Range: 0 to 255

Default: 0

The setting is set to the domain number of the grandmaster-capable clock(s) to which they can be synchronized. A network may support multiple time distribution domains, each distinguished with a unique domain number. More commonly, there is a single domain using the default domain number zero.

The setting applies to all of the relay's PTP-capable ports.

PTP VLAN PRIORITY

Range: 0 to 7

Default: 4

The setting selects the value of the priority field in the 802.1Q VLAN tag in request messages issued by the relay's peer delay mechanism. In compliance with PP (Power Profile) the default VLAN priority is 4, but it is recommended that in accordance with PTP it be set to 7.

Depending on the characteristics of the device to which the relay is directly linked, VLAN Priority may have no effect.

The setting applies to all of the relay's PTP-capable ports.

PTP VLAN ID

Range: 0 to 4095

Default: 0

The setting selects the value of the ID field in the 802.1Q VLAN tag in request messages issued by the relay's peer delay mechanism. It is provided in compliance with PP (Power Profile). As these messages have a destination address that indicates they are not to be bridged, their VLAN ID serves no function, and so may be left at its default value.

Depending on the characteristics of the device to which the relay is directly linked, VLAN ID may have no effect.

The setting applies to all of the relay's PTP-capable ports.

PTP PRIORITY

Range: 1, 2

Default: 1

The setting sets the priority of PTP time for the relay. If set to 1 and IRIG-B is available, the relay syncs the relay's time reference to the PTP time. If set to 2 and IRIG-B is available, the relay syncs its reference to IRIG-B time.

6.4.2 CLOCK

Path: *Setpoints > Device > Real Time Clock > Clock*

DATE

Format: Month/Day/Year

Range: Month: 1 to 12; Day: 1 to 31; Year: 2008 to 2094

Default: 01/01/2008

TIME

Range: 0 to 23: 0 to 59:0 to 59

Default: 00:00:00

LOCAL TIME OFFSET FROM UTC

Range: -24.00 to 24.00 hrs in steps of 0.5 hrs

Default: 0.00 hrs

REAL TIME CLOCK EVENTS

Range: Disabled, Enabled

Default: Enabled (FW 3.00), Disabled (FW4.10)

IRIG-B

Range: Disabled, Enabled

Default: Disabled

DAYLIGHT SAVINGS TIME

Range: Disabled, Enabled

Default: Disabled

DST START MONTH

Range: January to December (all months)

Default: Not Set

DST START DAY

Range: SUN to SAT (all days of the week)

Default: Not Set

DST START WEEK

Range: 1st, 2nd, 3rd, 4th, Last

Default: Not Set

DST START HOUR

Range: 0 to 23

Default: 2

DST END MONTH

Range: January to December (all months)

Default: Not Set

DST END WEEK

Range: 1st, 2nd, 3rd, 4th, Last

Default: Not Set

DST END DAY

Range: SUN to SAT (all days of the week)

Default: Not Set

DST END HOUR

Range: 0 to 23

Default: 2

Note:

IRIG-B is available in all relays apart from the 859. A failure on IRIG-B triggers an event and a target message. IRIG-B is auto-detected. The signal type is detected in the hardware, so there are no configurable options.

6.4.3 SNTP PROTOCOL

8 series relays accept time synchronization from up to two different SNTP servers. In order to define number of SNTP servers to be used, different settings for each SNTP server must be configured.

- If one SNTP server is used to synchronize the relay, the SNTP Server and UDP port settings must be configured with the corresponding settings.
- If two SNTP servers are used to synchronize the relay, the SNTP Server IP and UDP port for the main server must be configured, along with the SNTP Server 2 IP and UDP port for the back-up server.

Note:

8 Series relays only support SNTP unicast. It may take 2-3 minutes for the relay to synchronize with the SNTP server.

Path: Setpoints > Device > Real Time Clock > SNTP

SNTP FUNCTION

Range: Disabled, Enabled

Default: Disabled

SNTP SERVER IP ADDRESS

Range: Standard IP Address Format

Default: 0.0.0.0

SNTP UDP PORT NUMBER

Range: 0 to 65535 in steps of 1

Default: 123

SNTP SERVER 2 IP ADDRESS

Range: Standard IP Address Format

Default: 0.0.0.0

SNTP 2 UDP PORT NUMBER

Range: 0 to 65535 in steps of 1

Default: 123

<i>Note:</i> <i>The SNTP and PTP settings take effect after rebooting the relay.</i>

6.5 COMMUNICATIONS

8-series relays have a two-stage communications capability. The base CPU supports the Modbus protocol through the Ethernet, USB and serial ports. In addition, the base CPU also supports the IEC 103, DNP serial, DNP TCP/IP, Ethernet and TFTP protocol. Once the communications module option is added to the base, the communications module supports IEC 61850 Ed.2. The communications CPU also supports Modbus TCP, DNP TCP, TFTP, SFTP, and SNTP protocol.

6.5.1 GENERAL

In the device communication setpoints, there are general settings (for products with advance commination) which are related to the control authority and its indicator and power factor sign definition.

Path: Setpoints>Device>Communications>General

Multi Level Control

Range: Disabled, Enabled

Default: Disabled

When set to Enabled, control authority from multiple levels (Bay, Station and Remote) are allowed simultaneously based on Local/Remote status and status authority status. Otherwise only one level has the authority to control, based on Local/Remote status and status authority status.

IED Local Status

Range: Off, Any FlexLogic operand

Default: Off

Selects an operand, that indicates the IED is in Local or Remote mode. When the operand value is set, the IED is in Local mode and any commands from remote protocols (IEC61850, DNP3, IEC 104 or 103, Modbus) are rejected.

6.5.2 MODBUS PROTOCOL

All Ethernet ports and serial communication ports support the Modbus protocol. The only exception is if the serial port has been configured for DNP or IEC 60870-5-103 operation (see descriptions below). This allows the EnerVista D&I Setup (which is a Modbus master application) to communicate with the relay.

The relay implements a subset of the Modicon Modbus RTU serial communication standard. The Modbus protocol is hardware-independent. That is, the physical layer can be any of a variety of standard hardware configurations. This includes USB, RS485, fiber optics, etc. Modbus is a single master / multiple slave type of protocol suitable for a multi-drop configuration.

The relay is always a Modbus slave with a valid slave address range 1 to 254.

DATA FRAME FORMAT AND DATA RATE

One data frame of an asynchronous transmission to or from a relay typically consists of 1 start bit, 8 data bits, and 1 stop bit. This produces a 10-bit data frame. This is important for transmission through modems at high bit rates. Modbus protocol can be implemented at any standard communication speed. The relay supports operation at 9600, 19200, 38400, 57600, and 115200 bps baud rate. The USB interface supports Modbus TCP/IP.

FUNCTION CODE SUPPORTED

The following functions are supported:

- FUNCTION CODE 03H - Read Setpoints
- FUNCTION CODE 04H - Read Actual Values
- FUNCTION CODE 05H - Execute Operation

- FUNCTION CODE 06H - Store Single Setpoint
- FUNCTION CODE 07H - Read Device Status
- FUNCTION CODE 08H - Loopback Test
- FUNCTION CODE 10H - Store Multiple Setpoints
- FUNCTION CODE 42H - Group Settings Read
- FUNCTION CODE 43H - Group Settings Write

When a Modbus master such as the EnerVista D&I Setup communicates with the relay over Ethernet, the relay slave address, TCP port number and IP address for the associated port must be configured and are also configured within the Master for this device. The default Modbus TCP port number is 502.

6.5.3 MODBUS CONFIGURABLE PARAMETERS

The following Modbus parameters are configurable:

Path: *Setpoints > Device > Communications > Modbus Protocol*

MODBUS SLAVE ADDRESS

Range: 1 to 254 in steps of 1

Default: 254

For the RS485 ports each 8 Series must have a unique address from 1 to 254. Address 0 is the broadcast address to which all Modbus slave devices listen. Addresses do not have to be sequential, but no two devices can have the same address, otherwise conflicts resulting in errors occur. Generally, each device added to the link uses the next higher address starting at 1.

MODBUS TCP PORT NUMBER

Range: 1 to 65535 in steps of 1

Default: 502

The TCP port number used with Modbus over Ethernet. Note that the maximum number of simultaneous Modbus connections supported over Ethernet is three for an 8 Series without the communications card and five for an 8 Series with the communications card.

COMPATIBILITY

Range: Disabled, FlexMap

Default: Disabled

Compatibility mode changes the Modbus actual value registers to emulate the SR relay. The emulation supports typical actual value data for common data items.

See the *8 Series Protective Relay Communications guide* for the list.

FLEXMAP FILE

Range: Up to 13 alphanumeric characters

Default: Depends on the type of the relay and order code options:

SR735XAFlexMap.000 for Current protection option "S"

SR750XAFlexMap.000 for Current Protection option "M", "D" or "A"

SR469XAFlexMap.000

SR745XAFlexMap.000

SR489XAFlexMap.000

369XAFlexMap.000

The **Flexmap File** describes the translation from the Modbus memory map to the target Modbus memory map.

The default Flexmap File can be changed by entering the filename. In the case where the default SR735XAFlexMap.000 file requires to be changed to SR750 then enter SR750XAFlexMap.000 file.

RS485 Port1

Range: Off, On

Default: Off

RS485 Port2

Range: Off, On

Default: Off

RS485 Port3 (only 859)

Range: Off, On

Default: Off

Ethernet Port1

Range: Off, On

Default: Off

Ethernet Port2

Range: Off, On

Default: Off

Ethernet Port4 (not 859)

Range: Off, On

Default: Off

Ethernet Port5 (not 859)

Range: Off, On

Default: Off

MODBUS ACTIVITY TIMEOUT

Range: 0 to 3600 s in steps of 1 s

Default: 0 s

The **Modbus Activity Timeout** specifies the minimum time without Modbus communication. This timeout is used to declare the Modbus **Loss of Communication** state.

The Modbus state is always Active if the **Modbus Activity Timeout** is 0 s.

MODBUS 485 READ ACTUALS

Range: Function Code 03h, Function Code 04h

Default: Function Code 04h

The **Modbus 485 Read Actuals** setting configures the Function Code that the relay responds to from a Modbus Master when Actual Values are requested. Use this setting in scenarios where the Modbus Master can only communicate using Function Code 03h for requesting Actual Values.

Note:

This setting applies only to the RS485 connection.

When this setting is changed to Function Code 03h, retrieving configuration settings through the RS485 port is not possible.

MODBUS ERROR RESPONSES

The following exception response codes are implemented.

Error ID	Exception	Description
01	ILLEGAL FUNCTION	The function code transmitted is not one of the functions supported by the 8 Series.
02	ILLEGAL DATA ADDRESS	The address referenced in the data field transmitted by the master is not an allowable address for the 8 Series.
03	ILLEGAL DATA VALUE	The value referenced in the data field transmitted by the master is not within range for the selected data address.

6.5.4 RS485

On the rear, the relay is equipped with two RS485 serial communication ports. The RS485 port has settings for baud rate and parity. It is important that these parameters agree with the settings used on the computer or other equipment connected to this port. A maximum of 32 relays can be daisy-chained and connected to a DCS, PLC or a PC using the RS485 port.

Path: *Setpoints > Device > Communications > RS485*

BAUD RATE

Range: 2400, 4800, 9600, 1200, 19200, 38400, 57600, 115200

Default: 115200

PARITY

Range: None, Odd, Even

Default: None

PORT PROTOCOL

Range: Modbus, DNP 3.0, IEC 60870-5-103

Default: Modbus

6.5.5 WI-FI

Wi-Fi refers to Wireless Local Area Networks (WLANs) that are based on the 802.11 set of standards. WLANs provide Local Area Network (LAN) type of connectivity but without the need of cables, which makes them more convenient for use in limited spaces. The signal strength and its range is determined by the wireless device's antenna technology and standard, the best being IEEE 802.11n.

Wi-Fi defines two modes of operation, namely ad-hoc, used for small deployments, and infrastructure mode, which supports more robust types of security and better capabilities for centralized management. The infrastructure mode requires an Access Point (AP). Devices operating in this mode pass all data through the AP.

The integrated Wi-Fi module conforms to IEEE 802.11b/g/n standards. The devices operate in infrastructure mode. Security is optional, but enabled by default. We advise you to leave this switched on, as wireless traffic is very susceptible to cyber-attacks.

The security technology used is WPA2 (Wireless Protected Access version 2), based on the IEEE 802.11i standard for data encryption. WPA2 is a second version of WPA technology, designed to solve known security limitations found in one of the encryption algorithms used by WPA, namely TKIP (Temporal Key Integrity Protocol). WPA2 uses CCMP (Counter Mode with Cipher Block Chaining Message Authentication Code Protocol), which provides an enhanced data cryptographic encapsulation mechanism based on AES (Advanced Encryption Standard). CCMP makes WPA2 much stronger and secure than its predecessors, WPA and WEP.

Several forms of WPA2 security keys exist. The relay supports WPA2 PSK (Pre-Shared Key), which utilizes 64 hexadecimal digits. The key may actually be entered as a string of 64 hexadecimal digits or as a passphrase of 8 to 32 printable ASCII characters. For user convenience, the settings accept the key in the form of a passphrase. Internally the ASCII passphrase is used for deriving a 256-bit key.

The following are the Wi-Fi network settings. Only an Administrator has the rights to change them.

Path: Setpoints > Device > Communications > Wi-Fi

WiFi Access

This setting switches WiFi functionality on/off using a Flexlogic operand. By default WiFi is off.

WiFi IP Address / Subnet Mask

The default IP address is 192.168.0.x, where x is calculated as:

$X = (\text{modulo } 242 \text{ of the last 3 digits of the serial number}) + 12$ Example: A unit has a serial number of MJ3A16000405, the default IP address would be 192.168.0.175 (where $405 \bmod 242 = 163 + 12 = 175$).

This is to ensure uniqueness of the default IP address for all 8 Series devices present on one wireless network and it creates a usable address space from 192.168.0.12 to 192.168.0.253 for the devices.

Note:

From the remaining range of unicast addresses 192.168.0.1 to 192.168.0.253, at least two are going to be used for the AP and a laptop installed with the relevant software version, which will be used to configure the devices. The AP should be configured with the address 192.168.0.1 and mask 255.255.255.0 and have DHCP enabled with a DHCP range from 192.168.0.2 to 192.168.0.253. This allows laptops, iPads and any other devices to connect to the local network without the need to statically configure their own IP address and mask.

WiFi Security

The setting enables Wi-Fi security. If set to "None", there is no security and all traffic is open. By default WiFi Security is set to WPA2-PSK.

WiFi SSID

The SSID is the public name of a wireless network. All of the wireless devices on a WLAN must use the same SSID in order to communicate with each other. The default for the SSID is provided by the vendor with the shipment of any new device. We recommend that you modify this name as needed after initial startup, to ensure unique SSIDs if several WLANs are configured.

Note:

SSID broadcast should be disabled on AP. This provides some extra protection by requiring an SSID before connecting to the device and making it harder for casual outsiders looking for wireless networks to find the device and attempt to connect.

WiFi WPA2 Passphrase

The WPA2 Passphrase is used for generating the encryption key. The same passphrase must be set on AP and on all devices communicating on the same WLAN. The device supports a string of up to 14 printable ASCII characters. Internally a 256-bit key is calculated by applying the PBKDF2 key derivation function to this passphrase, using the SSID as the salt and 4096 iterations of HMAC-SHA1.

The devices are configured with a default passphrase, which is provided by the vendor with the shipment of any new device.

When choosing a new passphrase, the password complexity rules of CyberSentry must be used (see CyberSentry details in the relay Instruction manual).

This field is visible only if the security is set to WPA2-PSK.

Note:

Ideally the passphrase should be set through the software and not directly from the Keypad, where there are limitations in terms of space and types of characters supported. However, for convenience, the passcode setting is available from the Keypad as well.

WiFi Status

A Wi-Fi symbol is displayed in the caption area of the product front panel. The following table lists all possibilities for this icon:

Wi-Fi State	Wi-Fi Icon Color
Disabled	Icon is gray and crossed by a red line
Disconnected	Gray
Connecting	Yellow
Connected	Green

Wi-Fi Events

Event	Description
Wi-Fi Connected	This event is recorded to indicate a network connect.
Wi-Fi Disconnected	This event is recorded to indicate a network disconnect.

Note:

If the relay is in service mode and the settings are default a minor error is triggered.

6.5.6 WI-FI QUICK START PROCEDURE

The following provides the settings information and instructions to quickly setup Wi-Fi.

Required Equipment

- Relay with Wi-Fi functionality
- PC with Wi-Fi
- Access Point

Quick Start Procedure

1. The PC Wi-Fi Network Passphrase is provided with the relay
2. The Access Point settings are given in the table below.
3. Any relays in range are automatically connect to the configured Access Point.
4. Start EnerVista D&I Setup on a PC and use the Discover function, all relays within range appear and are populated for initial configuration and commissioning.
5. Once the relay is configured, change the relay default Wi-Fi SSID and Passphrase settings before the relay goes into service.

Access Point Settings	
IP address:	192.168.0.1
Subnet Mask:	255.255.255.0
SSID:	same as entered on the PC (SSID provided with the relay)
Broadcast:	disabled
Security type:	WPA2-PSK (WPA2-Personal)
Encryption:	AES
Passphrase:	same as entered on the PC (Passphrase provided with the relay)
DHCP enabled:	range of 192.168.0.12 to 192.168.0.253

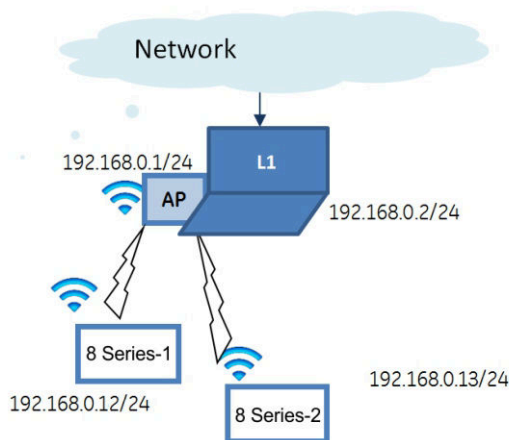


Figure 118: Example of Wi-Fi Deployment

6.5.7 USB

The USB parameters are as follows:

IP Address: 172.16.0.2

IP Subnet Mask: 255.255.255.0

IP GWY IP Address: 172.16.0.1

Note:

Whenever the device is rebooted, the USB cable needs to be unplugged and plugged in again for proper communication to be established over USB.

Connecting multiple relays over USB to a single PC is not possible because in the case of USB, the IP address of the device 172.16.0.2 is constant.

6.5.8 ETHERNET PORTS

The following communication offerings are available.

Base Offering

- 2x Copper (RJ45) Ports
- Modes: 10/100 Mbps
- Protocols: Modbus TCP, DNP 3.0, IEC 61850 GOOSE, SNTP, IEC 62439-3 clause 4 (PRP)

Advanced Offering

- 4x Copper (RJ45) Ports or 2x Fiber
- Modes: 10/100 Mbps (copper)
- 100Mbps (Fiber)
- Protocols: Modbus TCP, DNP 3.0, IEC 61850 GOOSE, SNTP, IEC 62439-3 clause 4 (PRP), HSR

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

6.5.8.1 NETWORK SETTINGS MENU

This section describes the network settings menu. If the communications card is installed network port 1 is no longer available. When using more than one Ethernet port, configure each to belong to a different network or subnet using the IP addresses and mask, else communication becomes unpredictable when more than one port is configured to the same subnet.

Note:

*Use the softkeys and **Down/Up** key to enter an IP address. When entering an IP address you must press the **BACK** key first to switch between softkey mode and the **Down/Up** key mode.*

NETWORK 1, 2, 4, 5

Range: Standard IPV4 Address format

Default: 192.168.11.11 (Port 1)

Default: 192.168.11.12 (Port 2)

Default: 192.168.11.13 (Port 4)

Default: 192.168.11.14 (Port 5)

The setting sets the port's IPV4 address in standard IPV4 format.

Note:
The setting is valid on Port 2(5) if PRT1(4) is set to Independent

Note:
The setting is valid on Port 2 if **PRT1 Operation** is set to Independent.

Note:
172.17.X.X/16 and 172.18.X.X/16 are reserved IPs.

PRT1<n> SUBNET IP MASK

Range: Standard IPV4 mask format

Default: 255.255.255.0 (Port 1, 2, 4, 5)

This setting specifies the IPv4 mask associated with the corresponding port IP address.

PRT<n> OPERATION

Range: Independent, LLA, PRP, HSR, RSTP

Default: Independent

This setting determines the mode of operation for ports 1 and 2: *Independent, LLA, PRP, HSR, RSTP*

Independent operation: Ports 1, 2, 4 and 5 operate independently with their own MAC and IP address.

LLA operation: Ports 1, 2, 4 and 5 use port 1's MAC and IP address settings while port 2 is in standby mode in that it does not actively communicate on the Ethernet network but monitors its link. If port 1 is active and the link loss problem is detected, communications is switched to port 2 immediately. Port 2 is, in effect, acting as a redundant or backup link to the network for port 1.

LLA (Link Loss Alert): is a proprietary feature supported by the fiber optic ports. When enabled, this feature is able to detect a failure of the fiber link. If **PRT1 Operation** is set to *LLA*, the detection of a link failure by this feature triggers the transfer of communications. If LLA is enabled on a port with a non-fiber SFP, the target message *LLA not supported by Prt (1 or 2)* is displayed on the keypad and an event is logged.

Note:
LLA is not available on port 4,5 copper (RJ45). When the port operation is selected, the relay requires a reboot for the setting to be applied.

Parallel Redundancy Protocol (PRP) operation: Ports 1 and 2 use the same MAC address and combine information at the link layer. It is intended to only be used if the two ports are connected to separate parallel LAN's. In this mode of operation, both ports cannot be connected to the same LAN. The receiving devices (8 Series) process the first frame received and discard the duplicate through a link redundancy entity (LRE) or similar service that operates below layer 2. Aside from LRE, PRP uses conventional Ethernet hardware but both ports must know they are in PRP. Ports of PRP devices operating with the same Internet Protocol (IP) addresses for traffic that uses IP Management protocols such as Address Resolution Protocol (ARP) must operate correctly.

Duplicate Discard mode: This is the normal setting for PRP operation and once set it allows the sender LRE to append a six-octet field that contains a sequence number, the Redundancy Control Trailer (RCT) to both frames it sends. The receiver LRE uses the sequence number of the RCT and the source MAC address to detect duplicates. It forwards only the first frame of a pair to its upper layers.

HSR operation: When set to HSR (High-availability Seamless Redundancy Protocol), PRT1 is paired with PRT2, or PRT4 is paired with PRT5. Each pair of ports use the same MAC address. In this mode, all the participating

devices are connected in ring topology. In normal condition (fault-free state), both identical frames will reach the destination device within a certain interval. The first frame will be sent up the OSI stack to the destination application, while the second one will be discarded.

For more information, see the Communications Guide.

Note:

NOTE: redundancy operations work in pairs Port1/2 and Port4/5 only. It is not interchangeable between all ports.

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

BRIDGE PRIORITY

Range: 0 to 61440 in steps of 4096

Default: 32768

This setting specifies the switch (bridge) priority value. The bridge priority value is used to along with the port MAC address to determine the root device in the network. Lower values mean the higher priority.

Note:

When assigning the bridge priority, it is recommended to configure the Ethernet switch as the root device of the network. This reduces the number of hops to reach all devices in the network.

RSTP PORT 1 PRIORITY

Range: 0 to 240 in steps of 16

Default: 128

This setting specifies the Network Port 1 RSTP priority to select as root port. Lower the number means higher priority.

RSTP PORT 1 PATHCOST

Range: 0 to 2000000 in steps of 1

Default: 200000

This setting specifies the port cost value used for the switch to determine the forwarding path. The lower the value, the lower the cost and hence the preferred route.

RSTP PORT 2 PRIORITY

Range: 0 to 240 in steps of 16

Default: 128

This setting specifies the Network Port 1 RSTP priority to select as root port. Lower the number means higher priority.

RSTP PORT 2 PATHCOST

Range: 0 to 2000000 in steps of 1

Default: 200000

This setting specifies the port cost value used for the switch to determine the forwarding path. The lower the value, the lower the cost and hence the preferred route.

Note:

Please note that the PTP feature is not functional on Network Ports with RSTP enabled.

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

6.5.9 ROUTING

When the configuration card is present, a default route and a maximum number of 6 static routes can be configured. The default route is used as the last choice, if no other route towards a given destination is found.

Path: **Setpoints > Device > Communications > Routing > Default Route**

GATEWAY ADDRESS

Range: Standard IPV4 unicast address format (0.0.0.1 to 223.255.255.254)

Default: 127.0.0.1

This setting sets the gateway of the default route to be used by IP traffic sent from the relay, if no other route towards a given IP destination is found.

This setting is available only if the communications card is present.

Path: **Setpoints > Device > Communications > Routing > Static RT1 (2 to 6)**

RT1 (2,3,4,5,6) DESTINATION

Range: Standard IPV4 network address format (0.0.0.1 to 223.255.255.254)

Default: 127.0.0.1

This setting sets the destination IPv4 route. This setting is available only if the communications card is present.

RT1 (2,3,4,5,6) MASK

Range: Standard IPV4 network mask format

Default: 255.0.0.0

This setting sets the IP mask associated with the route. This setting is available only if the communications card is present.

RT1 (2,3,4,5,6) GATEWAY

Range: Standard IPV4 unicast address format (0.0.0.1 to 223.255.255.254)

Default: 127.0.0.1

This setting sets the destination IP route. This setting is available only if the communications card is present.

RULES FOR ADDING AND DELETING STATIC ROUTES

1. By default, the value of the destination field is 127.0.0.1 for all static routes (1 to 6). This is equivalent to saying that the static routes are not configured. When the destination address is 127.0.0.1, the mask and gateway must also be kept as default values.
2. By default, the value of the default route gateway address is 127.0.0.1. This means the default route is not configured.

3. Use any of the static network route entries numbered 1 to 6 to configure a static network route. Once a route destination is configured for any of the entries 1 to 6, that entry becomes a static route and it must meet all the rules listed in *Important Notes* below.
4. To configure the default route, enter a default gateway address. A default gateway address configured must be validated against Rule #5, the next rule.
5. Routes are deleted by replacing the route destination with the default address (127.0.0.1). When deleting a route, the mask and gateway must also be put back to their default values.
6. The default route is deleted by replacing the default gateway with the default value 127.0.0.1.

Note:

Host routes are not supported at present.

The route mask has IPv4 mask format. In binary this is a set of contiguous bits of 1 from left to right, followed by one or more contiguous bits of 0.

The route destination and mask must match. This can be verified by checking that $RtDestination \& RtMask == RtDestination$

This is an example of a good configuration: $RtDestination = 10.1.1.0$; $RtMask = 255.255.255.0$

This is an example of a bad configuration: $RtDestination = 10.1.1.1$; $RtMask = 255.255.255.0$

The route destination must not be a connected network.

The route gateway must be on a connected network. This rule applies to the gateway address of the default route as well.

This can be verified by checking that: $RtGwy \& Prt4Mask == (Prt4IP \& Prt4Mask) \vee (RtGwy \& Prt5Mask == (Prt5IP \& Prt5Mask))$

TARGETS**Wrong Route Config**

Description: A route with mismatched destination and mask has been configured.

Message: Wrong route configuration.

Solution: Rectify the IP address and mask of the mis-configured route.

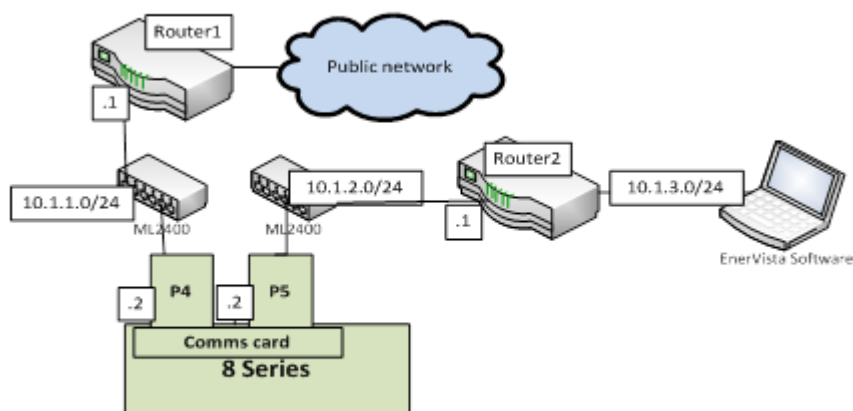
TOPOLOGY

Figure 119: Topology Example

In the topology example above, the device is connected through the two Ethernet ports available on the communications card.

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

Port 4 (IP address 10.1.1.2) connects to LAN 10.1.1.0/24 and to the Internet through Router1. Router 1 has an interface on 10.1.1.0/24 and the IP address of this interface is 10.1.1.1.

Port 5 (IP address 10.1.2.2) connects to LAN 10.1.2.0/24 and to EnerVista D&I Setup through Router 2. Router 2 has an interface on 10.1.2.0/24 and the IP address of this interface is 10.1.2.1.

Network addresses:

- PRT4 IP ADDRESS = 10.1.1.2
- PRT4 SUBNET IP MASK = 255.255.255.0
- PRT5 IP ADDRESS = 10.1.2.2
- PRT5 SUBNET IP MASK = 255.255.255.0

Routing Settings:

IPV4 DEFAULT ROUTE: GATEWAY ADDRESS = 10.1.1.1

STATIC NETWORK ROUTE 1: RT1 DESTINATION = 10.1.3.0/24 RT1 NET MASK = 255.255.255.0 RT1 GATEWAY = 10.1.2.1

Behavior:

One static network route was added to the destination 10.1.3.0/24, where a laptop running EnerVista D&I Setup is located. This static route uses a different gateway (10.1.2.1) than the default route. This gateway is the address of Router 2, which is aware of destination 10.1.3.0 and is able to route packets coming from the device and destined to EnerVista D&I Setup.

6.5.10 DNP PROTOCOL SETTINGS

Path: *Setpoints > Device > Communications > DNP protocol*

DNP CHANNEL 1(2) PORT

Range: None, Network - TCP, Network - UDP

Default: None

The **DNP Channel 1 Port** and **DNP Channel 2 Port** settings select the communications port assigned to the DNP protocol for each channel. When set to *Network - TCP*, the DNP protocol can be used over TCP/IP on channels 1 or 2. When set to *Network - UDP*, the DNP protocol can be used over UDP/IP.

DNP ADDRESS

Range: 0 to 65519 in steps of 1

Default: 65519

The DNP address sets the DNP slave address. This number identifies the device on a DNP communications link. Each DNP slave must be assigned a unique address.

DNP CLIENT ADDRESS 1(2)

Range: standard IP address

Default: 0.0.0.0

The DNP Client Address settings can force the device to respond to a maximum of two specific DNP masters.

DNP TCP/UDP PORT 1(2)

Range: 1 to 65535 in steps of 1

Default: 2000

Note:

DNP Channel 1 Port will take the **DNP TCP/UDP Port 1** and **DNP Client Address 1** to allow/reject connections. The same relation is used by channel 2.

DNP UNSOL RESP FUNCTION

Range: Enabled, Disabled

Default: Disabled

This setting will take effect for Ethernet communication only if the main card is present or a comms card is available in the device. This setting enables/disables the unsolicited response functionality. It is disabled for RS485 applications since there is no collision avoidance mechanism.

DNP UNSOL RESP TIMEOUT

Range: 0 to 60 s in steps of 1

Default: 5 s

Sets the time the relay waits for a DNP master to confirm an unsolicited response.

UNSOL RESP MAX RETRIES

Range: 1 to 255 in steps of 1

Default: 10

Sets the number of times the device retransmits an unsolicited response without receiving confirmation from the master; a value of 255 allows infinite re-tries.

UNSOL RESP AT STARTUP

Range: Enabled, Disabled

Default: Disabled

When relay is rebooting, unsolicited responses work without an Enable message needed, but this is only possible once the Master resets the communications with the relay. This happens with both Reset Link or Class 1 request messages.

DNP UNSOL RESP DEST ADDRESS

Range: 1 to 65519 in steps of 1

Default: 1

Sets the DNP address to which all unsolicited responses are sent. The IP address to which unsolicited responses are sent is determined by the device from the current TCP connection or the most recent UDP message.

DNP TIME SYNC IIN PERIOD

Range: 1 to 10080 min. in steps of 1

Default: 1440 min

This setting determines how often the Need Time Internal Indication (IIN) bit is set by the device. Changing this time allows the DNP master to send time synchronization commands more or less often, as required.

Note:

If the requirement for synchronization is more than a couple of seconds, consider synchronization via other means such as IRIG-B or 1588. Given network asymmetry, the consistency of the network latency, clock drift, and additional delays due to routers located between the client and the device all contribute error.

DNP MESSAGE FRAGMENT SIZE

Range: 30 to 2048 in steps of 1

Default: 240

This setting determines the size, in bytes, at which message fragmentation occurs. Large fragment sizes allow for more efficient throughput; smaller fragment sizes cause more application layer confirmations to be necessary which can provide for more robust data transfer over noisy communication channels.

DNP OBJECT DEFAULT VARIATION SETTINGS

These settings allow selection of the DNP default variation number for object types 1, 2, 20, 21, 22, 23, 30, and 32. The default variation refers to the variation response when variation 0 is requested and/or in class 0, 1, 2, or 3 scans. The DNP binary outputs typically map one-to-one to IED data points. That is, each DNP binary output controls a single physical or virtual control point in an IED. In the 8 Series relay, DNP binary outputs are mapped to virtual inputs. See below for details

DNP OBJECT 1(2) DEFAULT VARIATION

Range: 1, 2

Default: 2

DNP OBJECT 20(22) DEFAULT VARIATION

Range: 1, 2, 5, 6

Default: 1

DNP OBJECT 21 DEFAULT VARIATION

Range: 1, 2, 9, 10

Default: 1

DNP OBJECT 23 DEFAULT VARIATION

Range: 1, 2, 5, 6

Default: 2

DNP OBJECT 30 DEFAULT VARIATION

Range: 1, 2, 3, 4, 5

Default: 1

TCP CONNECTION TIMEOUT

Range: 10 to 300 s in steps of 1

Default: 120 s

This setting specifies a time delay for the detection of dead network TCP connections. If there is no data traffic on a DNP TCP connection for greater than the time specified by this setting, the connection will be aborted.. This frees up the connection to be re-used by a client.

6.5.11 DNP AND IEC104 POINT LISTS

The menu path for the DNP/IEC104 point lists is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists

Binary Input/MSP Points

Analog Input/MME Points

Binary Outp/CSC/CDC Pnts

Binary input points (DNP) or MSP points (IEC 60870-5-104)

You can configure the binary inputs points for the DNP protocol, or the MSP points for IEC 60870-5-104 protocol to a maximum of 96 points. The data source for each point is user-programmable and can be configured by assigning FlexLogic operands. For a complete list, see Format Code FC142.

The menu path for the binary input points (DNP) or MSP points (IEC 60870-5-104) is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists > Binary Input/MSP Points

Point 0 Entry

...

Point 255 Entry

Analog input points (DNP) or MME points (IEC 60870-5-104)

You can configure up to 255 analog input points for the DNP or IEC 60870-5-104 protocols. The menu path for the analog input point (DNP) or MME points (IEC 60870-5-104) is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists > Analog Input / MME Points

Analog IP Point 0 Entry

Point 0 Scale Factor

Point 0 Deadband

DNP ANALOG INPUT POINT 0(255) SCALE FACTOR

Range: / 0.001, / 0.01, / 0.1, / 1, / 10, / 100, / 1000, / 10000, / 100000

Default: /1

These are numbers used to scale analog input point values. Each setting represents the scale factor for the analog input point. For example, if the **DNP PHASE A VOLTAGE SCALE FACTOR** setting is set to / 1000, and the Phase A voltage is 72000 V, the Phase A voltage sent on to the relay is 72 V. The settings are useful when analog input values must be adjusted to fit within certain ranges in DNP masters.

Note:

A scale factor of / 0.1 is equivalent to a multiplier of 10.

DNP ANALOG INPUT POINT 0(255) DEADBAND

Range: 1 to 100000000 in steps of 1

Default: 30000

The setting is the threshold value to define the condition to trigger unsolicited responses containing analog input data. Each setting represents the default deadband value for the associated analog input. For example, to trigger unsolicited responses from the relay when phase A current changes by 15 A, the DNP Current Deadband for Phase A current should be set to 15. Note that these settings are the deadband default values. DNP object

34 points can be used to change deadband values from the default for each individual DNP analog input point. Whenever power is removed and re-applied, the new deadbands are in effect.

Binary output points (DNP) or CSC/CDC points (IEC 60870-5-104)

You can configure the binary output points for the DNP protocol, or the CSC/CDC points for IEC 60870-5-104 protocol to a maximum of 16 points. The data source for each point is user-programmable and can be configured by assigning FlexLogic operands. The menu path for the binary output points (DNP) or CSC/CDC points (IEC 60870-5-104) is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists > Binary Output / CSC/CDC Points

Binary Output Point 0 ON

Binary Output Point 0 OFF

...

Binary Output Point 31 ON

Binary Output Point 31 OFF

Note:

The DNP/IEC 60870-5-104 point lists always begin with point 0 and end at the first *OFF* value. Since DNP / IEC 60870-5-104 point lists must be in one continuous block, any points assigned after the first *OFF* point are ignored.

BINARY INPUT POINTS

The DNP binary input data points are configured through the **DNP/IEC104 POINT LISTS BINARY INPUT/MSP POINTS** menu. When a freeze function is performed on a binary counter point, the frozen value is available in the corresponding frozen counter point.

- Static (Steady-State) Object Number: **1**
- Change Event Object Number: **2**
- Request Function Codes supported: **1 (read), 22 (assign class)**
- Static Variation reported when variation 0 requested: **2 (Binary Input with status), Configurable**
- Change Event Variation reported when variation 0 requested: **2 (Binary Input Change with Time), Configurable**
- Change Event Scan Rate: **8 times per power system cycle**
- Change Event Buffer Size: **1024**
- Default Class for All Points: **1**

POINT NAME/DESCRIPTION COUNTERS

The following details lists both Binary Counters (Object 20) and Frozen Counters (Object 21). When a freeze function is performed on a Binary Counter point, the frozen value is available in the corresponding Frozen Counter point. Digital Counter values are represented as 16 or 32-bit integers. The DNP 3.0 protocol defines counters to be unsigned integers. Care should be taken when interpreting negative counter values.

BINARY COUNTERS

- Static (Steady-State) Object Number: **20**
- Change Event Object Number: **22**
- Request Function Codes supported: **1 (read), 7 (freeze), 8 (freeze noack), 9 (freeze and clear), 10 (freeze and clear, noack), 22 (assign class)**
- Static Variation reported when variation 0 requested: **1 (32-Bit Binary Counter with Flag)**

- Change Event Variation reported when variation 0 requested: **1 (32-Bit Counter Change Event without time)**
- Change Event Buffer Size: **10**
- Default Class for all points: **3**

FROZEN COUNTERS

- Static (Steady-State) Object Number: **21**
- Change Event Object Number: **23**
- Request Function Codes supported: **1 (read)**
- Static Variation reported when variation 0 requested: **1 (32-Bit Frozen Counter with Flag)**
- Change Event Variation reported when variation 0 requested: **1 (32-Bit Counter Change Event without time)**
- Change Event Buffer Size: **10**
- Default Class for all points: **3**

BINARY AND FROZEN COUNTERS POINT INDEX NAME/DESCRIPTION

- 0 Digital Counter 1
- 1 Digital Counter 2
- 2 Digital Counter 3
- 3 Digital Counter 4
- 4 Digital Counter 5
- 5 Digital Counter 6
- 6 Digital Counter 7
- 7 Digital Counter 8
- 8 Digital Counter 9
- 9 Digital Counter 10
- 10 Digital Counter 11
- 11 Digital Counter 12
- 12 Digital Counter 13
- 13 Digital Counter 14
- 14 Digital Counter 15
- 15 Digital Counter 16

ANALOG INPUTS

It is important to note that 16-bit and 32-bit variations of analog inputs are transmitted through DNP as signed numbers. Even for analog input points that are not valid as negative values, the maximum positive representation is 32767 for 16-bit values and 2147483647 for 32-bit values. This is a DNP requirement. The deadbands for all Analog Input points are in the same units as the Analog Input quantity. For example, an Analog Input quantity measured in volts has a corresponding deadband in units of volts. Relay settings are available to set default deadband values according to data type. Deadbands for individual Analog Input Points can be set using DNP Object 34.

A default variation refers to the variation response when variation 0 is requested and/or in class 0, 1, 2, or 3 scans. The default variations for object types 1, 2, 20, 21, 22, 23, 30, and 32 are selected via relay settings. This optimizes the class 0 poll data size.

For static (non-change-event) objects, qualifiers 17 or 28 are only responded when a request is sent with qualifiers 17 or 28, respectively. Otherwise, static object requests sent with qualifiers 00, 01, 06, 07, or 08, are responded with qualifiers 00 or 01. For change event objects, qualifiers 17 or 28 are always responded.

Cold restarts are implemented the same as warm restarts – the relay is not restarted, but the DNP process is restarted.

6.5.12 IEC60870-5-104

The IEC 60870-5-104 communications protocol is supported on Ethernet ports 4 and 5 only. Setting changes become active after rebooting.

Note:

Both DNP and IEC104 protocol can work at the same time, but consider that there is only one point map. So, the two protocols use the same data mapping, i.e., same point index and same point source.

The relay supports up to two IEC104 client connections simultaneously.

Path: Setpoints > Device > Communications > IEC 60870-5-104

Channel 1 Port

Channel 2 Port

Common Address of ASDU

Client Address 1

Client Address 2

TCP Port Number 1

TCP Port Number 2

Cyclic Data Period

Object Info Addrs Bnry

Object Info Addrs Analog

Object Info Addrs Countrs

Object Info Addrs Cmnd

Object Info Analog Param

By default the Object Information Address for the different data is as follows:

M_SP (Single Points) = 1000

M_ME (Measured value) = 2000

M_IT (Integrated Totals) = 3000

C_SC or C_DC (Single or Double Command) = 4000

P_ME_NB (Parameter of measured value) = 5000

Each Measured value has a Parameter of measured value (P_ME_NB) associated to its threshold.

The IEC 60870-5-104 Deadbands settings are used to determine when to trigger spontaneous responses containing M_ME_NB_1 analog data. Each setting represents the threshold value for each M_ME_NB_1 analog point.

For example, to trigger spontaneous responses when a current value changes by 15 A, the **Analog Point xx Deadband** setting should be set to 15. Note that these settings are the default values of the deadbands.

P_ME_NB_1 (parameter of measured value, scaled value) points can be used to change threshold values, from the default, for each individual M_ME_NB_1 analog point. There are three ways to send the measurands to the Master station. The measurands are part of the General Group and Group 2, so when a general interrogation or group 2 interrogation takes place all the measurands are included in the response. Also, there is a cyclic data period setting where it is configured in the scan period to send the measurands to the Master. And the last way, is by sending

spontaneously when a deadband overflow takes place. The IEC104 Channels sub-menu information is shown below.

Commands are executed over the Binary Outputs. The first 8 Binary Outputs are configured to receive Select/Operate Commands and the next 8 Binary Outputs are configured to receive Direct Execute Commands.

The **IEC104 CHANNEL 1 PORT** and **IEC104 CHANNEL 2 PORT** settings select the communications port assigned to the IEC104 protocol for each channel. When this setting is set to *Network - TCP*, the IEC104 protocol can be used over TCP/IP on channels 1 or 2. The **IEC104 NETWORK CLIENT ADDRESS** settings can force the relay to respond to a maximum of two specific IEC104 masters which own the configured IP Addresses. The settings in this sub-menu are shown below.

Note:

IEC104 CHANNEL 1 PORT takes the **Port Number 1** and **Client Address 1** to allow or reject connections. The same method is used by channel 2.

GROUPS OF DATA

The data is organized into groups in order to provide values when the controlling station requests them by a general or group interrogation.

Group 1 is set by the 96 Single Points (M_SP).

Group 2 is set by the 32 Measured values (M_ME).

Group 3 is set by the 32 Measured thresholds (P_ME).

These 96 Single Points and 32 Measured Values are also sent as a response to a General Interrogation.

The Integrated Totals (M_IT) has its own Counter Group 1, and it is sent as a response to a General Request Counter.

6.5.13 IEC60870-5-103

The point map for the 103 is different from the one shared by the IEC104 and DNP protocols. IEC 60870-5-103 serial communications protocol is supported on the rear RS485 port only.

The DNP, IEC 103 and Modbus cannot be enabled simultaneously. Only one instance of DNP 3.0, IEC 103 or Modbus can run on the RS485 serial port.

Path: SETPOINTS > DEVICE > COMMUNICATIONS > IEC 60870-5-103 PROTOCOL

IEC103 Common ASDU Adrrs

Range: 0 to 254 in steps of 1

Default: 0

IEC103 Sync Timeout

Range: 0 to 1440 minutes in steps of 1 min

Default: 0 min

All binary inputs are configured from FlexLogic operands. For a complete list, see Format Code FC142.

Note:

Pay attention when configuring the function type and information number of the different points, because they must be unique. There is no mechanism in the EnerVista D&I Setup or the front panel HMI to detect duplication of the information index. The IEC 60870-5-103 point lists always begin with point 0 and end at the first 0xFF value. Since IEC 60870-5-103 point lists must be in one continuous block, any points assigned after the first 0xFF point are ignored.

6.5.14 IEC 103 POINT LISTS

6.5.14.1 BINARY INPUT POINTS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC 103 POINTS LISTS > BINARY INPUTS

Point [x] Func Type

Range: 0 to 255

Default: 0

Point [x] Info Num

Range: 0 to 255

Default: 0

Point [x]

Range: Off, On, No, Yes, Cl 1 on, Cl 2 on, Cl 3 on, Cl 4 on,

Default: Off

Present in Gen Interrogation

Range: No, Yes

Default: No

6.5.14.2 MEASURANDS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC 103 POINTS LISTS > IEC 103 MEASURANDS

There are five ASDUs: First ASDU, Second ASDU, Third ASDU, fourth ASDU and Fifth ASDU. Each ASDU has the following settings for up to nine instances for each ASDU each of the following settings are applicable only to the selected ASDU:

nth ASDU Ident type

Range: 3, 9

Default: 3

nth ASDU Func Type

Range: 0 to 255

Default: 0

nth ASDU Info Num

Range: 0 to 255

Default: 0

nth ASDU Scan Timeout

Range: 0 to 100 seconds

Default: 0 s

Each of the following settings are common to all instances

nth Analog Entry

Range: Off, [Protection function]

Default: off

nth Analog Factor

Range: 0.000 to 65.535

Default: 0.000

nth Analog Offset

Range: -32768 to 32767

Default: 0

6.5.14.3 COMMANDS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC 103 POINTS LISTS > COMMANDS

There are 32 instances of commands: Commands 0 to Commands 31

Command [x] Func Type

Range: 0 to 255

Default: 0

Command [x] Info Num

Range: 0 to 255

Default: 0

Command [x] ON

Range: OFF, [options]

Default: OFF

Command [x] OFF

Range: OFF, [Breaker and Switch open close options, Virtual input options]

Default: OFF

6.5.15 IEC 103 DISTURBANCE RECORDER

SETPOINTS > DEVICE > COMMUNICATIONS > IEC103 DISTURBANCE RECORDER > DIGITAL CHANNEL 1(64)

There are 64 digital channels, each with the following settings:

FUNC TYPE

Range: 0 to 255

Default: 0

INFO NUM

Range: 0 to 255

Default: 0

6.5.16 GOOSE SUBSCRIBE

6.5.16.1 REMOTE INPUTS

SETPOINTS > DEVICE > COMMUNICATIONS > GOOSE SUBSCRIBE > REMOTE INPUTS

There are 256 remote inputs, each with the following settings:

NAME

Range: Up to 13 alphanumeric characters

Default RI [x]

DEFAULT STATE

Range: Off, On, Latest/Off, Latest/On

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled

6.5.16.2 REMOTE INPUTS DPS

SETPOINTS > DEVICE > COMMUNICATIONS > GOOSE SUBSCRIBE > REMOTE INPUTS DPS

There are 16 remote inputs, each with the following settings:

NAME

Range: Up to 13 alphanumeric characters

Default RI DPS [x]

DEFAULT STATE

Range: Intermediate, Off, On, Bad State, Latest

Default: Latest

6.5.16.3 GOOSE ANALOG

Range: Up to 13 alphanumeric characters

*Default: Blank***SETPOINTS > DEVICE > COMMUNICATIONS > GOOSE SUBSCRIBE > GOOSE ANALOG**

Float settings (1 to 24)

FLOAT NAME

Range: Up to 13 alphanumeric characters

Default GOOSE Float[x]

FLOAT ID

Range: Up to 13 alphanumeric characters

Default: Blank

DEFAULT MODE

Range: Default value, Last known

Default: Default Value

DEFAULT VALUE

Range: -10000000.000 to 10000000.000

Default: 1000.000

UNITS

Range: Up to 13 alphanumeric characters

Default: Blank

PU BASE

Range: 0.001 to 10000000.000

Default: 1.000

SINT32 settings (1 to 8)

SINT32 NAME

Range: Up to 13 alphanumeric characters

Default: GOOSE Sint [x]

SINT32 ID

Range: Up to 13 alphanumeric characters

Default: Blank

DEFAULT MODE

Range: Default value, Last known

Default: Default Value

DEFAULT VALUE

Range: -10000000.000 to 10000000.000

Default: 1000

UNITS

Range: Up to 13 alphanumeric characters

Default: Blank

PU BASE

Range: 0.001 to 10000000.000

Default: 1.000

6.5.17 REMOTE MODBUS DEVICE

The Remote Modbus Device describes a device within the same network as the relay and the poll mode of operation for retrieving the data. The relay acts as a Modbus Master and initiates Modbus requests to the Modbus slave at a defined poll interval or per trigger.

Path: *Device > Communications > Remote Modbus Device > Device 1*

DEVICE NAME

Range: 13 Alphanumeric Characters

Default: BSG3

The Remote Modbus Device Name defaults to the Powell BriteSpot Thermal Monitoring device (BSG3).

DEVICE PROFILE

Range: 13 Alphanumeric Characters

Default: BSG3

The Remote Modbus Device default profile is for the Powell BriteSpot Thermal Monitoring device (BSG3). The 27 analog and 27 digital operands that are available in the device are supported and are pre-configured in the default settings file. The data defined for BSG3 are described in the *8 Series Protection Relay Platform Communications Guide*.

Other device profiles can be configured as described in the following section.

IP ADDRESS

Range: Standard IPV4 network address format

Default: 0.0.0.0

SLAVE ADDRESS

Range: 1 to 254 in steps of 1

Default: 254

MODBUS PORT

Range: 0 to 10000 in steps of 1

Default: 502

POLL RATE

Range: Off, 3 to 120 minutes in steps of 1

Default: 3 minutes

TRIGGER

Range: Any FlexLogic operand

Default: Off

6.5.17.1 REMOTE MODBUS DEVICE EDITOR

The Remote Modbus Device Editor allows customization of the generic Modbus device. Using this feature, data can be read from another device on the network. The data retrieved is mapped from Digital Points to FlexLogic operands, and from Analog Points to FlexAnalog values for use in relay logic operations.

To use the Remote Modbus Device Editor, follow these steps:

1. In the EnerVista D&I Setup, navigate to **Device > Communications > Remote Modbus Device > Device 1**.
2. To edit or replace the default BSG3 profile, click the **Profile Editor** button.
3. If required, create a new profile and add it to the profile list by clicking **New** and entering a name for the new profile when prompted.
Click **OK** to create the new profile.
 - Profiles are stored in the directory C:\Users\Public\Documents\GE Power Management\8SeriesPC\RMD_Profiles for a default installation, or in a similar path corresponding to the EnerVista D&I Setup installation path.
 - Profile files have the extension .8gmd, and are XML files.
4. Select an existing profile and click **Edit**.
The profile opens in the Remote Modbus Device Profile Editor window, with all configured points listed.
5. To add a Digital Point enter a name in the Label column and an address in the Modbus Address column. The remaining columns fill with default values that can be edited as needed. Use the **Delete Row** button to delete entries.
The following fields are available for each Digital Point:
 - **Label**: The name for the point, to a maximum of 13 characters
 - **Modbus Address (Hex)**: The Modbus Address for the point, in hexadecimal
 - **Read Function**: The Modbus function to be used for reading the point (function 3 or function 4).
 - **Enumeration Reference**: Selects the enumeration to apply to this point.
 - **Source Mask**: The bit from the source to use as a source for the point. For example, if the Source Mask is 16, bit 4 will be used. (Bits are numbered 0 to 15.)
 - **Mask**: The specific position in a 32 bit value to pack the bit read from the source. For example, if Mask is 8198, the source bit is placed in the 13th position. (Bits are numbered from 0 to 31.)
6. To manage the enumerations used by Digital Points, click the **Edit Enumeration** button. Enumerations are used to display user-friendly text for the true/false settings of each point. A maximum of 10 enumerations are permitted.
Click each field to enter (or edit) the Name of the enumeration as shown in the list of Digital Points, along with the text to display for a False Value or a True Value. Use the **Delete Row** button to delete entries. All fields have a 13 character maximum.
When done, click **OK** to save changes.
7. To add an Analog Point enter a name in the Label column and an address in the Modbus Address column. The remaining columns fill with default values that can be edited as needed. Use the **Delete Row** button to delete entries.
When checked, the **Check for unique Modbus Addresses** checkbox does not allow duplicate addresses.
The following fields are available for each Digital Point:
 - **Label**: The name for the point, to a maximum of 13 characters
 - **Modbus Address (Hex)**: The Modbus Address for the point, in hexadecimal
 - **Read Function**: The Modbus function to be used for reading the point (function 3 or function 4).
 - **Data Type**: SINT16 - Signed Integer (16-bit), UINT16 - Unsigned Integer (16-bit), SINT32 - Signed Long (32-bit), UINT32 - Unsigned Long (32-bit), FLOAT - IEEE Floating Point Number (32-bit).
 - **Multiplier**: The multiplier to apply to the read data.
 - **Decimals**: The number of decimal places to add to the read data. For example, a Decimal entry of 2 results in dividing the read data by 10*10=100.
 - **Unit**: The units associated with this value, to a maximum of 6 characters.
8. To select a profile, navigate to **Device > Communications > Remote Modbus Device > Device 1**. Under **Device Profile**, a profile can be selected from the drop-down list.
Click **Save** to save your changes. If you are working online, a new CID file will be created and sent to the relay.

Note:

When a new CID file is uploaded, the **DEVICE IN SERVICE** state (**Setpoints > Device > Installation**) switches to *Not Ready* for the duration of the upload.

6.5.18 IEC 61850 MMS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC61850 MMS

MMS PROTOCOL

Range: Disabled, Enabled

Default: Enabled

6.5.19 TFTP

SETPOINTS > DEVICE > COMMUNICATIONS > TFTP

TFTP Protocol

Range: Disabled, Enabled

Default: Enabled

6.5.20 SFTP/SSH

SETPOINTS > DEVICE > COMMUNICATIONS > SFTP/SSH

SFTP/SSH

Range: Disabled, Enabled

Default: Enabled

6.5.21 SNMP

The Simple Network Management Protocol (SNMP) is a network protocol designed to manage devices in an IP network. The SNMP system consists of an agent, a manager and the communication protocol between agent and manager. 8-series relays implement the SNMP agent functionality to provide SNMP services to the SNMP manager. The SNMP manager is the client and is not in the scope of this specification.

SNMP implementation uses UDP as the transport protocol. The SNMP agent running in the device, uses port 161 to process SNMP manager's request. For the SNMP agent to report the trap messages, SNMP manager uses port 162. SNMPv2c and SNMPv3 both use UDP and the same port. SNMPv2c provides a security mechanism via the use of a community name in plain text. An SNMP Read-Only Community String is implemented in the device, which is like a user id or password that is sent along with each SNMP Get-Request. SNMPv3 uses User-based Security Model (USM) and provides security via authentication and privacy. SNMPv3 uses HMAC-MD5-96 and HMAC-SHA-96 as the authentication protocols and uses Cipher Block Chaining Data Encryption Standard (CBC-DES) symmetric encryption protocol as the privacy protocol.

SNMP Protocol Operations	Supported by product?
GET REQUEST	YES
GET NEXT REQUEST	YES
GET RESPONSE	YES
SET REQUEST	NO
TRAP	YES
GETBULK REQUEST	YES

SNMP Protocol Operations	Supported by product?
INFORM	NO

Note:

A full list of supported SNMP services are listed in RFC3416 for SNMPv3.

Path: *Device > Communications > SNMP*

SNMP FUNCTION

Range: Disabled, Enabled

Default: Disabled

This setting enables and disables the SNMP functionality. When set to Disabled, SNMP services are disabled. When set to enabled, SNMP services are enabled and MIBs are reported to SNMP client.

SNMP VERSION

Range: V3, V2C

Default: V3

This setting specifies the SNMP version to be used.

TRAP DEST. IP1

Range: 0.0.0.0 to 223.255.255.254 in steps of 1

Default: 0.0.0.0

This is the Trap destination IP for the SNMP interface, which needs to be set to the SNMP manager IP address. Setting this cell to 0.0.0.0 disables the Trap interface.

TRAP DEST. IP2

Range: 0.0.0.0 to 223.255.255.254 in steps of 1

Default: 0.0.0.0

This is the Trap destination IP for the SNMP interface, which needs to be set to the SNMP manager IP address. Setting this cell to 0.0.0.0 disables the Trap interface.

COMMUNITY NAME

Range: 8 ACSII characters

Default: AAAAAAAA

This is the SNMP v2c community name setting, used for authentication between the SNMP manager and the relay. The community name must be the same in both the SNMP Manager and the IED.

USER NAME

Range: 16 ACSII characters

Default: ReadOnlyUserName

This setting is the SNMP v3 user name.

SECURITY LEVEL

Range: NoAuthNoPriv, AuthNoPriv, AuthPriv

Default: AuthNoPriv

This represents the SNMP v3 security level. The levels of security are defined by the SNMP standard: 0 - Without authentication and without privacy (NoAuthNoPriv) 1 - With authentication but without privacy (AuthNoPriv) 2 - With authentication and with privacy (AuthPriv) Authentication is used to check the identity of users. Privacy allows for encryption of SNMP messages.

AUTH PROTOCOL

Range: HMAC-MD5-96, HMAC-SHA-96

Default: HMAC-MD5-96

This is the SNMP v3 Authentication Protocol, which sets the hash-based message authentication code function used for the authentication of messages. MD5 - Message Digest implementation SHA - Secure Hash Algorithm implementation SHA is considered cryptographically stronger than MD5 but takes a longer time to compute. Both implementations are considered secure. The SNMP Manager and the IED must use the same Authentication Protocol.

AUTH PASSWORD

Range: 8 ACSII characters

Default: AAAAAAAA

The setting used for the SNMP v3 Authentication Password.

ENCRYPT PROTOCOL

Range: CBC-DES

Default: CBC-DES

This is the SNMP v3 encryption protocol, which is a read-only setting.

ENCRYPT PASSWORD

Range: 8 ACSII characters

Default: BBBBBBBB

This is the SNMP v3 encryption protocol, which is a read-only setting.

6.5.21.1 SNMP MIB

SNMP uses a Management Information Base (MIB), which contains information about parameters to supervise. The MIB format is a tree structure, with each node in the tree identified by a numerical Object Identifier (OID). Each OID identifies a variable that can be read using SNMP with the appropriate software. The information in the MIB is standardized. Each device in a network (workstation, server, router, bridge, etc.) maintains a MIB that reflects the status of the managed resources on that system, such as the version of the software running on the device, the IP address assigned to a port or interface, the amount of free hard drive space, or the number of open files. The MIB does not contain static data, but is instead an object-oriented, dynamic database that provides a logical collection of managed object definitions. The MIB defines the data type of each managed object and describes the object. The following table lists all the MIB points and the data sources mapping. The data source mapping may differ between products.

Address				Name	Trigger Map
1.3.6.1.4.1.13248.				OID Prefix	
	1			8 Series	
		1		System Data	
			1	Model Number	No

Address				Name	Trigger Map
			2	Serial Number	No
			3	Software Revision	No
			4	Frequency	No
		2		Date and Time	
			1	Date Time	No
			2	IRIG-B Status (not for 859)	Yes
			3	Active Sync Source	Yes
			5	SNTP Server 1	No
			6	SNTP Server 2	No
			7	SNTP Status	Yes
			8	PTP Status	Yes
		3		System Alarms	
			1	Settings File Rejected	Yes
			2	Major Error	Yes
			3	Minor Error	Yes
			4	Port 4 Fails	Yes
			5	Port 5 Fails	Yes
			6	SNTP Failure	Yes
			7	PTP Failure	Yes
			8	IRIG-B Failure (not for 859)	Yes
			9	Device Out Of Service	Yes
		4		Device Mode	
			1	IED Mod/Beh	Yes
			2	Simulation Mode of Subscription	Yes

SNMPv3 SNMP-USER-BASED-SM-MIB

When the SNMP version is set to **V3**, SNMP client can access **MIB SNMP-USER-BASED-SM-MIB** as defined in RFC3414. When the version is set to **V2C**, this MIB is not accessible. SNMPv3 must implement this MIB to satisfy USM conformance statement if SNMPv3 adopts USM as its security model. The following table shows the SNMP user-based security model MIB.

Address				Name	Trigger Map
1.3.6.1.6.3.15				snmpUsmMIB	
	1			usmMIBObjects	
		1		usmStats	
			1	usmStatsUnsupportedSecLevels	No
			2	usmStatsNotInTimeWindows	No
			3	usmStatsUnknownUserNames	No

Address					Name	Trigger Map
			4		usmStatsUnknownEngineIDs	No
			5		usmStatsWrongDigests	No
			6		usmStatsDecryptionErrors	No
	2				usmUser	
			1		usmUserSpinLock	No
			2		usmUserTable	
				1	usmUserEntry	
				1	usmUserEngineID	No
				2	usmUserName	No
				3	usmUserSecurityName	No
				4	usmUserCloneFrom	No
				5	usmUserAuthProtocol	No
				6	usmUserAuthKeyChange	No
				7	usmUserOwnAuthKeyChange	No
				8	usmUserPrivProtocol	No
				9	usmUserPrivKeyChange	No
				10	usmUserOwnPrivKeyChange	No
				11	usmUserPublic	No
				12	usmUserStorageType	No
				13	usmUserStatus	No

The below table shows the SNMP MIB for PRP:

Address										Name
0										ITU
	1									ISO
		0								Standard
			62439							IECHighavailability
				3						PRP
					1					linkRedundancyEntityObjects
						0				IreConfiguration
							0			IreConfigurationGeneralGroup
								1		IreManufacturerName
								2		IreInterfaceCount
							1			IreConfigurationInterfaceGroup
								0		IreConfigurationInterfaces
									1	IreInterfaceConfigTable
									1	IreInterfaceConfigEntry

Address											Name
										1	IreInterfaceConfigIndex
										2	IreRowStatus
										3	IreNodeType
										4	IreNodeName
										5	IreVersionName
										6	IreMacAddressA
										7	IreMacAddressB
										8	IreAdapterAdminStateA
										9	IreAdapterAdminStateB
										10	IreLinkStatusA
										11	IreLinkStatusB
										12	IreDuplicateDiscard
										13	IreTransparentReception
										14	IreHsrLREMode
										15	IreSwitchingEndNode
										16	IreRedBoxIdentity
										17	IreSanA
										18	IreSanB
										19	IreEvaluateSupervision
										20	IreNodesTableClear
										21	IreProxyNodeTableClear
					1						IreStatistics
						1					IreStatisticsInterfaceGroup
							0				IreStatisticsInterfaces
								1			IreInterfaceStatsTable
										1	IreInterfaceStatsIndex
										2	IreCntTotalSentA
										3	IreCntTotalSentB
										4	IreCntErrWrongLANA
										5	IreCntErrWrongLANB
										6	IreCntReceivedA
										7	IreCntReceivedB
										8	IreCntErrorsA
										9	IreCntErrorsB
										10	IreCntNodes
										11	IreOwnRxCntA

Address											Name
										12	IreOwnRxCntB
									3		IreProxyNodeTable
										1	IreProxyNodeEntry
										1	reProxyNodeIndex
										2	reProxyNodeMacAddress

6.5.22 OPC-UA

Path: **Setpoints > Device > Communications > OPC-UA**

FUNCTION

Range: *Disabled, Enabled*

Default: *Disabled*

OPC UA setting is available on all Ethernet port of 8 Series with advanced communication order code, it is not available for the order code of SE.

6.5.23 ETHRNETIP

Path: **Setpoints > Device > Communications > EthernetIP**

PORT

Range: *Disabled, Network Port 1, Network Port 2, Network Port 4, Network Port 5*

Default: *Disabled*

8 Series relays support only one port for Ethernet/IP.

6.5.24 IEC 61850

The optional communications processor supports both the IEC 61850 GOOSE and IEC 61850 MMS Server service as per IEC 61850 standard Ed. 2. The GOOSE messaging service provides the ability for the relay to Publish/Subscribe Digital Input and other element statuses and its Quality and Timestamp to/from other IEDs with supporting GOOSE messaging service. Server support allows remote control center, RTU/Gateway, local HMI or other client role devices access to the relay for monitoring and control. The configuration of IEC 61850 services is accomplished using the EnerVista D&I Setup.

The IEC 61850 Server (i.e. the relay) reports information to the IEC 61850 Client, such as the Local HMI, RTU and Gateway. This information consists of logical device data, data sets, data control block, logical nodes and their data attributes.

Appendix B lists the implementation details of IEC 61850, including the logical nodes and number of instances for each that are supported..

Data Obj	data attribute	Type	FC	Name	Description
PhyHealth		ENS			This physical device's health
	stVal	ENUMERATED	ST		3 when ANY MAJOR ERROR ==On; 2 when ANY MINOR ERROR==On; 1 otherwise

6.5.24.1 IEC61850 CONFIGURATOR

The relay supports the IEC 61850 protocol, which is an order code option.


The IEC 61850 configurator is found in both the online and offline section of the EnerVista D&I Setup for configuring the online and offline settings file respectively.

ONLINE SETTINGS FILE

Two options are available to configure the relay's online settings file.

1. Configuration

- Configure the device through the Device Setup or Quick connect screen.
- The IEC 61850 Configurator item is displayed after Maintenance.

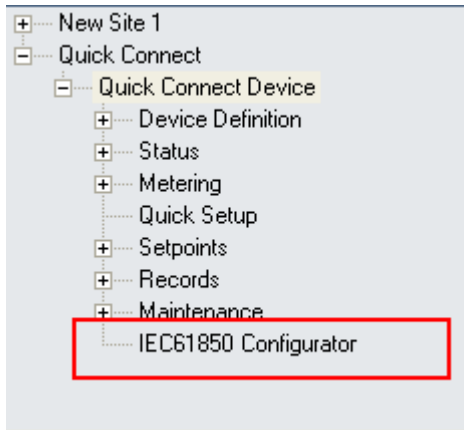


- Launch the online IEC 61850 configurator screen, by double-clicking on **IEC61850 Configurator**.
- Select the required settings from the different tab displays (in the configurator screen) to complete the IEC 61850 configuration.

2. Online right-click option

- Select any online relay and right click on the selected item. More options become available for selection, as described below.

ADDITIONAL OPTIONS

Generate ICD file: The menu option generates a default ICD file with the respective order code option and saves the file to the path selected previously.

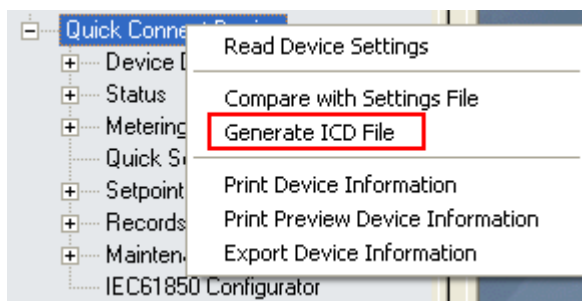


Read Device Settings: The menu option reads all the settings from the relay by TFTP and creates a file with extension *.CID. The created *.CID file consists of two sections. A private section where all non IEC 61850 settings are available, and a public section in which IEC 61850 related settings are implemented.

When creating a CID file using a 3rd party ICT/SCL tool, ensure the following:

- The order code in the CID file must match the device order code if writing the CID file directly into the relay. The **Desc** value in communication settings of the CID file must match the relay's order code.
- The maximum allowed services must be equal or below the specified limits as in ICD/CID.
- Configure Datasets only in LLN0 logical node.
- Creating new LD, LN, and communication-AP settings is not recommended.

OFFLINE SETTINGS FILE

The **Generate ICD File** menu option generates a default ICD file with the respective order code option and saves the file to the path selected previously.

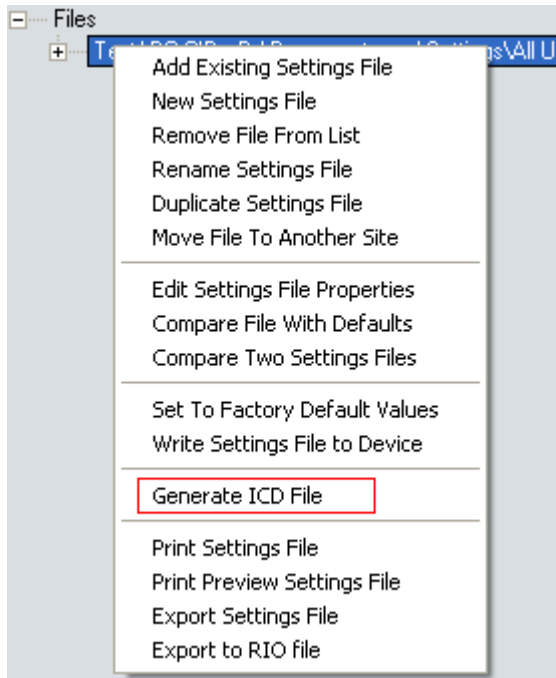

IEC 61850 CONFIGURATOR DETAILS

The IEC61850 Configurator allows editing of all sections of the IEC 61850 CID and ICD file. No other operations can be performed in the EnerVista D&I Setup if the IEC61850 Configurator is open. Close the IEC 61850 session to perform other operations.


Note:

When the IEC 61850 configuration is saved while online, the **DEVICE IN SERVICE** state (**Setpoints > Device > Installation**) switches to *Not Ready* for the duration of the upload. This ensures that all new settings are applied before the device is operational.

The IEC61850 Configurator for firmware V4.1 and later consists of these items in the hierarchy menu.

- Access Point Addressing
- Settings
- DataSets
- Reports
- GOOSE

:

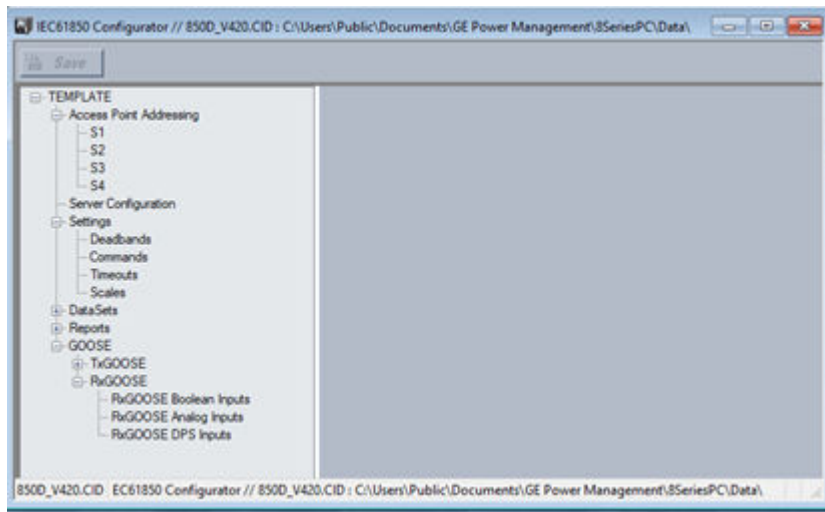

6.6 TRANSIENT RECORDER

The Transient Recorder contains waveforms captured at the same sampling rate as the other relay data at the point of trigger. By default, data is captured for all AC current and voltage inputs available on the relay as ordered. Transient record is generated upon change of state of at least one of the assigned triggers: **Trigger Source**, **Trigger on Any Pickup**, **Trigger on Any Operate**, **Trigger on Alarm**, or **Trigger on Trip**.

The number of cycles captured in a single transient record varies based on the number of records, sample rate, and the number of selected channels. There is a fixed amount of data storage for the Transient Recorder: the more data captured, the less the number of cycles captured per record.

Path: *Setpoints > Device > Transient Recorder*

NUMBER OF RECORDS

Range: 1 to 16 in steps of 1

Default: 5

The selection from the range defines the desired number of records.

SAMPLES PER CYCLE

Range: 8/c, 16/c, 32/c, 64/c, 128/c

Default: 32/c

This setpoint provides a selection of samples-per-cycle for representing the waveform. The waveform records can be viewed using the EnerVista D&I Setup software.

TRIGGER MODE

Range: Overwrite, Protected

Default: Overwrite

When *Overwrite* setting is selected, the new records overwrite the old ones, meaning the relay will always keep the newest records as per the selected number of records. In *Protected* mode, the relay will keep the number of records corresponding to the selected number of records, without saving further records that are beyond the selected number of records.

TRIGGER POSITION

Range: 0 to 100% in steps of 1%

Default: 20%

This setting indicates the location of the trigger with respect to the selected length of record. For example at 20% selected trigger position, the length of each record will be split on 20% pre-trigger data, and 80% post-trigger data.

TRIGGER SOURCE:

Range: Off, Any FlexLogic operand

Default: Off

The trigger source can be any digital input: an operand from the list of FlexLogic operands, a contact input, a contact output, a virtual input or output, or a remote input or output.

TRIGGER ON ANY PICKUP

Range: On, Off

Default: Off

Selection of *On* enables triggering of the recorder upon pickup condition detected by any of the protection or control elements.

TRIGGER ON ANY OPERATE

Range: On, Off

Default: Off

Selection of *On* enables triggering of the recorder upon operate state of any of the enabled protection or control elements.

TRIGGER ON TRIP

Range: On, Off

Default: Off

Selecting the *On* setting enables triggering of the recorder when any of the protection elements configured as a *Trip* function operates, or the state of the operand assigned to operate the #1 Trip output relay changes to High.

TRIGGER ON ALARM

Range: On, Off

Default: Off

Selecting *On* setting enables triggering of the recorder when any of the protection elements configured as *Alarm*, or *Latched Alarm* function operates, or the state of the operand assigned to trigger the Alarm LED changes to High.

DIGITAL INPUT 1 to 64

Range: Off, Any FlexLogic operand

Default: Off

ANALOG INPUT 1 to 16

Range: Off, Any FlexLogic analog parameter

Default: Off

Note:

A consecutive transient record cannot be triggered until the first record has been completed.

6.7 DATA LOGGER

The data logger samples and records up to 16 analog parameters at a configured rate. All data is stored in non-volatile memory, where the information is retained upon a relay control power loss.

The data logger can be configured with a few channels over a long period of time, or with larger number of channels for a shorter period of time. The relay automatically partitions the available memory between the channels in use.

The selection of the rate for logging data also affects the duration of recorded data. The data logger has longer duration for sampling rates at longer periods of time (i.e. 1 minute, 30 minutes, 1 hour), as compared to sampling rates at short periods (i.e. per cycle, or per second).

The recorded data can be downloaded to EnerVista D&I Setup and displayed with parameters on the vertical axis and time on the horizontal axis.

Note:

If data is not available for the entire duration of pre-trigger, the trigger position will be based on available pre-trigger.

Path: *Setpoints > Device > Data Logger*

FUNCTION

Range: Disabled, Continuous, Triggered

Default: Continuous

This setting configures the mode in which the data logger operates. When set to *Continuous*, the data logger actively records any configured channels at the rate defined in the Data Logger Rate setting. The data logger is idle in this mode if no channels are configured. When set to *Triggered*, the data logger begins to record any configured channels at the instance of the rising edge of the trigger (FlexLogic operand). The data logger ignores all subsequent triggers and continues to record data until the active record is full. Once the data logger is full, capturing of data stops until it is cleared.

Clear Data Logger

Once the data logger is full, a Clear Data Logger command is required to clear the data logger record, before a new record can be started. Performing the Clear Data Logger command also stops the current record and resets the data logger to be ready for the next trigger. The Clear Data Logger command is located at **Setpoints > Records > Clear Records**. The Data Logger Storage Capacity table below shows an example of the dependency of the data logger storage capacity with respect to the selected number of channels, and the selected rate (time interval) at which the logged values are taken. The Data Logger buffer space can be monitored to produce an alarm when the logged data occupies 80% of the data logger storage space. Target message, and operand Data Logger ALRM is generated at this time.

TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setting selects the signal used to trigger the start of a new data logger record. Any FlexLogic operand can be used as a trigger source. The Triggered setting only applies when the Data Logger Function is set to "Triggered".

TRIGGER POSITION

Range: 0 to 50% steps of 1%

Default: 20%

This setpoint defines the percentage of buffer space that is used for recording pre-trigger samples.

DATA LOG FULL ALARM (4.10 onwards)

Range: Disabled, Enabled

Default: Enabled

This setpoint disables/enables the *Data Logger Full* event and target message.

RATE

Range: 1 cycle, 1 second, 30 seconds, 1 minute, 15 minutes, 30 minutes, 1 hour, 6 hours, 8 hours, 12 hours, 24 hours

Default: 1 minute

This setting selects the time interval at which the actual value is recorded.

CHANNEL 1(16) SOURCE

Range: Off, Any FlexAnalog parameter

Default: Off

This setpoint selects the metering analog value that is to be recorded in Channel 1(16) of the data log. The parameters available in a given relay are dependent on: the type of relay, the type and number of CT/VT hardware installed, and the type and number of Analog Inputs hardware installed. Upon startup, the relay automatically prepares the parameter list.

CHANNEL 1(16) MODE

Default: Sample

Range: Sample, Min, Max, Mean

This setpoint defines the type of sample to be logged in the data logger record with respect to the selected rate, i.e the time interval selected under the setpoint **Rate**.

While enabled the Data Logger executes every protection pass and each of the four modes —*Sample*, *Max*, *Min* or *Mean*. The FlexAnalog values are updated at protection pass rate:

In *Sample* mode the data logger records the FlexAnalog value updated in the first protection pass from the time interval selected under setpoint **Rate**.

In *Max* mode the data logger records the maximum protection pass value of the selected FlexAnalog parameter from all protection pass values from the time interval selected under setpoint **Rate**.

In *Min* mode the data logger records the minimum protection pass value of the selected FlexAnalog parameter from all protection pass values from the time interval selected under setpoint **Rate**.

In *Mean* mode, the data logger records the average value among all the values at protection pass rate, from the time interval selected under setpoint **Rate**.

The mean (average) is calculated simply using the well known ratio between the sum of all the values and their number over the time interval.

Sampling Rate [sec]		Number of Channels	Time-Window covered			
			[sec]	[min]	[hour]	[day]
1 cycle	50Hz	1	1310.7	21.8	0.4	0.0
		8	546.1	9.1	0.2	0.0
		16	327.7	5.5	0.1	0.0
	60Hz	1	1092.3	18.2	0.3	0.0
		8	455.1	7.6	0.1	0.0
		16	273.1	4.6	0.1	0.0
1		1	65536.0	1092.3	18.2	0.8
		8	27306.0	455.1	7.6	0.3
		16	16384.0	273.1	4.6	0.2
30		1	1966080.0	32768.0	546.1	22.8
		8	819180.0	13653.0	227.6	9.5
		16	491520.0	8192.0	136.5	5.7
60		1	3932160.0	65536.0	1092.3	45.5
		8	1638360.0	27306.0	455.1	19.0
		16	983040.0	16384.0	273.1	11.4
900		1	58982400.0	983040.0	16384.0	682.7
		8	24575400.0	409590.0	6826.5	284.4
		16	14745600.0	245760.0	4096.0	170.7
1800		1	117964800.0	1966080.0	32768.0	1365.3
		8	49150800.0	819180.0	13653.0	568.9
		16	29491200.0	491520.0	8192.0	341.3
3600		1	235929600.0	3932160.0	65536.0	2730.7
		8	98301600.0	1638360.0	27306.0	1137.8
		16	58982400.0	983040.0	16384.0	682.7

Figure 120: Data Logger Storage Capacity

6.8 FAULT REPORTS

The relay supports up to 15 fault reports. The trigger conditions and the analog quantities to be stored are entered in this menu.

When enabled, this function monitors the pre-fault trigger. The pre-fault data are stored in the memory for prospective creation of the fault report on the rising edge of the pre-fault trigger. The element waits for the fault trigger as long as the pre-fault trigger is asserted, but not shorter than 1 second. When the fault trigger occurs, the fault data is stored and the complete report is created. If the fault trigger does not occur within 1 second after the pre-fault trigger drops out, the element resets and no record is created.

The user-programmable fault report contains a header with the following information:

- Relay model
- Device name
- Firmware revision
- Date and time of trigger
- Name of pre-fault trigger (FlexLogic operand)
- Name of Fault trigger (FlexLogic operand)
- Active setting group at the time of pre-fault trigger
- Active setting group at the time of fault trigger.

The fault report continues with the following information:

- All current and voltage phasors (one cycle after the fault trigger)
- Pre-fault values for all programmed analog channels (one cycle before pre-fault trigger)
- Fault values of all programmed analog channels (one cycle after the fault trigger)

Each Fault Report created can be saved as a text file using the Enervista software. The file names are numbered sequentially to show which file is older than the other.

The trigger can be any FlexLogic operand, but in most applications it is expected to be the same operand, usually a virtual output, that is used to drive an output relay to trip a breaker. A **Fault Rpt Trig** event is automatically created when the report is triggered.

If a number of protection elements, such as overcurrent elements, are ORed to create a fault report trigger, the first operation of any element causing the OR gate output to become high triggers the fault report. However, If other elements operate during the fault and the first operated element has not been reset (the OR gate output is still high), the fault report is not triggered again. Considering the reset time of protection elements, there is very little chance that fault report can be triggered twice in this manner. As the fault report must capture a usable amount of pre and post-fault data, it cannot be triggered faster than every 20 ms.

The fault report stores data, in non-volatile memory, pertinent to an event when triggered. Each fault report is stored as a file to a maximum capacity of fifteen files. A sixteenth trigger overwrites the oldest file.

The Enervista software is required to view all captured data. The relay faceplate display can be used to view the date and time of trigger, the fault type and the distance location of the fault.

Path: Setpoints > Device > Fault Report

FUNCTION

Range: Disabled, Enabled

Default: Disabled

PRE-FAULT TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setpoint specifies the FlexLogic operand to capture the pre-fault data. The rising edge of this operand stores one cycle-old data for subsequent reporting. The element waits for the fault trigger to actually create a record as long as the operand selected as Pre-Fault Trigger is On. If the operand remains Off for 1 second, the element resets and no record is created.

FAULT TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setpoint specifies the FlexLogic operand to capture the fault data. The rising edge of this operand stores the data as fault data and results in a new report. The trigger (not the pre-fault trigger) controls the date and time of the report. The distance to fault calculations are initiated by this signal.

ANALOG CHANNELS 1 to 32

These settings specify an actual value such as voltage or current magnitude, true RMS, phase angle, frequency, temperature, etc., to be stored should the report be created. Up to 32 analog channels can be configured.

6.9 EVENT DATA

The Event Data feature stores 64 FlexAnalog quantities each time an event occurs. The relay is able to capture a maximum of 1024 records. The Event Data behavior matches that of the Event Recorder. This is a Platform feature and a Basic option so it has no dependencies.

There is no enabling or disabling of the feature. It is always on.

When changes are made to the Event Data settings, the Event data is cleared and the Snapshot.txt file is deleted. The Event Record remains as is and is not cleared.

Path: *Setpoints > Device > Event Data*

PARAMETER 1 to 64

Range: Off, any FlexAnalog Parameter

Default: Off

6.10 FLEX STATES

The Flex State feature provides a mechanism where any of 256 selected FlexLogic operand states or any inputs can be used for efficient monitoring.

The feature allows user-customized access to the FlexLogic operand states in the relay. The state bits are packed so that 16 states may be read out in a single Modbus register. The state bits can be configured so that all of the states which are of interest are available in a minimum number of Modbus registers.

Path: *Setpoints > Device > Flex States*

PARAMETER 1 (to 256)

Range: Off, Any FlexLogic operand

Default: Off

6.11 FRONT PANEL

The relay provides an easy to use faceplate for menu navigation through five navigation pushbuttons and high quality graphical display. Conveniently located on the panel is a group of seven pushbuttons for **Up/Down** value selection, **Enter**, **Home**, **Escape**, **Help**, and **Reset** functions. The faceplate includes three programmable function pushbuttons with LEDs.

The ten pushbutton membrane faceplate (available for 850 only for hardware versions A and B, and all models for hardware version C) includes ten programmable function pushbuttons and twelve programmable LEDs.

Note:

The USB port on the Front Panel is intended for connection to a portable PC.

6.11.1 PROGRAMMABLE LEDs

Path: *Setpoints > Device > Front panel > Programmable LEDs*

LED “IN SERVICE”

Range: Off, Any FlexLogic operand

Default: In-Service

This setpoint requires assigning of FlexLogic operand to turn on the LED “In Service” This LED indicates that control power is applied, all monitored inputs, outputs, and internal systems are OK, and that the device has been programmed.

LED “TRIP”

Range: Off, Any FlexLogic operand

Default: Any Trip

The setpoint requires a FlexLogic operand to be assigned in order to turn on the **TRIP** LED, when triggered. This indicator always latches, and a reset command must be initiated to allow the latch to be reset.

The LED can be also triggered by the operation of a protection, control, or monitoring element with its function selected as *Trip*.

LED “ALARM”

Range: Off, Any FlexLogic operand

Default: Any Alarm

The setpoint requires a FlexLogic operand to be assigned in order to turn on the **ALARM** LED, when triggered. The indicator is a self-reset indicator, unless it is initiated from a protection, control, or monitoring element whose function is selected as *Latched Alarm*. Resetting the Latched Alarm LED is performed by initiating a Reset command.

LED “PICKUP”

Range: Off, Any FlexLogic operand

Default: Any Pickup

The setpoint requires a FlexLogic operand to be assigned in order to turn on the **PICKUP** LED, when triggered. The indicator is a self-rest indicator and will turn off if the condition evolves into a fault or the measured parameter drops below the pickup level.

LED x NAME

Range: Up to 13 alphanumeric characters

Default: LED 5

The setpoint is used to select the LED name by choosing up to 13 alphanumeric characters.

LED x COLOR

Range: Off, Red, Green, Orange

Default: Orange

The setpoint selects the color of the LED. Three colors are available for selection: *Red*, *Green*, and *Orange*.

Note:

This setting is not available for LEDs 18 to 24.

LED x TRIGGER

Range: Off, Any FlexLogic operands

Default: Testing On

This setpoint requires the assigning of a FlexLogic operand to trigger the selected LED upon operation.

LED x TYPE

Range: Self-reset, Latched

Default: Testing On

The setpoint defines the type of LED indication as either *Self-Reset* (the LED resets after the FlexLogic operand drops out), or *Latched* (the LED stays latched upon dropping out of the FlexLogic operand).

6.11.1.1 LED ALLOCATION TABLES**Default LED setpoints for 3 Pushbutton Front Panels**

	Name	Color	Trigger	Type
LED1	In Service	Green	In-Service	Self-Reset
LED2	Trip	Red	Any Trip	Latched
LED3	Alarm	Orange	Any Alarm	Self-Reset
LED4	Pickup	Green	Any Pickup	Self-Reset
LED5	TEST MODE	Orange	Testing ON	Self-Reset
LED6	MESSAGE	Orange	Active Target	Self-Reset
LED7	LOCAL MODE	Orange	Local Mode ON	Self-Reset
LED8	BKR1 OPEN	Green	BKR1 Opened (BKR1)	Self-Reset
LED9 (2 breakers)	BKR2 OPEN	Red	BKR1 Closed (BKR1)	Self-Reset
LED9 (1 breaker)	LED 9	Orange	Off	Self-Reset
LED10	STATOR DIFFNT	Red	Percent Diff OP	Self-Reset
LED11	GEN UNBALANCE	Red	UNBAL OP	Self-Reset
LED12	LOSS OF EXCIT	Orange	LOE Circle 1 OP	Self-Reset
LED13	AUX OVERVOLT	Orange	Aux OV 1 OP	Self-Reset
LED14	BKR 1 FAILURE	Orange	Breaker Fail 1 OP	Self-Reset

Default LED setpoints for 10 Pushbutton Membrane Front Panel

	Name	Color	Trigger	Type
LED1	In Service	Green	In-Service	Self-Reset
LED2	Trip	Red	Any Trip	Latched
LED3	Alarm	Orange	Any Alarm	Self-Reset
LED4	Pickup	Green	Any Pickup	Self-Reset
LED5	TEST MODE	Orange	Testing ON	Self-Reset
LED6	MESSAGE	Orange	Active Target	Self-Reset
LED7	LOCAL MODE	Orange	Local Mode ON	Self-Reset
LED8	BKR1 OPEN	Green	BKR1 Opened (BKR1)	Self-Reset
LED9	BKR1 CLOSED	Red	BKR1 Closed (BKR1)	Self-Reset
LED10	STATOR DIFFNT	Red	Percent Diff OP	Self-Reset
LED11	50P INST OC	Red	Ph IOC 1 OP	Self-Reset
LED12	LOSS OF EXCIT	Orange	LOE Circle 1 OP	Self-Reset
LED 13	Not available	Not available	Not available	Not available
LED 14	Not available	Not available	Not available	Not available
LED15	PB 1	Orange	PB 1 On	Self-Reset
LED16	PB 2	Orange	PB 2 On	Self-Reset
LED17	PB 3	Orange	PB 3 On	Self-Reset
LED18	PB 4	Orange	PB 4 On	Self-Reset
LED19	PB 5	Orange	PB 5 On	Self-Reset
LED20	PB 6	Orange	PB 6 On	Self-Reset
LED21	PB 7	Orange	PB 7 On	Self-Reset
LED22	PB 8	Orange	PB 8 On	Self-Reset
LED23	PB 9	Orange	PB 9 On	Self-Reset
LED24	PB 10	Orange	PB 10 On	Self-Reset

6.11.2 PROGRAMMABLE PUSHBUTTONS**Note:**

The 10 pushbutton panel is available only for the 850 for hardware versions A and B, and for all models from hardware version C.

The user-programmable pushbuttons provide an easy and error-free method of entering digital state (on, off) information. Depending on the faceplate three to ten pushbuttons are available for programming.

The digital state of the pushbuttons can be entered only locally (by directly pressing the front panel pushbutton). Typical applications include breaker control, autorecloser blocking and settings groups changes. The user-programmable pushbuttons are under the control level of password protection.

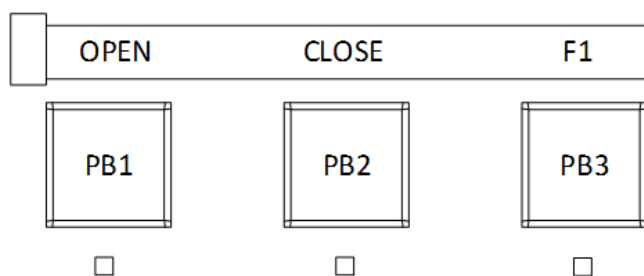


Figure 121: 3 Pushbutton Front Panel

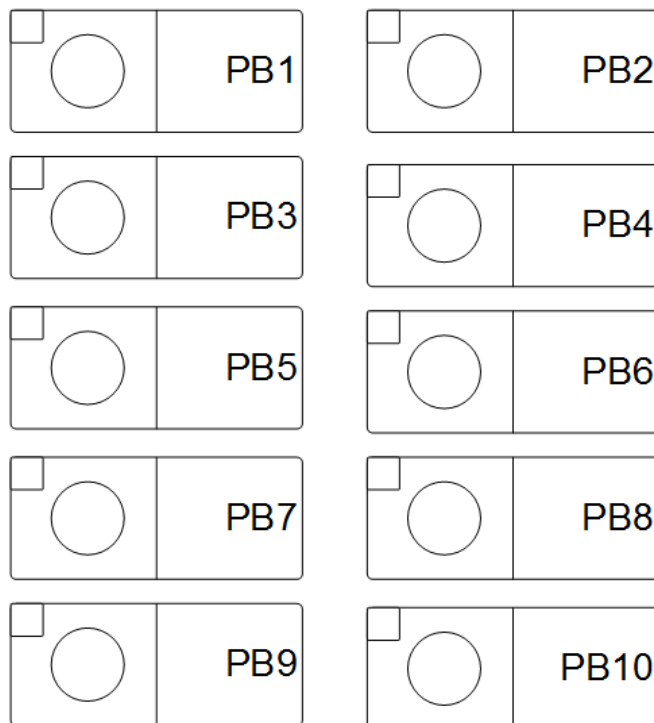


Figure 122: 10 Pushbutton Front Panel

Each pushbutton asserts its own on and off FlexLogic operands (for example, PUSHBUTTON 1 ON and PUSHBUTTON 1 OFF). These operands are available for each pushbutton and are used to program specific actions. Each pushbutton has an associated LED indicator. By default, this indicator displays the present status of the corresponding pushbutton; ON or OFF. This can be changed by programming the **LED Trigger** setting in the Programmable LED settings menu.

The activation and deactivation of user-programmable pushbuttons is dependent on whether latched or self-reset mode is programmed.

LATCHED MODE

In Latched Mode, a pushbutton can be set (activated) by directly pressing the associated front panel pushbutton. The pushbutton maintains the set state until deactivated by a **Reset** command or after a user-specified time delay. The state of each pushbutton is stored in non-volatile memory and maintained through loss of control power.

The pushbutton is Reset (deactivated) in Latched Mode by directly pressing the associated active front panel pushbutton. It can also be programmed to Reset automatically through the **PB 1 AUTORESET** and **PB 1 AUTORESET DELAY** settings. These settings enable the auto-reset timer and specify the associated time delay. The auto-reset timer can be used in select-before-operate (SBO) switching device control applications, where the

command type (CLOSE/OPEN) must be selected prior to command execution. The selection must Reset automatically if control is not executed within a specified time period.

SELF-RESET MODE

In Self-reset mode, a pushbutton remains active for the time it is pressed (the pulse duration) plus the Dropout time specified in the **PUSHBTN 1 DROPOUT TIME** setting. The pushbutton is Reset (deactivated) in Self-reset mode when the dropout delay specified in the **PUSHBTN 1 DROPOUT TIME** setting expires. The pulse duration of the pushbutton must be at least 50 ms to operate the pushbutton. This allows the user-programmable pushbuttons to properly operate during power cycling events and various system disturbances that may cause transient assertion of the operating signals.

The operation of each user-programmable pushbutton can be inhibited through the **PUSHBTN 1 LOCK** setting. If locking is applied, the pushbutton ignores the commands executed through the front panel pushbuttons. The locking functions are not applied to the auto-reset feature. In this case, the inhibit function can be used in SBO control operations to prevent the pushbutton function from being activated and ensuring “one-at-a-time” select operation.

The locking functions can also be used to prevent accidental pressing of the front panel pushbuttons.

Pushbutton states can be logged by the Event Recorder and displayed as Target Messages. In latched mode, user-defined messages can also be associated with each pushbutton and displayed when the pushbutton is ON or changing to OFF.

Path: *Setpoints > Device > Programmable PBs > Pushbutton 1(X)*

FUNCTION

Range: Self-reset, Latched, Disabled

Default: Self-reset

This setting selects the characteristic of the pushbutton. If set to *Disabled* the pushbutton is not active and the corresponding FlexLogic operands (both ON and OFF) are de-asserted. If set to **Self-reset** the control logic is activated by the pulse (longer than 100 ms) issued when the pushbutton is being physically pressed.

When in *Self-reset* mode and activated locally, the pushbutton control logic asserts the ON corresponding FlexLogic operand as long as the pushbutton is being physically pressed, and after being released the deactivation of the operand is delayed by the **PUSHBTN 1 DROPOUT TIME** setting. The OFF operand is asserted when the pushbutton element is deactivated.

If set to *Latched*, the control logic alternates the state of the corresponding FlexLogic operand between ON and OFF on each button press or by virtually activating the pushbutton (assigning Set and Reset operands). When in *Latched* mode, the states of the FlexLogic operands are stored in a non-volatile memory. Should the power supply be lost, the correct state of the pushbutton is retained upon subsequent power-up of the relay.

ID TEXT

Range: Up to 13 alphanumeric characters

Default: Open (PB1), Close (PB2), F1 (PB3), Gnd Trip Enabled (PB4), SCADA Enabled (PB5), Hot Line Tag (PB6), Demand Reset (PB7), Alt Settings (PB8), Target Reset (PB9), PB Block (PB10)

Default: Start (PB1), Stop (PB2), F1 (PB3), Gnd Trip Enabled (PB4), SCADA Enabled (PB5), Hot Line Tag (PB6), Demand Reset (PB7), Alt Settings (PB8), Target Reset (PB9), PB Block (PB10)

This setting specifies the 13-character line of the user-programmable message and is intended to provide the ID information of the pushbutton.

ON TEXT

Range: Up to 13 alphanumeric characters

Default: PB1 On (or PB[X] On)

This setting specifies the 13-character line of the user-programmable message and is displayed when the pushbutton is in the ON position.

OFF TEXT

Range: Up to 13 alphanumeric characters

Default: PB1 Off (or PB[X] On)

This setting specifies the 13-character line of the user-programmable message and is displayed when the pushbutton is activated from the ON to the OFF position and the **PUSHBUTTON 1 FUNCTION** is *Latched*. This message is not displayed when the **PUSHBUTTON 1 FUNCTION** is *Self-reset* as the pushbutton operand status is implied to be “OFF” upon its release. The length of the “OFF” message is configured with the **PRODUCT SETUP/DISPLAY PROPERTIES/FLASH MESSAGE TIME** setting.

The message programmed in the **PUSHBTN 1 ID** and **PUSHBTN 1 ON TEXT** settings will be displayed as long as Pushbutton 1 On operand is asserted, but not longer than the time period specified by the **FLASH MESSAGE TIME** setting. After the flash time has expired, the default message or other active target message is displayed. The instantaneous Reset of the flash message will be executed if any relay front panel button is pressed or if any new target or message becomes active.

The **PUSHBTN 1 OFF TEXT** setting is linked to Pushbutton 1 Off operand and will be displayed in conjunction with **PUSHBTN 1 ID** only if the pushbutton element is in *Latched* mode.

HOLD PRESSED

Range: 0.0 to 10.0 s in steps of 0.1 s

Default: 0.1 s

This setting specifies the time required for a pushbutton to be pressed before it is deemed active.

The timer is Reset upon release of the pushbutton. Note that any pushbutton operation will require the pushbutton to be pressed a minimum of 60 ms. This minimum time is required prior to activating the pushbutton hold timer.

AUTORESET

Range: Disabled, Enabled

Default: Disabled

This setting enables the user-programmable pushbutton Autoreset feature. The setting is applicable only if the pushbutton is in *Latched* mode.

AUTORESET DELAY

Range: 0.2 to 600.0 s in steps of 0.1 s

Default: 1.0 s

This setting specifies the time delay for automatic Reset of the pushbutton when in the *Latched* mode.

LOCK

Range: Off, Any FlexLogic operand

Default: Off

This setting assigns a FlexLogic operand serving to inhibit pushbutton operation from the front panel pushbuttons. This locking functionality is not applicable to pushbutton autoreset.

DROPOUT TIME

Range: 0.0 to 600.0 s in steps of 0.1 s

Default: 0.0 s

This setting applies only to *Self-reset* mode and specifies the duration of the pushbutton “active” status after the pushbutton has been released. The length of time the operand remains on has no effect on the pulse duration.

The setting is required to set the duration of the pushbutton operating pulse.

EVENTS

Range: Disabled, Enabled

Default: Enabled

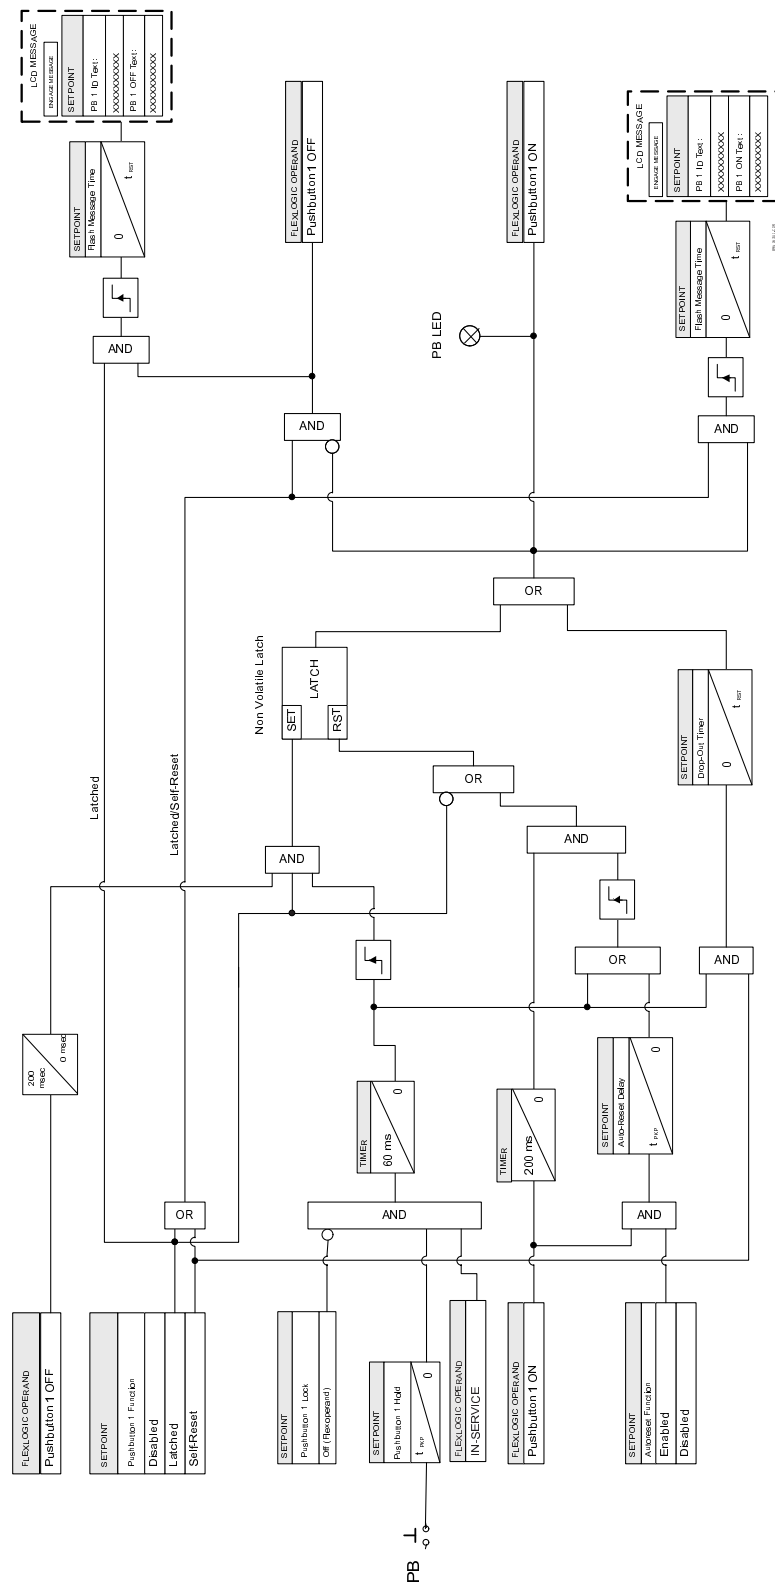


Figure 123: Pushbuttons Logic Diagram

PB1 to PB3 Default Values (3 pushbutton Front Panels)

	PB1	PB2	PB3
Function	Self-Reset	Self-Reset	Self-Reset

	PB1	PB2	PB3
ID Text	Open	Close	F1
ON Text	PB1 ON	PB2 ON	PB3 ON
OFF Text	PB1 OFF	PB2 OFF	PB3 OFF
LED Trigger	PB1 ON	PB2 ON	PB3 ON
Hold Pressed	0.1s	0.1s	0.1s
Autoreset	Disabled	Disabled	Disabled
Autoreset Delay	1.0s	1.0s	1.0s
Lock	Off	Off	Off
Dropout Time	0.0s	0.0s	0.0s
Events	Enabled	Enabled	Enabled

PB1 to PB10 Default Values (10 Pushbutton Membrane Front Panel)

	PB1	PB2	PB3	PB4	PB5	PB6	PB7	PB8	PB9	PB10
Function	Self-Reset	Self-Reset	Self-Reset	Self-Reset	Self-Reset	Self-Reset	Self-Reset	Self-Reset	Self-Reset	Latched
ID Text	Open	Close	PB3 Ctrl	Ground Trip Enabled	Remote Enabled	PB6 Ctrl	Demand Reset	Alternate Settings	Trigger Transient Recorder	PB Lock
ON Text	PB1 ON	PB2 ON	PB3 ON	PB4 ON	PB5 ON	PB6 ON	PB7 ON	PB8 ON	PB9 ON	PB10 ON
OFF Text	PB1 OFF	PB2 OFF	PB3 OFF	PB4 OFF	PB5 OFF	PB6 OFF	PB7 OFF	PB8 OFF	PB9 OFF	PB10 OFF
LED Trigger	PB1 ON	PB2 ON	PB3 ON	PB4 ON	Local Mode OFF	PB6 ON	PB7 ON	PB8 ON	PB9 ON	PB10 ON
Hold Pressed	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	3.0s
Autoreset	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled
Autoreset Delay	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s
Lock	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	Off
Dropout Time	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s
Events	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled

6.11.3 TAB PUSHBUTTONS

The Tab Pushbuttons provide an easy and error-free method of entering digital state (on, off) information. Twenty (20) Tab Pushbuttons are available for programming.

The digital state of the Tab Pushbuttons can be entered locally (by directly pressing the front panel pushbutton) or through Modbus by specifying the correct COMMAND sequence. Typical applications include breaker control, autorecloser blocking, and settings groups changes. The Tab Pushbuttons are under the control level of password protection. Only one pushbutton can be pressed at a time. If multiple pushbuttons are pressed simultaneously, the button pressed first takes the priority.

The Tab Pushbutton settings can be accessed from **Setpoints > Device > Front Panel > Tab Pushbuttons > Tab PB1**. The Tab Pushbutton control can be executed by navigating to **Status > Summary > Tab Pushbuttons**. By default, the summary page is shown to quickly glance at the active tab pushbuttons. The individual pages can then be accessed from the summary page. Each Tab Pushbutton asserts its own OFF and ON FlexLogic operands (for example, TAB PB 1 ON and TAB PB 1 OFF). These operands are available for each pushbutton and can be used to

program specific actions. Each pushbutton has an associated “LED” indicator. By default, this indicator displays the present status of the corresponding pushbutton ON state.

The activation and deactivation of Tab Pushbuttons is dependent on whether latched or self-reset mode is programmed.

SELF-RESET MODE: In Self-reset mode, a Tab Pushbutton remains active for the time it is pressed (the pulse duration) plus the Dropout time specified in the settings. The pushbutton is deactivated in Self-reset mode when the dropout delay specified in the Dropout Time setting expires. The pulse duration of the pushbutton must be at least 100ms to operate the pushbutton.

LATCHED MODE: In Latched Mode, a pushbutton can be set (activated) by directly pressing the associated tab pushbutton. The pushbutton maintains the set state until deactivated by another press of the same button. The state of each pushbutton is stored in non-volatile memory and maintained through the loss of control power.

Path: *Setpoints > Device > Front Panel > Tab PBs > Tab PB1(X)*

FUNCTION

Range: Self-reset, Latched, Disabled

Default: Self-reset (up to 3.xx)

Default: Disabled (from 4.10)

This setting selects the characteristic of the pushbutton. If disabled, the pushbutton is not active and the corresponding FlexLogic operands (both ON and OFF) are de-asserted. If set to Self-reset the control logic is activated by the pulse issued when the pushbutton is being physically pressed.

When in Self-Reset mode and activated locally, the pushbutton control logic asserts the Tab PB [X] ON FlexLogic operand as long as the pushbutton is being physically pressed, and after being released the deactivation of the operand is delayed by the Dropout Time setting. The OFF operand is asserted when the pushbutton element is deactivated.

If set to Latched, the control logic alternates the state of the corresponding FlexLogic operand between ON and OFF on each button press. When in Latched mode, the states of the FlexLogic operands are stored in a non-volatile memory. Should the power supply be lost, the correct state of the pushbutton is retained upon subsequent power-up of the relay. When the pushbutton operand is in the ON state, the operand appears on the target message until the pushbutton is pressed again to change it to the OFF state.

ID TEXT

Range: Up to 13 alphanumeric characters

Default: Tab PB 1 (or Tab PB[X])

This setting specifies the 13-character line of the user-programmable message and is intended to provide the ID information of the pushbutton. This text is used to describe the pushbutton in the FlexLogic operands.

LINE 1 TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 1 of the button when in the normal view.

LINE 2 TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 2 of the button when in the normal view.

LINE 1 SHORT TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 1 of the button when in the summary view. This is also the text that appears on the tabs when operating the pushbuttons from the Single Line Diagram view.

LINE 2 SHORT TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 2 of the button when in the summary view.

BUTTON COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: Black

This setting specifies the background color of the Tab Pushbutton. If the button is disabled, the button color by default is shown as gray.

TEXT COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: White

This setting specifies the text color of the Tab Pushbutton.

INDICATOR COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: Yellow

This setting specifies the color of the “LED” indicator for the Tab Pushbutton.

INDICATOR TRIGGER

Range: TAB PB 1 ON, Any FlexLogic operand

Default: TAB PB 1 ON

This setting assigns a FlexLogic operand to trigger the Indicator to change color from the default color (white) to the selected color.

HOLD PRESSED

Range: 0.1 to 10.0 s in steps of 0.1 s

Default: 0.1 s

This setting specifies the time required for a pushbutton to be pressed before it is deemed active.

The timer is Reset upon release of the pushbutton. Note that any pushbutton operation will require the pushbutton to be pressed a minimum of 100ms.

AUTORESET

Range: Disabled, Enabled

Default: Disabled

This setting enables the Tab Pushbutton Autoreset feature. The setting is applicable only if the pushbutton is in “Latched” mode.

AUTORESET DELAY

Range: 0.2 to 600.0 s in steps of 0.1 s

Default: 1.0 s

This setting specifies the time delay for automatic Reset of the pushbutton when in the “Latched” mode.

LOCK

Range: Any FlexLogic operand

Default: Off

This setting assigns a FlexLogic operand to inhibit pushbutton operation from the front panel pushbuttons. This locking functionality is not applicable to pushbutton autoreset.

DROPOUT TIME

Range: 0.0 s to 600.0 s in steps of 0.1 s

Default: 0.0 s

This setting applies only to “Self-reset” mode and specifies the duration of the pushbutton “active” status after the pushbutton has been released. The length of time the operand remains on has no effect on the pulse duration.

The setting is required to set the duration of the pushbutton operating pulse.

EVENTS

Range: Disabled, Enabled

Default: Enabled

6.11.4 ANNUNCIATOR

The graphical annunciator panel provides an emulation of a conventional physical annunciator panel with backlit indicators each inscribed with a description of the alarm condition that lights the indicator. The annunciator has 36 user-configurable (programmable) indicators. The indicators can be arranged in pages of 3x3 or 2x2 grids. Each indicator can have up to 3 lines of configurable text. When the indicators are not active (i.e. a configured FlexOperand for the annunciator is not triggered), the background is black and the foreground text color is gray. When the associated FlexOperand becomes active, the background and the foreground turns brighter in color per the color configuration. When disabled, the indicators are grayed out with no text.

Layout

If the grid layout is selected to be 3x3, the annunciator has 4 pages. If the grid layout is 2x2, the annunciator has 9 pages. The numbering of the indicators is shown as follows.

Grid Layout 3x3 – Indicator Numbering											
Page 1			Page 2			Page 3			Page 4		
1	4	7	10	13	16	19	22	25	28	31	34
2	5	8	11	14	17	20	23	26	29	32	35
3	6	9	12	15	18	21	24	27	30	33	36

Grid Layout 2x2 – Indicator Numbering							
Page 1		Page 2		Page #		Page 9	
1	3	5	7	...	...	33	35
2	4	6	8	...	...	34	36

Figure 124: Annunciator grid layout

Navigation

The annunciator panel can be displayed in two ways. By default, the annunciator panel is programmed as one of the homescreens. This means that when on the home page, pressing the home button multiple times rotates through all the homescreens. Alternatively, the annunciator can be accessed by navigating to **Status\Summary \Annunciator\Page1**. Individual annunciator pages can also be assigned as a homepage. If the auto navigation setting is enabled in the setup, the screen automatically jumps from home to the annunciator page with the first active alarm. Pages with active alarms will have a maroon flashing tab pushbutton label. If other pages have active alarms, the >> button will show a flashing label.

Path: **Setpoints > Device > Front Panel > Annunciator > Annunciator Setup**

RESET ANNUNCIATOR

Range: Off, any FlexLogic operand

Default: Off

This setting designates a FlexLogic operand that, when activated, acknowledges/resets all annunciator windows in the graphical front panel. This setting is the same as that defined under **Setpoints > Device > Resetting > Reset Annunciator**.

The Reset Annunctr OP (OPRD) FlexLogic operand is activated by the two sources of **RESET** command, operand source and manual source. Each individual source of a **RESET ANNUNCIATOR** command also activates its individual operand Reset Annunctr OP (OPRD) or Reset Annunctr OP (MNUL) to identify the source of the command. Both of these operands generate an event in the event record when activated. The Reset Annunciator setting selects the operand that activates the Reset Annunctr OP (OPRD) operand. The **RESET** pushbutton in the front panel or the reset command from the EnerVista D&I Setup 8 Series Setup software activates the Reset Annunctr OP (MNUL) operand.

PAGE LAYOUT

Range: 3x3, 2x2

Default: 3x3

This setting selects the grid layout of the annunciator pages. The default 3x3 grid layout provides 4 annunciator pages and 2x2 provides 9 pages.

AUTO NAVIGATION

Range: Disabled, Enabled

Default: Enabled

This setting when enabled, automatically navigates to the annunciator panel page from where the indication was triggered. While in the annunciator panel, if no action is taken, the screen returns back to the home page after the timeout setting.

FOCUSED NAVIGATION

Range: Disabled, Enabled

Default: Disabled

When this setting is enabled at the same time as the **AUTO NAVIGATION** setting, the page that has the active indicator will come into focus. The focus will change to the newest indicator as soon as that becomes active. Target Messages and Default Screens both have a lower priority than the **FOCUSED NAVIGATION** setting of the Annunciator Panel.

Path: *Setpoints > Device > Front Panel > Annunciator > Indicator 1(36)*

ALARM INPUT

Range: Off, any FlexLogic Operand

Default: Off

This setting specifies the input operand used to activate the corresponding indicator.

ALARM TYPE

Range: Off, Self-Reset, Latched

Default: Off

This setting specifies the alarm type. Self-Reset alarms track the state of the corresponding input operand. Latched alarms can be reset using Reset pushbutton or through Acknowledgment via graphical front panel.

The alarm type of each annunciator indicator may be configured as *Off*, *Self-Reset*, or *Latched*. The default mode is Off. In this mode, the indicator is grayed out without any text. In self-reset mode, the indicator's inactive state is by default in black background with dark gray color text. When the associated operand becomes active (i.e. the assigned FlexOperand is triggered), the configured background color and foreground text color appears. In latched mode, the configured operand causes the background to flash when it becomes active. If the alarm is then acknowledged or reset, the background stops flashing. If the operand becomes inactive, the indicator returns to its default colors. The behavior of these modes conforms to ISA-18.1-1979 (R2004) standard - A-4-5-6 (self-reset), and M-6 (latched).

Note:

If the Annunciator Alarm was initiated by another element that is of a Latched type (e.g. Trip Bus), you must navigate out of the Annunciator and then reset the latched element. This action will reset the latched element, the Annunciator Alarm and also the Trip LED if applicable.

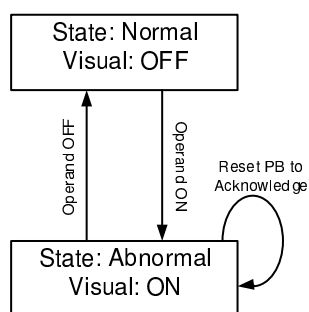


Figure 125: Self-Reset Mode

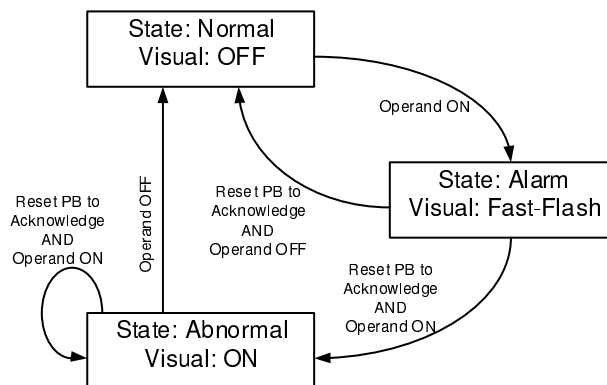


Figure 126: Latched Mode

When any annunciator page is displayed with an alarm condition, the navigation keys can be used to select an indicator. Once selected, the alarm condition can be acknowledged by pressing the reset pushbutton or by pressing the enter key. A confirmation message is displayed for acknowledging the alarm. Pressing the **Reset** or **Enter** key again acknowledges the alarm and pressing the Escape button discards the message. When the alarms are active under latched mode, a power loss retains the previous state of the alarm as the alarm states are stored in non-volatile memory.

TEXT LINE 1 (2,3)

Range: 15 Alphanumeric Characters

Default: [blank]

These settings specify the displayed text on the corresponding line in the alarm indicator. Three lines can be displayed with each line allowing up to 15 alphanumeric characters.

TEXT COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: White

This setting specifies the color of the alarm indicator text.

BACK COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: Red

This setting specifies the color of the alarm indicator background. When the indicator becomes active, the background changes color from the default Black to the programmed alarm back color.

6.11.5 DISPLAY PROPERTIES

Some relay messaging characteristics can be modified to suit different situations using the Front Panel Display Properties setting.

Path: *Setpoints > Device > Front Panel > Display Properties*

COLOR SCHEME

Range: Green (open), Red (open)

Default: Green (open)

This setting defines the color scheme for the breaker status. If it is programmed Green (open), the breaker open status is shown in the color green on the single line diagram and on the device status.

FLASH MESSAGE TIME

Range: 1 to 10 s in steps of 1 s

Default: 5 s

Flash messages are status, warning, error, or information messages displayed for several seconds in response to certain key presses during programming. These messages override any normal messages. The duration of a flash message on the display can be changed to accommodate different reading rates.

SCREEN TIMEOUT

Range: 10 to 900 s in steps of 1 s

Default: 120 s

If no pushbutton has been pressed for certain period of time, the relay automatically reverts to its default screen.

If the Default Screens are Enabled, Default Screens will become active after the Screen Timeout expires. If the Default Screens are Disabled, The Actuals\Summary page is displayed after the Screen Timeout expires.

DISPLAY INTENSITY

Range: 10%-100%

Default: 100%

The backlight can be reduced to make the screen easier to view under higher atmosphere lighting.

Note:

Only available on Membrane and 10 Pushbutton front panel

INACTIVITY TIMEOUT

Range: 10 to 900 s in steps of 1 s

Default: 300 s

When the Inactivity Timeout expires, the screen will dim to Inactivity Intensity.

If the Default Screens are Disabled, the Screen Saver images will become active when the Inactivity Timeout expires. If the Default Screens are Enabled, the Default Screens will be displayed at the Inactivity Intensity when the Inactivity Timeout expires.

If a new Target occurs and the Target Auto Navigation is enabled, the Target Screen will become active. If the system is in an inactive state, the system will switch to an active state. The intensity will return to Display Intensity. If targets are present, the Default Screens will still become operational after the Inactivity Timeout.

INACTIVITY INTENSITY

Range: 10% - 100%

Default: 50%

The inactivity intensity can be varied so that backlight is on at a low intensity instead of being fully shut off.

TARGET AUTO NAVIGATION

Range: Disabled, Enabled

Default: Disabled

When the target auto navigation is set to Enabled, it will override the current menu page and go to the target message page when a target is active. 

The Active target Icon shown above, will be the only indication of active target messages.

LANGUAGE

Range: English, French, German, Polish, Russian, Ukrainian,

Default: English

This setting selects the language used to display the settings, metering, status, and targets. The range is dependent on the order code of the relay.

6.11.5.1 SUPPORT FOR CYRILLIC LANGUAGES

The 8 Series of relays support the Russian and Ukrainian languages, but for this to work you also need to configure your Windows system accordingly. You can do this by selecting the required language. Modify the settings in the following locations:

- **Control panel > Region > Administrative tab > Change System Locale > Language for non-Unicode programs**
- **Control panel > Region > Language Preferences**

For more information, refer to your Microsoft documentation.

6.11.6 DEFAULT SCREENS

The relay provides the convenience of configuring and displaying up to three default screens from a predefined list. Each type of screen to display can be selected, and the display time programmed. The sequence of displaying the screens starts after the time of inactivity programmed in the **MESSAGE TIMEOUT** setpoint, when no PB has been pressed, and no target message is present. Pressing a pushbutton, or the presence of a target message inhibits the sequential display of default screens. The screen displays resume only after the target messages are cleared, and no PB pressing is recorded for 30 seconds. When configured the home screen is changed to the first screen defined by this feature. Display timeouts also return to this first screen (i.e. default screen 1).

If the default screens feature is disabled and there are no home screens programmed, the home page will show the **Metering > Summary > Values** screen after the message timeout inactivity period.

Path: Setpoints > Device > Front Panel > Default Screen

FUNCTION

Range: Disabled, Enabled

Default: Enabled

This setpoint enables the feature. Displaying of the screen starts 30 s after setting the feature to "Enabled", providing no targets have been issued, nor a PB has been pressed.

DISPLAY TIME

Range: 5 to 900 s in steps of 1 s

Default: 10 s

The display time is the amount of time that each of the three screens are displayed within the display sequence.

DEFAULT SCREEN X

Range: varieties of screens for selection

Default: SLD (for Default Screen 1 only), Off (for others)

This setpoint enables the user to input the default screens.

DEFAULT SCREEN INTENSITY (not available for all FW versions)

Range: 0 to 100% in steps of 10%

Default: 100%

The default screen intensity can be varied so that the backlight is at a low intensity instead of being fully shut off.

6.11.7 HOME SCREENS

The home screens allow the selection of a set of pages as home pages (max. 10). Multiple home pages are configured and navigated to by pressing the home button repeatedly. Navigate through all available home screens by repeatedly pressing the home button.

When returning to the home screen (either by pressing escape or directly pressing the Home button) through the different menus, the last accessed home screen is shown. Subsequent presses of the Home button navigates to the next programmed home screen on the list.

While accessing the home screens, the tab pushbutton navigation labels show the root menu – i.e. Targets, Status, Metering, Setpoints, and Records. The exceptions are the Tab Pushbuttons screens which instead show pushbuttons in the navigation labels.

If the default screens are enabled, the first default screen is shown after 30 seconds plus the inactivity period defined in **Setpoints > Device > Front Panel > Display Properties > Message Timeout**. If the default screens feature and screen saver are disabled, the screen defaults to the Values screen after the inactivity period.

When the home screens are programmed and the default screens feature is enabled but the screens are set to Off, the last accessed home screen is shown as the home page.

By Default, the first home screen is configured to show the first single line diagram.

Note:

When on any single line diagram page, if an object is selected, the home button will not function. The selected object must first be de-selected by pressing the escape button to be able to use the home button functionality again.

Path: Setpoints > Device > Front Panel > Home Screens

HOME SCREEN 1

Range: All available pages

Default: SLD1

HOME SCREEN 2

Range: All available pages

Default: Tab PB Summary

HOME SCREEN 3

Range: All available pages

Default: Annunciator Pg 1

HOME SCREEN 4

Range: All available pages

Default: Values

HOME SCREEN 5 to 10

Range: All available pages

Default: Off

6.11.8 FLEXSCREENS

The FlexScreens allow you to select a page to appear on the display based on the results of an **OPERATE** setting. Up to five FlexScreens can be configured. When the **OPERATE** setting evaluates to a *TRUE*, the FlexScreen configured will be displayed.

Note:

A pulse of 500 ms (or greater) is required to activate a FlexScreen condition.

Path: Setpoints > Device > Front Panel > FlexScreens

FLEXSCREEN 1

Range: All available pages

Default: Off

FLEXSCREEN 1 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 1.

FLEXSCREEN 2

Range: All available pages

Default: Off

FLEXSCREEN 2 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 2.

FLEXSCREEN 3

Range: All available pages

Default: Off

FLEXSCREEN 3 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 3.

FLEXSCREEN 4

Range: All available pages

Default: Off

FLEXSCREEN 4 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 4.

FLEXSCREEN 5

Range: All available pages

Default: Off

FLEXSCREEN 5 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 5.

6.12 RESETTING

Some events can be programmed to latch the faceplate LED event indicators and target message on the display. Depending on the application some auxiliary output relays can be programmed to latch after the triggering event is cleared. Once set, the latching mechanism holds all the latched indicators, messages, and auxiliary output relays in the set state, after the initiating condition has cleared, until a **RESET** command is received to return these latches (except the FlexLogic latches) to the reset state.

The **RESET** command can be sent from the faceplate **Reset** pushbutton, a remote device via a communication channel, or any programmed FlexLogic operand. Executing the **RESET** command from either source creates a general FlexLogic operand RESET OP. Each individual source of a **RESET** command also creates its individual operand RESET OP (PB), RESET (COMMS), and RESET OP (OPERAND) to identify the source of the command.

RESET INPUT 1(2,3):

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects an operand from the list of FlexLogic operands. The targets, LEDs, and latched output relays reset upon assertion from any of the operands selected as Reset Inputs.

RESET ANNUNCIATOR

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects an operand from the list of FlexLogic operands. When activated it resets all annunciator windows on the graphical front panel.

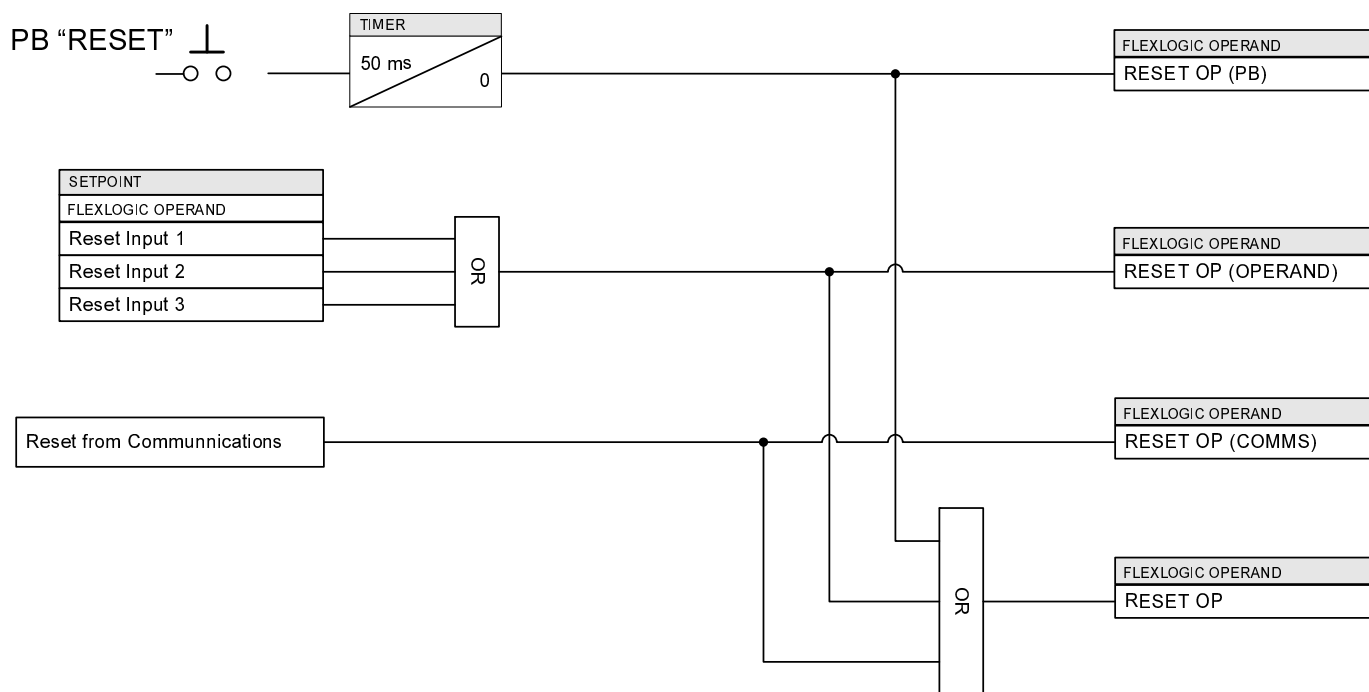


Figure 127: Reset logic

6.13 INSTALLATION

Path: *Setpoints > Device > Installation*

DEVICE NAME

Range: Up to 13 alphanumeric characters

An alphanumeric name may be assigned to the device.

DEVICE IN SERVICE

Default: Not Ready

Range: Not Ready, Ready

The relay is defaulted to the “Not Ready” state when it leaves the factory. This safeguards against the installation of a relay whose settings have not been entered. When powered up successfully, the “IN SERVICE” LED becomes red. The relay in the “Not Ready” state blocks signaling of any output relay. These conditions remain until the relay is explicitly put in the “Ready” state.

SERVICE COMMAND

Range: 0 to 65535

Default: 0

TEMPERATURE DISPLAY

Range: Celsius, Fahrenheit

Default: Celsius

Selects engineering unit of temperature display.

LATCHED ALARM OPERATION

Range: Self-Reset, Latched

Default: Latched

This setting applies to all the elements programmed to *Latched Alarm* function. It does not apply to the elements that are programmed to Alarm function.

When this setting is programmed to *Latched*, all the elements programmed to *Latched Alarm* will keep the Alarm LED and outputs (OP signal and assigned Output Relay) latched until the operating condition clears and a Reset command is issued.

When this setting is programmed to *Self-Reset*, all the elements programmed to *Latched Alarm* will keep the Alarm LED latched but resets outputs (OP signal and assigned Output Relay) automatically once the operating condition clears.

REMOTE IO DETECT VALUE

Range: Up to 6 alphanumeric characters

Shows the letter type of the Remote RTD card Board ID installed (e.g. GGGG).

CURRENT CUTOFF

Range: 0.000 to 1.000 p.u. in steps of 0.001 p.u.

Default: 0.020 p.u.

VOLTAGE CUTOFF*Range: 0.0 to 300.0 in steps of 0.1 V**Default: 1.0 V***Note:**

Lower the Voltage Cutoff and Current Cutoff levels with care as the relay accepts lower signals as valid measurements. Unless dictated otherwise by a specific application, the default settings of "0.020 pu" for current and "1.0 V" for voltage are recommended.

OV/UV DPO RANGE*Range: 2% , 4%**Default: 2%*

This setpoint determines the threshold of the drop-out level. There are two possible ranges, 2% or 4%. This setting affects to all voltage protection functions located under the menu Protection\Voltage Prot.

For overvoltage elements:

The enumerate value of 2% specifies that the dropout voltage level is achieved when the voltage level drops below 2% of the pickup value.

For 4%, the drop-out voltage level is specified when the voltage level drops below 4% of the pickup voltage level.

For Undervoltage elements:

The 2% value determines than the drop-out condition of the pickup flag is given when the voltage level is higher than 2% of the pickup voltage level.

On the other hand, the 4% value establishes that the drop-out level of the pickup flag is given when the voltage is higher than the 4% of the pickup voltage level.

The next table summarizes both conditions:

OV/UV DPO Range	OV Functions (Dpo Level)	UV Functions (Dpo Level)
2%	98%	102%
4%	96%	104%

BKR 1 STATUS*Range: Enabled, Disabled**Default: Enabled*

Target Message for the breaker status is shown when the set to 'Enabled'. When 'Disabled', all target messages related to breaker status will be blocked.

BKR 3 STATUS*Range: Enabled, Disabled**Default: Enabled*

6.14 SELF-TEST MONITOR

6.15 CLEAR RECORDS

The Clear Records command is accessible from the front panel and from the EnerVista D&I Setup.

Path: *Device > Clear Records*

Records can be cleared by assigning *On* to the appropriate setting.

Note:

*The Clear Records command is also available from **Records> Clear Records**, where the allowable settings also include FlexLogic operands.*

CHAPTER 7

SYSTEM SETPOINTS

7.1 CHAPTER OVERVIEW

This chapter describes the Device setpoint menu settings in detail.

This chapter contains the following sections:

Chapter Overview	260
System menu hierarchy	261
Current Sensing	262
Voltage sensing	264
Power Sensing	266
Power System	267
Generator Setup	268
Transformer	269
Breakers	270
Switches	273
FlexCurves	277

7.2 SYSTEM MENU HIERARCHY

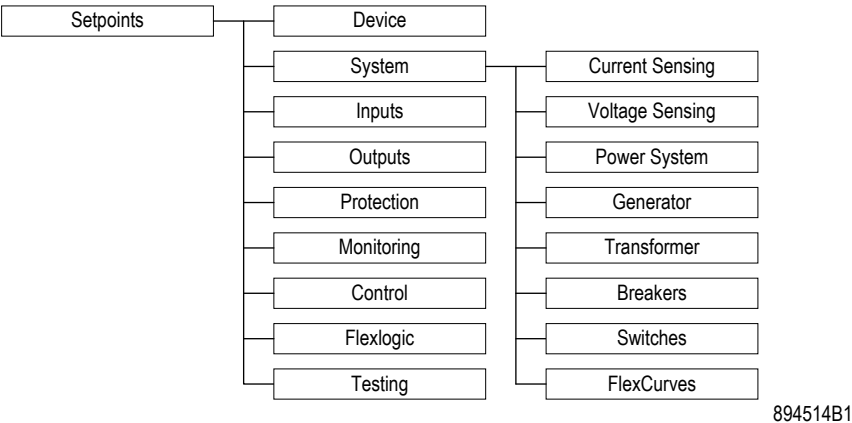


Figure 128: Device Display Hierarchy

7.3 CURRENT SENSING

Path: *Setpoints > System > Current Sensing > CT Bank 1-J1*

CT BANK NAME

Range: Any combination of 13 alphanumeric characters

Default: CT Bank 1-J1

PHASE CT PRIMARY

Range: 1 A to 12000 A in steps of 1A (up to FW 3.xx)

Range: 1 A to 50000 A in steps of 1A (from FW 4.10)

Default: 500 A

Enter the phase CT primary current for current sensing bank J1.

GROUND CT PRIMARY

Range: 1 A to 12000 A (up to FW 3.xx)

Range: 1 A to 50000 A in steps of 1A (from FW 4.10)

Default: 500 A

Enter the rated Ground CT primary current for the ground current input for the selected Current 1 bank.

Path: *Setpoints > System > Current Sensing > Current Bank 2-K1*

CT BANK NAME

Range: Any combination of 13 alphanumeric characters

Default: CT Bank 2-K1

PHASE CT PRIMARY

Range: 1 A to 12000 A in steps of 1A (up to FW 3.xx)

Range: 1 A to 50000 A in steps of 1A (from FW 4.10)

Default: 500 A

Enter the phase CT primary current for current sensing bank K1.

GROUND CT PRIMARY

Range: 1 A to 12000 A (up to FW 3.xx)

Range: 1 A to 50000 A in steps of 1A (from FW 4.10)

Default: 500 A

Enter the rated Ground CT primary current for the ground current input for the selected Current 2 bank.

SENS. GROUND CT PRIMARY

Range: 1 A to 12000 A in steps of 1

Default: 500 A

Note:

*The **Setpoints > System > Current Sensing > CT Bank 3-K2** option is available in 889 with order code option R1/R5 for Phase Current Slot K.*

Note:

Sensitive Ground CT in the K1 slot is order code dependent.

7.4 VOLTAGE SENSING

The Voltage Sensing menu provides the setup for all VTs (PTs) connected to the relay voltage terminals.

Path: *Setpoints > System > Voltage Sensing > Ph VT Bnk1-J2*

PHASE VT BANK NAME

Range: Any combination of 13 alphanumeric characters

Default: Ph VT Bnk 1-J2

Enter the name of the phase voltage from bank J2.

PHASE VT CONNECTION

Range: Wye, Delta, Single

Default: Wye

Select the type of phase VT connection to match the VTs (PTs) connected to the relay.

In cases when the distribution feeder has only one VT source (to measure single phase to neutral voltage or phase-to-phase voltage), the relay facilitates 3-phase power and energy measurements derived from pseudo 3-phase voltages. The pseudo 3-phase voltages are derived from any one VT source connected by considering a balanced 3-phase system (i.e. all three phase voltages and currents same in magnitude and placed 120 degrees apart with individual phases). Since the pseudo 3-phase voltage calculation relies on a balanced power system, the calculation accuracies are influenced by system unbalance conditions. In case of a perfectly balanced system, the calculated pseudo voltages are the same as the actual system voltages. However, the errors in the 3-phase power and from a single-phase reference input are only used for calculating the 3-phase metering quantities.

PSEUDO VOLTAGE REFERENCE

Range: Van, Vbn, Vcn, Vab, Vbc, Vca

Default: Van

This setting is only applicable when **PHASE VT CONNECTION** is set to *Single*. This means there is only one VT source available for metering. The relay allows any type of connection (A to neutral, B to neutral, C to neutral, A to B phase, B to C phase, and C to A phase) with a single VT reference input. It derives all 3-phase voltages from the provided single voltage reference input by considering a 3-phase balanced system.

When the setpoint **PSEUDO VOLTAGE REFERENCE** is configured to Van or Vab, single-phase VT inputs are connected to VT Channel 1. Similarly, when **PSEUDO VOLTAGE REFERENCE** is configured to Vbn(Vbc) and Vcn(Vca), the VT inputs are connected to VT Channel 2 and Channel 3, respectively.

Note:

When Pseudo Voltage is used, sequence components (positive, negative and zero sequence voltage) displayed in the metering value are not a measured quantity, so sequence components should be ignored when **PHASE VT CONNECTION** is set to *Single*.

PHASE VT SECONDARY

Range: 10.0 to 240.0 V in steps of 0.1 V

Default: 120.0 V

Select the output secondary voltage for phase VTs connected to the J2 bank.

PHASE VT RATIO

Range: 1.00 to 5000.00 in steps of 0.01

Default: 1.00

Select the phase VT ratio to match the ratio of the VTs connected to the J2 bank.

AUX. VT NAME

Range: Any combination of 13 alphanumeric characters

Default: Ax VT Bnk1-J2

Enter the name of the auxiliary voltage from bank J2.

AUX. VT CONNECTION

Range: Van, Vbn, Vcn, Vab, Vbc, Vca, Vn

Default: Van

Select the voltage type corresponding to the one applied to the Aux VT relay terminals from bank J2. Select Vn (neutral voltage), if the neutral voltage is applied to the relay auxiliary VT.

AUX. VT SECONDARY

Range: 10.0 to 240.0 V in steps of 0.1 V

Default: 120.0 V

Select the output secondary voltage of the aux. VT connected to the aux. VT input from bank J2.

AUX. VT RATIO

Range: 1.00 to 5000.00 in steps of 0.01

Default: 1.00

Select the aux. VT ratio to match the ratio of the VT connected to the aux. VT input from bank J2.

Note:

The nominal **PHASE VT SECONDARY** and the **AUX VT SECONDARY** voltage settings are the voltages across the phase VT terminals and the auxiliary VT terminals correspondingly when nominal voltage is applied.

Note:

For example, on a system of 13.8kV nominal primary voltage, and a 14400:120 volt VT in a Delta connection, the secondary voltage would be 115V, i.e. $(13800/14400)*120$. For a Wye connection, the voltage value entered must be the phase to neutral voltage which would be $115/\sqrt{3} = 66.4$ V.

Note:

On a 14.4 kV system with a Delta connection and a VT primary to secondary turns ratio of 14400:120, the voltage value entered would be 120 V, i.e. 14400/120.

7.5 POWER SENSING

The power computation is performed using the voltage and current inputs from the card inserted in slot J. In cases when the connected VTs and CTs have opposite polarity, the power sensing menu provides for inverting the power measurement.

Path: *Setpoints > System > Power Sensing*

3PH VT BANK INPUT

Range: Dependent upon the order code

Default: J2-3VT

This setpoint selects the 3-phase VT inputs used for Power (X) computation.

3PH CT BANK INPUT

Range: Dependent upon the order code

Default: J1-3CT

This setpoint selects the 3-phase CT inputs for Power (X) computation.

PHASE CT&VT POLARITY

Range: Same, Inverse

Default: Same

When *Inverse* is selected, this setpoint inverts (multiplies phase currents by -1) the CT polarity for the phase currents from CT bank J1, with respect to the phase voltages from the VT bank J2.

Note:

The setpoint for inversion of the power metering will be useful to avoid the physical inversion of the CT connections on the relay. As the power metering will affect the power directional elements, the user must determine the correct forward and reverse direction of the power, before setup.

RESET EVENT ENERGY

Range: Off, Any FlexLogic operand

Default: Off

At the rising edge of the FlexLogic operand selected under this setpoint, all energy metering values (under **Metering > Energy 1(X) > Energy**) are logged and reset to zero, and Reset Energy D/T is recorded and displayed.

The logged values are displayed as the Last Event Pos(Neg) WattHours and Last Event Pos(Neg) VarHours under **Metering > Energy 1(X) > Energy Log**.

An application example could be monitoring of the total energy accumulated at the end of an event or a shift interval. An event/shift interval can be defined by the breaker status operand (open or closed) or, if applicable, by the operand derived by the Time of Day Timer element. If applicable, time-based shift schedules can be set in the Time of Day Timer element.

7.6 POWER SYSTEM

Path: *Setpoints > System > Power System*

NOMINAL FREQUENCY

Range: 60 Hz, 50 Hz

Default: 60 Hz

The power system **NOMINAL FREQUENCY** is used as a default to set the digital sampling rate if the system frequency cannot be measured from available AC signals. This may happen if the signals selected for frequency tracking are not present, or a valid frequency is not detected. Before reverting to the nominal frequency, the frequency tracking algorithm holds the last valid frequency measurement for a safe period of time while waiting for the signals to reappear or for the distortions to decay.

PHASE ROTATION

Range: ABC, ACB

Default: ABC

The selection of the **PHASE ROTATION** setting must match the power system phase rotation. The phase sequence setting is required to properly calculate sequence components and power parameters. Note that this setting informs the relay of the actual system phase sequence, either ABC or ACB. CT and VT inputs on the relay labeled as a, b, and c, must be connected to system phases A, B, and C for correct operation.

REVERSE PHASE ROTATION

Range: Off, Any FlexLogic operand

Default: Off

This setting dynamically reverses the phase rotation set under Setpoints > System > Power System > Phase Rotation. For example, if the nominal phase rotation is ABC but the condition (FlexLogic operand) defined for reverse phase rotation is true (high), then the phase rotation will switch to ACB. The reverse phase rotation feature is only intended for use in special applications such as pumped storage schemes. As soon as the reverse phase rotation condition (FlexLogic operand) status becomes false (low), the phase rotation goes back to the nominal value set under Setpoints > System > Power System > Phase Rotation.

FREQUENCY TRACKING

Range: Disabled, Enabled

Default: Enabled

Frequency measurement is accomplished by measuring the time between zero crossings of the composite signal of three-phase bus voltages, line voltage or three-phase currents. The signals are passed through a low pass filter to prevent false zero crossings. **FREQUENCY TRACKING** utilizes the measured frequency to set the sampling rate for current and voltage which results in better accuracy for the Discrete Fourier Transform (DFT) algorithm for off-nominal frequencies.

The main frequency tracking source uses three-phase voltages. The frequency tracking is switched automatically to the alternative reference source, i.e., three-phase currents signal, if the frequency detected from the three-phase voltage inputs is declared invalid. The switching will not be performed if the frequency from the alternative reference signal is detected invalid. Upon detecting valid frequency on the main source, the tracking will be switched back to the main source. If a stable frequency signal is not available from any source, then the tracking frequency defaults to the nominal system frequency.

7.7 GENERATOR SETUP

Generator system setup allows you to enter generator rated values from the nameplate (provided by the generator manufacturer). These generator rated values are used to derive settings for protection and control functions within this device as well as to calculate other rated quantities.

Rated Full Load Current of the generator

$$\text{Rated FLA} = (\text{Rated MVAX} \times 10^6) / (\sqrt{3} \text{ Rated Voltage Phase-to-phase})$$

Rated MW (Active power) of the generator

$$\text{Rated MW} = \text{Rated MVAX} \times \sin [\arccos \text{ Rated Power Factor}]$$

Rated MVAR (Reactive power) of the generator (obtained by arc/inverse cosine function of rated power factor, and then its sine function)

$$\text{Rated MVAR} = \text{Rated MVAX} \times \sin [\arccos \text{ Rated Power Factor}]$$

Path: *Setpoints > System > Generator*

RATED MVA

Range: 0.001 to 2000.000 MVA in steps of 0.001 MVA

Default: 50.000 MVA

Enter the generator rated power rating in MVA. Typically this value is obtained from the generator nameplate or design datasheet. The rated MVA of the generator is used to derive other rated values such as rated MW, MVAR, etc.

RATED POWER FACTOR

Range: 0.00 to 0.99 pf in steps of 0.01 pf

Default: 0.85 pf

Enter the generator rated power factor (lagging) value. This value is used to derive other rated values such as rated MW, MVAR, etc.

RATED VOLTAGE PHASE-PHASE

Range: 0.0 to 30000.0 in steps of 0.1V

Default: 13800.0 V

Enter the generator rated phase-to-phase (or line-to-line) voltage in Volts.

AVERAGE CALC. PERIOD

Range: 1 to 90 min in steps of 1 min

Default: 15 min

This setting adjusts the period of time over which average values for generator records are calculated, such as the generator average load.

7.8 TRANSFORMER

Note:

The Transformer setup is only available for the 889 with Overall Differential Protection order code. Two-winding Transformer setup is used to compensate for transformer winding connection in overall differential protection.

Note:

An 889 unit ordered with the overall differential protection utilizes a two-winding transformer setup for GSU winding compensation.

Percent differential protection is the main protection for power transformers with regards to detecting all types of transformer internal fault. This protection is based on Kirchoff's law, where the sum of all currents flowing in and out of the protected equipment equals zero. However, when applying this law to the overall differential protection, one must keep in mind that the direct summation of the measured currents per-phase, does not automatically result into zero differential current. This is because:

1. The transformer voltage ratio defines different winding nominal currents
2. The winding CTs are not rated to the exact match of the winding nominal currents
3. Physically, the transformer windings are connected in Delta, Wye or Zig-Zag configuration, and they introduce a phase shift.
4. The transformer voltage ratio defines different winding nominal currents
5. The winding CTs are not rated to the exact match of the winding nominal currents
6. Physically, the transformer windings are connected in Delta or Wye configuration, and they introduce a phase shift.

For the correct performance of the overall percent differential protection, it is necessary to correct the magnitude and phase relationships of the CT secondary currents for each winding, in order to obtain near zero differential currents under normal transformer operating conditions. Traditionally, the phase shift between the currents from the transformer windings has been corrected by connecting the CTs from the Wye winding in Delta connection, and the CTs from the Delta winding in Wye connection. In the past, the magnitude correction has been accomplished using interposing CTs, or tapped relay windings. This however is not required any more when installing the relay.

The relay simplifies the process by performing the magnitude and phase shift compensations automatically (internally). Upon entering settings for the protected transformer and winding CT ratings, the relay automatically calculates and applies the correct magnitude scaling to the winding currents as well as applying the correct phase shift in order to prepare the currents for summation. To perform the correct currents compensation, all winding CTs need to be connected in Wye (polarity markings pointing away from the transformer).

7.9 BREAKERS

The status of each winding breaker is detected by monitoring the state of either one, or two contact inputs. We recommend you monitor the status of the breaker using both breaker auxiliary contacts 52a, and 52b. However using only one of them is also acceptable.

The breaker connection/disconnection to/from the power system is provided by monitoring the contact input **BKR CONNECTED**. If the contact input is asserted, the breaker is considered to be connected to the primary system. When the breaker is determined to be disconnected, the breaker state is shown to be neither open, nor closed. The trolley is integrated with a circuit breaker (CB), which works as a Disconnect Switch. CB Trolley status based on the contact input selected under the **CONNECTED** and **BKR TROLLEY** setpoints.

Path: Setpoints > System > Breakers

NAME

Range: Up to 13 alphanumeric characters

Default: BKRX

CONTACT INPUT 52a

Range: Off, Any FlexLogic operand

Default: Off

Selects the Contact Input connected to the Breaker auxiliary contact 52a.

CONTACT INPUT 52b

Range: Off, Any FlexLogic operand

Default: Off

Selects the Contact Input connected to the Breaker auxiliary contact 52b.

CONNECTED

Range: Off, Any FlexLogic operand

Default: Off

Select a contact input to show whether the breaker is connected (Racked-in, or disconnect switches switched-on), or disconnected (racked-out, or disconnect switches switched-off) from the system.

BKR TROLLEY

Range: Off, Any FlexLogic operand

Default: Off

Select a contact input to show whether the Breaker Trolley is connected or disconnected from the system.

TRIP RELAY SELECT

Range: Off, Any Output Relay

Default: Relay 1

This setting is typically available for two or more breaker applications. For single breaker applications, the setting is hidden and trip relay selection is defaulted to Relay 1. Any output relay from the list of available output relays can be programmed for breaker tripping action.

CLOSE RELAY SELECT

Range: Off, Relay X

Default: Relay 2

This setting is typically available for two or more breaker applications. For single breaker applications, the setting is hidden and close relay selection is defaulted to Relay 2. Any output relay from the list of available output relays can be programmed for breaker closing action.

Breaker status depending on availability of contacts 52a and 52b

52a Contact Configured	52b Contact Configured	Breaker Status	
		Open	Closed
Yes	Yes	52a contact open 52b contact closed	52a contact closed 52b contact open
Yes	No	52a contact open	52a contact closed
No	Yes	52b contact closed	52b contact open
No	No	Breaker Not Configured	Breaker Not Configured

Breaker status with both contacts 52a and 52b configured

52a Contact Configured	52b Contact Configured	Breaker Status
Off	On	BKR Opened
On	Off	BKR Closed
On	On	BKR Unknown State
Off	Off	BKR Unknown State

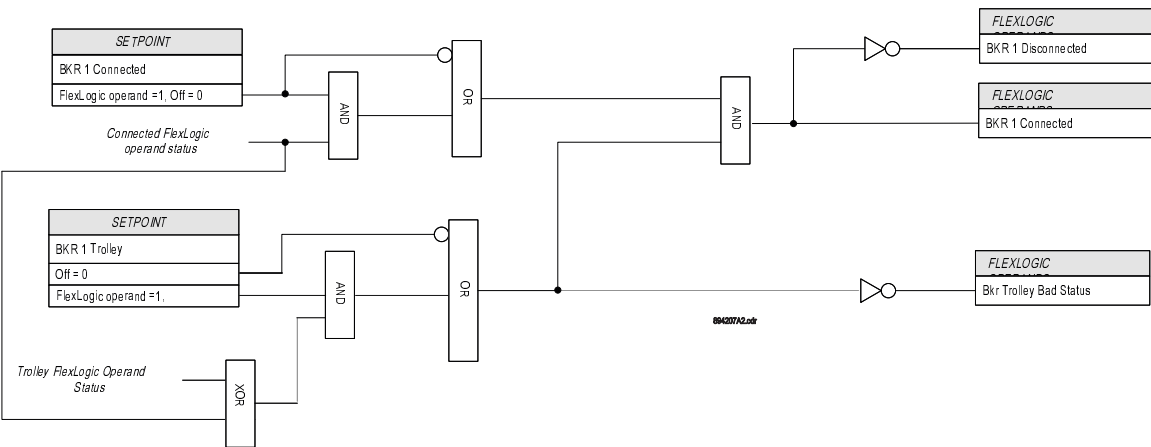


Figure 129: Breaker Connected/Disconnected (Racked-In/Racked-Out) Detection

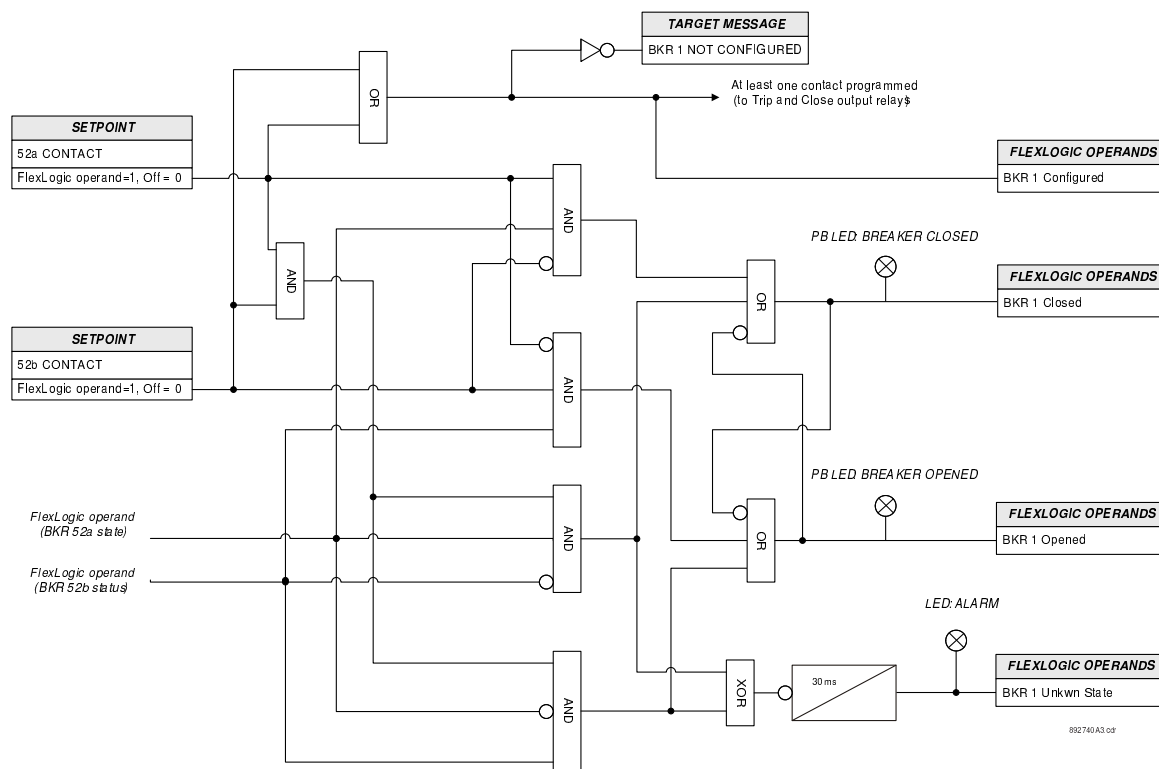


Figure 130: Breaker State Detection logic diagram

7.10 SWITCHES

The Single Line Diagram (SLD) relays can be configured with up to 9 disconnect switches. The disconnect switch detection is performed by monitoring the state/states of either one or preferably two contact inputs 89a and 89b. Monitoring the status of the switch using both auxiliary contacts 89a, and 89b is recommended, however using only one of them is also possible. When both contacts are programmed, the switch can be monitored for state discrepancy, i.e. both auxiliary contacts OFF, or both auxiliary contacts ON during operation. Discrepancy Alarm Delay can be programmed to reflect the transition of the switch during operation from Closed to Opened, and Opened to Closed. If no auxiliary contact discrepancy is detected after the time delay expires, the switch will be in one of its normal states, i.e. Opened or Closed. However, if contact inputs discrepancy is detected after the time delay expires, the relay will issue a SW1(9) Discrepancy target message and illuminate the ALARM LED. The switch discrepancy condition can be reset by the operand assigned under Reset Alarm setpoint, providing both contact inputs 89a and 89b show normal states on the relay.

Path: *Setpoints > System > Switches > Switch 1(9)*

NAME

Range: 13 alphanumeric characters

Default: SW 1

Assign a user-defined name to the disconnect switch. This name is used in the SLD, flash messages related to disconnect switch 1, and the event recorder.

CONTACT INPUT 89a

Range: Off, Any FlexLogic operand

Default: Off

Select an operand (usually NO aux. contact wired to contact input in the relay) to reflect the status of the Disconnect Switch auxiliary contact 89a.

CONTACT INPUT 89b

Range: Off, Any FlexLogic operand

Default: Off

Select an operand (usually NC auxiliary contact wired to contact input in the relay) to reflect the status of the Disconnect Switch auxiliary contact 89b.

ALARM DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

This setting specifies the required time interval to overcome transient disagreement between the 89a and 89b auxiliary contacts during disconnect switch operation. If transient disagreement still exists after this time has expired, SW1(9) Discrepancy FlexLogic operand is asserted for alarm and/or blocking purposes.

RESET ALARM

Range: Off, Any FlexLogic operand

Default: Off

Select an operand from the list of FlexLogic operands, which when asserted resets the Switch Discrepancy state. Please note that resetting the discrepancy alarm will work only after no discrepancy condition exists between the switch aux contacts 89a and 89b.

OPEN RELAY SELECT

Range: Off, Relay 1, ..., Relay X

Default: Off

This setpoints selects an output relay from the list of available output relays that is used to open the Disconnect Switch once an open command is issued either from the front panel or remotely. This output relay is controlled from the Switch Control menu.

CLOSE RELAY SELECT

Range: Off, Relay 1, ..., Relay X

Default: Off

This setpoint selects an output relay from the list of available output relays that is used to close the Disconnect Switch upon issued close command from either front panel or remotely. This output relay is controlled from Switch Control menu.

Note:

The selection of Output Relay for Open Relay Select and Close Relay Select has higher priority than other settings as follows: If an Output Relay is first set to *Operate* under a protection element for example, and then this same Output Relay is selected under either **Open Relay Select** or **Close Relay Select**, this Output Relay is automatically reverted to *Do Not Operate* and hidden from the menu of the protection element. Deselecting the Output Relay from **Open Relay Select** or **Close Relay Select** unhides the output in the menu of the protection element showing the setting value *Do Not Operate*.

EVENTS

Range: Disabled, Enabled

Default: Enabled

This setting disables or enables the disconnect switch operation events.

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Enabled

This setting disables or enables the disconnect switch operation Targets.

The logic for Switch configuration and the Open, and Close status is shown in the following tables.

Switch configuration with Open and Close status

Contact Input 89a setpoint programming	Contact Input 89b setpoint programming	SwitchStatus	
		Open	Closed
Yes	Yes	89a contact open 89b contact closed	89a contact closed 89b contact open
Yes	No	89a contact open	89a contact closed
No	Yes	89b contact closed	89b contact open
No	No	Not Configured	Not Configured

Switch status with both contacts 89a and 89b programmed

89a Contact Status	89b Contact Status	Disconnect Switch Status
Off	On	SW[X] Opened
On	Off	SW[X] Closed
On	On	SW[X] Intermittent, SW[X] Discrepancy
Off	Off	SW[X] Intermittent, SW[X] Discrepancy

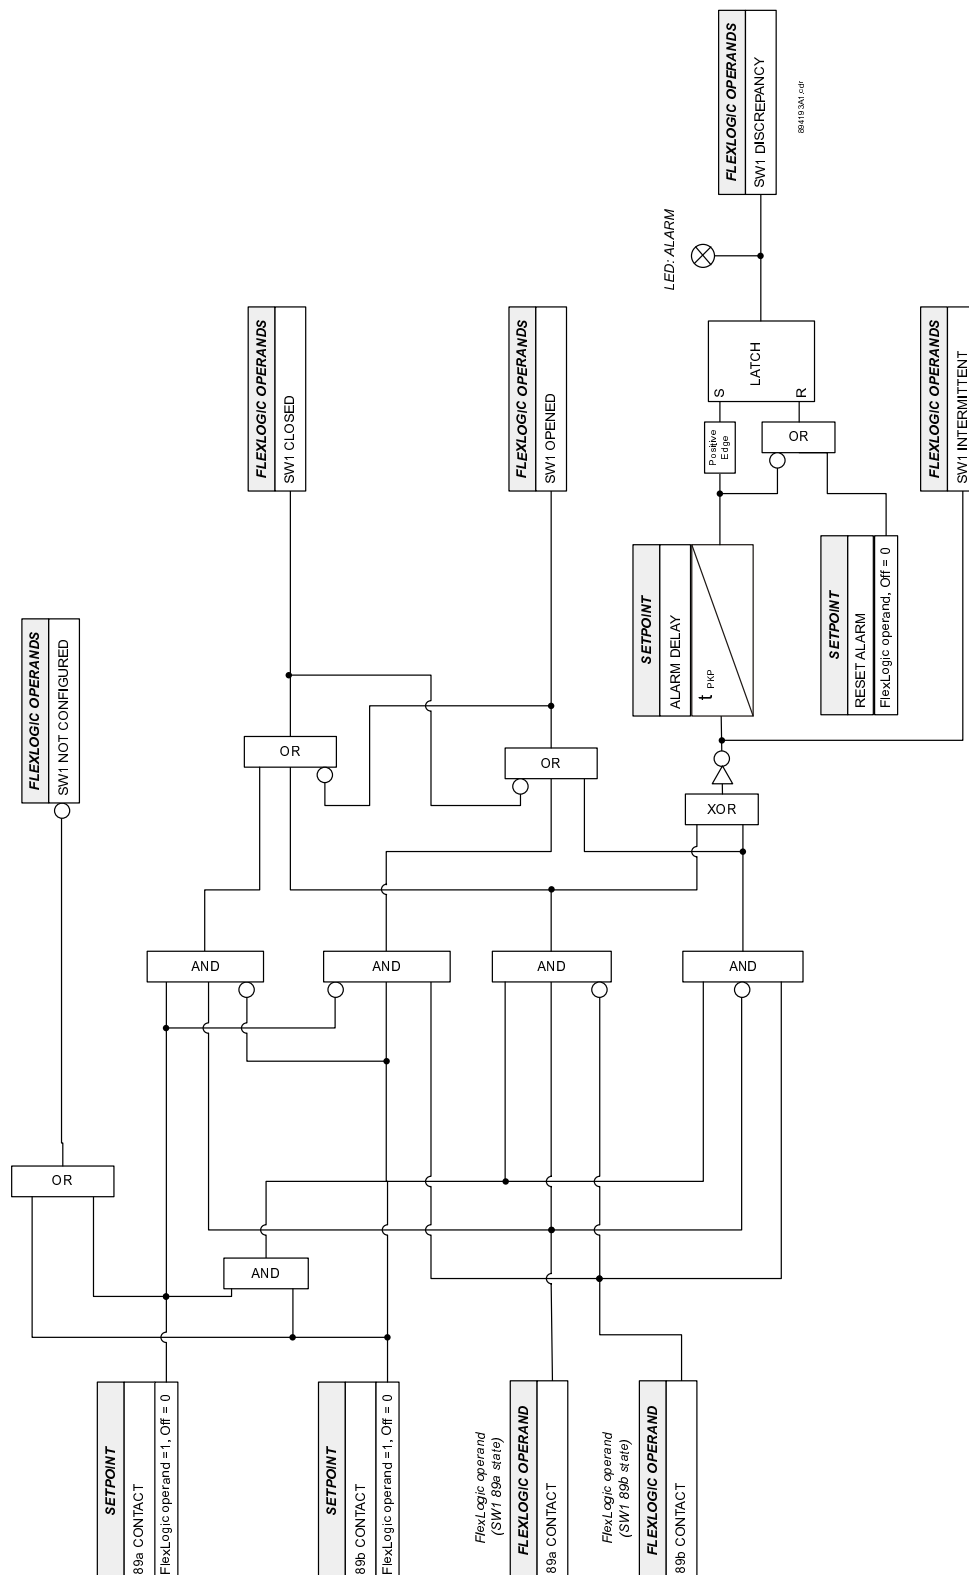


Figure 131: Disconnect Switch State Detection logic diagram

7.11 FLEXCURVES

The relay incorporates four programmable FlexCurves - FlexCurve A, B, C and D. The points for these curves are defined in the EnerVista D&I Setup. User-defined curves can be used for Time Overcurrent protection in the same way as IEEE, IAC, ANSI, and IEC curves. Each of the four FlexCurves has 120-point settings for entering times to reset and operate, 40 points for reset (from 0 to 0.98 times the Pickup value) and 80 for operate (from 1.03 to 20 times the Pickup). This data is converted into two continuous curves by linear interpolation between data points.

Path: *Setpoints > System > FlexCurves*

Note:
Use EnerVista D&I Setup to select, design or modify any of the Flexcurves

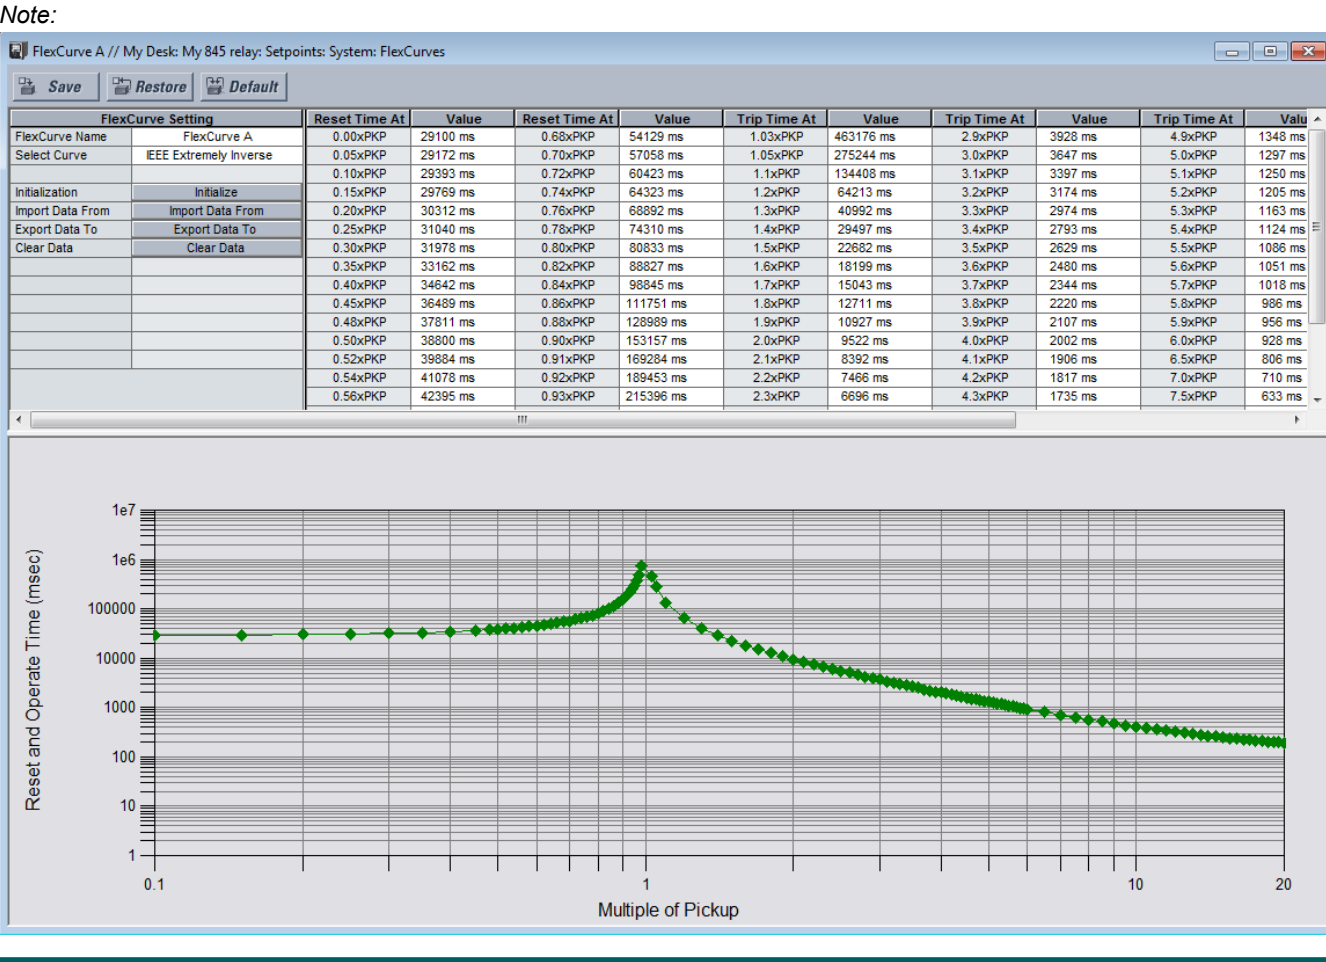


Figure 132: Flexcurve setpoints

The following table for FlexCurves A, B, C, and D details the 120 points as well as the characteristic for each of them, and a blank cell to write the time value when the operation (for $I > I_{pickup}$) or the reset (for $I < I_{pickup}$) is required.

RESET TIME ms		RESET TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms	
0.00		0.68		1.03		2.9		4.9		10.5	

RESET TIME ms		RESET TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms	
0.05		0.70		1.05		3.0		5.0		11.0	
0.10		0.72		1.1		3.1		5.1		11.5	
0.15		0.74		1.2		3.2		5.2		12.0	
0.20		0.76		1.3		3.3		5.3		12.5	
0.25		0.78		1.4		3.4		5.4		13.0	
0.30		0.80		1.5		3.5		5.5		13.5	
0.35		0.82		1.6		3.6		5.6		14.0	
0.40		0.84		1.7		3.7		5.7		14.5	
0.45		0.86		1.8		3.8		5.8		15.0	
0.48		0.88		1.9		3.9		5.9		15.5	
0.50		0.90		2.0		4.0		6.0		16.0	
0.52		0.91		2.1		4.1		6.5		16.5	
0.54		0.92		2.2		4.2		7.0		17.0	
0.56		0.93		2.3		4.3		7.5		17.5	
0.58		0.94		2.4		4.4		8.0		18.0	
0.60		0.95		2.5		4.5		8.5		18.5	
0.62		0.96		2.6		4.6		9.0		19.0	
0.64		0.97		2.7		4.7		9.5		19.5	
0.66		0.98		2.8		4.8		10.0		20.0	

The first two columns (40 points) correspond to the RESET curve. The other 4 columns, with 80 points in total, correspond to the OPERATE curve. The reset characteristic values are between 0 and 0.98xPKP, and the operation values are between 1.03 and 20xPKP.

The final curve is created by means of a linear interpolation from the defined points. This is a separate process for the RESET and the OPERATE curve.

The definition of these points is performed in a separate module from the relay, using a configuration program included in EnerVista D&I Setup, which incorporates a graphical environment for viewing the curve, thus making it easy to create.

Note:

The relay using a given FlexCurve applies linear approximation for times lying between the user-entered points. Therefore, special care must be taken when setting the points close to a Pickup multiple of 1; that is, $0.97 \cdot I_{pickup}$ and $0.98 \cdot I_{pickup}$ should be set to a similar value as $1.03 \cdot I_{pickup}$. Otherwise, the thermal model may incorrectly estimate the TCU% level resulting in undesired behavior.

FLEXCURVE A, B, C, D CONFIGURATION WITH EnerVista D&I Setup

EnerVista D&I Setup allows for easy configuration and management of FlexCurves and their associated data points. Prospective FlexCurves can be configured from a selection of standard curves to provide the best approximate fit, then specific data points can be edited afterwards. Alternately, curve data can be imported from a specified file (.csv format) by selecting the Import Data From setting.

Curves and data can be exported, viewed, and cleared by clicking the appropriate buttons. FlexCurves A, B, C, and D are customized by editing the operating time (ms) values at pre-defined per-unit current multiples. Note that the pickup multiples start at zero (implying the “reset time”), operating time below Pickup, and operating time above Pickup.

CHAPTER 8

INPUT AND OUTPUT SETPOINTS

8.1 **CHAPTER OVERVIEW**

This chapter describes the Device setpoint menu settings in detail.

This chapter contains the following sections:

Chapter Overview	281
Inputs	282
Outputs	293

8.2 INPUTS

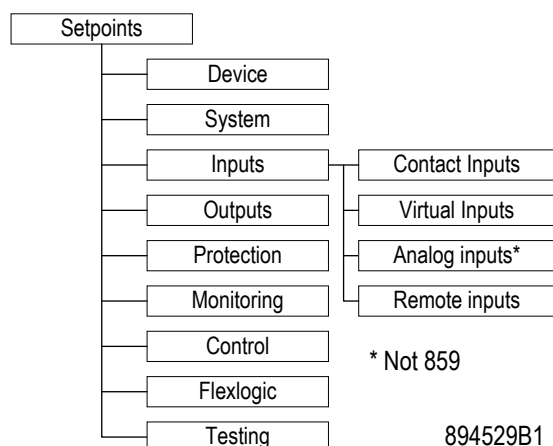


Figure 133: Inputs Display Hierarchy

8.2.1 CONTACT INPUTS

The relay is equipped with a number of Contact Inputs, specified by the Order Code. These can be used to provide a variety of functions such as for circuit breaker control, external trips, blocking of protection elements, etc. Contact inputs accept wet and dry input signals. A wet type contact input signal requires an external DC voltage source. A dry type contact input signal uses an internal DC voltage source. Depending on the DC source level, you can select the voltage threshold (17V, 33V, 84V, 166V). The Contact Inputs can be located on the HV I/O and Arc Flash cards located on slots B or C or F or G or H or all.

Note:

The maximum load current that can be delivered by the relay +24 V voltage supply is 100 mA. When the internal +24 V supply is used, the current limitations of the 24V supply must be considered.

The Contact Inputs are either open or closed with a programmable debounce time to prevent false operation from induced voltage. The debounce time is adjustable as per manufacturer specifications.

A raw status is scanned for all Contact Inputs synchronously at the constant rate of one protection pass (1/8 cycle) as shown in the figure below. The DC input voltage is compared to a user-settable threshold. A new Contact Input state must be maintained for a user-configurable debounce time in order for the relay to validate the new contact state. In the figure below, the debounce time is set at 2.5 ms; thus the 3rd sample in a row validates the change of state (mark no. 2 in the diagram). Once validated (debounced), the new state will be declared and a FlexLogic operand will be asserted at the time of a new protection pass. A time stamp of the first sample in the sequence that validates the new state is used when logging the change of the Contact Input into the Event Recorder (mark no. 1 in the diagram).

Protection and control elements, as well as FlexLogic equations and timers, are executed eight times in a power system cycle. The protection pass duration is controlled by the frequency tracking mechanism. The FlexLogic operand reflecting the debounced state of the contact is updated at the protection pass following the debounce (marked no. 2 on the figure below). The update is performed at the beginning of the protection pass so all protection and control functions, as well as FlexLogic equations, are fed with the updated states of the Contact Inputs.

The FlexLogic operand response time to the Contact Input change is related to the debounce time setting plus up to one protection pass (variable and depending on system frequency if frequency tracking enabled). For example, 8 protection passes per cycle on a 60 Hz system correspond to a protection pass every 2.1 ms. With a contact debounce time setting of 3.0 ms, the FlexLogic™ operand-assert time limits are: $4.2 + 0.0 = 4.2$ ms and $4.2 + 2.1 = 6.3$ ms. The 4.2 ms is the minimum protection pass period that contains a debounce time, 3.0 ms.

Regardless of the contact debounce time setting, the Contact Input event is time-stamped with 1 protection pass accuracy using the time of the first scan corresponding to the new state (mark no. 1 below). Therefore, the time stamp reflects a change in the DC voltage across the Contact Input terminals that was not accidental as it was subsequently validated using the debounce timer. The debounce algorithm is symmetrical: the same procedure and debounce time are used to filter the LOW-HIGH (marks no.1 and 2 in the figure below) and HIGH-LOW (marks no. 3 and 4 below) transitions.

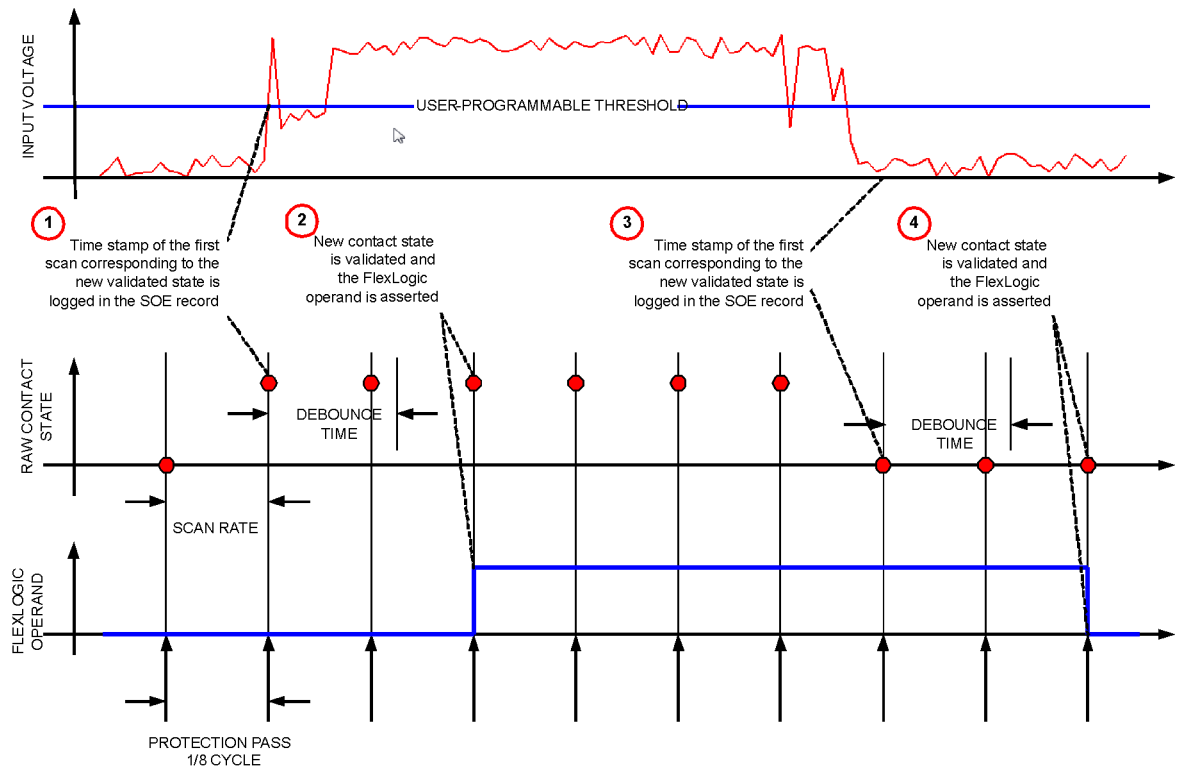


Figure 134: Contact Input Debouncing Mechanism and Time-stamping Sample Timing

Path: **Setpoints > Inputs > Contact Inputs**

The Contact Inputs menu contains configuration settings for each Contact Input as well as voltage threshold for all Contact Inputs.

..\Inputs\Contact Inputs				
Item Name				
CI Voltage Threshold				
Contact Input 1				
Contact Input 2				
Contact Input 3				
Contact Input 4				
Contact Input 5				
Contact Input 6				
Contact Input 7				
Contact Input 8				
Contact Input 9				
Contact Input 10				
CI DC Volt	CI 1	CI 2	CI 3	>>

Path: **Setpoints > Inputs > Contact Inputs > CI Voltage Threshold**

Depending on the order code, Voltage Threshold value can be configured for all the Contact Inputs (Slot F/G/H with order code A or M or F) or for each group of Contact Inputs (Slot F/G/H with order code B or K and Slot B/C with order code C).

As an example, the following section shows description of the settings for Slot F with order code A, Slot G with order code B and Slot B with order code C.

Home.. \Contact Inputs \CI Voltage Threshold		
Item Name	Value	Unit
Voltage Threshold/Slot F	33	Vdc
Voltage Threshold /G13-G17	33	Vdc
Voltage Threshold /G19-G23	33	Vdc
Voltage Threshold/B1-B5	33	Vdc
Voltage Threshold /B7-B11	33	Vdc
Voltage Threshold /B13-B17	33	Vdc
CI DCVolt		

Contact input card type A allocated at Slot F requires one Voltage Threshold configuration for all the contact inputs. Contact input card type B allocated at Slot G has two groups of five contact inputs and therefore requires two Voltage Threshold settings. While Contact input card type C allocated at Slot B has three groups of five contact inputs, and therefore requires three Voltage Threshold settings.

Each Voltage Threshold setting is distinct by the slot or terminal numbers. For example: Voltage Threshold/Slot F specifies the threshold setting of all the contact inputs in Slot F with order code A; while Voltage Threshold/G13-G17 specifies the threshold setting for group of five contact inputs with terminals G13 to G17.

Upon start-up, the relay processor determines (from an assessment of the installed modules) which Contact Inputs are available, then displays settings for only these inputs.

VOLTAGE THRESHOLD /[X]

Range: 17, 33, 84, 166 VDC

Default: 17 VDC

The setting determines the minimum voltage required to detect a closed Contact Input. The value is selected according to the following criteria: 17 for 24 V sources, 33 for 48 V sources, 84 for 110 to 125 V sources and 166 for 250 V sources.

Note:

For internal wetting set the Voltage Threshold to 17V.

Note:

When thresholds above 17V are selected, the internal +24V is disabled.

Path: Setpoints > Inputs > Contact Inputs > Contact Input X

NAME

Range: Up to 13 alphanumeric characters

Default: CI 1

An alphanumeric name may be assigned to a Contact Input for diagnostic, setting, and event recording purposes. The CI X ON (Logic 1) FlexLogic operand corresponds to Contact Input X being closed, while CI X OFF corresponds to Contact Input X being open.

DEBOUNCE TIME

Range: 0.0 to 16.0 ms in steps of 0.5 ms

Default: 10.0 ms

The Debounce Time defines the time required for the contact to overcome 'contact bouncing' conditions. As this time differs for different contact types and manufacturers, set it as a maximum contact debounce time (per manufacturer specifications) plus some margin to ensure proper operation.

EVENTS

Range: Enabled, Disabled

Default: Enabled

For example, to use Contact Input F1 as a status input from the breaker 52b contact, to seal-in the trip relay and record it in the Event Records menu, make the following settings changes:

CONTACT INPUT 1 NAME: *52b*

CONTACT INPUT 1 EVENTS: *Enabled*

Note:

The 52b contact is closed when the breaker is open and open when the breaker is closed.

8.2.2 VIRTUAL INPUTS

The relay is equipped with 64 Virtual Inputs that can be individually programmed to respond to input signals from the keypad or from communications protocols. This has the following advantages over Contact Inputs only:

- The number of logic inputs can be increased without introducing additional hardware.
- Logic functions can be invoked from a remote location over a single communication channel.
- The same logic function can be invoked both locally via contact input or front panel keypad, and/or remotely via communications.
- Panel switches can be replaced entirely by virtual switches to save cost and wiring.

All Virtual Input operands are defaulted to *Off* (logic 0) unless the appropriate input signal is received.

Path: *Setpoints > Inputs > Virtual Inputs > Virtual Input*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

If this setting is disabled, the input is OFF (logic 0) regardless of any attempt to alter the input. If enabled, the input operates as shown on the logic diagram below, and generates output FlexLogic operands in response to received input signals and the applied settings.

NAME

Range: Up to 13 Alphanumeric Characters

Default: VI 1

An alphanumeric name may be assigned to a Virtual Input for diagnostic, setting, and event recording purposes.

Note:

Do not use special characters (e.g. <) as this could result in an error. Use only letters from the alphabet and numbers.

TYPE

Range: Latched, Self-reset

Default: Latched

There are two types of operation: self-reset and latched. If VIRTUAL INPUT x TYPE is “Self-Reset,” when the input signal transits from OFF to ON the output operand will be set to ON for only one evaluation of the FlexLogic equations, then return to OFF. If set to “Latched,” the virtual input sets the state of the output operand to the same state as the most recent received input.

The self-reset operating mode generates the output operand for a single evaluation of the FlexLogic equations (i.e., a pulse of one protection pass). If the operand is to be used anywhere other than internally in a FlexLogic equation, it will likely have to be lengthened in time. A FlexLogic timer with a delayed reset time can perform this function.

EVENTS

Range: Enabled, Disabled

Default: Enabled

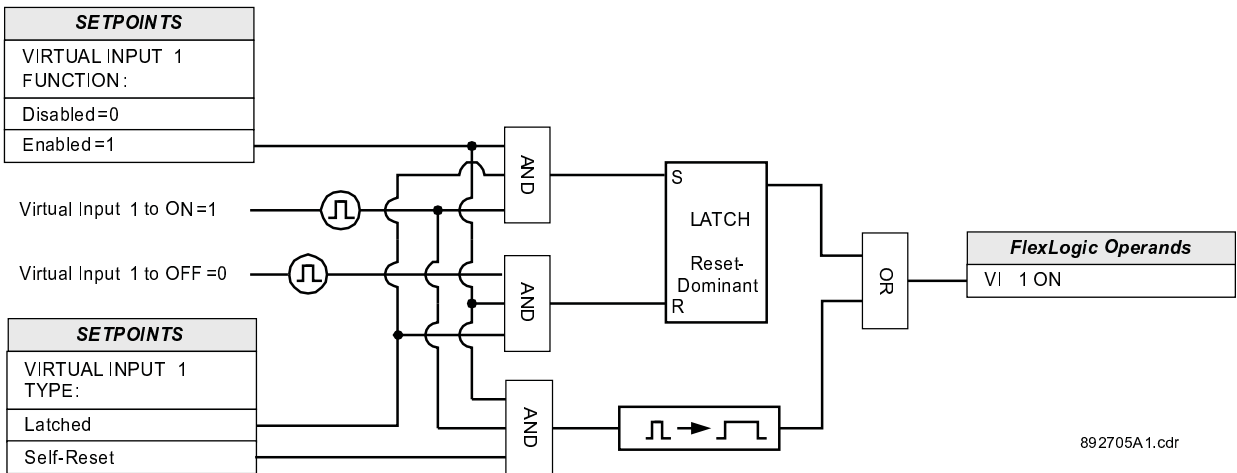


Figure 135: Virtual Inputs Scheme Logic

8.2.3 ANALOG INPUTS

The relay can monitor any external quantity from the DcmA transducers such as vibration, field current, pressure, tap position etc., using analog inputs. Any one of the standard transducer output ranges: 0 to 1 mA, 0 to 5 mA, 0 to 10mA, 0 to 20 mA, or 4 to 20 mA can be connected to the Analog Input terminals. Polarity of these inputs must be observed for proper operation. The analog input circuitry is isolated as a group with the analog output circuitry and the RTD circuitry, only one ground reference is used for the three circuits. Transducers limit this isolation to ± 36 V with respect to the relay's safety ground.

Depending upon the order code, the relay supports one optional DC analog card. The analog card has 4 analog inputs and 7 analog outputs. For each element, when the measured analog input quantity exceeds the pickup level for longer than the associated time delay, the relay can be configured to cause an alarm, or trip. The element will drop out only when the user-configured dropout ratio has been met.

Note:

The connected analog input is still read and displayed in METERING /ANALOG INPUTS if the trip function or alarm function is disabled, and the Analog Input is not disabled.

Path: Setpoints > Inputs > Analog Inputs > Analog Input 1(X)

Settings

FUNCTION

Range: Disabled, Enabled

Default: Disabled

This setting enables or disables the Analog Input function.

FUNCTION

Range: Disabled, Enabled

Default: Disabled

This setting disables the Analog Input function or enables it for any generic application or any specific application i.e., Tap Position. Upon selecting a specific application its value is also displayed in the Transformer metering menu.

Note:

In the Tap Changer Setup, DcmA input is selected as Tap Detection Input and Analog Input 1 Function is set as Tap Position. All other settings for Analog Input 1 are hidden.

FUNCTION

Range: Disabled, Enabled, Bearing Vibration, Excitation Current

Default: Disabled

This setting disables the Analog Input function or enables it for any generic application or any specific application such as Bearing Vibration or Excitation Current. Upon selecting a specific application, its value is also displayed in the Generator metering menu.

NAME

Range: Any combination of 13 Characters

Default: Anlp 1

This setting allows the assignment of symbolic names to each analog input. The length is limited to 13 characters.

UNITS

Range: Any combination of 6 Characters

Default: units

This setting allows the assignment of symbolic names to the engineering units. The length is limited to 6 characters.

RANGE

Range: 0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, 4 to 20 mA

Default: 0 to 1 mA

This setting provides the selection for the analog input range.

MIN VALUE

Range: -500000 to 500000 units in steps of 1 unit

Default: 0

For the **MINIMUM VALUE** setpoint, enter the value which corresponds to the minimum output value of the transducer. For example, if a temperature transducer which outputs 4 to 20 mA for temperatures 0 to 250°C is connected to the analog input, then enter “0” for the MINIMUM VALUE. The relay then interprets 4 mA as representing 0°C. Intermediate values between the minimum and maximum are scaled linearly.

MAX VALUE

Range: -500000 to 500000 units in steps of 1 unit

Default: 0

For the MAXIMUM VALUE setpoint, enter the value which corresponds to the maximum output value of the transducer. For example, if a temperature transducer which outputs 4 to 20 mA for temperatures 0 to 250°C is connected to the analog input, then enter 250 for the MAXIMUM VALUE. The relay then interprets 20 mA as representing 250°C. Intermediate values between the minimum and maximum are scaled linearly.

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Default: Disabled

Selecting the Trip or Configurable setting enables the Trip function of the analog input. If Disabled is selected, the main function still remains enabled and reads the meter value.

TRIP TYPE

Range: Over, Under

Default: Over

This setting determines if pickup occurs when the analog input is over or under the programmed threshold.

TRIP PICKUP

Range: -500000 to 500000 units in steps of 1 unit

Default: 20

This setpoint provides the trip pickup level in the engineering units defined in the setting.

TRIP DROPOUT RATIO

Range: 2 to 20 in steps of 1%

Default: 5%

This setting represents the variation of pickup value, in percentage of pickup, at which the element will effectively drop out. The drop out ratio is defined as follows:

Drop Out = pickup – pickup * dropout ratio /100, when TRIP TYPE is Over

Drop Out = pickup + pickup * dropout ratio /100, when TRIP TYPE is Under

For example, if the pickup level is 5000 µA, **TRIP TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 µA. Conversely, if the **TRIP TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 µA.

µA, **TRIP TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 µA.

Conversely, if the **TRIP TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 µA.

TRIP PICKUP DELAY

Range: 0 to 600 s in steps of 1 s

Default: 2

This setpoint will operate if the trip pickup condition is maintained for a longer time than the delay time set here.

TRIP DROPOUT DELAY

Range: 0 to 600 s in steps of 1 s

Default: 0

This setpoint selects a fixed time interval to delay dropping out the output signal after being generated.

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

The selection of Alarm or Latched Alarm setting enables the alarm function.

ALARM TYPE

Range: Over, Under

Default: Over

This setting determines if alarm pickup will occur when the analog input is over or under the programmed threshold.

ALARM PICKUP

Range: -500000 to 500000 units in steps of 1 unit

Default: 10

This setpoint provides the alarm pickup level in engineering units as defined in the setting.

ALARM DROPOUT RATIO

Range: 2 to 20 in steps of 1%

Default: 5%

This setting represents the variation of pickup value, in percentage of pickup, at which the alarm element will effectively drop out. The drop out ratio is defined as follows:

Drop Out = pickup – pickup * dropout ratio /100, when ALARM TYPE is Over

Drop Out = pickup + pickup * dropout ratio /100, when ALARM TYPE is Under

For example, if the pickup level is 5000 μ A, **ALARM TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 μ A. Conversely, if the **ALARM TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 μ A.

μ A, **ALARM TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 μ A.

Conversely, if the **ALARM TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 μ A.

ALARM PICKUP DELAY

Range: 0 to 600 s in steps of 1 s

Default: 2

This setpoint will operate the element if the alarm pickup condition is maintained for a longer time than the delay time set here.

ALARM DROPOUT DELAY

Range: 0 to 600 s in steps of 1 s

Default: 0

This setpoint selects a fixed time interval to delay dropping out the output signal after being generated.

BLOCK

Range: Any FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled


This setting enables or disables the events of the Analog Input function.

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Latched

The selection of the Self-Reset or Latched setting enables the targets of the Analog Input function.

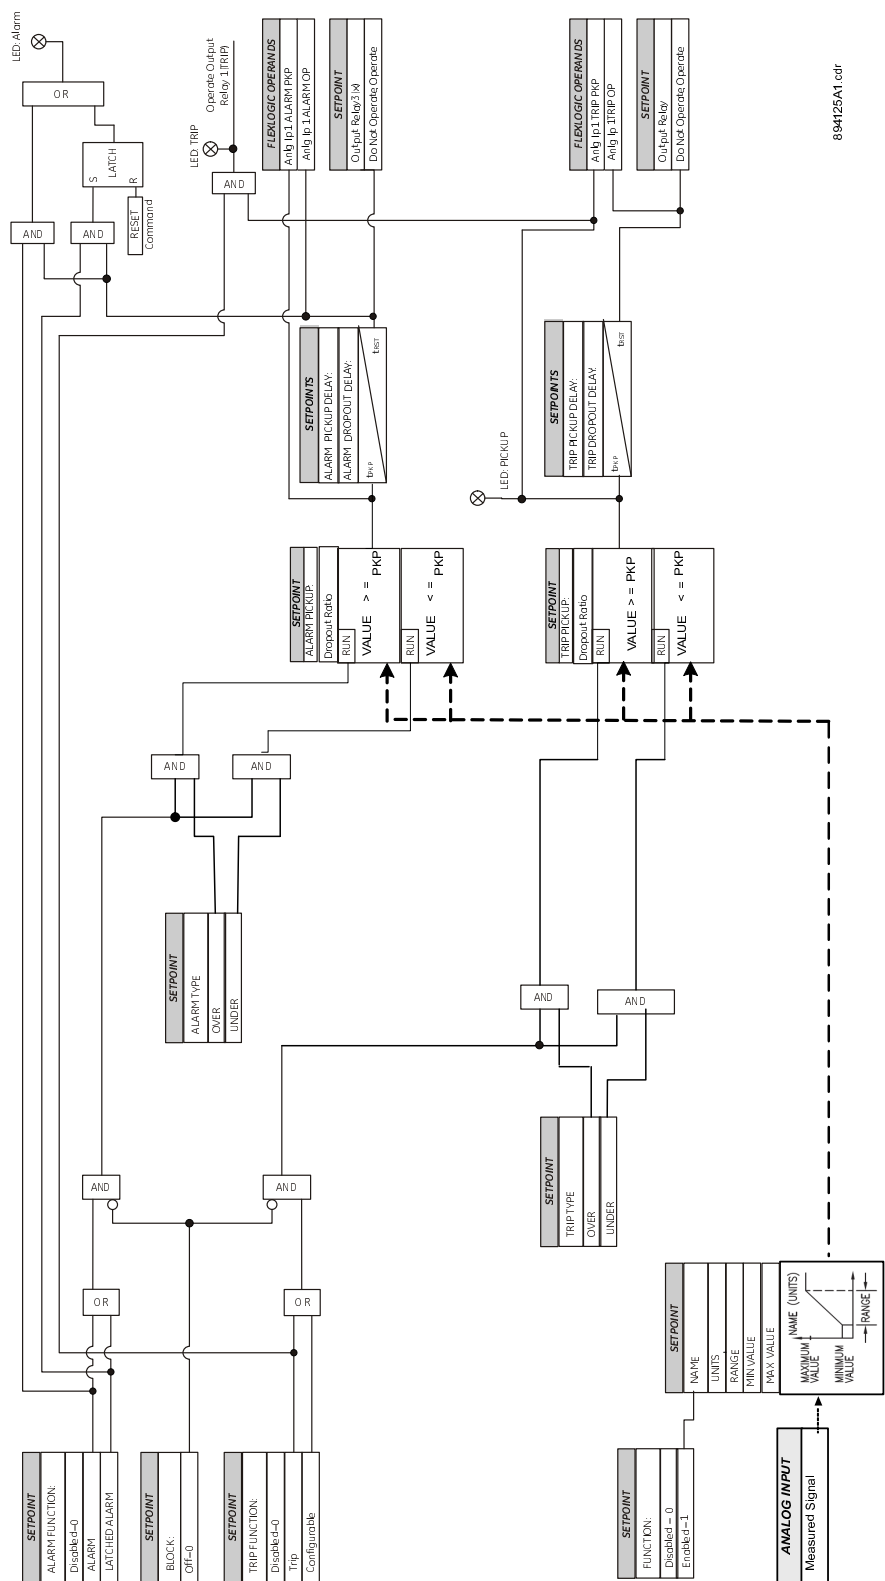

894125A1 cdr

Figure 136: Analog Input Threshold Logic Diagram

8.2.4 REMOTE INPUTS

Remote inputs provide a means of exchanging digital state information between Ethernet-networked devices supporting IEC 61850. Remote inputs that create FlexLogic operands at the receiving relay are extracted from GOOSE messages originating in remote devices.

Remote input 1 must be programmed to replicate the logic state of a specific signal from a specific remote device for local use. The programming is performed by the three settings shown in the *Virtual Inputs* section.

Path: *Setpoints > Inputs > Remote Inputs*

NAME

Range: Up to 13 Alphanumeric Characters

Default: VI 1

An alphanumeric name may be assigned to a Remote Input for diagnostic, setting, and event recording purposes.

EVENTS

Range: Enabled, Disabled

Default: Enabled

This setting enables event generation whenever **Remote Input Status** is updated.

8.3 OUTPUTS

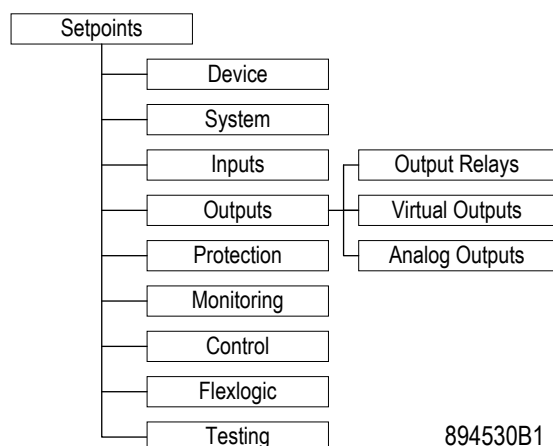


Figure 137: Outputs Display Hierarchy

8.3.1 OUTPUT RELAYS

Note:

In this section the product itself is referred to as a "Device" rather than a relay, to prevent confusion with the term "output relay".

The 8 Series devices are equipped with a number of electromechanical output relays or solid state output relays specified at the time of ordering. The exact configuration of the output relays depend on the model and the order code. For this reason, this description covers the 5 models of the 8 series and their possible configurations. The I/O modules for slot F provides 5 contact outputs for 5 output relays

Devices with one breaker

Output Relay 1 is a Form A relay, which can be used for Trip Coil monitoring and is used for tripping the breaker. The relay is energized upon operation of any element when the setpoint **Function** is set to *Trip*. The relay can be customized by changing the name, type, adding triggers, blocking. Output Relay 1 is configured internally for tripping the breaker, and it cannot be changed, disabled, or replaced by any other relay. Additional output relays can be selected to operate, and this can be done from the menu of each protection, control, or monitoring element.

Output Relay 2 is a Form A relay which can be used for *Close Coil monitoring*. It is selected by default for closing the breaker, but it can be used for any other purposes for some models by configuring the setpoint **Breaker/Close Relay Select**.

Devices with two breakers

Devices with two breakers are equipped with a number of Auxiliary Relays. The Auxiliary Relays can be energized by assigning a FlexLogic operand (trigger) under the setpoint **Aux Rly # Operate**. The Auxiliary Relays can be used for different applications. Any of these auxiliary output relays can be configured for either tripping or closing a breaker. For each of the breakers, you can select a pair of Auxiliary Relays for tripping and closing.

Depending on how an auxiliary relay is assigned, one of the following logic diagrams apply:

- If the auxiliary output relay is configured under the Breaker menu for breaker tripping, the operation of the output follows the *Trip* logic diagram.
- If the auxiliary output relay is configured under the Breaker menu for breaker closing, the operation of the output follows the *Close* logic diagram.
- If the auxiliary output is not configured for tripping or closing a breaker, the operation of the output follows the Auxiliary Relay Generic logic from logic diagram.

The *Trip* and *Close* auxiliary relays follow the respective *Trip* and *Close* logic, meaning they will have fixed operating characteristics as they depend on breaker feedback for resetting.

The auxiliary relays selected for breaker tripping are also available for selection from the menus of all protection elements. However, the auxiliary relays selected for breaker closing are excluded from the list for selection from the menu of all elements. Refer to the Breaker setup section on how to select an auxiliary relay for tripping and closing breakers.

Trip and Close output relay operation

The operation of the Trip and Close output relays is designed to be controlled by the 52a and 52b contacts.

If **TYPE** is set to *Dropoff*, the Trip and Close relay operation follows the logic outlined below:

- The Trip and Close relays reset after a breaker is detected in a state corresponding to the command. When a command is sent to one of these special relays, it remains operated until the requested change of the breaker state is confirmed and the initiating condition has reset.
- If the command resets without a change of the breaker state, the output relay is reset after a default interval of 2 seconds plus the Dropoff time.
- If neither of the breaker auxiliary contacts 52a nor 52b is assigned to a logic input, the Trip Relay resets after a default interval of 100 ms after the initiating input resets. The Close Relay is reset after 200 ms plus the Dropoff time.

If the selection is *Latched*, the relay is energized by any trip or open command and remains energized upon element dropout. Latched auxiliary outputs can be reset with a reset command.

If *Self-Reset* type is selected, the output relay is energized when the corresponding element operates and it stays energized until the element drops out.

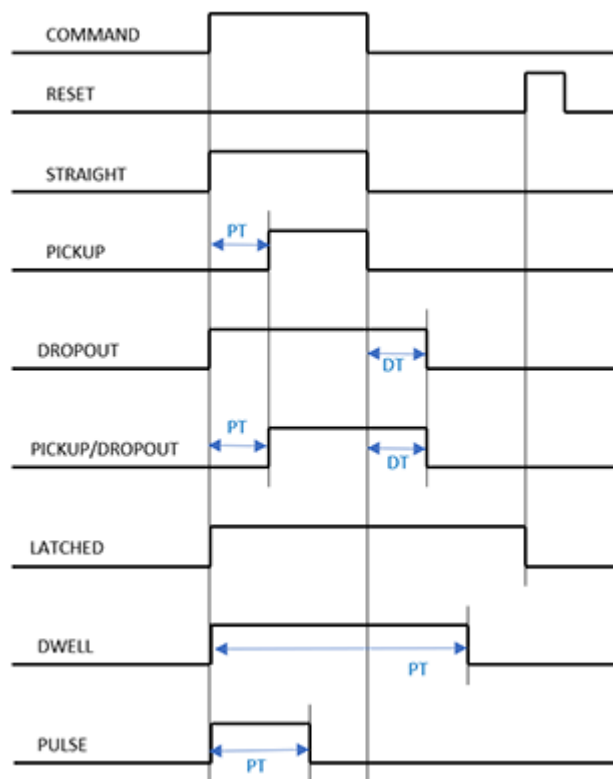


Figure 138: Switch timing of relay types

DWELL TIMER

When the input energizing quantity is true, the output is also activated at the same time instance. If the input energizing quantity stays activated for a time period shorter than the amount of time defined by the setpoint **pickup value**, the output stays activated for the specified time, even if the input energizing quantity is activated again in between.

If the input energizing quantity stays activated for a time period longer than the predefined amount of the pickup value time, the output is deactivated when the input energizing quantity is deactivated.

The following tables summarize the operation

Setpoint 'Type'	Reset Operation	Setpoint 'Pickup Value'	Setpoint 'Dropoff Value'
Pickup	Self-Reset	Visible	Hidden
Dropoff	Self-Reset	Hidden	Visible
Pickup/Dropoff	Self-Reset	Visible	Visible
Self-Reset	Self-Reset	Hidden	Hidden
Latched	Latched, can reset only by Reset Command.	Hidden	Hidden
Pulsed	Pulsed	Visible	Hidden
Dwell	Dwell	Visible	Hidden

52a Contact Configured	52b Contact Configured	Relay Operation
Yes	Yes	Trip Relay and Close Relays continue operating until the breaker is detected open or closed using both 52a and 52b contacts as per breaker detection logic.
Yes	No	The Trip Relay continues operating until 52a indicates an open breaker. The Close Relay continues operating until 52a indicates a closed breaker.

52a Contact Configured	52b Contact Configured	Relay Operation
No	Yes	The Trip Relay continues operating until 52b indicates an open breaker. The Close Relay continues operating until 52b indicates a closed breaker.
No	No	The Trip Relay operates upon a trip command and stays "high" until the 100 ms default time expires. The Close Relay operates upon close command and resets after the 200 ms time expires.

8.3.1.1 OUTPUT RELAY AVAILABILITY


The output relays can be used for many different purposes such as opening and closing breakers, contactors, switches, control of primary equipment such as motor, transformer, generator, for blocking or supervision purposes, for interlocking, etc. To avoid using the same output relay for two totally different actions, the 8series relays checks the assignments of these output relays, and prevents their usage for some other actions. For this purpose, the output relays that have been already assigned for some action, are hidden from the menus of other elements.

For example, if output relay 1 has been assigned under Trip Relay Select setpoint to trip breaker 1, this output relay will be hidden from the list of outputs available to select in the menu for opening or closing a Switch, and vice versa. The table below defines the dependency of output relay availability based on the first come-first serve principal.

Place selected	Assigned/Non-assigned Output Relays	Available/Hidden
Output Relays in: Setpoints > Protection > Control > Monitoring Elements	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Open Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Available Hidden Hidden Hidden Available
Output Relays in Control Elements with Restoration Ability	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Close Relay Select SW [1-9] Open Relay Select Other Auxiliary Relays NOTE: The elements producing close commands are directly linked to their respective breakers for closing/restoring.	Hidden Hidden Hidden Hidden Available
Setpoints > System > Switch [X] > Open Relay Select	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available
Setpoints > System > Switch [X] > Close Relay Select	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Open Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available
Setpoints > System > Breaker [X] > Trip Relay Select	BKR [1-3] Close Relay Select SW [1-9] Open Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available
Setpoints > System > Breaker [X] > Close Relay Select	BKR [1-3] Trip Relay Select SW [1-9] Open Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available

8.3.1.2 CRITICAL FAILURE RELAY

The 8 Series relay is equipped with one output relay (# 8 - Critical Failure Relay) for failsafe indication. The Critical Failure Relay is a Form-C contact with one normally open (NO) and one normally closed (NC) contact. There are no user-programmable setpoints associated with this output relay.

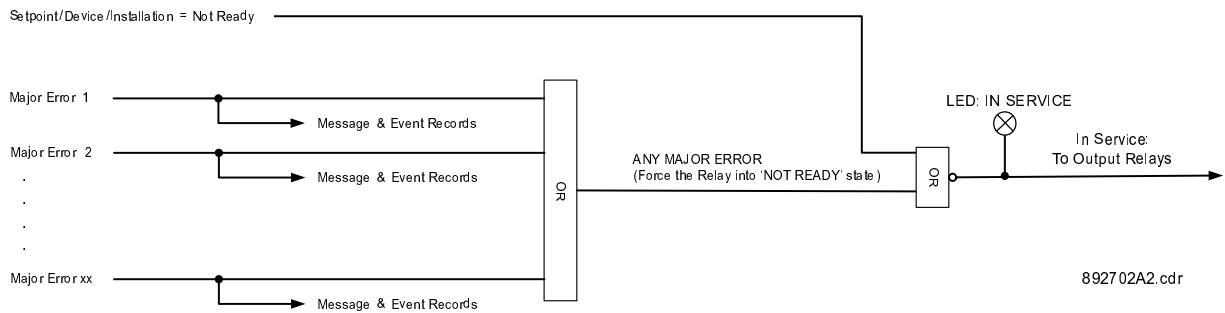

892702A2.cdr

Note:

Please refer to the *Self-Test Errors* section from the manual for details on the status of the output relays during *Relay Not Ready* state, or detection of *Major Self-Test error*.

MAINTAINING AN UNINTERRUPTED PROCESS

The Output Relays are operational (can be closed/opened) while the is In-Service. If the relay goes into “Out-of-Service” mode, the status of all previously energized output relays changes to de-energized. If an output relay was used to maintain a running process, or to hold a motor contactor while energized, the process or the motor contactor will be interrupted. To keep the process uninterrupted, the following connection scheme can be applied:

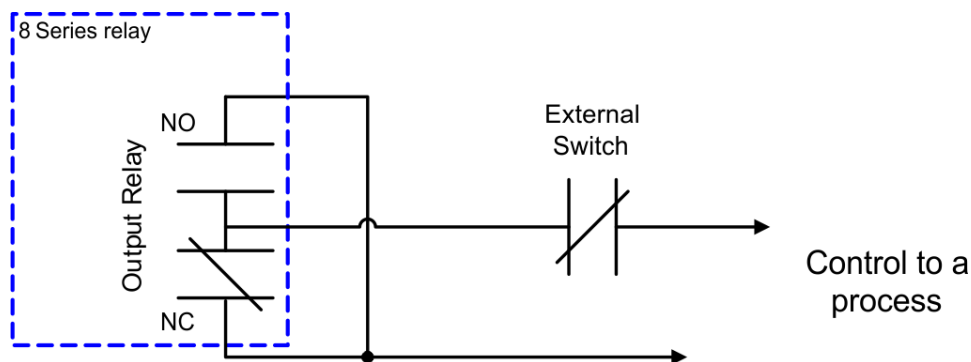


Figure 139: Maintaining an uninterrupted process upon a relay Major Error

If the output relay is energized during the In-Service relay condition, the NO contact will be closed, and the NC contact will be open. The process is running. If the relay goes into “Out-of-Service” mode, the output relay will be de-energized, and the process will still be running, as the NC contact will be closed. An external switch, or stop pushbutton must be installed in series to the relay output contacts, so that one can stop the process if needed.

8.3.1.3 RELAY SELECTED FOR BREAKER TRIP

When any Auxiliary Relay is selected under **Setpoints > System > Breakers (Contactor) > Breakers 1 (Contactor 1) > Trip Relay Select**, the Trip Relay logic is applied to energize the selected Relay. If the selected value of Trip Relay Select is *Off*, the output relay functions as an Auxiliary relay. The description below applies to the Relay 1 Trip functionality

NAME

Range: Up to 13 alphanumeric characters

Default: Trip

The setpoint is used to name the Trip relay by selecting up to 13 alphanumeric characters.

Note:

If Aux Relay 1 is selected for Breaker Trip or Contactor Trip, the relay name from the Output Relays menu changes to "Trip". If Aux Relay 1 is not selected, the name reverts to "Aux Relay 1".

BLOCK

Range: Disabled, Any FlexLogic operand

Default: Disabled

This setting defines a Block to the Trip output relay. When the selected input is asserted, the Trip output relay is blocked.

OPERATE

Range: Off, On, Any FlexLogic operand

Default: Off

This setpoint provides a selection of any operand from the list of FlexLogic or communications, which can be used to energize the Trip output relay.

When set to On, the output relay is constantly asserted (On=1).

When set to Off and no FlexLogic operand is selected, the output relay operates as set in individual protection elements.

Note:

Setting OPERATE to On supersedes individual protection function settings.

PICKUP VALUE

Range: 0 to 14400000 in steps of 1 ms

Default: 0 ms

This setting is used to set the time/time delay for Pickup, Dwell, Pulse, Pickup/Dropoff.

DROPOFF VALUE

Range: 0 to 14400000 in steps of 1 ms

Default: 0 ms

This setting is used to set the drop-off time delay for Dropoff, Pickup/Dropoff.

BLOCK

Range: Disabled, Any FlexLogic operand

Default: Disabled

This setting defines a Block to the Trip output relay. When the selected input is asserted, the Trip output relay is blocked.

OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint provides a selection of any operand from the list of FlexLogic or communications, which can be used to energize the Trip output relay.

TYPE

Range: Pickup, Dropoff, Dwell, Pulse, Pickup/Dropoff, Self-Reset, Latched

Default: Self-Reset

If Self-Reset type is selected, the output relay is energized as long as the element is in operating mode and resets when the element drops out. If Latched type is selected, the output relay stays energized upon element dropout. The latched auxiliary outputs can be reset by issuing a reset command. More detail is provided in description of the Output Relays

OPERATION

Range: Non-Failsafe, Failsafe

Default: Failsafe

Failsafe operation causes the output relay to be energized when the Trip condition signal is low and de-energized when the same signal is high. A failsafe relay also changes state (if not already activated by an operand driving this output relay) when control power is removed from the 859. Conversely a non-failsafe relay is de-energized in its normal non-activated state and will not change state when control power is removed from the relay (if not already activated by a protection element).

The default value depends on the selection made in: Setpoints > System > Motor > Setup > Switching Device Type. If the Switching Device Type is “Breaker”, the Operation default is “Non-Failsafe”. If the Switching Device Type is “Contactor”, the Operation default is “Failsafe”.

Note:

Changing the default setting will result in losing the basic functionality of the output relay.

Caution:

A failsafe relay changes state when control power is removed from the relay. When Switching Device Type is “Contactor”, output relay in failsafe mode can result into tripping of the motor when relay power is removed.

EVENTS

Range: Disabled, Enabled

Default: Enabled

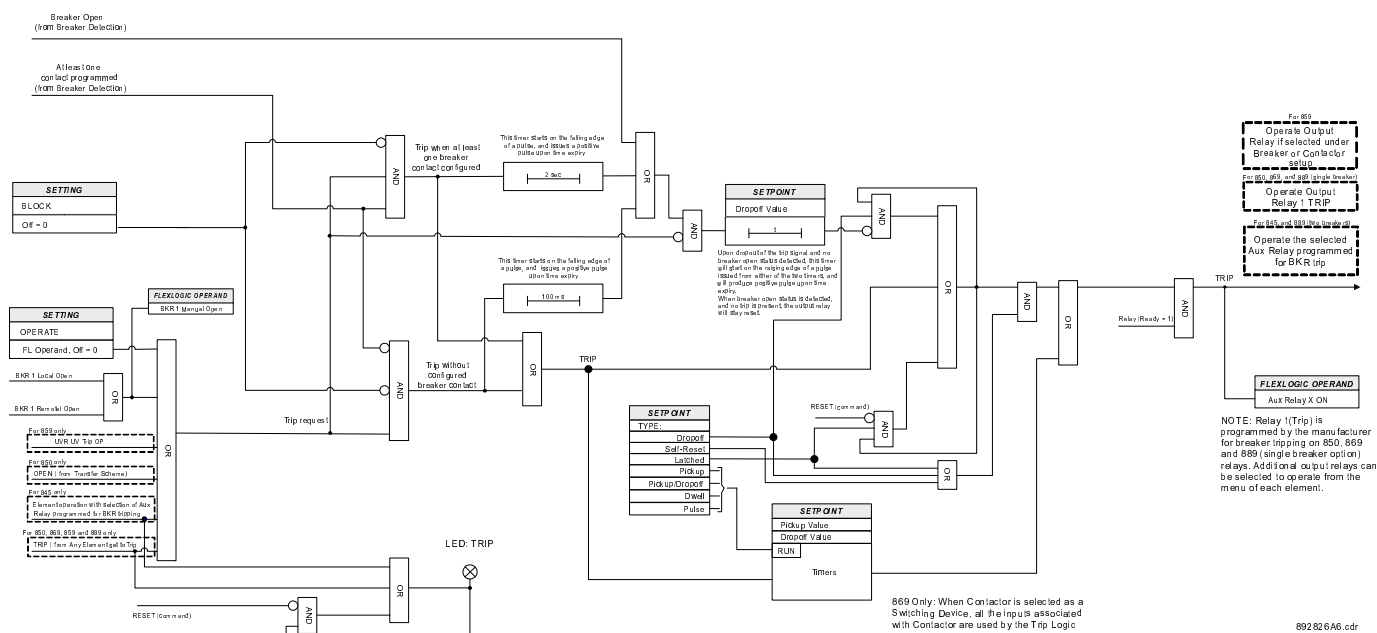


Figure 140: Relay 1 “TRIP” Selected for Breaker 1 logic diagram

8.3.1.4 RELAY SELECTED FOR BREAKER CLOSE

Output Relay 2 (F4) is labeled CLOSE/AUX on the wiring diagram. As suggested by that name, it can be used as a Close relay or an Auxiliary relay. This selection is made at Setpoints > System > Breakers (Contactor) > Breakers 1 (Contactor 1) > Close Relay Select. If the selected value of the CLOSE RELAY SELECT setting is Off, Output Relay 2 functions as an Auxiliary relay. If the selected value is Relay 2, Output Relay 2 functions as a Close relay. The default value is Off. The description below applies to both Relay 2 “Close” functionality.

Path: Setpoints > Outputs > Output Relays > Aux Relay 2 (Close)

Note:

The output relays selected under the Breaker menu for breaker closing are excluded from the list of outputs for selection under the menus of all elements providing such output relay selection.

Note:

For relays with a single breaker, if Aux Relay 2 is selected for Breaker Close, the relay name from the Output Relays menu changes to “Close”. If Aux Relay 2 is not selected, the name reverts to “Aux Relay 2”.

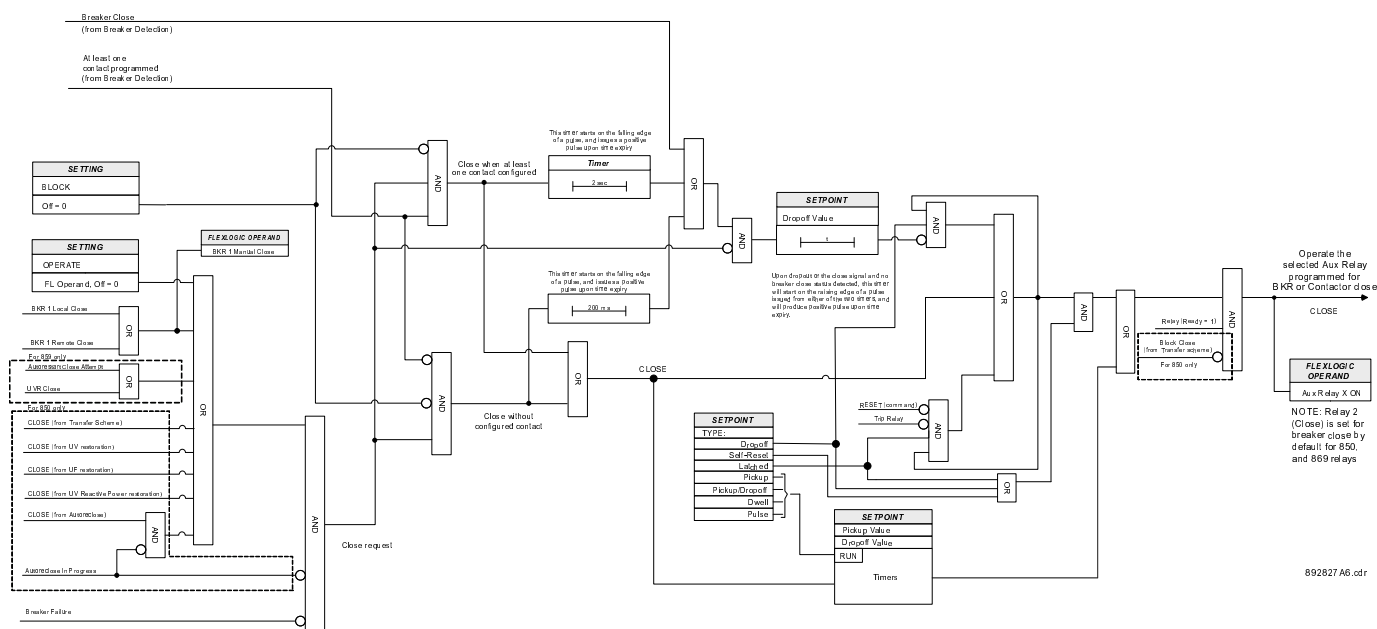


Figure 141: Close Selected for Breaker 1 logic diagram

8.3.2 VIRTUAL OUTPUTS

The relay is equipped with 96 virtual outputs that may be assigned for use via FlexLogic. Virtual outputs not assigned for use are set to *OFF* (Logic 0).

A name can be assigned to each virtual output. Any change of state to a virtual output can be logged as an event if programmed to do so. Virtual outputs are resolved in each protection pass via the evaluation of FlexLogic equations.

For example, if Virtual Output 1 is the trip signal from FlexLogic and the trip relay is used to signal events, the settings would be programmed as follows:

VIRTUAL OUTPUT 1 NAME: *Trip*

VIRTUAL OUTPUT 1 EVENTS: *Enabled*

Path: *Setpoints > Outputs > Virtual Outputs > Virtual Outputs 1 (32)*

NAME

Range: up to 13 alphanumeric characters

Default: VO 1

An alphanumeric name may be assigned to a virtual output for diagnostic, setting, and event recording purposes.

Note:

Do not use special characters (e.g. <) as this could result in an error. Use only letters from the alphabet and numbers.

EVENTS

Range: Disabled, Enabled

Default: Disabled

8.3.3 ANALOG OUTPUTS

Depending on the order code, the relay supports one optional DC analog card. The Analog card has 4 analog inputs and 7 analog outputs. There are three Analog Output channel scenarios for analog minimum and maximum output range shown in the figure below. Type A characteristics apply when the minimum range is 0 and the maximum range is a positive (+ve) value. Type B characteristics apply when the minimum and maximum ranges are definitely positive (+ve) values. Type C characteristics apply when the minimum range is a negative (-ve) and the maximum range is a positive (+ve) value. The following diagram illustrates these characteristics.

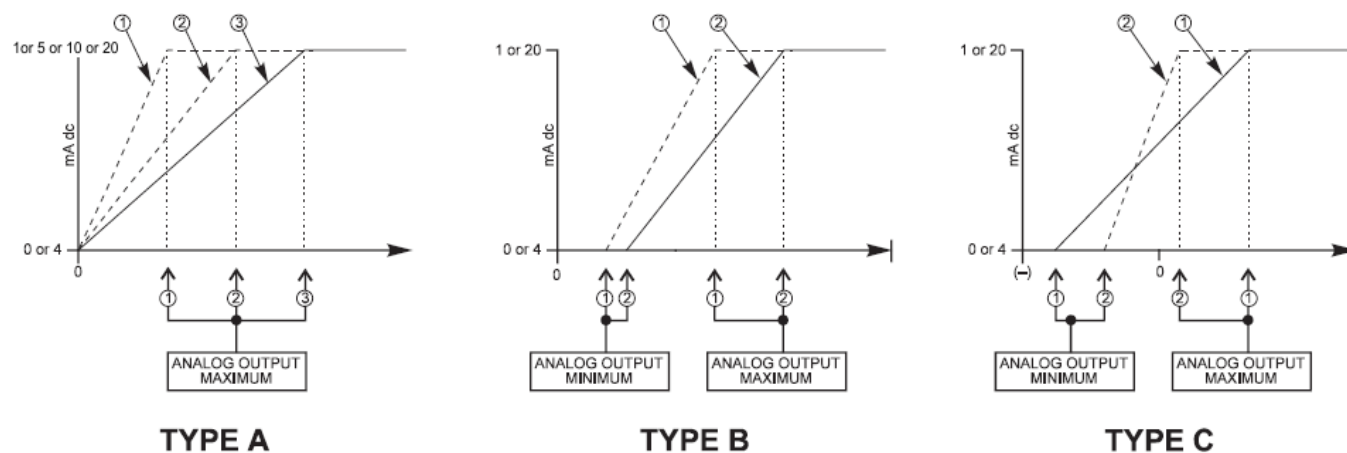


Figure 142: Analog Outputs Channel Characteristics

Path: **Setpoints > Outputs > Analog Outputs > Analog Output 1(X)**

FUNCTION

Range: Disabled, Enabled

Default: Disabled

RANGE

Range: 0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, or 4 to 20 mA

Default: 0 to 1 mA

This setting provides the selection for the analog output range.

PARAMETER

Range: Off, any Flex Analog Parameter

Default: Off

This setting selects the measured parameter to control the Analog Output level.

MIN VALUE

Range: Populates per selection of the analog parameter

Default: 0

This setting defines the minimum value of the analog output quantity. It populates based on the selection of the analog parameter.

MAX VALUE

Range: Populates per selection of the analog parameter

Default: 0

This setting defines the maximum value of the analog output quantity. It populates based on the selection of the analog parameter.

Each channel can be programmed to represent a FlexAnalog parameter available in the respective relay. The range and steps is the same as the range of the FlexAnalog.

PF SCALING TYPE


Range: Flat, Step

Default: Flat

The measured Power Factor values can be transferred to any of the available analogue outputs. There are two options for scaling power factor: Flat and Step.

Note:

This setting is only available when Analog Output is selected as Power Factor.

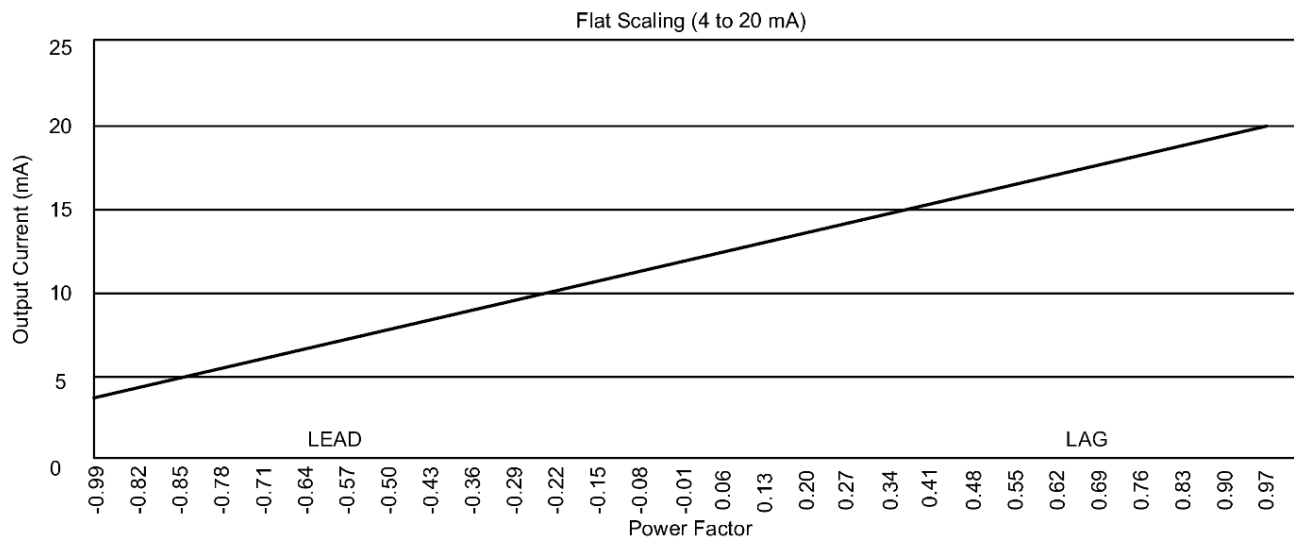

894419A1 cdr

Figure 143: Flat Scaling

Flat scaling is a simple ascending linear function. It covers all selected ranges. The above figure shows the graph for the 4 to 20 mA output range in Flat Scaling. It covers the entire selected power factor range from the minimum (-0.99) to the maximum setting (+1.00).

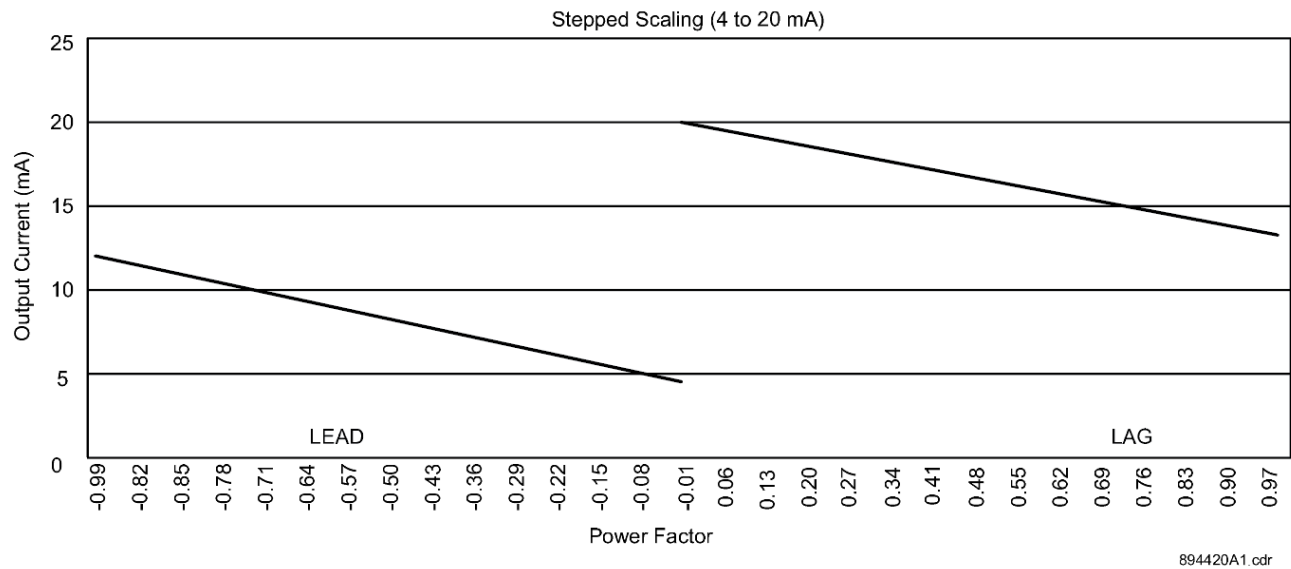


Figure 144: Step Scaling

Step scaling is a discontinuous descending linear function with one step-up point. The figure above shows the related graph for the 4 to 20 mA output range in Step Scaling. It covers all the entire selected power factor range from the minimum (-0.01) to the maximum setting (+0.00).

CHAPTER 9

PROTECTION

9.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	306
Protection	307
Generator Elements Overview	308
Current elements overview	372
Voltage elements overview	447
Impedance elements	475
Power elements	487
Frequency elements	495

9.2 PROTECTION

The protection elements are organized in six (6) identical setpoint groups: Setpoint Group 1 to Setpoint Group 6.

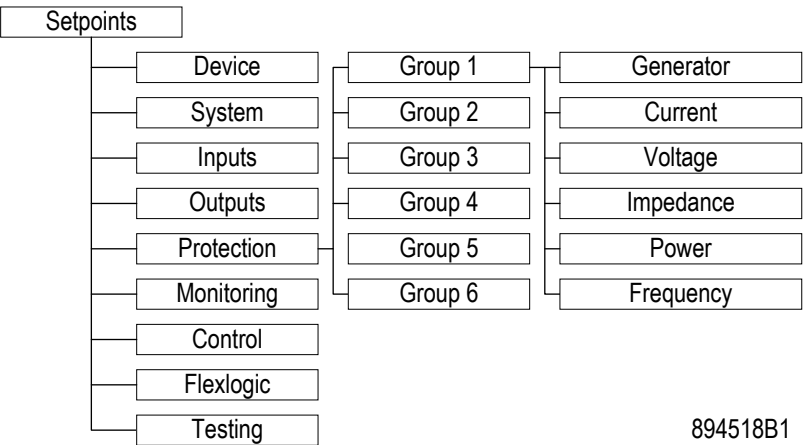


Figure 145: Protection Display Hierarchy

Each Setpoint Group has the same protection functions, depending on the relay order code.

9.3 GENERATOR ELEMENTS OVERVIEW

The relay provides the following protection elements:

- Thermal Model
- Percent Differential
- Overall Percent Differential
- Generator unbalance
- Inadvertent Energization
- Loss of Excitation
- 3rd Harmonic Neutral Undervoltage
- 3rd Harmonic Voltage Difference
- Offline Overcurrent
- Overload Alarm

9.3.1 PERCENT DIFFERENTIAL

The relay provides one Percent Differential element per protection group using an internal summation method (described below). It is intended for use on the stator windings of the rotating machinery. This element is available only if the second AC analog input card with the K1-CT bank is properly installed in slot K.

For wiring options, please refer to Installation / Electrical installation / Differential CT inputs chapter of the manual.

For internal summation percent differential, we recommend that the terminal side CTs and neutral side CTs have the same ratios. The maximum allowable ratio mismatch is 10:1. In the case of a mismatch, the relay scales the currents to the primary of the CT with the higher primary value which is used as the CT reference for the percent differential element.

Internal summation operates on a per phase basis (phase-segregated). The key variables used in the element are the Restraining current (I_r) and the Differential current (I_d). The way they are calculated depends on the used differential method as follows:

Internal Summation Method

For internal summation method, differential current I_d and restraint current I_r are defined below:

$$I_d = |I_{ts} - I_{ns}|$$

$$I_r = \text{MAX}\{|I_{ts}|, |I_{ns}|\}$$

Where: I_{ts} is the current phasor of the terminal side CTs (J1-CT bank), in per unit normalized to the reference CT nominal; I_{ns} is the current phasor of the neutral side CTs (K1-CT bank), in per unit normalized to the reference CT nominal; They are calculated based on the following equations:

$$I_{ts} = (I_{ts_sec_amp})(CT_{ts_pri_rating})/(C_{ts_sec_rating})(CT_{ref_pri_rating})$$

$$I_{ns} = (I_{ns_sec_amp})(CT_{ns_pri_rating})/(C_{ns_sec_rating})(CT_{ref_pri_rating})$$

Where:

- $I_{ts_sec_amp}$ = the terminal side CT current phasor in secondary amps
- $I_{ns_sec_amp}$ = the neutral side CT current phasor in secondary amps
- $CT_{ts_sec_rating}$ = the terminal side CT secondary current rating
- $CT_{ns_sec_rating}$ = the neutral side CT secondary current rating
- $CT_{ts_pri_rating}$ = the terminal side CT primary current rating

- $CT_{ns_pri_rating}$ = the neutral side CT primary current rating
- $CT_{ref_pri_rating}$ = the reference CT primary current rating
- The reference CT is the CT with the maximum primary current rating

The Percent Differential element with the internal summation method selected uses dual slope dual break point differential/restraint characteristic. The main purpose of the percent-slope characteristic is to prevent misoperation caused by unbalances between CTs during external faults. CT unbalances arise as a result of the following factors:

- CT accuracy errors
- CT saturation

The characteristic allows for very sensitive settings when fault current is low and less sensitive settings when fault current is high and CT performance may produce incorrect operate signals. The dual slope characteristic is shown in the following figure.

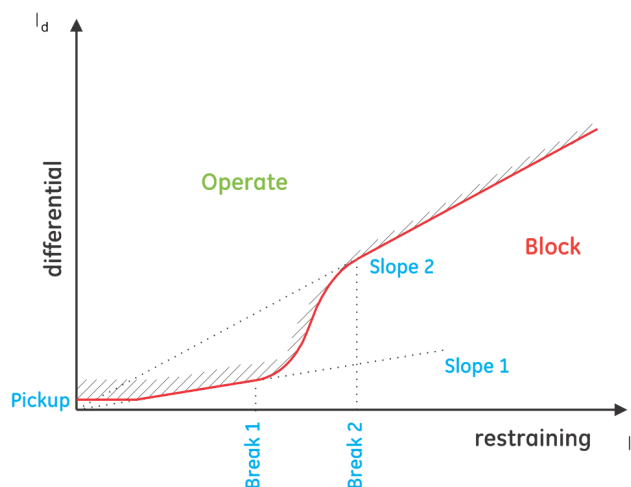


Figure 146: Percent Differential Characteristic

The horizontal axes value of the percent differential characteristic is the Restraining current (I_r) and the vertical axes value is the Differential current (I_d).

Each pair of measured restraining and differential currents represents a point on the previous figure: Percent Differential Characteristic. If this point is located above the limit line (area labeled “Operate”), then the differential flag is set ($DIF=1$). If the point is located below or on the limit line (area labeled “Block”), then the differential flag is reset ($DIF=0$).

Setpoints

Path: **Setpoints > Protection > Group 1 > Generator > Percent Differential**

FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

PICKUP

Range: 0.05 to 1.00 x CT in steps of 0.01

Default: 0.20

This setting defines the minimum differential current required for operation. The setting is based on the amount of differential current that can be seen under normal operating conditions. A setting of 0.1 to 0.3 pu is generally recommended. The CT base of the setting is the reference CT nominal (the CT with the maximum primary current rating).

SLOPE 1

Range: 1 to 100% in steps of 1

Default: 25%

The setting is applicable for restraint currents from zero to BREAK 1, and defines the ratio of differential to restraint current above which the element operates. The slope is set to ensure sensitivity to internal faults at normal operating current levels. The criterion for setting this slope is to allow for maximum expected CT mismatch error when operating at the maximum permitted current. This maximum error is generally in the range of 5 to 10% of CT rating.

BREAK 1

Range: 0.50 to 2.00 x CT in steps of 0.01

Default: 1.50

The setting defines the end of the Slope 1 region and the start of the transition region. It should be set just above the maximum normal operating current level of the machine.

BREAK 2

Range: 2.00 to 30.00 x CT in steps of 0.01

Default: 4.00

The setting defines the end of the transition region and the start of the SLOPE 2 region. It must be set to the level at which any of the protection CTs are expected to begin to saturate. To avoid discontinuity in the cubic spline calculation, the relay applies a minimum margin of 0.3 CT between BREAK 1 and BREAK 2.

SLOPE 2

Range: 1 to 100% in steps of 1

Default: 95%

The setting is applicable for restraint currents above the BREAK 2 setting. The slope is set to ensure stability under heavy external fault conditions that could lead to high differential currents as a result of CT saturation. A setting of 80 to 100% is recommended. The transition region (as shown on the percent differential characteristic) is a cubic spline, automatically calculated by the relay to result in a smooth transition between SLOPE 1 and SLOPE 2 with no discontinuities.

PICKUP DELAY

Range: 0.000 to 10.000 in steps of 0.001

Default: 0.000

This setting defines the pickup time delay of the percent differential element.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

Note:

The values of the setpoints for minimum pickup, Break 1 and Break 2 are expressed in terms of CT reference.

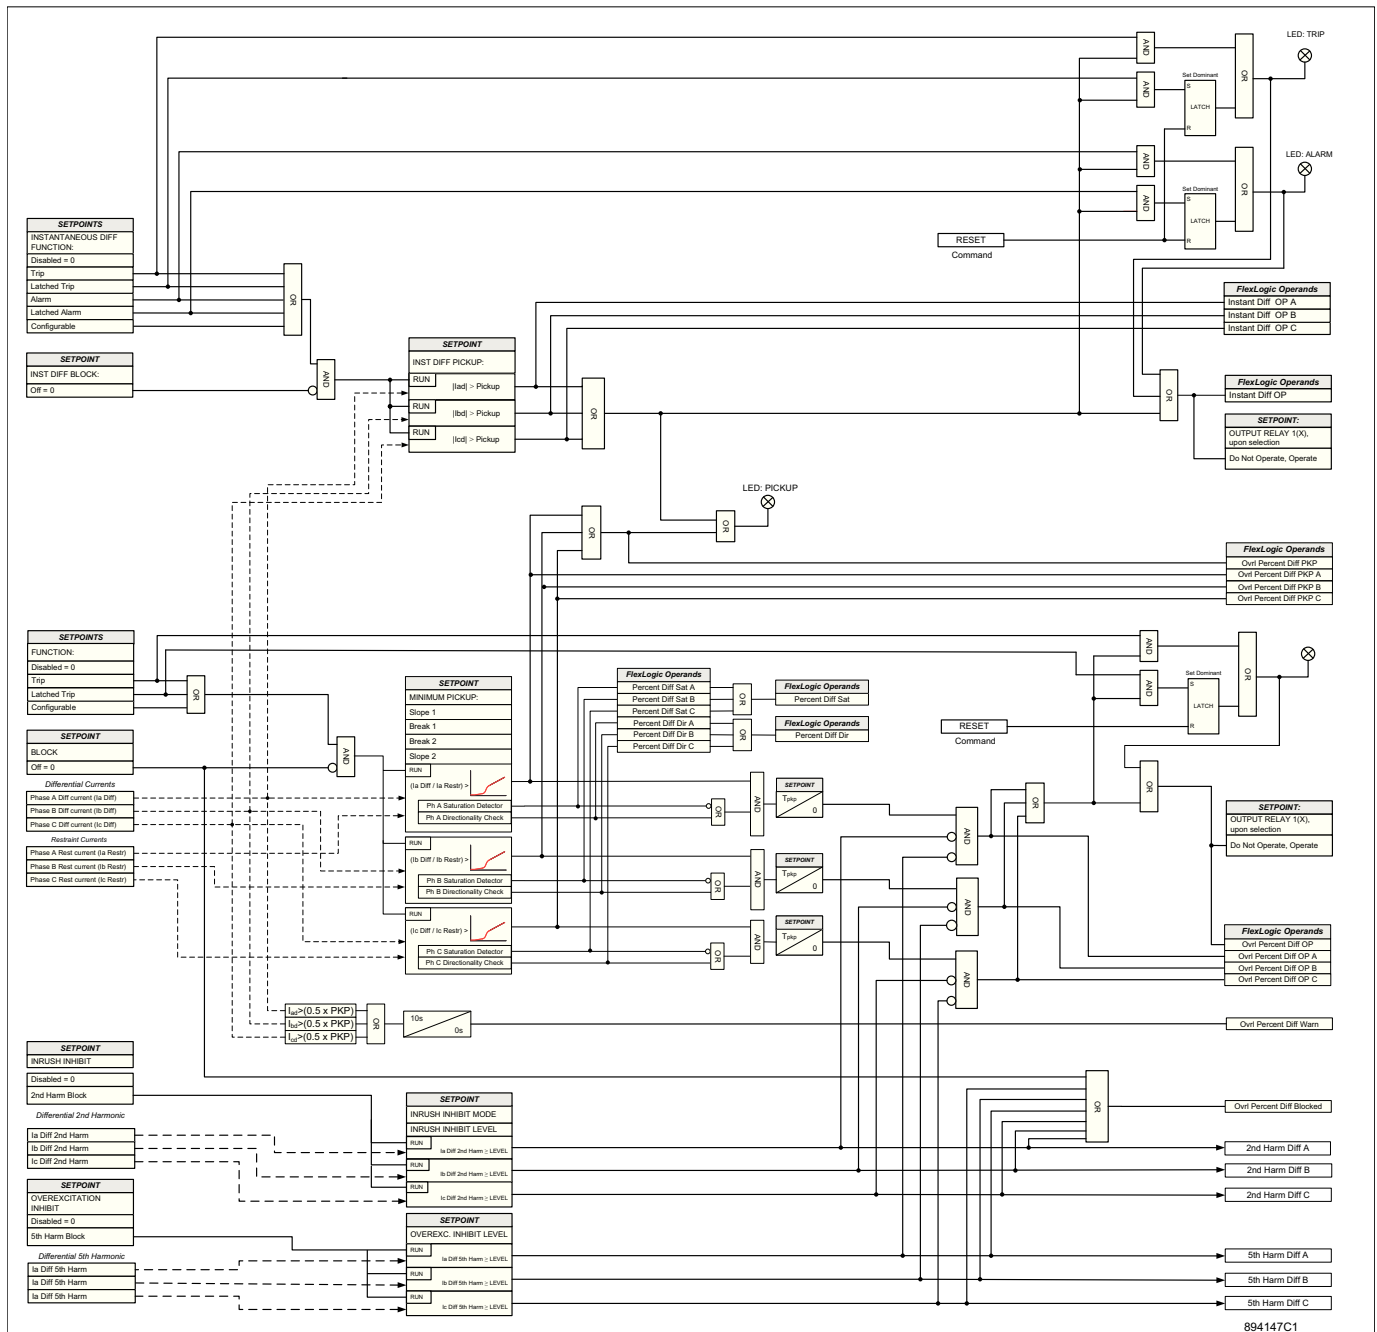


Figure 147: Percent Differential logic diagram

9.3.1.1 SATURATION DETECTOR

The relay incorporates a saturation detection feature to enhance security during external faults. This detector takes advantage of the fact that any CT operates correctly for a short period of time, even under very large primary currents that would subsequently cause a very deep saturation. As a result, in the case of an external fault, the differential current stays very low during the initial period of linear operation of the CTs while the restraining signal develops rapidly.

Once one or more CTs saturate, the differential current increases. The restraining signal, however, yields by at least a few milliseconds. During internal faults, both the differential and restraining currents develop simultaneously. This creates two distinct characteristic patterns for the differential restraining trajectory during external and internal fault.

The CT saturation condition is declared when the restraining signal magnitude surpasses the lower breakpoint (BREAK 1) while the differential current remains below the first slope (SLOPE 1) and its extension. This condition is transient and necessitates a seal-in mechanism, implemented through State Machine logic.

To address rapidly occurring CT saturation, the detector checks for signal relationships at the waveform level. The sample-based stage of the saturation detector uses the time derivative of the restraining signal (di/dt) to trace the saturation pattern more accurately. The saturation detector is capable of detecting saturation approximately 3 milliseconds after a fault initiates. It operates based on the main differential characteristic, and users should consider this when configuring the characteristic as the parameters should retain their original meaning.

The saturation detector is implemented as a state machine, with NORMAL as the initial state. In this state, the saturation flag (SAT) is unset. The algorithm calculates the saturation condition (SC). If SC equals 1 while in the NORMAL state, the saturation detector transitions to the EXTERNAL FAULT state and sets the saturation flag (SAT = 1). The algorithm reverts to the NORMAL state if the differential current falls below the first slope (SL) for over 200 milliseconds.

When in the EXTERNAL FAULT state, the algorithm enters the EXTERNAL FAULT & CT SATURATION state if the differential flag (DIF) is set (DIF = 1). In the EXTERNAL FAULT & CT SATURATION state, the saturation flag remains set (SAT = 1). The state machine returns to the EXTERNAL FAULT state if the differential flag is reset (DIF = 0) for 100 milliseconds. This logic is illustrated in the following figure:

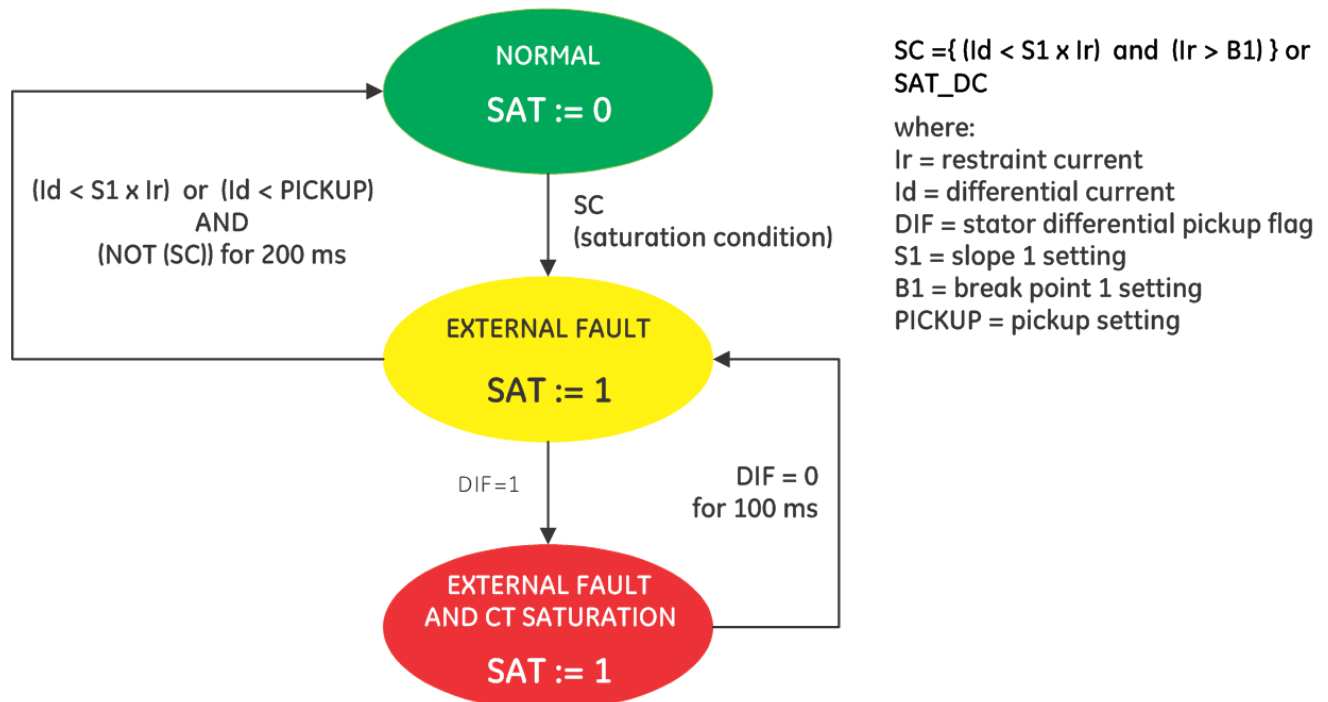


Figure 148: Saturation detection state machine

A distinct approach for detecting saturation attributed to the DC component has been integrated into the saturation detection logic, detailed as follows.

1. Calculate the DC component of both phase and neutral currents. This calculation is based on the absolute value of the average of current samples collected over the most recent cycle of data.
2. Examine the calculated DC component according to the following criteria:

$$DC_Ph > D1 \times |I_{Ph}| \text{ AND } |I_{Ph}| > PKP \rightarrow DC_Ph_SAT = 1$$

$$DC_N > D1 \times |I_N| \text{ AND } |I_N| > PKP \rightarrow DC_N_SAT = 1$$

where D1 = 0.5, a factory constant.

The outcomes of these comparisons should then be passed on to the following logic for the declaration of saturation stemming from the DC component.

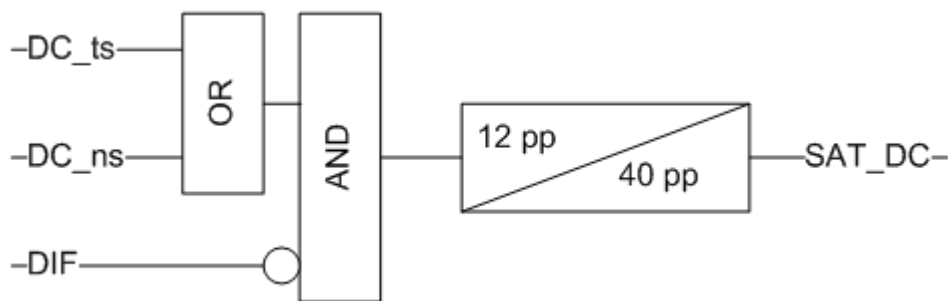


Figure 149: Saturation detection logic

The operation of the saturation detector is available through the FlexLogic operand STATOR DIFF SAT A/B/C.

9.3.2 THERMAL MODEL (49)

The thermal model of the 889 is primarily intended for induction generators, especially those that start on the system bus in the same manner as induction motors. However, some of the thermal model features may be used to model the heating that occurs in synchronous generators during overload conditions.

One of the principle enemies of generator life is heat. Generator thermal limits are dictated by the design of both the stator and the rotor. Induction generators that start on the system bus have three modes of operation:

- locked rotor or stall (when the rotor is not turning)
- acceleration (when the rotor is coming up to speed)
- generating (when the rotor turns at super-synchronous speed).

Heating occurs in the generator during each of these conditions in very distinct ways. Typically, during the generator starting, locked rotor and acceleration conditions, the generator will be rotor limited. That is to say that the rotor will approach its thermal limit before the stator. Under locked rotor conditions, voltage is induced in the rotor at line frequency, 50 or 60 Hz. This voltage causes a current to flow in the rotor, also at line frequency, and the heat generated (I^2R) is a function of the effective rotor resistance. At 50 or 60 Hz, the reactance of the rotor cage causes the current to flow at the outer edges of the rotor bars. The effective resistance of the rotor is therefore at a maximum during a locked rotor condition as is rotor heating. When the generator is running at above rated speed, the voltage induced in the rotor is at a low frequency (approximately 1 Hz) and therefore, the effective resistance of the rotor is reduced quite dramatically. During overloads, the generator thermal limit is typically dictated by stator parameters. Some special generators might be all stator, or all rotor limited. During acceleration, the dynamic nature of the generator slip dictates that rotor impedance is also dynamic, and a third thermal limit characteristic is necessary.

The Thermal model consists of five key elements:

- Thermal model curve (overload)
- Overload pickup level
- Unbalance biasing of the machine current while the machine is running
- Machine cooling time constants
- Biasing of the thermal model based on hot/cold information and/or measured stator temperature

The algorithm integrates both stator and rotor heating into a single model. The machine heating level is maintained in the Thermal Capacity Used (TCU) register. If the machine has been stopped for a long time, it will be at ambient temperature and the Thermal Capacity Used will be zero. If the machine is in overload, the output operand is set once the thermal capacity used reaches 100%.

Once the machine load current exceeds the overload level (FLA x overload factor), it enters an overload phase; that is, the heat accumulation becomes greater than the heat dissipation. The thermal model reacts by incrementing the

Thermal Capacity Used at a rate dependent on the selected thermal curve and overload level. When the thermal capacity reaches 100%, the Thermal TRIP OP operand (typically configured to trip the machine) is set.

In the event of a loss of control power to the relay while the machine status is not Stopped or Tripped, the thermal capacity will remain unchanged when control power is restored.

If the machine status is stopped or tripped when the control power is lost, the thermal capacity will decay for the duration of the loss of control power based on the stopped machine cooling rate (assuming the real time clock (RTC) was working properly during the power loss). If the clock was not working properly, the TCU value will remain unchanged when the relay power is restored.

The setpoints are defined in **Setpoints > Protection > Group 1 > Motor/Generator > Thermal Model** and are described in the following sections.

9.3.2.1 TRIP FUNCTION

Range: Disabled, Trip, Latched Trip (4.00 onwards), Configurable

Default: Disabled

The setting enables the Thermal Model trip functionality.

9.3.2.2 OVERLOAD CURVE

Range: Standard, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D, FlexCurve OL, IEC

Default: Standard

The thermal model curve determines the thermal limit overload conditions that can damage the machine. This curve accounts for machine heating in both the stator and rotor during stall, acceleration, and running conditions. The overload curve can take one of the six formats shown above. The selected curve (except IEC) can also serve as a base for a voltage dependent overload curve if the **VOLTAGE DEPENDENT FUNCTION** setting is enabled. The algorithm uses memory in the form of a register called **Thermal Capacity Used**. This register is updated every power cycle using the following equation:

$$TC_{used}(t) = TC_{used}(t-1) + \frac{T_{system}}{t_{trip}} \times 100\%$$

Where:

- t_{trip} represents the time coordinate on the time-current overload curve, corresponding to the equivalent machine current detected within any power cycle period of machine overload. In text, it is also specified as time to trip.
- T_{system} represents the period in seconds corresponding to the nominal power system frequency.

Always set the overload curve slightly lower than the thermal limits provided by the machine manufacturer. This ensures that the machine is tripped before the thermal limit is reached.

The Standard curve is based on typical machine thermal limit curves and is normally used for standard machine applications (see the following Standard Curves figure and Standard TD Multipliers table). The pickup level for the standard curve is calculated as the motor/generator overload factor setting (OL) multiplied by the the motor/generator full load amps setting (FLA).

The motor full Load Amps (FLA) setting can be found in the menu **Setpoints > System > Motor**

The generator Full Load Amps (FLA) is calculated as follows:

$$FLA = (Rated\ MVA) / (\sqrt{3} \times Rated\ Voltage)$$

Pickup Level vs. Standard Curve TD Multipliers

Pickup Level	STANDARD CURVE TD MULTIPLIERS														
	x 1	x 2	x 3	x 4	x 5	x 6	x 7	x 8	x 9	x 10	x 11	x 12	x 13	x 14	x 15
1.01	4353.6	8707.2	13061	17414	21768	26122	30475	34829	39183	43536	47890	52243	56597	60951	65304
1.05	853.7	1707.4	2561.1	3414.9	4268.6	5122.3	5976.0	6829.7	7683.4	8537.1	9390.8	10245	11098	11952	12806
1.10	416.68	833.36	1250.0	1666.7	2083.4	2500.1	2916.8	3333.5	3750.1	4166.8	4583.5	5000.2	5416.9	5833.6	6250.2
1.20	198.86	397.72	596.58	795.44	994.30	1193.2	1392.0	1590.9	1789.7	1988.6	2187.5	2386.3	2585.2	2784.1	2982.9
1.30	126.80	253.61	380.41	507.22	634.02	760.82	887.63	1014.4	1141.2	1268.0	1394.8	1521.6	1648.5	1775.3	1902.1
1.40	91.14	182.27	273.41	364.55	455.68	546.82	637.96	729.09	820.23	911.37	1002.5	1093.6	1184.8	1275.9	1367.0
1.50	69.99	139.98	209.97	279.96	349.95	419.94	489.93	559.92	629.91	699.90	769.89	839.88	909.87	979.86	1049.9
1.75	42.42	84.83	127.24	169.66	212.07	254.49	296.90	339.32	381.73	424.15	466.56	508.98	551.39	593.81	636.22
2.00	29.16	58.32	87.47	116.63	145.79	174.95	204.11	233.26	262.42	291.58	320.74	349.90	379.05	408.21	437.37
2.25	21.53	43.06	64.59	86.12	107.65	129.18	150.72	172.25	193.78	215.31	236.84	258.37	279.90	301.43	322.96
2.50	16.66	33.32	49.98	66.64	83.30	99.96	116.62	133.28	149.94	166.60	183.26	199.92	216.58	233.24	249.90
2.75	13.33	26.66	39.98	53.31	66.64	79.96	93.29	106.62	119.95	133.27	146.60	159.93	173.25	186.58	199.91
3.00	10.93	21.86	32.80	43.73	54.66	65.59	76.53	87.46	98.39	109.32	120.25	131.19	142.12	153.05	163.98
3.25	9.15	18.29	27.44	36.58	45.73	54.87	64.02	73.16	82.31	91.46	100.60	109.75	118.89	128.04	137.18
3.50	7.77	15.55	23.32	31.09	38.87	46.64	54.41	62.19	69.96	77.73	85.51	93.28	101.05	108.83	116.60
3.75	6.69	13.39	20.08	26.78	33.47	40.17	46.86	53.56	60.25	66.95	73.64	80.34	87.03	93.73	100.42
4.00	5.83	11.66	17.49	23.32	29.15	34.98	40.81	46.64	52.47	58.30	64.13	69.96	75.79	81.62	87.45
4.25	5.13	10.25	15.38	20.50	25.63	30.75	35.88	41.00	46.13	51.25	56.38	61.50	66.63	71.75	76.88
4.50	4.54	9.09	13.63	18.17	22.71	27.26	31.80	36.34	40.88	45.43	49.97	54.51	59.05	63.60	68.14
4.75	4.06	8.11	12.17	16.22	20.28	24.33	28.39	32.44	36.50	40.55	44.61	48.66	52.72	56.77	60.83
5.00	3.64	7.29	10.93	14.57	18.22	21.86	25.50	29.15	32.79	36.43	40.08	43.72	47.36	51.01	54.65
5.50	2.99	5.98	8.97	11.96	14.95	17.94	20.93	23.91	26.90	29.89	32.88	35.87	38.86	41.85	44.84
6.00	2.50	5.00	7.49	9.99	12.49	14.99	17.49	19.99	22.48	24.98	27.48	29.98	32.48	34.97	37.47
6.50	2.12	4.24	6.36	8.48	10.60	12.72	14.84	16.96	19.08	21.20	23.32	25.44	27.56	29.67	31.79
7.00	1.82	3.64	5.46	7.29	9.11	10.93	12.75	14.57	16.39	18.22	20.04	21.86	23.68	25.50	27.32
7.50	1.58	3.16	4.75	6.33	7.91	9.49	11.08	12.66	14.24	15.82	17.41	18.99	20.57	22.15	23.74
8.00	1.39	2.78	4.16	5.55	6.94	8.33	9.71	11.10	12.49	13.88	15.27	16.65	18.04	19.43	20.82
10.00	1.39	2.78	4.16	5.55	6.94	8.33	9.71	11.10	12.49	13.88	15.27	16.65	18.04	19.43	20.82
15.00	1.39	2.78	4.16	5.55	6.94	8.33	9.71	11.10	12.49	13.88	15.27	16.65	18.04	19.43	20.82
20.00	1.39	2.78	4.16	5.55	6.94	8.33	9.71	11.10	12.49	13.88	15.27	16.65	18.04	19.43	20.82

	STANDARD CURVE TD MULTIPLIERS continued									
Pickup Level	x 16	x 17	x 18	x 19	x 20	x 21	x 22	x 23	x 24	x 25
1.01	69658	74011	78365	82719	87072	91426	95779	100133	104487	108840
1.05	13659	14513	15367	16221	17074	17928	18782	19635	20489	21343
1.10	6666.92	7083.60	7500.28	7916.96	8333.64	8750.33	9167.01	9583.69	10000	10417
1.20	3181.78	3380.64	3579.50	3778.36	3977.22	4176.08	4374.94	4573.80	4772.66	4971.52
1.30	2028.86	2155.67	2282.47	2409.28	2536.08	2662.88	2789.69	2916.49	3043.30	3170.10
1.40	1458.18	1549.32	1640.46	1731.59	1822.73	1913.87	2005.00	2096.14	2187.28	2278.41

	STANDARD CURVE TD MULTIPLIERS continued									
Pickup Level	x 16	x 17	x 18	x 19	x 20	x 21	x 22	x 23	x 24	x 25
1.50	1119.84	1189.83	1259.82	1329.81	1399.80	1469.79	1539.78	1609.77	1679.76	1749.75
1.75	678.63	721.05	763.46	805.88	848.29	890.71	933.12	975.54	1017.95	1060.37
2.00	466.53	495.69	524.84	554.00	583.16	612.32	641.48	670.63	699.79	728.95
2.25	344.49	366.02	387.55	409.08	430.62	452.15	473.68	495.21	516.74	538.27
2.50	266.56	283.22	299.88	316.54	333.20	349.86	366.52	383.18	399.84	416.50
2.75	213.24	226.56	239.89	253.22	266.55	279.87	293.20	306.53	319.86	333.18
3.00	174.91	185.85	196.78	207.71	218.64	229.57	240.51	251.44	262.37	273.30
3.25	146.33	155.47	164.62	173.76	182.91	192.06	201.20	210.35	219.49	228.64
3.50	124.38	132.15	139.92	147.70	155.47	163.24	171.02	178.79	186.56	194.34
3.75	107.11	113.81	120.50	127.20	133.89	140.59	147.28	153.98	160.67	167.37
4.00	93.28	99.11	104.94	110.77	116.60	122.43	128.26	134.08	139.91	145.74
4.25	82.00	87.12	92.25	97.37	102.50	107.62	112.75	117.87	123.00	128.12
4.50	72.68	77.22	81.76	86.31	90.85	95.39	99.93	104.48	109.02	113.56
4.75	64.88	68.94	72.99	77.05	81.11	85.16	89.22	93.27	97.33	101.38
5.00	58.29	61.94	65.58	69.22	72.87	76.51	80.15	83.80	87.44	91.08
5.50	47.83	50.82	53.81	56.80	59.79	62.78	65.76	68.75	71.74	74.73
6.00	39.97	42.47	44.97	47.46	49.96	52.46	54.96	57.46	59.96	62.45
6.50	33.91	36.03	38.15	40.27	42.39	44.51	46.63	48.75	50.87	52.99
7.00	29.14	30.97	32.79	34.61	36.43	38.25	40.07	41.89	43.72	45.54
7.50	25.32	26.90	28.48	30.07	31.65	33.23	34.81	36.40	37.98	39.56
8.00	22.20	23.59	24.98	26.37	27.76	29.14	30.53	31.92	33.31	34.69
10.00	22.20	23.59	24.98	26.37	27.76	29.14	30.53	31.92	33.31	34.69
15.00	22.20	23.59	24.98	26.37	27.76	29.14	30.53	31.92	33.31	34.69
20.00	22.20	23.59	24.98	26.37	27.76	29.14	30.53	31.92	33.31	34.69

Note:

If you have upgraded from a SR269 or SR269 Plus, be aware that many of the Trip time values for the SR269/269 Plus are different from those of the 8 series motor products. This is significantly so for multiples of 5 or more, where the trip times for the 8 series product are significantly shorter.

The Overload Curve is then calculated using the following equation:

$$t_{\text{trip}} = (\text{TDM} \times 2.2116623) / \{0.02530337[(I_{\text{machine}}/\text{FLA}) - 1]^2 + 0.05054758[(I_{\text{machine}}/\text{FLA}) - 1]\}$$

9.3.2.3 OVERLOAD CURVE

Range: 1.00 to 1.50 in steps of 0.01

Default: 1.01

This setting defines the current level at which the generator is considered to be overloaded. If the generator current exceeds the Overload Factor threshold, the Thermal Model reacts by accumulating thermal capacity. This is useful to accommodate a service factor. The curve is effectively cut off at current values below this pickup.

9.3.2.4 CURVE K FACTOR

Range: 1.00 to 1.50 in steps of 0.05

Default: 1.10

The setting applies only to the IEC curve and is applied as described below. Refer to the IEC 255-8 standard for additional details on its application.

If **IEC** is selected as the Overload Curve, the relay can apply the IEC 255-8 hot and cold curve characteristics to the thermal model. Appropriate selection of Hot/Cold curve characteristic is based on the machine status and Thermal Capacity (TC) Used as per the following table.

The IEC255-8 cold curve trip time is defined as follows:

$$t_{\text{trip}} = \tau \times \ln \{ I_{\text{eq}}^2 / [I_{\text{eq}}^2 - (k \times \text{FLA})^2] \}$$

If prior to overload condition the generator was offline and TCU is less than 5%, the relay uses the IEC Cold Curve Characteristic. Otherwise, it uses the IEC Hot Curve Characteristic as follows:

$$t_{\text{trip}} = \tau \times \ln \{ (I_{\text{eq}}^2 - I_p^2) / [I_{\text{eq}}^2 - (k \times \text{FLA})^2] \}$$

where:

- t_{trip} = time to trip
- τ = IEC time constant defined by **IEC CURVE TIME CONSTANT 1** and **IEC CURVE TIME CONSTANT 2** settings.
- I_p = generator load current before overload occurs
- k = k-factor (overload factor) defined by IEC **CURVE k FACTOR** setting applied to FLA
- FLA = Generator rated current

The square of the load current, I_p^2 in the equation above, represents the thermal capacity of the generator before overload occurs, as determined by the equation shown in the description below for the **COOL TIME CONSTANT RUNNING** setting. Therefore, the trip time obtained from the IEC hot curve takes into account a percent of the thermal capacity that has already been used. The thermal model automatically determines the hot and cold states of the generator based on the motor state prior to overload and thermal capacity used (TCU) as per the following table.

Prior to overload condition		Upon overload condition	Selection of IEC curve Characteristic by 869
Generator Status	TC Used	Generator Status	
Offline	Less than 5%	Online and $I > \text{FLA} \times \text{O}$	Cold
Offline	Greater than or equal to 5%	Online and $I > \text{FLA} \times \text{OL}$	Hot
Online and $2\% \times \text{FLA} < I < \text{FLA} \times \text{OL}$	Less than 5%	Online and $I > \text{FLA} \times \text{OL}$	Hot
Online and $2\% \times \text{FLA} < I < \text{FLA} \times \text{OL}$	Greater than or equal to 5%	Online and $I > \text{FLA} \times \text{OL}$	Hot

9.3.2.5 IEC CURVE TIME CONSTANT

Range: 0 to 1000 min in steps of 1

Default: 45 min

The thermal model specifies two IEC thermal time constants defined by setpoints **IEC CURVE TIME CONSTANT 1** and **IEC CURVE TIME CONSTANT 2**. These settings specify thermal time constants for IEC motor curves in the preceding equations as per the IEC 255-8 standard.

While starting ($I_{\text{eq}} > 2 \times k \times \text{FLA}$), a machine is rotor-limited, and subjected to extensive heating. The thermal model requires a separate heating constant specified by **IEC CURVE TIME CONSTANT 2** in order to properly reflect the rotor heating. However, during running overload ($k \times \text{FLA} < I_{\text{eq}} \leq 2 \times k \times \text{FLA}$) the motor is stator-limited, and the thermal model uses the stator heating time constant specified by **IEC CURVE TIME CONSTANT 1**.

Thermal model automatically selects the **IEC CURVE TIME CONSTANT 1** or **IEC CURVE TIME CONSTANT 2** based on the load current as per the following table.

Selection of IEC Curve Time Constant 1 or 2

IEC Time Constant	Selection Criteria
IEC Curve Time Constant 1	$(k \times FLA) < I_{eq} \leq (2 \times k \times FLA)$
IEC Curve Time Constant 2	$I_{eq} > (2 \times k \times FLA)$

When the IEC curves are selected, the relay calculates the time to trip using the IEC255-8 cold curve and IEC255-8 hot curve equations and increases Thermal Capacity Used as defined by the Thermal Capacity Used equation above. If the overload disappears or the machine is tripped (stopped), then the Thermal Capacity Used decreases as per the equation in the **COOL TIME CONSTANT RUNNING** setting description, to simulate cooling, depending on the status and the values programmed for the **COOL TIME CONSTANT RUNNING** and **COOL TIME CONSTANT STOPPED** settings. If the IEC curve is selected, then the following applies:

The relay calculates the time to trip using the IEC255-8 cold curve and IEC255-8 hot curve equations and increases Thermal Capacity Used as defined by the Thermal Capacity Used equation above. If the overload disappears or the motor is tripped (stopped), then the Thermal Capacity Used decreases as per the equation in the **COOL TIME CONSTANT RUNNING** setting description, to simulate motor cooling, depending on the motor status and the values programmed for the **COOL TIME CONSTANT RUNNING** and **COOL TIME CONSTANT STOPPED** settings.

If the IEC curve is selected, then the following applies:

- Voltage dependent overload curves are not applicable.
- The starting (accelerating) and overload states are evaluated using generator FLA and the IEC Curve k Factor setting.

9.3.2.6 TD MULTIPLIER

Range: 1.00 to 25.00 in steps of 0.01 (thermal model curve is Motor)


Range: 0.00 to 600.00 in steps of 0.01 (thermal model curve is FlexCurve A/B/C/D/OL)

Default: 1.00

The multiplier is used to shift the overload curve on the time axis to create a family of the different curves. The **TD MULTIPLIER** value is used to select the curve that best matches the thermal characteristics of the protected machine.

Note:

*If thermal model curve is selected as Standard, then the **TD MULTIPLIER** (TDM) can be specified between 1.00" and 25.00 as indicated in the Standard Curves diagram below.*

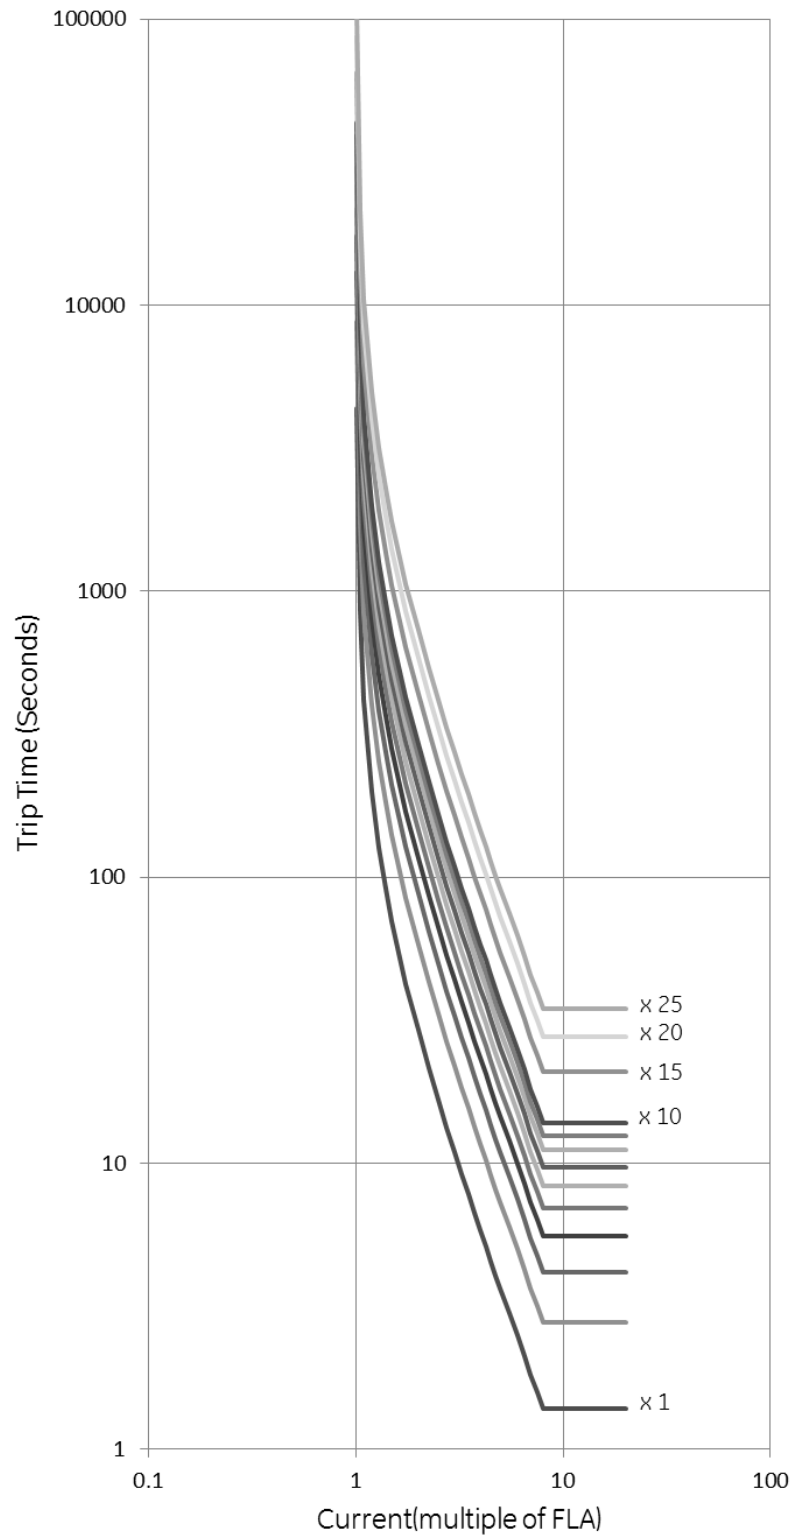**Figure 150: Standard Motor Curves****Note:**

During the interval of discontinuity, the longer of the two trip times is used to reduce the chance of nuisance tripping during machine starts.

9.3.2.7 UNBALANCE BIAS K FACTOR

Range: 0 to 19 in steps of 1

Default: 0

Unbalanced phase currents cause rotor heating that is not shown in the thermal damage curve. When the machine is running, the rotor rotates in the direction of the positive sequence current at near synchronous speed. Negative sequence current, which has a phase rotation that is opposite to the positive sequence current, and hence opposite to the direction of rotor rotation, generates a rotor voltage that produces a substantial current in the rotor. This current has a frequency that is approximately twice the line frequency: 100 Hz for a 50 Hz system or 120 Hz for a 60 Hz system. Skin effect in the rotor bars at this frequency causes a significant increase in rotor resistance and therefore, a significant increase in rotor heating. This extra heating is not accounted for in the thermal limit curves supplied by the machine manufacturer as these curves assume positive sequence currents from a perfectly balanced supply voltage and machine design.

The thermal model may be biased to reflect the additional heating that is caused by negative sequence current when the machine is running. This biasing is done by creating an equivalent machine heating current rather than simply using the average current. This equivalent current is calculated using the equation shown below.

$$I_{eq} = \sqrt{I_{avg}^2 \left(1 + K \left(\frac{I_2}{I_1} \right)^2 \right)}$$

where:

- I_{eq} = thermal model biased machine load current
- I_{avg} = average of the three RMS currents
- I_1 = positive sequence current
- I_2 = negative sequence current
- K = constant

The machine derating as a function of voltage unbalance as recommended by NEMA (National Electrical Manufacturers Association) is shown below. Assuming a typical induction machine with an inrush of 6 x FLA and a negative sequence impedance of 0.167, voltage unbalances of 1, 2, 3, 4, and 5% equals current unbalances of 6, 12, 18, 24, and 30% respectively. Based on this assumption, the amount of machine derating for different values of K entered for setting **UNBALANCE BIAS K FACTOR** is also shown in the following figure.

Note:

The curve created when $K = 8$ is almost identical to the NEMA derating curve.

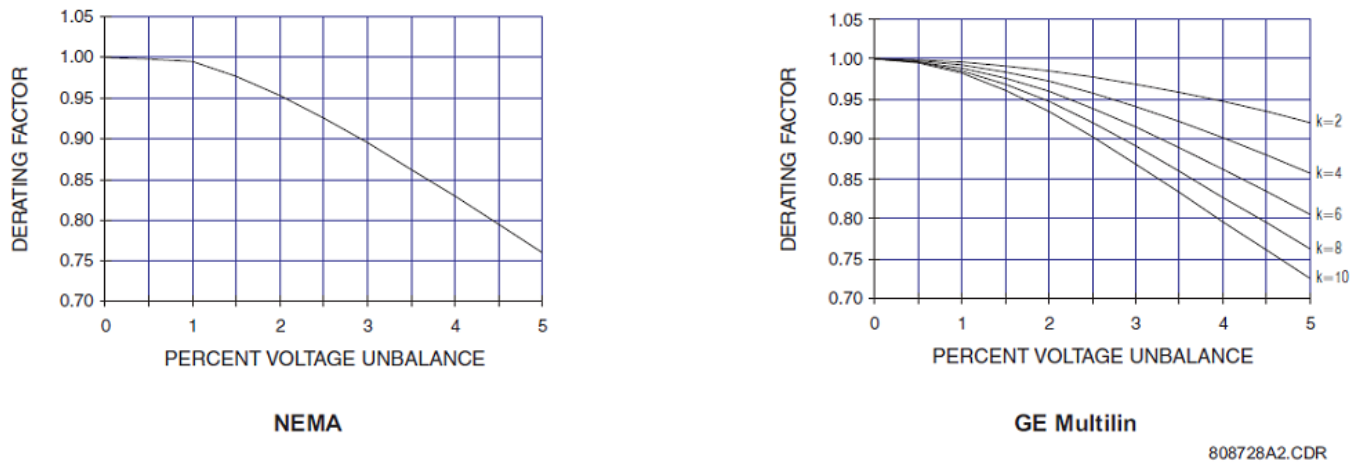


Figure 151: Medium Machine Derating Factor Due to Unbalanced Voltage

If a value of $K = 0$ is entered, unbalance biasing is defeated and the overload curve times out against the measured per unit machine positive sequence current. The following equations can be used to calculate k .

The K factor is the ratio of rotor negative- to positive-sequence resistance. K is required to reflect the increased negative sequence rotor resistance due to the skin effect under unbalanced conditions. In case, rotor negative sequence resistance and positive sequence resistance are not available, the following equations can be used to calculate K factor. These equations are derived based on the empirical data – and it gives the best estimate of the K factor. In case rotor negative and positive sequence resistances are known then K factor can be calculated as $K = R_{-}/R_{+}$

$$K = \frac{175}{I_{LR}^2} \text{ (typical estimate); } K = \frac{230}{I_{LR}^2} \text{ (conservative estimate)}$$

where I_{LR} is the per unit locked rotor current.

9.3.2.8 COOL TIME CONSTANT RUNNING

Range: 1 to 1000 minutes in steps of 1 minute

Default: 15 minutes

The thermal capacity used value is reduced in an exponential manner when the machine current is below the full load amps times overload factor ($OL \times FLA$) settings to simulate machine cooling. The motor **COOL TIME CONSTANT RUNNING** should be entered for running case. Machine cooling is calculated as follows:

$$TCU = (TCU_{start} - TCU_{end}) (e^{-t/T_{cool}}) + TCU_{end}$$

$$TCU_{end} = \left(\frac{I_{eq}}{OL \times FLA} \right) \left(1 - \frac{hot}{cold} \right) \times 100\%$$

where:

- TCU = thermal capacity used.
- TCU_{start} = TCU value caused by overload condition.
- TCU_{end} = TCU value dictated by the hot/cold curve ratio when the machine is running. This value is 0 when the machine is stopped).
- t = time in minutes.
- T_{cool} = **COOL TIME CONSTANT RUNNING**.

- I_{eq} = Equivalent machine heating current (also defined as Thermal Model Biased Machine Load Current).
- OL = Overload factor
- FLA = machine rated current
- hot / cold = hot/cold curve ratio


9.3.2.9 COOL TIME CONSTANT STOPPED

Range: 1 to 1000 minutes in steps of 1 minute

Default: 30 minutes

The Thermal Capacity Used value is reduced in an exponential manner when the machine current is stopped after running rated load or tripped due to overload. The machine **COOL TIME CONSTANT STOPPED** must be entered for the stopped cases. A stopped machine normally cools significantly slower than a running machine.

For the machine stopped case, cooling is also calculated using the same equation above, however; the value of the cool time constant (τ) is now **COOL TIME CONSTANT STOPPED** and TCU_{end} is now 0.

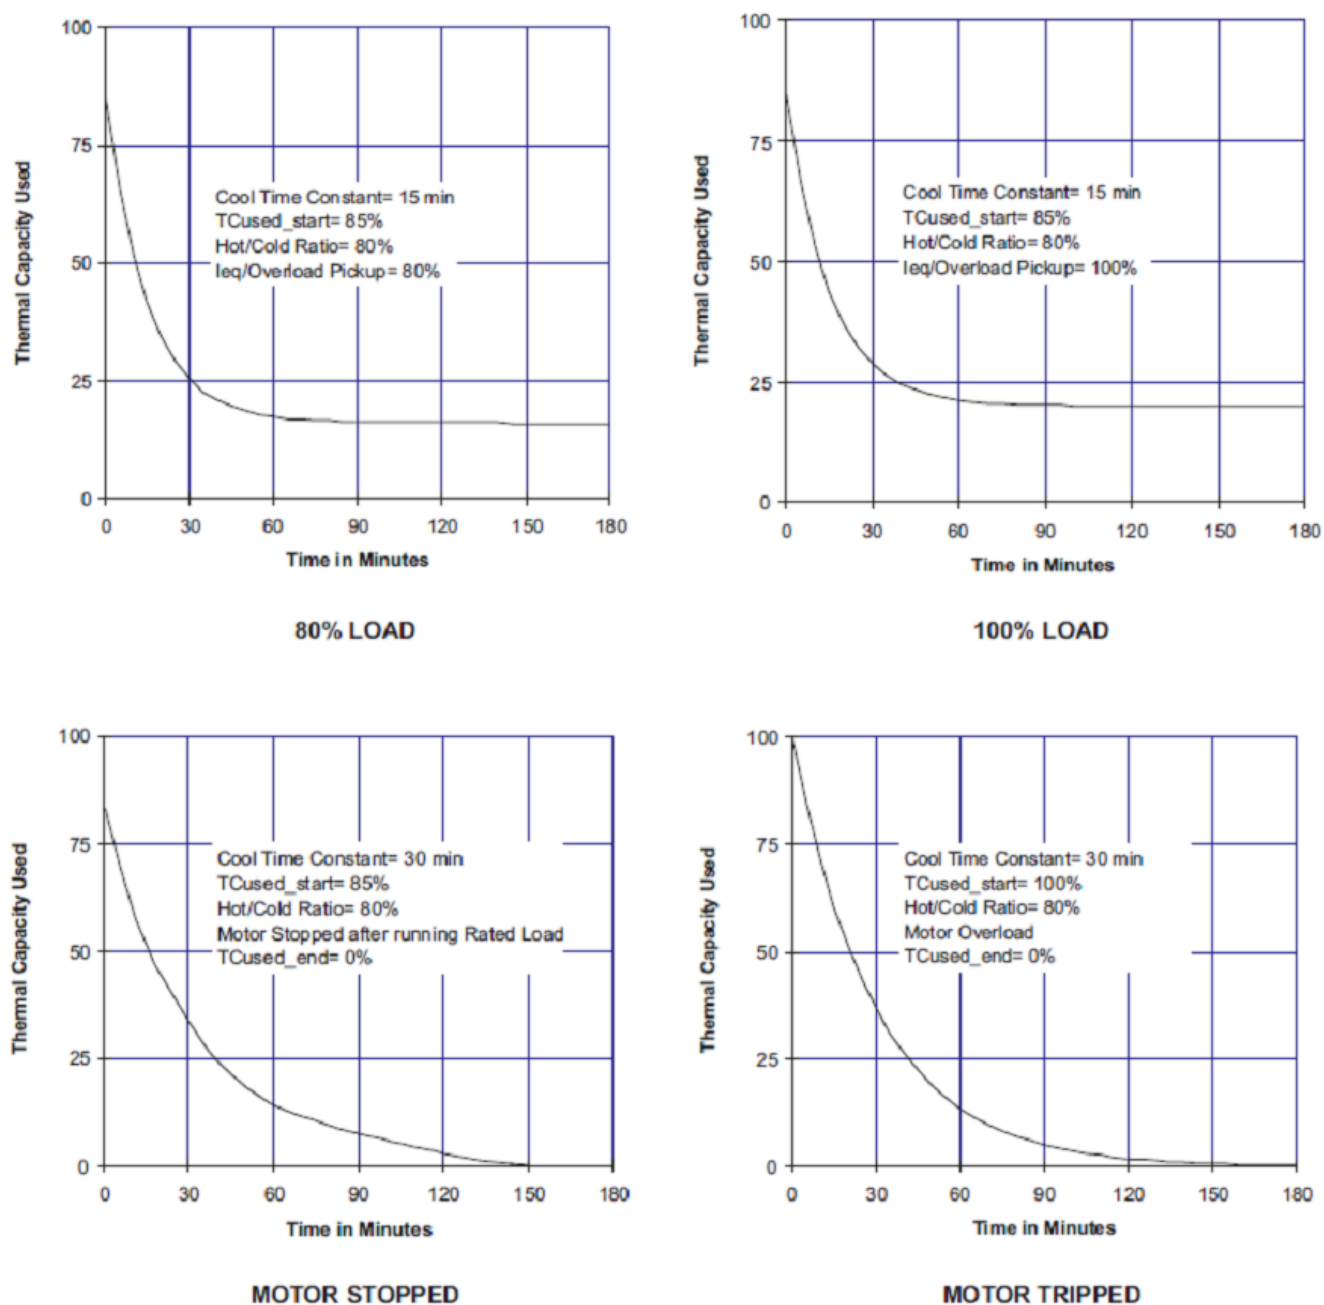

808705A2.CDR

Figure 152: Thermal Model Cooling

9.3.2.10 HOT/COLD SAFE STALL RATIO

Range: 0.01 to 1.00 in steps of 0.01

Default: 1

The machine manufacturer sometimes provide thermal limit information for a hot/cold machine. The algorithm uses this data if this setting is programmed. The value entered for the setting dictates the level at which **Thermal Capacity Used** settles for current that is below the overload factor (OL) times FLA. When the machine is running at a level that is below this limit Thermal Capacity Used rises or falls to a value based on I_{eq} (thermal model biased load current).

$$TCU_{end} = \left(\frac{I_{eq}}{OL \times FLA} \right) \left(1 - \frac{\text{hot}}{\text{cold}} \right) \times 100\%$$

where:

- TCU_{end} = Thermal Capacity Used, if I_{eq} remains steady state.
- I_{eq} = equivalent motor heating current (also defined as Thermal Model Biased Motor Load Current)
- OL = Overload factor.
- FLA = Machine rated current.
- hot/cold = **HOT/COLD SAFE STALL RATIO** setting.

9.3.2.11 RTD BIAS SETTINGS

RTD BIAS

Range: Disabled, Enabled

Default: Disabled

When enabled, this feature acts as an additional check of the overheating through the current based thermal model. The current based thermal model estimates machine heating from the thermal overload curves and cooling time constants. The thermal overload curves are based solely on measured current, assuming a normal 40°C ambient temperature and normal machine cooling. This feature provides additional protection in cases where there is an unusually high ambient temperature, or machine cooling is malfunctioning, or machine temperature increases due to other unexpected factors, or the overload curve was selected incorrectly. Therefore, if the stator has embedded RTDs, the RTD Bias feature is used to augment the thermal model calculation of Thermal Capacity Used. This feature uses the hottest stator RTD temperature value to estimate the RTD Thermal Capacity Used and compare this value to the **Thermal Capacity Used** calculated by the current based thermal model (overload curve and cool times). The larger of the two values is used from that point onward. Since RTDs have a relatively slow response, RTD biasing is useful for slow machine heating. Other portions of the thermal model are required during starting and heavy overload conditions when machine heating is relatively fast.

The RTD Bias feature is active only if the optional RTD Input module has been installed.

Each stator RTD must be first configured as STATOR application under **Setpoints > Monitoring > RTD Temperature > RTD 1(X)**. RTDs configured as Stator type are used by the thermal model for determining the RTD Bias.

The RTD bias feature alone cannot generate a trip. Even if the RTD bias feature forces the RTD bias thermal capacity used to 100%, the load current must be above the overload pickup (OL x FLA) setting to set the output.

RTD BIAS MINIMUM

Range: 0 to 250°C in steps of 1

Default: 40°C

RTD BIAS CENTER

Range: 0 to 250°C in steps of 1

Default: 130°C

RTD BIAS MAXIMUM

Range: 0 to 250°C in steps of 1

Default: 155°C

The RTD bias feature is a two-part curve (RTD Bias Thermal Capacity Used) constructed from three points: minimum, center and maximum. If the maximum stator RTD temperature is below the **RTD BIAS MINIMUM** setting (typically 40°C), no biasing occurs. If the maximum stator RTD temperature is above the **RTD BIAS MAXIMUM** setting (typically at the stator insulation rating or slightly higher), then the thermal memory is fully biased and RTD bias thermal capacity used is forced to 100%. At values in between, the present RTD bias thermal capacity used created by other features of the thermal model is compared to the RTD bias thermal capacity used. If the value of the RTD bias thermal capacity used is higher, then this value is used from that point onward. The **RTD BIAS CENTER** setting must be set to the rated running temperature of the motor. The relay automatically determines the RTD bias thermal capacity used value for the center point using the **HOT/COLD SAFE STALL RATIO** setting.

$$\text{TCU at RTD_Bias_Center} = \left(1 - \frac{\text{hot}}{\text{cold}}\right) \times 100\%$$

At < RTD_Bias_Center temperature

$$\text{RTD_Bias_TCU} = \frac{\text{Temp}_{\text{actual}} - \text{Temp}_{\text{min}}}{\text{Temp}_{\text{center}} - \text{Temp}_{\text{min}}} \times \text{TCU at RTD_Bias_Center}$$

At > RTD_Bias_Center temperature,

$$\text{RTD_Bias_TCU} = \frac{\text{Temp}_{\text{actual}} - \text{Temp}_{\text{center}}}{\text{Temp}_{\text{max}} - \text{Temp}_{\text{center}}} \times (100 - \text{TCU at RTD_Bias_Center}) + \text{TCU at RTD_Bias_Center}$$

where:

RTD_Bias_TCU = thermal capacity used due to hottest stator RTD


Temp_{actual} = current temperature of the hottest stator RTD

Temp_{min} = **RTD BIAS MINIMUM** setting

Temp_{center} = **RTD BIAS CENTER** setting

Temp_{max} = **RTD BIAS MAXIMUM** setting

TCU at RTD_Bias_Center = thermal capacity used defined by the **HOT/COLD SAFE STALL RATIO** setting

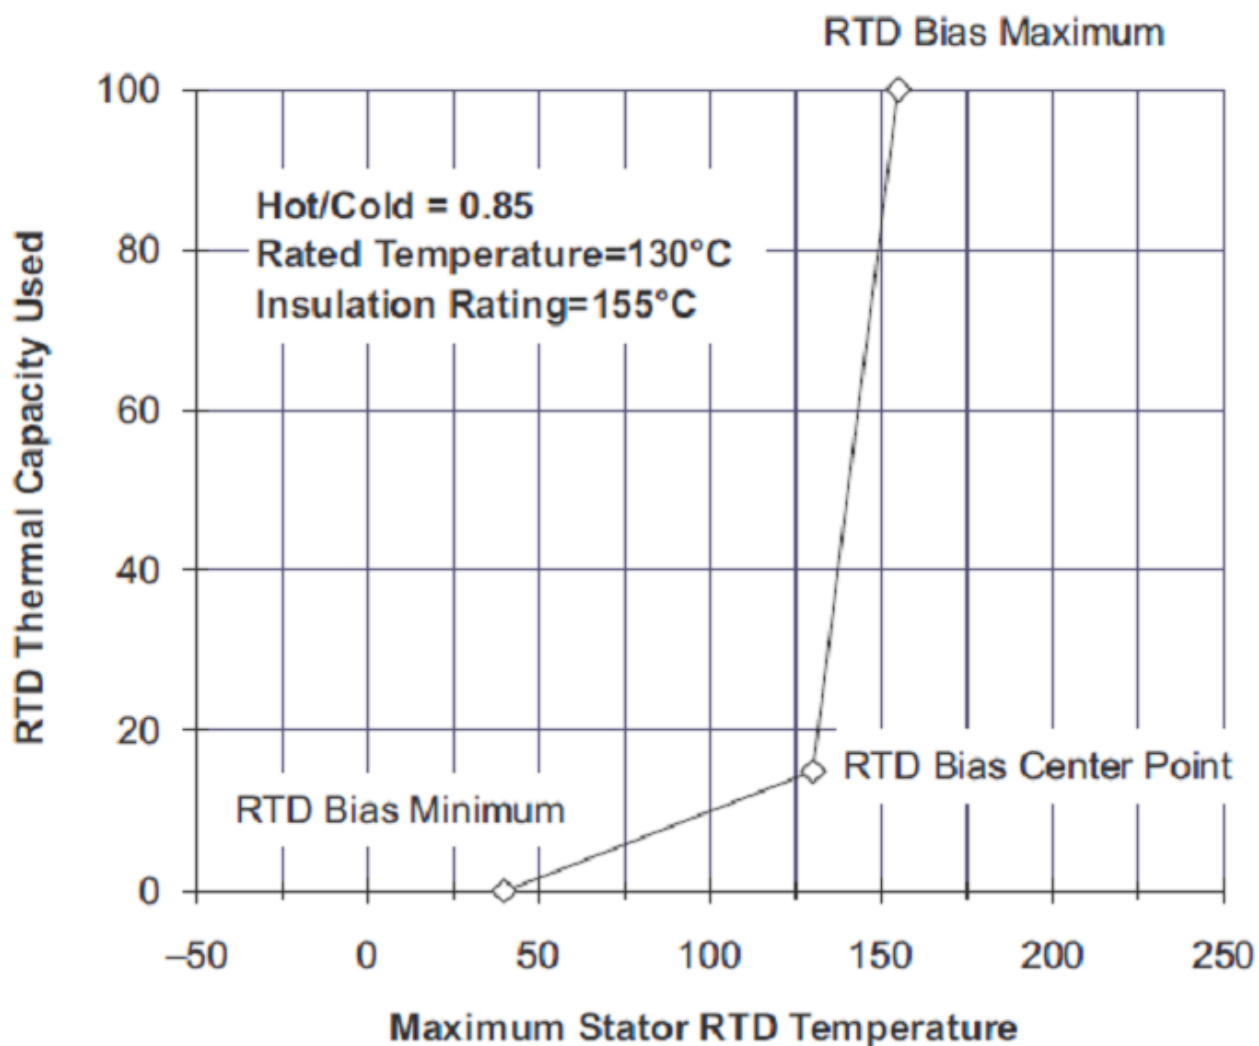

808721A1.CDR

Figure 153: RTD Bias Curve

RTD BIAS PICKUP DELAY*Range: 0 s to 600 s in steps of 1 s**Default: 2 s*

This setting specifies the amount of time the RTD bias thermal capacity used must remain at 100% or above to generate a trip.

RTD BIAS VOTING*Range: Disabled, Enabled**Default: Disabled*

The RTD biasing feature selects the maximum stator RTD temperature to calculate the RTD Thermal Capacity Used. However, in the event of the malfunction of the maximum temperature RTD, the RTD Bias Voting function assures extra security. This function requires another stator RTD to be voted with the maximum temperature RTD.

Maximum stator RTD temperature will be used by the RTD Biasing feature only if both maximum stator RTD temperature and voting RTD temperature, which is the second maximum temperature, lie within the range

defined by the setpoint **RTD BIAS VOTING BAND**. If the maximum stator RTD temperature and voting RTD temperature don't lie within the settable range than next maximum stator RTD temperature will require voting by the next voting RTD. If voting fails, RTD Bias feature will block automatically.

Note:

At least two RTDs have to be configured as Stator type (under **Setpoints > Monitoring > RTD Temperature**) for this feature to become active.

RTD BIAS VOTING BAND

Range: 0 to 50°C in steps of 1°C

Default: 10°C

This value specifies the temperature difference range between the maximum stator RTD temperature and another voting stator RTD temperature.

Examples:

Assuming **RTD BIAS VOTING** is *Enabled* and **RTD BIAS VOTING BAND** is programmed as 10°C and three RTDs are programmed as Stator type under **Setpoints > Monitoring > RTD Temperature**.

Example 1: Actual temperature values of RTD1, RTD2 and RTD3 are 100°C, 95°C and 80°C, respectively.

The Voting feature selects RTD1 (100°C) as the maximum temperature RTD among the three RTDs and RTD2 (95°C) as the voting RTD. Because, temperature difference between RTD1 and RTD2 is less than the **RTD BIAS VOTING BAND** of 10°C, RTD1 temperature will be selected as the maximum stator RTD temperature.

Example 2: Actual temperature values of RTD1, RTD2 and RTD3 are 100°C, 85°C and 80°C, respectively.

RTD1 (100°C) is selected as the maximum temperature RTD among the three RTDs and RTD2 (85°C) as the voting RTD. Since the temperature difference between RTD1 and RTD2 is greater than the **RTD BIAS VOTING BAND** of 10°C, RTD1 temperature will not be selected as the maximum stator RTD temperature and RTD1 is declared as a malfunctioning RTD internally.

The Voting feature will then select RTD2 (85°C) as the maximum temperature RTD from the remaining two RTDs, and RTD3 (80°C) as the voting RTD. The RTD2 temperature (85°C) is chosen as input to the RTD Bias feature because the temperature difference between RTD2 and RTD3 is less than the **RTD BIAS VOTING BAND** of 10°C.

9.3.2.12 VOLTAGE DEPENDENT SETTINGS

VOLT. DEPENDENT (VD) FUNCTION

Range: Disabled, Enabled

Default: Disabled

This setting enables or disabled the voltage dependent feature and modifies the locked rotor portion of the programmed relay overload curve with respect to the acceleration thermal limits

It is possible and acceptable that the acceleration time exceeds the safe stall time (bearing in mind that a locked rotor condition is quite different than an acceleration condition). In this instance, each distinct portion of the thermal limit curve must be known, and protection coordinated against that curve. The protection relay must be able to distinguish between a locked rotor condition, an accelerating condition, and a running condition. The 889 voltage dependent overload curve feature is tailored to protect these types of machines. Voltage is monitored constantly during starting and the acceleration thermal limit curve adjusted accordingly. If the VT Connection setpoint is set to none or if a VT fuse failure is detected, the acceleration thermal limit curve for the minimum allowable voltage will be used.

The voltage dependent overload curve is comprised of the three characteristic thermal limit curve shapes determined by the stall or locked rotor condition, acceleration, and running overload.

The Voltage Dependent Function setpoint enables the voltage dependent feature and modifies the locked rotor portion of the programmed relay overload curve with respect to the acceleration thermal limits.

Note:

These thermal limits are typically available from the machine specifications provided by generator manufacturer.

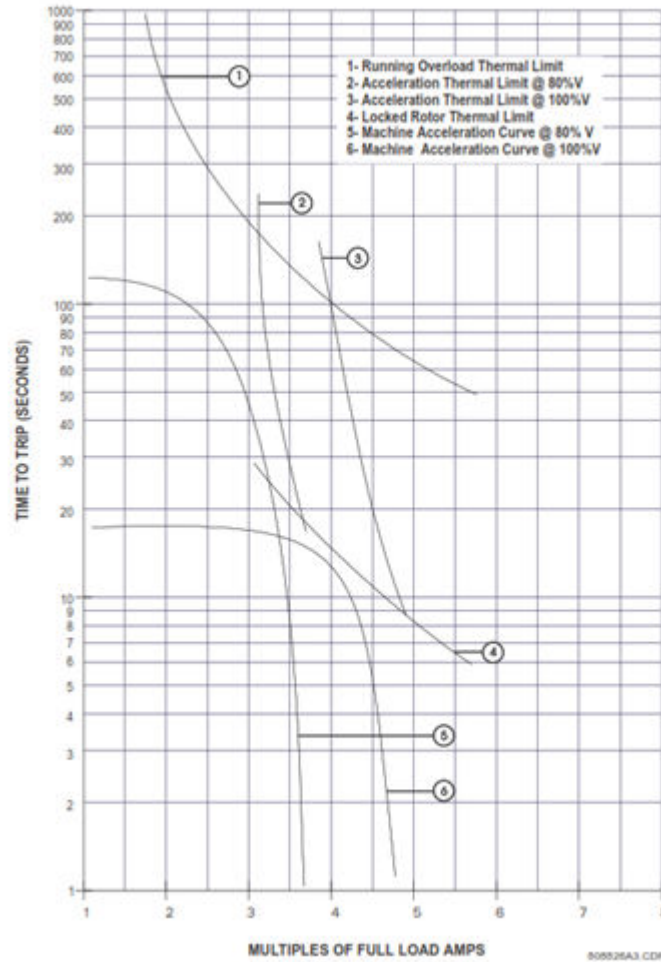


Figure 154: Thermal Limits for High Inertial Load

VD MIN VOLTS

Range: 60 to 99% in steps of 1

Default: 80%

The setting defines the minimum allowable line voltage applied to the motor during the acceleration if **VOLTAGE DEPENDENT FUNCTION** is *Enabled*. This voltage is expressed as a percentage of the rated voltage setting.

If the measured line voltage drops below this setting during acceleration, the thermal curve is switched to one based on the programmed minimum voltage thermal limit:

$$t_{trip} = \frac{I_1^2 \times t_1}{I^2}$$

VD VOLTAGE LOSS

Range: Any FlexLogic operand

Default: Off

This setting is used to address situations when the voltage input into thermal model has been lost. In this case, the voltage dependent algorithm readjusts the voltage dependent curve to avoid an inadequate thermal protection response. The VT fuse failure function is typically used to detect a voltage loss condition. If a voltage loss has been detected while the motor accelerates, the thermal curve is switched to one based on the programmed 100% voltage thermal limit:

$$t_{trip} = \frac{I_1^2 \times t_1}{I^2}$$

VD STALL CURRENT @ MIN V

Range: 1.50 to 20.00 FLA in steps of 0.01

Default: 4.50 x FLA

The setting defines the locked rotor current level at minimum machine voltage (I_1).

VD STALL TIME @ MIN V

Range: 0.1 to 1000.0 in steps of 0.1

Default: 20.0 seconds

The setting defines the maximum time that the motor is allowed to withstand the locked rotor current at minimum machine voltage (t_1).

VD ACCEL. INTERSECT @ MIN V

Range: 1.50 to 20.00 in steps of 0.01

Default: 4.00 x FLA

The setting defines the starting current level corresponding to the crossing point between the acceleration thermal limit at minimum voltage and the programmed relay overload curve (I_2). This value can be typically determined from machine acceleration curves. The value at the breakdown torque for the minimum voltage start is recommended for this setting.

VD STALL CURRENT @ 100% V

Range: 1.50 to 20.00 FLA in steps of 0.01

Default: 6.00 x FLA

The setting defines the locked rotor current level at the rated motor voltage (I_3).

VD STALL TIME @ 100% V

Range: 0.1 to 1000.0 in steps of 0.1

Default: 10.0 seconds

The setting defines the maximum time the motor is allowed to withstand the locked rotor current at rated motor voltage (t_3).


VD ACCEL. INTERSECT @ 100% V

Range: 1.50 to 20.00 in steps of 0.01

Default: 5.00 x FLA

The setting defines the starting current level corresponding to the crossing point between the acceleration thermal limit at rated voltage and the programmed relay overload curve (I_4). The value can be typically

determined from the motor acceleration curves. The current value at the breakdown torque for the 100% voltage start is recommended for this setting. The voltage dependent overload curves are shown in the following figure.

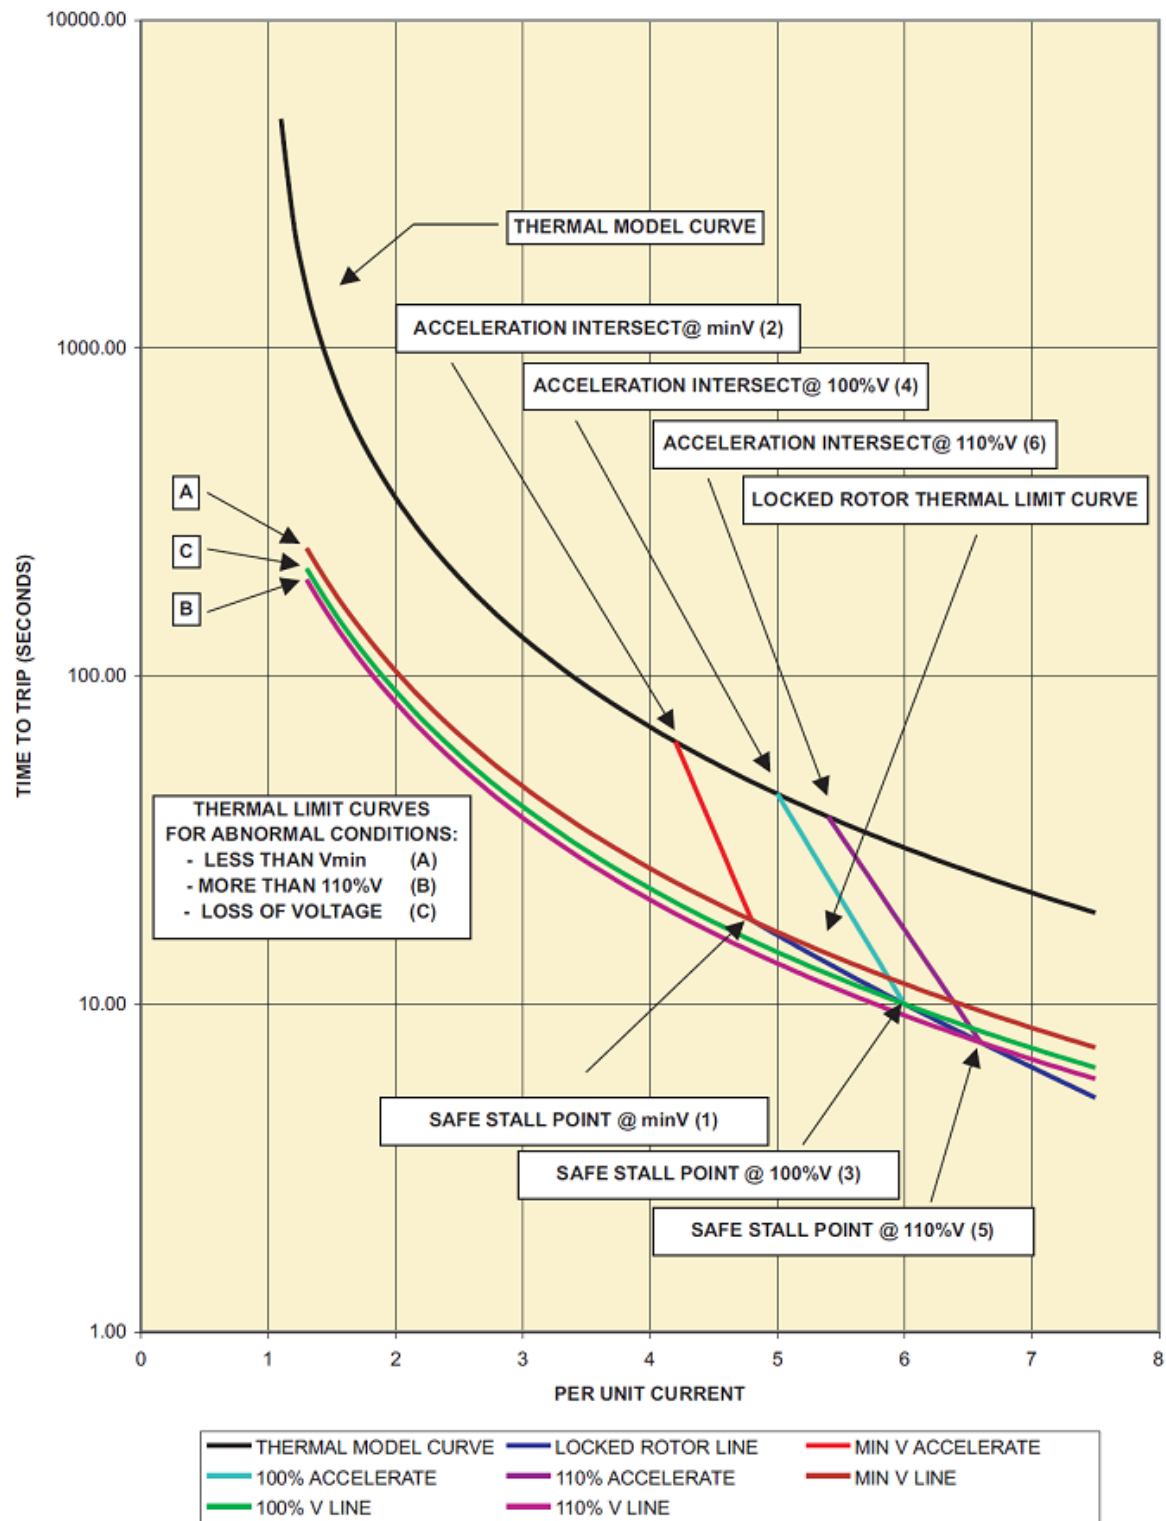

833715A1.CDR

Figure 155: Voltage Dependent Overload Curves

9.3.2.13 ALARM AND TRIP SETTINGS

ALARM FUNCTION

Range: Disabled, Alarm, Latch Alarm

Default: Disabled

The setting enables the Thermal Model alarm functionality.

ALARM PICKUP

Range: 1.00 to 100.00% in steps of 1.00

Default: 75.00%

The setting specifies a pickup threshold of the Thermal Capacity Used (TCU) for the alarm function.

ALARM OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate.

TRIP OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

9.3.2.14 THERMAL RESET

Range: Off, FlexLogic operand

Default: Off

This setting specifies a FlexLogic operand to emergency restart condition.

As the name implies, this feature should only be used in an emergency, as it defeats the purpose of the thermal model – protecting the generator. The input selected by this setting is used to reset the thermal capacity used from its current value to 0%, so that a hot generator may be restarted. It also sets Thermal Lockout Time to zero. Any trip condition that remains (such as a hot RTD) will still cause a trip.

In the event of a real emergency, the Thermal Reset input must remain asserted until the emergency is over. All the associated output relays reset until Thermal Reset input is removed. However, TCU doesn't remain reset to zero if Thermal Reset input remains asserted, thermal model continues calculating TCU.

The Emrg Restart Alarm operand is asserted if the **Thermal Reset** input remains asserted for 10 secs.

9.3.2.15 BLOCK, EVENTS AND TARGETS SETTINGS

BLOCK (THERMAL MODEL BLOCK)

Range: Any FlexLogic operand

Default: Off

The thermal model can be blocked by any asserted FlexLogic operand. While the blocking signal is applied, the element remains running and updates the thermal memory, but the states of the Thermal Trip OP and Thermal Alarm OP operands will reset. When the element blocking signal is removed, the element logic is based on the new value of the thermal capacity and updates the status of the Thermal Trip OP and Thermal Alarm OP operands.

The following procedure, along with the previous figure, illustrates the construction of the voltage overload curves.

1. Draw a curve for the running overload thermal limit. The curve is one that has been selected in the relay as an Overload Curve.
2. Determine the point of intersection between the Overload Curve and the vertical line corresponding to the per-unit current value of **VD ACCEL. INTERSECT @ MIN V** (see point 2).
3. Determine the locked rotor thermal limit point for the minimum voltage machine start. The coordinates of this point are the per-unit current value of VD Stall Current @ Min Volts and the time value of VD Safe Stall Time @ Min V (see point 1).
4. The line connecting points 1 and 2 constructs the acceleration curve for the system voltage level defined by the **VD MIN MOTOR VOLTS** setting. The acceleration time-current curve for the minimum voltage starting is calculated from the following equation:

$$t_{trip} = A_{Factor} \times e^{-I/\sigma}$$

where

$$\sigma = \frac{I_1 - I_2}{\ln(t_2 / t_1)} \text{ and } A_{Factor} = t_1 \times e^{I_1/\sigma}$$

where:

- I is a variable multiplier of the rated current (values between I_1 and I_2),
 - I_1 is a multiplier of the rated current (FLA) specified by the **VD STALL CURRENT @ MIN V** setting,
 - t_1 is a time value specified by the **VD SAFE STALL TIME @ MIN V** setting,
 - I_2 is a multiplier of the rated current (FLA) specified by the **VD ACCEL. INTERSECT @ MIN V** setting, and
 - t_2 is a time coordinate of the intersection point between the thermal model curve and the vertical line corresponding to the per-unit current value of the **VD ACCEL. INTERSECT @ MIN V** setting.
5. Determine the point of intersection between the Overload Curve and the vertical line corresponding to the multiplier of the rated current value of the **VD ACCEL. INTERSECT @ 100% V** setting (see point 4).
 6. Draw the locked rotor thermal limit point for the 100% voltage machine start. The coordinates of this point are the multiplier of the rated current value (FLA) of the **VD STALL CURRENT @ 100% V** setting and the time value of the **VD SAFE STALL TIME @ 100% V** setting (see point 3).
 7. The line connecting points 3 and 4 constructs the acceleration curve for the rated system voltage. The acceleration time-current curve for the rated voltage starting is calculated from the same equations, but the setpoints associated with the 100% voltage starting are applied.
 8. The line connecting points 1, 3 and 5 represent the machine safe stall conditions for any system voltage from the minimum to 110% of rated. Ideally, all the points on this line are characterized by the same thermal limit (I^2t), but the equivalent starting impedance at reduced voltage is greater than the impedance at full voltage. As such, the higher terminal voltages tend to reduce I^2t . The rate of I^2t reduction is dictated by the **VD STALL CURRENT** and **VD SAFE STALL TIME** setpoints for rated and minimum voltage conditions. For voltage conditions above rated, the locked rotor thermal limit and acceleration curve are extrapolated up to 110% of the terminal voltage. The point coordinates (I_s , T_s) for 110% are extrapolated based on the I_1 , T_1 , I_3 , and T_3 values. For starting currents at voltages higher than 110%, the trip time computed from 110% V thermal limit value is used.

Note:

The voltage dependent curve for current values above 8 times pickup ($OL \times FLA$) are clamped and the time to trip is frozen at the level calculated for the 8 times pickup current.

The following three figures (a), (b) and (c) illustrate the resultant overload protection curve for minimum, 100%, and maximum line voltages. For voltages between these limits, the relay shifts the acceleration curve linearly and constantly, based on the measured line voltage during a start. Figures (d), (e) and (f) illustrate the starting curves for the following abnormal conditions: line voltages below the minimum, above 110%, and the situation for voltage loss.

For the Voltage Dependent Overload Curve Protection figure: (a) At Minimum Voltage, (b) At 100% Voltage, (c) At 110% Voltage, (d) At Less Than Minimum Voltage, (e) At Voltage Loss Condition, (f) At More Than 110% Voltage

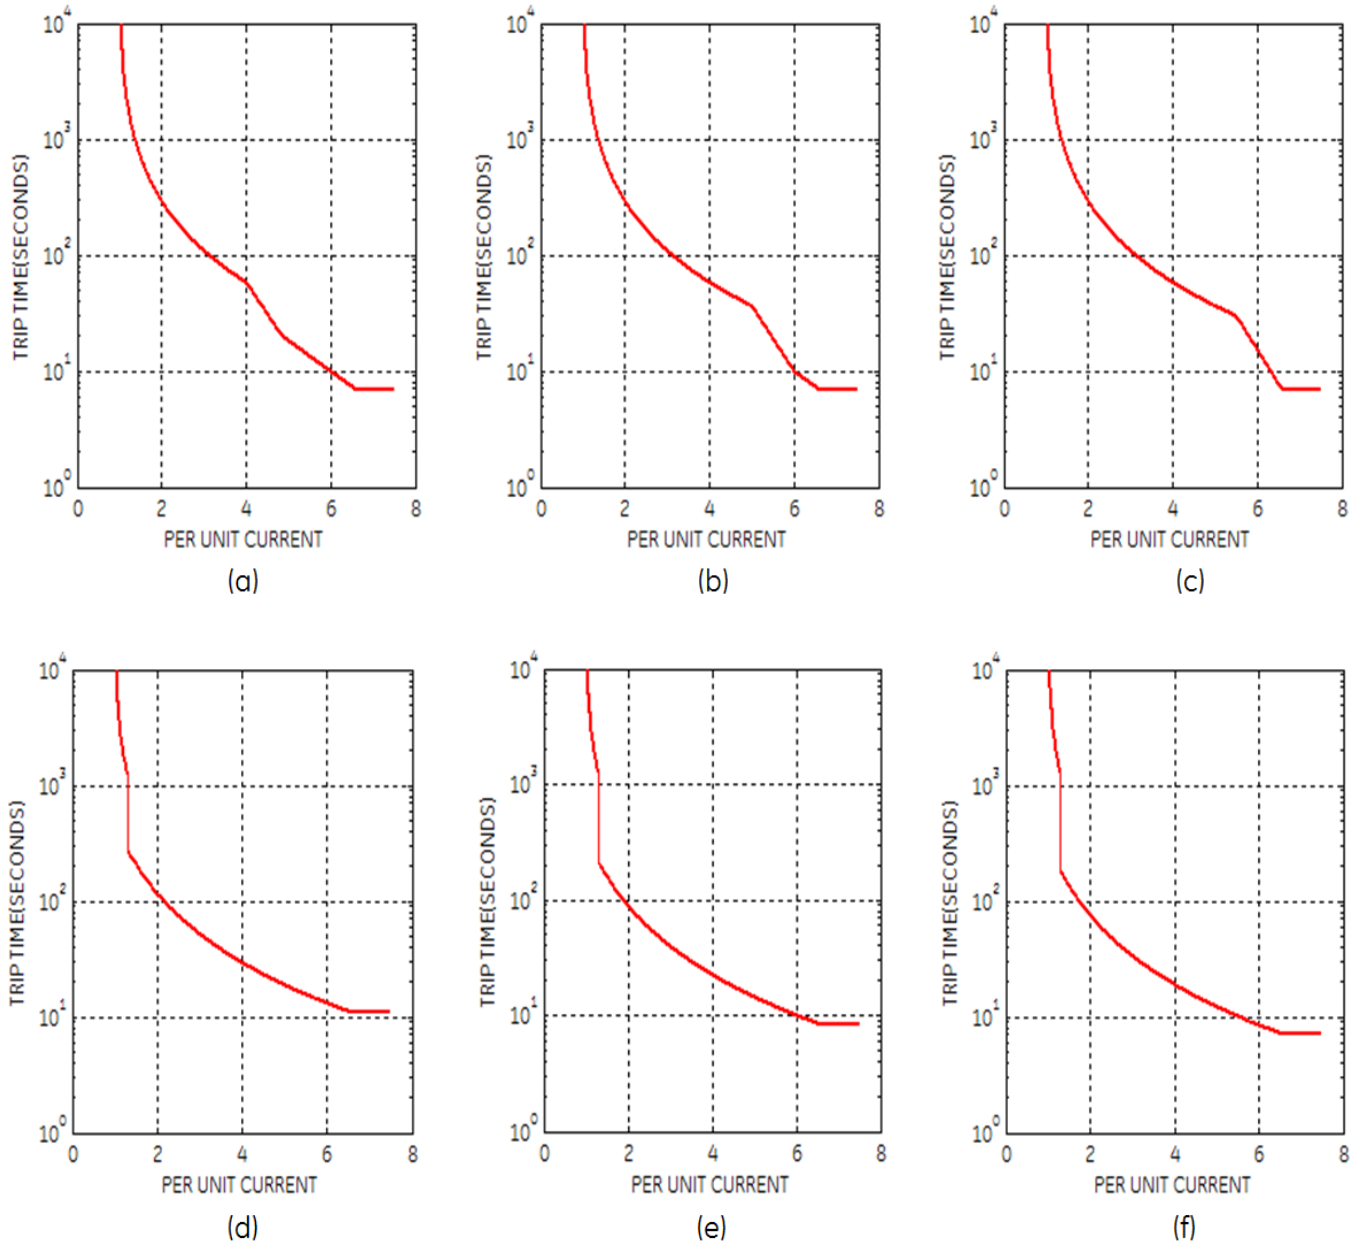


Figure 156: Voltage Dependent Overload Curve Protection

Note:
859, 869 note

Note:
For the three abnormal voltage situations, the relay makes a transition from the acceleration curve to the standard or FlexCurve when the generator is running Overload.

EVENTS

Range: Enabled, Disabled
Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled
Default: Latched

9.3.2.16 THERMAL MODEL LOGIC DIAGRAM

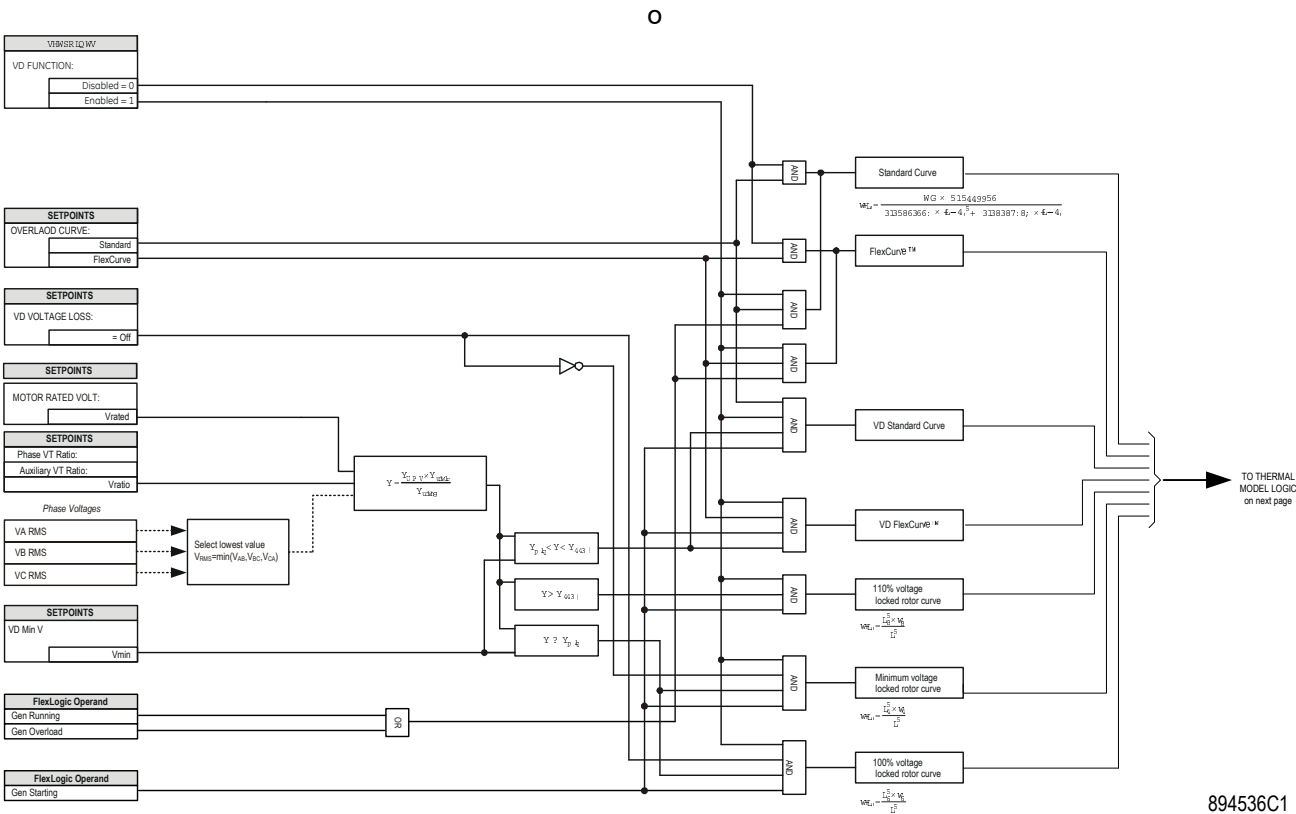


Figure 157: Voltage Dependent Overload Curve Selection logic diagram

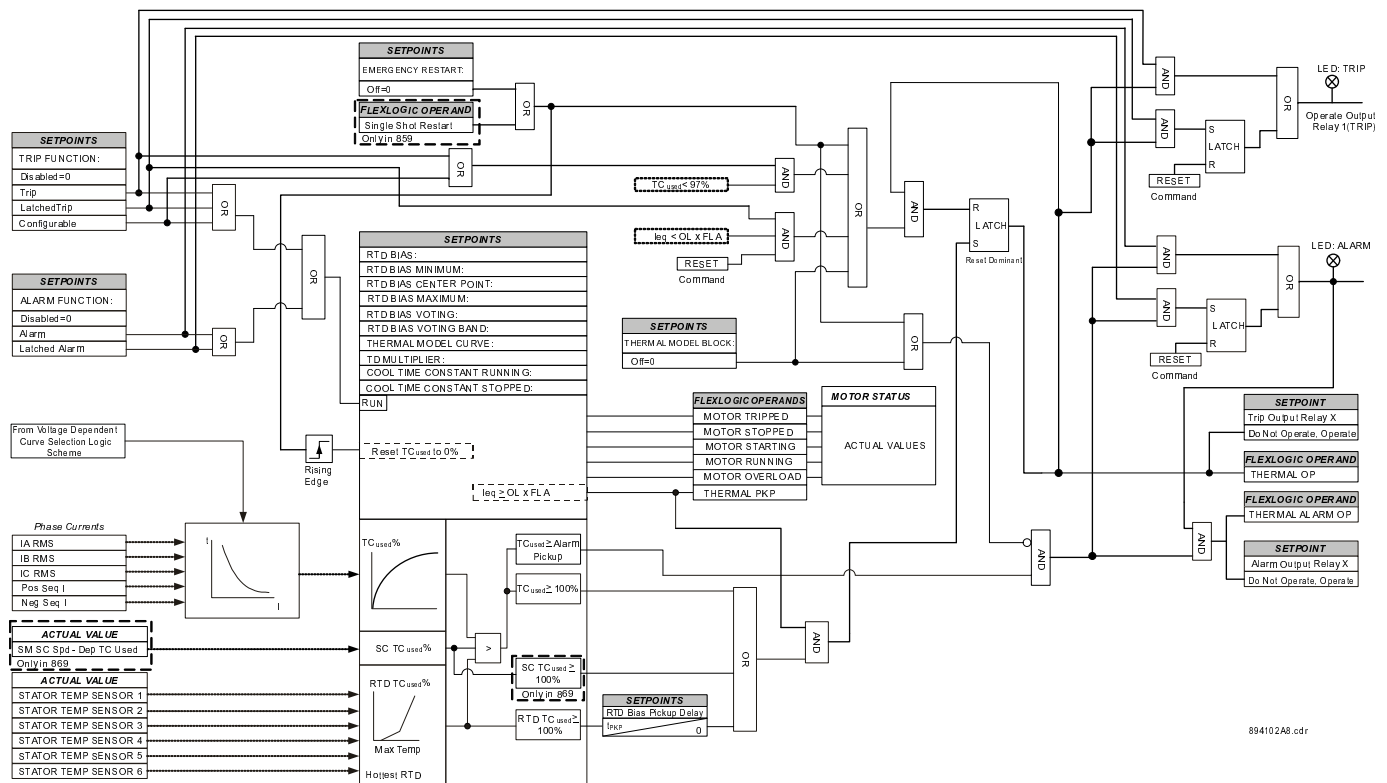


Figure 158: Thermal Model logic diagram

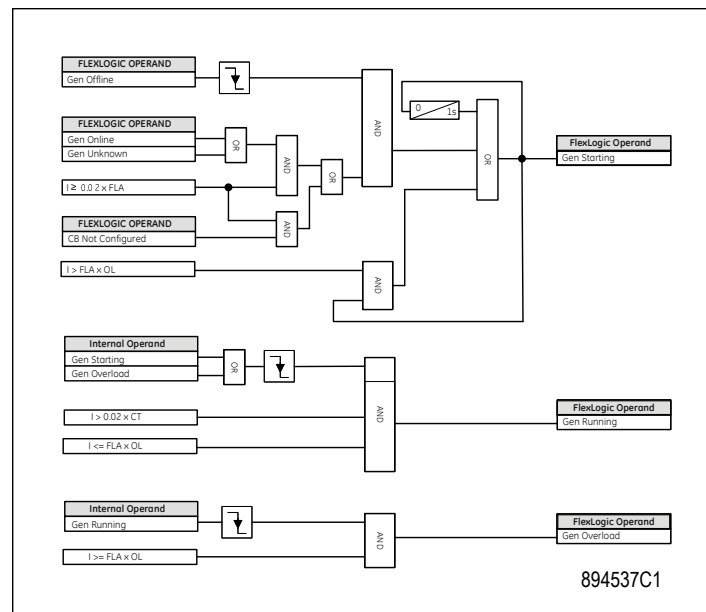


Figure 159: Generator Starting, Running and Overload status

9.3.3 OVERALL PERCENT DIFFERENTIAL

The relay provides one Overall Percent Differential element per setpoint group. The setpoints from the protection menu define a dual slope, dual breakpoint differential/restraint characteristic. The filtering and calculation of transformer differential and restraint currents, and differential current 2nd and 5th harmonics are as shown in the following figure.

Note:

An 889 with the specific order code option, K-R1/R5 is required for the Overall Percentage Differential. An 889 with the K-R1/R5 option supports 3-CT banks, 1 VT bank and an additional second breaker control.

Note:

The K2 CT bank is connected to Winding 1, which is the High-Voltage winding of the GSU connected to the system. In contrast, the K1 CT bank is connected at the neutral side of the generator, and must be configured as Winding 2 (K1).

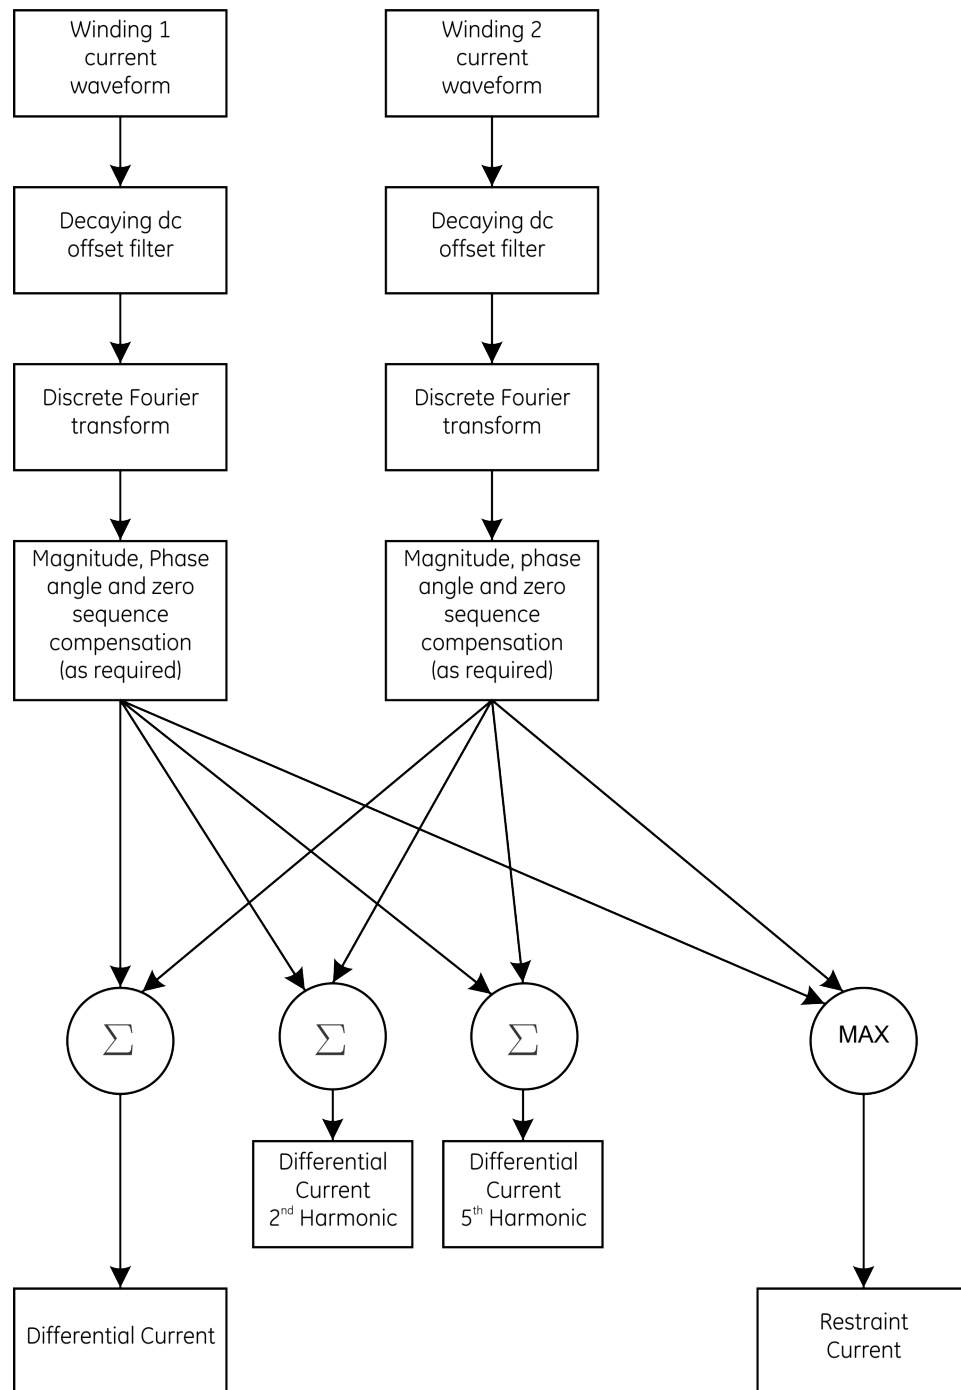


Figure 160: Filtering and Calculation of differential and restraint currents

The relay continuously calculates per-phase differential and restraint currents, and compares the ratio between the two values with a user pre-defined differential/restraint characteristic. The purpose of the characteristic is to define the zone of differential protection operation and the zone of no operation. The differential characteristic provides setpoints for sensitivity, dependability, and security for all types of faults, and is programmed by the user to reflect a variety of transformer differential protection applications.

The differential current is calculated per-phase as a vector sum of the currents from all windings after magnitude and angle compensation.

$$Id = \bar{I}_{1_{comp}} + \bar{I}_{2_{comp}}$$

The restraint current is calculated as a maximum of the same internally compensated currents:

$$Ir = \max(|\bar{I}_{1_{comp}}|, |\bar{I}_{2_{comp}}|)$$

Note:

Refer to the Transformer Setup chapter for the winding currents magnitude and phase shift compensations performed by the relay.


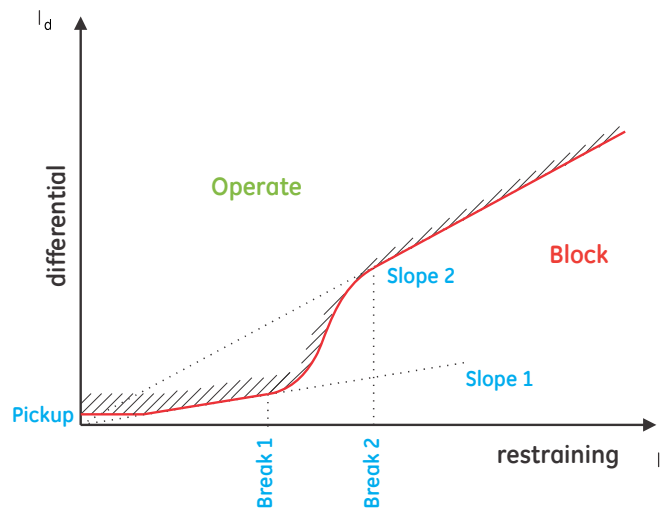


Figure 161: Differential/Restraint Characteristic for main transformer

The above figure shows the differential/restraint characteristic of the main transformer percent differential protection.

The decision for operation or no operation is complemented by detection of CT saturation, followed by currents directional check. The saturation flag (SAT) can only be initiated during an external fault, providing the magnitude of any of the restraints is bigger than a threshold average using the Break1 and Break 2 setting programmed in the menu. While at the same time, the differential/restraint ratio is below a slope average calculated based on Slope 1 and Slope 2 settings. The directional flag is not checked unless the SAT flag is initiated. Normally during internal faults, the trajectory of the differential/restraint ratio does not cross the average calculated breakpoint threshold, in which case the directional flag is not checked. The directional flag is checked during external faults (SAT flag triggered), where due to saturation, the differential/restraint trajectory is able to enter the operating region. Usually the angle between the currents during external fault and CT saturation remains bigger than 90 degrees, in which case the percent differential protection does not operate. However, while in the operating region, the protection would operate, on evolving faults (external to internal fault), as the directional flag would be high (angle less than 90 degrees).

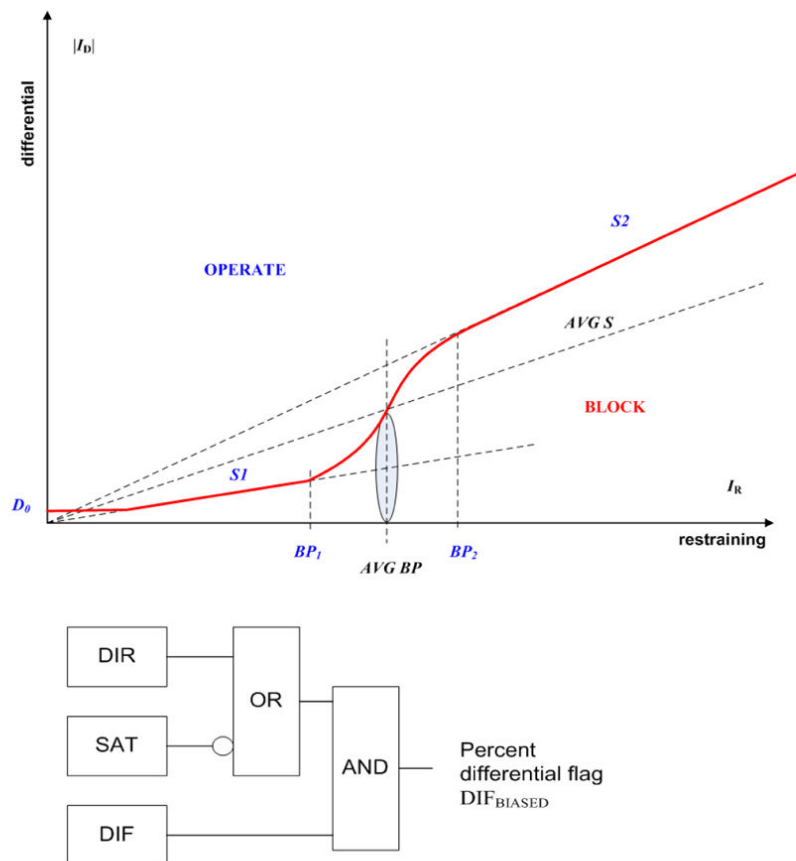

Recommendations for configuring the Differential/Restraint characteristic

The following setpoints define the differential/restraint characteristic:

Minimum Pickup

This setpoint is expressed in x CT of Winding 1. The minimum pickup defines the minimum differential current required for operation. The pickup setting must be higher than the amount of differential current that is seen under normal transformer loading conditions, and must be higher than the maximum differential current that is seen during transformer tap changer operation.

For example, for a 20MVA, 25MVA, or 28MVA power transformer with a 138kV/4.16kV ratio, and class C current transformers CT(w1) 200:5, and CT(w2) 3000:5, the CT errors and the minimum pickup setting is calculated as follows:

Winding 1 (138kV) CT – reference. Magnitude factor: $M(w1) = 1$

Winding 2(4.16kV) CT – non reference. Magnitude factor: $M(w2) = 4.16 * 3000 / 138 * 200 = 0.4521$

Based on emergency MVA rating:

Winding 1 rated current = $28\text{MVA} / (138\text{kV} * \sqrt{3}) = 117 \text{ Amps}$

Winding 2 rated current = $28\text{MVA} / (4.16 * \sqrt{3}) = 3890 \text{ Amps}$

The accuracy of the Class C current transformer is defined in the IEEE standard C37.110 as not exceeding 10% for symmetrical current magnitudes of up to 20 times the rating for a standard burden resistance:

$117\text{Amps} * 10\% = 11.7 \text{ Amps} \Rightarrow 11.7 / 200 = 0.0585 \text{ xCT}(w1)$

$3890 \text{ Amps} * 10\% = 389 \text{ Amps} \Rightarrow 389 / 3000 * M(w2) = 389 / 3000 * 0.4521 = 0.0585 \text{ xCT}(w1)$

In the worst case, the errors from the two CTs as expressed in $x_{CT}(w1)$ as a reference can be summed:

$$\text{Minimum Pickup} = 0.0585 + 0.0585 = 0.117 \text{ (0.2xCT setting for Pickup is sufficient)}$$

Slope 1

This setting defines the desired differential/restraint ratio for detecting internal faults. The percent Slope 1 setting must be above the differential/restraint ratio during external faults with non-significant fault current magnitude, but with long lasting DC component, which is able to cause CT saturation.

The Slope 1 setting can be calculated based on the restraint current during emergency loading of the transformer:

$$\text{Restraint current Winding 1} = 117 \text{ Amps}/200 = 0.585 \text{ xCT}$$

$$\text{Restraint current Winding 2 (scaled)} = 3890/3000 \cdot 0.4521 = 0.585 \text{ xCT}$$

$$\text{Differential current} = \text{CT error} = 0.117 \text{ xCT}$$

$$\text{Slope 1} = (0.117/0.585) \cdot 100 = 20\%$$

Adding 5% margin, produces a Slope 1 setting of 25%

Slope 2

The Slope 2 setting ensures stability during heavy through fault conditions, where CT saturation results in high differential current. Slope 2 must be set high enough to cope with the worst case when the CTs from one winding saturate but the CTs from the other winding do not saturate during external fault. In such case the ratio of the differential to restraint current can be as high as 95 to 98%.

Break 1

Break 1 must be set to reflect the through current (restraint current) expressed in times winding 1 CT ($w1$) below which CT saturation due to DC components and/or residual magnetism is not expected. The latter may be as high as 80% of the nominal flux, effectively reducing the CT capabilities by factor of 5.

Therefore, this setting must correspond to the end of the linear operation of the CT with the worst characteristic, counting up to 80% remnant flux in the CT core. To calculate this setting, CTs knee-point voltage and CT secondary burden are needed.

$$B_1 = \left[\frac{V_{sat} \cdot M_{(w)}}{R_b \cdot I_{CT_{sec}}} \right] \cdot 0.2 \text{ (xCT)}$$

where:

- The CT burden resistance $R_b = 2(R_{lead} + R_{CTsec} + R_{relay})$
- CT secondary resistance = R_{CTsec} .
- Conductor resistance = R_{lead} and the
- Relay input resistance = R_{relay} .
- $I_{CT_{sec}}$ is the CT secondary nominal current.
- V_{sat} is the CT knee-point voltage.

The Break 1 is calculated per the formula above for each winding CT, and then the smallest per value is entered as a setting.

Break 2

The Break 2 setting defines the beginning of Slope 2 used to provide stability during heavy through fault conditions, where CT saturation results in high differential current. Break 2 must be set to the through-fault current which causes the worst CT to saturate, with saturation free time of at least half power cycle.

To define the degree of CT saturation, the IEEE CT saturation tool can be used:

For example, let


- the CT 3000:5 on winding 2 be the worst one which would saturate first during external faults
- the maximum external fault current be 25kA, with an X/R ratio of 15

The CT voltage kneepoint from the saturation characteristic is 300 V, with winding resistance of 0.5 Ohms, Burden resistance of 2.19 Ohms, and Burden reactance of 0.01 Ohms.


INPUT PARAMETERS:

Inverse of sat. curve slope =	S =	15	---
RMS voltage at 10A exc. current =	Vs =	300	volts rms
Turns ratio = n2/1 =	N =	600	---
Winding resistance =	Rw =	0.500	ohms
Burden resistance =	Rb =	2.190	ohms
Burden reactance =	Xb =	0.010	ohms
System X/R ratio =	XoverR =	15.0	---
Per unit offset in primary current =	Off =	1.00	-1<Off<1
Per unit remanence (based on Vs) =	λrem	0.00	---
Symmetrical primary fault current =	Ip =	25,000	amps rms

ENTER:

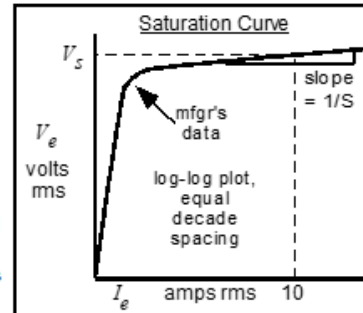


Thick lines: **Ideal (blue)** and **actual (black)** secondary current in amps vs time in se
Thin lines: **Ideal (blue)** and **actual (black)** secondary current extracted fundamenta

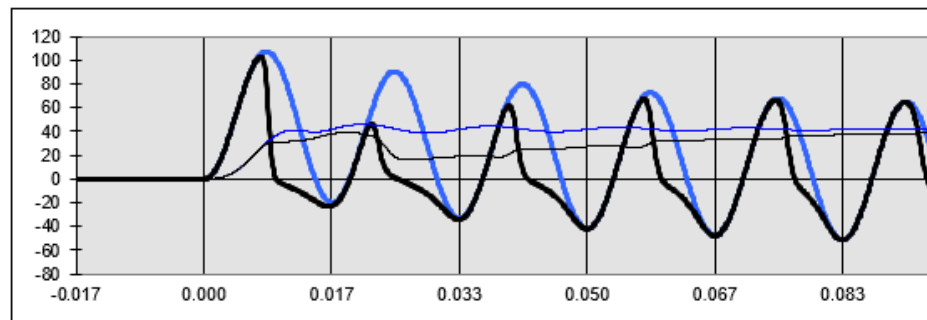


The waveform shows that during this external bolted fault with maximum fault current of 25 kA, the CT (3000:5) will saturate severely, and produce only a ¼ of a cycle saturation free time. Break 2 must be set to a through fault current so that the CT (3000:5) produces at least ½ cycle saturation free time. The solution is to change the fault current to 15000 kA. The waveform now shows a bigger part of the first cycle before saturation.

INPUT PARAMETERS:

Inverse of sat. curve slope =	S =	15	---
RMS voltage at 10A exc. current =	Vs =	300	volts rms
Turns ratio = n2/1=	N =	600	---
Winding resistance =	Rw =	0.500	ohms
Burden resistance =	Rb =	2.190	ohms
Burden reactance =	Xb =	0.010	ohms
System X/R ratio =	XoverR =	15.0	---
Per unit offset in primary current =	Off =	1.00	-1<Off<1
Per unit remanence (based on Vs) =	rem =	0.00	---
Symmetrical primary fault current =	Ip =	15,000	amps rms

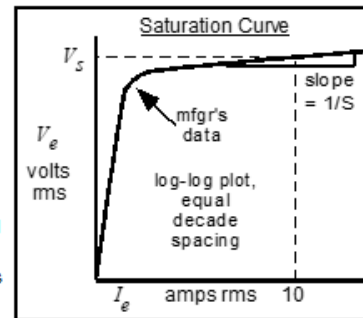ENTER:

Thick lines: **Ideal (blue)** and **actual (black)** secondary current in amps vs time in se
 Thin lines: **Ideal (blue)** and **actual (black)** secondary current extracted fundamental

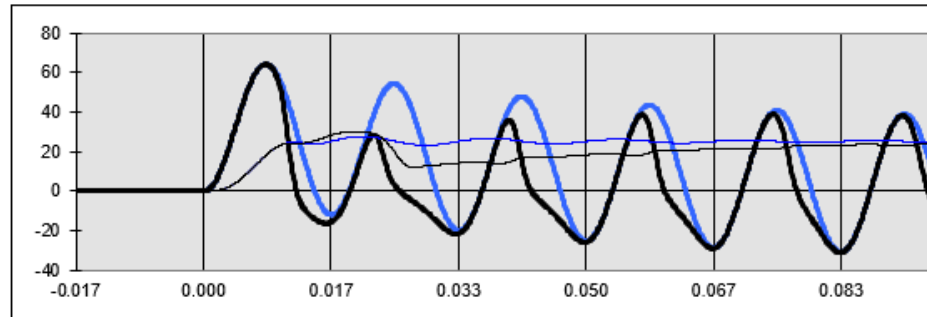

The fault current of 15000 Amps would then be translated as $15000/3000 = 5$ times winding 2 CT. Bringing this to the same scale with respect to winding 1 CT reference, i.e. multiplying by a magnitude of 0.4521, the Break 2 setting would be:

$$\text{Break 2} = 5 * 0.4521 = 2.21 \text{ xCT (w1)}$$

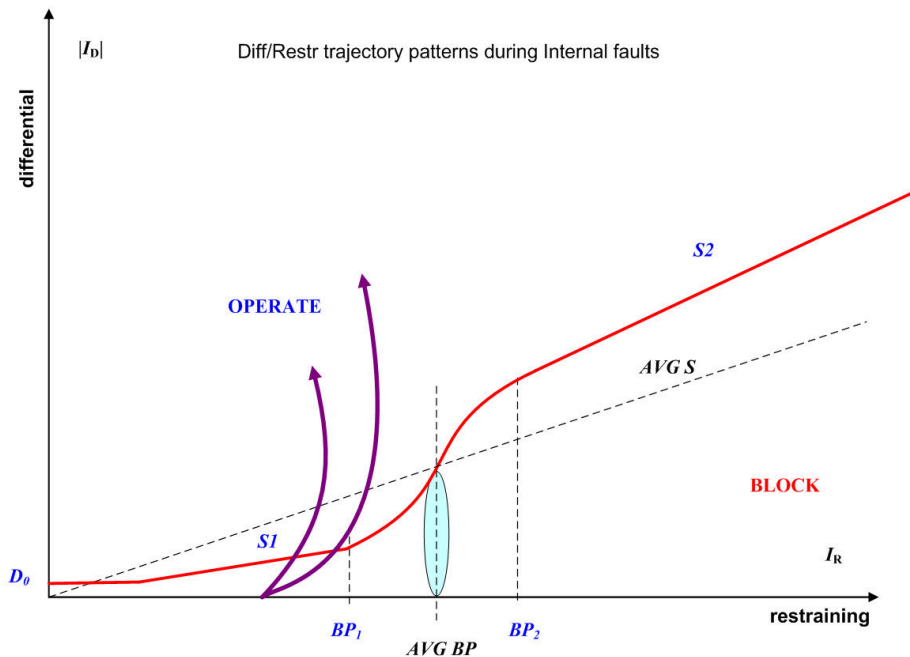


Figure 162: Examples of differential/restraint trajectory during internal fault

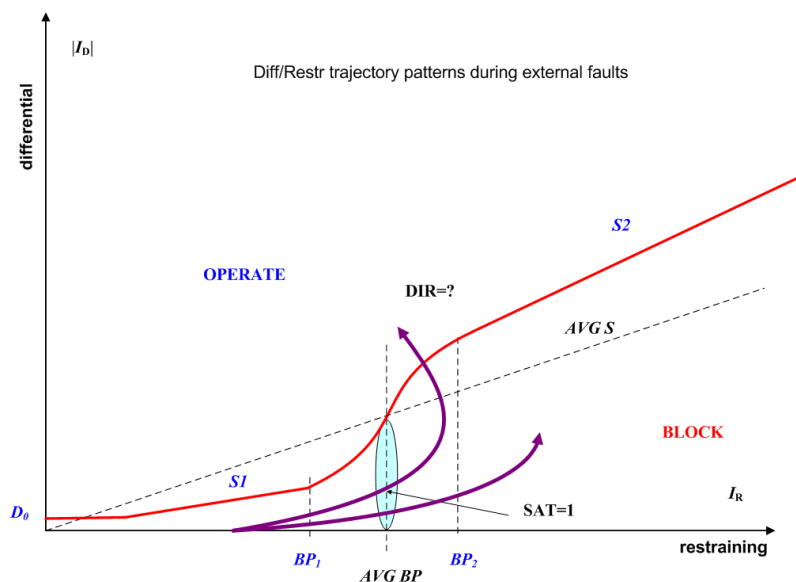


Figure 163: Examples of differential/restraint trajectory during external fault

Path: Setpoints > Protection > Group 1 (6) > Generator > Overall Differential

FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

The selection of Trip or Configurable enables the Percent Phase Differential function. The trip output relays selected to trip each breaker will operate, if the Percent Differential protection operates and these trip outputs are selected in the Percent Differential menu as *Operate*.

PICKUP

Range: 0.05 to 1.00 x CT in steps of 0.01

Default: 0.20 x CT

This setting defines the minimum differential current required for operation. The setting is selected based on the amount of differential current that might be seen under normal conditions. This differential current is a result of the transformer magnetizing current, CT inaccuracies, and transformer ratio that would change by the transformer on-load tap changer. When the tap changer feature is set properly, the relay compensates the transformation ratio which impacts the differential protection automatically.

SLOPE 1

Range: 1 to 100% in steps of 1

Default: 25%

This setting is applicable for restraint currents (through currents) of zero to kneepoint 1, and defines the ratio of differential/restraint currents, above which the element will operate. This slope is set to ensure sensitivity on internal faults at normal transformer loading. The value of slope 1 must be above the maximum differential currents which may be seen for through currents with magnitudes less than break 1 setting. The differential currents can be caused by winding CT inaccuracies, the constant transformer magnetizing current, and the leakage current from in-zone grounding transformers. Usually a margin of 2% to 5% is added to this setting.

BREAK 1

Range: 0.50 to 2.00 x CT in steps of 0.01 x CT

Default: 1.50 x CT

The setting defines the limit of linear operation of the magnitude reference CT, accounting for up to 80% residual flux, that effectively reduces the capability of the CT by a factor of 5. **BREAK 1** must be set below the current that can cause CT saturation due to DC components and/or residual magnetism. Very often the **BREAK 1** setting is based on the transformer winding 1 nominal current (100% transformer loading). In such cases, one must check whether or not this setting complies with the above recommendation regarding the CT linear performance. This breakpoint marks the end of slope 1, where no CT saturation is expected for restraining (through) currents smaller than that breakpoint.

BREAK 2

Range: 2.00 to 30.00 x CT in steps of 0.01 x CT

Default: 4.00 x CT

Break 2 must be set below the fault current that is most likely to saturate any of the transformer CTs due to an AC component alone. The setting is expressed in times CT, where the CT rating is the magnitude reference CT either user selected, or selected automatically.

SLOPE 2

Range: 1% to 100% in steps of 1%

Default: 95%

This setting ensures stability during through fault conditions, resulting in CT saturation and spurious high differential current. **SLOPE 2** must be set high to cater for the worst case scenario, where only CTs from one winding saturate, but the CTs from the other winding(s) do not saturate. In such cases the differential/restraint ratio can go as high as 95% to 98%.

Note:

Setting **SLOPE 1** higher than **SLOPE 2** must be avoided, as it is not practical, even though the ranges for both slopes can allow for one to do so. Correct programming of the differential-restraint characteristic is achieved when **SLOPE 1** is used for sensitivity of operation during internal fault in the range of 15% to 35%, and **SLOPE 2** set usually from 80% to 98%, is used to provide secure area for the diff./restr. trajectory during external faults and CT saturation.

PICKUP DELAY

Range: 0.000 to 10.000 in steps of 0.001 s

Default: 0.000 s

This setting defines the pickup time delay of the percent differential element.

INRUSH INHIBIT

Range: Disabled, 2nd Harm Block

Default: 2nd Harm Block

This setting enables or disables the inrush inhibit function. None of the settings for inrush inhibit are active, when the function is set to "Disabled".

INRUSH INHIBIT LEVEL

Range: 1.0% to 40.0% in steps of 0.1%

Default: 20.0%

This setting specifies the ratio of the 2nd harmonic differential current to the fundamental frequency differential current for the selected mode of the 2nd harmonic inhibit. The percent differential protection will be blocked from operation if the actual ratio of the differential 2nd harmonic current to the fundamental frequency differential current is above this threshold.

INRUSH INHIBIT MODE

Range: Per Phase, Average, 2-out-of-3, 1-out-of-3

Default: Per Phase

This setting specifies the mode of blocking during transformer magnetizing (inrush) conditions.

If set to *Per phase*, the function performs inrush inhibit per each phase individually.

If set to “Average”, the relay calculates the average 2nd harmonic level and compares this level against the setting for inrush inhibit level. Averaging of the 2nd harmonics follows an adaptive algorithm depending on per-phase magnitude of the fundamental frequency differential current. If the differential current on any of the three phases goes below the differential current cut-off level of $0.04 \times CT$, the 2nd harmonic current from that phase is dropped (zeroed) from the equation for averaging, and the divider is decreased from 3 to 2. The same happens if the magnitude of the differential current on one of two remaining phases during this same energization drops below the cut-off level. In this case the 2nd harmonic on this phase will be dropped from summation, and the divider will be decreased to 1.

If set to *2-out-of-3*, the relay estimates the 2nd harmonic differential current per-phase, and blocks the differential protection for all three phases, if the 2nd harmonic content from **any two phases** is higher than the 2nd harmonic value entered in the setpoint *inrush inhibit level*.

If set to *1-out-of-3*, the relay estimates the 2nd harmonic differential current per-phase, and blocks the differential protection for all three phases, if the 2nd harmonic content from **any phase** is higher than the 2nd harmonic value entered in the setpoint “inrush inhibit level”. This method is also known as the *cross-blocking* method.

OVEREXCITATION INHIBIT

Range: Disabled, 5th Harmonic

Default: 5th Harmonic

This setting provides 5th harmonic differential protection blocking during an over excitation condition resulting from an increased V/Hz ratio.

An overexcitation condition resulting from an increased V/Hz ratio poses a danger to the protected transformer. A given transformer can tolerate an overfluxing condition for a limited time, as the danger is associated with thermal processes in the core. Instantaneous tripping of the transformer from the differential protection is not desirable.

The relay uses a traditional 5th harmonic ratio for inhibiting the differential function during overexcitation conditions.

OVEREXCITATION LEVEL

Range: 1.0% to 40.0% in steps of 0.1%

Default: 10.0%

This setting specifies the level of 5th harmonic during overexcitation (overfluxing) transformer conditions. When the 5th harmonic level exceeds the specified **OVEREXCITATION LEVEL** setting (5th harmonic ratio) the differential element is blocked. The overexcitation inhibit works on a per-phase basis.

BLOCK

Range: Any FlexLogic operand

Default: Off

RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

Any, or all of the output relays can be selected to operate, upon percent differential operation.

The relay provides one instantaneous differential element per setpoint group.

The Instantaneous differential protection is not biased protection and operates similar to the instantaneous overcurrent protection. Inputs to this protection are computed by the relay per-phase differential currents. Operation occurs if any of the computed phase differential current is above the instantaneous differential pickup setting. The instantaneous differential protection is usually set to operate during high fault currents, and if used, its pickup must be set according to the following criteria:

The **PICKUP** setting (xCT) must be selected higher than the maximum inrush current during transformer energization.

The **PICKUP** setting must be set higher than the differential current caused CT saturation during faults outside the zone of protection.

The **PICKUP** setting must be selected lower than the maximum fault current during internal faults.

INSTANTANEOUS DIFF FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

INST DIFF PICKUP

Range: 3.00 to 30.00 x CT in steps of 0.01 x CT

Default: 10.00 x CT

This setting defines the pickup level of the differential current required for operation.

INST DIFF BLOCK

Range: Any FlexLogic operand

Default: Off

INST DIFF OUTPUT RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

The menu includes a list of available output relays to be set for operation or no operation upon protection operation.

Note:

The output relays selected under the Breaker menu for breaker trip need to be reselected if the Percent Differential function is set to *Trip*. These output relays will not be operational even if selected to operate if the Percent Differential function is set to *Configurable*.

EVENTS

Range: Disabled, Enabled

Default: Disabled

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Latched

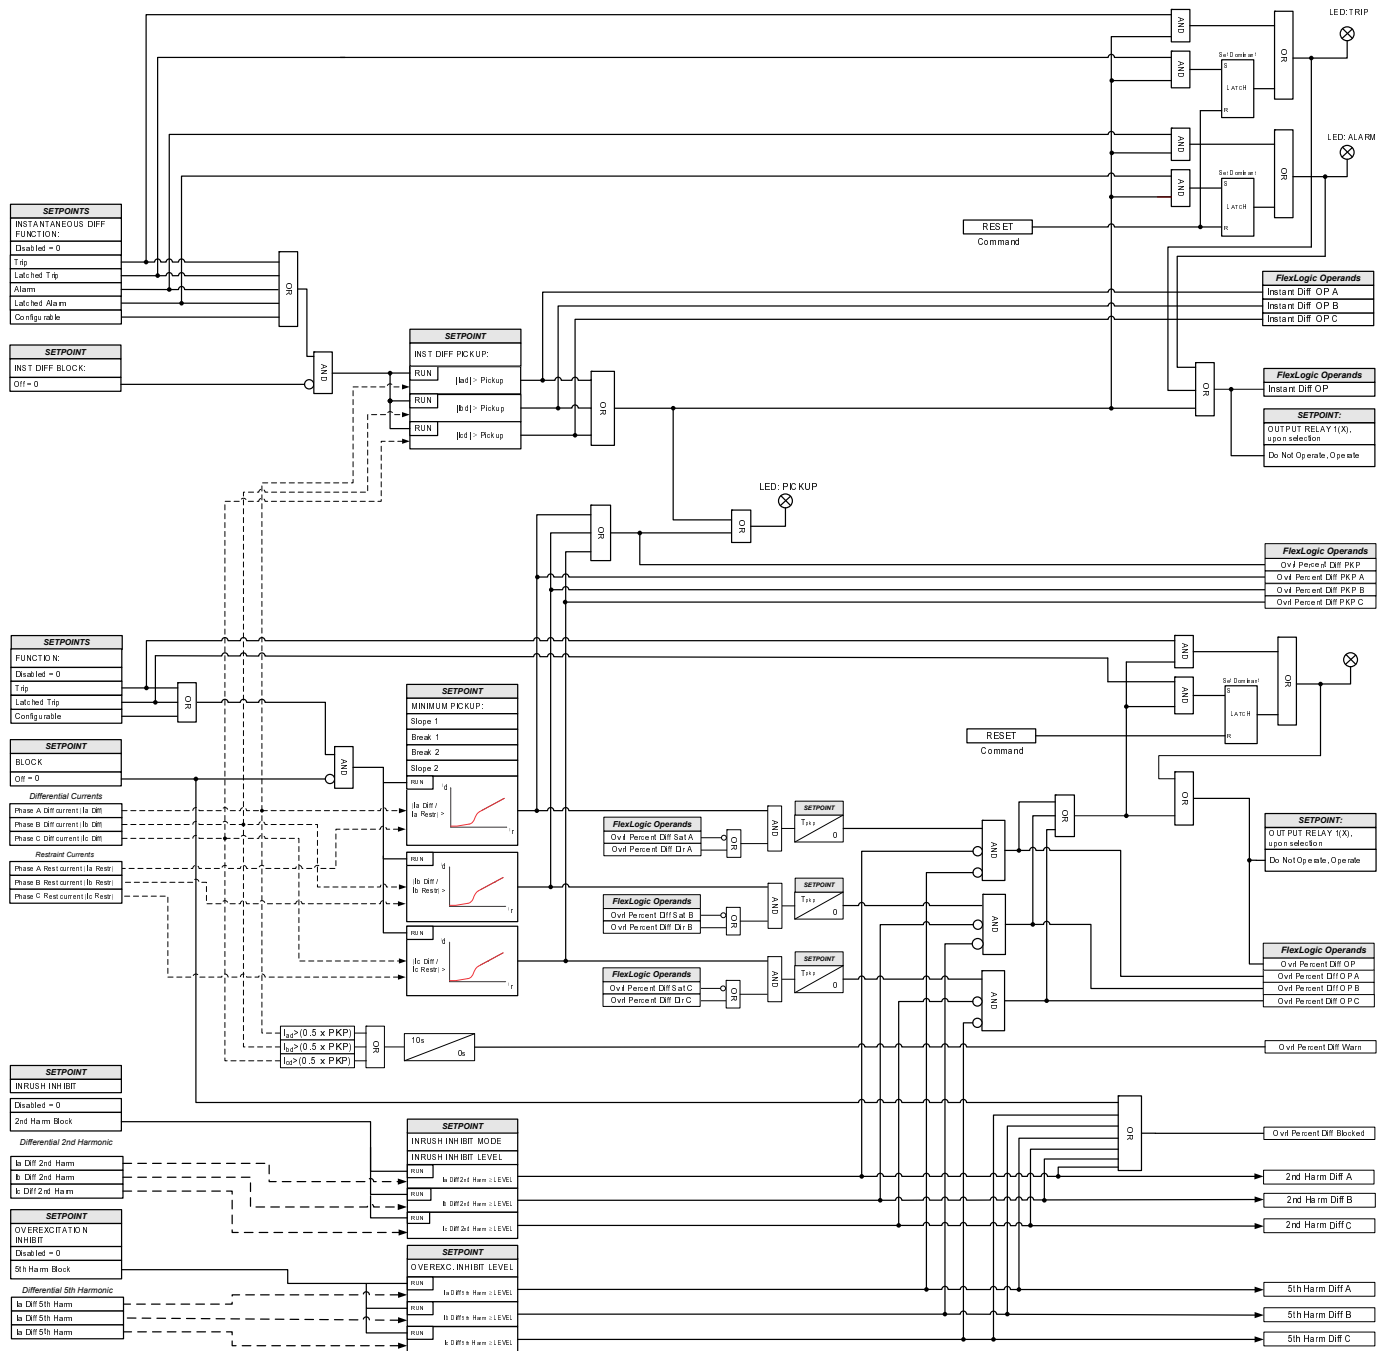


Figure 164: Percent and Instantaneous Differential Protection Logic Diagram

9.3.4 INADVERTENT ENERGIZATION (50/27)

This element provides protection against inadvertent energization also known as accidental energization. The Inadvertent Energization feature may be armed when all of the phase voltages fall below the undervoltage pickup level and/or the unit is offline. When the feature is armed, if any one of the phase currents measured at the output CTs exceeds the overcurrent level programmed, an operate will occur.

Protection can be provided for poor synchronization by using the **U/V or Offline** arming signal. During normal synchronization, there should be relatively low current measured. If however, synchronization is attempted when conditions are not appropriate, a large current that is measured within 250 ms after the generator is placed online would result in an operate.

Note:
This feature requires 5 s to arm, and 250 ms to disarm.

Path: **Setpoints > Protection > Group 1(6) > Generator > Inadvertent Energization**

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

ARMING MODE

Range: U/V and Offline, U/V or Offline

Default: U/V and Offline

The element is armed based on the U/V condition and/or Offline status.

O/C PICKUP

Range: 0.050 to 30.00 x CT in steps of 0.01 x CT

Default: 0.30 x CT

This setting is the overcurrent level of any phase currents required to allow the element to operate.

U/V PICKUP

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.50 x VT

This setting sets the undervoltage level of three-phase voltage required to arm the element. When this setting is zero and **ARMING MODE** is set to *U/V* or *Offline*, the undervoltage supervision will be bypassed and the arming mode will check the generator Offline status only.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTs

Range: Enabled, Disabled

Default: Enabled

TARGETs

Range: Self-reset, Latched, Disabled

Default: Self-reset

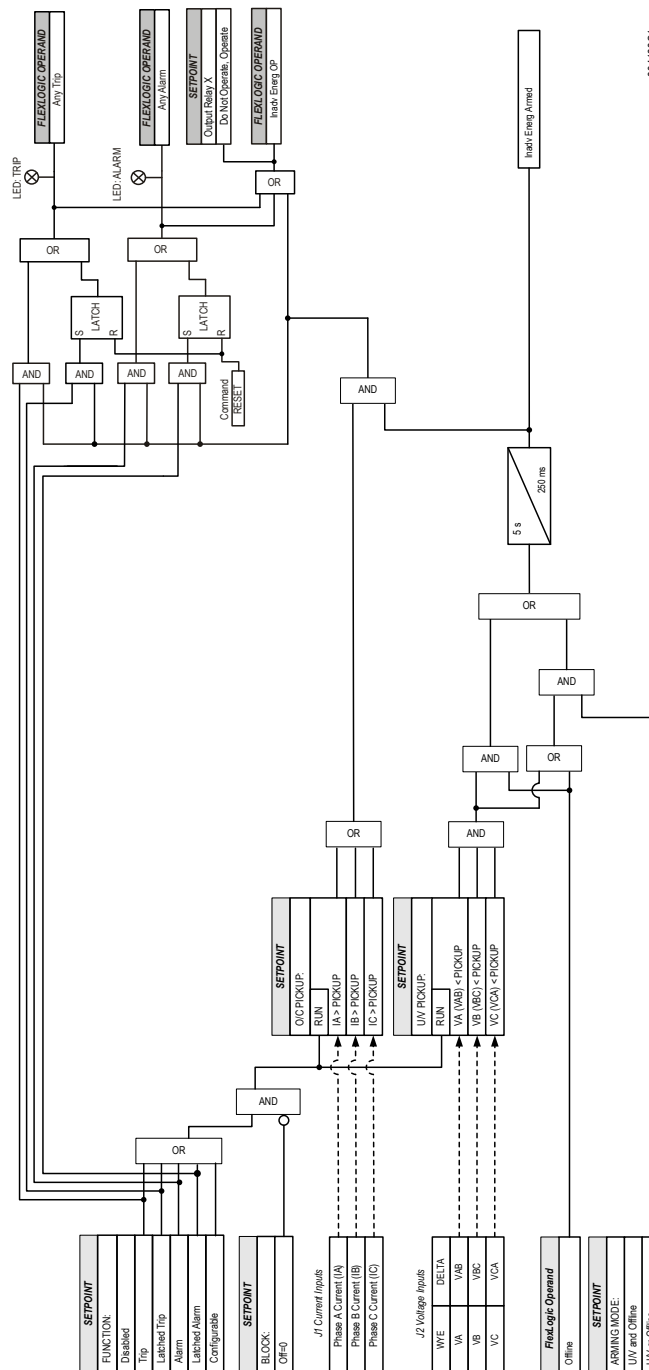


Figure 165: Inadvertent Energization Logic Diagram

9.3.5 GENERATOR UNBALANCE (46)

Rotor heating in generators may occur due to unbalance (negative sequence) current. Generators have very specific limits where unbalanced current is concerned (Refer ANSI C50.13).

The generator unbalance element has an inverse time overcurrent curve which is typically used for tripping and a definite time overcurrent curve typically used for alarm purposes to protect the generator rotor from overheating due to the presence of negative sequence currents.

The inverse time stage operating characteristic is defined by the following equation:

$$T = \frac{K}{(I_2 / \text{RatedFLA})^2}$$

where:

- I_2 = negative sequence current
- FLA is the generator rated full load current
- K = negative sequence capability constant from the generator manufacturer depending on size and design
- T = time in seconds when $I_2 >$ pickup (minimum 250 ms, maximum defined by setpoint)

Note:

Unusually high negative sequence current levels may be caused by incorrect phase CT wiring.

Path: **Setpoints > Protection > Group 1(6) > Generator > Generator Unbalance**

SIGNAL INPUT

Range: CT Bank 1-J1, CT Bank 2-K1

Default: CT Bank 1-J1

This setting provides the selection for the 3-Phase CT bank inputs. This setting allows applying this element either on terminal side or neutral side of the Generator.

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip option*

Default: Disabled

This setting enables the Generator Unbalance Trip functionality. When the Trip function is selected and the element operates, output relay #1 "Trip" operates but the "ALARM" LED does not turn on.

When the Configurable function is selected, neither the Trip output, nor the ALARM LED turns on automatically. They must be configured using their own menus and FlexLogic™ operands.

TRIP PICKUP

Range: 0.00 to 100.00 % FLA in steps of 0.01

Default: 8.00 % FLA

This setting defines the pickup value of the trip element. Pickup value is given in negative sequence current as percentage of generator rated full load current.

Note:

This setting should be greater than the corresponding setting for the alarm stage.

CONSTANT K

Range: 0.00 to 100.00 in steps of 0.01

Default: 1.00

This setting is the negative sequence capability constant. This value is normally provided by the generator manufacturer (see ANSI C50.13) depending on size and design.

MAXIMUM TIME

Range: 0 to 1000 s in steps of 1 s

Default: 600 s

The negative sequence overcurrent **Maximum Time setting** defines the maximum time that any value of negative sequence current in excess of the pickup value is allowed to persist before a trip is issued. This setting can be applied to limit the maximum tripping time for low level unbalances.

Note:

Small power system transients or switching device operation can generate spurious negative sequence current that can result in the false operation of the Current Unbalance element. In order to prevent false operation of the element, minimum time is set to a fixed value of 250 ms.

RESET TIME

Range: 0.00 to 1000.00 s in steps of 0.01 s

Default: 227.00 s

This setting defines the linear reset time of the trip element time accumulator. It is the maximum reset time from the threshold of tripping based on the generator unbalance inverse curve. The reset time has an accumulator/integrator to represent the thermal memory counter which increments linearly if generator unbalance current is above threshold, and decrements linearly if it below threshold. The "Unbal DPO" operand is set to high when thermal memory counter resets to zero.

TRIP OUTPUT RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

Any assignable output relay can be selected to operate upon the generator unbalance operation. The operation of these general relays is programmed by the user. Each relay can be selected to become either energized or de-energized when operated, and to operate as latched, self-resetting or pulsed.

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

This setting enables the generator unbalance Alarm functionality.

When the Alarm function is selected and the element operates, the "ALARM" LED flashes; it self-resets when the operating conditions are cleared.

When the Latched Alarm function is selected and the element operates, the "ALARM" LED flashes during the operating condition, and is steadily lit after the conditions are cleared. The "ALARM" LED can be cleared by issuing a Reset command. Output relay #1 "Trip" will not operate if the Alarm or Latched Alarm setting is selected.

ALARM PICKUP

Range: 0.00 to 100.00 % FLA in steps of 0.01

Default: 3.00 % FLA

This setting specifies a pickup for the alarm function. The definite time overcurrent curve would normally be used to generate an alarm to prompt an operator to take some corrective action. This element would typically be set at a safe margin below the trip pickup setting.

ALARM DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 0.50 s

This setting specifies a time delay for the alarm function. This is the minimum operate time of the alarm element. This is set to prevent nuisance alarms during system faults.

ALARM OUTPUT RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

Any assignable output relay can be selected to operate upon generator unbalance operation. The operation of these general relays is programmed by the user. Each relay can be selected to become either energized or de-energized when operated, and to operate as latched, self-resetting or pulsed.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENT

Range: Enabled, Disabled

Default: Enabled

TARGET

Range: Self-reset, Latched, Disabled

Default: Self-reset


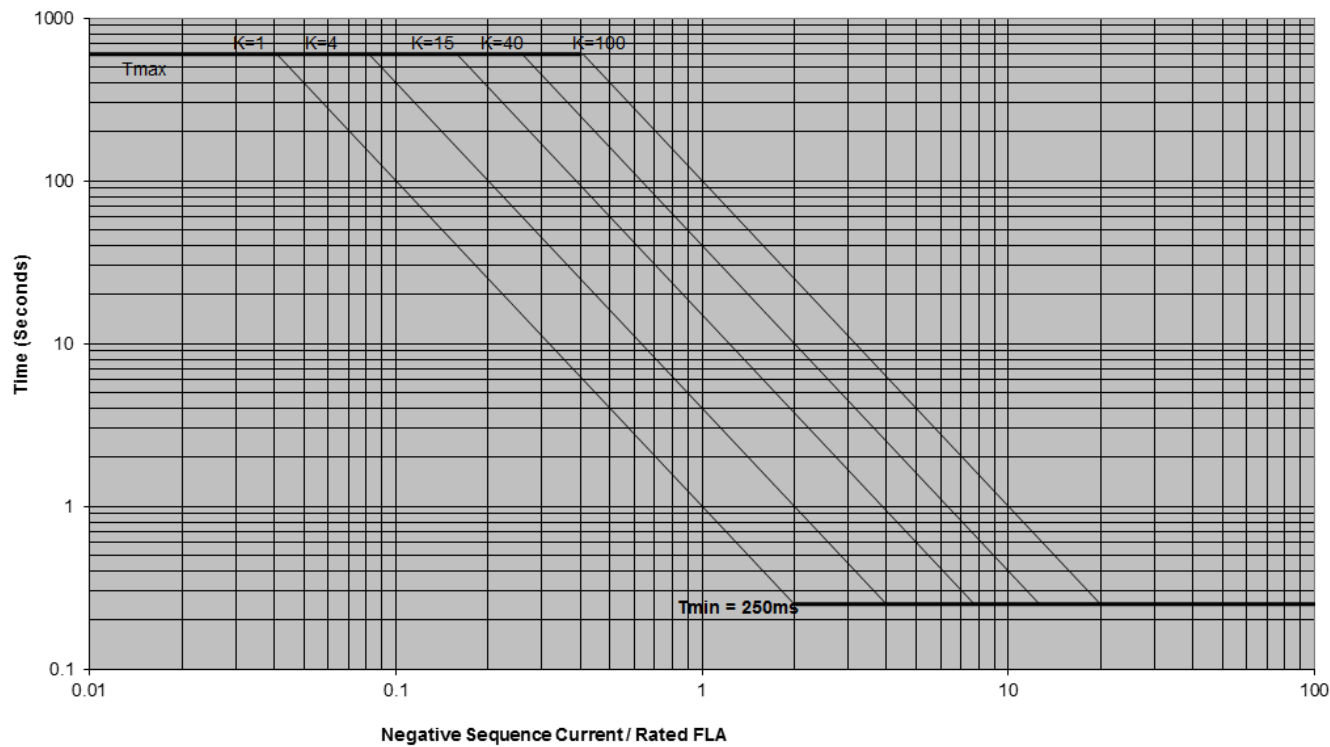


Figure 166: Generator Unbalance Inverse Time Curves

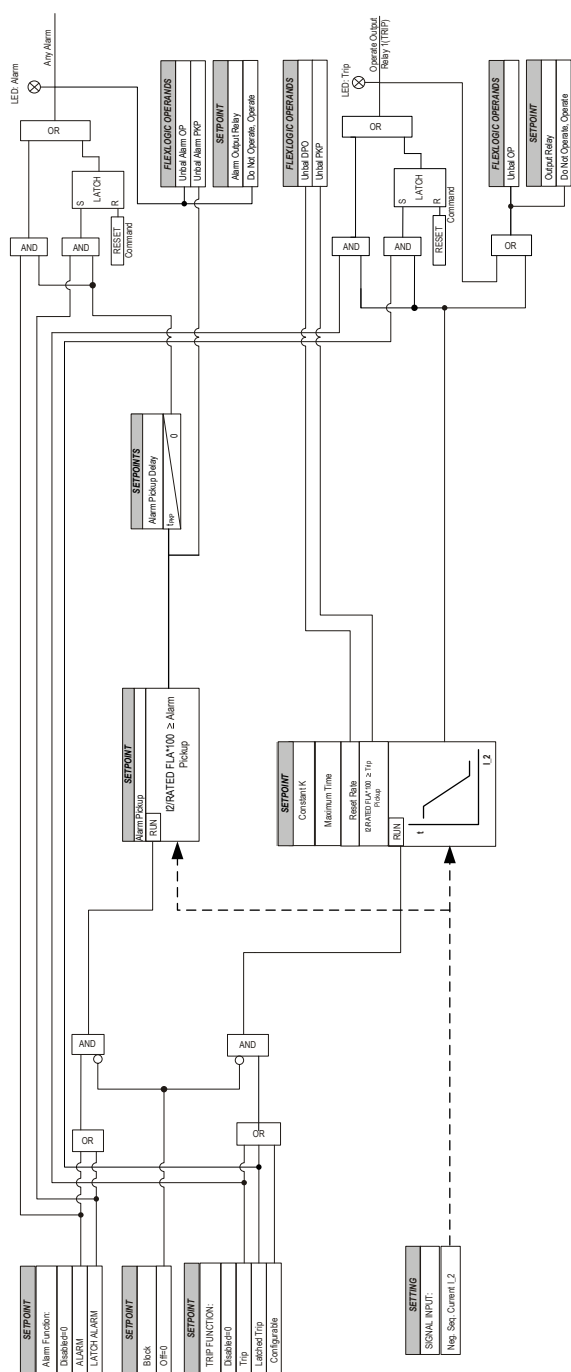

894132C1

Figure 167: Generator Unbalance Logic Diagram

9.3.6 LOSS OF EXCITATION (40)

Typically, a synchronous machine has an excitation system, which supplies DC (Direct Current) to energize the rotor/field winding. This excitation to the machine rotor may be completely or partially lost due to various abnormal conditions, such as field circuit open or short, loss of supply to the excitation system, or unintentional trip of a field breaker and so on. Due to loss of excitation, the synchronous machine may act as an induction machine, which may cause the machine to over-speed (above synchronous speed) and also draw reactive power (Var) from the system. Therefore, Loss Of Excitation (LOE) protection is applied to protect synchronous machines from over-speeding, as well as to recover systems from voltage collapse.

Loss of excitation protection is achieved using positive sequence impedance measurements (from voltage and currents), and two inverted offset (Mho) circles, as shown. User configurable Under-Voltage (UV) supervision and sufficient positive sequence current ($>0.05 \times CT$) are applied for additional protection of this element. Each individual circle characteristic can be applied independently. In the case where a circle element is enabled and the measured positive sequence impedance falls within this circle, the element operates with the corresponding time delay setting. Further, a 20 ms reset delay is applied to the element logic which enhances protection dependability, especially when measured impedance jitters around a circle boundary.

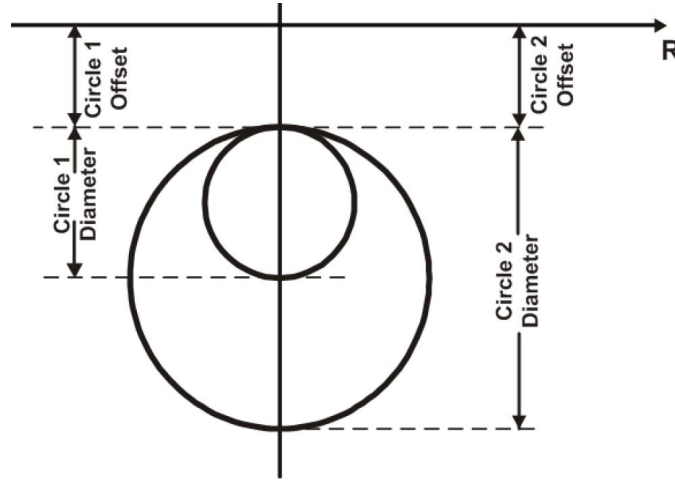


Figure 168: Loss of excitation Characteristic

Note:

All impedance (in ohms) settings refer to the relay side impedance quantity, i.e. the CT/VT secondary side when looking into the machine. Although the setting values are in positive ohms, this protection function is looking in to the generator, and hence the circle characteristics are shown inverted/reversed.

Base impedance should be calculated on secondary side.

$$Z_{base,prim} = \frac{base\ kV^2}{base\ MVA} \text{ in } \Omega$$

$$Z_{base,sec} = Z_{base,prim} * \frac{CT\ Ratio}{VT\ Ratio} \text{ in } \Omega$$

The following is the guideline used to derive the setting of this element.

Note:

The IEEE C37.102-2006 (IEEE guide for AC Generator Protection) provides typical practices to set this element

The inner circle (Circle 1) diameter is set to machine base impedance (i.e. 1 pu), which considers the loss of field during full loading to medium loading of the machine. An offset is one half of the direct axis transient reactance ($X'd$) - both impedances referring to the relay side. The corresponding time delay for the inner circle needs to be higher than the worst case power swing scenario, and hence this value is determined from stability studies (typically, this value may be in the range of 0.2 s to 0.5 s).

$$\text{Circle 1 Diameter} = Z_{base,sec} \text{ in } \Omega$$

$$\text{Circle 1 Offset} = \frac{X'_{d(pu)}}{2} * Z_{base,sec} \text{ in } \Omega$$

On the other hand, the outer circle (e.g. Circle 2) diameter is set to the synchronous reactance of the machine (X_d) and an offset equal to one half of the direct axis transient reactance (X'_d) - both impedances referring to the relay side. This allows the machine to be protected during light load conditions or with reduced field excitation. The corresponding time delay for the outer circle should be high enough to prevent mis-operations due to power swings, and hence this value is determined from stability studies (typically, this value may be in the range of 0.5 s to 2 s).

$$\text{Circle 2 Diameter} = X_{d(pu)} * Z_{base,sec} \text{ in } \Omega$$

$$\text{Circle 2 Offset} = \frac{X'_{d(pu)}}{2} * Z_{base,sec} \text{ in } \Omega$$

Path: Setpoints > Protection > Group 1(6) > Generator > Loss of Excitation

SIGNAL INPUT

Range: Positive Impedance 1, Positive Impedance 2

Default: Positive Impedance 1

The signal input selection to apply this element at the terminal or neutral side CT. The CT and VT sources used by Positive impedance 1 and 2 are specified in **Metering > Impedance > Pos Seq Impedance**. Positive sequence impedance 1 is calculated using 3-phase J1 currents and 3-phase J2 voltages. With K-slot order code option, positive sequence impedance 2 is calculated using 3-phase K1 currents and 3-phase J2 voltages.

CIRCLE 1 FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

CIRCLE 1 DIAMETER

Range: 0.1 to 300.0 ohms in steps of 0.1 ohms

Default: 25.0 ohms

This setting is the diameter of the Circle 1 characteristic in ohms, referring to the CT/VT secondary (relay).

CIRCLE 1 OFFSET

Range: 0.1 to 300.0 ohms in steps of 0.1 ohms

Default: 2.5 ohms

This setting is the offset of the Circle 1 characteristic in ohms, referring to the CT/VT secondary (relay).

CIRCLE 1 PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 0.30 s

CIRCLE 1 UV SUPERVISION

Range: Disabled, Enabled

Default: Disabled

Under-voltage supervision of the element can be enabled or disabled. If Enabled for Circle 1, the positive sequence voltage at the machine terminal should be lower than setting value in “UV Supervision” in order to execute the Circle 1 impedance element, i.e. LOE Circle 1 is enabled only in case voltage drops below the “UV supervision” level. This additional check ensures the drop in machine terminal voltage in case of loss of excitation.

CIRCLE 1 OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

CIRCLE 2 FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

CIRCLE 2 DIAMETER

Range: 0.1 to 300.0 ohms in steps of 0.1 ohms

Default: 35.0 ohms

This setting is the diameter of the Circle 2 characteristic in ohms, referring to the CT/VT secondary (relay).

CIRCLE 2 OFFSET

Range: 0.1 to 300.0 ohms in steps of 0.1 ohms

Default: 2.5 ohms

This setting is the offset of the Circle 2 characteristic in ohms, referring to the CT/VT secondary (relay).

CIRCLE 2 PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

CIRCLE 2 UV SUPERVISION

Range: Disabled, Enabled

Default: Disabled

Under-voltage supervision of the element can be enabled or disabled. If Enabled for Circle 2, the positive sequence voltage at the machine terminal should be lower than setting value in “UV Supervision” in order to execute the Circle 2 impedance element, i.e. LOE Circle 1 is enabled only in case voltage drops below the “UV supervision” level. This additional check ensures the drop in machine terminal voltage in case of loss of excitation.

CIRCLE 2 OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

UV SUPERVISION

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: $0.70 \times V_T$

This setting specifies the pickup value for under-voltage supervision for one or both circles (if enabled). The positive sequence voltage at the machine terminal should be lower than this setting value to execute the LOE impedance element.

VTFF SUPERVISION

Range: Disabled, VT Fuse Failure 1, VT Fuse Failure 2

Default: Disabled

A VT fuse failure could cause a maloperation of a distance element unless the element is supervised by the VTFF element. VTFF Supervision is only available if VT Fuse Failure 1(2) function is enabled, otherwise this setpoint is hidden.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched


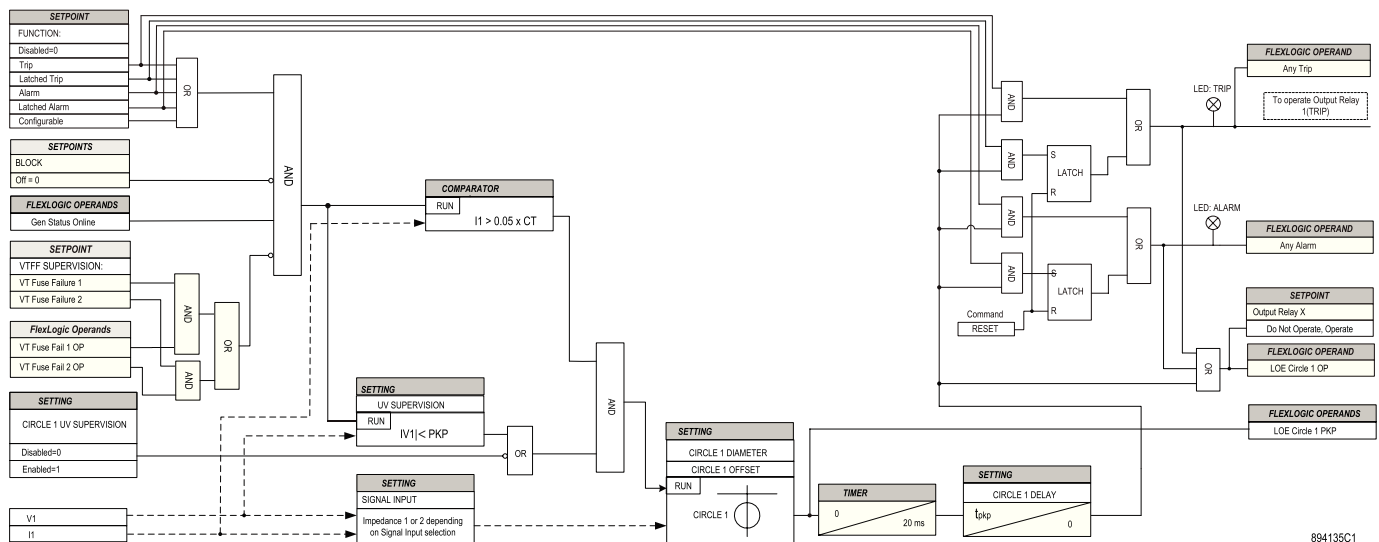


Figure 169: Loss of Excitation Logic Diagrams: circle 1

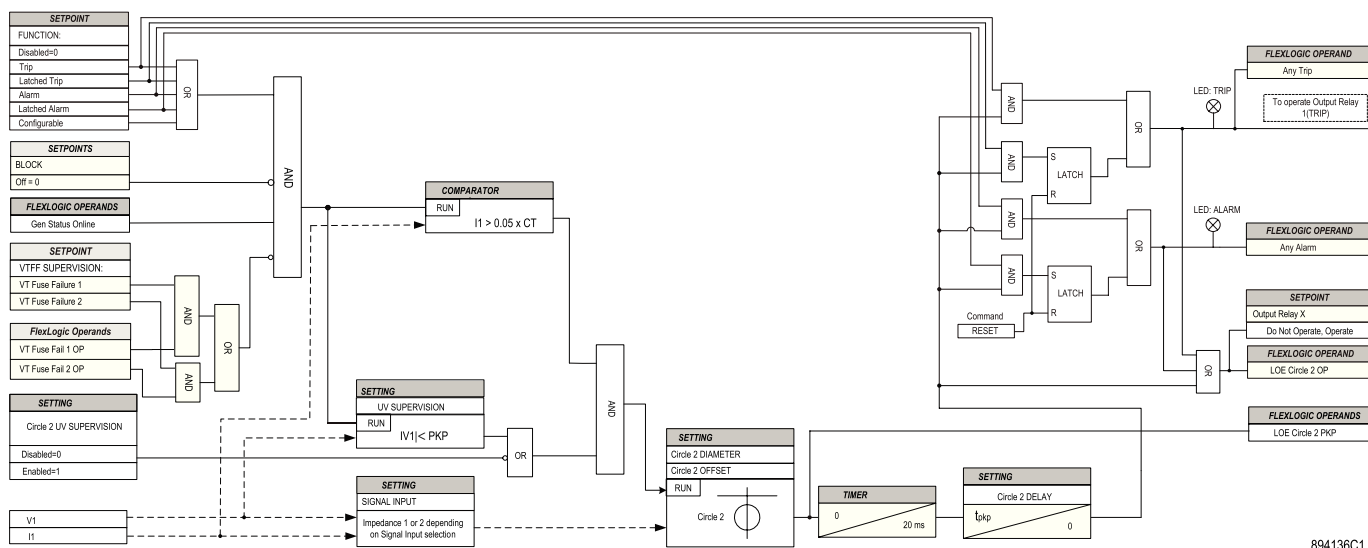

894136C1

Figure 170: Loss of Excitation Logic Diagrams: circle 2

9.3.7 THIRD HARMONIC NEUTRAL UNDERVOLTAGE (27TN)

The Third Harmonic Neutral Undervoltage element detects a loss of third harmonic voltage at the generator neutral. The percentage of stator winding covered by this function depends on the pickup setting and the amount of third harmonic generated by the machine at the time of the fault. A settable window of forward real power can supervise this element for enhanced security. The element is also supervised by positive sequence voltage measured at the generator output terminals. This element can be used with either wye or delta connected VTs on the terminal side and requires that the machine neutral voltage is connected via an auxiliary voltage channel of the relay Ax VT Bnk1-J2 bank input.

Note:

The setpoint Aux VT Connection (under **Setpoints > System > Voltage Sensing > Ph VT Bnk1-J2**) must be selected as **VN** for this element

Path: **Setpoints > Protection > Group 1 > Generator > 3rd Harm Neutral UV**

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

This setting enables the Third Harmonic Neutral Undervoltage trip functionality.

TRIP PICKUP

Range: 0.10 to 20.00 V in steps of 0.01 V

Default: 1.00 V

This setting specifies the trip pickup level in VT secondary for the magnitude of the 3rd harmonic of the neutral voltage. The magnitude of the 3rd harmonic voltage at the neutral point can be monitored under **Metering > Generator > Stat Gnd 3rd Harm**. Measuring the actual value of the operating quantity for a specific machine under variety of load conditions is helpful when selecting the pickup threshold for this feature.

TRIP PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the trip function. Once the operating quantity 3rd Harm VN is lower than the Trip Pickup level for the Trip Pickup Delay, a trip occurs indicating a fault condition.

TRIP RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

This setting enables the Third Harmonic Neutral Undervoltage alarm functionality.

ALARM PICKUP

Range: 0.1 to 20.00 V in steps of 0.01 V

Default: 0.50 V

This setting specifies the alarm pickup level for the magnitude of the 3rd harmonic of the neutral voltage.

Note:

Trip and alarm pickup levels are set in secondary voltage.

ALARM PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the alarm function. Once the operating quantity 3rd Harm VN is lower than the Alarm Pickup level for the Alarm Pickup Delay, an alarm occurs indicating a fault condition.

ALARM RELAY

Range: Do Not Operate, Operate

Default: Operate

BLOCKING MIN POWER

Range: 0.000 to 1.250 x Rated in steps of 0.001

Default: 0.200 x Rated

This setting specifies the minimum real power that inhibits this element. If the measured power is above this setting but below the Blocking Max Power setting, the element is blocked. This setting applies to three-phase real power where the rated real generator power is the base unit.

Note:

If the Blocking Min Power is set to "0.000", then the element does not operate for all power values that are less than the Blocking Max Power setting.

BLOCKING MAX POWER

Range: 0.000 to 1.250 x Rated in steps of 0.001

Default: 0.200 x Rated

This setting specifies the maximum real power that inhibits this element. If the measured power is below this setting but above the Blocking Min Power setting, the element is blocked. This setting applies to three-phase real power, where the rated real generator power is the base unit.

Note:

The base quantity (Rated) is the rated real power and calculated as:

Note:

Rated Real Power = Rated MVA x Rated Power Factor

Note:

*Rated MVA and Rated Power Factor are programmed under **Setpoints > System > Generator**.*

BLOCKING LOW VOLTAGE

Range: 0.00 to 1.50 x VT in steps of 0.01

Default: 0.50 x VT

This setting specifies the minimum voltage that allows this element to run. If the measured voltage is below, the element is blocked. This setting applies to the positive sequence voltage where Phase VT Secondary programmed under **Setpoints > System > Voltage Sensing** is the base unit.

BLOCK

Range: FlexLogic operand

Default: Off

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched

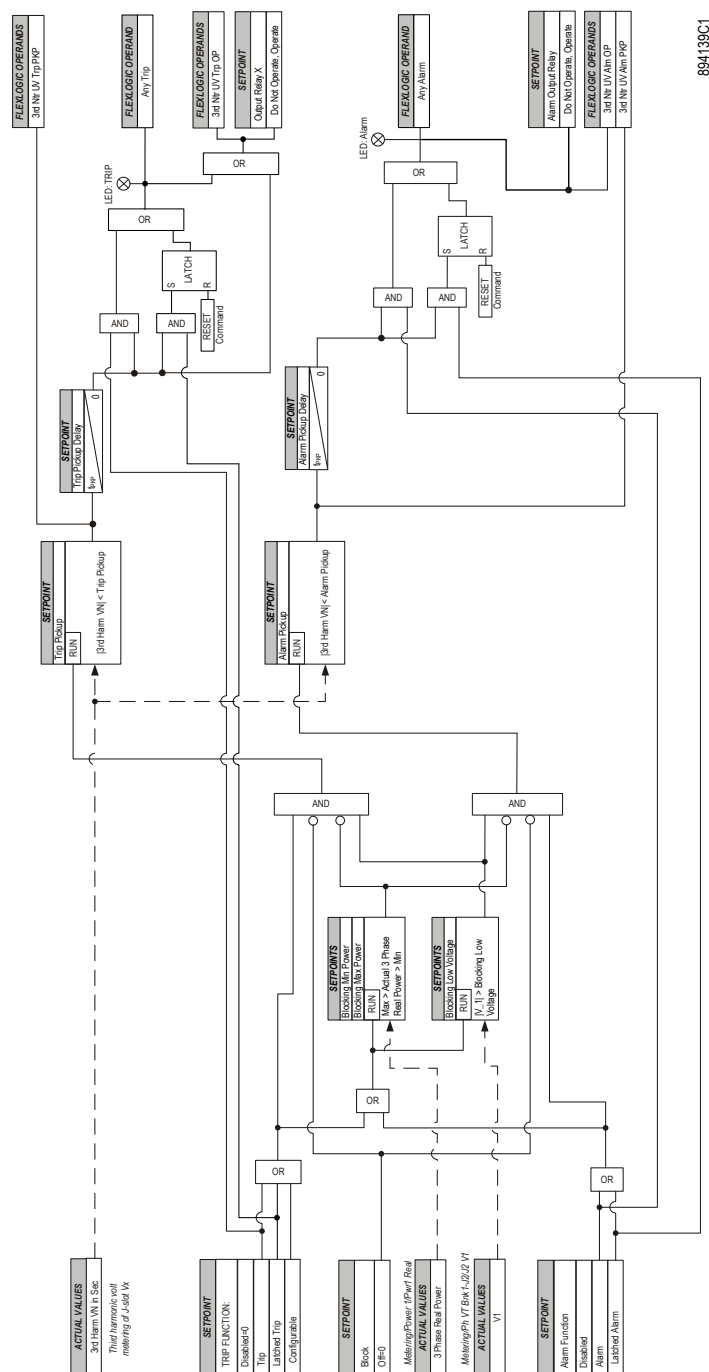

894139C1

Figure 171: Third Harmonic Neutral UV logic diagram

9.3.8 THIRD HARMONIC VOLTAGE DIFFERENCE

This element responds to third harmonic voltage measured at the generator neutral and output terminals. When used in conjunction with the neutral overvoltage (fundamental frequency) element, it provides 100% ground fault protection of the stator windings. Since the amount of third harmonic voltage that appears in the neutral is both load and machine dependent, the protection method of choice is an adaptive method. The following formula is used to create an adaptive operating quantity based on the amount of third harmonic that appears at the generator terminals.

$$\frac{|V_{N(3rd)}|}{|V_{N(3rd)} + V_{0(3rd)}|} < \text{Pickup and } \frac{|V_{0(3rd)}|}{|V_{N(3rd)} + V_{0(3rd)}|} > 1 - \text{Pickup and } |V_{N(3rd)} + V_{0(3rd)}| > \text{Supervision}$$

Where:

- $V_{N(3rd)}$ is a magnitude of the the 3rd harmonic in the voltage measured at the machine neutral point measured via an auxiliary channel of the VT bank
- $V_{0(3rd)}$ is a magnitude of the 3rd harmonic in the zero-sequence voltage measured at the machine terminals.

Note:

The setpoint Aux VT Connection (under **Setpoints > System > Voltage Sensing > Ph VT Bnk1-J2**) must be selected as V_N for this element

Note:

This element requires wye-connected VTs for measurement of the third harmonic in the zero-sequence voltage at the generator output terminals.

Path: Setpoints > Protection > Group 1 > Generator > 3rd Harm Voltage Difference

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

This setting enables the Third Harmonic Voltage Difference trip functionality.

TRIP PICKUP

Range: 0.005 to 0.900 in steps of 0.001

Default: 0.100

This setting specifies a pickup level for the operating quantity. It may be beneficial to measure the operating quantity under various load conditions for a particular machine in order to optimize this setting. This can be achieved using the actual values menu..

TRIP PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 0.50 s

This setting specifies a time delay for the trip function. A trip will occur once the operating conditions remains valid for the Trip Pickup Delay time.

TRIP SUPV

Range: 0.5 to 30.0 V in steps of 0.1 V

Default: 5.0 V

This setting specifies a signal level supervision for the vectorial sum of the third harmonic at the machine neutral and the zero-sequence terminal voltage. The safe value of this setting can be established after putting a given machine into service and reading the quantity from the relay under actual values menu (**Metering > Generator > Stat Gnd 3rd Harm**).

TRIP RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

This setting enables the Third Harmonic Voltage Difference alarm functionality.

ALARM PICKUP

Range: 0.005 to 0.900 V in steps of 0.001

Default: 0.150

ALARM PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the alarm function. An alarm will be generated once the operating conditions remain valid for the Alarm Pickup Delay time.

ALARM SUPV

Range: 0.5 to 30.0 V in steps of 0.1

Default: 5.0 V

This setting specifies a signal level supervision for the vectorial sum of the third harmonic at the machine neutral and the zero-sequence terminal voltage. The safe value of this setting can be established after putting a given machine into service and reading the quantity from the relay under actual values menu (**Metering > Generator > Stat Gnd 3rd Harm**).

ALARM RELAY

Range: Do Not Operate, Operate

Default: Operate

BLOCK

Range: FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched

Example 1: Operating quantities under normal conditions

Consider the next figure shown. In the case of a high impedance grounded machine, the neutral resistor is typically chosen such that power dissipated in the resistor during a single line to ground fault is approximately equal to the reactive power produced by the zero sequence capacitance of the stator winding and the generator step-up low voltage winding (X_{oc}). At power system frequencies (F_n), the neutral resistance is therefore equal to $X_{oc} / 3$, and at $3 \times F_n$, the neutral resistance is X_{oc} . For analysis, assume that $E_3 = 10$ V, $R = 5\Omega$, and $X_c = 5\Omega$.

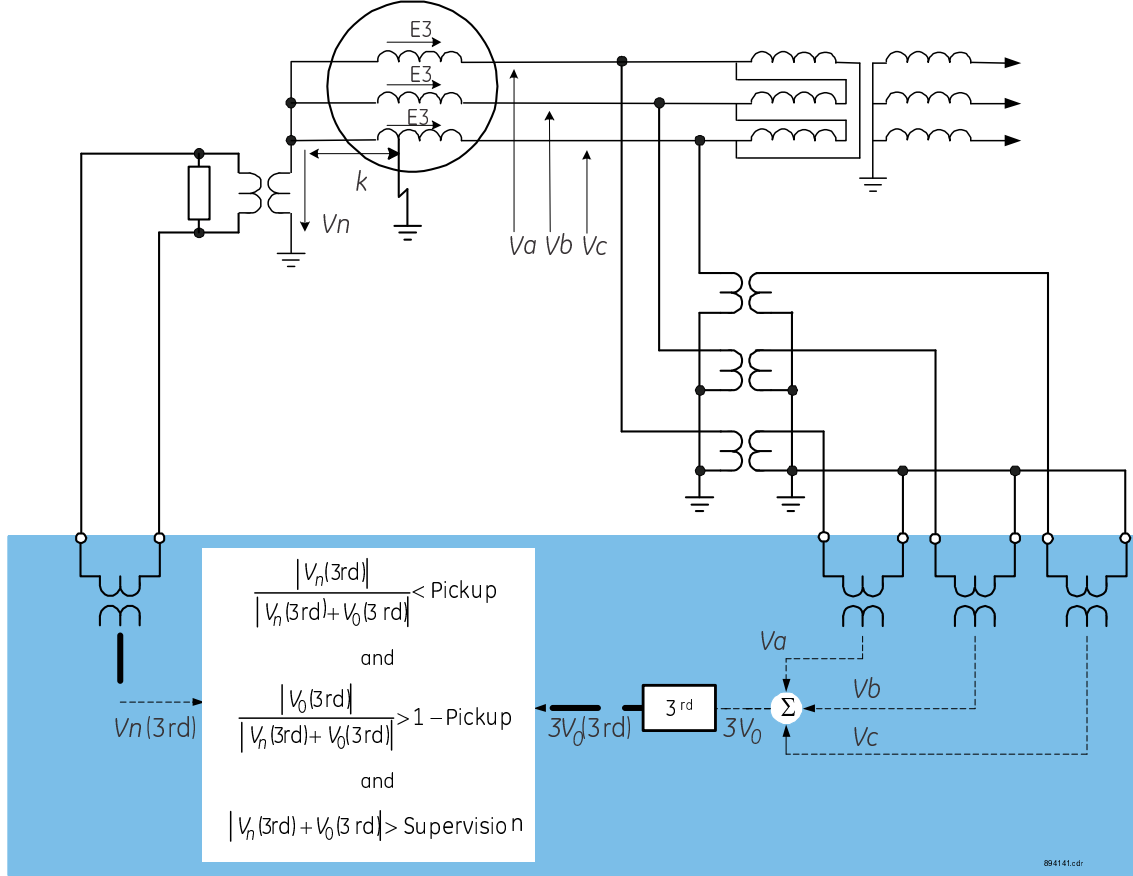


Figure 172: Third Harmonic Voltage Difference Application Example

We have the magnitude of neutral voltage V_N as:

$$V_N = \frac{R \times E_3}{R - jX_c} = \frac{10 \times 5}{5 - j5} V = \frac{10}{1 - j} V \Rightarrow |V_N| = 7.07 V$$

and the magnitude of the neutral and zero-sequence voltages $|V_N + V_0|$ as:

$$V_0 = \frac{-jX_c \times E_3}{R - jX_c} = \frac{-j50}{5 - j5} = \frac{-j10}{1 - j} \Rightarrow V_N + V_0 = \frac{10 - j10}{1 - j} V$$

$$\Rightarrow |V_N + V_0| = 10 V$$

Therefore, under the normal conditions described above, we set the operating quantities as follows:

$$Pickup > \frac{|V_N|}{|V_N + V_0|} = \frac{7.07}{10} = 0.707$$

$$Supervision < |V_N + V_0| = 10 V$$

In actual practice, the $|V_N| / |V_N + V_0|$ ratio may vary from 0.4 to 0.85 under normal conditions. The pickup and supervision setpoints are determined by evaluating the operating quantities during a fault condition (refer to example 2 for details).

Example 2: Operating quantities for a fault at a fraction k from the neutral grounding point.

For analysis, consider the above figure and assume that $E_3 = 10 V$, $R = 5\Omega$, $X_c = 5\Omega$, and $k = 0.15$. In this case, we have the magnitude of the neutral voltage at: $V_N = k \times E_3 = 0.15 \times 10 = 1.5$ and the magnitude of the neutral and zero-sequence voltages $|V_N + V_0|$ as:

$$V_0 = \frac{(1-k)E_3 + (1-k)E_3 + (1-k)E_3}{3} = \frac{3 \times 0.85 \times 10}{3} = 8.5 V$$

$$\Rightarrow V_N + V_0 = 8.5 + 1.5 = 10 V$$

$$\Rightarrow |V_N + V_0| = 10 V$$

$V_0 = ((1-k)E_3)$ Therefore, for faults at a fraction $k = 0.15$ from the neutral grounding point, we set the operating quantities as follows:

$$Pickup > \frac{|V_N|}{|V_N + V_0|} = \frac{1.5}{10} = 0.15$$

$$Supervision < |V_N + V_0| = 10 V$$

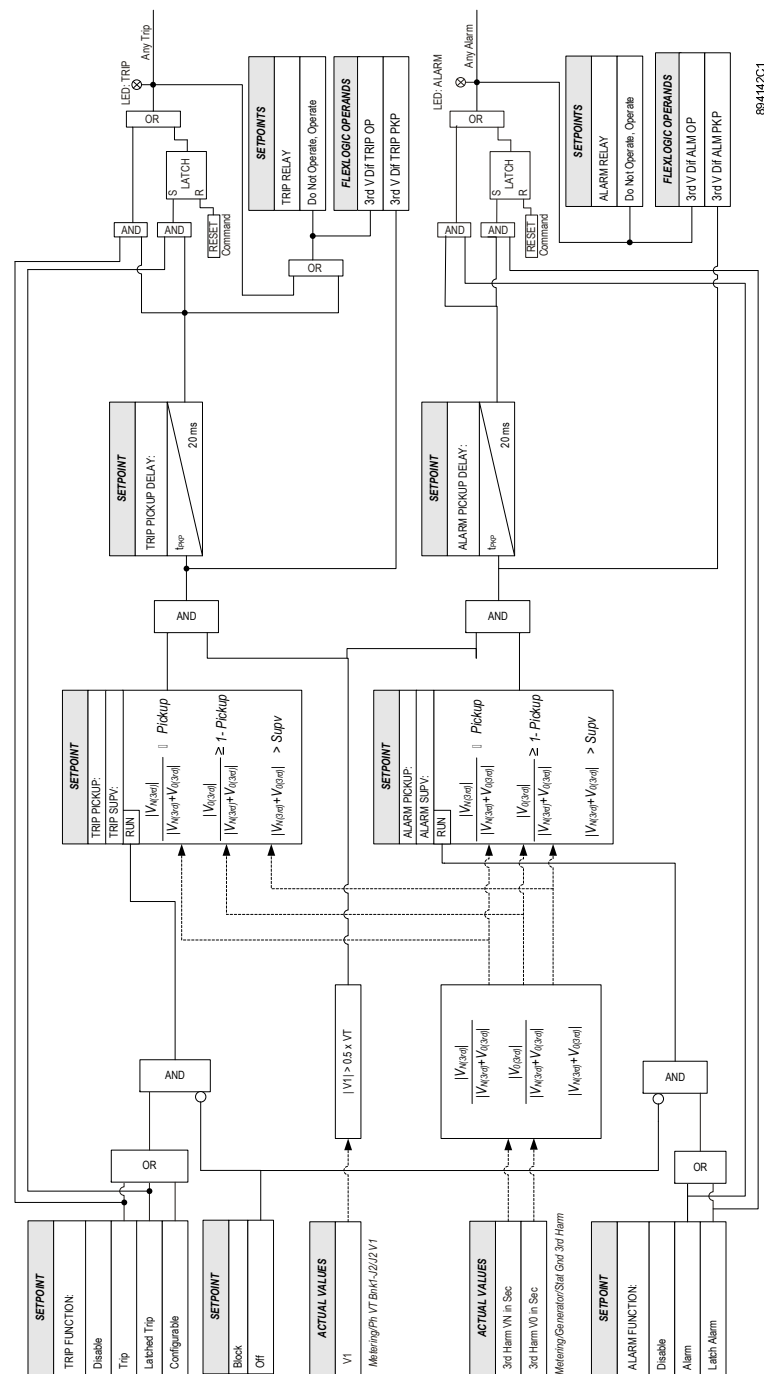


Figure 173: Third Harmonic Voltage Difference logic diagram

9.3.9 OFFLINE OVERCURRENT (50OFL)

The Offline Overcurrent feature is active only when the generator is in offline mode. In this case, it is easier to differentiate between system faults and machine faults. When neutral end CT bank measurements (I_a , I_b , I_c) are used, this element may be set to a much higher sensitivity than the differential element in order to detect high impedance phase faults. In the event of a low impedance fault, the differential elements still shutdown the generator quickly.

Note:

Since the breaker auxiliary contacts wired to the Breaker Status Input may not operate at exactly the same time as the main breaker contacts, the time delay should be coordinated with the difference of the operation times.

Path: **Setpoints > Protection > Group 1 > Generator > Offline Overcurrent**

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

SIGNAL INPUT

Range: CT Bank 1 - J1, CT Bank 2 - K1

Default: CT Bank 1 - J1

Note:

This setting is order code dependent. In the case of two CT cards, it is recommended that the CT wired in the neutral end is selected as input for this function.

PICKUP

Range: 0.05 to 1.00 x CT in steps of 0.01

Default: 0.05 x CT

Note:

If the unit auxiliary transformer is on the generator side of the breaker, the pickup level must be set greater than the unit auxiliary load.

PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 0.08 s

OUTPUT RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS:

Range: Enabled, Disabled

Default: Disabled

TARGETS:

Range: Self-reset, Latched, Disabled

Default: Self-reset

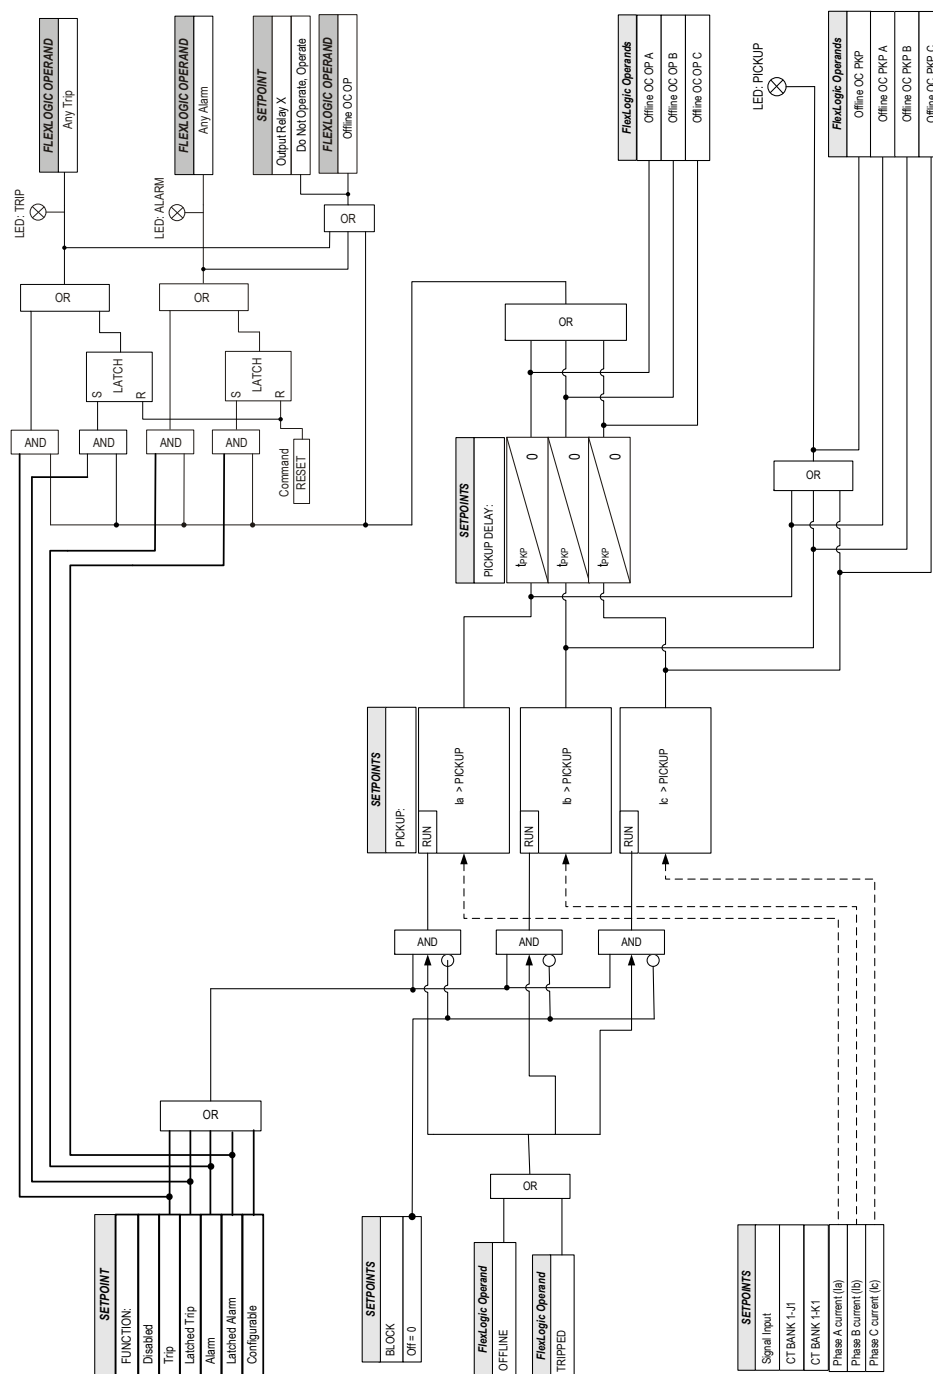


Figure 174: Offline Overcurrent Logic Diagram

9.3.10 OVERLOAD ALARM

The Overload Alarm is used to alarm abnormal load increases that may indicate problems with the process. An alarm is generated when the load current exceeds the Pickup setting for the time delay specified by the setting **Pickup Delay**. When the current has subsided, the alarm stays active for the time specified by the setting **Dropout Delay**.

Path: **Setpoints > Protection > Group 1 > Generator > Overload Alarm**

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

PICKUP

Range: 0.50 to 3.00 x FLA in steps of 0.01 x FLA

Default: 0.70 x FLA

PICKUP DELAY

Range: 0.00 to 180.00 s in steps of 0.01 s

Default: 1.00 s

DROPOUT DELAY

Range: 0.00 to 180.00 s in steps of 0.01 s

Default: 1.00 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

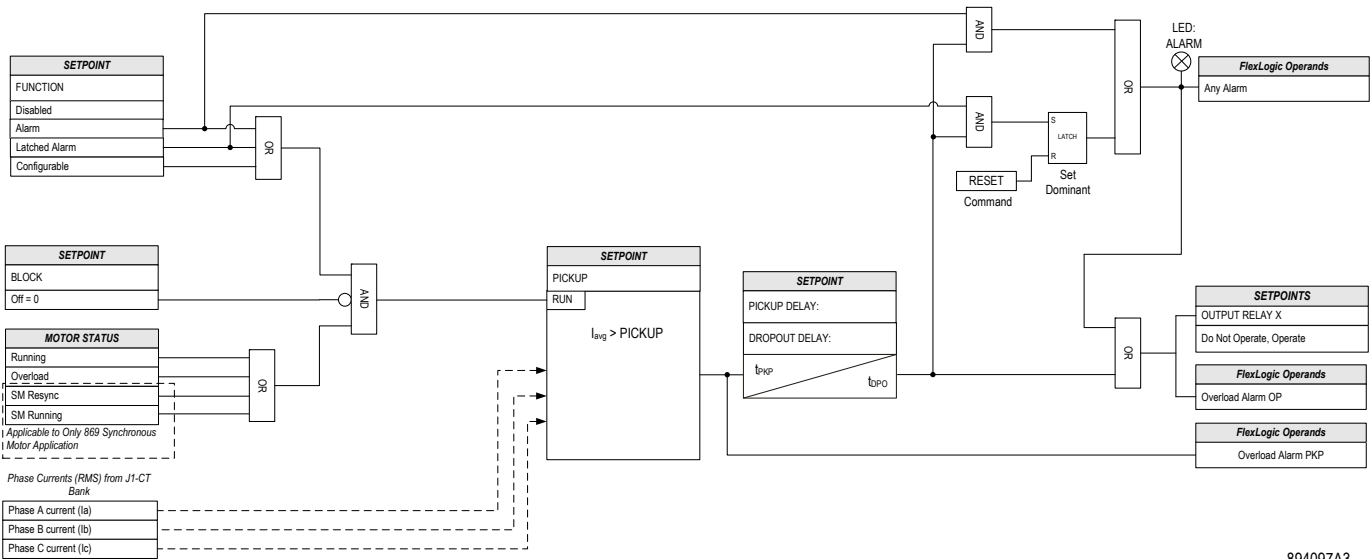


Figure 175: Overload Alarm logic diagram

894097A3

9.4 CURRENT ELEMENTS OVERVIEW

The 889 generator protection relay provides the following current protection elements:

- Phase time overcurrent (Phase TOC)
- Phase instantaneous overcurrent (Phase IOC)
- Phase directional overcurrent (Phase Directional OC)
- Neutral time overcurrent (Neutral TOC)
- Neutral instantaneous overcurrent (Neutral IOC)
- Neutral directional overcurrent (Neutral Directional OC)
- Ground time overcurrent (Ground TOC)
- Ground instantaneous overcurrent (Ground IOC)
- Ground directional overcurrent (Ground Directional OC)
- Sensitive ground time overcurrent (Sensitive Ground TOC)
- Sensitive ground instantaneous overcurrent (Sensitive Ground IOC)
- Sensitive ground directional overcurrent (Sens. Ground Directional OC)
- Restricted Ground Fault
- Negative sequence instantaneous overcurrent (Negative Sequence IOC)
- Negative sequence directional overcurrent (Negative Sequence Dir. OC)

The relay has six setpoint groups with phase, neutral, and ground elements per group. The programming of the time-current characteristics of these elements is identical in all cases and is only covered in this section. The required curve is established by programming a Pickup Current, Curve Shape, Curve Multiplier, and Reset Time. The Curve Shape can be either a standard shape or a user-defined shape programmed with the FlexCurve feature.

9.4.1 INVERSE TIME OVERCURRENT CURVES

The Inverse Time Overcurrent Curves used by the Time Overcurrent elements are the IEEE, IEC, GE Type IAC, ANSI, I^2t and I^4t standard curve shapes. This allows for simplified coordination with downstream devices.

If none of these curve shapes are adequate, FlexCurves may be used to customize the inverse time curve characteristics. The definite time curve is also an option that may be appropriate if only simple protection is required.

OVERCURRENT CURVE TYPES

IEEE	ANSI	IEC	GE TYPE IAC	OTHER
IEEE Extremely Inverse	ANSI Extremely Inverse	IEC Standard Inverse	IAC Extremely Inverse	I^2t
IEEE Very Inverse	ANSI Very Inverse	IEC Very Inverse	IAC Very Inverse	I^4t
IEEE Moderately Inverse	ANSI Normally Inverse	IEC Extremely Inverse	IAC Inverse	FlexCurves™ A, B, C and D
US Inverse	ANSI Moderately Inverse	UK Long Time Inverse	IAC Short Inverse	Recloser Curve
US Short Time Inverse		Rectifier		Definite Time
		FR Short Time Inverse		RI
		Standard Inverse (1.3s)		IDG
		BPN EDF		EPATR B

A time dial multiplier setting allows the selection of a multiple of the base curve shape (where the time dial multiplier = 1) with the curve shape setting. Unlike the electromechanical time dial equivalent, operate times are directly proportional to the time multiplier (**TD MULTIPLIER**) setting value. For example, all times for a multiplier of 10 are 10 times the multiplier 1 or base curve values. Setting the multiplier to zero results in an instantaneous response to all current levels above Pickup.

Time Overcurrent time calculations are made with an internal *energy capacity* memory variable. When this variable indicates that the energy capacity has reached 100%, a Time Overcurrent element will operate. If less than 100% energy capacity is accumulated in this variable and the current falls below the dropout threshold of 97 to 98% of the Pickup value, the variable must be reduced.

Two types of this resetting operation are available: *DT* and *Inverse*. The *Inverse* selection can be used where the relay must coordinate with electromechanical relays. The *DT* selection is intended for applications with other relays, such as most static relays, which set the energy capacity directly to zero or some fixed time delay when the current falls below the reset threshold or when inverse curve coordination is not available.

Note:

*In IEEE, ANSI, IAC, I2T, I4T User Curves, multiplier setting TDM value is provided by the **Time Dial** setting*

IEEE CURVES

The IEEE Time Overcurrent curve shapes conform to industry standards and the IEEE C37.112-1996 curve classifications for extremely, very, and moderately inverse. The IEEE curves are derived from the formula:

$$T = TDM \times \left[\frac{A}{\left(I / I_{pickup} \right)^p - 1} + B \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - \left(I / I_{pickup} \right)^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- A, B, p = constants
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)
- t_r = characteristic constant

IEEE INVERSE TIME CURVE CONSTANTS

IEEE CURVE SHAPE	A	B	P	t_r
IEEE Extremely Inverse	28.2	0.1217	2.000	29.1
IEEE Very Inverse	19.61	0.491	2.000	21.6
IEEE Moderately Inverse	0.0515	0.1140	0.02000	4.85
US Inverse	5.95	0.180	2.000	5.95
US Short Time Inverse	0.16758	0.11858	0.02000	2.261

IEEE CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
IEEE EXTREMELY INVERSE										

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.5	11.341	4.761	1.823	1.001	0.648	0.464	0.355	0.285	0.237	0.203
1.0	22.682	9.522	3.647	2.002	1.297	0.927	0.709	0.569	0.474	0.407
2.0	45.363	19.043	7.293	4.003	2.593	1.855	1.418	1.139	0.948	0.813
4.0	90.727	38.087	14.587	8.007	5.187	3.710	2.837	2.277	1.897	1.626
6.0	136.090	57.130	21.880	12.010	7.780	5.564	4.255	3.416	2.845	2.439
8.0	181.454	76.174	29.174	16.014	10.374	7.419	5.674	4.555	3.794	3.252
10.0	226.817	95.217	36.467	20.017	12.967	9.274	7.092	5.693	4.742	4.065
IEEE VERY INVERSE										
0.5	8.090	3.514	1.471	0.899	0.654	0.526	0.450	0.401	0.368	0.345
1.0	16.179	7.028	2.942	1.798	1.308	1.051	0.900	0.802	0.736	0.689
2.0	32.358	14.055	5.885	3.597	2.616	2.103	1.799	1.605	1.472	1.378
4.0	64.716	28.111	11.769	7.193	5.232	4.205	3.598	3.209	2.945	2.756
6.0	97.074	42.166	17.654	10.790	7.849	6.308	5.397	4.814	4.417	4.134
8.0	129.432	56.221	23.538	14.387	10.465	8.410	7.196	6.418	5.889	5.513
10.0	161.790	70.277	29.423	17.983	13.081	10.513	8.995	8.023	7.361	6.891
IEEE MODERATELY INVERSE										
0.5	3.220	1.902	1.216	0.973	0.844	0.763	0.706	0.663	0.630	0.603
1.0	6.439	3.803	2.432	1.946	1.688	1.526	1.412	1.327	1.260	1.207
2.0	12.878	7.606	4.864	3.892	3.377	3.051	2.823	2.653	2.521	2.414
4.0	25.756	15.213	9.729	7.783	6.753	6.102	5.647	5.307	5.041	4.827
6.0	38.634	22.819	14.593	11.675	10.130	9.153	8.470	7.960	7.562	7.241
8.0	51.512	30.426	19.458	15.567	13.507	12.204	11.294	10.614	10.083	9.654
10.0	64.390	38.032	24.322	19.458	16.883	15.255	14.117	13.267	12.604	12.068
US Inverse										
0.5	2.470	1.082	0.462	0.288	0.214	0.175	0.152	0.137	0.127	0.120
1.0	4.940	2.163	0.924	0.577	0.428	0.350	0.304	0.274	0.254	0.240
2.0	9.880	4.327	1.848	1.153	0.856	0.700	0.608	0.549	0.509	0.480
4.0	19.760	8.653	3.695	2.307	1.712	1.400	1.216	1.098	1.018	0.960
6.0	29.640	12.980	5.543	3.460	2.568	2.100	1.824	1.647	1.526	1.441
8.0	39.520	17.307	7.390	4.613	3.423	2.800	2.432	2.196	2.035	1.921
10.0	49.400	21.633	9.238	5.767	4.279	3.500	3.040	2.744	2.544	2.401
US Short Time Inverse										
0.5	10.350	6.062	3.831	3.040	2.621	2.356	2.171	2.032	1.924	1.837
1.0	20.700	12.123	7.662	6.079	5.241	4.712	4.341	4.065	3.849	3.674
2.0	41.400	24.247	15.324	12.159	10.483	9.423	8.683	8.130	7.698	7.349
4.0	82.800	48.493	30.648	24.317	20.966	18.847	17.365	16.259	15.395	14.698
6.0	124.200	72.740	45.972	36.476	31.448	28.270	26.048	24.389	23.093	22.046
8.0	165.600	96.987	61.296	48.635	41.931	37.694	34.730	32.519	30.791	29.395
10.0	207.001	121.233	76.620	60.793	52.414	47.117	43.413	40.648	38.489	36.744

ANSI CURVES

The ANSI time overcurrent curve shapes conform to industry standards and the ANSI C37.90 curve classifications for extremely, very, and moderately inverse. The ANSI curves are derived from the following formulae:

$$T = TDM \times \left[A + \frac{B}{(I/I_{pickup}) - C} + \frac{D}{((I/I_{pickup}) - C)^2} + \frac{E}{((I/I_{pickup}) - C)^3} \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - (I/I_{pickup})^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- A to E = constants
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)
- t_r = characteristic constant

ANSI INVERSE TIME CURVE CONSTANTS

ANSI CURVE SHAPE	A	B	C	D	E	t_r
ANSI Extremely Inverse	0.0399	0.2294	0.5000	3.0094	0.7222	5.67
ANSI Very Inverse	0.0615	0.7989	0.3400	-0.2840	4.0505	3.88
ANSI Normally Inverse	0.0274	2.2614	0.3000	-4.1899	9.1272	5.95
ANSI Moderately Inverse	0.1735	0.6791	0.8000	-0.0800	0.1271	1.08

ANSI CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
ANSI EXTREMELY INVERSE										
0.5	2.000	0.872	0.330	0.184	0.124	0.093	0.075	0.063	0.055	0.049
1.0	4.001	1.744	0.659	0.368	0.247	0.185	0.149	0.126	0.110	0.098
2.0	8.002	3.489	1.319	0.736	0.495	0.371	0.298	0.251	0.219	0.196
4.0	16.004	6.977	2.638	1.472	0.990	0.742	0.596	0.503	0.439	0.393
6.0	24.005	10.466	3.956	2.208	1.484	1.113	0.894	0.754	0.658	0.589
8.0	32.007	13.955	5.275	2.944	1.979	1.483	1.192	1.006	0.878	0.786
10.0	40.009	17.443	6.594	3.680	2.474	1.854	1.491	1.257	1.097	0.982
ANSI VERY INVERSE										
0.5	1.567	0.663	0.268	0.171	0.130	0.108	0.094	0.085	0.078	0.073
1.0	3.134	1.325	0.537	0.341	0.260	0.216	0.189	0.170	0.156	0.146
2.0	6.268	2.650	1.074	0.682	0.520	0.432	0.378	0.340	0.312	0.291
4.0	12.537	5.301	2.148	1.365	1.040	0.864	0.755	0.680	0.625	0.583

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
6.0	18.805	7.951	3.221	2.047	1.559	1.297	1.133	1.020	0.937	0.874
8.0	25.073	10.602	4.295	2.730	2.079	1.729	1.510	1.360	1.250	1.165
10.0	31.341	13.252	5.369	3.412	2.599	2.161	1.888	1.700	1.562	1.457
ANSI NORMALLY INVERSE										
0.5	2.142	0.883	0.377	0.256	0.203	0.172	0.151	0.135	0.123	0.113
1.0	4.284	1.766	0.754	0.513	0.407	0.344	0.302	0.270	0.246	0.226
2.0	8.568	3.531	1.508	1.025	0.814	0.689	0.604	0.541	0.492	0.452
4.0	17.137	7.062	3.016	2.051	1.627	1.378	1.208	1.082	0.983	0.904
6.0	25.705	10.594	4.524	3.076	2.441	2.067	1.812	1.622	1.475	1.356
8.0	34.274	14.125	6.031	4.102	3.254	2.756	2.415	2.163	1.967	1.808
10.0	42.842	17.656	7.539	5.127	4.068	3.445	3.019	2.704	2.458	2.260
ANSI MODERATELY INVERSE										
0.5	0.675	0.379	0.239	0.191	0.166	0.151	0.141	0.133	0.128	0.123
1.0	1.351	0.757	0.478	0.382	0.332	0.302	0.281	0.267	0.255	0.247
2.0	2.702	1.515	0.955	0.764	0.665	0.604	0.563	0.533	0.511	0.493
4.0	5.404	3.030	1.910	1.527	1.329	1.208	1.126	1.066	1.021	0.986
6.0	8.106	4.544	2.866	2.291	1.994	1.812	1.689	1.600	1.532	1.479
8.0	10.807	6.059	3.821	3.054	2.659	2.416	2.252	2.133	2.043	1.972
10.0	13.509	7.574	4.776	3.818	3.324	3.020	2.815	2.666	2.554	2.465

IEC CURVES

For European applications, the relay offers three standard curves defined in IEC 255-4 and British standard BS142. These are defined as IEC Curve A, IEC Curve B, and IEC Curve C. The formula for these curves is:

$$T = TDM \times \left[\frac{K}{\left(I / I_{pickup} \right)^E - 1} \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - \left(I / I_{pickup} \right)^2} \right]$$

BPN EDF Curve Operate Equation

$$T = TDM \times \left[\frac{K}{\left(I / I_{pickup} \right)^E - 1} + L \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting

- K, E = constants
- t_r = characteristic constant
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

IEC (BS) INVERSE TIME CURVE CONSTANTS

IEC (BS) CURVE SHAPE	K	E	t_r
IEC Curve A (BS142)	0.140	0.020	9.7
IEC Curve B (BS142)	13.500	1.000	43.2
IEC Curve C (BS142)	80.000	2.000	58.2
IEC Short Inverse	0.050	0.040	0.500
Long Time Inverse	120	1	-
Rectifier	45900	5.6	-
Standard Inverse (1.3s)	0.0607	0.02	3.55

IEC (BS) CURVE SHAPE	K	E	L
BPN EDF	1000	2	0.655

Note:

When using Long Time Inverse, Rectifier, IEC Short Time Inverse, BPN EDF curves for the operate characteristic, DT (Definite Time) is always used for the Reset characteristic

IEC CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
IEC CURVE A										
0.05	0.860	0.501	0.315	0.249	0.214	0.192	0.176	0.165	0.156	0.149
0.10	1.719	1.003	0.630	0.498	0.428	0.384	0.353	0.330	0.312	0.297
0.20	3.439	2.006	1.260	0.996	0.856	0.767	0.706	0.659	0.623	0.594
0.40	6.878	4.012	2.521	1.992	1.712	1.535	1.411	1.319	1.247	1.188
0.60	10.317	6.017	3.781	2.988	2.568	2.302	2.117	1.978	1.870	1.782
0.80	13.755	8.023	5.042	3.984	3.424	3.070	2.822	2.637	2.493	2.376
1.00	17.194	10.029	6.302	4.980	4.280	3.837	3.528	3.297	3.116	2.971
IEC CURVE B										
0.05	1.350	0.675	0.338	0.225	0.169	0.135	0.113	0.096	0.084	0.075
0.10	2.700	1.350	0.675	0.450	0.338	0.270	0.225	0.193	0.169	0.150
0.20	5.400	2.700	1.350	0.900	0.675	0.540	0.450	0.386	0.338	0.300
0.40	10.800	5.400	2.700	1.800	1.350	1.080	0.900	0.771	0.675	0.600
0.60	16.200	8.100	4.050	2.700	2.025	1.620	1.350	1.157	1.013	0.900
0.80	21.600	10.800	5.400	3.600	2.700	2.160	1.800	1.543	1.350	1.200
1.00	27.000	13.500	6.750	4.500	3.375	2.700	2.250	1.929	1.688	1.500
IEC CURVE C										

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.05	3.200	1.333	0.500	0.267	0.167	0.114	0.083	0.063	0.050	0.040
0.10	6.400	2.667	1.000	0.533	0.333	0.229	0.167	0.127	0.100	0.081
0.20	12.800	5.333	2.000	1.067	0.667	0.457	0.333	0.254	0.200	0.162
0.40	25.600	10.667	4.000	2.133	1.333	0.914	0.667	0.508	0.400	0.323
0.60	38.400	16.000	6.000	3.200	2.000	1.371	1.000	0.762	0.600	0.485
0.80	51.200	21.333	8.000	4.267	2.667	1.829	1.333	1.016	0.800	0.646
1.00	64.000	26.667	10.000	5.333	3.333	2.286	1.667	1.270	1.000	0.808
IEC SHORT INVERSE										
0.05	0.153	0.089	0.056	0.044	0.038	0.034	0.031	0.029	0.027	0.026
0.10	0.306	0.178	0.111	0.088	0.075	0.067	0.062	0.058	0.054	0.052
0.20	0.612	0.356	0.223	0.175	0.150	0.135	0.124	0.115	0.109	0.104
0.40	1.223	0.711	0.445	0.351	0.301	0.269	0.247	0.231	0.218	0.207
0.60	1.835	1.067	0.668	0.526	0.451	0.404	0.371	0.346	0.327	0.311
0.80	2.446	1.423	0.890	0.702	0.602	0.538	0.494	0.461	0.435	0.415
1.00	3.058	1.778	1.113	0.877	0.752	0.673	0.618	0.576	0.544	0.518
Rectifier										
0.05	264.241	48.313	4.896	0.976	0.280	0.101	0.042	0.020	0.010	0.006
0.10	528.482	96.626	9.792	1.952	0.559	0.201	0.085	0.040	0.021	0.012
0.20	1056.964	193.251	19.583	3.904	1.119	0.403	0.170	0.080	0.042	0.023
0.40	2113.928	386.502	39.167	7.808	2.237	0.806	0.340	0.161	0.083	0.046
0.60	3170.891	579.754	58.750	11.712	3.356	1.209	0.510	0.241	0.125	0.069
0.80	4227.855	773.005	78.334	15.615	4.474	1.612	0.680	0.322	0.166	0.092
1.00	5284.819	966.256	97.917	19.519	5.593	2.015	0.850	0.402	0.208	0.115
Standard Inverse (1.3s)										
0.05	0.373	0.217	0.137	0.108	0.093	0.083	0.076	0.071	0.068	0.064
0.10	0.745	0.435	0.273	0.216	0.186	0.166	0.153	0.143	0.135	0.129
0.20	1.491	0.870	0.546	0.432	0.371	0.333	0.306	0.286	0.270	0.258
0.40	2.982	1.739	1.093	0.864	0.742	0.665	0.612	0.572	0.540	0.515
0.60	4.473	2.609	1.639	1.295	1.113	0.998	0.918	0.858	0.811	0.773
0.80	5.964	3.479	2.186	1.727	1.484	1.331	1.224	1.144	1.081	1.030
1.00	7.455	4.348	2.732	2.159	1.856	1.664	1.530	1.429	1.351	1.288

IAC CURVES

The curves for the General Electric type IAC relay family are derived from the formula:

$$T = TDM \times \left[A + \frac{B}{\left(\frac{I}{I_{pickup}} \right) - C} + \frac{D}{\left(\left(\frac{I}{I_{pickup}} \right) - C \right)^2} + \frac{E}{\left(\left(\frac{I}{I_{pickup}} \right) - C \right)^3} \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - \left(\frac{I}{I_{pickup}} \right)^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting

- I = input current
- I_{pickup} = Pickup Current setting
- A to E = constants
- t_r = characteristic constant
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

GE TYPE IAC INVERSE TIME CURVE CONSTANTS

IAC CURVE SHAPE	A	B	C	D	E	t_r
IAC Extremely Inverse	0.0040	0.6379	0.6200	1.7872	0.2461	6.008
IAC Very Inverse	0.0900	0.7965	0.1000	-1.2885	7.9586	4.678
IAC Inverse	0.2078	0.8630	0.8000	-0.4180	0.1947	0.990
IAC Short Inverse	0.0428	0.0609	0.6200	-0.0010	0.0221	0.222

IAC CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
IAC EXTREMELY INVERSE										
0.5	1.699	0.749	0.303	0.178	0.123	0.093	0.074	0.062	0.053	0.046
1.0	3.398	1.498	0.606	0.356	0.246	0.186	0.149	0.124	0.106	0.093
2.0	6.796	2.997	1.212	0.711	0.491	0.372	0.298	0.248	0.212	0.185
4.0	13.591	5.993	2.423	1.422	0.983	0.744	0.595	0.495	0.424	0.370
6.0	20.387	8.990	3.635	2.133	1.474	1.115	0.893	0.743	0.636	0.556
8.0	27.183	11.987	4.846	2.844	1.966	1.487	1.191	0.991	0.848	0.741
10.0	33.979	14.983	6.058	3.555	2.457	1.859	1.488	1.239	1.060	0.926
IAC VERY INVERSE										
0.5	1.451	0.656	0.269	0.172	0.133	0.113	0.101	0.093	0.087	0.083
1.0	2.901	1.312	0.537	0.343	0.266	0.227	0.202	0.186	0.174	0.165
2.0	5.802	2.624	1.075	0.687	0.533	0.453	0.405	0.372	0.349	0.331
4.0	11.605	5.248	2.150	1.374	1.065	0.906	0.810	0.745	0.698	0.662
6.0	17.407	7.872	3.225	2.061	1.598	1.359	1.215	1.117	1.046	0.992
8.0	23.209	10.497	4.299	2.747	2.131	1.813	1.620	1.490	1.395	1.323
10.0	29.012	13.121	5.374	3.434	2.663	2.266	2.025	1.862	1.744	1.654
IAC INVERSE										
0.5	0.578	0.375	0.266	0.221	0.196	0.180	0.618	0.160	0.154	0.148
1.0	1.155	0.749	0.532	0.443	0.392	0.360	0.337	0.320	0.307	0.297
2.0	2.310	1.499	1.064	0.885	0.784	0.719	0.674	0.640	0.614	0.594
4.0	4.621	2.997	2.128	1.770	1.569	1.439	1.348	1.280	1.229	1.188
6.0	6.931	4.496	3.192	2.656	2.353	2.158	2.022	1.921	1.843	1.781
8.0	9.242	5.995	4.256	3.541	3.138	2.878	2.695	2.561	2.457	2.375
10.0	11.552	7.494	5.320	4.426	3.922	3.597	3.369	3.201	3.072	2.969
IAC SHORT INVERSE										

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.5	0.072	0.047	0.035	0.031	0.028	0.027	0.026	0.026	0.025	0.025
1.0	0.143	0.095	0.070	0.061	0.057	0.054	0.052	0.051	0.050	0.049
2.0	0.286	0.190	0.140	0.123	0.114	0.108	0.105	0.102	0.100	0.099
4.0	0.573	0.379	0.279	0.245	0.228	0.217	0.210	0.204	0.200	0.197
6.0	0.859	0.569	0.419	0.368	0.341	0.325	0.314	0.307	0.301	0.296
8.0	1.145	0.759	0.559	0.490	0.455	0.434	0.419	0.409	0.401	0.394
10.0	1.431	0.948	0.699	0.613	0.569	0.542	0.524	0.511	0.501	0.493

I²T CURVES

The curves for the I²t are derived from the formula:

$$T = TDM \times \left[\frac{100}{(I/I_{pickup})^2} \right], \quad T_{RESET} = TDM \times \left[\frac{100}{(I/I_{pickup})^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

I²T CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.05	2.22	1.25	0.55	0.31	0.20	0.14	0.10	0.08	0.06	0.05
0.10	4.44	2.50	1.11	0.63	0.40	0.28	0.20	0.16	0.12	0.10
1.00	44.44	25.00	11.11	6.25	4.00	2.78	2.04	1.56	1.23	1.00
10.00	444.44	250.00	111.11	62.50	40.00	27.78	20.41	15.63	123.5	10.00
100.00	4444.44	2500.00	1111.1	625.00	400.00	277.78	204.08	156.25	123.46	100.00
600.00	26666.7	15000.0	6666.7	3750.0	2400.0	1666.7	1224.5	937.50	740.74	600.00

I⁴T CURVES

The curves for the I⁴t are derived from the formula:

$$T = TDM \times \left[\frac{100}{(I/I_{pickup})^4} \right], \quad T_{RESET} = TDM \times \left[\frac{100}{(I/I_{pickup})^4} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

I4T CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.05	0.9876	0.3125	0.0617	0.0198	0.0008	0.0038	0.0021	0.0012	0.0007	0.0005
0.10	1.9753	0.6250	0.1235	0.0391	0.0160	0.0077	0.0042	0.0024	0.0015	0.0010
1.00	19.753	6.250	1.235	0.391	0.160	0.077	0.042	0.024	0.015	0.010
10.00	197.531	62.500	12.346	3.906	1.600	0.772	0.416	0.244	0.152	0.100
100.00	1975.31	625.00	123.46	39.06	16.00	7.72	4.16	2.44	1.52	1.00
600.00	11851.9	3750.0	740.7	234.4	96.00	46.3	25.0	14.65	9.14	6.00

RI (RAPID INVERSE) CHARACTERISTIC

The RI operate curve is represented by the following equation

$$T = k(RI) * \left[\frac{1}{0.339 - \frac{0.236}{\left(I/I_{pickup}\right)}} \right]$$

where:

- T is the operating time
- k(RI) is the Time Multiplier setting.
- I = input current,
- I_{pickup} = Pickup Current setting

Note:

When using RI for the Operate characteristic, DT (Definite Time) is always used for the Reset characteristic.

RI CURVE TRIP TIMES (IN SECONDS)

MULTIPLIER (k(RI))	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.1	0.550	0.452	0.384	0.357	0.343	0.334	0.328	0.323	0.320	0.317
0.2	1.101	0.905	0.768	0.714	0.685	0.667	0.655	0.646	0.639	0.634

MULTIPLIER (k(RI))	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.4	2.202	1.810	1.536	1.429	1.371	1.335	1.310	1.292	1.279	1.268
0.6	3.303	2.715	2.305	2.143	2.056	2.002	1.965	1.939	1.918	1.902
0.8	4.404	3.620	3.073	2.857	2.742	2.670	2.620	2.585	2.558	2.536
1.0	5.505	4.525	3.841	3.571	3.427	3.337	3.276	3.231	3.197	3.171

IDG CURVE

The IDG curve is commonly used for time delayed neutral/ground fault protection in the Swedish market. The IDG curve is represented by the following equation:

$$T = 5.8 - 1.35 \times \ln (I/I_{pickup})$$

where:

- T is the operating time
- I = input current,
- I_{pickup} = Pickup Current setting.

The **IDG Is** setting is set as a multiple of the Ground/Neutral overcurrent setting I_{pickup} for the IDG curve. It determines the actual current threshold at which the element starts.

The **IDG Time** setting sets the minimum operate time at high levels of fault current for IDG curves.

Note:

When using IDG for the Operate characteristic, DT (Definite Time) with a value of zero is recommended to use for the Reset characteristic.

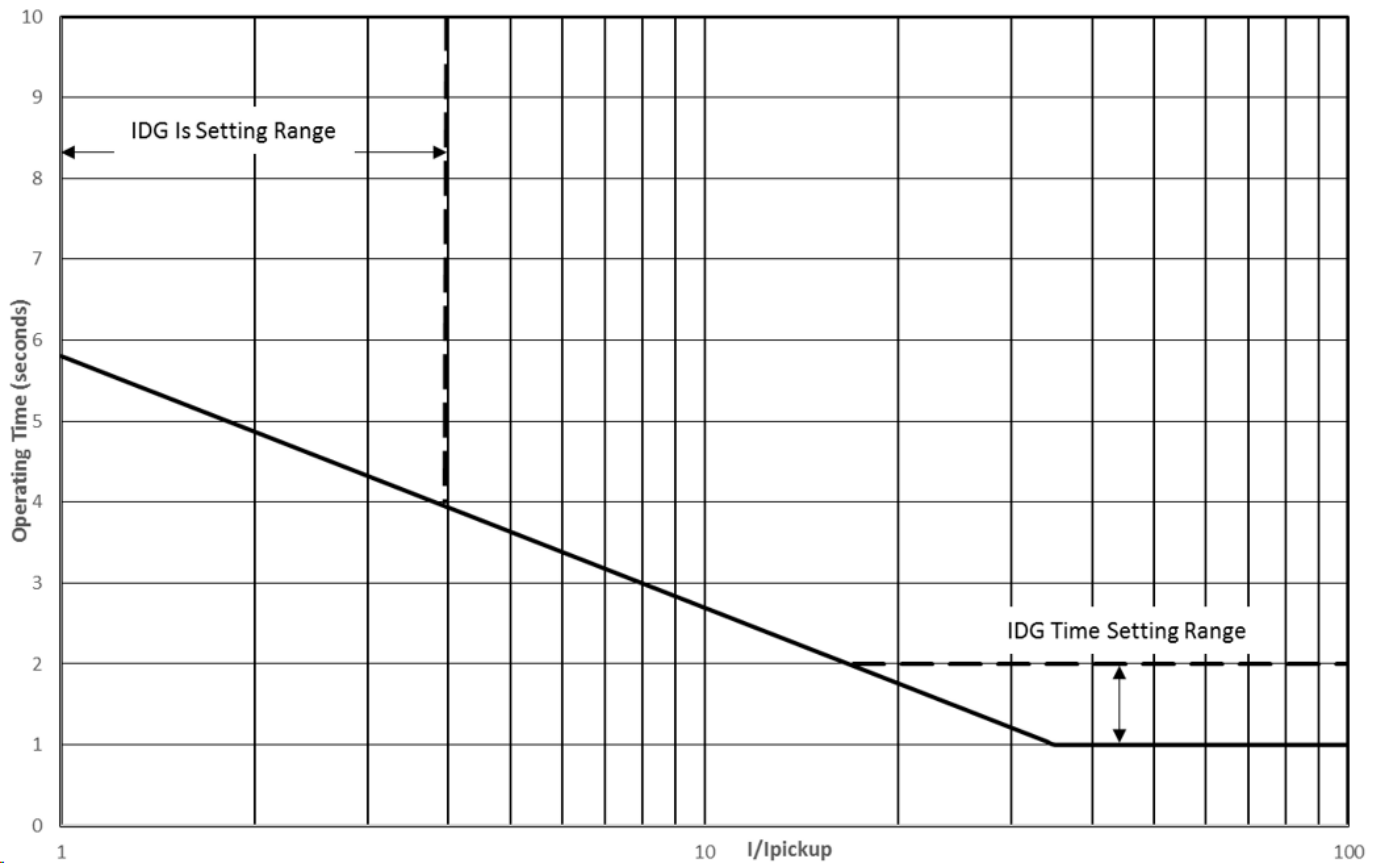


Figure 176: IDG Characteristic

EPATR B CURVE

The EPATR B curve is commonly used for Sensitive Earth Fault protection. It is based on primary current settings, employing a SEF CT ratio of 100:1 A. The EPATR_B curve has 3 separate segments defined in terms of the primary current. It is defined as follows:

Segment	Primary Current Range Based on 100A: 1A CT Ratio	Current/Time Characteristic
1	ISEF = 0.5A to 6.0A	$t = 432 \times \text{TMS} / \text{ISEF}^{0.655} \text{ sec}$
2	ISEF = 6.0A to 200A	$t = 800 \times \text{TMS} / \text{ISEF} \text{ sec}$
3	ISEF > 200A	$t = 4 \times \text{TMS} \text{ sec}$

where TMS (time multiplier setting) is 0.025 - 1.2 in steps of 0.025.

Note:

When using EPATR B curve, DT (Definite Time) is always used for the Reset characteristic.

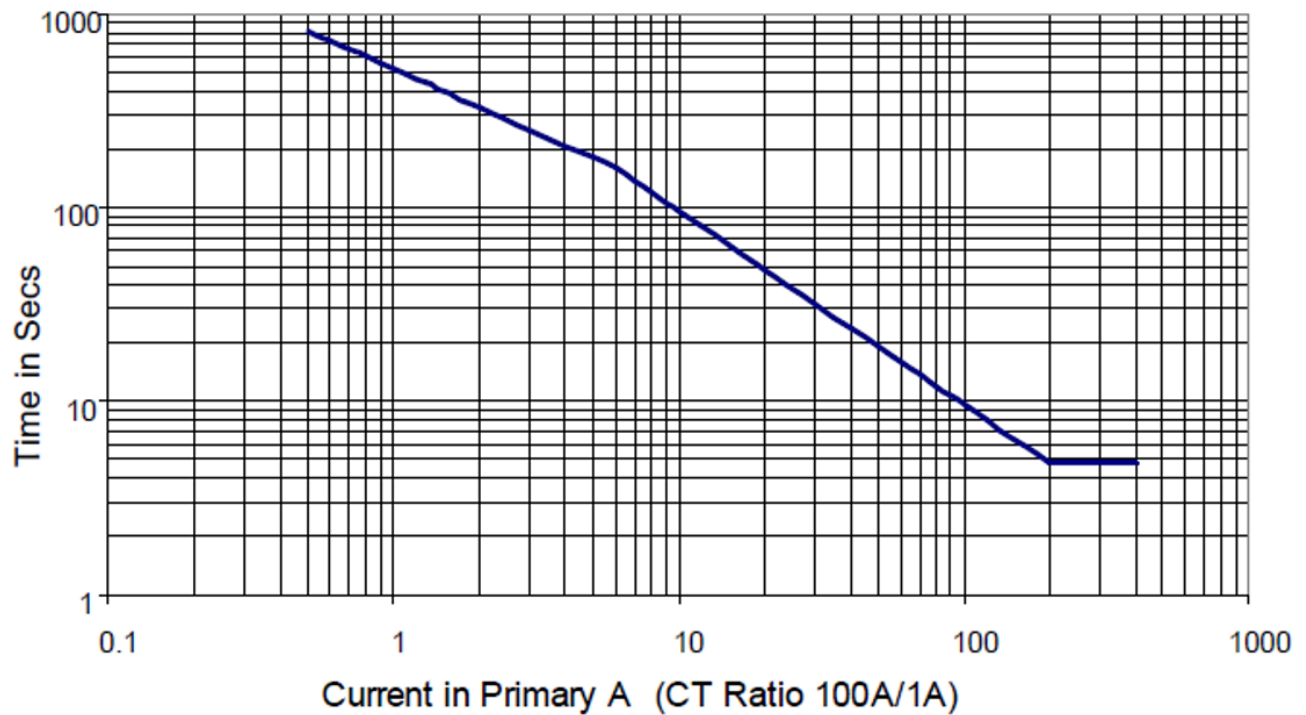


Figure 177: EPATR B characteristic shown for TMS = 1.0

FLEXCURVES

The custom FlexCurves are described in detail in the FlexCurves section of this chapter. The curve shapes for the FlexCurves are derived from the formulae:

$$T = TDM \times [\text{FlexCurveTime at } (I/I_{\text{pickup}})] \text{ when } (I/I_{\text{pickup}}) \geq 1.00$$

$$T_{\text{RESET}} = TDM \times [\text{FlexCurveTime at } (I/I_{\text{pickup}})] \text{ when } (I/I_{\text{pickup}}) \leq 0.98$$

Where:

- T = operate time (in seconds),
- TDM = Multiplier setting,
- I = input current,
- I_{pickup} = Pickup Current setting,
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is timed)

DEFINITE TIME CURVES

The Definite Time curve shape operates as soon as the pickup level is exceeded for a specified period of time. The base Definite Time curve delay is in seconds. The curve multiplier of 0.05 to 600 makes this delay adjustable from 50 to 600000 milliseconds.

$$T = TDM \text{ in seconds, when } I > I_{\text{pickup}}$$

$$T_{\text{reset}} = TDM \text{ in seconds}$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting

- I = input current
- I_{pickup} = Pickup Current setting
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

Note:

Note: In Definite Time Curves, Multiplier setting value is provided by 'Time Delay' setting.

9.4.2 PHASE TIME OVERCURRENT PROTECTION (51P)

You can configure the TOC element as follows:

- Apply any of the IEEE, ANSI, IEC, and IAC standard inverse curves
- Apply any of the four FlexCurves
- Set it to definite time.

The selection of Time Dial Multiplier and minimum Pickup helps to fine tune the protection for accurate upstream/downstream coordination and during certain conditions, such as manual closing and maintenance.

The settings of this function are applied to each of the three phases to produce *Pickup* and *Trip* flags per phase. There is no intentional dead band when the current is above the Pickup level. However the Pickup accuracy is guaranteed within the current input accuracy of 1.5% above the set pickup value. The time overcurrent (TOC) Pickup flag is asserted, when the current on any phase is above the pickup value. The TOC Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the current. The element drops from Pickup without operating if the measured current drops below 97 to 98% of the Pickup value before the time for operation is reached. When Definite Time is selected, the time for TOC operation is defined only by the **TDM** setting. When in Definite Time mode, **TDM** sets the time to operate in seconds.

Path: Setpoints > Protection > Group 1(6) > Current > Phase TOC > Phase TOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Latched Trip, Configurable

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

INPUT

Range: Phasor, RMS

Default: Phasor

This selection defines the method of processing of the current signal. It could be Root Mean Square (RMS) or Fundamental Phasor Magnitude.

PICKUP

Range: 0.020 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

CURVE

Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I²t, I⁴t, Rapid Inverse, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE Mod Inverse

This setting sets the shape of the selected over-current inverse curve. If none of the standard curve shapes is appropriate, a FlexCurve can be created. Refer to the User curve and the FlexCurve setup for more details on their configurations and usage.

TDM

Range: 0.01 to 28800.00 in steps of 0.01

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Curve A/B/C, IEEE M/V/E Inverse, US Inverse, US Short Time, ANSI E/V/N/M Inverse, IAC E/V/N/S Inverse, I²T and I⁴T curves. For example, if an IEEE Extremely Inverse curve is selected with TDM = 2, and the fault current is 5 times bigger than the PKP level, the operation of the element will not occur before 2.59 s have elapsed after Pickup.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s), and BPN EDF curves.

K (RI)

Range: 0.10 to 10.00 in steps of 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This k(RI) setting can be made visible from setting management, only when the **Curve** setting is selected as *Rapid Inverse*.

TIME DELAY

Range: 0.000 s to 28800.000 s in steps of 0.001 s

Default: 1.000

This setting defines the time delay for operation. This Time Delay setting can be made visible from setting management, only when the **Curve** setting is selected as Definite Time.

MINIMUM TIME

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting sets a minimum operating time for the Phase TOC element when Minimum Time setting is selected with a value different from 0, the Phase TOC element minimum operating time will be fixed by this setting, ensuring the operating time of the element never falls below this setting. The minimum operating time selected will be the maximum value between the curve value and the Minimum Time setting, whichever is greater.

Note: Minimum Time setting will be visible when any curves are selected under Curve setting (all curves but DT selection).

DT ADDER

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the **IDMT Operate** characteristic. The **DT Adder** setting will be visible for when any IDMT curves are selected under the **Curve** setting.

RESET

Range: DT, Inverse

Default: DT

Selection of a Definite Time (DT) or Inverse reset time is provided using this setting.

If Definite Time (DT) reset is selected, the Phase TOC element will reset after a time delay provided by the **Reset Time** setting. If Inverse reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

Note: When using IEC Short Inverse, Long Time Inverse, BPN EDF, Rectifier, Rapid Inverse curves for the Operate characteristic, Definite Time is used by default as Reset characteristic.

RESET TIME

Range: 0.000 to 28800.000 in steps of 0.001

Default: 0.000

This setting provides selection for dropout time delay used to delay the dropout of the detection of the overcurrent condition.

This can be made visible from setting management when the **Reset** setting is selected as DT or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, and Rapid Inverse curves.

DIRECTION

Range: Disabled, Forward (Ph Dir OCx FWD), Reverse (Ph Dir OCx REV)

Default: Disabled

This setting determines the direction of Phase TOC element.

V DEP OC

Range: Disabled, VCO, VRO

Default: Disabled

V Dep OC (Voltage Dependent Overcurrent) replaces the legacy Voltage Restrained Overcurrent (VRO) function by adding Voltage Controlled Overcurrent functionality to it. This setting can now select Disabled, VCO or VRO. When enabled, this feature controls the Pickup value of each individual Phase Time Overcurrent element in a fixed relationship with its corresponding phase input voltage.

An overcurrent protection scheme is co-ordinated throughout a system such that cascaded operation is achieved. This means that if for some reason a downstream circuit breaker fails to trip for a fault condition, the next upstream circuit breaker should trip.

If the current seen by a local device for a remote fault condition is below its overcurrent setting, a voltage dependent element may be used to increase the sensitivity to such faults. As a reduction in system voltage will occur during overcurrent conditions, this may be used to enhance the sensitivity of the overcurrent protection by reducing the pick-up level.

If cold load pickup, autoreclosing, or manual close blocking features are controlling the protection, the Phase TOC Voltage Restraint does not work, even when enabled.

In Voltage Controlled Operation (VCO) mode of operation, the under-voltage detector is used to produce a step change in the current setting, when the voltage falls below the voltage setting $V \text{ Dep OC } V < 1$. The operating characteristic of the current setting when voltage-controlled mode is selected is as follows:

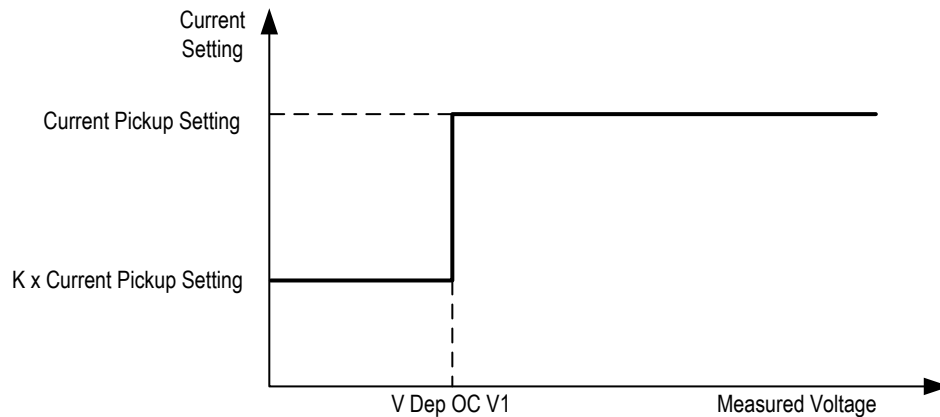


Figure 178: VCO operation

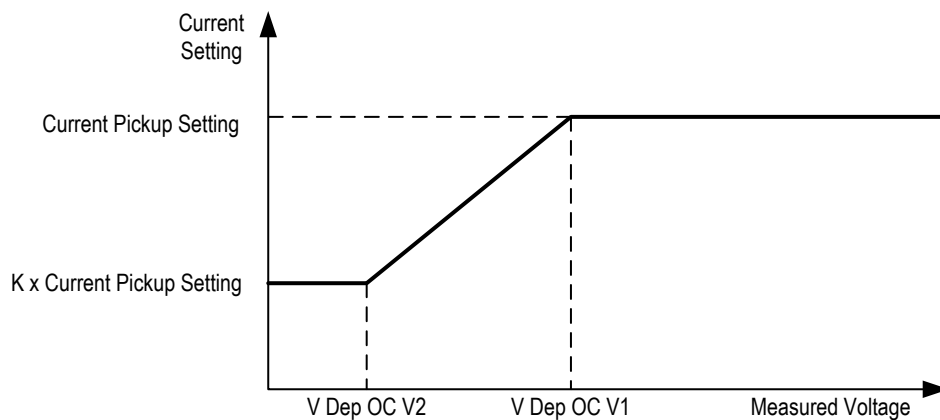


Figure 179: VRO operation

VT INPUT

Range: Dependent upon the order code

Default: Ph VT Bank 1-J2

This setting provides the selection for the voltage input bank, when **V Dep OC** is enabled.

V Dep OC V1

Range: 0.01 to 1.20 x VT in steps of 0.01 x VT

Default: 0.72 x VT

This setting sets the voltage V1 threshold at which the current setting of the overcurrent stage becomes reduced. This is on a per phase basis.

V Dep OC k

Range: 0.10 to 1.00 in steps of 0.05

Default: 0.25

This setting determines the Overcurrent multiplier factor used to reduce the pick-up overcurrent setting.

V Dep OC V2

Range: 0.01 to 1.2 x VT in steps of 0.01 x VT

Default: 0.54 x VT

This setting sets the voltage V2 threshold at which the current setting of the overcurrent stage becomes reduced. This is on a per phase basis.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

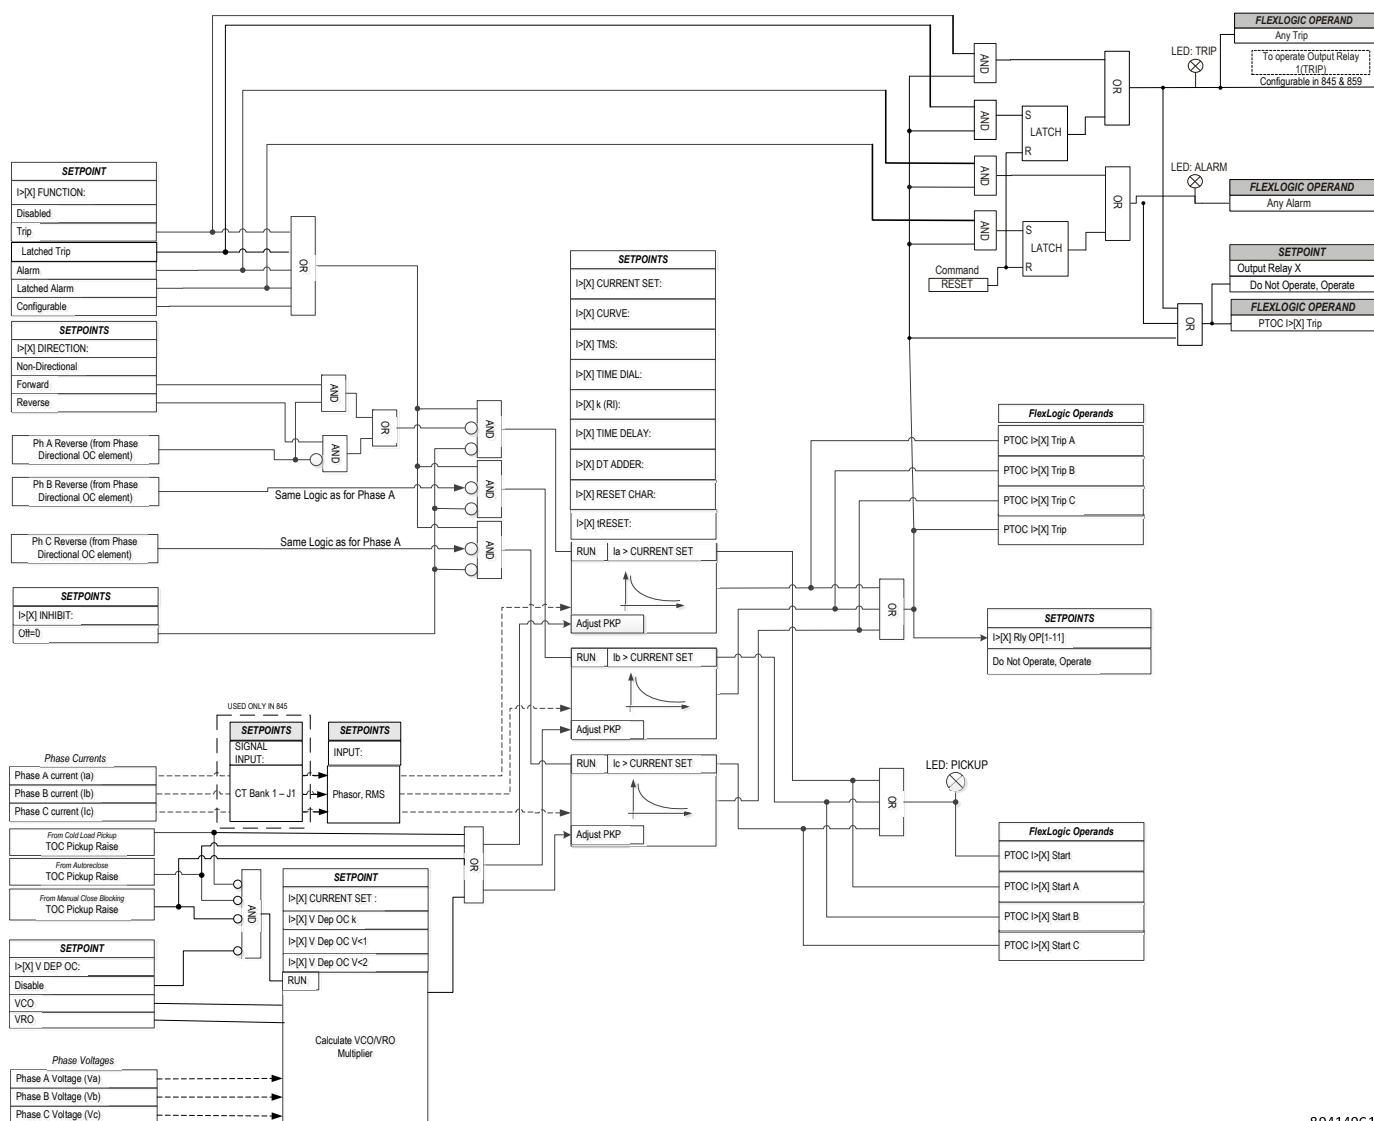

894149C1

Figure 180: Phase Time Overcurrent Protection logic diagram

9.4.3 PHASE INSTANTANEOUS OVERCURRENT PROTECTION (50P)

The PIOC protection consists of three identical instantaneous overcurrent elements, one for each phase. All three have identical characteristics. The settings of this function are applied to each of the three phases to produce *Pickup* and *Trip* flags per phase. There is no intentional dead band when the current is above the Pickup level. However the Pickup accuracy is guaranteed within the current input accuracy of 3% above the set pickup value. The IOC Pickup flag is asserted, when the current of any phase is above the pickup value. The IOC Operate flag is asserted if the element stays picked up for the time defined in **PH IOC PKP DELAY**. The element drops from Pickup without operating if the measured current drops below 97-98% of the Pickup value before the time for operation is reached.

Path: Setpoints > Protection > Group1(6) > Current > Phase IOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name.**

INPUT

Range: Phasor, RMS

Default: Phasor

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

DIRECTION

Range: Disabled, Forward (Ph Dir OCx FWD), Reverse (Ph Dir OCx REV)

Default: Disabled

PICKUP DELAY

Range: 0.000 to 28800.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 28800.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

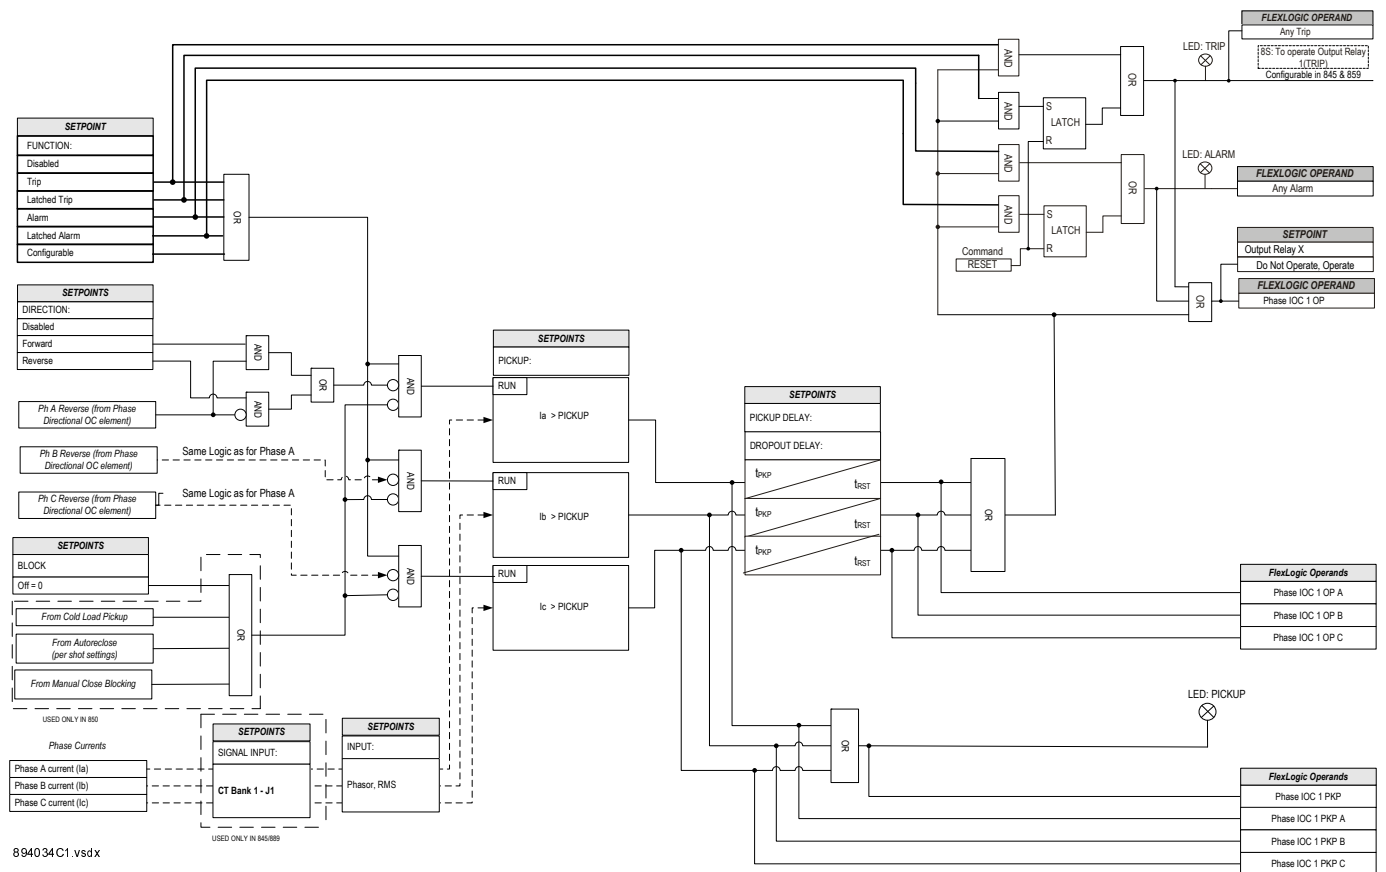


Figure 181: Phase Instantaneous Overcurrent logic diagram

9.4.4 PHASE DIRECTIONAL OVERCURRENT PROTECTION (67P)

The Phase Directional Overcurrent protection elements (one for each of phases A, B, and C) determine the phase current flow direction for steady state and fault conditions and can be used to control the operation of the phase overcurrent elements by sending directional bits to inputs of these elements.

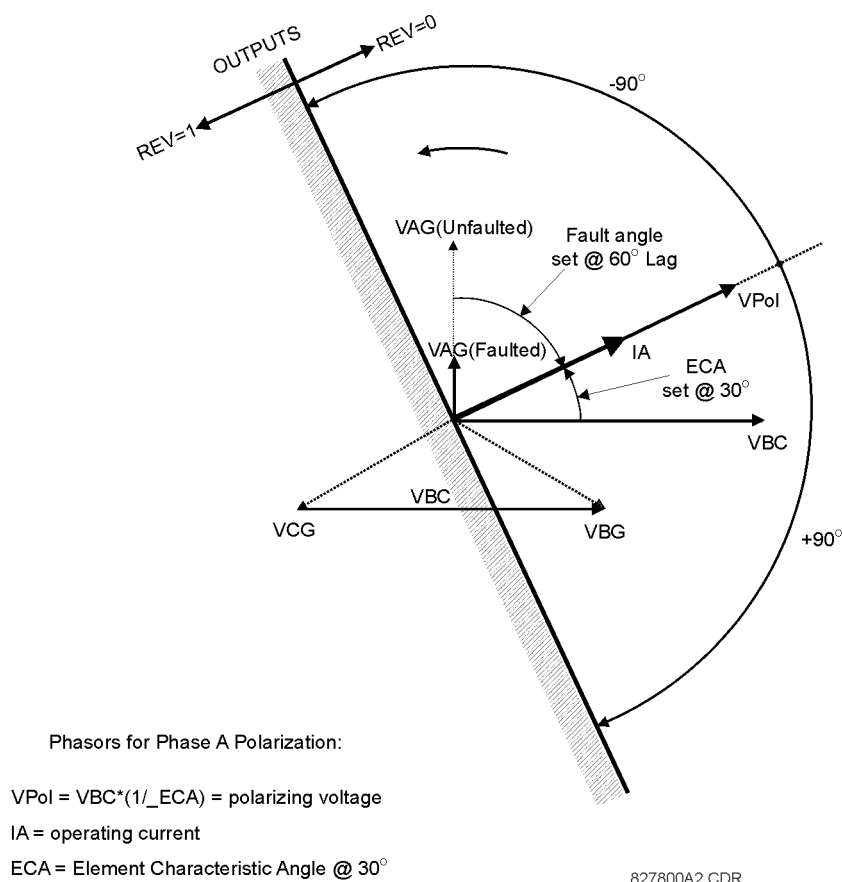


Figure 182: Phasors for phase A polarization

The element is intended to send a directional signal to an overcurrent element to prevent an operation when current is flowing in a particular direction. The direction of current flow is determined by measuring the phase angle between the current from the phase CTs and the line-line voltage from the VTs, based on the 90° or quadrature connection. To increase security for three phase faults very close to the VTs used to measure the polarizing voltage, a voltage memory feature is incorporated. This feature remembers the measurement of the polarizing voltage 3 cycles back and uses it to determine direction. The voltage memory remains valid for one second after the voltage has collapsed.

The main component of the phase directional element is the phase angle comparator with two inputs: the operating signal (phase current) and the polarizing signal (the line voltage, shifted in the leading direction by the characteristic angle, ECA).

The following table shows the operating and polarizing signals used for phase directional control:

PHASE	OPERATING SIGNAL	POLARIZING SIGNAL (Vpol)	
		ABC PHASE SEQUENCE	ACB PHASE SEQUENCE
A	Angle of I_a	Angle of $V_{bc} \times (1 \angle ECA)$	Angle of $V_{cb} \times (1 \angle ECA)$
B	Angle of I_b	Angle of $V_{ca} \times (1 \angle ECA)$	Angle of $V_{ac} \times (1 \angle ECA)$
C	Angle of I_c	Angle of $V_{ab} \times (1 \angle ECA)$	Angle of $V_{ba} \times (1 \angle ECA)$

Note:

For 850D dual feeder applications, when the signal input is from CT Bank 1 – J1, VT Bank 1-J2 is used as the polarizing voltage source. Similarly, when the signal input is from CT Bank 2 – K1, VT Bank 2 – K2 is used as the polarizing voltage source.

Path: Setpoints > Protection > Group1(6) > Current > Phase Dir OC 1(X)

FUNCTION

Range: Disabled, Enabled

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

ECA

Range: 0° to 359° in steps of 1°

Default: 30°

The setting is used to select the element characteristic angle, i.e. the angle by which the polarizing voltage is shifted in the leading direction to achieve dependable operation.

POLARIZING V THRESHOLD

Range: 0.015 to 3.000 x VT in steps of 0.001 x VT

Default: 0.700 x VT

The setting is used to establish the minimum level of voltage for which the phase angle measurement is reliable. The setting is based on VT accuracy.

REV WHEN V MEM EXP

Range: No, Yes

Default: No

The setting is used to select the required operation upon expiration of voltage memory. When set to “Yes” the directional element output value is forced to Reverse when voltage memory expires; when set to “No” the directional element is Forward when voltage memory expires.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

Note:

The Phase Directional element responds to the forward load current. In the case of a following reverse fault, the element needs some time – in the order of 8 ms – to change the directional signal. Some protection elements such as Instantaneous Overcurrent may respond to reverse faults before the directional signal has changed. A coordination time of at least 10 ms must therefore be added to all the instantaneous protection elements under the supervision of the Phase Directional element. If current reversal is a concern, a longer delay – in the order of 20 ms – is needed.

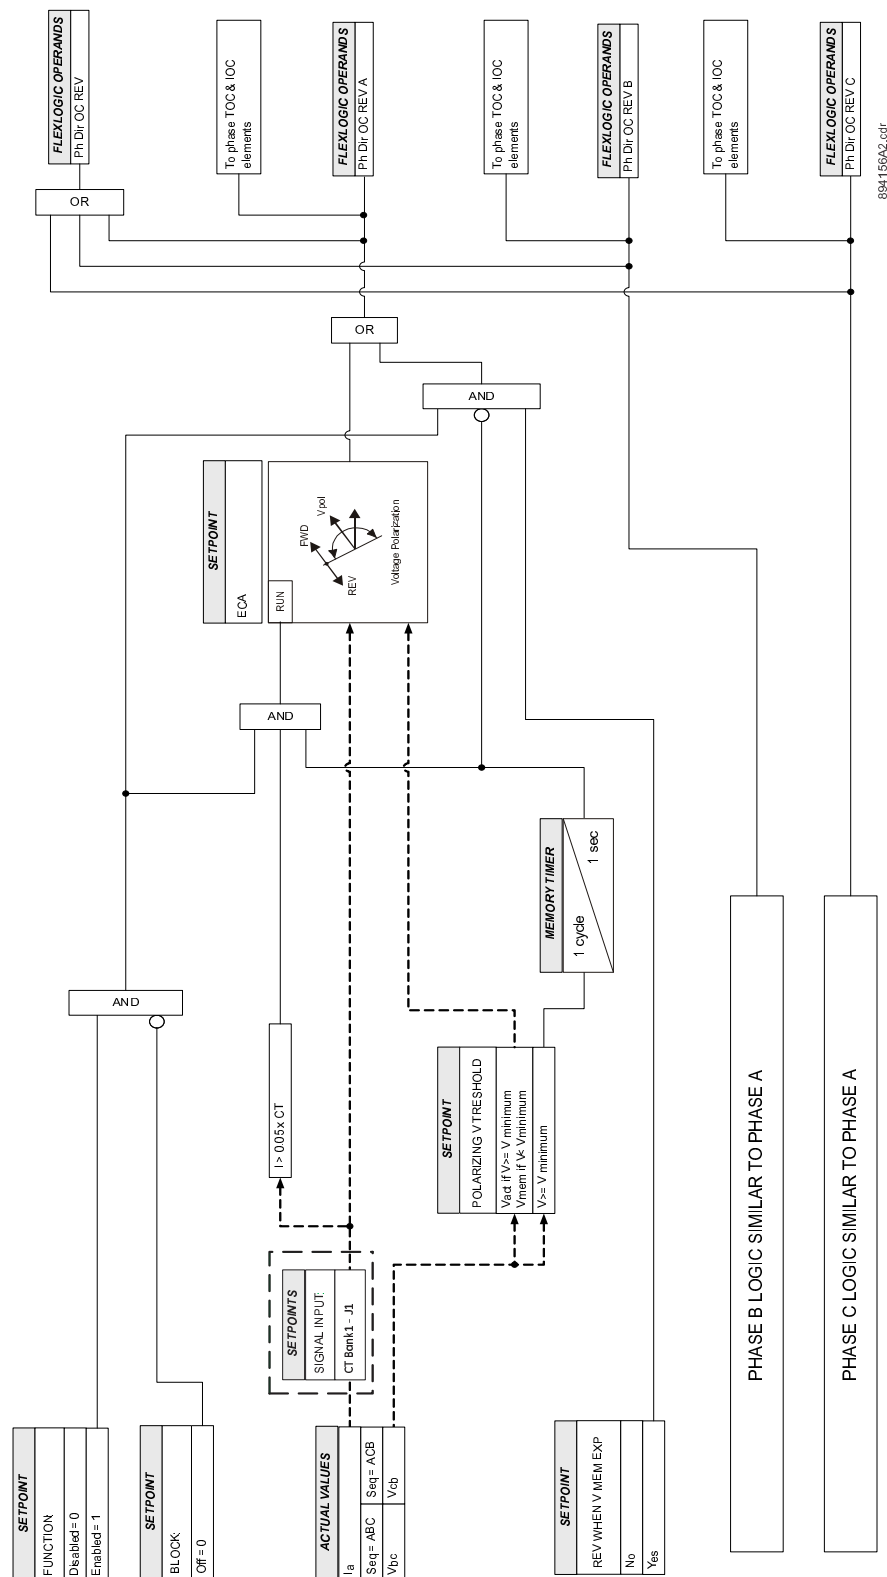


Figure 183: Phase Directional Overcurrent Protection logic diagram

9.4.5 NEUTRAL TIME OVERCURRENT PROTECTION (51N)

The relay computes the neutral current (I_n) using the following formula:

$$|I_n| = |I_a + I_b + I_c|$$

The settings of this function are applied to the neutral current to produce *Trip* or *Pickup* flags. The Neutral TOC Pickup flag is asserted when the neutral current is above the pickup value. The Neutral TOC Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the current. The element drops from Pickup without operation if the measured current drops below 97 to 98% of the Pickup value before the time for operation is reached. When Definite Time is selected, the time for Neutral TOC operation is defined only by the **TDM** setting.

Path: *Setpoints > Protection > Group 1(6) > Current > Neutral TOC 1(X)*

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

INPUT

Range: Phasor, RMS

Default: Phasor

This selection defines the method of processing of the current signal. It could be Root Mean Square (RMS) or Fundamental Phasor Magnitude.

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

CURVE

Range: Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I^2t , I^4t , Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE Mod Inverse

This setting sets the shape of the selected over-current inverse curve. If none of the standard curve shapes is appropriate, a FlexCurve can be created. Refer to the User curve and the FlexCurve setup for more details on their configurations and usage.

TDM

Range: 0.01 to 600.00 in steps of 0.01

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Curve A/B/C, IEEE M/V/E Inverse, US Inverse, US Short Time, ANSI E/V/N/M Inverse, IAC E/V/N/S Inverse, I^2T and I^4T curves.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.000

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s), BPN EDF and EPATR B curves.

K (RI)

Range: 0.10 to 10.00 Step: 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This setting can be made visible from setting management, only when **Curve** setting is selected as *Rapid Inverse*.

IDG Is

Range: 1.0 to 4.0 in steps of 0.1

Default: 1.5

This setting is set as a multiple of the ground fault overcurrent setting for the IDG curve.

It determines the actual current threshold at which the element starts.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

IDG Time

Range: 1.00 to 2.00 s in steps of 0.01 s

Default: 1.20

This setting sets the minimum operate time at high levels of fault current for IDG curves.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

Time Delay

Range: 0.000 s to 200.000 s in steps of 0.001 s

Default: 1.000

This setting defines the time delay for operation.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *DT* (Definite Time).

DT Adder

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the IDMT Operate characteristic.

This setting will be visible for when any IDMT curves are selected under the **Curve** setting.

RESET

Range: DT, Inverse

Default: DT

This setting sets a Definite Time (DT) or Inverse reset time.

If Definite Time (*DT*) reset is selected, the Neutral TOC element will reset after a time delay provided by the **Reset Time** setting. If *Inverse* reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

When using Long Time Inverse, BPN EDF, Rectifier, IEC Short Inverse, Rapid Inverse, IDG, EPATR B curves the reset is always definite time defined by the setpoint **Reset Time**.

Reset Time

Range: 0.000 to 100.000 s in steps of 0.001 s

Default: 0.000s

This setting determines the Reset time for the Definite Time Reset characteristic.

This can be made visible from setting management when the **Reset** setting is selected as *DT* or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, IDG, EPATR B and Rapid Inverse curves.

DIRECTION

Range: Disabled, Forward (Ntrl Dir OCx FWD), Reverse (Ntrl Dir OCx REV)

Default: Disabled

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

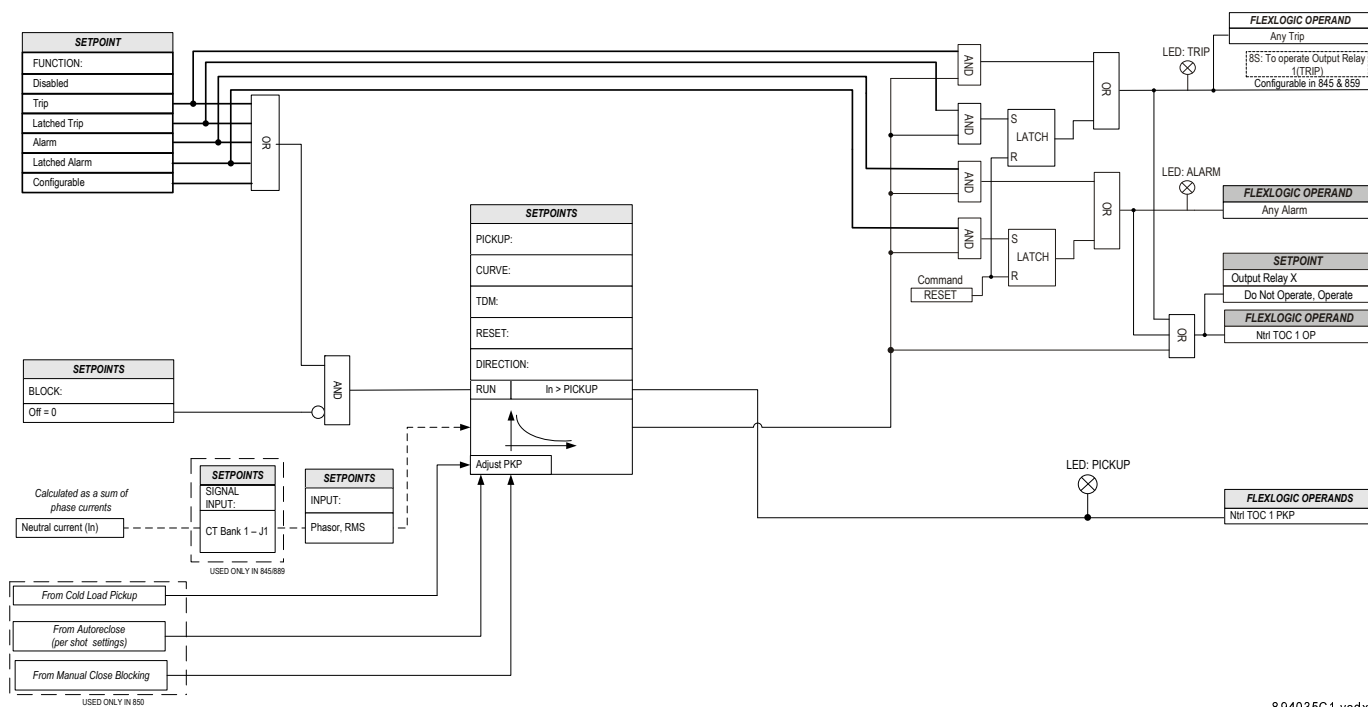

894035C1.vsd

Figure 184: Neutral Time Overcurrent Protection logic diagram

9.4.6 NEUTRAL INSTANTANEOUS OVERCURRENT PROTECTION (50N)

The Neutral Instantaneous Overcurrent protection element computes the neutral current (I_n) using the following formula:

$$|I_n| = |I_a + I_b + I_c|$$

The element responds to the magnitude of a neutral current fundamental frequency phasor calculated from the phase currents. A positive-sequence restraint is applied for better performance. A small portion (6.25%) of the positive-sequence current magnitude is subtracted from the zero-sequence current magnitude when forming the operating quantity of the element as follows:

$$I_{op} = 3 * (|I_{0}| - K * |I_{1}|) \text{ where } K = 1/16 \text{ and } |I_{0}| = 1/3 * |I_n|$$

The positive-sequence restraint allows for more sensitive settings by counterbalancing spurious zero-sequence currents resulting from:

- system unbalances under heavy load conditions
- current transformer (CT) transformation errors of during double-line and three-phase faults
- switch-off transients during double-line and three-phase faults

The positive-sequence restraint must be considered when testing for Pickup accuracy and response time (multiple of Pickup). The operating quantity depends on how test currents are injected into the relay (single-phase injection: $I_{op} = 0.9375 * I_{injected}$ three-phase pure zero sequence injection: $I_{op} = 3 * I_{injected}$).

The settings of this function are applied to the neutral current to produce *Pickup* and *Trip* flags. The Neutral IOC Pickup flag is asserted, when the neutral current is above the pickup value. The Neutral IOC Operate flag is asserted if the element stays picked up for the time defined by the Neutral IOC **PICKUP DELAY** setting. If the Pickup time delay is set to 0.000 seconds, the Pickup and Operate flags are asserted at the same time. The element drops from Pickup without operation if the neutral current drops below 97 to 98% of the Pickup value.

Path: Setpoints > Protection > Group 1(6) > Current > Neutral IOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

*Note: Relays with firmware version 4 and later have a **Latched Trip** option*

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default (FW 4.10): 0.20 x CT

DIRECTION

Range: Disabled, Forward (Ntrl Dir OCx FWD), Reverse (Ntrl Dir OCx REV)

Default: Disabled

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

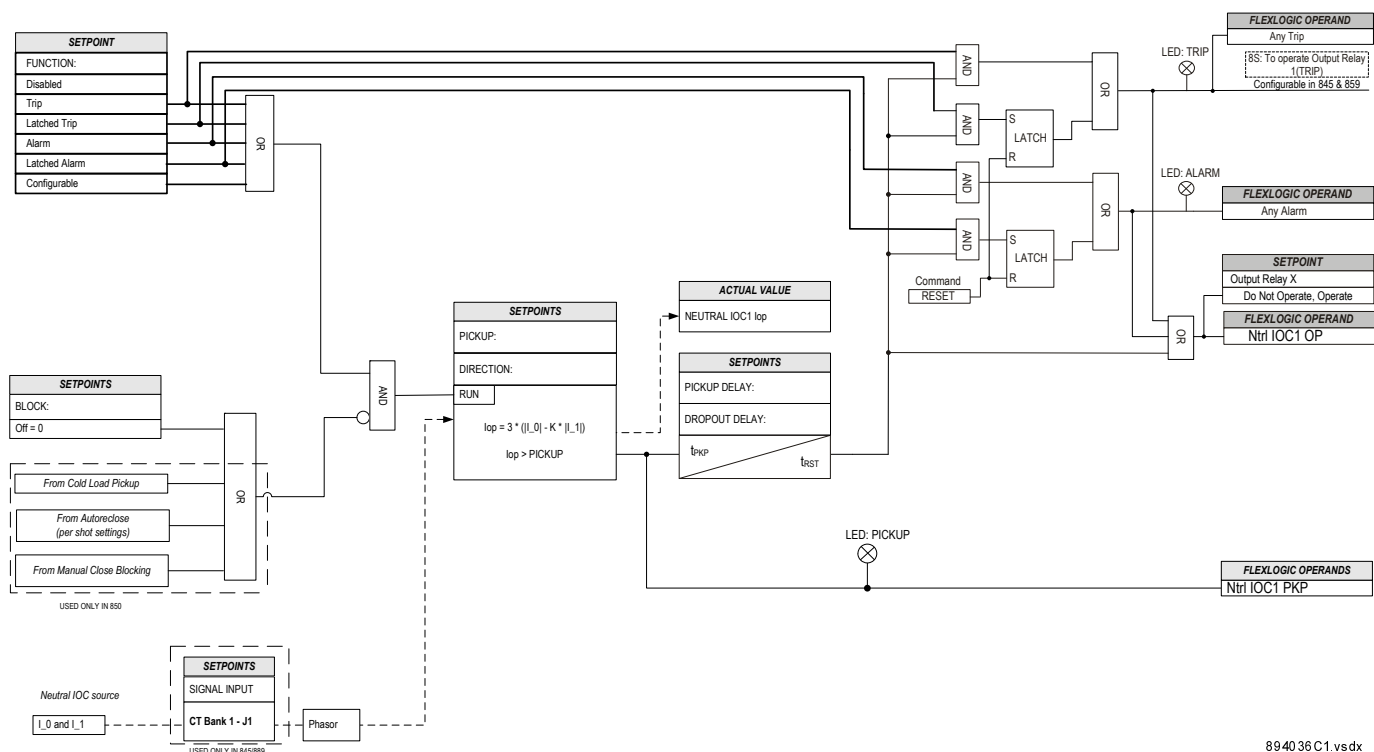


Figure 185: Neutral Instantaneous Overcurrent Protection logic diagram

9.4.7 NEUTRAL DIRECTIONAL OVERCURRENT PROTECTION (67N)

Note:

For FW 4.10 onwards, $V \ X$ (or VX), is know as $V \ N$ (or VN)

The Neutral Directional Overcurrent protection element provides both forward and reverse fault direction indications shown by the operands Ntrl Dir OC FWD and Ntrl Dir OC REV, respectively. The output operands are asserted if the magnitude of the operating current is above a Pickup level (overcurrent unit) and the fault direction is seen as forward or reverse, respectively (directional unit).

The *overcurrent unit* responds to the magnitude of a fundamental frequency phasor of the neutral current calculated from the phase currents. There are separate Pickup settings for the forward-looking and reverse-looking functions. The element applies a positive-sequence restraint for better performance; a small user-programmable portion of the positive-sequence current magnitude is subtracted from the zero sequence current magnitude when forming the operating quantity.

$$\text{Iop} = 3 * (|\text{I } 0| - \text{K} * |\text{I } 1|)$$

The positive-sequence restraint allows for more sensitive settings by counterbalancing spurious zero-sequence currents resulting from:

- system unbalances under heavy load conditions
- current transformer (CT) transformation errors of during double-line and three-phase faults
- switch-off transients during double-line and three-phase faults.

The positive-sequence restraint must be considered when testing for Pickup accuracy and response time (multiple of Pickup). The operating quantity depends on the way the test currents are injected into the relay (single-phase injection: $I_{op} = (1 - K) \times I_{injected}$; three-phase pure zero-sequence injection: $I_{op} = 3 \times I_{injected}$).

The positive-sequence restraint is removed for low currents. If the positive-sequence current is below $0.8 \times CT$, the restraint is removed by changing the constant K to zero. This facilitates better response to high-resistance faults when the unbalance is very small and there is no danger of excessive CT errors as the current is low.

The *directional unit* uses the zero-sequence current (I_0) for fault direction discrimination and may be configured to use either zero-sequence voltage, ground current, or both for polarizing. The following table defines the neutral directional overcurrent element.

Directional unit				Overcurrent unit
Polarizing mode	Direction	Compared phasors		
Voltage	Forward	-V_0	I_0 x 1∠ECA	lop = 3 x { I_0 - K x I_1 } If I_1 > 0.8 x CT
	Reverse	-V_0	-I_0 x 1∠ECA	
Current	Forward	Ig	I_0	lop = 3 x { I_0 } if I_1 ≤0.8 x CT
	Reverse	Ig	-I_0	
Dual	Forward	-V_0 or	I_0 x 1∠ECA or	
		Ig	I_0	
	Reverse	-V_0 or	-I_0 x 1∠ECA or	
		Ig	-I_0	

Where:

- $V_0 = 1/3 \times (V_{ag} + V_{bg} + V_{cg})$ = zero sequence voltage
- $I_0 = 1/3 \times I_n = 1/3 \times (I_a + I_b + I_c)$ = zero sequence current
- ECA = element characteristic angle
- I_n = neutral current

When **POLARIZING VOLTAGE** is set to *Measured VX*, one-third of this voltage is used in place of V_0 .

The following figure explains the use of the voltage polarized directional unit of the element by showing the voltage-polarized phase angle comparator characteristics for a phase A to ground fault, with:

- ECA = 90° (element characteristic angle = centerline of operating characteristic)
- FWD LA = 80° (forward limit angle = the $\pm$ angular limit with the ECA for operation)
- REV LA = 80° (reverse limit angle = the $\pm$ angular limit with the ECA for operation).


The element incorporates a current reversal logic: if the reverse direction is indicated for at least 1.25 of a power system cycle, the prospective forward indication will be delayed by 1.5 of a power system cycle. The element is designed to emulate an electromechanical directional device. Larger operating and polarizing signals will result in faster directional discrimination bringing more security to element operation.

The forward-looking function is designed to be more secure as compared to the reverse-looking function, and should therefore be used for the tripping direction. The reverse-looking function is designed to be faster as compared to the forward-looking function and should be used for the blocking direction. This allows better protection coordination.

The above bias should be taken into account when using the Neutral Directional Overcurrent element to directionalize other protection elements.

Note:

For relays ordered without voltage inputs, the polarizing signal for the Neutral Directional OC element is the ground current (I_g) from the bank selected as *Signal Input* in the element's menu. In this case the setpoints **POLARIZING MODE**, and **POLARIZING VOLTAGE** are not displayed.

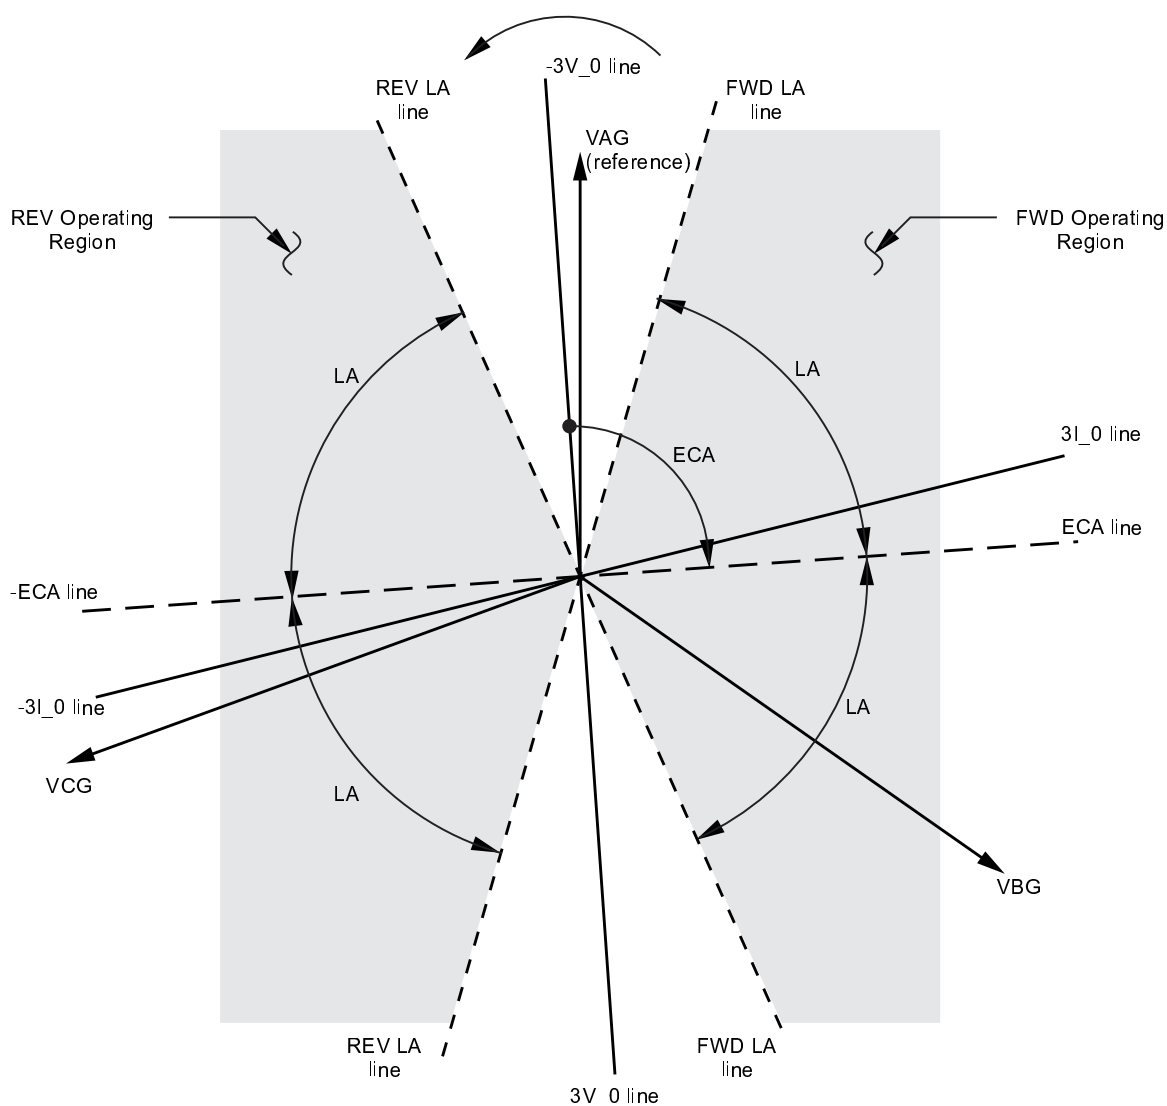

827805A1.CDR

Figure 186: Neutral Directional Voltage-polarized Characteristics

Note:

For 850 Dual Feeder Applications: For Signal Input of CT Bank 1 – J1 >> VT Bank 1 –J2 is considered as Polarizing voltage source. And, For CT Bank 2 – K1 >> VT Bank 2 – K2 is considered as Polarizing Voltage Source

Path: **Setpoints > Protection > Group 1(6) > Current > Neutral Directional OC 1(X)**

FUNCTION

Range: Disabled, Enabled

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name.**

POLARIZING MODE

Range: Voltage, Current, Dual

Default: Voltage

This setting selects the polarizing mode for the directional unit.

If *Voltage* polarizing mode is selected, the element uses the zero-sequence voltage angle for polarization. Select either the zero-sequence voltage V_0 , calculated from the phase voltages, or the zero-sequence voltage supplied externally as the auxiliary voltage V_X . The calculated V_0 can be used as polarizing voltage only if the voltage transformers are connected in Wye. The auxiliary voltage can be used as the polarizing voltage if the auxiliary voltage is connected to a zero-sequence voltage source (such as the open delta connected secondary of VTs). The zero-sequence (V_0) or auxiliary voltage (V_X), accordingly, must be greater than $0.02 \times V_T$ to be validated for use as a polarizing signal. If the polarizing signal is invalid, neither forward nor reverse indication is given.

If *Current* polarizing mode is selected, the element uses the angle of the ground current measured on the ground current input. The ground CT must be connected between the ground and neutral point of an adequate source of ground current. The ground current must be greater than $0.05 \times I_T$ to be validated as a polarizing signal. If the polarizing signal is not valid, neither forward nor reverse indication is given. For a choice of current polarizing, it is recommended that the polarizing signal be analyzed to ensure that a known direction is maintained irrespective of the fault location. For example, if using an autotransformer neutral current as a polarizing source, it should be ensured that a reversal of the ground current does not occur for a high-side fault. The low-side system impedance should be assumed minimal when checking for this condition. A similar situation arises for a wye/delta/wye transformer, where current in one transformer winding neutral may reverse when faults on both sides of the transformer are considered.

If *Dual* polarizing mode is selected, the element performs both directional comparisons as described above. A given direction is confirmed if either voltage or current comparators indicate so. If a conflicting (simultaneous forward and reverse) indication occurs, the forward direction overrides the reverse direction.

POLARIZING VOLTAGE

Range: Calculated V_0 , Measured $V_X(VN)$

Default: Calculated V_0

Selects the polarizing voltage used by the directional unit when *Voltage* or *Dual* polarizing mode is set. The polarizing voltage can be programmed to be either the zero-sequence voltage calculated from the phase voltages (*Calculated V_0*) or supplied externally as an auxiliary voltage (*Measured $V_X(VN)$*)

POS SEQ RESTRAINT

Range: 0.000 to 0.500 in steps of 0.001

Default: 0.063

This setting controls the amount of the positive-sequence restraint. Set to zero to remove the restraint. Set higher if large system unbalances or poor CT performance are expected.

FORWARD ECA

Range: -180° to 180° in steps of 1°

Default: 75°

This setting defines the element characteristic angle (ECA) for the forward direction in “Voltage” polarizing mode. “Current” polarizing mode uses a fixed ECA of 0° . The ECA in the reverse direction is the angle set for the forward direction shifted by 180° .

FORWARD LIMIT ANGLE

Range: 40° to 90° in steps of 1°

Default: 90°

This setting defines a symmetrical (in both directions from the ECA) limit angle for the forward direction.

FORWARD PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.050 x CT

This setting defines the Pickup level for the overcurrent unit of the element in the forward direction. When selecting this setting it must be kept in mind that the design uses a 'positive-sequence restraint' technique for the *Calculated 3I0* mode of operation.

REVERSE LIMIT ANGLE

Range: 40° to 90° in steps of 1°

Default: 90°

This setting defines a symmetrical (in both directions from the ECA) limit angle for the reverse direction.

REVERSE PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.050 x CT

This setting defines the Pickup level for the overcurrent unit of the element in the reverse direction. When selecting this setting it must be kept in mind that the design uses a 'positive-sequence restraint' technique for the *Calculated 3I0* mode of operation.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

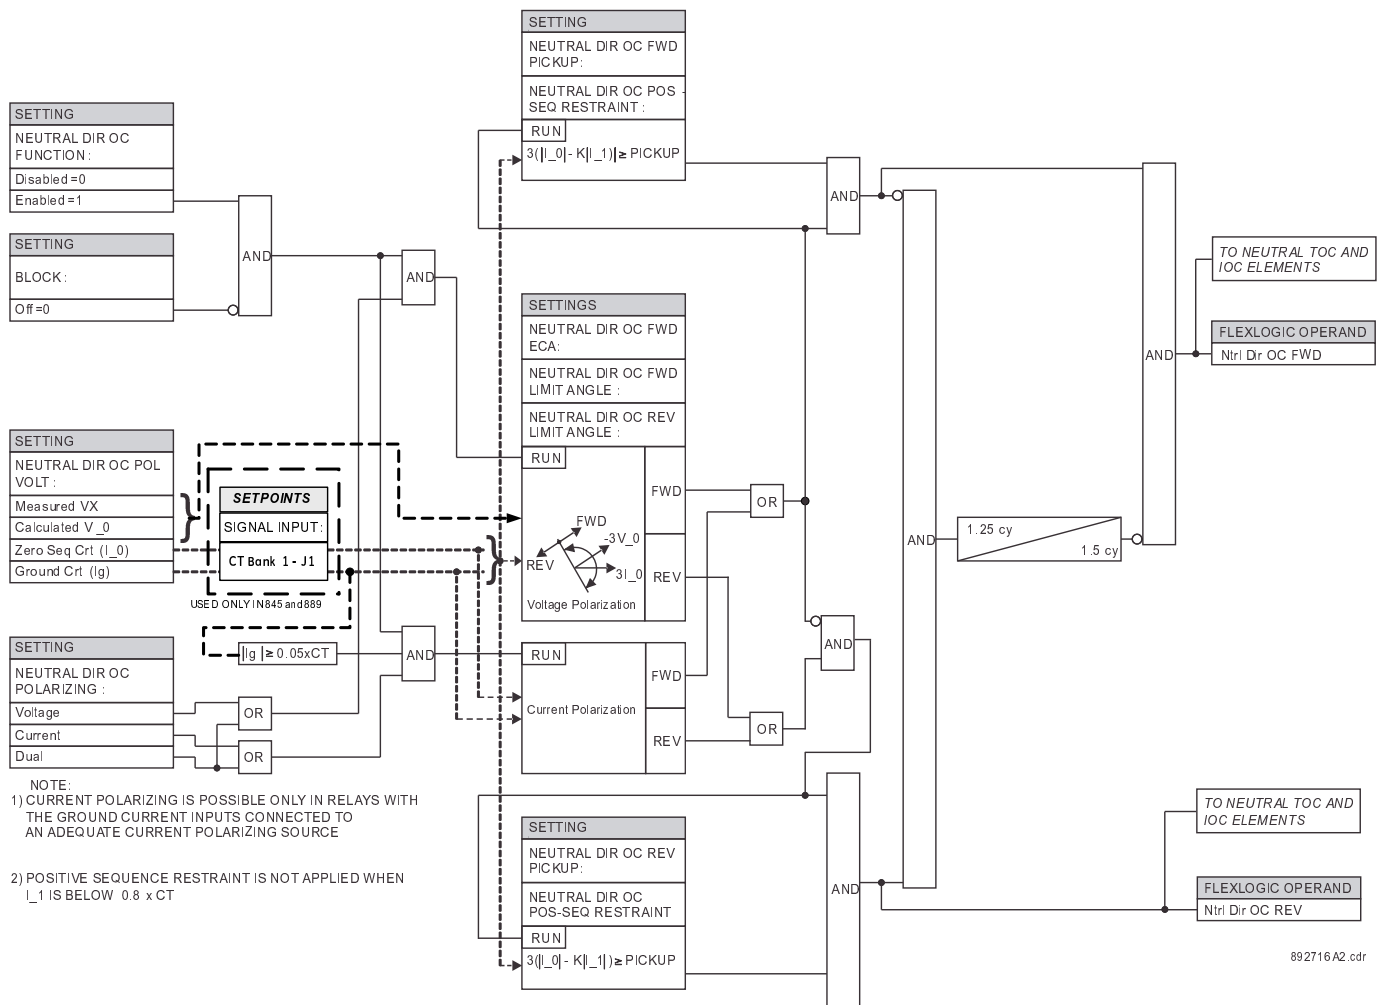


Figure 187: Neutral Directional Overcurrent Protection logic diagram

9.4.8 LOAD ENCROACHMENT

The Load Encroachment element responds to the positive-sequence voltage and current and applies a characteristic shown in the figure below:

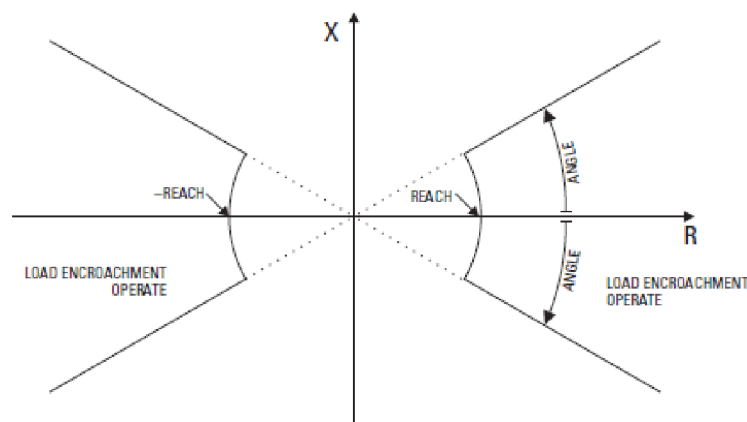


Figure 188: Load Encroachment Characteristic

The element operates if the positive-sequence voltage is above a set level, and asserts its output signal so that it can be used to block selected protection elements such as Phase Overcurrent.

The settings of this function are applied to the positive sequence voltage and positive sequence impedance. The Load Encroachment Pickup flag is asserted when the impedance is inside the Load Encroachment operating area (see the above figure) and the positive sequence voltage is above the minimum operating value. The Load Encroachment Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay.

Load Encroachment can be inhibited by a blocking input.

Path: *Setpoints > Protection > Group 1(6) > Current > Load Encroachment*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

CT INPUT

Range: CT Bank 1 –J1, CT Bank 2 –K1

Default: CT Bank 1 –J1

This setting provides the selection for the current bank input.

MODE

Default: 3Ph(based on Z1)

Range: 3Ph(based on Z1), 1Ph(based on Z)

This setting sets the Load Encroachment to three-phase or single-phase blocking.

If **Load Encroachment Mode** is *3ph* (based on Z1):

Positive sequence voltage (V_1) and positive sequence current (I_1) are considered for Z1 calculation.

Only 3 phase calculations are performed, individual phase calculations are not necessary.

Output operands: Load Encro FWD, Load Encro REV, Load Encro PKP, Load Encro OP

If **Load Encroachment Mode** is *1ph* (based on Z),

Phase voltages ($V_a/V_b/V_c$) and phase current ($I_a/I_b/I_c$) are considered for Z calculation.

Only individual phase calculations are made. 3 phase calculations are not necessary.

Output operands: Load Encro FWD A/B/C, Load Encro REV A/B/C, Load Encro PKP, Load Encro OP A/B/C
are what?, are set?

DIRECTION

Range: Reverse, Forward, Both

Default: Both

This setting sets the Load Encroachment direction measurement.

When Direction setting is set as FORWARD:

$$\text{PICKUP} = \{|\underline{V}_1| > \text{FORWARDREACH} \cdot |\underline{I}_1|\} \text{ AND } \{|\text{angle}(\underline{V}_1) - \text{angle}(\underline{I}_1)| < \text{FORWARDANGLE}\}$$

When Direction setting is set as REVERSE:

$$\text{PICKUP} = \{|\underline{V}_1| > \text{REVERSEREACH} \cdot |\underline{I}_1|\} \text{ AND } \{|\text{angle}(\underline{V}_1) - \text{angle}(\underline{I}_1)| > 180^\circ - \text{REVERSEANGLE}\}$$

MINIMUM VOLTAGE

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

The setting sets the minimum operating positive-sequence voltage/phase voltage required for operation of the Load Encroachment element. If this voltage is below the set minimum threshold, the element does not operate.

Note:

If 3-phase VT is delta connected, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

MAXIMUM I2

Range: 0.00 to 1.50 x CT in steps of 0.01 x VT

Default: 0.20 x CT

This setting sets the Negative Phase Sequence current threshold for the Load Encroachment function.

FORWARD REACH

Range: 0.02 to 250.00 Ω in steps of 0.01 Ω

Default: 5.00 Ω

The setting specifies the resistive reach of the element as shown in the Load Encroachment characteristic diagram. The setting is entered in secondary ohms and is calculated as the positive-sequence resistance seen by the relay under maximum load conditions and unity power factor.

FORWARD ANGLE

Range: 5 to 85° in steps of 1°

Default: 30°

This setting specifies the size of the blocking region as shown on the Load Encroachment characteristic diagram, and applies this to the positive-sequence impedance.

REVERSE REACH

Range: 0.02 to 250.00 Ω in steps of 0.01 Ω

Default: 5.00 Ω

This setting specifies the resistive reach of the element as shown in the Load Encroachment characteristic diagram. This setting should be entered in secondary ohms and be calculated as the positive-sequence resistance seen by the relay under maximum load conditions and unity power factor.

REVERSE ANGLE

Range: 5 to 85° in steps of 1°

Default: 30°

This setting specifies the size of the blocking region as shown on the Load Encroachment characteristic diagram and applies this to the positive-sequence impedance.

PICKUP DELAY

Range: 0.000 to 6000.00 s in steps of 0.001 s

Default: 0.000 s

Note:

It has to be taken into account that the Pickup time delay programmed in the overcurrent elements (or the other elements) that are blocked with Load Encroachment must be higher than the time programmed in the Load Encroachment function, in order to avoid false tripping.

DROPOUT DELAY

Range: 0.000 to 6000.00 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

Note:

As the Load Encroachment function operates during normal conditions it is recommended that targets be disabled.

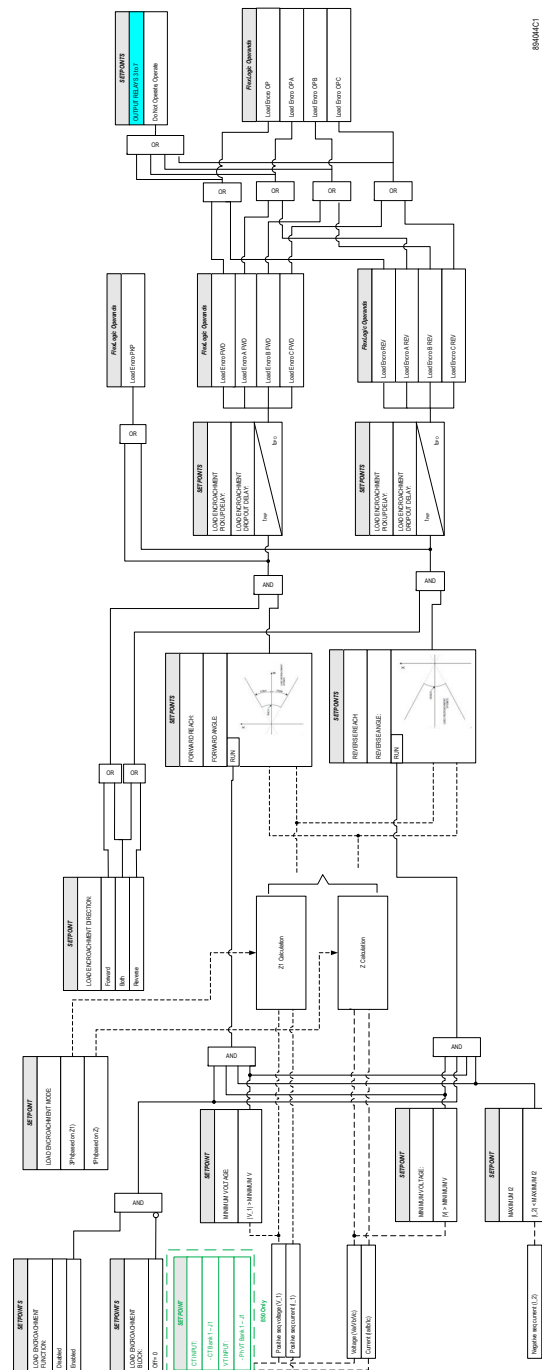


Figure 189: Load Encroachment logic diagram

9.4.9 GROUND TIME OVERCURRENT PROTECTION (51G)

The settings of Ground Time Overcurrent protection element are applied to the ground input current to produce *Trip* or *Pickup* flags. The Ground TOC Pickup flag is asserted when the ground current is above the PKP value. The Ground TOC Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the current. The element drops from Pickup without operation if the measured current drops below 97 to 98% of the Pickup value before the time for operation is reached. When Definite Time is selected, the time for Ground TOC operation is defined only by the **TDM** setting.

Path: Setpoints > Protection > Group 1(6) > Current > Ground TOC 1(X)

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

INPUT

Range: Phasor, RMS

Default: Phasor

This selection defines the method of processing of the current signal. It could be Root Mean Square (RMS) or Fundamental Phasor Magnitude.

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

CURVE

Range: Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I^2t , I^4t , Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE, Moderately Inverse

TDM

Range: 0.05 to 600.00 in steps of 0.01

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Curve A/B/C, IEEE M/V/E Inverse, US Inverse, US Short Time, ANSI E/V/N/M Inverse, IAC E/V/N/S Inverse, I2T and I4T curves.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.000

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s), BPN EDF and EPATR B curves.

K (RI)

Range: 0.10 to 10.00 Step: 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This setting can be made visible from setting management, only when **Curve** setting is selected as *Rapid Inverse*.

IDG Is

Range: 1.0 to 4.0 in steps of 0.1

Default: 1.5

This setting is set as a multiple of the ground fault overcurrent setting for the IDG curve.

It determines the actual current threshold at which the element starts.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

IDG TIME

Range: 1.00 to 2.00 s in steps of 0.01 s

Default: 1.20

This setting sets the minimum operate time at high levels of fault current for IDG curves.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

TIME DELAY

Range: 0.000 s to 1200.000 s in steps of 0.001 s

Default: 1.000

This setting defines the time delay for operation.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *DT* (Definite Time).

DT ADDER

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the IDMT Operate characteristic.

This setting will be visible for when any IDMT curves are selected under the **Curve** setting.

RESET

Range: DT, Inverse

Default: DT

This setting sets a Definite Time (DT) or Inverse reset time.

If Definite Time (*DT*) reset is selected, the Neutral TOC element will reset after a time delay provided by the **Reset Time** setting. If *Inverse* reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

When using Long Time Inverse, BPN EDF, Rectifier, IEC Short Inverse, Rapid Inverse, IDG, EPATR B curves the reset is always definite time defined by the setpoint **Reset Time**.

RESET TIME

Range: 0.000 to 100.000 s in steps of 0.001 s

Default: 0.000s

This setting determines the Reset time for the Definite Time Reset characteristic.

This can be made visible from setting management when the **Reset** setting is selected as *DT* or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, IDG, EPATR B and Rapid Inverse curves.

DIRECTION

Range: Disabled, Forward, Reverse

Default: Disabled

BLOCK

Range: Off, Any FlexLogic operand

Default: Off or PB 4 OFF (GND TRIP ENABLED), Dependent on order code

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

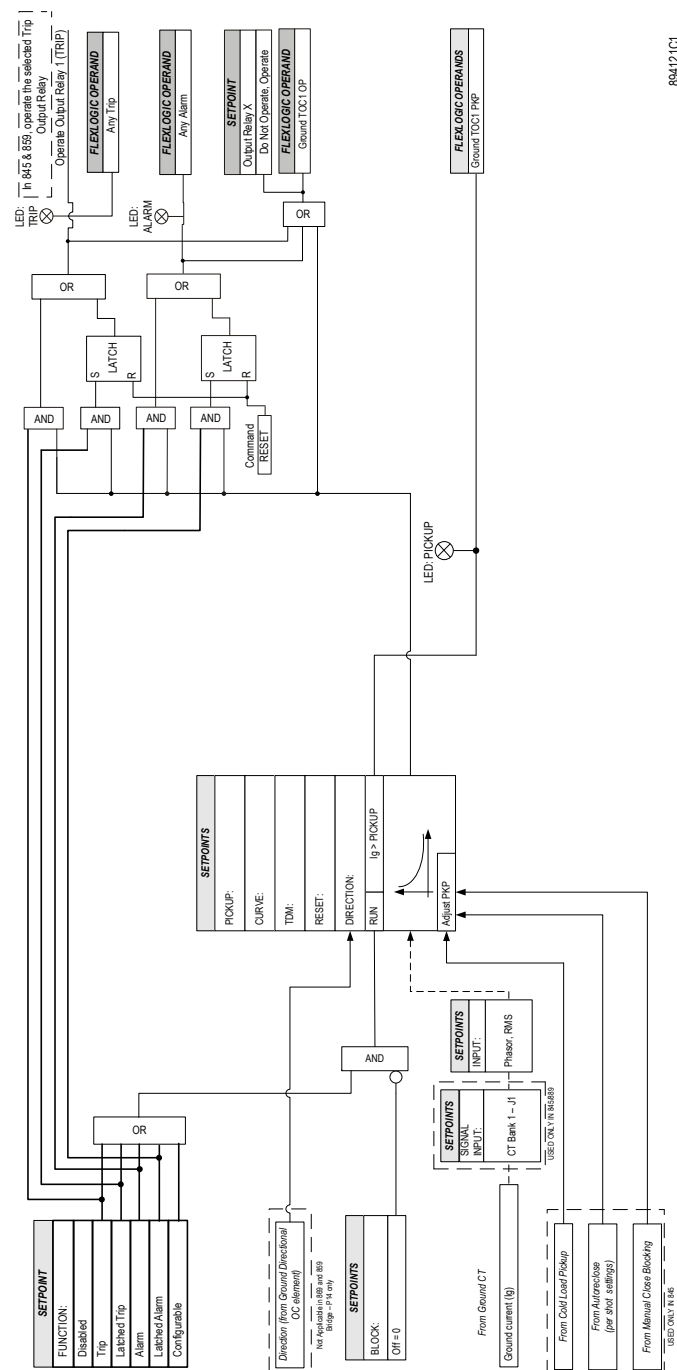

894121C1

Figure 190: Ground Time Overcurrent Protection logic diagram

9.4.10 GROUND INSTANTANEOUS OVERCURRENT PROTECTION (50G)

The settings of the Ground Instantaneous Overcurrent protection element are applied to the measured Ground current for producing *Pickup* and *Trip* flags. The Ground IOC Pickup flag is asserted when the Ground current is above the pickup value. The Ground IOC Operate flag is asserted if the element stays picked-up for the time defined by the Ground IOC **PICKUP DELAY** setting. If the Pickup time delay is set to 0.000 seconds. The Pickup and Operate flags will be asserted at the same time. The element drops from Pickup without operation if the Ground current drops below 97 to 98% of the Pickup value.

Path: Setpoints > Protection > Group 1(6) > Current > Ground IOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

PICKUP

Range (up to FW 3.xx): 0.050 to 30.000 x CT in steps of 0.001 x CT

Range (from FW 4.10): 0.010 to 30.000 x CT in steps of 0.001 x CT

Default (up to FW 3.xx): 1.00 x CT

Default (from FW 4.10): 0.200 x CT

DIRECTION (not used in 859)

Range: Disabled, Forward, Reverse

Default: Disabled

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

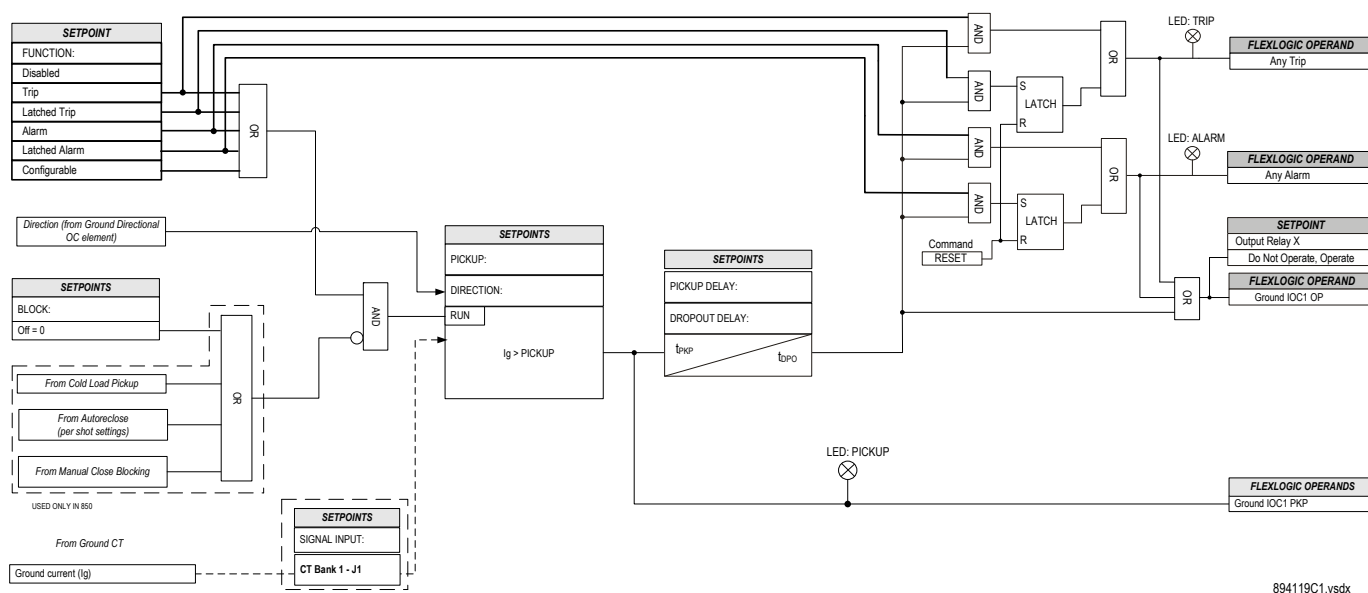

894119C1.vsd

Figure 191: Ground Instantaneous Overcurrent Protection logic diagram

9.4.11 GROUND DIRECTIONAL OVERCURRENT PROTECTION (67G)

The Ground Directional Overcurrent protection element provides both forward and reverse fault direction indications shown by the operands Gnd Dir OC FWD and Gnd Dir OC REV respectively. The output operands are asserted if the magnitude of the operating current is above a Pickup level (overcurrent unit) and the fault direction is seen as forward or reverse, respectively (directional unit).

The *overcurrent unit* responds to the magnitude of a fundamental frequency phasor of the ground current. There are separate Pickup settings for the forward-looking and reverse-looking functions.

The *directional unit* uses the ground current (I_g) for fault direction discrimination, and can be polarizing, by either *Calculated* V_0 zero-sequence voltage or *Measured* V_X zero sequence voltage. The following tables define the ground directional overcurrent element.

Directional Unit				Overcurrent unit
Polarizing mode	Direction	Compared phasors		
Voltage	Forward	-V0	Ig	GROUND CURRENT (Ig)
Voltage	Reverse	-V0	-Ig	GROUND CURRENT (Ig)
Current	Forward	Ipol	Ig	GROUND CURRENT (Ig)
Current	Reverse	Ipol	-Ig	GROUND CURRENT (Ig)
Dual	Forward	-V0	Ig	GROUND CURRENT (Ig)
Dual	Forward	Ipol	Ig	GROUND CURRENT (Ig)
Dual	Reverse	-V0	-Ig	GROUND CURRENT (Ig)
Dual	Reverse	Ipol	-Ig	GROUND CURRENT (Ig)

Where:

$$V_0 = 1/3 * (V_{ag} + V_{bg} + V_{cg}) = \text{zero sequence voltage}$$

When **POLARIZING VOLTAGE** is set to *Measured VX*, one-third of this voltage is used in place of V0. The following figure explains the usage of the voltage polarized directional unit of the element by showing the voltage-polarized phase angle comparator characteristics for a phase A to ground fault, with:


- ECA = 90° (element characteristic angle = centerline of operating characteristic)
- FWD LA = 80° (forward limit angle = the ± angular limit with the ECA for operation)
- REV LA = 80° (reverse limit angle = the ± angular limit with the ECA for operation).

The element incorporates a current reversal logic: if the reverse direction is indicated for at least 1.25 of a power system cycle, the prospective forward indication will be delayed by 1.5 of a power system cycle. The element is designed to emulate an electromechanical directional device. Larger operating and polarizing signals will result in faster directional discrimination bringing more security to element operation.

The forward-looking function is designed to be more secure as compared to the reverse-looking function, and should therefore be used for the tripping direction. The reverse-looking function is designed to be faster as compared to the forward-looking function and should be used for the blocking direction. This allows better protection coordination.

The above bias should be taken into account when using the Ground Directional Overcurrent element to directionalize other protection elements.

For Dual Feeder Applications, for Signal Input of CT Bank 1 – J1 >> VT Bank 1 -J2 is considered as Polarizing voltage source. And, For CT Bank 2 – K1 >> VT Bank 2 – K2 is considered as Polarizing Voltage Source.

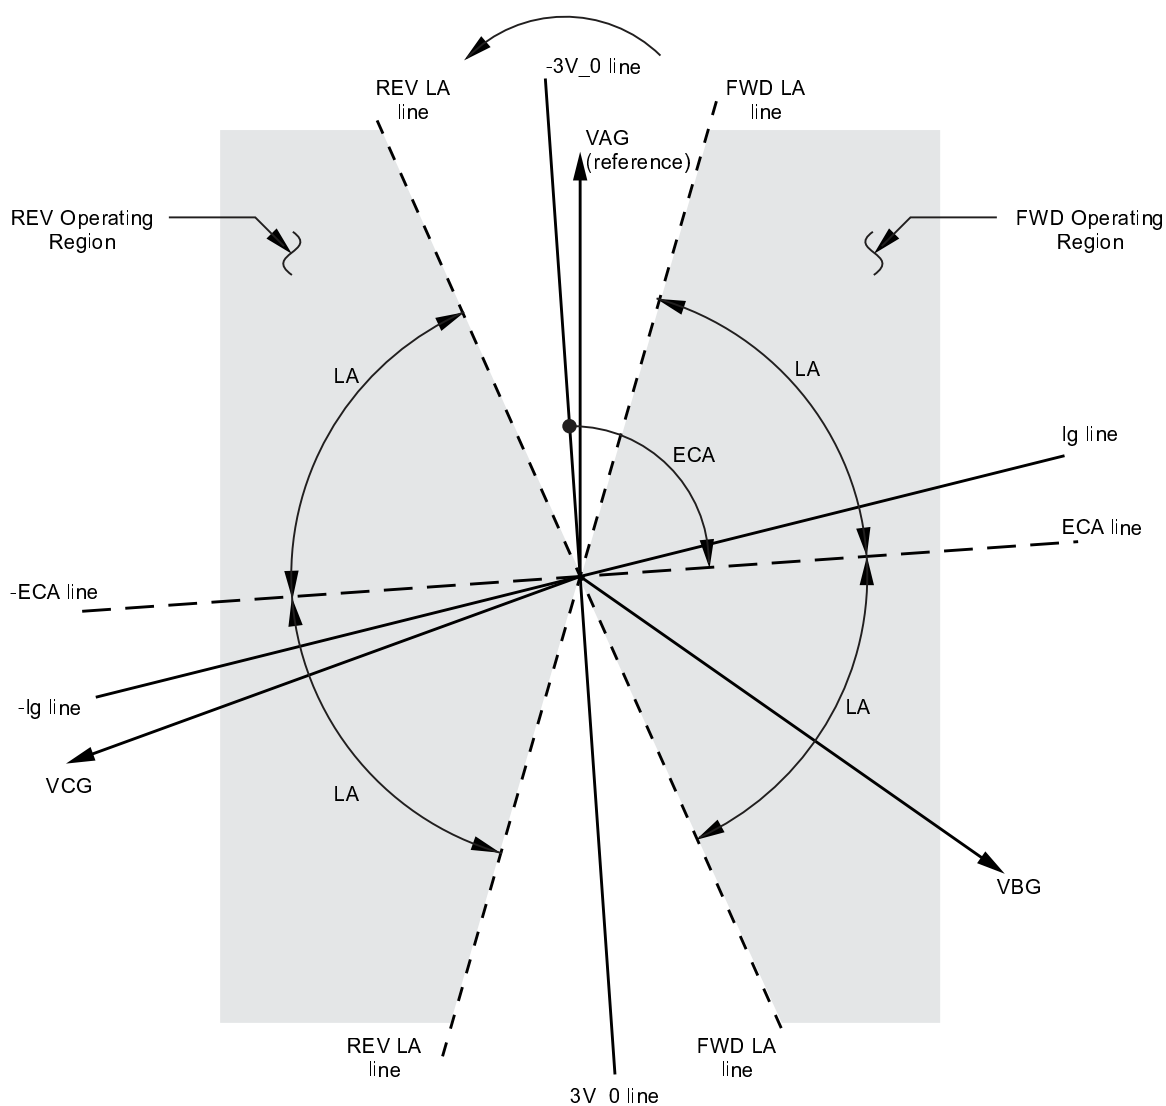

827805X1.CDR

Figure 192: Ground Directional Voltage-polarized Characteristics

9.4.12 SENSITIVE GROUND TIME OVERCURRENT PROTECTION (51SG)

The settings of the Sensitive Ground Time Overcurrent protection element are applied to the Sensitive Ground input current to produce *Trip* or *Pickup* flags. The Sensitive Ground TOC Pickup flag is asserted when the Sensitive Ground current is above the PKP value. The Sensitive Ground TOC Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the current. The element drops from Pickup without operation if the measured current drops below 97-98% of the Pickup value before the time for operation is reached. When Definite Time is selected, the time for Sensitive Ground TOC operation is defined only by the **TDM** setting.

Path: *Setpoints > Protection > Group 1(6) > Current > Sensitive Ground TOC 1(X)*

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

INPUT

Range: Phasor, RMS

Default: Phasor

This selection defines the method of processing of the current signal. It can be Root Mean Square (RMS) or Fundamental Phasor Magnitude.

PICKUP

Range: 0.50 to 15.00 A in steps of 0.01 A

Default: 10.00 A

This setting sets the sensitive ground overcurrent pickup level.

In the case of 50:0.025 Ground input, the pickup level is specified as Ampere in primary. For example, with a PKP setting of 10.00 A, when ground current (primary) is 10.00A, the ground input will measure 10.000 A, and this function should pick up.

CURVE

Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I^2t , I^4t , Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE Mod Inverse

This setting sets the shape of the selected over-current inverse curve. If none of the standard curve shapes is appropriate, a FlexCurve can be created. Refer to the User curve and the FlexCurve setup for more details on their configurations and usage.

TDM

Range: 0.01 to 600.00 in steps of 0.01

Default: 1.00

This setting provides the selection for the Time Dial Multiplier by which the times from the inverse curve are modified. For example if an ANSI Extremely Inverse curve is selected with TDM = 2, and the fault current is 5 times bigger than the PKP level, the operation of the element will occur but not before 2.59s of time has elapsed from pickup.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s), BPN EDF and EPATR B curves.

K (RI)

Range: 0.10 to 10.00 in steps of 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This k(RI) setting can be made visible from setting management, only when the **Curve** setting is selected as *Rapid Inverse*.

IDG Is

Range: 1.0 to 4.0 in steps of 0.1

Default: 1.5

This setting is set as a multiple of the Ground Fault overcurrent setting IDG Is for the IDG curve. It determines the actual current threshold at which the element starts.

IDG TIME

Range: 1.00 to 2.00 s in steps of 0.01 s

Default: 1.20

This setting sets the minimum operate time at high levels of fault current for IDG curves.

IDG Is and **IDG Time** settings can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

TIME DELAY

Range: 0.000 s to 200.000 s in steps of 0.001 s

Default: 1.000

This setting defines the time delay for operation. This Time Delay setting can be made visible from setting management, only when the **Curve** setting is selected as DT.

DT ADDER

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the **IDMT Operate** characteristic. The **DT Adder** setting will be visible for when any IDMT curves are selected under the **Curve** setting.

RESET

Range: DT, Inverse

Default: DT

Selection of a Definite Time (DT) or Inverse reset time is provided using this setting.

If Definite Time (DT) reset is selected, the Phase TOC element will reset after a time delay provided by the **Reset Time** setting. If Inverse reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

Note: When using IEC Short Inverse, Long Time Inverse, BPN EDF, Rectifier, Rapid Inverse curves for the Operate characteristic, Definite Time is used by default as Reset characteristic.

RESET TIME

Range: 0.000 to 100.000 in steps of 0.001

Default: 0.000

This setting provides selection for dropout time delay used to delay the dropout of the detection of the overcurrent condition.

This can be made visible from setting management when the **Reset** setting is selected as DT or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, IDG, EPATR B and Rapid Inverse curves.

DIRECTION

Range: Disabled, Forward, Reverse

Default: Disabled

This setting defines the operation direction of the Sensitive Ground TOC element. Entering the direction for the Sensitive Ground TOC element does not automatically apply the selection. The direction detection is performed by the element Sensitive Ground Directional OC, which must be enabled and configured according to the directionality criteria of the feeder currents.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Sensitive Ground TOC is blocked, when the selected operand is asserted.

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled


This also sets the events of Sensitive Ground TOC function.

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

The selection of Self-reset or Latched settings enables the targets of the Sensitive Ground TOC function.

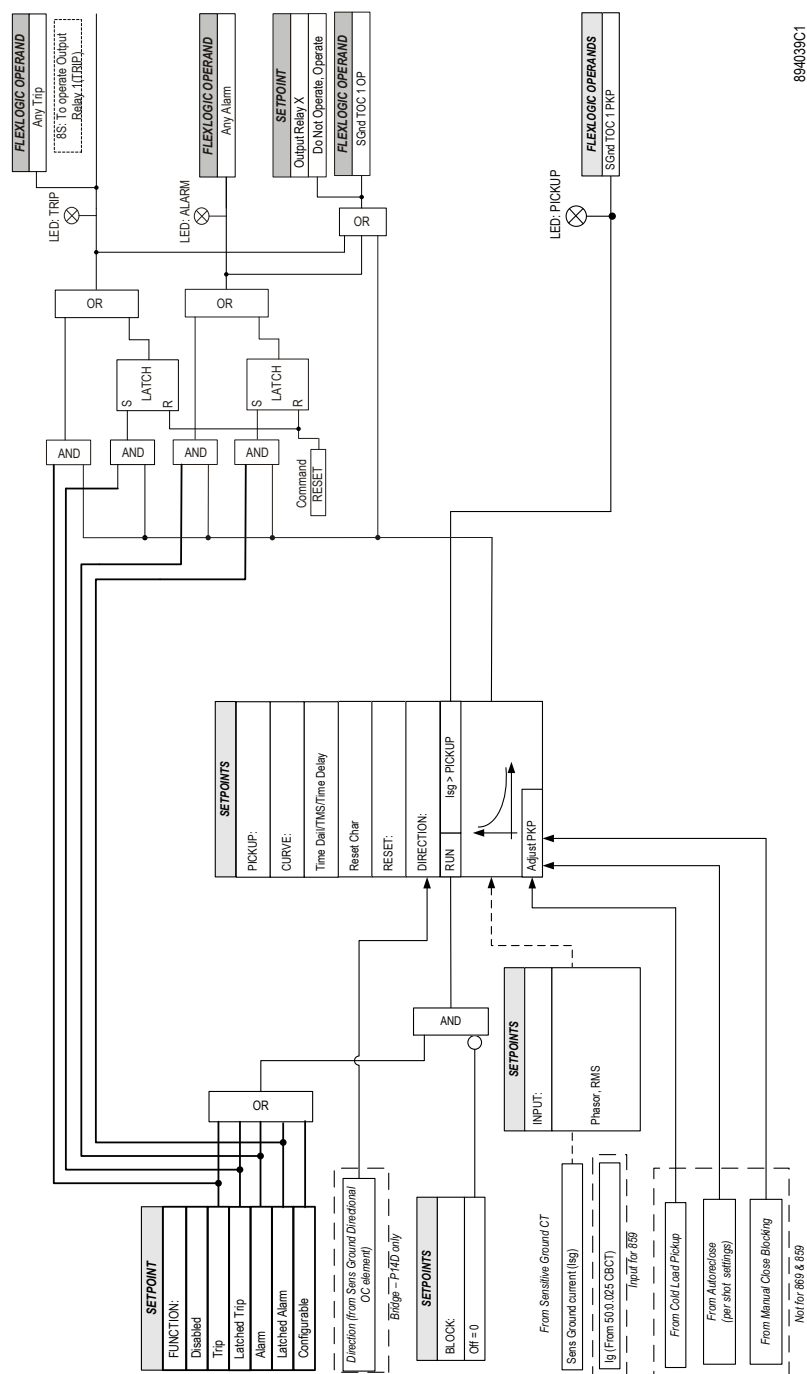

894039C1

Figure 193: Sensitive Ground Time Overcurrent Protection logic diagram

9.4.13 SENSITIVE GROUND INSTANTANEOUS OVERCURRENT PROTECTION (50SG)

The settings of the Sensitive Ground Instantaneous Overcurrent protection element are applied to the measured Sensitive Ground current for producing *Pickup* and *Trip* flags. The Sensitive Ground IOC Pickup flag is asserted when the Sensitive Ground current is above the Pickup value. The Sensitive Ground IOC Operate flag is asserted if the element stays picked-up for the time defined by the Sensitive Ground IOC **PICKUP DELAY** setting. If the Pickup time delay is set to 0.00 seconds, the Pickup and Operate flags are asserted at the same time. The element drops from Pickup without operation if the Sensitive Ground current drops below 97 to 98% of the Pickup value.

Path: *Setpoints* > *Protection* > *Group 1(6)* > *Current* > *Sensitive Ground IOC 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

PICKUP

Range: 0.002 to 3.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

This setting sets the instantaneous Sensitive Ground overcurrent pickup level specified as a multiplier of the nominal CT current for sensitive CT input. For example, a PKP setting of 0.9 x CT with 300:5 CT translates into 270A primary current.

DIRECTION (not used in 859)

Range: Disabled, Forward, Reverse

Default: Disabled

This setting defines the operation direction of the Sensitive Ground time overcurrent element. Entering the direction for the Sensitive Ground IOC element, does not automatically apply the selection. The direction detection is performed by the element Sensitive Ground Directional OC, which must be enabled and configured according to the directionality criteria of the feeder currents.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides the selection for the pickup time delay used to delay the operation of the protection.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides the selection for the dropout time delay used to delay the dropout of the detection of the overcurrent condition.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Sensitive Ground IOC is blocked, when the selected operand is asserted.

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

are asserted if the magnitude of the operating current is above a Pickup level (overcurrent unit) and the fault direction is seen as forward or reverse, respectively (directional unit).

The *overcurrent unit* responds to the magnitude of a fundamental frequency phasor of the sensitive ground current. There are separate Pickup settings for the forward-looking and reverse-looking functions.

The *directional unit* uses the sensitive ground current (I_g) for fault direction discrimination and may be programmed to use either zero-sequence voltage (*Calculated V0* or *Measured VX(VN)*), ground current (I_g), or both for polarizing. The following tables define the Sensitive Ground Directional Overcurrent element.

Directional Unit				Overcurrent unit
Polarizing mode	Direction	Compared phasors		
Voltage	Forward	-V0	Isg	GROUND CURRENT (Isg)
Voltage	Reverse	-V0	-Isg	GROUND CURRENT (Isg)
Current	Forward	Ipol	Isg	GROUND CURRENT (Isg)
Current	Reverse	Ipol	-Isg	GROUND CURRENT (Isg)
Dual	Forward	-V0	Isg	GROUND CURRENT (Isg)
Dual	Forward	Ipol	Isg	GROUND CURRENT (Isg)
Dual	Reverse	-V0	-Isg	GROUND CURRENT (Isg)
Dual	Reverse	Ipol	-Isg	GROUND CURRENT (Isg)

Where:

$$V_0 = 1/3 * (V_{ag} + V_{bg} + V_{cg}) = \text{zero sequence voltage}$$


When POLARIZING VOLTAGE is set to “Measured VX,” one-third of this voltage is used in place of V_0 . The following figure explains the usage of the voltage polarized directional unit of the element by showing the voltage-polarized phase angle comparator characteristics for a phase A to ground fault, with:

- ECA = 90° (element characteristic angle = centerline of operating characteristic)
- FWD LA = 80° (forward limit angle = the ± angular limit with the ECA for operation)
- REV LA = 80° (reverse limit angle = the ± angular limit with the ECA for operation)

The element incorporates a current reversal logic: if the reverse direction is indicated for at least 1.25 of a power system cycle, the prospective forward indication will be delayed by 1.5 of a power system cycle. The element is designed to emulate an electromechanical directional device. Larger operating and polarizing signals will result in faster directional discrimination bringing more security to element operation.

The forward-looking function is designed to be more secure as compared to the reverse-looking function, and should therefore be used for the tripping direction. The reverse-looking function is designed to be faster as compared to the forward-looking function and should be used for the blocking direction. This allows better protection coordination.

The above bias should be taken into account when using the Sensitive Ground Directional Overcurrent element to directionalize other protection elements.

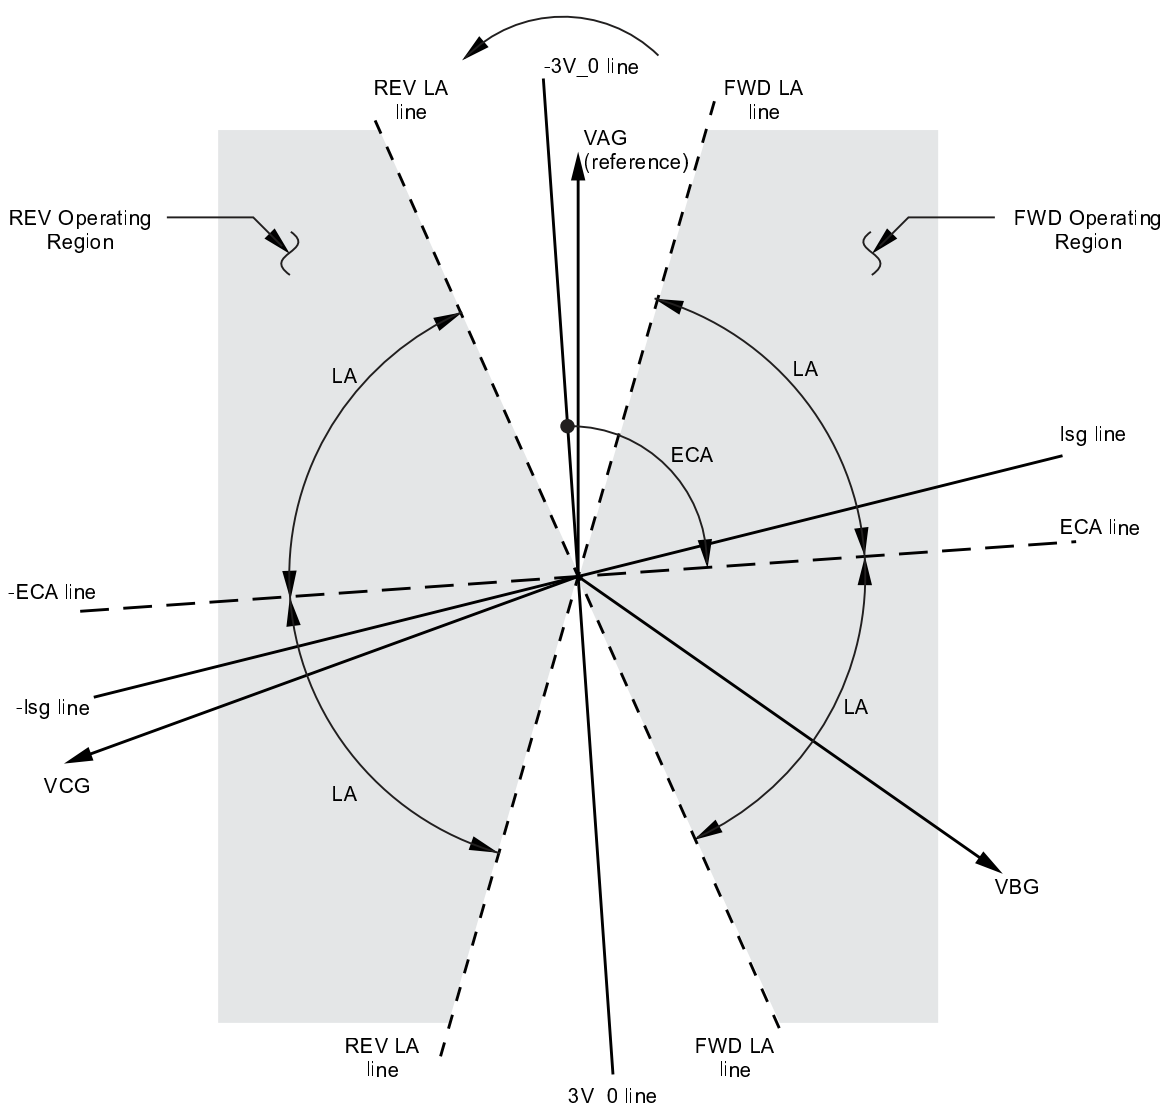

827805Y1.CDR

Figure 195: Sensitive Ground Directional Voltage-polarized Characteristics

For 850D dual feeder applications, when the signal input is from CT Bank 1 – J1, VT Bank 1 -J2 is used as the polarizing voltage source. Similarly, when the signal input is from CT Bank 2 – K1, VT Bank 2 – K2 is used as the polarizing voltage source.

Path: *Setpoints > Protection > Group 1(6) > Current > Sens Ground Directional OC 1(X)*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

POLARIZING MODE

Range: Voltage, Current, Dual

Default: Voltage

This setting selects the polarizing mode for the directional unit.

- If Voltage polarizing mode is selected, the element uses the zero-sequence voltage angle for polarization. Select either the zero-sequence voltage V_0 , calculated from the phase voltages, or the zero-sequence

voltage supplied externally as the auxiliary voltage V_X . The calculated V_0 can be used as polarizing voltage only if the voltage transformers are connected in Wye. The auxiliary voltage can be used as the polarizing voltage if the auxiliary voltage is connected to a zero-sequence voltage source (such as the open delta connected secondary of VTs). The zero-sequence (V_0) or auxiliary voltage (V_X), accordingly, must be greater than $0.005 \times V_T$ to be validated for use as a polarizing signal. If the polarizing signal is invalid, neither forward nor reverse indication is given.

- If Current polarizing mode is selected, the element uses the angle of the ground current measured on the ground current input. The ground current must be greater than $0.05 \times CT$ to be validated as a polarizing signal. If the polarizing signal is not valid, neither forward nor reverse indication is given. For a choice of current polarizing, it is recommended that the polarizing signal be analyzed to ensure that a known direction is maintained irrespective of the fault location.
- If Dual polarizing mode is selected, the element performs both directional comparisons as described above. A given direction is confirmed if either voltage or current comparators indicate so. If a conflicting (simultaneous forward and reverse) indication occurs, the forward direction overrides the reverse direction.

POLARIZING VOLTAGE

Range: Calculated V_0 , Measured $V_X(VN)$

Default: Calculated V_0

Selects the polarizing voltage used by the directional unit when "Voltage" or "Dual" polarizing mode is set. The polarizing voltage can be programmed to be either the zero-sequence voltage calculated from the phase voltages ("Calculated V_0 ") or supplied externally as an auxiliary voltage ("Measured $V_X(VN)$ ").

FORWARD ECA

Range: -90° to 90° in steps of 1°

Default: 75°

This setting defines the element characteristic angle (ECA) for the forward direction in "Voltage" polarizing mode. "Current" polarizing mode uses a fixed ECA of 0° . The ECA in the reverse direction is the angle set for the forward direction shifted by 180° .

FORWARD LIMIT ANGLE

Range: 40° to 90° in steps of 1°

Default: 90°

This setting defines a symmetrical (in both directions from the ECA) limit angle for the forward direction.

FORWARD PICKUP

Range: 0.005 to $3.000 \times CT$ in steps of $0.001 \times CT$

Default: $0.050 \times CT$

This setting defines the Pickup level for the overcurrent unit of the element in the forward direction.

REVERSE LIMIT ANGLE

Range: 40° to 90° in steps of 1°

Default: 90°

This setting defines a symmetrical (in both directions from the ECA) limit angle for the reverse direction.

REVERSE PICKUP

Range: 0.005 to $3.000 \times CT$ in steps of $0.001 \times CT$

Default: $0.050 \times CT$

This setting defines the Pickup level for the overcurrent unit of the element in the reverse direction.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

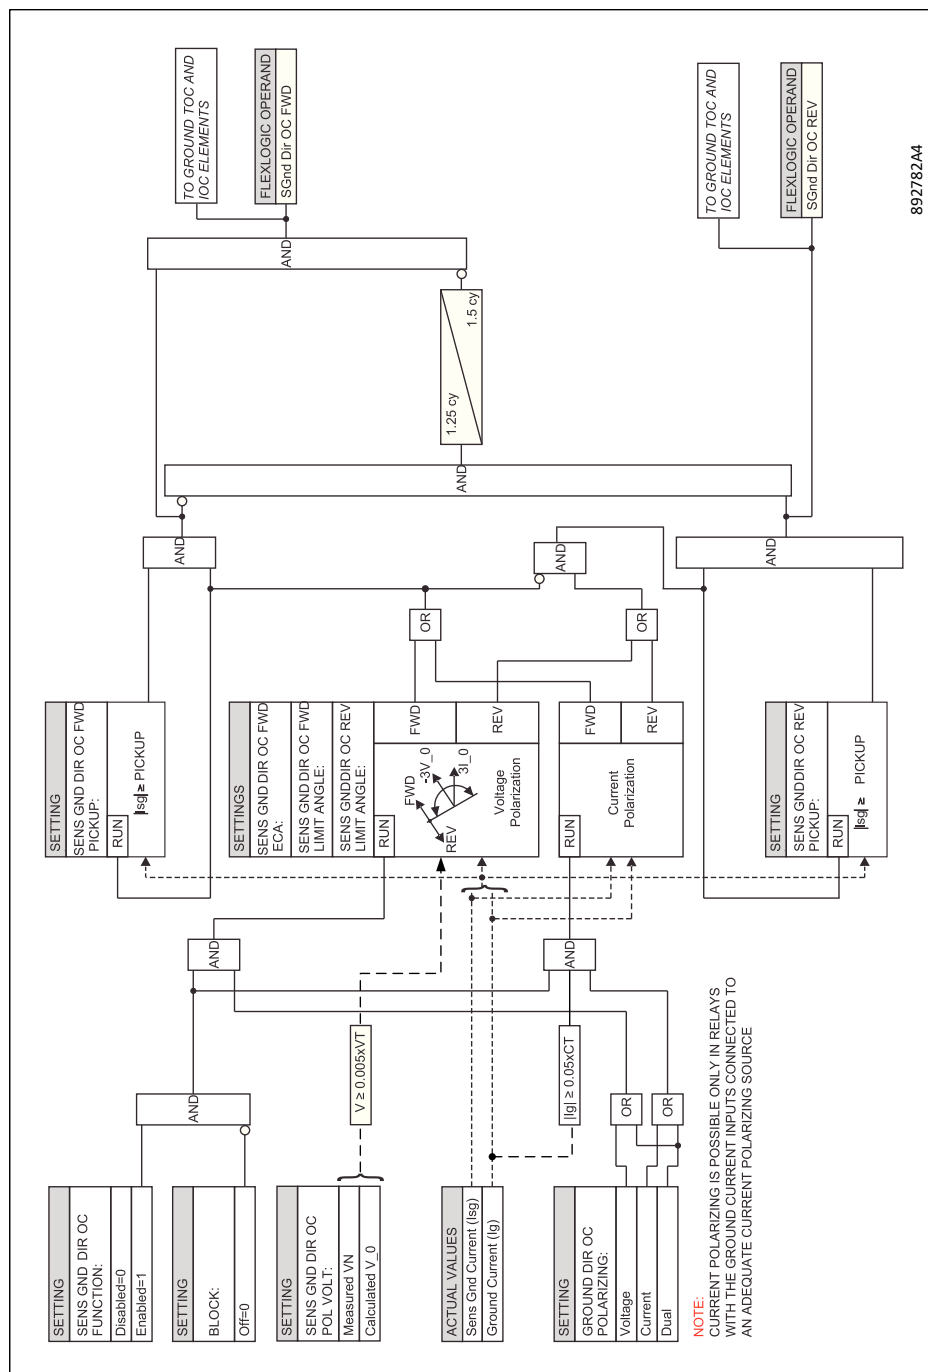


Figure 196: Sensitive Ground Directional Overcurrent Protection logic diagram

9.4.15 RESTRICTED GROUND FAULT (87G)

Restricted Ground Fault (RGF) protection provides ground fault detection for low-magnitude ground fault currents primarily for ground faults close to the neutral point of the wye connected transformer winding. An internal ground fault on an impedance grounded wye winding produces a low magnitude ground fault current depending on the position of the fault with respect to the winding neutral point.

The diagram below shows the dependence of the fault current on the fault distance from the neutral point.

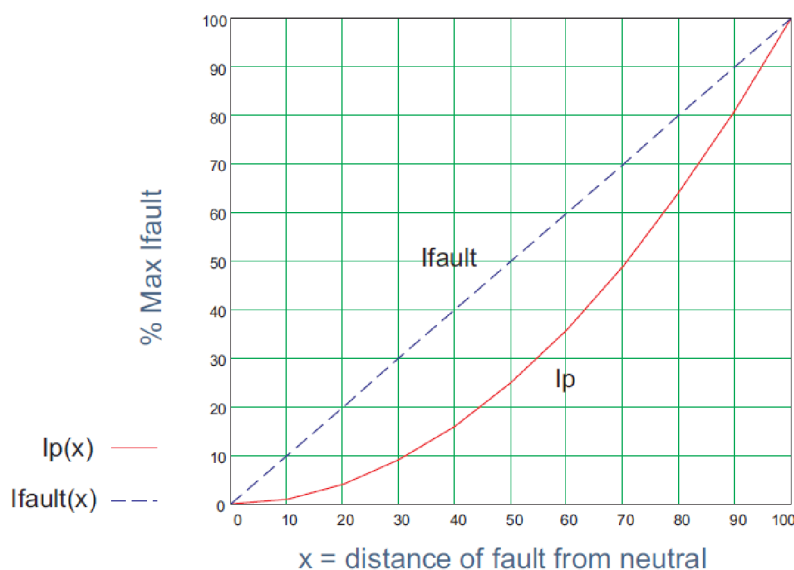


Figure 197: Fault current with respect to distance from neutral

The resultant primary current can be negligible for ground winding faults within 35% of the distance from the neutral point since the fault voltage is not the system voltage, but rather the result of the transformation ratio between the primary windings and the percentage of shorted turns.

Application of Restricted Ground Fault protection extends the fault coverage towards the neutral point for low-impedance grounded winding.

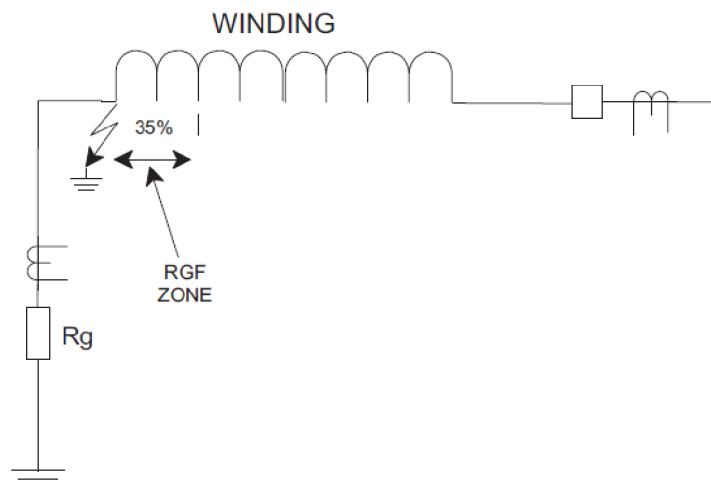


Figure 198: Restricted Ground Fault zone of protection

RGF protection in the 8-series range of relays uses a low impedance current differential scheme. The relay calculates the magnitude of the ground differential current as an absolute value from the vector summation of the computed residual current, and the measured ground current, and applies a restraining current defined as the maximum measured line current (I_{max}) to produce a percent slope value. The slope setting allows determination of the sensitivity of the element based on the class and quality of the CTs used. The figure below shows typical wiring between the winding and ground CTs and the CT terminals, to assure correct performance of the protection. Both wye and zig-zag type transformers are wired in the same manner. Restricted Ground (Earth) Fault protection is also available for delta windings with an in-zone grounding transformer, and for Delta corner grounded windings.

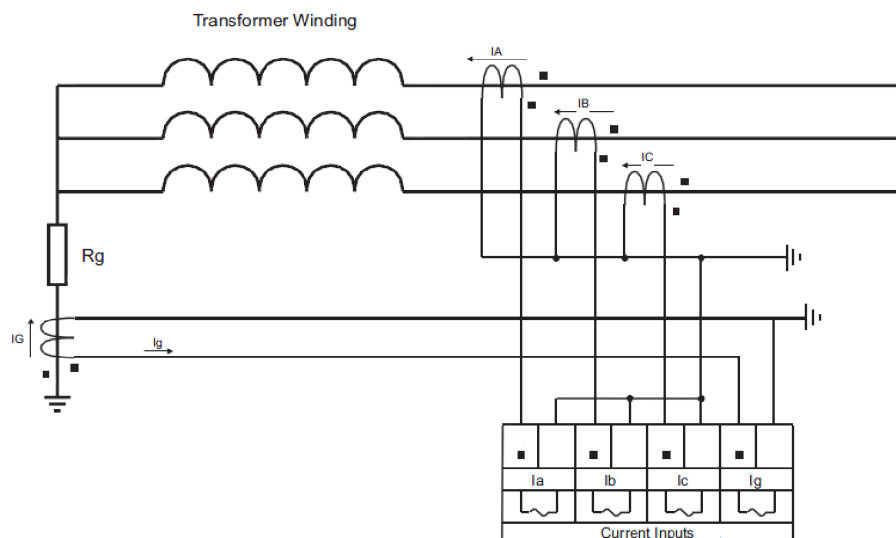


Figure 199: Three CT wiring for the Restricted Ground Fault protection

RGF protection includes ground current supervision mechanism to provide more security during external non-ground faults associated with CT saturation. This can cause spurious neutral currents, which may jeopardize the security of the RGF 1 protection. Therefore, when the **GROUND CURRENT SUPERVISION** setting is enabled, the algorithm checks whether the ground current measured by the relay satisfies the selected **GROUND CURRENT SUPERV LEVEL**, before making an operation decision. The ground current supervision is not active if the **GROUND CURRENT SUPERVISION** is selected as *Disabled*. The RGF 1 protection works without the supervision as well.

The settings of this function are applied to the ground and all three phase currents to produce pickup and trip flags. The RGF 1 pickup flag is asserted, when the restrained ground differential current is above the PKP value. The RGF 1 operate flag is asserted if the element stays picked up for the time defined in **RGF 1 PKP DELAY**. The element drops from Pickup without operation, if the calculated restrained ground differential current drops below 97-98% of the Pickup value, before the time for operation is reached. The Restricted Ground Fault function can be inhibited by a blocking input.

Path: *Setpoints > Protection > Group 1(6) > Current > RGF 1 (X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1 -J1

PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 0.300 x CT

This setting defines the minimum Pickup level of the ground differential current required for operation. The Pickup value is expressed in times Phase CT (primary) rating.

SLOPE

Range: 0 to 100% in steps of 1%

Default: 50%

This setting defines the slope as the ratio between the ground differential current and the maximum line current (ground restraining current) as a percentage. The RGF 1 element operates if the actual ground differential/restraint ratio is greater than the slope and the ground differential current is greater than the RGF 1 Pickup setting.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The RGF 1 Pickup Time Delay setting defines the time required for the RGF 1 element to operate after it has picked up. This time delay overrides the spurious ground differential current condition caused by CT saturation due to external non-ground faults, or during transformer energization. Since RGF 1 protection is intended to detect small ground fault currents, delayed clearance of such a fault is not a high concern. On the other hand delayed RGF 1 operation due to a spurious ground differential current caused by an out-of-zone fault can be used as a backup for downstream protections should they fail to clear the fault.

GND CURR SUPERV

Range: Disabled, Enabled

Default: Disabled

This setting enables or disables the ground current supervision of the RGF 1 function. If set to *Disabled*, the RGF 1 function works without ground current supervision. The ground current level is monitored if the setting is set to *Enabled*.

GND CURR SUPERV LEVEL

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 0.300 x CT

This setting defines the level of measured ground current above which operation of the RGF 1 protection is allowed. The setting is presented as a times ground CT (primary) rating. The measured ground current is compared to the setting only if the **GROUND CURRENT SUPERVISION** is set to *Enabled*.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

Example: Transformer : 5MVA, 13.8kV/4.16kV, D/Yg1 type

- $R_g = 10 \text{ ohms}$
- Phase CTs: 800:5
- Ground CT: 300:5
- $I_{fgnd} (\text{max}) = 4.16\text{kV} / (10 \text{ ohms} \cdot \sqrt{3}) = 240\text{A}$ - maximum ground fault current

To detect a ground fault on the Wye winding at 15% distance from the neutral point, the relay shall detect ground differential current of:

- $I_{gd} = (15 \times 240) / 100 = 36 \text{ A} / 800 = 0.045 \times \text{CT}$ – PKP setting for the RGF protection

The transformer loading is almost unaffected for ground faults close to the winding neutral, so that the winding rated load can be used as a reference in defining the RGF 1 slope setting. The rated load for 4.16kV Wye winding is:

- $I_{rated} = 5\text{MVA} / (4.16\text{kV} \cdot \sqrt{3}) = 693 \text{ A}$

Slope setting, % = $(36 \text{ A} / 693\text{A}) \cdot 100 = 5.1\%$. Select 5% if the transformer is expected to run most of the time at full load. If most of the time the transformer runs at lower than the nominal loads, the slope setting can be set to higher value:

- @ 70% load the slope setting would be: $(36 / 485 \text{ A}) \cdot 100 = 7\%$
- @ 50% load the slope setting would be: $(36 / 346 \text{ A}) \cdot 100 = 10\%$
- @ 30% load the slope setting would be: $(36 / 208 \text{ A}) \cdot 100 = 17\%$

The ground current supervision feature and/or the RGF 1 Pickup time delay can be used if CT saturation due to heavy external fault, is a concern.

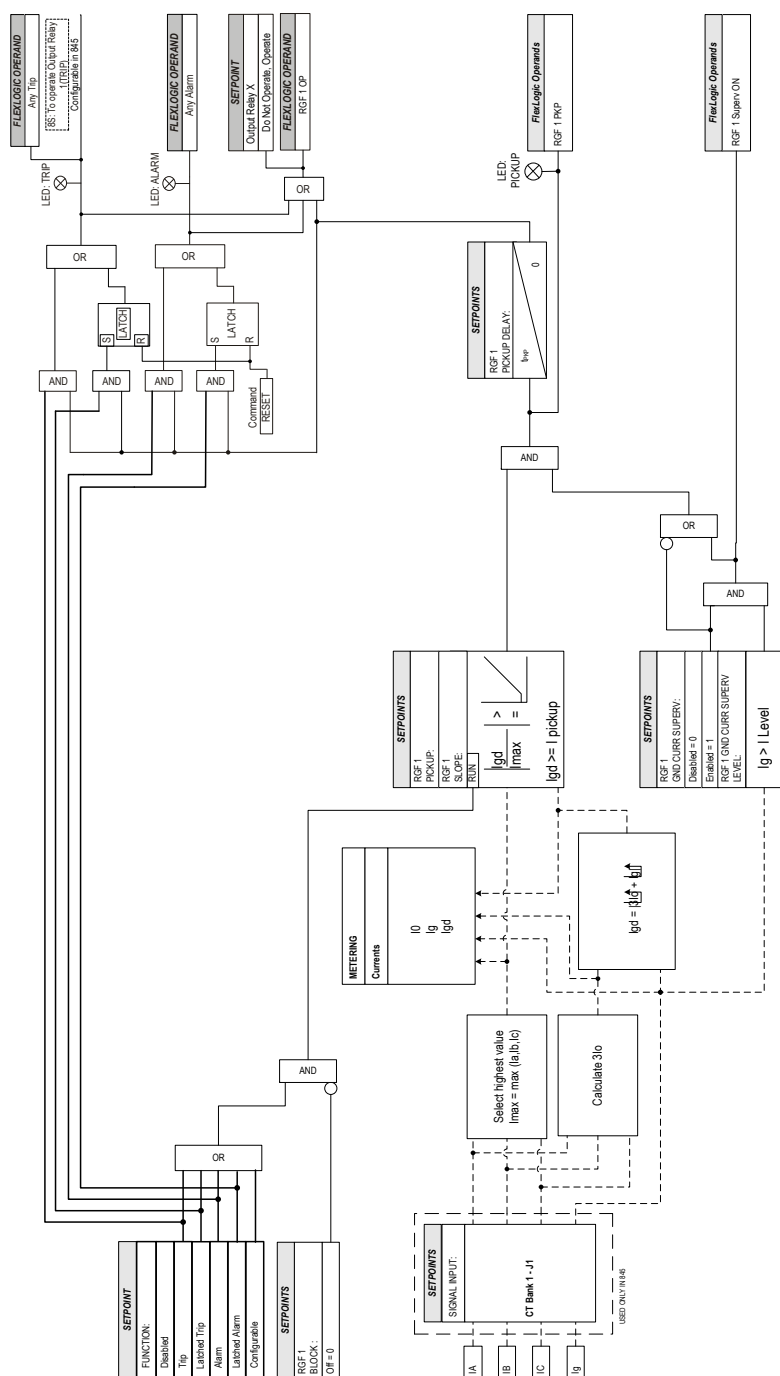


Figure 200: Restricted Ground Fault Protection Logic Diagram

9.4.16 NEGATIVE SEQUENCE INSTANTANEOUS OVERCURRENT PROTECTION (50_2)

The Negative Sequence Instantaneous Overcurrent element may be used to determine and clear unbalance in the system. The input for computing negative sequence current is the fundamental phasor value. The relay computes the negative sequence current magnitude $|I_2|$ using the following formula:

$$|I_2| = \frac{1}{3} * |I_a + I_b * (1 \angle 240^\circ) + I_c * (1 \angle 120^\circ)|$$

The element responds to the negative-sequence current and applies a positive sequence restraint for better performance: a small portion (12.5%) of the positive sequence current magnitude is subtracted from the negative sequence current magnitude when forming the operating quantity:

$$I_{op} = |I_2| - K * |I_{1}|$$

where $K = 1/8$ and $|I_{1}| = 1/3 * |I_a + I_b * (1 \angle 120^\circ) + I_c * (1 \angle 240^\circ)|$

The positive sequence restraint allows for more sensitive settings by counterbalancing spurious negative-sequence currents resulting from:

- system unbalances under heavy load conditions
- current transformer (CT) transformation errors during three-phase faults
- fault inception and switch-off transients during three-phase faults.

The positive sequence restraint must be considered when testing for Pickup accuracy and response time (multiple of Pickup). The operating quantity depends on the way the test currents are injected into the relay (single-phase injection: $I_{op} = 0.2917 * I_{injected}$; three-phase injection, opposite rotation: $I_{op} = I_{injected}$).

The settings of this function are applied to the calculated negative sequence current to produce *Pickup* and *Trip* flags. The Negative Sequence IOC Pickup flag is asserted, when the negative sequence current is above the pickup value. The Negative Sequence IOC Operate flag is asserted if the element stays picked up for the time defined by the Negative Sequence IOC **PICKUP DELAY** setting. If the Pickup time delay is set to 0.000 seconds, the Pickup and Operate flags are asserted at the same time. The element drops from Pickup without operation if the negative sequence current drops below 97 to 98% of the Pickup value.

Path: *Setpoints > Protection > Group 1(6) > Current > Negative Sequence IOC 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the selection for the current input bank. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

PICKUP

Range: 0.020 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

DIRECTION

Range: Non-Directional, NegSeq Dir [1-4] FWD, NegSeq Dir [1-4]

Default: Non-Directional

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

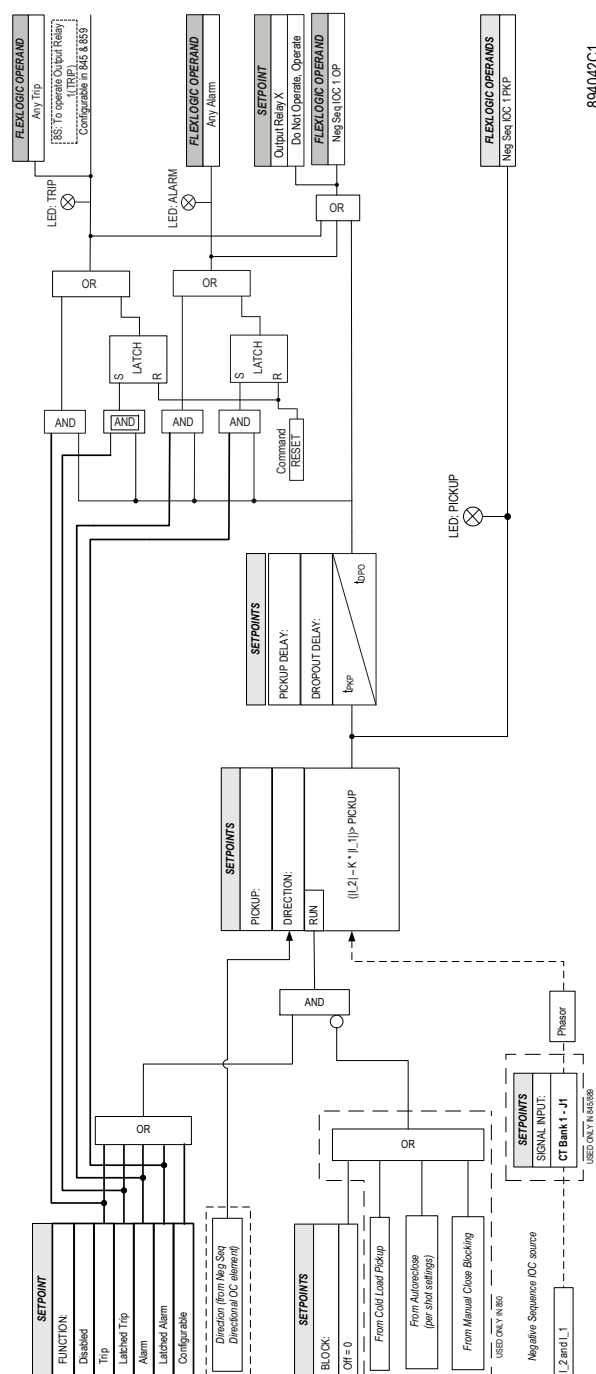

894042C1

Figure 201: Negative Sequence Instantaneous Overcurrent logic diagram

9.4.17 NEGATIVE SEQUENCE DIRECTIONAL OVERCURRENT PROTECTION (67_2)

The relay is equipped with the Negative Sequence Directional Overcurrent protection element. The element provides both forward and reverse fault direction indications through its output operands Neg Seq Dir OC FWD and Neg Seq Dir OC REV, respectively. The output operand is asserted if the magnitude of the operating current is above a Pickup level (overcurrent unit) and the fault direction is seen as forward or reverse, respectively (directional unit). The overcurrent unit of the element essentially responds to the magnitude of a fundamental frequency phasor of the negative sequence phase current. A positive sequence restraint is applied for better performance: a small

user-programmable portion of the positive sequence current magnitude is subtracted from the negative sequence current magnitude when forming the element operating quantity:

$$I_{op} = |I_{-2}| - K * |I_{-1}|$$

The positive sequence restraint allows for more sensitive settings by counterbalancing spurious negative sequence currents resulting from:

- system unbalances under heavy load conditions
- current transformer (CT) transformation errors
- fault inception and switch-off transients.

The operating quantity depends on the way the test currents are injected into the relay. For single phase injection:

$$I_{op} = 1/3 * (1 - K) \times I_{injected} \text{ for } I_{-2} \text{ mode}$$

The directional unit uses the negative sequence current (I_{-2}) and negative-sequence voltage (V_{-2}).

The following tables define the Negative Sequence Directional Overcurrent element.

Negative Sequence Directional Overcurrent Unit

Mode	Operating Current
Negative-Sequence	$I_{op} = I_{-2} - K \times I_{-1} $


Negative Sequence Directional Unit

Direction	Compared Phasors	
Forward	$-V_{-2}$	$I_{-2} \times 1 \angle ECA$
Reverse	$-V_{-2}$	$-(I_{-2} \times 1 \angle ECA)$

The negative sequence voltage must be greater than $0.02 \times V_T$ to be validated for use as a polarizing signal. If the polarizing signal is not validated, neither forward nor reverse indication is given. The figure below explains the usage of the voltage polarized directional unit of the element by showing the phase angle comparator characteristics for a phase A to ground fault, with settings of:

- $ECA = 75^\circ$ (element characteristic angle = centerline of operating characteristic)
- $FWD\ LA = 80^\circ$ (forward limit angle = $\pm$ the angular limit with the ECA for operation)
- $REV\ LA = 80^\circ$ (reverse limit angle = $\pm$ the angular limit with the ECA for operation)

The element incorporates a current reversal logic: if the reverse direction is indicated for at least 1.25 of a power system cycle, the prospective forward indication is delayed by 1.5 of a power system cycle. The element is designed to emulate an electromechanical directional device. Larger operating and polarizing signals result in faster directional discrimination bringing more security to the element operation.

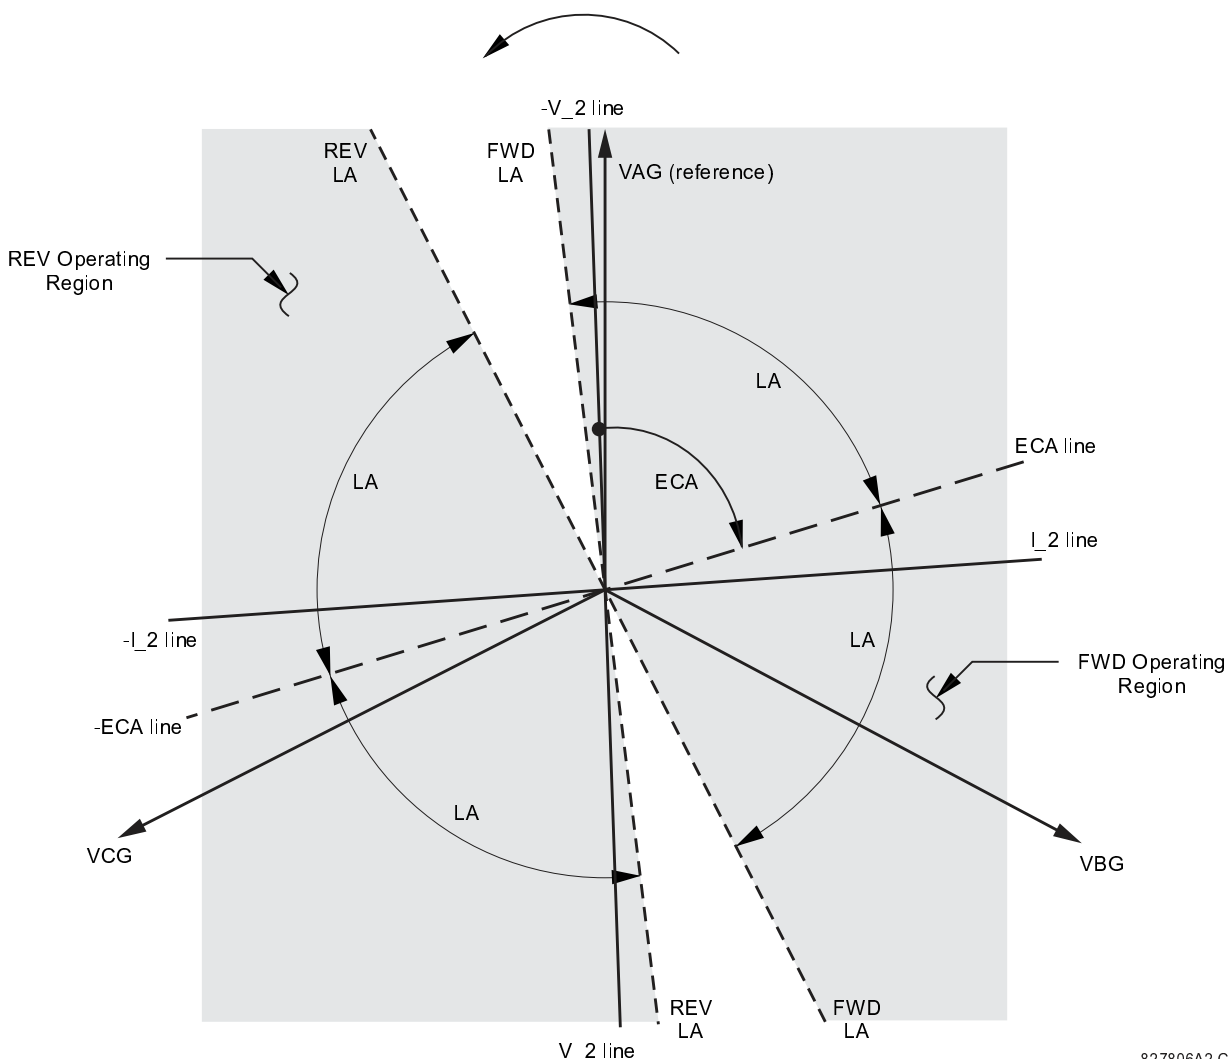

827806A2.CDR

Figure 202: Negative Sequence Directional Characteristic

The forward-looking function is designed to be more secure compared to the reverse-looking function, and should therefore be used for the tripping direction. The reverse-looking function is designed to be faster compared to the forward-looking function and should be used for the blocking direction. This allows better protection coordination. The above bias should be taken into account when using the Negative Sequence Directional Overcurrent element to directionalize other protection elements.

For dual feeder applications, when the signal input is from CT Bank 1 – J1, VT Bank 1 -J2 is used as the polarizing voltage source. Similarly, when the signal input is from CT Bank 2 – K1, VT Bank 2 – K2 is used as the polarizing voltage source.

Path: *Setpoints > Protection > Group 1(6) > Current > Negative Sequence Dir OC 1(X)*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1 -J1

This setting provides a selection for the CT Bank input.

POS-SEQ RESTRAINT

Range: 0.000 to 0.500 in steps of 0.001

Default: 0.063

The setting controls the positive-sequence restraint. Set to 0.125. Set to zero to remove the restraint. Set higher if large system unbalances or poor CT performance are expected.

FORWARD ECA

Range: 0 to -90° in steps of 1°

Default: -75°

The setting selects the element characteristic angle (ECA) for the forward direction. The element characteristic angle in the reverse direction is the angle set for the forward direction shifted by 180°.

FORWARD LIMIT ANGLE

Range: 40 to 90° in steps of 1°

Default: 90° lag

The setting defines a symmetrical (in both directions from the ECA) limit angle for the forward direction.

FORWARD PICKUP

Range: 0.020 to 30.000 x CT in steps of 0.001 x CT

Default: 0.050 x CT

The setting defines the Pickup level for the overcurrent unit in the forward direction. When selecting this setting it must be kept in mind that the design uses a positive-sequence restraint technique.

REVERSE LIMIT ANGLE

Range: 40 to 90° in steps of 1°

Default: 90° lag

The setting defines a symmetrical (in both directions from the ECA) limit angle for the reverse direction.

REVERSE PICKUP

Range: 0.020 to 30.000 x CT in steps of 0.001 x CT

Default: 0.050 x CT

The setting defines the Pickup level for the overcurrent unit in the reverse direction. When selecting the setting it must be kept in mind that the design uses a positive-sequence restraint technique.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

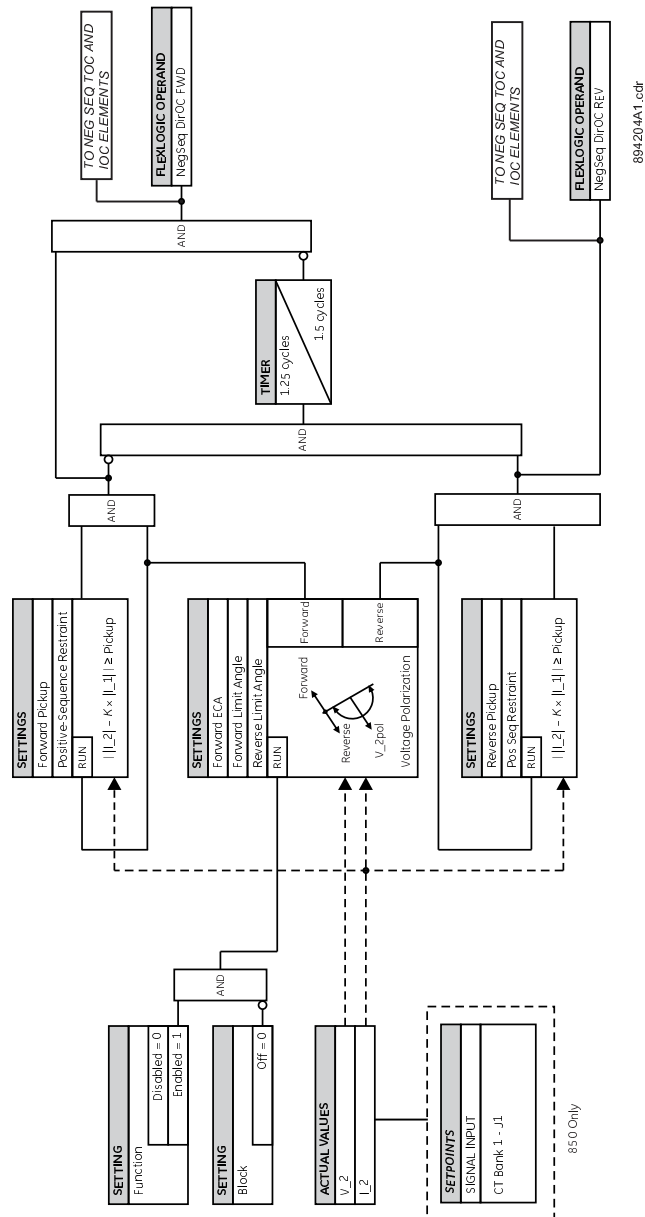


Figure 203: Negative Sequence Directional Overcurrent Protection logic diagram

9.4.18 LOAD ENCROACHMENT

The Load Encroachment element responds to the positive-sequence voltage and current and applies a characteristic shown in the figure below:

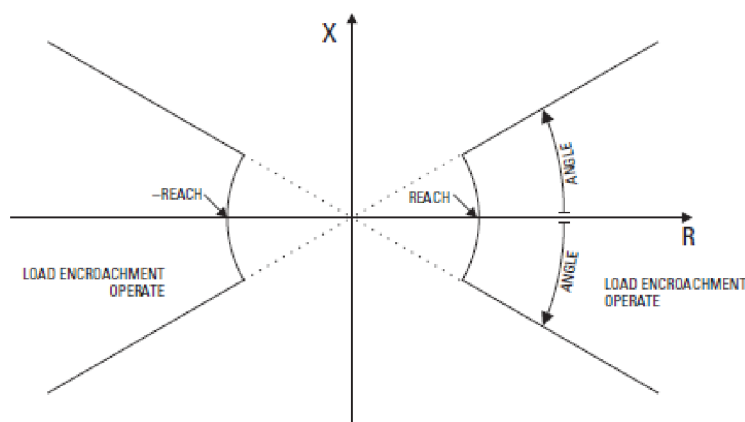


Figure 204: Load Encroachment Characteristic

The element operates if the positive-sequence voltage is above a set level, and asserts its output signal so that it can be used to block selected protection elements such as Phase Overcurrent.

The settings of this function are applied to the positive sequence voltage and positive sequence impedance. The Load Encroachment Pickup flag is asserted when the impedance is inside the Load Encroachment operating area (see the above figure) and the positive sequence voltage is above the minimum operating value. The Load Encroachment Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay.

Load Encroachment can be inhibited by a blocking input.

Path: *Setpoints > Protection > Group 1(6) > Current > Load Encroachment*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

CT INPUT

Range: CT Bank 1 –J1, CT Bank 2 –K1

Default: CT Bank 1 -J1

This setting provides the selection for the current bank input.

MODE

Default: 3Ph(based on Z1)

Range: 3Ph(based on Z1), 1Ph(based on Z)

This setting sets the Load Encroachment to three-phase or single-phase blocking.

If **Load Encroachment Mode** is *3ph* (based on Z1):

Positive sequence voltage (V_1) and positive sequence current (I_1) are considered for Z1 calculation.

Only 3 phase calculations are performed, individual phase calculations are not necessary.

Output operands: Load Encro FWD, Load Encro REV, Load Encro PKP, Load Encro OP

If **Load Encroachment Mode** is *1ph* (based on Z),

Phase voltages ($V_a/V_b/V_c$) and phase current ($I_a/I_b/I_c$) are considered for Z calculation.

Only individual phase calculations are made. 3 phase calculations are not necessary.

Output operands: Load Encro FWD A/B/C, Load Encro REV A/B/C, Load Encro PKP, Load Encro OP A/B/C
are what?, are set?

DIRECTION

Range: Reverse, Forward, Both

Default: Both

This setting sets the Load Encroachment direction measurement.

When Direction setting is set as FORWARD:

$$\text{PICKUP} = \{|\underline{V}_1| > \text{FORWARDREACH} \cdot |\underline{I}_1|\} \text{ AND } \{|\text{angle}(\underline{V}_1) - \text{angle}(\underline{I}_1)| < \text{FORWARDANGLE}\}$$

When Direction setting is set as REVERSE:

$$\text{PICKUP} = \{|\underline{V}_1| > \text{REVERSEREACH} \cdot |\underline{I}_1|\} \text{ AND } \{|\text{angle}(\underline{V}_1) - \text{angle}(\underline{I}_1)| > 180^\circ - \text{REVERSEANGLE}\}$$

MINIMUM VOLTAGE

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

The setting sets the minimum operating positive-sequence voltage/phase voltage required for operation of the Load Encroachment element. If this voltage is below the set minimum threshold, the element does not operate.

Note:

If 3-phase VT is delta connected, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

MAXIMUM I2

Range: 0.00 to 1.50 x CT in steps of 0.01 x VT

Default: 0.20 x CT

This setting sets the Negative Phase Sequence current threshold for the Load Encroachment function.

FORWARD REACH

Range: 0.02 to 250.00 Ω in steps of 0.01 Ω

Default: 5.00 Ω

The setting specifies the resistive reach of the element as shown in the Load Encroachment characteristic diagram. The setting is entered in secondary ohms and is calculated as the positive-sequence resistance seen by the relay under maximum load conditions and unity power factor.

FORWARD ANGLE

Range: 5 to 85° in steps of 1°

Default: 30°

This setting specifies the size of the blocking region as shown on the Load Encroachment characteristic diagram, and applies this to the positive-sequence impedance.

REVERSE REACH

Range: 0.02 to 250.00 Ω in steps of 0.01 Ω

Default: 5.00 Ω

This setting specifies the resistive reach of the element as shown in the Load Encroachment characteristic diagram. This setting should be entered in secondary ohms and be calculated as the positive-sequence resistance seen by the relay under maximum load conditions and unity power factor.

REVERSE ANGLE

Range: 5 to 85° in steps of 1°

Default: 30°

This setting specifies the size of the blocking region as shown on the Load Encroachment characteristic diagram and applies this to the positive-sequence impedance.

PICKUP DELAY

Range: 0.000 to 6000.00 s in steps of 0.001 s

Default: 0.000 s

Note:

It has to be taken into account that the Pickup time delay programmed in the overcurrent elements (or the other elements) that are blocked with Load Encroachment must be higher than the time programmed in the Load Encroachment function, in order to avoid false tripping.

DROPOUT DELAY

Range: 0.000 to 6000.00 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

Note:

As the Load Encroachment function operates during normal conditions it is recommended that targets be disabled.



446

9.5 VOLTAGE ELEMENTS OVERVIEW

The 889 generator protection relay provides the following voltage protection elements:

- Phase reversal
- Undervoltage curves (UV Curves)
- Phase undervoltage (Phase UV)
- Auxiliary undervoltage (Auxiliary UV)
- Phase overvoltage (Phase OV)
- Auxiliary overvoltage 1 (Auxiliary OV1)
- Auxiliary overvoltage 2 (Auxiliary OV2)
- Neutral overvoltage (Neutral OV)
- Negative sequence overvoltage (Neg Seq OV)
- Volts per Herz 1
- Volts per Herz 2

9.5.1 UNDERVOLTAGE CURVES

The undervoltage elements can be programmed to have an inverse time delay characteristic. The undervoltage delay setpoint defines a family of curves as shown below.

The operating time is given by:

$$T = D / (1 - V/V_{pkp})$$

Where:

- T = Operating Time
- D = Undervoltage **PICKUP DELAY** setpoint (for D = 0.00 operates instantaneously)
- V = Voltage as a fraction of the nominal VT Secondary Voltage
- V_{pkp} = Undervoltage Pickup Level

The element resets instantaneously if the applied voltage exceeds the dropout voltage. The delay setting selects the minimum operating time of the phase undervoltage.

Note:

*At 0% of Pickup, the operating time equals the Undervoltage **PICKUP TIME DELAY** setpoint.*

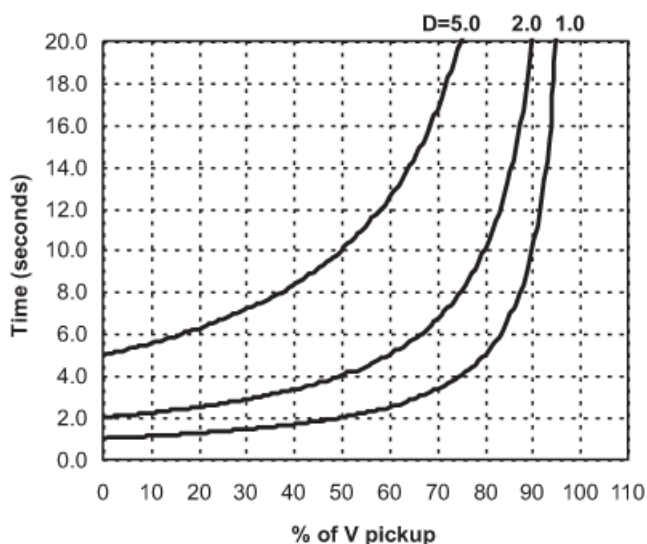


Figure 206: Inverse Time Undervoltage Curves

If FlexCurves are selected, the operating time determined based on following equation:

$$T = \text{FlexCurve} (V_{pkp} / V)$$

Note:

FlexCurve reverses the ratio of voltages. The ratio of set pickup value to the measured voltage.

Example: For a Pickup set to $0.9 \times V_T$, when the measured voltage is $0.82 \times V_T$, the ratio would be $0.9/0.8 = 1.1$, therefore in the FlexCurve, the corresponding Trip time setting entry is at $1.1 \times PKP$ (not at $0.82 \times PKP$). On the other hand, when the measured voltage is $1 \times V_T$, the ratio is $0.9/1 = 0.9$, therefore, in the FlexCurve, the corresponding Reset time entry is at $0.9 \times PKP$.

9.5.2 PHASE REVERSAL (47)

The relay can detect the phase rotation of the three phase voltages. When all three Phase-to-Phase Voltages (V_{ab} , V_{bc} and V_{ca}) are greater than 50% of V_T , if the phase rotation of the three phase voltages is not the same as the Phase Rotation or Reverse Phase Rotation (under **Setpoints > System > Power System**), and there is no fuse failure, either an alarm or a trip will occur within the programmed **PICKUP DELAY** time.

Note:

*V_T is the secondary voltage programmed under **Setpoints > System > Voltage Sensing > Phase VT Secondary**.*

Path: **Setpoints > Protection > Group 1(6) > Voltage > Phase Reversal**

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

This setting enables the Phase Reversal functionality.

PICKUP DELAY

Range: 0.00 to 180.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies the pickup delay of the element.

DROPOUT DELAY

Range: 0.00 to 180.00 s in steps of 0.01 s

Default: 1.00 s

This setting defines the reset delay of the element.

BLOCK

Range: Any FlexLogic Operand

Default: Off

The Phase Reversal can be blocked by any asserted FlexLogic operand.

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-Reset, Latched, Disabled

Default: Self-Reset

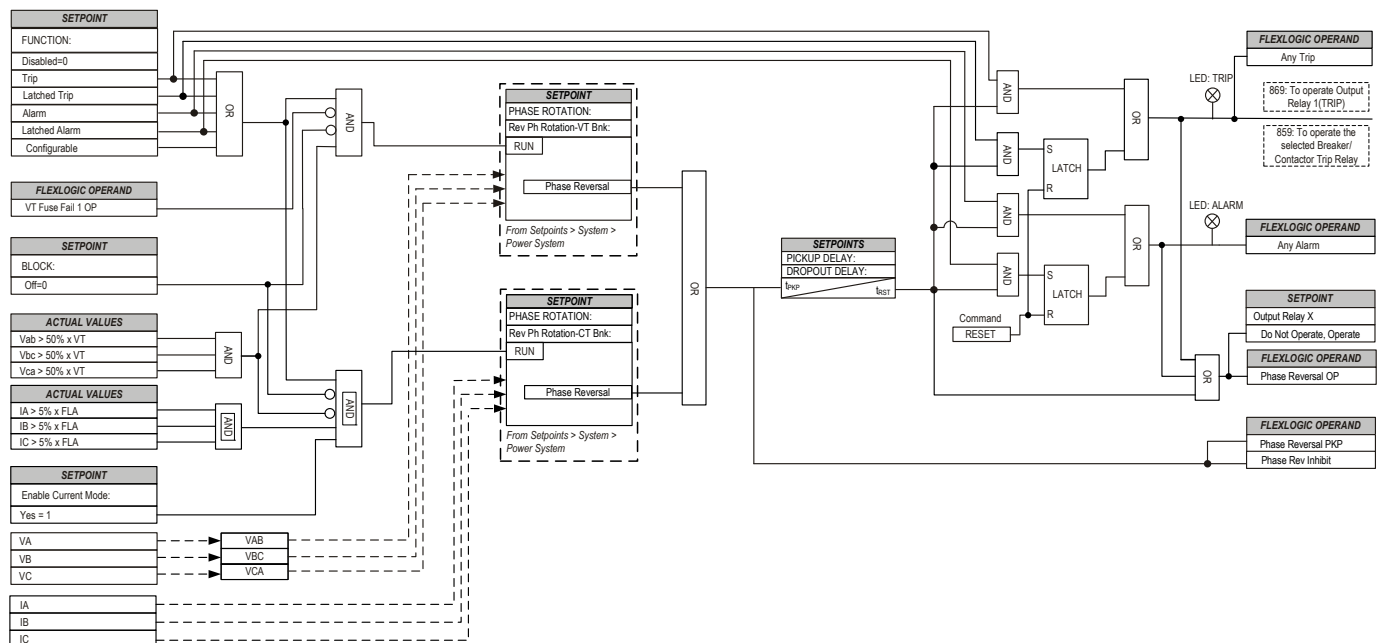

894161C1

Figure 207: Phase Reversal logic diagram

9.5.3 PHASE UNDERVOLTAGE PROTECTION (27P)

The Phase Undervoltage element may be used to protect voltage sensitive loads and system components against sustained undervoltage conditions. This element may be used for permissive functions, initiation of the source transfer schemes, and similar functions.

The Phase Undervoltage element may be set as an instantaneous element with no time delay or as a time delayed element which can be configured with definite time, inverse time or FlexCurves. The Phase Undervoltage element has programmable minimum operating threshold to prevent some undesired operation when voltage is not available. The input voltages are the three phase to phase voltages from delta connected VTs (PTs) or three phase to ground voltages from wye connected VTs (PTs).

The settings of this function are applied to each of the three voltage inputs to produce Pickup and Trip flags per voltage input. The UV Pickup flag is asserted, when the measured voltage on any of the three voltage inputs is below the PKP value. The UV Trip flag is asserted if the element stays picked up for the time defined by Pickup time delay or for the time defined by the selected inverse curve / FlexCurve, and number of voltages required for operation matches the number of voltages selected in the setting. The element drops from Pickup without operation if the measured voltage rise above 102 to 103% of the Pickup value, before the time for operation is reached.

The **MINIMUM VOLTAGE** setting selects the operating voltage below which the element is blocked (a setting of 0 allows a dead source to be considered a fault condition).

This element may be used to give a desired time delay operating characteristic versus the applied voltage (phase to ground or phase to phase for wye VT connection, or phase to phase for delta VT connection) or as a definite time element. For the inverse time setpoint, the undervoltage delay setpoint defines a family of curves.

Path: *Setpoints > Protection > Group 1(6) > Voltage Elements > Phase UV 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

MODE

Range: Phase to Ground, Phase to Phase

Default (3.xx): Phase to Ground

Default (4.10): Phase to Phase

This setting provides the selection of phase to ground and phase to phase voltages for a Wye VT connection (phase to phase for delta connected VT connection).

Note:

Only Phase-to-Phase mode should be used when Delta/Single' VT Connection Type and Pseudo Reference Phase-to-Phase is programmed for the Phase VT Connection setting under System/Voltage Sensing.

PICKUP

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 1.00 x VT

This setting sets the Phase Undervoltage Pickup level specified per times VT.

For example, a Pickup setting of 0.80 x VT with a 13800:115 VT translates into 11.04kV (or 92V secondary). If the mode selection is phase to phase and the Setpoints/System Setup/Voltage Sensing/Phase VT Connection selection is Wye, the previous example translates to the phase to phase voltage value of 11.04kV x 1.732 = 19.12kV.

MINIMUM VOLTAGE

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

This setting sets the minimum operating voltage for the undervoltage Pickup level specified per times VT.

For example, a PKP setting of 0.20 x VT with 13800:115 VT translates into 2.76kV (or 23V secondary).

If the Mode setting selection is Phase to Phase and the Setpoints/System Setup/Voltage Sensing/Phase VT Connection selection is Wye, the previous example translates to a

Phase to Phase voltage value of 2.76kV x 1.732 = 4.78kV.

PHASES FOR OPERATION

Range: Any One, Any Two, All Three

Default: Any One

This setting defines the number of voltages required for operation of the Phase UV protection function.

UNDervOLTAGE CURVES

Range: Definite Time, Inverse Time, FlexCurves A/B/C/D

Default: Definite Time

This setting provides the selection of definite time delay or time delay inverse undervoltage curves, or FlexCurves. In the case of FlexCurves, the voltage ratio used is reversed. Refer to the equation and note regarding FlexCurves in the previous section .

PICKUP DELAY

Range: 0.020 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time pickup delay.

RESET TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides selection for dropout time delay used to delay the dropout of the detection of the undervoltage condition.

RESET MODE

Range: Definite Time, Dependent Time

Default: Definite Time

This setting is based on IEC 60255-151 reset characteristics.

If Definite Time is selected, the percentage of elapsed time for the operate timer is memorized for the set reset time. If the pickup condition returns before the reset timer has timed out, the operate time initializes from the memorized value. Otherwise, the memorized value is reset to zero after the reset time times out.

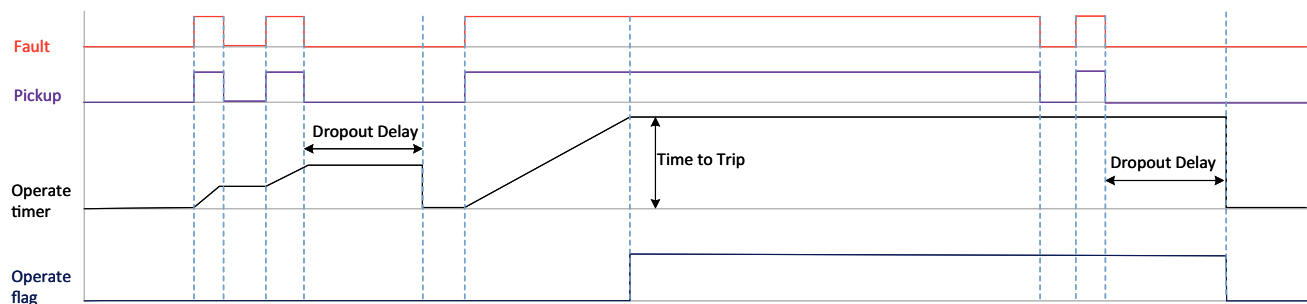


Figure 208: Reset Mode Definite Time

If Dependent Time is selected, the operate timer start decrementing when the pickup condition resets. If the pickup condition returns before the reset timer has timed out, the operate timer again start incrementing. Otherwise, the relay returns to its reset state after the set reset time.

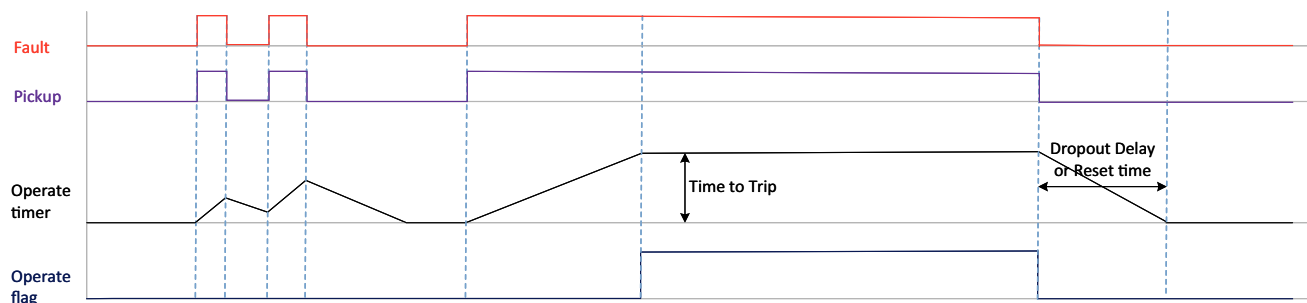


Figure 209: Reset Mode Dependent Time

Note:

This setting is hidden when Undervoltage Curve is configured to Definite Time. When Curve is programmed as Definite Time, the Reset Mode is always Definite Time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

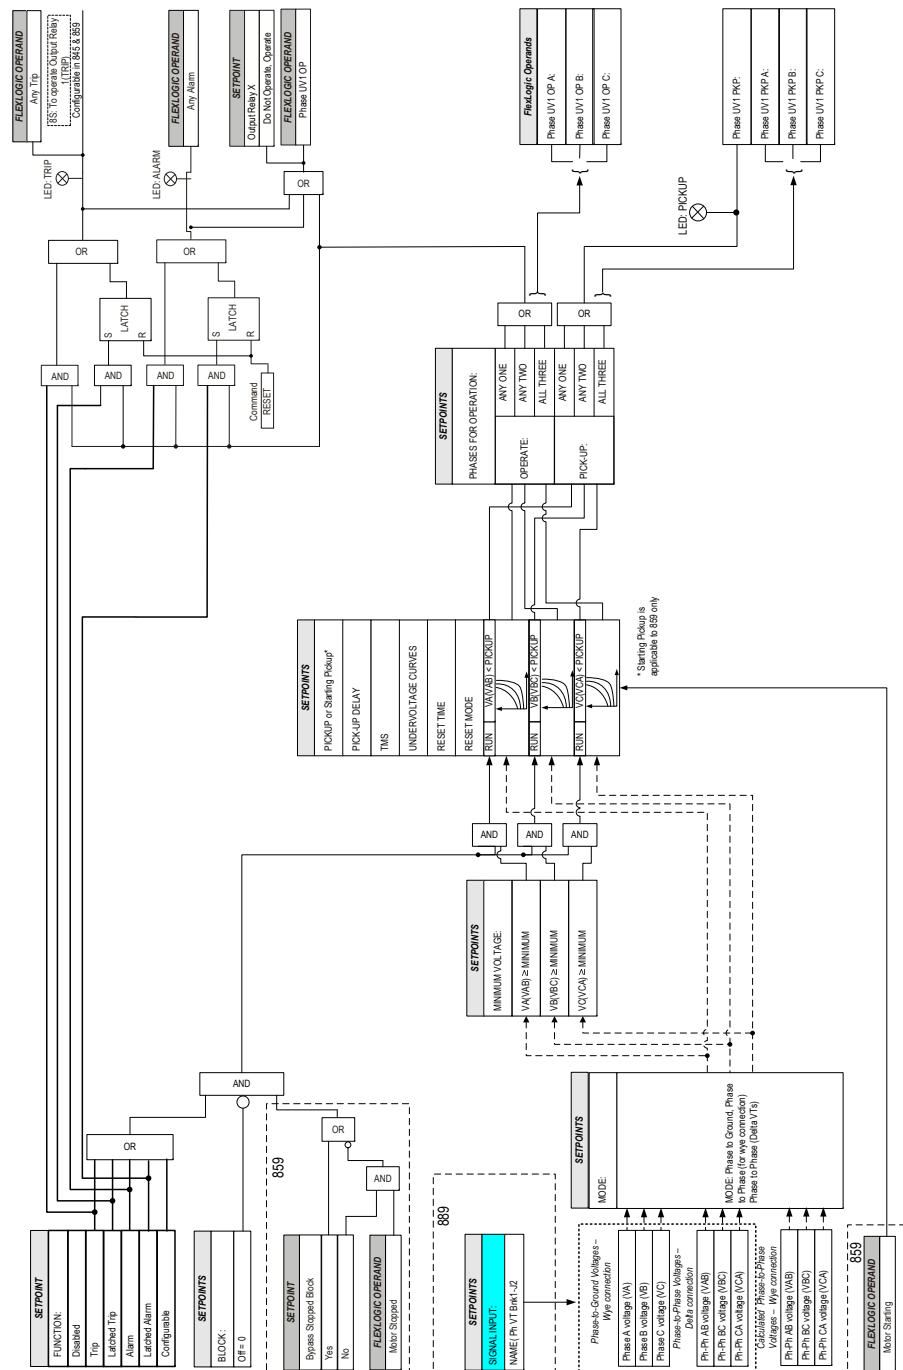

894046C1.vsd

Figure 210: Phase Undervoltage Protection logic diagram

9.5.4 AUXILIARY UNDERVOLTAGE (27X)

The relay provides two identical Auxiliary Undervoltage (UV) elements per protection group, or a total of 12 elements. Each Auxiliary Undervoltage element may be used to protect voltage sensitive loads and system

components against sustained undervoltage conditions. This element may be used for permissive functions, initiation of the source transfer schemes and similar functions.

The Auxiliary Undervoltage element may be set as an instantaneous element with no time delay or as a time delayed element which can be programmed with definite time, inverse time or FlexCurves. The Auxiliary Undervoltage element has a programmable minimum operating threshold to prevent undesired operation when voltage is not available. The input voltage is the auxiliary voltage.

The settings of this function are applied to auxiliary voltage input to produce Pickup and Trip flags. The Auxiliary UV Pickup flag is asserted when the auxiliary input voltage is below the PKP value. The Auxiliary UV Trip flag is asserted if the element stays picked up for the time defined by Pickup time delay or for the time defined by the selected inverse curve/FlexCurve. The element drops from Pickup without operation if the measured voltage rises above 102 to 103% of the Pickup value before the time for operation is reached.

The minimum voltage setting selects the operating voltage below which the element is blocked (a setting of 0 will allow a dead source to be considered a fault condition).

This element may be used to give a desired time-delay operating characteristic versus the applied voltage, or as a definite time element. For the inverse time setpoint, the undervoltage delay setpoint defines a family of curves.

Path: Setpoints > Protection > Group 1(6) > Voltage Elements > Auxiliary UV 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ax VT Bnk1-J2

Default: Ax VT Bnk1-J2

This setting provides the selection for the signal input.

PICKUP

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 1.00 x VT

This setting sets the Auxiliary Undervoltage Pickup level specified per times VT. For example, a Pickup setting of 0.80 x VT with a 13800:115 VT translates into 11.04kV (or 92V secondary).

MINIMUM VOLTAGE

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

This setting sets the minimum operating voltage for the undervoltage Pickup level specified per times VT.

UNDervOLTAGE CURVES

Range: Definite Time, Inverse Time, FlexCurves A/B/C/D

Default: Definite Time

This setting provides the selection of definite time delay or time delay inverse undervoltage curves. In the case of FlexCurves, the voltage ratio is reversed.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

If *Inverse Time* is selected as an Undervoltage Curve setpoint, the Pickup Delay value is loaded to variable D in the curve formula.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

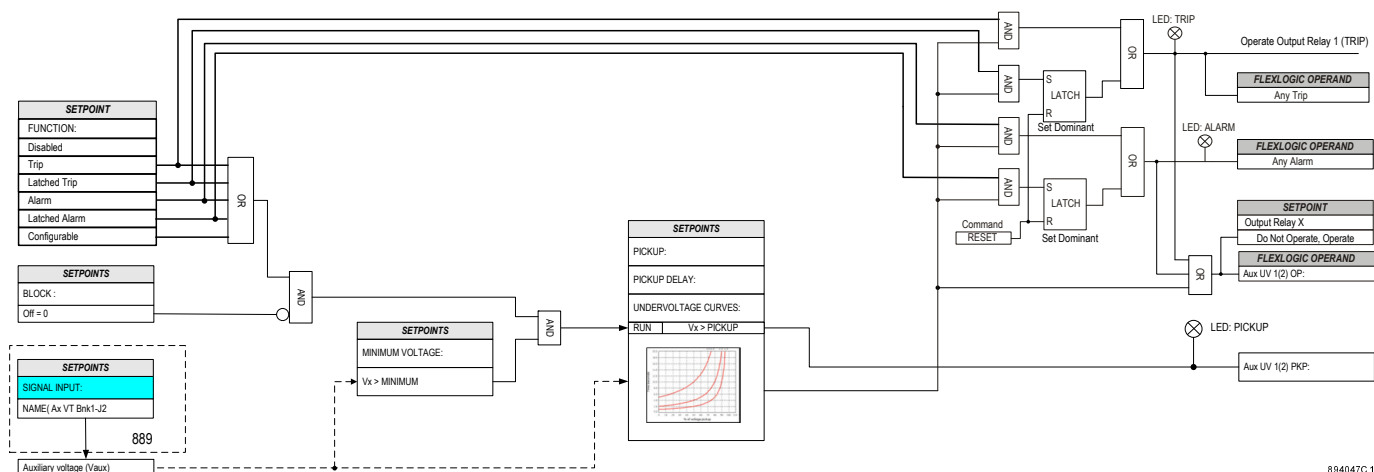


Figure 211: Auxiliary Undervoltage Protection logic diagram

9.5.5 PHASE OVERVOLTAGE PROTECTION (59P)

The relay provides two identical Phase Overvoltage (OV) elements per protection group, or a total of 12 elements. Each Phase Overvoltage element may be used to protect voltage sensitive loads and system components against sustained overvoltage conditions. The Phase Overvoltage element may be set as an instantaneous element with no time delay or may be set as a definite time element. The input voltages are the three phase to phase voltages from delta connected VTs or three phase to ground voltages from wye connected VTs.

The settings of this function are applied to each of the three voltage inputs to produce Pickup and Trip flags per voltage input. The OV Pickup flag is asserted when the voltage on any voltage input is above the PKP value. The OV Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay, Inverse Time or Flex Curves and that number of voltages required for operation is equal to the number defined by voltages required

for the operation setting. The element drops from pickup without operation, if the measured voltage drops below the configured dropout level of the pickup value, before the time for operation is reached. The dropout level can be configured at **Setpoints > Device > Installation > OV/UV DPO Range**.

Phase Overvoltage elements may be used to protect voltage sensitive loads and system components against sustained overvoltage conditions. The Phase Overvoltage element may be set as an instantaneous element with no time delay or may be set as a definite time element, Inverse Time, or with FlexCurve. The input voltages are the three phase to phase voltages from delta connected VTs, or the three phase to ground voltages from wye connected VTs.

This element may be used to give a desired time-delay operating characteristic versus the applied voltage or as a definite time element. For the inverse time setpoint, the overvoltage pickup delay setpoint defines a family of curves as shown below.

The operating time is given by:

$$T = D / [(V/V_{\text{pickup}}) - 1] \text{ when } V > V_{\text{pickup}}$$

where:

- T = trip time in seconds
- D = Overvoltage Pickup Delay setpoint
- V = actual phase-phase voltage
- V_{pickup} = Overvoltage Pickup setpoint

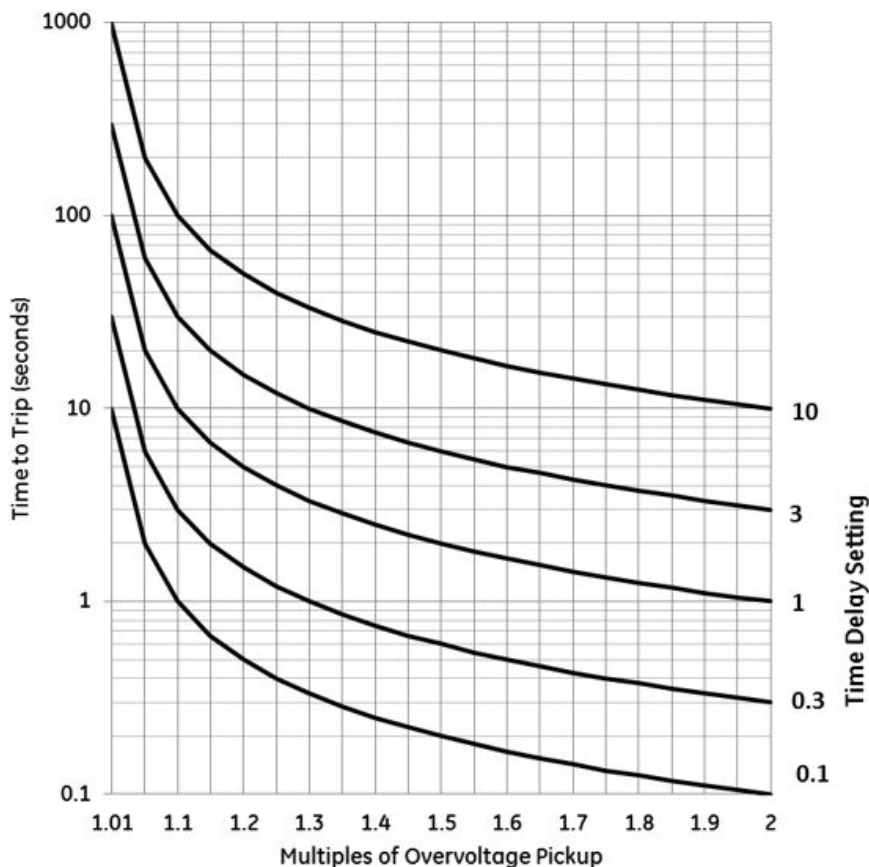


Figure 212: Overvoltage curves

Path: **Setpoints > Protection > Group 1(6) > Voltage > Phase OV 1(X)**

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

MODE

Range: Phase to Ground, Phase to Phase

Default (3.xx): Phase to Ground

Default (4.10): Phase to Phase

This setting provides the selection of phase to ground and phase to phase voltages for a Wye VT connection (phase to phase for delta connected VT connection).

Note:

Only Phase to Phase mode should be selected when Delta/Single VT Connection Type and Pseudo Reference Phase-to-Phase is programmed for the Phase VT Connection setting under **Setpoints > System > Voltage Sensing**.

PICKUP

Range: 0.02 to 3.00 x VT in steps of 0.01 x VT

Default: 1.50 x VT

The setting sets the phase overvoltage pickup level to specified per times VT.

For example, a Pickup setting of 1.10 x VT with 13800:115 VT translates into 15.18kV. If the mode selection is phase to phase and **Setpoints > System Setup > Voltage Sensing > Phase VT Connection** selection is Wye, the previous example translates to the phase to phase voltage value of 15.18kV x 1.732 = 26.29kV.

PHASES FOR OPERATION

Range: Any One, Any Two, All Three

Default: Any One

The setting defines the number of voltages required for operation of the Phase OV protection function.

CURVE (not used in 859)

Range: Definite Time, Inverse Time, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D

Default: Definite Time

This setting provides selection of curves for overvoltage as definite time, inverse time overvoltage curves or FlexCurves.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time pickup delay.

Note:

This Time Delay setting is visible from setting management, only when the Curve setting is selected as DT (Definite Time).

TMS

Range: 0.5 to 100.0 in steps of: 0.5

Default: 1.0

If the Inverse Time is selected as an Curve setpoint, the TMS value is loaded to variable “D” in the curve formula

Note:

Note: This TMS setting is visible from setting management, only when ‘Curve’ setting is selected as IDMT or Inverse Time.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides the dropout delay used for resetting the element. An instantaneous reset is provided by dropout time delay setting of 0.000s.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides the dropout delay used for resetting the element. An instantaneous reset is provided by dropout time delay setting of 0.000 s.

RESET MODE

Range: Definite Time, Dependent Time

Default: Definite Time

If the reset mode is set to definite time, the operate timer retains its current value for the duration of dropout delay after the pickup drops (i.e., fault clears). If the pickup condition occurs again before the dropout delay ends, the operate timer will increment from its retained value instead of zero. Otherwise, at the end of the dropout delay, the operate timer resets to zero. If the operate flag was already set, it resets when the operate timer fully resets. When Curve is set to Definite Time, the Reset Mode is always Definite Time.

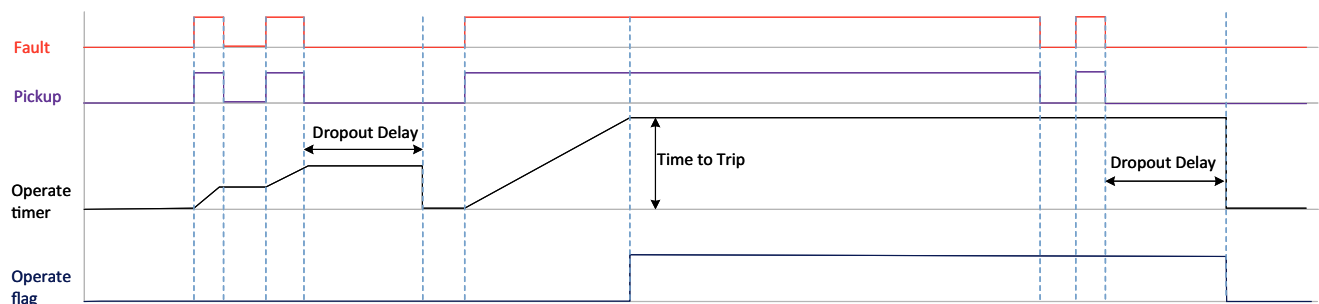


Figure 213: Reset Mode Definite Time

If the reset mode is set to dependent time, the operate timer will linearly decrement when the pickup drops. If the pickup condition occurs again before the dropout delay, the operate timer will increment from the previous value instead of zero. In this mode, the dropout delay is the time to fully reset the operate timer from the trip threshold. If the operate flag was already set, it resets when the pickup drops. after the operate timer fully resets. . If the 'Curve' is selected as a FlexCurve, the Dropout Delay setting is not used. Instead, the reset time calculated from the FlexCurve characteristics is used for resetting.

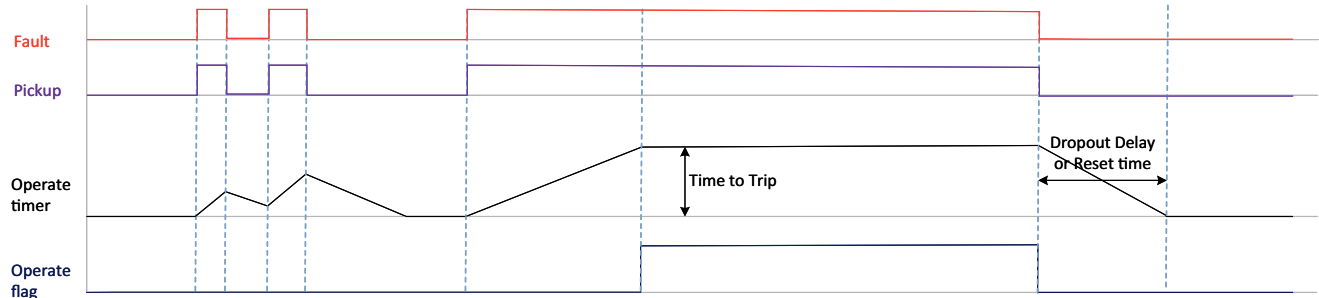


Figure 214: Reset Mode Dependent Time

Note:

This Reset mode setting is hidden when Curve is configured to Definite Time. When Curve is set to Definite Time or DT, the Reset Mode is always Definite Time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

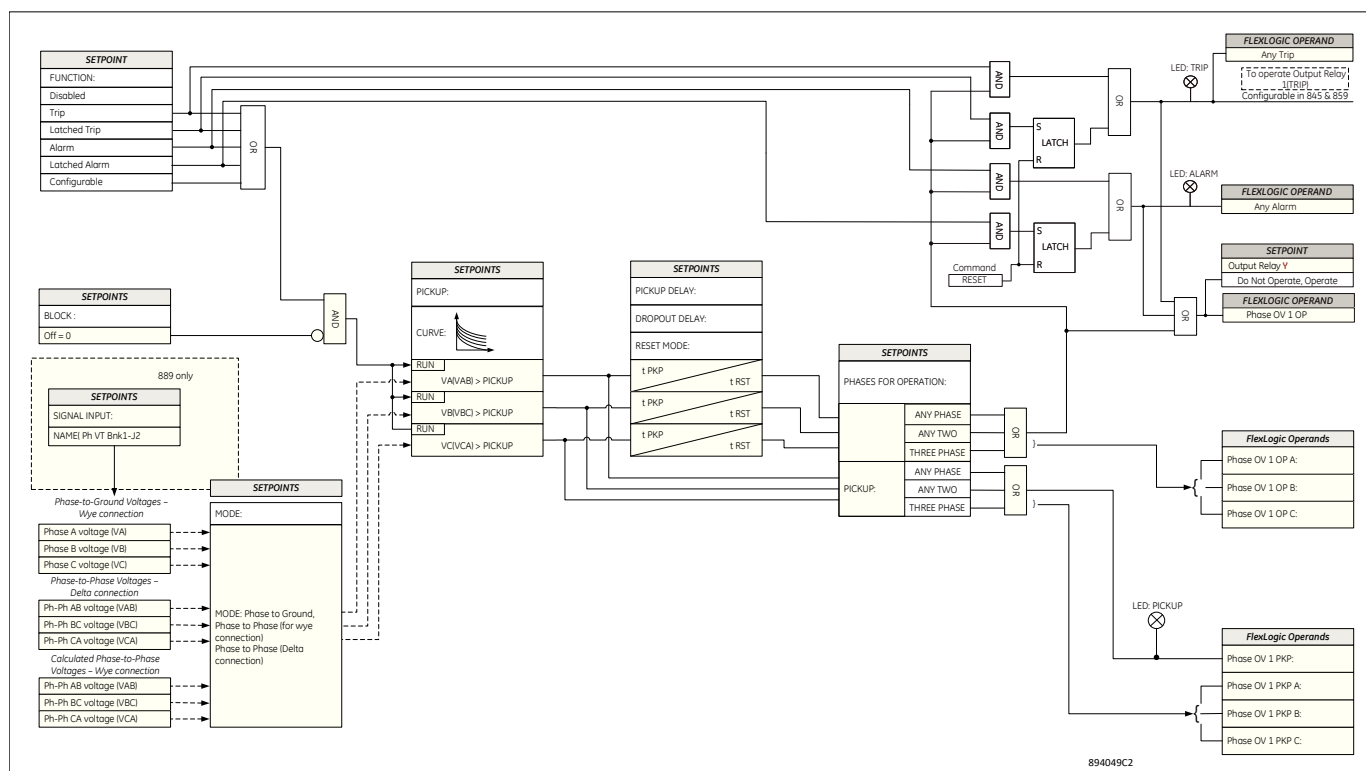


Figure 215: Phase Overvoltage logic diagram

9.5.6 AUXILIARY OVERVOLTAGE PROTECTION (59X)

The relay provides one Auxiliary Overvoltage (OV) element per protection group, or a total of 6 elements. Each Auxiliary OV element is used to protect voltage sensitive loads and system components against sustained overvoltage conditions. This element can be used for monitoring zero-sequence voltage (from an "open corner delta" VT connection), permissive functions, the source transfer schemes, restoration and similar functions.

The Auxiliary OV element may be set as an instantaneous element with no time delay or may be set as a definite time element, Inverse Time, or with FlexCurves. The input voltage is the auxiliary voltage.

The settings of the Auxiliary OV Protection function are applied to the auxiliary voltage input to produce pickup and trip flags. The Auxiliary OV pickup flag is asserted, when the voltage on auxiliary input is above the PKP value. The Auxiliary OV trip flag is asserted if the element stays picked up for the time defined by pickup time delay, Inverse Time, or FlexCurves. The element drops from pickup without operation, if the measured voltage drops below 97-98% of the pickup value, before the time for operation is reached.

This element may be used to give a desired time-delay operating characteristic versus the applied voltage or as a definite time element. For the inverse time setpoint, the overvoltage pickup delay setpoint defines a family of curves as shown below.

The operating time is given by:

$$T = D / [(V/V_{\text{pickup}}) - 1] \text{ when } V > V_{\text{pickup}}$$

Where:

- T = trip time in seconds
- D = Overvoltage Pickup Delay setpoint
- V = actual phase-phase voltage
- V_{pickup} = Overvoltage Pickup setpoint
- The element reset rate is a linear reset time from the threshold of trip.

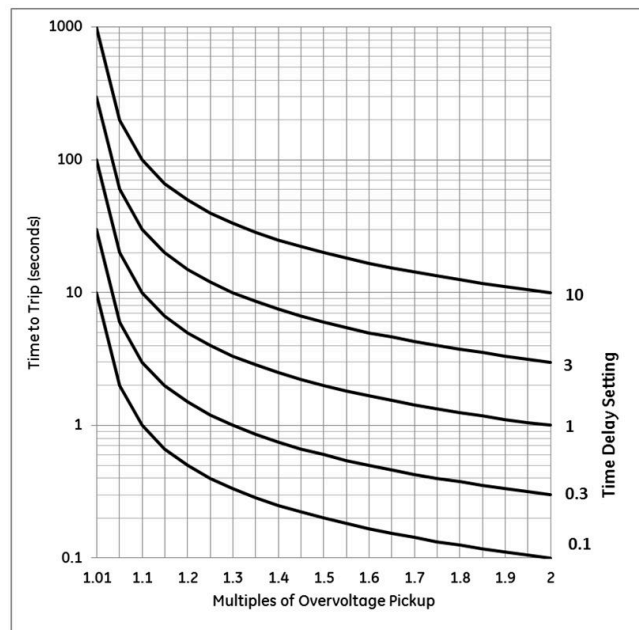


Figure 216: Overvoltage Curves

Path: *Setpoints > Protection > Group 1(6) > Voltage > Auxiliary OV*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: Ax VT Bnk1-J2

Default: Ax VT Bnk1-J2

This setting provides the selection for the signal input.

PICKUP

Range: 0.00 to 3.00 x VT in steps of 0.01 x VT

Default: 1.50 x VT

This setting sets the auxiliary overvoltage pickup level specified per times VT.

For example, a Pickup setting of 1.10 x VT with 13800:115 VT translates into 15.08kV (or 126.5V secondary).

CURVE

Range: Definite Time, Inverse Time, FlexCurves A/B/C/D

Default: Definite Time

This setting provides the selection of curves for the overvoltage as definite time, inverse time overvoltage curves or FlexCurves.

PICKUP DELAY

Range: 0.000 - 6000.000s in steps of 0.001s

Default: 1.000s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time dropout delay of the operate signal if the Curve setting is selected as Definite Time. An instantaneous reset is provided by dropout time delay setting of 0.000 s. If the selected Curve setting is Inverse Time, the dropout delay value is used to linearly reset the element. If the Curve is selected as a FlexCurve, the reset setpoints of the FlexCurve are used to reset the element.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

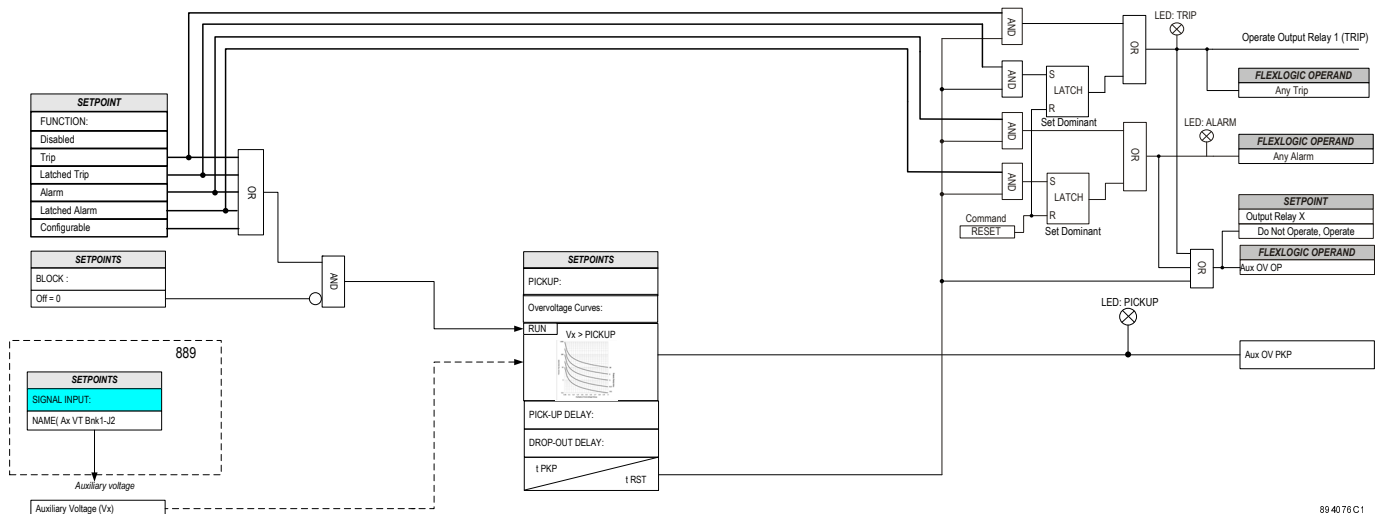


Figure 217: Auxiliary Overvoltage Protection logic diagram

9.5.7 NEUTRAL OVERVOLTAGE PROTECTION (59N)

The relay provides one Neutral Overvoltage (Neutral OV, also called Neutral Displacement) element per protection group.

The Neutral Overvoltage element can be used to detect asymmetrical system voltage conditions caused by a ground fault or the loss of one or two phases of the source. The element responds to the system neutral voltage (3V0), calculated from the phase voltages. The nominal secondary voltage of the phase voltage channels entered under **Setpoints > System > Voltage Sensing > Phase VT Secondary** is the base used when setting the Pickup

level. The Neutral Overvoltage element can provide a time-delayed operating characteristic versus the applied voltage (initialized from FlexCurves A, B, C or D) or can be used as a definite time element. The source voltage assigned to this element must be configured for a phase VT and phase VTs must be wye connected. VT errors and normal voltage unbalance must be considered when setting this element.

Note:

The same curves used for the time overcurrent elements are used for Neutral Displacement. When using the curve to determine the operating time of the Neutral Displacement element, substitute the ratio of neutral voltage to Pickup level for the current ratio shown on the horizontal axis of the curve plot.

The relay provides Neutral Overvoltage protection with independent time delay characteristics. Each stage provides a choice of operate characteristics, where you can select between:

- An IDMT characteristic
- A range of user-defined curves
- DT (Definite Time)

The undervoltage delay setpoint defines a family of curves as shown below.

The Inverse Time characteristics is given by:


$$T = D / [(V/V_{pkp}) - 1]$$

where:

- T = Operating Time
- D = neutral over voltage Pickup Time Delay setpoint (for D = 0.00 operates instantaneously)
- V = Voltage as a fraction of the nominal VT Secondary Voltage
- V_{pkp} = neutral over voltage Pickup Level

If FlexCurves are selected, the same curves used for the time overcurrent elements are used for Neutral Displacement. When using the curve to determine the operating time of the Neutral Displacement element, substitute the ratio of neutral voltage to the pickup level for the current ratio shown on the horizontal axis of the curve plot.

$$T = \text{FlexCurve}(V/V_{pkp})$$

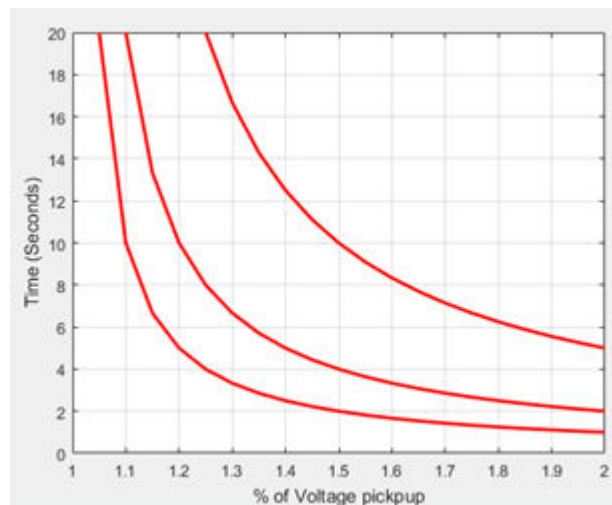

Inverse Time neutral over voltage Curves for varying D

The Neutral Overvoltage feature should be applied with caution. It would normally be applied to give line-to-ground fault coverage on high impedance grounded or ungrounded systems, which are isolated. This constraint stems from the fact that a measurement of 3V0 cannot discriminate between a faulted circuit and an adjacent healthy circuit.

Use of a time delayed back-up or alarm mode allows other protections an opportunity to isolate the faulted element first.

The settings of this function are applied to 3V0 calculated from the three phase-to-ground (wye connected VTs) voltage inputs to produce Pickup and Trip flags per 3V0 calculated voltage. The Neutral OV Pickup flag is asserted when the calculated 3V0 voltage is above the PKP value. The Neutral OV Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the 3V0 voltage. The element drops from Pickup without operation, if the calculated voltage drops below 97 to 98% of the Pickup value before the time for operation is reached.

Path: *Setpoints > Protection > Group 1(6) > Voltage Elements > Neutral OV 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

PICKUP

Range (3.xx): 0.02 to 3.00 x VT in steps of 0.01 x VT

Range (4.10): 0.02 to 4.00 x VT in steps of 0.01 x VT

Default: 0.30 x VT

CURVE

Range (3.xx): Definite Time, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D

Range (4.10): Definite Time, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D, Inverse time

Default: Definite Time

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

The **NEUTRAL OV 1 PICKUP DELAY** setting applies only if the **NEUTRAL OV 1 CURVE** setting is *Definite time*.

If Inverse Time is selected as neutral OV Curve, the Pickup Delay value is loaded to variable D in the curve formula.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

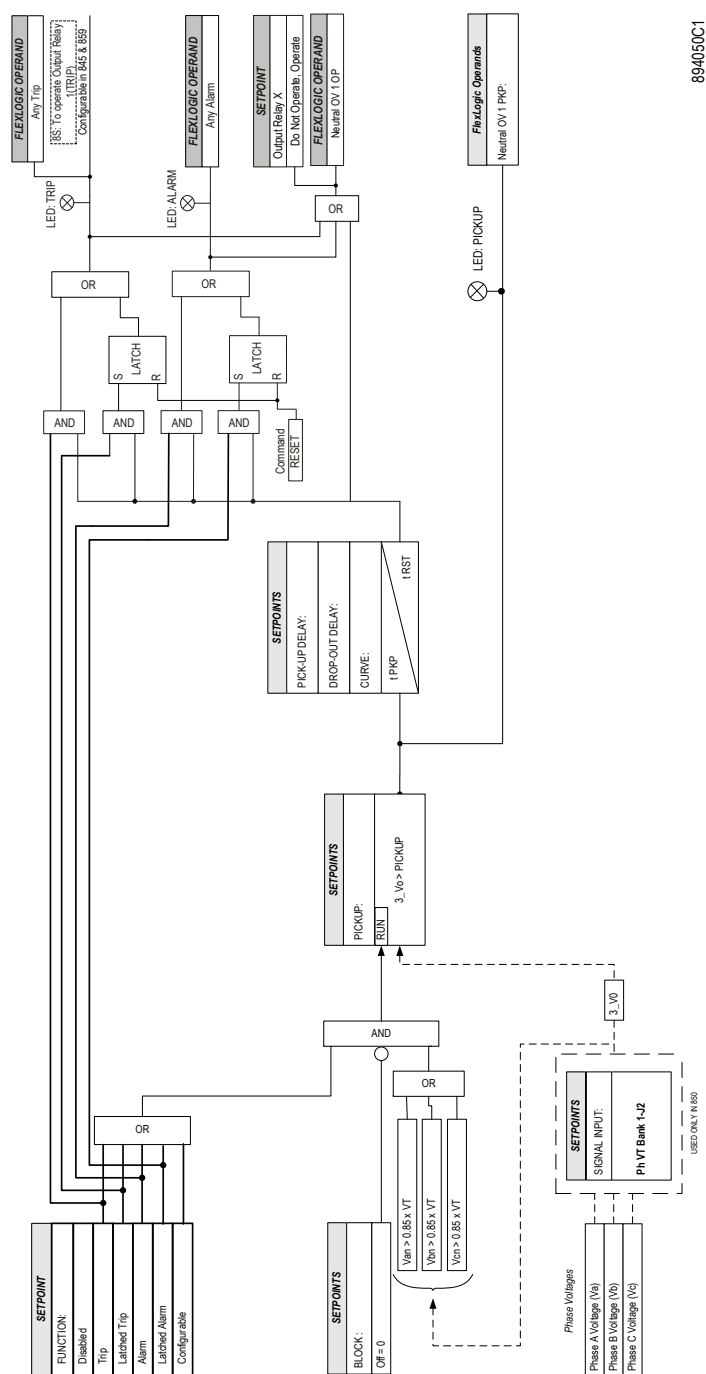


Figure 218: Neutral Overvoltage Protection logic diagram

9.5.8 NEGATIVE SEQUENCE OVERVOLTAGE PROTECTION (59_2)

The relay provides one Negative Sequence Overvoltage (Negative Sequence OV 1) element per protection group, or a total of 6 elements.

The Negative Sequence Overvoltage element can be used to detect an asymmetrical system voltage condition, loss of one or two phases of the source, or reversed phase sequence of voltages. The element responds to the negative sequence voltage (V2), calculated from the phase voltages. The Negative Sequence Overvoltage element may be set as an instantaneous element with no time delay, or may be set as a definite time element.

The settings of this function are applied to the calculated Negative Sequence Voltage to produce Pickup and Trip flags. The Negative Sequence OV Pickup flag is asserted when the Negative Sequence Voltage is above the PKP

value. The Negative Sequence OV Trip flag is asserted if the element stays picked up for the time defined by Pickup time delay. The element drops from Pickup without operation if the calculated Negative Sequence Voltage drops below 97 to 98% of the Pickup value before the time for operation is reached.

Path: *Setpoints > Protection > Group 1(6) > Voltage > Neg Seq OV 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

PICKUP

Range: 0.00 to 3.00 x VT in steps of 0.01 x VT

Default: 1.00 x VT

This setting sets the Negative Sequence Overvoltage Pickup level specified per times VT. For example, a Pickup setting of 0.80 x VT with 13800:115 VT translates into 11.04 kV (or 92 V secondary).

Note:

If the 3 phase VT is delta connected, the Negative Sequence Overvoltage pickup level is internally changed to $1/\sqrt{3}$ of the user setting, before being compared to the actual negative sequence voltage.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time pick-up delay. Instantaneous operation is selected by pick-up time delay setting of 0.000 s.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time drop-out delay. An instantaneous reset is provided by drop-out time delay setting of 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

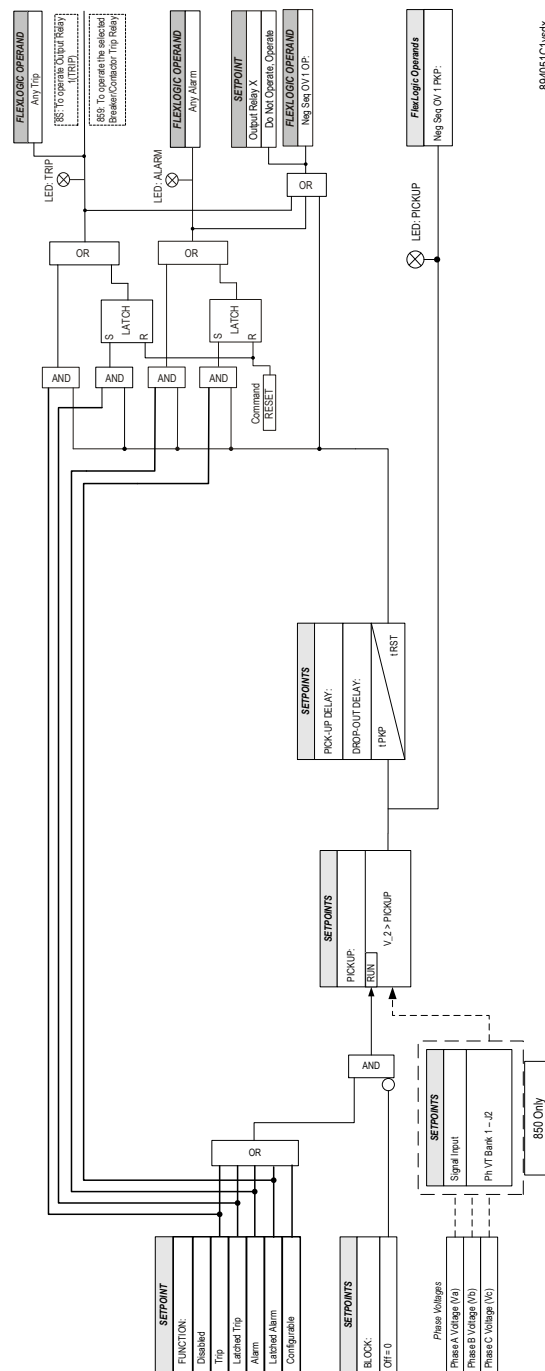


Figure 219: Negative Sequence Overvoltage Protection logic diagram

9.5.9 VOLTS PER HERTZ (24)

The volts-per-hertz (V/Hz) value is calculated using the maximum of the three-phase voltage inputs. If there is no voltage on the relay terminals, the V/Hz value is automatically set to “0”. The V/Hz value is established as per voltage and nominal frequency power system settings as follows: if the phase voltage inputs defined in the source menu are used for V/Hz operation, then V/Hz is based on the selected **Setpoint > System > Voltage Sensing > Ph VT Bnk1-J2 > Voltage 1 > Phase VT Secondary** setting, and the **Setpoint > System > Power System > Nominal Frequency** setting.

For example, if Phase VT Secondary and Nominal Frequency are set as 120 V and 60 Hz, respectively, these set values define the base unit as $1 \times (\text{V/Hz})$.

The volts-per-hertz ratio after division of these nominal settings is $120/60 = 2$.

Assume the **PICKUP** setpoint from the V/Hz element is set to $1.05 \times (\text{V/Hz})$. This will mean that in order for the element to pick up, the actual volts-per-hertz ratio after division should be $2 \times 1.05 = 2.1$.

The ratio of 2.1 can be achieved if for example the measured voltage is 126V and frequency is 60 Hz, or the voltage is constant at 120 V and the frequency is 57.14 Hz, or any other combination of these two values, which after V/Hz division equals 2.1.

To check back the **PICKUP** setting, we use the base (V/Hz) unit = $120/60 = 2$, such that the **PICKUP** setting value is $2.1/2 = 1.05 \times (\text{V/Hz})$.

The element has a linear reset characteristic. The reset time can be programmed to match the cooling characteristics of the protected equipment. The element will fully reset from the trip threshold in Reset Time seconds. The V/Hz element can be used as an instantaneous element with no intentional time delay or as a Definite or Inverse timed element. The characteristics of the inverse curves are shown as follows.

Path: Setpoints > Protection > Group 1(6) > Voltage > Volts per Hertz 1(2)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT (not for 859)

Range: dependent on the order code

Default: Ph VT Bnk1-J2

This setting specifies the input voltage used to calculate the per-unit volts-per-Hertz (V/Hz). If three phase voltages are used then set the AC Inputs to “Ph VT Bnk1-J2”. To use the V/Hz element with auxiliary voltage, set AC Inputs to “Aux VT Bnk1-J2”.

VOLTAGE MODE

Range: Phase-ground, Phase-phase

Default: Phase-ground

If the Phase VT Connection is selected as “Wye”, then the **VOLTAGE MODE** setting further defines the operating quantity and per-unit value for this element. If the **VOLTAGE MODE** is set as “Phase-phase”, then the operating quantity for this element will be phase-to-phase nominal voltage. Likewise, if the **VOLTAGE MODE** is set to “Phase-ground”, then the operating quantity for this element will be the phase-to-ground nominal voltage.

If the Phase VT Connection (set under **Setpoint > System > Voltage Sensing**) is selected as “Delta”, then the phase-to-phase nominal voltage is used to define the per-unit value, regardless of the Voltage Mode selection.

PICKUP

Range: 0.80 to 4.00 V/Hz in steps of 0.01

Default: 1.05 V/Hz

Enter the Volts per Hertz value (in V/Hz) above which the Volts per Hertz 1 element will pickup.

CURVE

Range: Definite Time, Inverse A, Inverse B, Inverse C, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D

Default: Definite Time

Inverse Curve A: The curve for the Volts/Hertz Inverse Curve A shape is derived from the formula:

$$T = \frac{TDM}{\left[\left(\frac{V}{F} \right) / Pickup \right]^2 - 1} \quad \text{when } \frac{V}{F} > Pickup$$

where:

- T = Operating Time
- TDM= Time Delay Multiplier (delay in seconds)
- V = fundamental RMS value of voltage (pu)
- F = frequency of voltage signal (pu)
- Pickup = volts-per-hertz pickup setpoint (pu)

The volts/hertz inverse A curves are shown below.

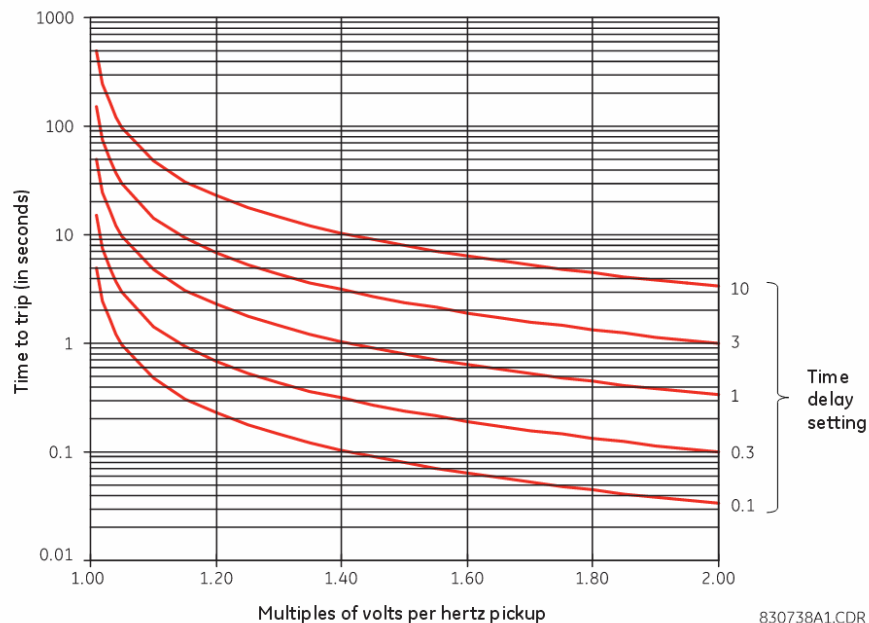


Figure 220: Volts-Per-Hertz Curves for Inverse Curve A


Inverse Curve B: The curve for the Volts/Hertz Inverse Curve B shape is derived from the formula:

$$T = \frac{TDM}{\left[\left(\frac{V}{F} \right) / Pickup \right] - 1} \quad \text{when } \frac{V}{F} > Pickup$$

where:

- T = Operating Time
- TDM = Time Delay Multiplier (delay in seconds)
- V = fundamental RMS value of voltage (pu)
- F = frequency of voltage signal (pu)
- Pickup = volts-per-hertz pickup setpoint (pu)

The Volts/Hertz inverse B curves are shown below.

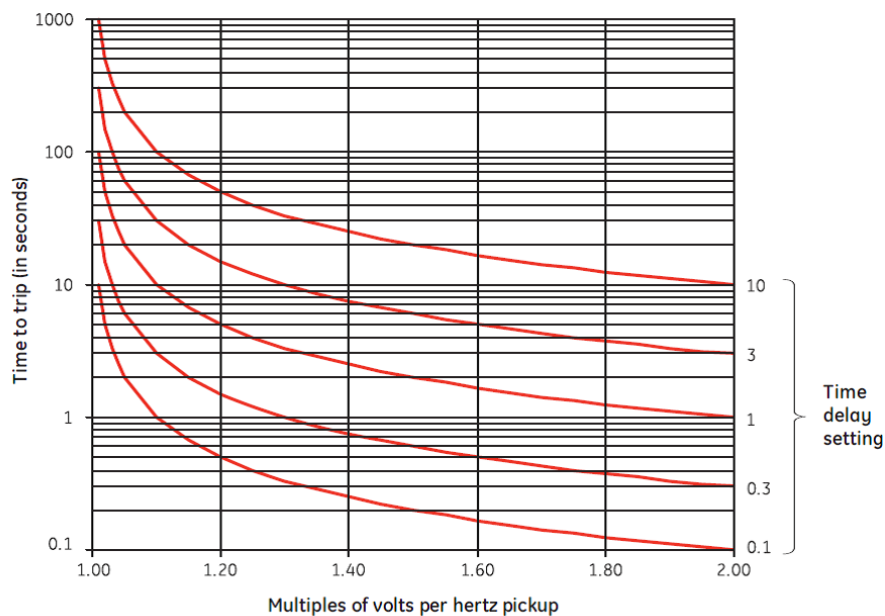

830739A1.CDR

Figure 221: Volts-Per-Hertz Curves for Inverse Curve B

Inverse Curve C: The curve for the Volts/Hertz Inverse Curve C shape is derived from the formula:

$$T = \frac{TDM}{\left[\left(\frac{V}{F} \right) / Pickup \right]^{1/2} - 1} \quad \text{when } \frac{V}{F} > Pickup$$

where:

- T = Operating Time
- TDM = Time Delay Multiplier (delay in seconds)
- V = fundamental RMS value of voltage (pu)
- F = frequency of voltage signal (pu)
- Pickup = volts-per-hertz pickup setpoint (pu)

The Volts/Hertz Inverse C curves are shown below.

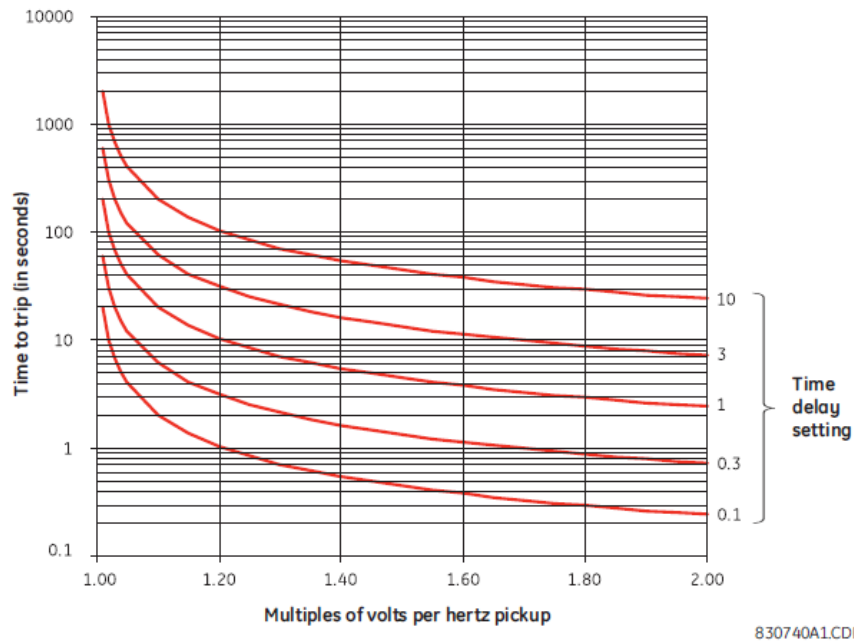


Figure 222: Volts-Per-Hertz Curves for Inverse Curve C

TD MULTIPLIER

Range: 0.05 to 600.00 in steps of 0.01

Default: 1.00

This setting provides a selection for the Time Dial Multiplier which modifies the operating times for the selected inverse curve. The setting will change to PICKUP DELAY when the CURVE type is set to Definite Time.

PICKUP DELAY

Range: 0.00 to 600.00 in steps of 0.01

Default: 1.00

When the curve is set “Definite Time”, $T(s) = \text{Pickup Delay}$. For example, setting the Pickup Delay to 20 results a time delay of 20 seconds to operate when above the Volts/Hz pickup setting. This setting will only be visible when the CURVE is set to Definite Time, it will change to TD Multiplier for other Curve types.

T RESET

Range: 0.00 to 6000.00 in steps of 0.01

Default: 1.00

Enter the time that the Volts per Hertz value must remain below the pickup level before the element resets.

BLOCK

Range: Off, Any FlexLogic Operand

Default: Off

The Volts per Hertz can be blocked by any asserted FlexLogic operand.

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

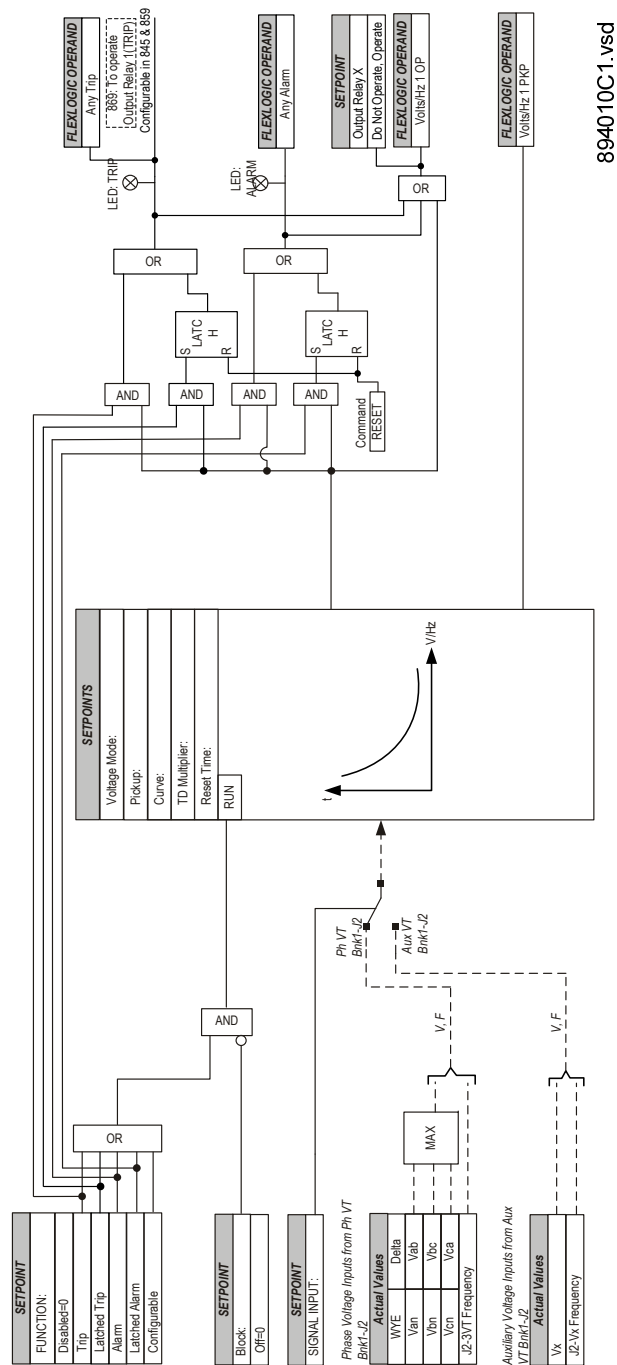


Figure 223: Volts per Hertz logic diagram


9.6 IMPEDANCE ELEMENTS

9.6.1 OUT-OF-STEP (78)

The Out-of-step element provides an out-of-step (loss-of-synchronism or pole slip) tripping function for machines. The element measures the positive-sequence apparent impedance, and traces its locus with respect to a single blinder operating characteristic with an offset mho supervisory. The purpose of the supervisory mho is to permit tripping for swings that pass through the machine and a limited portion of the system, but to prevent operation on stable swings that pass through both blinders and outside the mho characteristic.

The out-of-step tripping feature operates as follows: The trip sequence identifies unstable power swings by determining whether the impedance locus enters one blinder, spends a finite time between the left and right blinder characteristics, and then exits the opposite blinder. The out-of-step trip process is supervised by a mho characteristic. If the locus enters the left blinder, right blinder and mho characteristic (indicated by the AND operation of OOS LFT BLD PKP and OOS RGT BLD PKP FlexLogic operands) for an interval longer than **PICKUP DELAY**, the timing out signal (OOS TIMER PKP FlexLogic operand) is established. After the **PICKUP DELAY** timer times out, latch 1 is set as long as the impedance stays within the mho characteristic. If afterwards, at any time (given the impedance stays between the two blinders characteristic), the locus exits from the opposite blinder, latch 2 is set as long as the impedance stays inside the mho characteristic. The element is now ready to trip. If the “Blinder Exit” trip mode is selected, the OOS OP operand is set immediately and sealed-in for the interval set by the **SEAL-IN DELAY**. If the “MHO Exit” trip mode is selected, the element waits until the impedance locus leaves the mho characteristic, and then the OOS OP operand is set and sealed-in.

The element is set to use the single blinder characteristic with a supervisory mho as illustrated below.

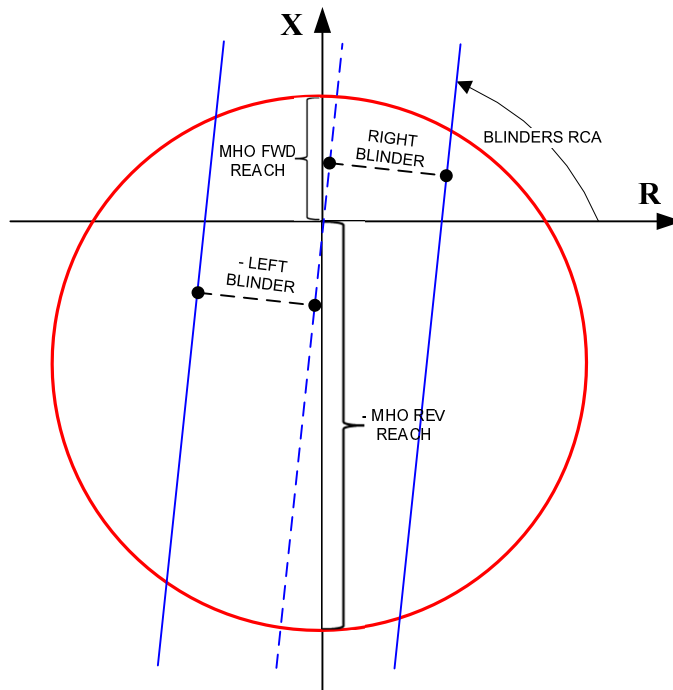

The FlexLogic output operands for the out-of-step element are described as follows:

- The OOS Lft Bld PKP, OOS Rgt Bld PKP, and OOS Timer PKP FlexLogic operands are auxiliary operands that can be used to facilitate testing and special applications.
- The OOS OP FlexLogic operand can be used to trip the circuit breaker to isolate the loss-of-synchronism .

Follow these steps for a typical setting procedure of the out-of-step element:

1. Carry out detailed transient stability studies for the overall system.
2. Determine the values of generator transient reactance (X'_d), step-up transformer reactance (X_T), and system impedance under maximum generation (Z_{maxS}). The total impedance is given by:

$$Z_{total} = Z_{maxS} + j * X'_d + j * X_T$$

3. Determine the values of the machine transient reactance (X'_d), and system impedance (Z_S). The total impedance is given by $Z_{total} = Z_S + j * X'_d$
4. Set **MHO FORWARD REACH** to 1.5 times the transformer impedance in the system direction. Set **MHO REVERSE REACH** to twice the generator transient reactance in the generator direction.
5. Set **BLINDERS RCA** to the angle of Z_{total} , θ .
6. Using the results of transient stability analysis, find the critical angle δ_c between the machine and the system, beyond which the system begins to become unstable. If a stability study is not available, this angle is typically set at 120° . Then, 10 degrees are normally added in order to increase relay operation security, $\delta = \delta_c + 10$.
7. Determine the blinder distance, d , from the following equation:

$$d = \frac{|Z_{total}|}{2} \tan(90 - \frac{\delta}{2})$$

8. Set **RIGHT BLINDER** and **LEFT BLINDER** to d .
9. Using the results of the transient stability analysis, find the **PICKUP DELAY**, which is shorter than the time required for the impedance locus to travel between the left and right blinders during the fastest expected out-of-step.
10. Validate the settings with the transient stability study cases.

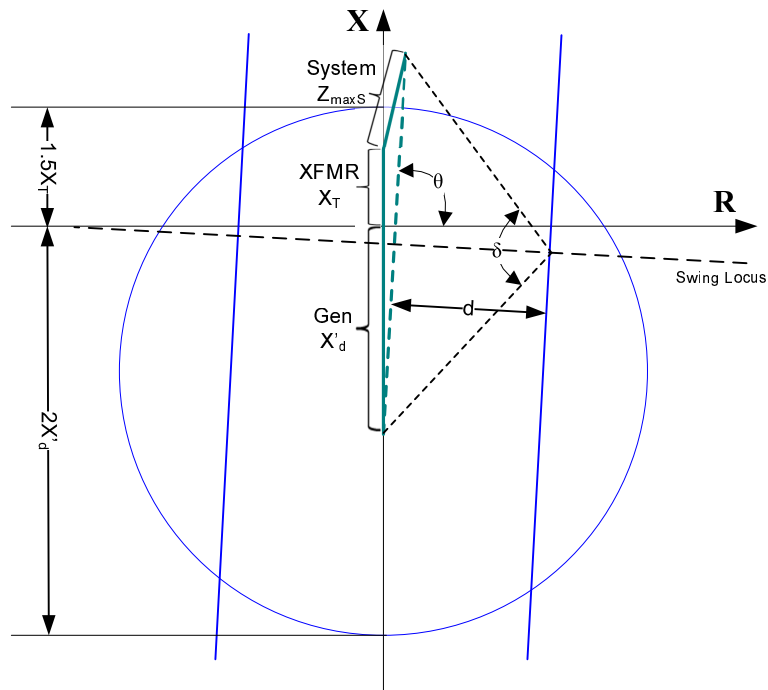


Figure 224: A Typical Out-of-step Setting

Path: Setpoints > Protection > Group 1(6) > Impedance > Out of Step

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

SIGNAL INPUT

Range: Positive Impedance 1, Positive Impedance 2

Default: Positive Impedance 1

This setting provides the selection for the positive sequence impedance which is calculated by terminal side or neutral side CT. Positive sequence impedance 1 is calculated using 3-phase J1 currents and 3-phase J2 voltages. Positive sequence impedance 2 is calculated using 3-phase K1 currents and 3-phase J2 voltages.

MHO FORWARD REACH

Range: 0.10 to 500.00 ohms in steps of 0.01 ohms

Default: 2.00 ohms

This setting specifies the forward reach of the mho characteristic. The reach impedance is entered in secondary ohms. The reach impedance angle is fixed to 90 degrees.

MHO REVERSE REACH

Range: 0.10 to 500.00 ohms in steps of 0.01 ohms

Default: 2.00 ohms

This setting specifies the reverse reach of the mho characteristic. The reach impedance is entered in secondary ohms. The reach impedance angle is fixed to -90 degrees.

RIGHT BLINDER

Range: 0.10 to 500.00 ohms in steps of 0.01 ohms

Default: 2.00 ohms

This setting defines the right blinder position of the blinder characteristic along with the resistive axis of the impedance plane, expressed in secondary ohms. The angular position of the blinder is adjustable with the use of the **BLINDERS RCA** setting.

LEFT BLINDER

Range: 0.10 to 500.00 ohms in steps of 0.01 ohms

Default: 2.00 ohms

This setting defines the left blinder position of the blinder characteristic along with the resistive axis of the impedance plane, expressed in secondary ohms. The angular position of the blinder is adjustable with the use of the **BLINDERS RCA** setting.

BLINDERS RCA

Range: 40 to 90° in steps of 1°

Default: 90°

This setting defines the angular position of the left and right blinders.

PICKUP DELAY

Range: 0.000 to 1.000 s in steps of 0.001 s

Default: 0.100 s

This setting should be set to detect the fastest expected unstable power swing and produce out-of-step tripping in a secure manner. This timer defines the interval that the impedance locus must spend between the left and right blinders to establish the out-of-step tripping signal. This time delay must be set shorter than the time required for the impedance locus to travel between the left and right blinders during the fastest expected out-of-step. Setting the delay too long can reduce dependability.

TRIP MODE

Range: Blinder Exit, MHO Exit

Default: MHO Exit

Selecting *Blinder Exit* results in an instantaneous trip after the last step in the out-of-step tripping sequence is completed (the impedance locus leaves the opposite blinder). The Blinder Exit trip mode stresses the circuit breakers as the currents at that moment are high (the electromotive forces of the two equivalent systems are close to 180° apart).

Selecting *MHO Exit* results in a trip at the moment when the impedance locus leaves the mho characteristic. The MHO Exit trip mode relaxes the operating conditions for the breakers as the currents at that moment are low, preventing the breakers from a maximum recovery voltage during interruption. The selection should be made considering the capability of the breakers in the system.

POS SEQ CURR SUPERVISION

Range: 0.05 to 10.00 x CT in steps of 0.01 x CT

Default: 1.00 x CT

A common overcurrent pickup level supervises the left and right blinder characteristics. The supervision responds to the positive sequence current.

VTFF SUPERVISION

Range: Disabled, VT Fuse Failure 1, VT Fuse Failure 2

Default: Disabled

A VT fuse failure could cause a maloperation of a distance element unless the element is supervised by the VTFF element.

VTFF Supervision is only available if VT Fuse Failure 1(2) function is enabled, otherwise this setpoint is hidden.

SEAL-IN DELAY

Range: 0.000 to 1.000 s in steps of 0.001 s

Default: 0.100 s

The out-of-step trip FlexLogic operand (OOS OP) is sealed-in for the specified period of time. The sealing-in is crucial to the MHO Exit trip mode, as the original trip signal is a very short pulse occurring when the impedance locus leaves the mho characteristic after the out-of-step sequence is completed.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched

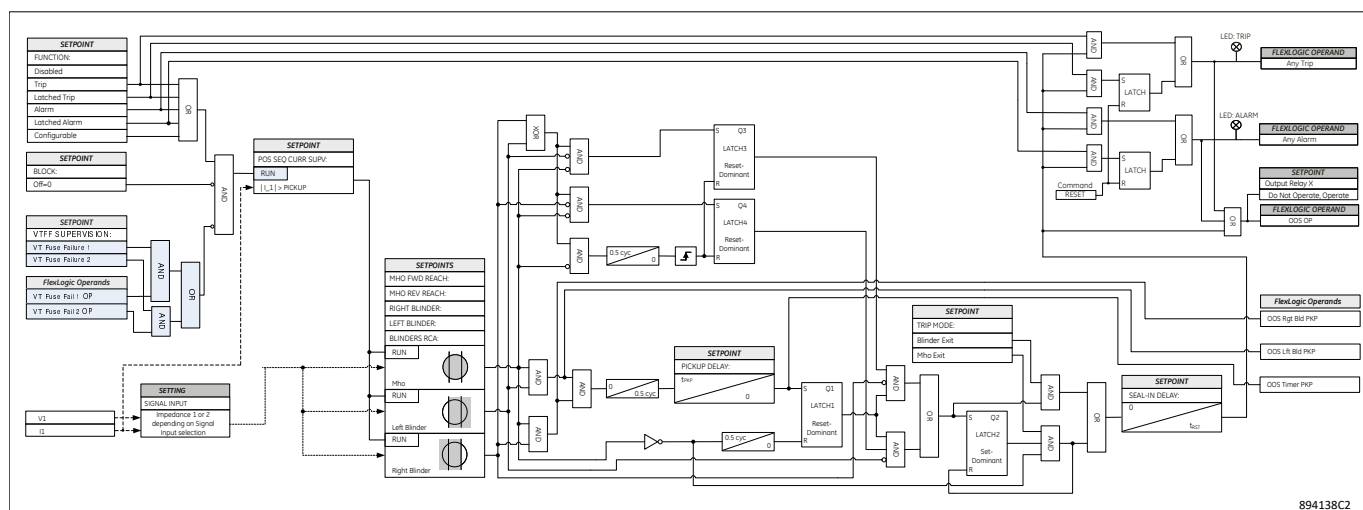


Figure 225: Out-of-step Protection Logic Diagram

9.6.2 PHASE DISTANCE (21)

The distance protection function (ANSI device 21) implements two zones of phase-to-phase distance protection using the offset mho characteristics. This protection is intended as backup to trip generator for the uncleared system fault. The elements make use of the generator terminal voltage and terminal or neutral current signals, which can also provide protection for the generator step-up transformer.

The first zone is typically used to provide a backup protection for a step-up transformer and generator system bus protection. The reach is set to cover the step-up transformer impedance with some margin, say 25%. The time delay should be coordinated with step up transformer and bus backup protection.

Alternatively, first zone reach can set to 50% of transformer impedance with small or no operating time delay to provide high-speed protection for phase faults, in addition to the generator differential protection. Care must be taken for possible wrong operation on an out-of-step power swing condition.

The second zone reach is typically set to cover the longest transmission line or feeder outgoing from the generating station. Care must be taken for possible under-reaching effects due to the fault contribution from other lines or generators. The element is intended for backup protection and therefore time delay should always be included. This element is typically set to coordinate with the longest operating time of the system distance relays protecting lines outgoing from the station.

Relay provides simple phase distance function that uses offset mho characteristic with overcurrent supervision feature. The offset mho function has the reverse reach controlled independently from the forward reach.

Each phase distance zone is configured individually through its own setting menu.

The element provides a separate measurement in three loops for AB, BC, and CA faults.

There is a setting for provision of the generator step-up transformer connection. In systems with a delta-wye or wye-delta transformer, the appropriate transformations of voltage and current signals are implemented internally to allow proper detection of transformer high-side phase-to-phase faults. If this setting is chosen as *None*, then it is assumed that the transformer is wye-wye connected or that there is no step-up transformer. The reach setting is the positive sequence impedance to be covered, per phase, expressed in secondary ohms.

The element uses the following operating quantities.

ABC Rotation	ACB Rotation	Loop	Current (I_{loop})	Voltage (V_{loop})
None	None	AB	$I_a - I_b$	V_{ab}
		BC	$I_b - I_c$	V_{bc}
		CA	$I_c - I_a$	V_{ca}
Dy1	Dy11	AB	$\sqrt{3} \times I_a$	$(V_{ab} - V_{ca}) / \sqrt{3}$
		BC	$\sqrt{3} \times I_b$	$(V_{bc} - V_{ab}) / \sqrt{3}$
		CA	$\sqrt{3} \times I_c$	$(V_{ca} - V_{bc}) / \sqrt{3}$
Dy11	Dy1	AB	$-\sqrt{3} \times I_b$	$(V_{ab} - V_{bc}) / \sqrt{3}$
		BC	$-\sqrt{3} \times I_c$	$(V_{bc} - V_{ca}) / \sqrt{3}$
		CA	$-\sqrt{3} \times I_a$	$(V_{ca} - V_{ab}) / \sqrt{3}$

Equations from the Current and Voltage columns are used to derive inputs to the three (AB, BC, and CA) phase distance elements. For example, CTs are located at the delta side of the delta-wye 11 transformer, and a given zone is set to look through the transformer into the system connected to the wye winding, the transformer setup for that zone shall be set to Dy11 and the relay would use $-\sqrt{3} \times I_b$ instead of a traditional $I_a - I_b$ for the AB phase distance element.

The phase distance Offset MHO characteristics is described below.

a) Definitions

The following definitions pertain to all of the distance functions:

- I_{loop} : loop current phasors.
- V_{loop} : loop voltage phasors.
- $()_1$: positive-sequence phasor of $()$ derived from the loop quantities.
- Z : reach impedance ($REACH \angle RCA$).
- Z_{REV} : reverse reach impedance ($REV REACH \angle (REV REACH RCA + 180^\circ)$).

Figure 226:

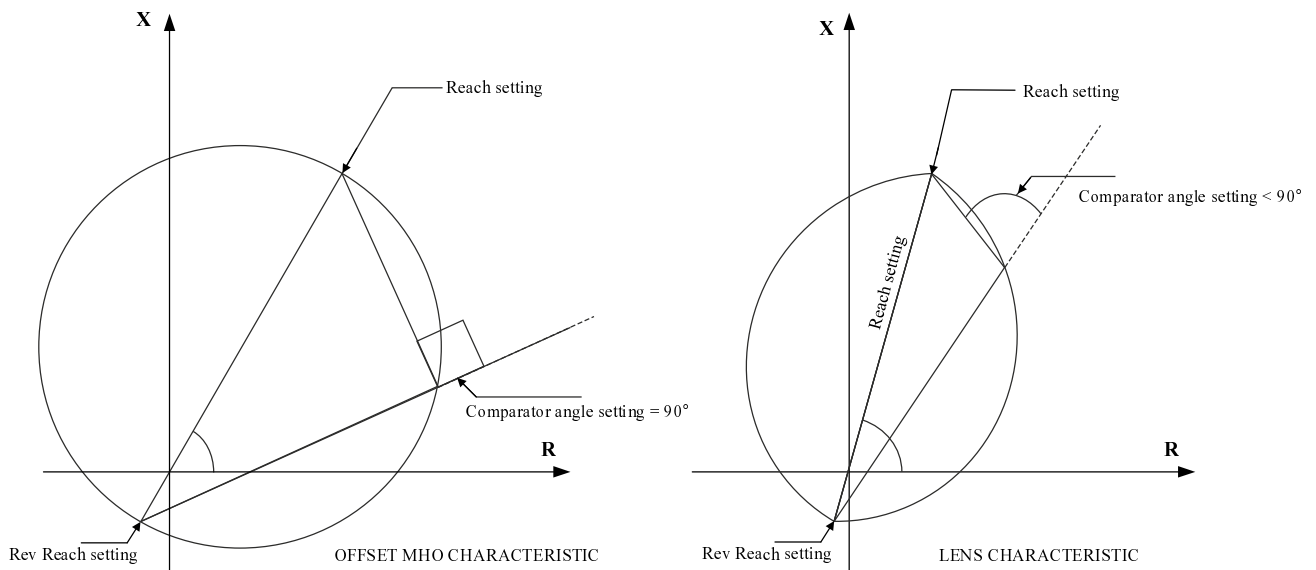


Figure 227: Offset Mho and Lens Characteristics

b) Offset mho characteristic

The non-directional offset mho characteristic is achieved by checking the angle between:

$$I_{\text{loop}} \times Z - V_{\text{loop}} \text{ and } V_{\text{loop}} - I_{\text{loop}} \times Z_{\text{REV}}$$

c) Overcurrent supervision

The overcurrent supervision responds to the following currents:

$$I_{\text{loop}} / \sqrt{3}$$

The following table summarizes the characteristics of the distance elements.

CHARACTERISTIC	COMPARATOR INPUTS		LIMIT ANGLE
Offset mho	$I \times Z - V$	$V - I \times Z_{\text{REV}}$	COMP LIMIT

Path: Setpoints\Protection\Group 1(6)\Impedance\Phase Distance\Common Setup

SIGNAL INPUT

Range: CT Bank 1 -J1, CT Bank 2 -K1

Default: CT Bank 1 -J1

This setting provide selection of terminal or neutral side CTs inputs. When Signal Input is configured to CT Bank 1 -J1, the relay calculates loop currents from 3-phase J1-slot currents. When configured to CT Bank 2 -K1, the relay calculates loop currents from 3-phase K1-slot currents. 889 Distance always require generator terminal voltage connected to VT Bank 1 – J2 slot.

XFMR SETUP

Range: None, Dy1, Dy11

Default: None

The phase distance elements can be applied to look through a three-phase delta-wye power transformer. This element requires phase VTs located at the generator terminals side and CTs located at the generator terminals side or neutral side. If the transformer is wye-wye connected or there is no step-up transformer, this setting shall

be set to "None". As for a delta-wye transformer, the generator side is connected to the delta winding and the line side to the wye winding.

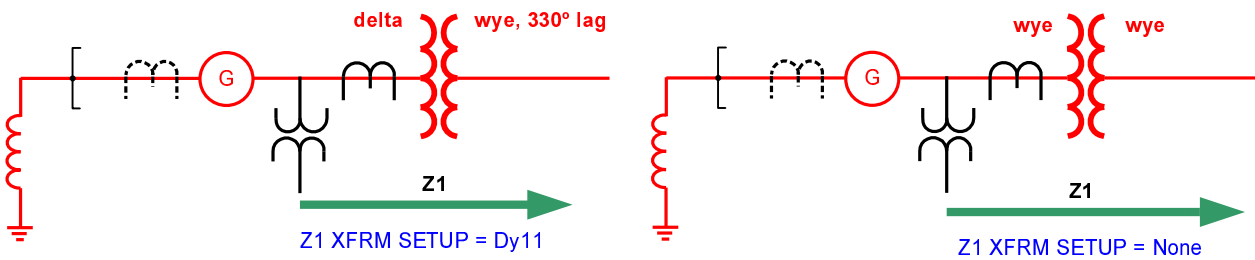


Figure 228: Phase Distance Transformer Setup

Note:

In applications involving power transformers, the details to calculate distance reach setting are explained after the logic diagram

Path: Setpoints\Protection\Group 1(6)\Impedance\Phase Distance\Phase Distance Z1

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

The zone spans between the forward reach impedance defined by the **REACH** and **RCA** settings, and the reverse or offset reach impedance defined by **REV REACH** and **REV REACH RCA** as illustrated below.

Note:

The CT polarity need to be considered when setting the protection zone direction. The forward direction is defined as to protect the system if the current wiring is per the typical wiring diagram.

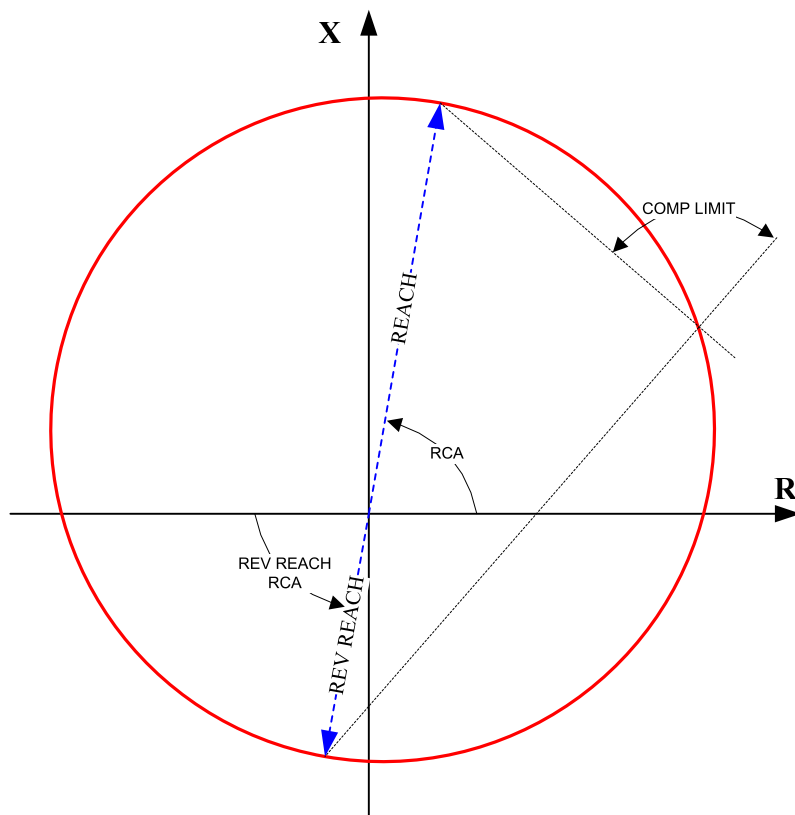


Figure 229: Offset Mho Distance Characteristic

REACH

Range: 0.02 to 500.00 ohms in steps of 0.01 ohms

Default: 2.00 ohms

This setting defines the forward reach of the zone. The offset reach is set independently defined as Rev Reach. The reach impedance is entered in secondary ohms. The reach impedance angle is entered as the RCA setting.

RCA

Range: 30 to 90° in steps of 1°

Default: 85°

This setting specifies the characteristic angle (similar to the 'maximum torque angle' in previous technologies). This setting defines the angle of the forward reach impedance. The setting is an angle of reach impedance as shown in the distance characteristic figures shown earlier.

REV REACH

Range: 0.02 to 500.00 ohms in steps of 0.01 ohms

Default: 2.00 ohms

This setting defines the offset or reverse reach of the offset mho characteristics. The value must be entered in secondary ohms.

REV REACH RCA

Range: 30 to 90° in steps of 1°

Default: 85°

This setting defines the angle of the reverse reach impedance non-directional zone.

COMP LIMIT

Range: 30 to 90° in steps of 1°

Default: 90°

This setting shapes the operating characteristic. In particular, it produces the lens-type characteristic of the mho function. In conjunction with the mho shape, the setting improves loadability of the protected line.

OC SUPERVISION

Range: 0.05 to 30.00 x CT in steps of 0.01 x CT

Default: 0.20 x CT

The phase distance elements are supervised by the magnitude of the line-to-line current (fault loop current used for the distance calculations). For convenience, $\sqrt{3}$ is accommodated by the pickup (that is, before being used, the entered value of the threshold setting is multiplied by $\sqrt{3}$).

If the minimum fault current level is sufficient, the overcurrent supervision pickup should be set above maximum full load current preventing maloperation under VT fuse fail conditions. This requirement may be difficult to meet for remote faults at the end of zones 2. If this is the case, the overcurrent supervision pickup would be set below the full load current, but this may result in maloperation during fuse fail conditions.

DELAY

Range: 0.000 to 600.000 s in steps of 0.001 s

Default: 0.500 s

This setting allows the user to delay operation of the distance elements and implement stepped distance protection. The distance element timers for zones 2 apply a short dropout delay to cope with faults located close to the zone boundary when small oscillations in the voltages or currents could inadvertently reset the timer. Zone 1 does not need any drop out delay since it is sealed-in by the presence of current.

LOAD ENCROACHMENT BLOCK

Range: Disabled, Load Encroachment 1, Load Encroachment 2

Default: Disabled

Load encroachment block function allows blocking of the Phase Distance operation by the Load Encroachment 1(2) operate signal. Load Encroachment functional details can be found in section XX.

Load Encroachment blocking is only available if Load Encroachment 1(2) function is enabled, otherwise this setpoint is hidden.

VTFF SUPERVISION

Range: Disabled, VT Fuse Failure 1, VT Fuse Failure 2

Default: Disabled

A VT fuse failure could cause a maloperation of a distance element unless the element is supervised by the VTFF element.

VTFF Supervision is only available if VT Fuse Failure 1(2) function is enabled, otherwise this setpoint is hidden.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any operand from the list of FlexLogic operands

Default: Off

This setting enables the user to select a FlexLogic operand to block a given distance element. VT fuse fail detection is one of the applications for this setting.

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

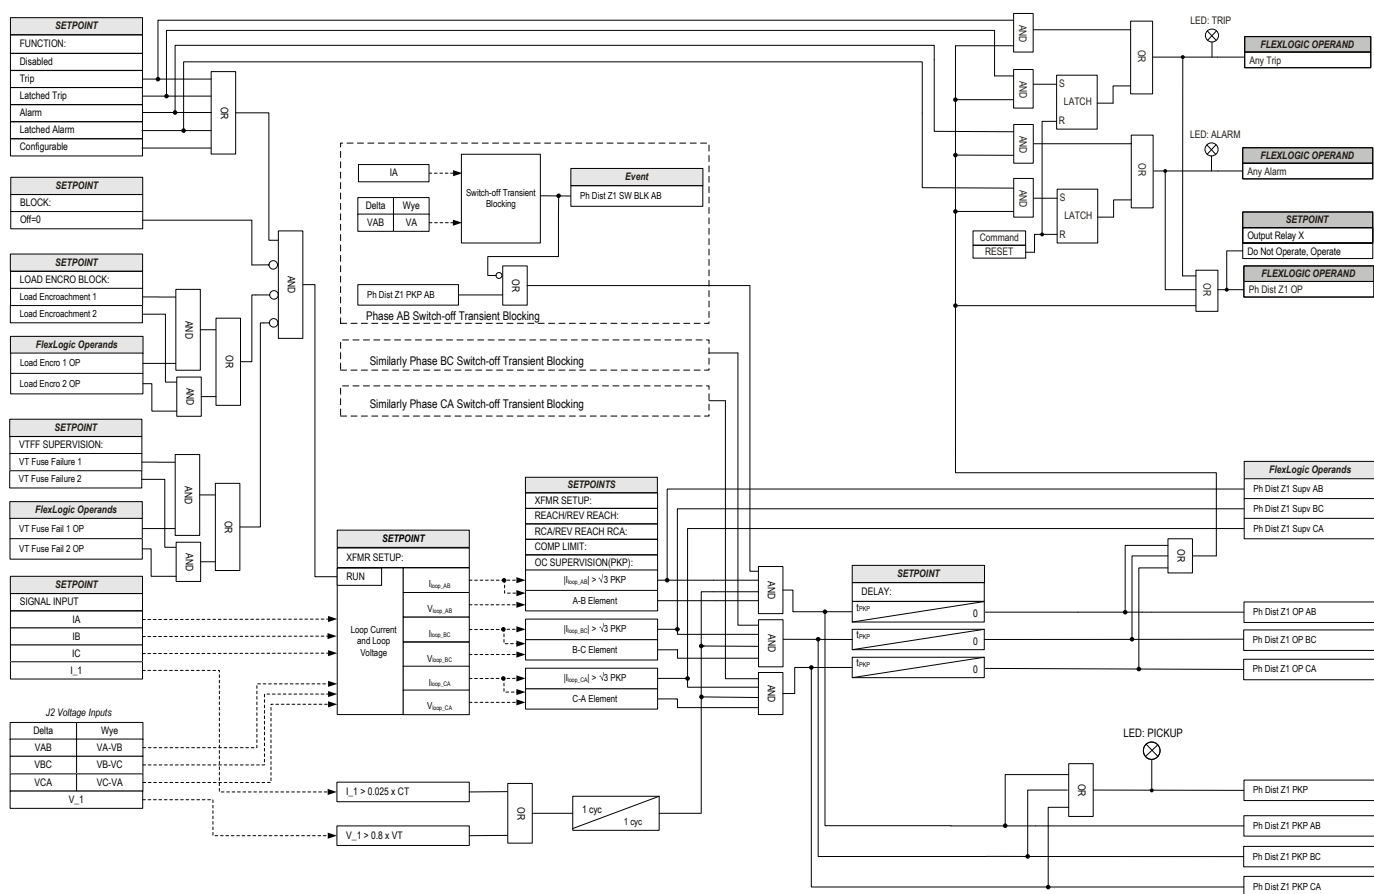


Figure 230: Phase Distance Zone 1 Protection Logic Diagram (Zone 2 Logic is similar to Zone 1)

Phase distance elements could be set to respond to faults beyond any three-phase power transformer. The relay guarantees accurate reach and targeting for any phase fault.

The following setting rules apply to this feature:

- A given distance zone is terminated by location of the VTs, not the CTs.
- Consequently, the positive-sequence impedance of a transformer must be included in the reach setting only if the transformer is located between the potential source and the intended reach point.
- The reach setting is entered in secondary ohms and as such must take into account location and ratios of VTs and CTs as well as voltage ratio of the involved power transformer.

The following equations explain the setting rules. Consider one application as shown in the figure below:

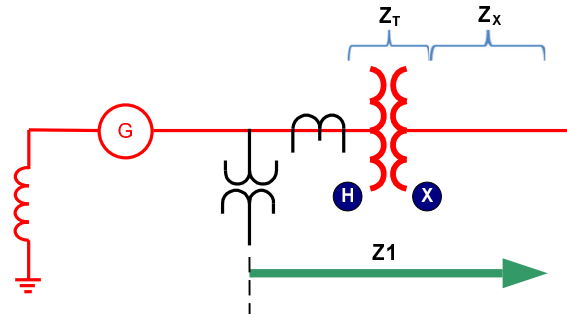


Figure 231: Phase Distance Looking Through a Power Transformer

where:

- Z_X = intended reach impedance for Zone 1 (primary ohms)
- Z_T = positive-sequence impedance of the transformer

V_X, V_H = transformer rated voltages

- n_{CT} = transformation ratio of the CTs
- n_{VT} = transformation ratio of the VTs
- Z_1 = Zone 1 reach setting (secondary ohms)

As the transformer is located between the potential source and the reach point for Zone 1, the reach impedance must include the positive-sequence impedance of the transformer. In addition, the primary impedance must be re-calculated for the voltage level of the VTs and CTs, and eventually, re-calculated to secondary quantities:

$$Z_1 = (Z_T(atX) + Z_X) (V_H / V_X)^2 n_{CT} / n_{VT}$$

9.7 POWER ELEMENTS

9.7.1 DIRECTIONAL POWER (32)

The relay provides two identical Directional Power elements per protection group; a total of 12 elements.

The Directional Power element responds to three-phase directional power and is designed for reverse power (32REV) and low forward power (32FWD) applications for synchronous machines or interconnections involving co-generation. The relay measures the three-phase power from either a full set of wye-connected VTs or a full-set of delta-connected VTs. In the latter case, the two-wattmeter method is used.

The element has an adjustable characteristic angle and minimum operating power as shown in the Directional Power characteristic diagram. The element responds to the following condition:

$$P\cos\theta + Q\sin\theta > \text{MIN}$$

Where:

- P and Q are active and reactive powers as measured per the metering convention
- θ is a sum of the element characteristic (DIR POWER 1 RCA) and calibration (DIR POWER 1 CALIBRATION) angles
- SMIN is the minimum operating power.

The element has two independent (as to the **PICKUP** and **DELAY** settings) stages for Alarm and Trip, and they can be set separately to provide mixed power protection.

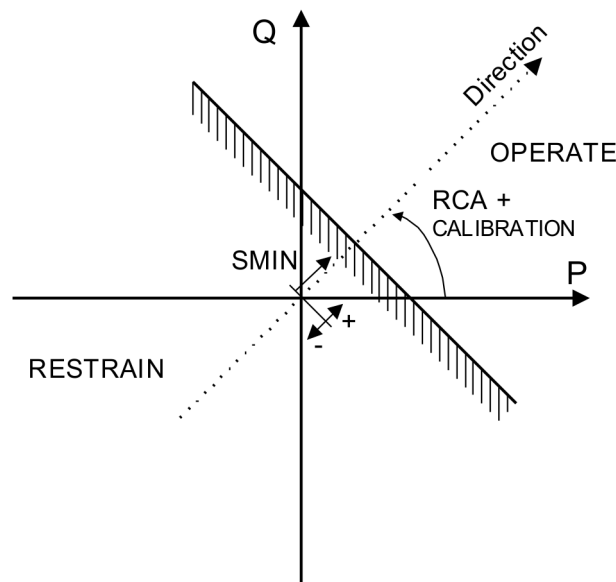


Figure 232: Directional Power characteristic

By making the characteristic angle adjustable and providing for both negative and positive values of the minimum operating power, a variety of operating characteristics can be achieved as presented in the figure below. For example, section (a) in the figure below shows settings for reverse power, while section (b) shows settings for low forward power applications.

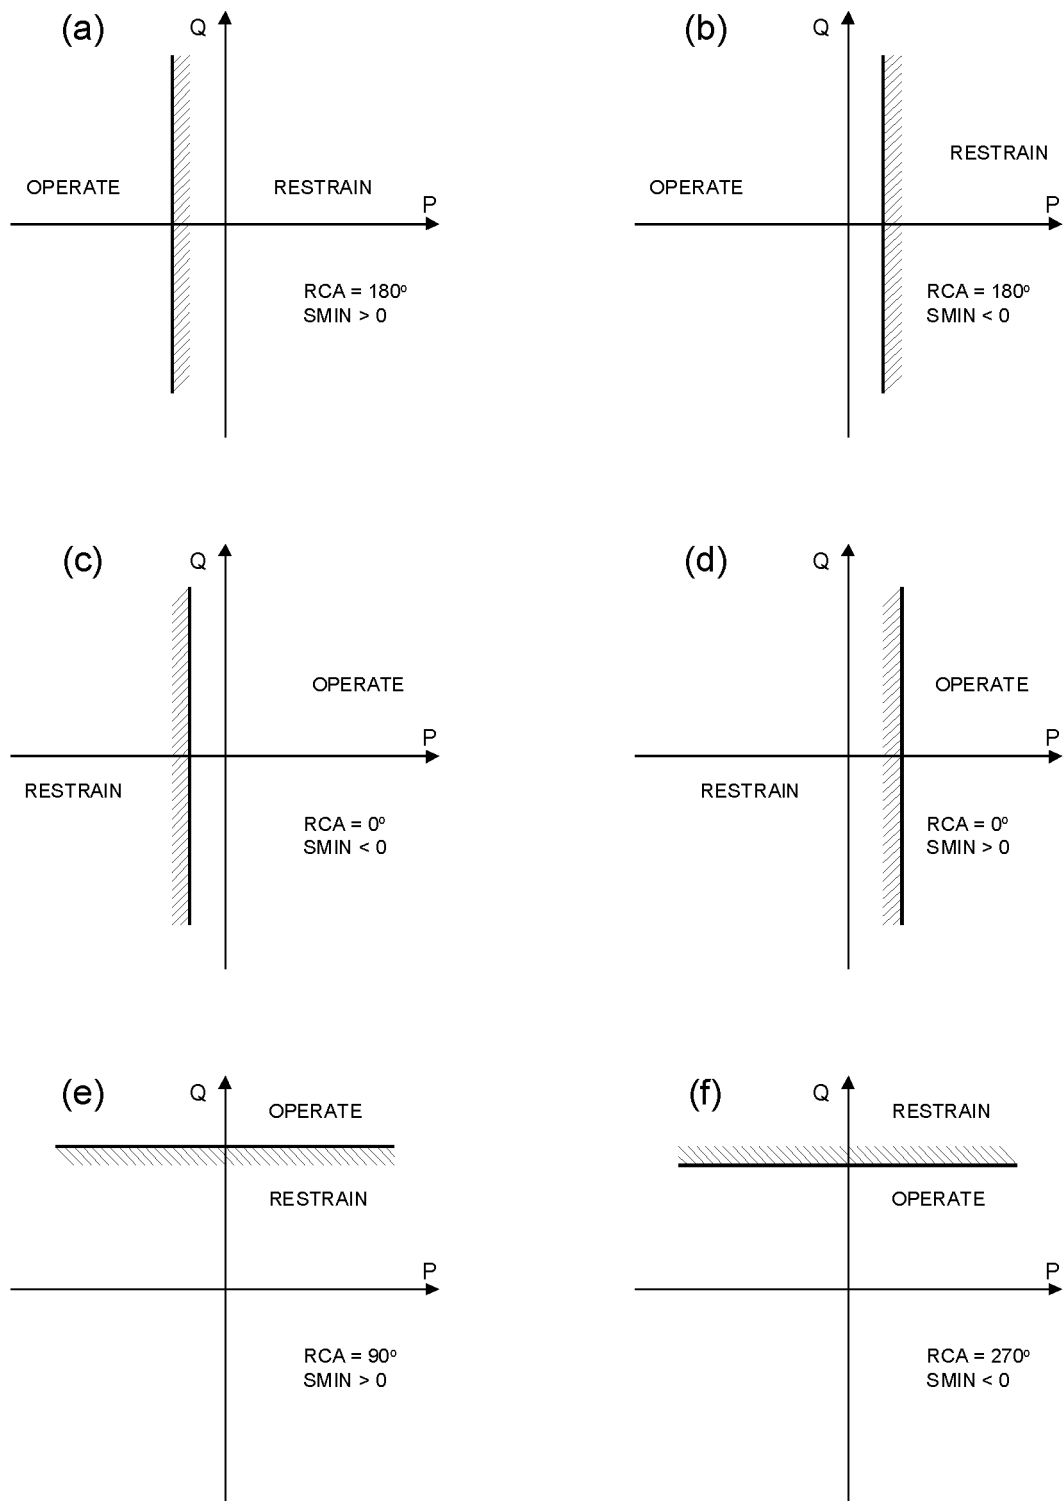


Figure 233: Sample applications of the Directional Power element

Path: *Setpoints > Protection > Group 1(6) > Power > Directional Power 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

*Note: Relays with firmware version 4 and later have a *Latched Trip* option*

Default: Disabled

SIGNAL INPUT

Range: Power 1, Power 2

Default: Power 1

This setting provides the selection for the power input. Depending on the order code selection, the corresponding CT/VT inputs to calculate power are selected under **Setpoints > System > Power Sensing**.

RCA

Range: 0 to 359° in steps of 1°

Default: 180°

This setting specifies the Relay Characteristic Angle (RCA) for the Directional Power function. Application of this setting provides the following benefits:

- It allows the element to respond to active or reactive power in any direction (active overpower/underpower, etc.).

- Together with a precise calibration angle, it allows compensation for any CT and VT angular errors to permit more sensitive settings.

- It allows for required direction in situations when the voltage signal is taken from behind a delta-wye connected power transformer and phase angle compensation is required.

For example, the active overpower characteristic is achieved by setting **DIR POWER 1 RCA** to “0°,” reactive overpower by setting **DIR POWER 1 RCA** to “90°,” active underpower by setting **DIR POWER 1 RCA** to “180°,” and reactive underpower by setting **DIR POWER 1 RCA** to “270°”.

CALIBRATION

Range: 0 to 0.95° in steps of 0.05°

Default: 0°

This setting allows the Relay Characteristic Angle to change in steps of 0.05°. This may be useful when a small difference in VT and CT angular errors is to be compensated to permit more sensitive settings.

The setting enables calibration of the Directional Power function in terms of the angular error of applied VTs and CTs. The element responds to the sum of the **DIR POWER 1 RCA** and **DIR POWER 1 CALIBRATION** settings.

STAGE 1 SMIN

Range: -3.000 to 3.000 x Rated Power in steps of 0.001 x Rated Power

Default: 0.100 x Rated Power

The setting specifies the minimum power as defined along the relay characteristic angle (RCA) for the stage 1 of the element. The positive values imply a shift towards the operate region along the RCA line; the negative values imply a shift towards the restrain region along the RCA line. Refer to the Directional power sample applications figure for details. Together with the RCA, this setting enables a wide range of operating characteristics.

The setting applies to three-phase power and the rated power is as follows:

$$\begin{aligned} \text{Rated Power} &= 3 \times \text{VT}_{\text{Secondary (phase-neutral)}} \times \text{VT}_{\text{Ratio}} \times \text{CT}_{\text{Primary (Wye-connected VT)}}, \text{ or } \text{Rated Power} \\ &= (3)^{1/2} \times \text{VT}_{\text{Secondary (phase-phase)}} \times \text{VT}_{\text{Ratio}} \times \text{CT}_{\text{Primary (Delta-connected VT)}} \end{aligned}$$

For example:

A setting of 2% for a 200 MW machine is $0.02 \times 200 \text{ MW} = 4 \text{ MW}$.

If 7.967 kV is a primary VT phase-neutral voltage and 10 kA is a primary CT current, the source rated power is 239 MVA, and, S_{MIN} must be set at $4 \text{ MW}/239 \text{ MVA} = 0.0167 \times \text{Rated} \approx 0.017 \times \text{Rated}$.

If the reverse power application is considered, $\text{RCA} = 180^\circ$ and $\text{S}_{\text{MIN}} = 0.017 \times \text{Rated}$.

The element drops out if the magnitude of the positive-sequence current becomes virtually zero, that is, it drops below the cutoff level.

STAGE 1 DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.500 s

The setting specifies a time delay for stage 1. For reverse power or low forward power applications for a synchronous machine, stage 1 is typically applied for alarming and stage 2 for tripping.

STAGE 2 S_{MIN}

Range: -3.000 to 3.000 x Rated Power in steps of 0.001 x Rated Power

Default: 0.100 x Rated Power

The setting specifies the minimum power as defined along the relay characteristic angle (RCA) for stage 2 of the element. The setting needs to be coordinated with the setting of stage 1.

STAGE 2 DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 20.000 s

The setting specifies a time delay for stage 2. For reverse power or low forward power applications for a synchronous machine, stage 1 is typically applied for alarming and stage 2 for tripping.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

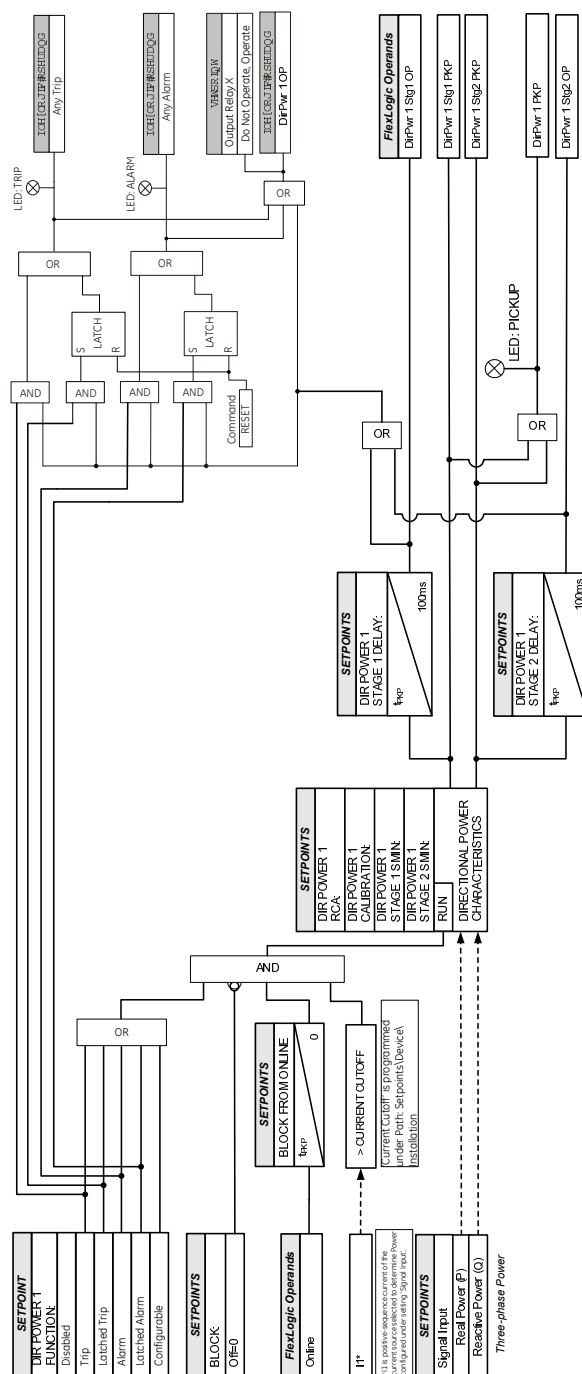

894159C1

Figure 234: Directional Power logic diagram

9.7.2 REACTIVE POWER (40Q)

In a generator application, the reactive power element can be used to detect excitation system malfunction, e.g. under excitation, loss of excitation, etc. Once the 3-phase total reactive power exceeds the positive or negative level, for the specified delay, a trip or alarm will occur indicating a positive or negative Mvar condition. The level is programmed in per unit of generator rated MVAR calculated from the rated MVA and rated power factor. VTFF detection can be used to block this function.

Path: Setpoints > Protection > Group 1 > Power > Reactive Power

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

This setting enables the Reactive Power Trip functionality.

POSITIVE VAR TRIP PICKUP

Range: 0.02 to 2.00 x Rated in steps of 0.01

Default: 0.80 x Rated

This setting specifies a pickup threshold for the positive MVAR trip function. The level is programmed as a multiple of Rated MVAR calculated from the rated MVA and rated power factor. Rated reactive power is calculated as follows: $\text{Rated Reactive Power} = \text{Rated MVA} \times \sin(\cos^{-1}(\text{Rated Power Factor}))$

Rated MVA and Rated Power Factor are programmed under **Setpoints > System > Generator**.

NEGATIVE VAR TRIP PICKUP

Range: 0.02 to 2.00 x Rated in steps of 0.01

Default: 0.80 x Rated

This setting specifies a pickup threshold for the negative var trip function.

POSITIVE VAR TRIP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 10.00 s

This setting specifies a time delay for the positive var trip function. Once the 3-phase total reactive power exceeds the positive level for the duration of the Positive var Trip Delay time, a trip will occur indicating a positive var condition.

NEGATIVE VAR TRIP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the negative var trip function.

TRIP RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

This setting enables the Reactive Power alarm functionality.

POSITIVE VAR ALARM PICKUP

Range: 0.02 to 2.00 x Rated in steps of 0.01

Default: 0.85 x Rated

This setting is typically set at a level less than the Positive var Trip Pickup for the alarm function.

NEGATIVE VAR ALARM PICKUP

Range: 0.02 to 2.00 x Rated in steps of 0.01

Default: 0.85 x Rated

This setting specifies a pickup threshold for the negative var alarm function.

POSITIVE VAR ALARM DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 10.00 s

This setting specifies a time delay for the positive var alarm function.

NEGATIVE VAR ALARM DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the negative var alarm function.

ALARM RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

BLOCK FROM ONLINE

Range: 0.00 to 5000.00 s in steps of 0.01 s

Default: 0.50 s

In a synchronous motor application, it may be desirable not to trip or alarm on reactive power until the speed of the machine is near the synchronous speed or the field has been applied. Therefore, this feature can be blocked upon the initiation of a motor start for a period of time specified by this setting. From that point forward, the reactive power trip and alarm elements are active. A value of zero for the block time indicates that the reactive power protection is active as soon as motor start is detected.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset



9.8 FREQUENCY ELEMENTS

9.8.1 FREQUENCY PROTECTION COMMON SETUP

The relay provides a selection to detect between *Normal* and *Hi-Speed Freq* as input to detect underfrequency, overfrequency and rate of change of frequency (ROCOF). Compared to the regular metered voltage frequency value, the *Hi-Speed Freq* input has a faster response time, but is less accurate.

The Normal frequency estimation algorithm checks the time between two positive zero-crossing of the effective frequency signal. It also provides an extra security condition before considering that the new incoming period would be valid and available for the estimation of the frequency. The frequency is updated with the integration of the last 16 stored periods. When there is a large change in frequency between two consecutive periods, the estimation of the frequency is updated with the integration of the last 4 valid periods.

The Hi-Speed Freq estimation algorithm is less restrictive and checks the time between two consecutive zero-crossings in both directions of the effective frequency signal. Therefore, one measurement (raw frequency) would be available every half cycle. The frequency is updated with the integration of the latest valid stored periods. The number of periods used for the calculation is specified by the setting **Semicycles Set**. Another estimation of the frequency is also provided after the integration of the latest valid stored periods but considering the setting **Semicycles Reset**.

The Actual value **Hi-Speed Freq** is available under Path: **Measurement > Hi-Speed Freq**.

High-Speed Frequency

Range: Disabled, Enabled

Default: Disabled

This setting enables measurement of Hi-Speed Freq. When enabled, all the frequency-based elements (UF, OF, ROCOF) provide user-configurable selection between *Normal* and *Hi-Speed Freq*. The selection between Normal and Hi-Speed Freq is specified by the setpoint **Frequency Input**. When disabled, all the frequency-based elements (UF, OF, ROCOF) use Normal Frequency.

Freq Set # Semi-Cycles

Range: 5 to 16

Default: 5

Short Description:

The number of semi-cycles used for frequency estimation.

Freq Reset # Semi-Cycles

Range: 3 to 16

Default: 3

The number of semi-cycles used for frequency estimation to evaluate the reset conditions.

9.8.2 UNDERFREQUENCY (81U)

The relay can be used as the primary detecting relay in automatic load-shedding schemes based on underfrequency. The need for such a relay arises if during a system disturbance, an area becomes electrically isolated from the main system and suffers a generation deficiency due to the loss of either transmission or generation facilities. If reserve generation is not available in the area, conditions of low system frequency occur which can lead to a complete collapse. The relay provides several identical Underfrequency (UNDERFREQ) elements per protection group, which can automatically disconnect sufficient load to restore an acceptable balance between load and generation. The Underfrequency element can be set as an instantaneous element with no time

delay or as a definite time delayed element. The Underfrequency element has the programmable minimum operating thresholds to prevent undesired operation during periods of light load or unavailable voltage. The input voltages are the three phase-to-phase voltages from delta connected VTs (PTs), three phase-to-ground voltages from wye connected VTs (PTs), or single phase auxiliary voltage. The input currents are the three phase currents.

The Underfrequency Pickup flag is asserted when the measured frequency of the specified source is below the PKP value and the voltage and current are above the MINIMUM levels. The Underfrequency Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay. The element drops from Pickup without operation if the measured frequency rises above 0.03Hz of the Pickup value and stays dropped-out for the defined time delay before the time for operation is reached.

The minimum operating voltage setting selects the minimum voltage below which the element is blocked.

The minimum operating current setting selects the minimum current below which the element is blocked. Operation during periods of light load are prevented.

Path: Setpoints > Protection > Group 1(6) > Frequency > Underfrequency 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

FREQUENCY INPUT

Range: Normal, High-Speed

Default: Normal

You can select *Normal* or *High-speed* frequency as an input. Compared to the regular metered voltage frequency value, the high-speed frequency has the faster response but lesser accuracy. This setpoint is only available when Hi-Speed Freq is enabled under the path: **Setpoints\Protection\Frequency\Common Setup**.

BLOCK FROM ONLINE

Range: 0.00 to 5000.00 s in steps of 0.01 s

Default: 1.00 s

In a generator application, it may be desirable not to trip or alarm until the machine is online and the field has been applied. When this timer is programmed greater than zero, the feature remains blocked until the machine is online. A value of zero for the block time indicates that the element is active as soon as generator becomes online.

PICKUP

Range (normal frequency): 15.00 to 65.00 Hz in steps of 0.01 Hz

Range (high-speed frequency): 40.00 to 65.00 Hz in steps of 0.01 Hz

Default: 59 Hz

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

Default: Ph VT Bnk1-J2

VT INPUT

Range: dependent upon the order code

Default: Ph VT Bnk1-J2 or LEA Bnk1-J2, Dependent on order code

MINIMUM VOLTAGE

Range: 0.000 to 1.250 x VT in steps of 0.001 x VT

Default: 0.700 x VT

The setting sets the minimum voltage for Underfrequency element operation specified per times VT. The setpoint prevents incorrect operation before energization of the source to the relay location, and during voltage dips.

Note:

If the 3-phase VT uses a delta connection and **SIGNAL INPUT** is set to Ph VT Bnk1-J2, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

If the 3-phase VT uses a delta connection, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

When the source input for tracking frequency differs from that used for Under Frequency function, due to frequency variations, you may encounter notable voltage measurement errors as the frequency of input signal moves away from the tracking frequency source input. For instance, when the setting **Frequency Input** is configured to auxiliary voltage (from the 4th VT), while the tracking frequency comes from the main source's three-phase voltages, any difference between the frequency of the auxiliary voltage (Vx) and the three-phase voltages (3VT) leads to a magnitude measurement error in Vx, caused by the deviation of Vx frequency from the main frequency

CT INPUT (not for 859 or 889)

Range: dependent upon the order code

Default: CT Bank 1-J1 or CT Bank 1-K1, dependent on order code

MINIMUM CURRENT

Range: 0.000 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

The setting sets the minimum value of current required on any phase to allow the Underfrequency element to operate. The setpoint is used to prevent underfrequency tripping during periods of light load, when this action would have an insignificant effect on the system. A setting of zero is suspend current supervision.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

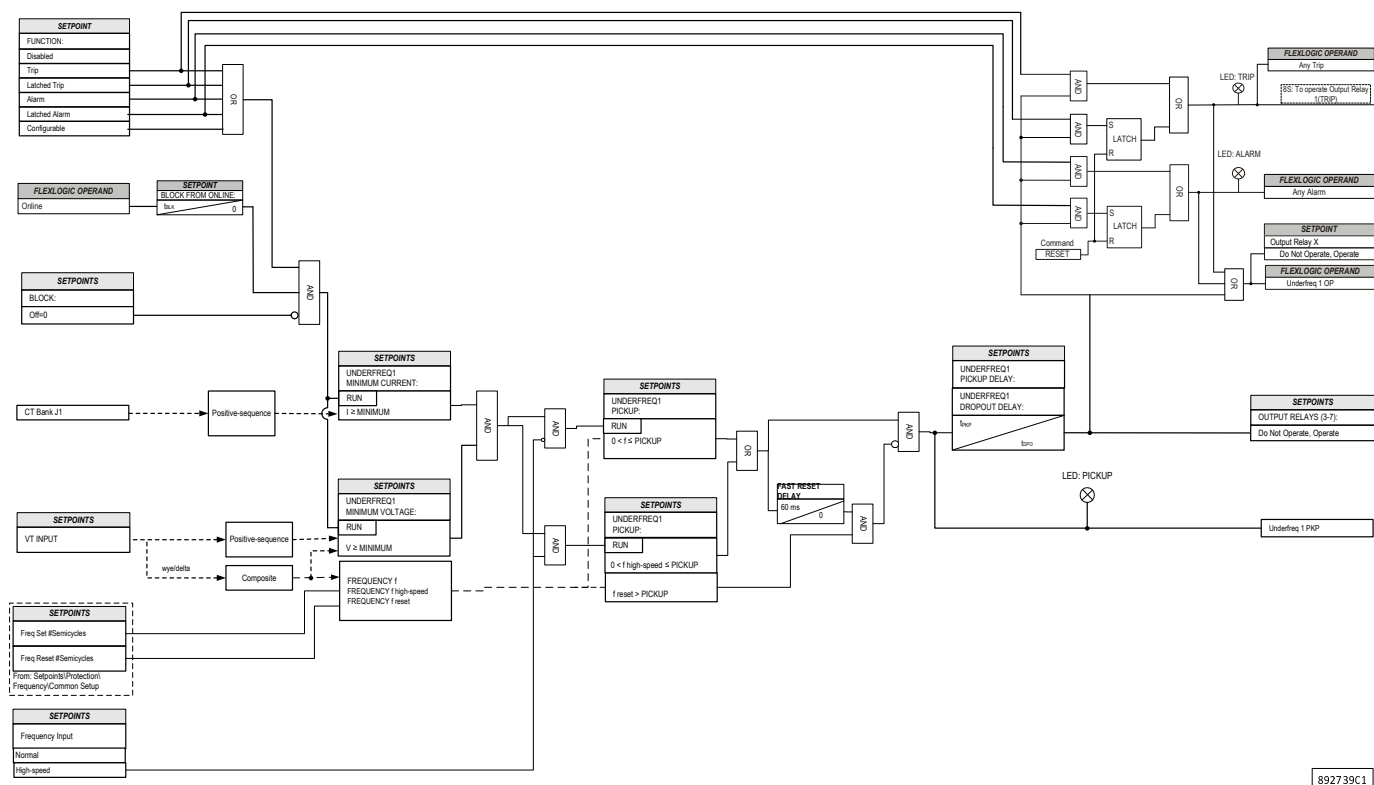

892739C1

Figure 236: Underfrequency Protection logic diagram

9.8.3 OVERFREQUENCY (81O)

The relay provides several identical Overfrequency (OVERFREQ) elements per protection group.

A significant overfrequency condition, likely caused by a breaker opening and disconnecting load from a particular generation location, can be detected and used to quickly ramp the turbine speed back to normal. If this is not done, the over speed can lead to a turbine trip, which would then subsequently require a turbine start up before restoring the system. If the overfrequency turbine ramp down is successful, the system restoration can be much quicker. The overfrequency monitoring feature of the relay can be used for this purpose at a generating location.

The Overfrequency feature is inhibited from operating unless the magnitude of the positive sequence or auxiliary voltage rises above a threshold. When the supply source is energized, the overfrequency delay timer is allowed to start timing only when the threshold is exceeded and the frequency is above the programmed Pickup level. In the same way, when an overfrequency condition starts the overfrequency delay timer and the voltage falls below the threshold before the timer has expired, the element resets without operating.

The Overfrequency element may be set as an instantaneous element with no time delay, or as a definite time delayed element. The Overfrequency element has a fixed minimum operating threshold to prevent undesired operation during periods of unavailable voltage. The input voltages are the three phase-to-phase voltages from delta connected VTs (PTs), three phase-to-ground voltages from wye connected VTs (PTs), or single phase auxiliary voltage.

The settings of this function are applied to each source to produce Pickup and Operate flags. The Overfrequency Pickup flag is asserted when the measured frequency of the specified source is above the PKP value and the voltage is above the threshold. The Overfrequency Operate flag is asserted if the element stays picked up for the time defined by the Pickup time delay. The element drops from Pickup without operation if the measured frequency decreases below 0.03 Hz of the Pickup value and stays dropped out for the defined time delay before the time for operation is reached.

The minimum operating voltage is set as a threshold below which the element is blocked.

Path: *Setpoints > Protection > Group 1(6) > Frequency > Overfrequency 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: Ph VT Bnk1-J2 or LEA Bnk1-J2, Dependent on order code

This setting provides selection of the frequency input.

FREQUENCY INPUT

Range: Normal, High-Speed

Default: Normal

You can select *Normal* or *High-speed* frequency as an input. Compared to the regular metered voltage frequency value, the high-speed frequency has the faster response but lesser accuracy. This setpoint is only available when Hi-Speed Freq is enabled under the path: **Setpoints\Protection\Frequency\Common Setup**.

BLOCK FROM ONLINE

Range: 0.00 to 5000.00 s in steps of 0.01 s

Default: 1.00 s

In a generator application, it may be desirable not to trip or alarm until the machine is online and the field has been applied. When this timer is programmed greater than zero, the feature remains blocked until the machine is online. A value of zero for the block time indicates that the element is active as soon as generator becomes online.

PICKUP

Range (normal frequency): 15.00 to 65.00 Hz in steps of 0.01 Hz

Range (high-speed frequency): 40.00 to 65.00 Hz in steps of 0.01 Hz

Default: 59 Hz

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

MINIMUM VOLTAGE

Range: 0.000 to 1.250 x VT in steps of 0.001 x VT

Default: 0.700 x VT

The setting sets the minimum voltage for Overfrequency element operation specified per times VT.

Note:

If the 3-phase VT uses a delta connection and SIGNAL INPUT is set to Ph VT Bnk1-J2, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

If the 3-phase VT uses a delta connection, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

When the source input for tracking frequency differs from that used for Under Frequency function, due to frequency variations, you may encounter notable voltage measurement errors as the frequency of input signal moves away from the tracking frequency source input. For instance, when the setting 'Frequency Input' is configured to auxiliary voltage (from the 4th VT), while the tracking frequency comes from the main source's three-phase voltages, any difference between the frequency of the auxiliary voltage (Vx) and the three-phase voltages (3VT) leads to a magnitude measurement error in Vx, caused by the deviation of Vx frequency from the main frequency.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

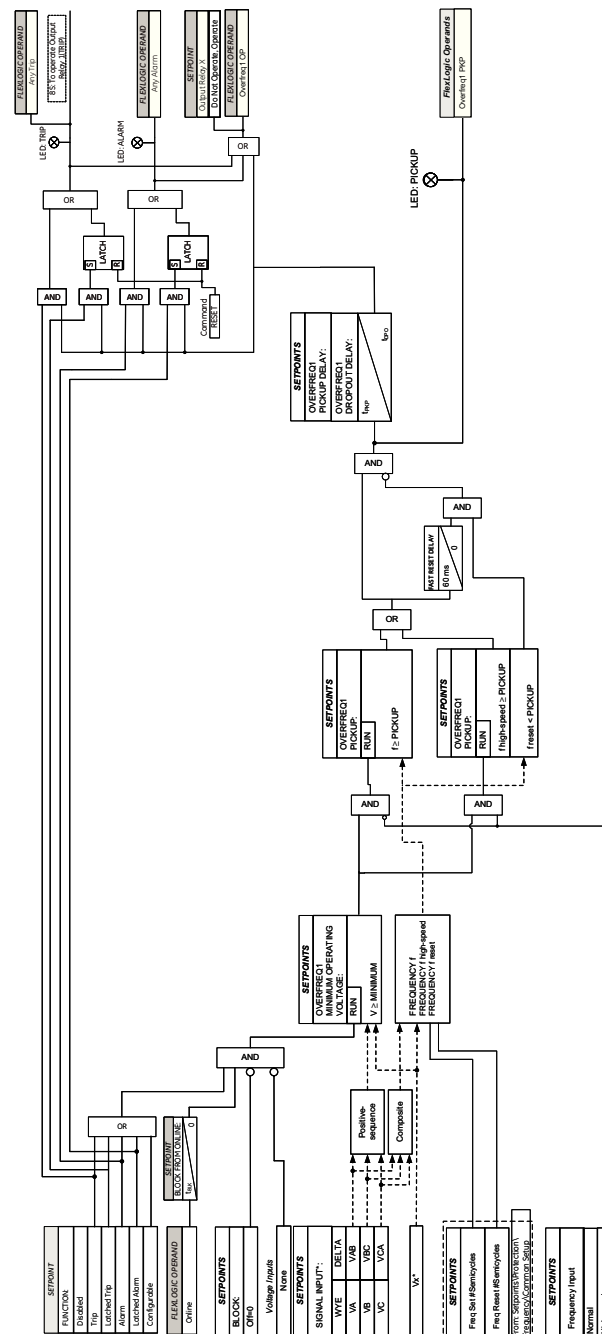


Figure 237: Overfrequency logic diagram

9.8.4 FREQUENCY RATE OF CHANGE (81R)

There is one Frequency Rate of Change protection element which can respond to rate of change of frequency with voltage, current and frequency supervision.

The Rate of Change element may be set as an instantaneous element with no time delay or as a definite time delayed element. The rate of change element has the programmable minimum operating voltage and current thresholds to prevent undesired operation under specific system conditions.

The settings of this function are applied to each source to produce Pickup and Trip flags.

The Frequency Rate of Change Pickup flag is asserted when the calculated frequency rate of change of the specified source is above the PKP value, the voltage and current are above the MINIMUM levels, and the frequency is within a certain range. The Frequency Rate of Change Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay. The element instantaneously drops from Pickup without operation, if the frequency rate of change drops below 96% of the Pickup value, before the time for operation is reached.

The minimum voltage and current thresholds select the minimum voltage and current below which the element is blocked.

The minimum and maximum frequencies set the operating frequency range out of which the element is blocked.

Path: Setpoints > Protection > Group 1(6) > Frequency > Frequency Rate of Change 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

FREQUENCY INPUT

Range: Normal, High-Speed

Default: Normal

You can select *Normal* or *High-speed* frequency as an input. Compared to the regular metered voltage frequency value, the high-speed frequency has the faster response but lesser accuracy. This setpoint is only available when Hi-Speed Freq is enabled under the path: **Setpoints\Protection\Frequency\Common Setup**.

TREND

Range: Decreasing, Increasing, Bi-directional

Default: Decreasing

The setting allows configuring of the element to respond to increasing or decreasing frequency, or to a frequency change in either direction.

PICKUP

Range: 0.10 to 15.00 Hz/sec in steps of 0.01 Hz/sec

Default: 0.50 Hz/sec

The setting specifies an intended Pickup threshold.

For applications monitoring a decreasing trend, set **TREND** to *Decreasing* and specify the Pickup threshold accordingly. The operating condition is: $-df/dt > PKP$.

For applications monitoring an increasing trend, set **TREND** to *Increasing* and specify the pickup threshold accordingly. The operating condition is: $df/dt > PKP$.

For applications monitoring rate of change of frequency in any direction, set **TREND** to "Bi-Directional" and specify the Pickup threshold accordingly. The operating condition can be either of the above two conditions.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

This setting provides a definite Pickup time delay. Instantaneous operation is selected by a Pickup time delay setting of 0.000 s.

MINIMUM FREQUENCY

Range (normal speed): 20.00 to 80.00 Hz in steps of 0.01 Hz

Range (high-speed): 40.00 to 70.00 Hz in steps of 0.01 Hz

Default: 45.00 Hz

The setting defines the minimum frequency level required for operation of the element.

The setting may be used to effectively block the feature based on frequency. For example, if the intent is to monitor an increasing trend but only if the frequency is already above certain level, this setting is set to the required frequency level.

MAXIMUM FREQUENCY

Range: 20.00 to 80.00 Hz in steps of 0.01 Hz (3.x.x, normal speed with 4.xx)

Range: 40.00 to 70.00 Hz in steps of 0.01 Hz (4.xx high speed)

Default: 65.00 Hz

The setting defines the maximum frequency level required for operation of the element.

The setting may be used to effectively block the feature based on frequency. For example, if the intent is to monitor a decreasing trend but only if the frequency is already below a certain level (such as for load shedding), this setting is set to the required frequency level.

VT INPUT

Range: dependent upon the order code

Default: Ph VT Bnk1-J2 or LEA Bnk1-J2, Dependent on order code

This setting provides selection of the frequency input.

MINIMUM VOLTAGE

Range: 0.000 to 1.250 x VT in steps of 0.001 x VT

Default: 0.700 x VT

The setting defines the minimum voltage level required for operation of the element. The supervising function responds to the positive-sequence voltage. Overvoltage supervision is used to prevent operation under specific system conditions such as faults.

Note:

*If the 3-phase VT uses a delta connection and **FREQUENCY INPUT** is set to Ph VT Bnk1-J2, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.*

Note:

If the 3-phase VT uses a delta connection, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

CT INPUT

Range: dependent upon the order code

Default: CT Bank1-J1 or CT Bank1-K1, dependent on order code

This setting provides the current bank selection for the minimum current setting.

MINIMUM CURRENT

Range: 0.000 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

This setting defines the minimum current level required for operation of the element. The supervising function responds to the positive-sequence current. Typical application includes load shedding. Set the Pickup threshold to zero if no overcurrent supervision is required. The setting of zero suspends the current supervision.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The element will be blocked when the selected operand is asserted.

OUTPUT RELAYS

Range: Operate, Do Not Operate

Default: Do Not Operate

Each relay can be selected to become either energized or de-energized when operated, and to operate as latched, self-resetting or pulsed.

EVENTS

Range: Enabled, Disabled

Default: Enabled

The selection of the Enabled setting enables the events of the function.

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

This setting is used to define the operation of an element target message. When disabled, no target message is issued upon operation of the element. When set to *Self-Reset*, the target message and its LED indication follow the operate state of the element, and self-reset once the operate element condition clears. When set to *Latched*, the target message will remain visible after the element output returns to logic 0 until a RESET command is received by the relay.

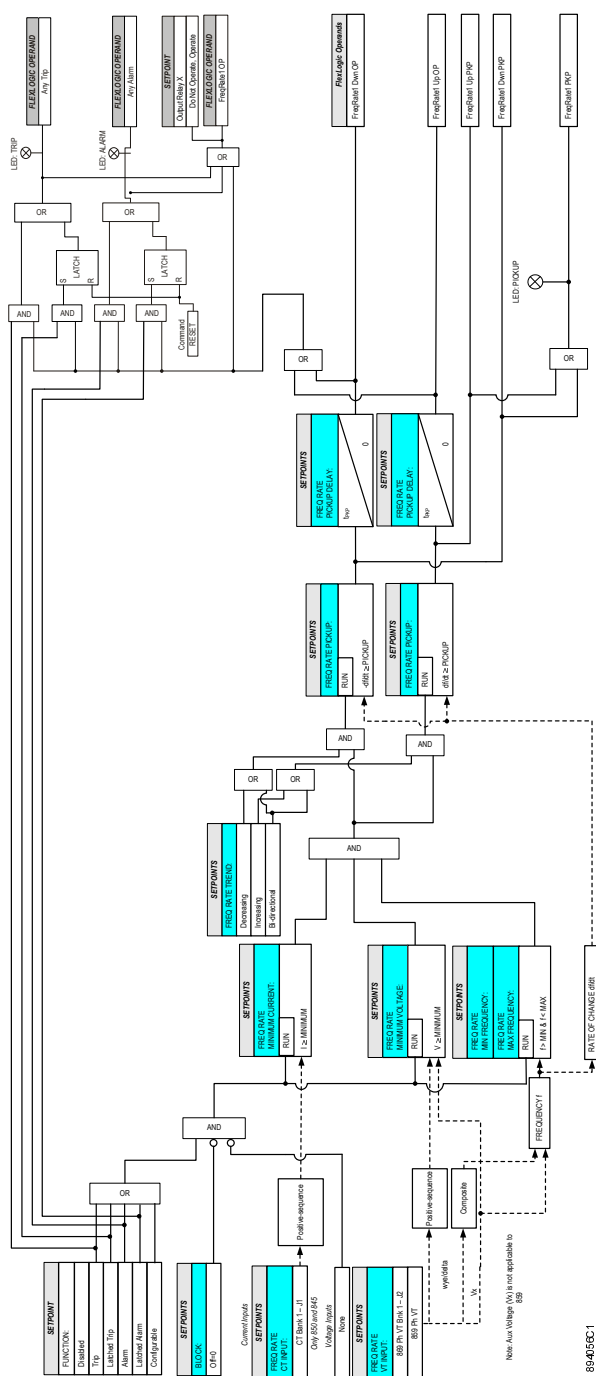


Figure 238: Frequency Rate-of-Change Protection logic diagram

CHAPTER 10

MONITORING

10.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	507
Monitoring Overview	508
Generator Monitoring	509
Breaker monitoring	535
Functions	548
Harmonic Detection	570
Speed	573
RTD Temperature	578
RTD Trouble	583
Loss of Communications	584

10.2 MONITORING OVERVIEW

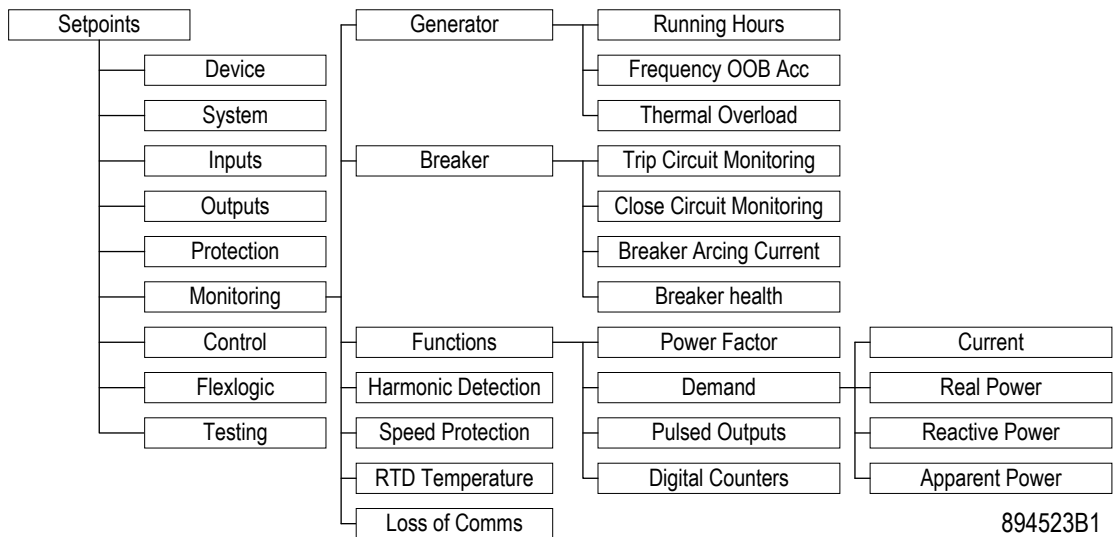


Figure 239: Monitoring Display Hierarchy

10.3 GENERATOR MONITORING

10.3.1 RUNNING HOURS

The relay can calculate/accumulate generator running hours, which may be of interest for periodic maintenance. Since running hour calculations do not rely on external/special input (Tachometer), it basically utilizes generator terminal voltage and frequency measurement, and hence, Running hours is always available (as a generator metering value). Running Hours are accumulated if the generator terminal positive sequence voltage (Slot-J V1) is above $0.5 \times V_T$ and frequency is above 10 Hz. Initial running hours can be added in case if generator has existing runtime value. In case if total running hours exceed the use-setting limit, the function would alarm the condition.

Path: *Setpoints > Monitoring > Generator > Running Hours*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

INITIAL RUN HRS

Range: 0 to 999,999 hrs in steps of 1 hr

Default: 0 hrs

This setting allows the user to program existing accumulated running hours on the generator the relay is protecting. In order to apply initial running hours, the current generator running hours should be cleared to zero. Once applied, the running hours are calculated starting from this initial value.

Note:

*In order to apply the initial running hours, first clear the Running hours using **Records > Clear Records > Clear Running Hours**. Upon execution of "Clear Running Hours" command, the value set in this INITIAL RUN HRS will be initialized in the running hour counter.*

RUN HRS LIMIT

Range: 1 to 1000,000 hrs in steps of 1 hr

Default: 1000 hrs

This setting specifies the maximum hours after which a Running Hour Alarm is generated.

OUTPUT RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENT

Range: Enabled, Disabled

Default: Disabled

TARGET

Range: Self-reset, Latched, Disabled

Default: Self-reset

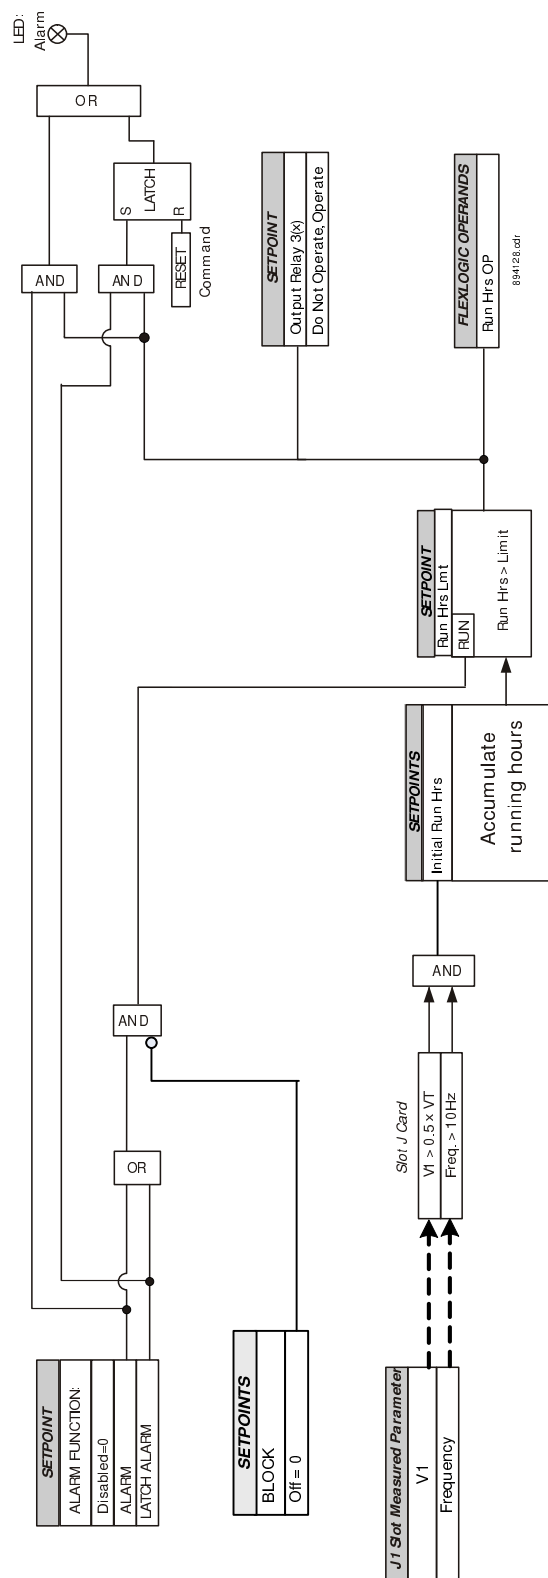


Figure 240: Running Hours Logic Diagram

10.3.2 FREQUENCY OUT-OF-BAND ACCUMULATION (81A)

A generator turbine is designed to operate within a specific frequency and speed range (around the nominal), typically $\pm 5\%$. During load rejection or coast down, the generator turbine may operate at a higher speed (frequency) or lower speed (frequency) respectively, which is outside of the normal operation frequency band. In these conditions, the turbine will pass through operating frequencies where the turbine blades find stimulus at their natural frequencies. Blade vibrations at these natural frequencies result in stress on the blades that is accumulated, and can result in cracking in some parts of the blade structure such as the tie wires or blade covers. The Frequency Out-Of-Band (OOB) Accumulation feature provides diagnostic information and alarms based on the accumulated off-nominal (out-of-band) frequency operation time of a turbine over several frequency bands. This alarm can be used to schedule maintenance or other actions as desired. The available setting of an upper and lower frequency for each band enables the user to overlap bands of frequencies in the accumulation function. The accumulation function can be blocked as desired. For example, accumulation may be blocked during an out-of-service condition or during testing as set via an input to the relay.

The following General settings are available to all accumulators.

Path: *Setpoints > Monitoring > Generator > Frequency OOB Accumulation > General*

MINIMUM VOLTAGE

Range: 0.10 to 1.25 x VT in steps of 0.01 x VT

Default: 0.10 x VT

This setting specifies the minimum positive-sequence voltage level required to allow the frequency out-of-band accumulators to operate. This threshold is used to prevent an incorrect accumulation when operating quantity is too low.

RESET ACCUMULATORS

Range: Off, Any FlexLogic operand

Default: Off

Frequency OOB accumulators can be reset to zero using any FlexLogic operand.

Note:

Using Virtual Input with the Self-reset option is not recommended. Any FlexLogic operand selected as a reset input should remain high for at least two power cycles.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

This setting selects a FlexLogic operand to block out-of-band frequency accumulation in all bands/accumulators. This is typically required to avoid unnecessary accumulation when relay testing is being performed.

EVENT

Range: Enabled, Disabled

Default: Disabled

TARGET

Range: Self-reset, Latched, Disabled

Default: Self-reset

The following individual settings are available for each of the seven frequency out-of-band accumulators.

Path: *Setpoints > Monitoring > Generator > Frequency OOB Accumulation > Accum 1(7)*

FUNCTION

Range: Disabled, ALarm, Latched Alarm, Configurable

Default: Disabled

This setting enables and disables a specific frequency band accumulator.

UPPER FREQUENCY

Range: 5.00 to 70.00 Hz in steps of 0.01 Hz

Default: 60.00 Hz

This setting specifies the upper frequency value, in Hz, below which Accumulator 1(7) starts accumulating time and asserts the PKP operand. This upper frequency value must be greater than the lower frequency value.

LOWER FREQUENCY

Range: 5.00 to 70.00 Hz in steps of 0.01 Hz

Default: 60.00 Hz

This setting specifies the lower frequency value, in Hz, above which Accumulator 1(7) starts accumulating time and asserts the PKP operand. This lower frequency value must be less than the upper frequency value.

TIME LIMIT

Range: 1 to 100000 s in steps of 1 s

Default: 200 s

This setting specifies the accumulating time limit (in seconds) above which this function asserts the OP operand.

TIME PRESET

Range: 0 to 100000 s in steps of 1 s

Default: 0 s

This setting allows the user to initialize or preset the accumulator time (in seconds) in case this value is known from previous operation of a turbine.

Note:

The TIME PRESET value must be higher than the current accumulator value in order to Preset.

OUTPUT RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

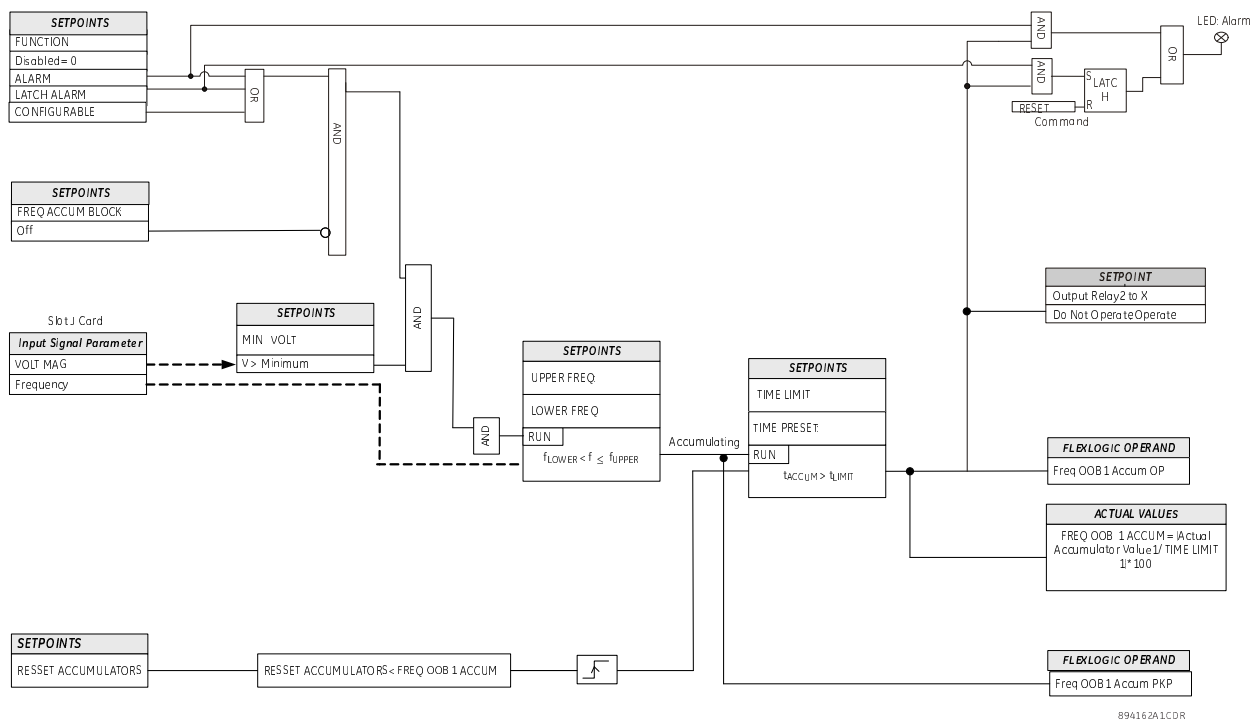


Figure 241: Frequency OOB Accumulation (with Accumulator 1) Logic Diagram

10.3.3 THERMAL OVERLOAD PROTECTION (49TOL)

The thermal overload protection element corresponds to the IEC 255-8 standard and is used to detect thermal overload conditions in protected power system elements. Choosing an appropriate time constant, the thermal overload protection element can be used to protect different elements of the power system. The cold curve characteristic is applied when the previous averaged load current over the last 5 cycles is less than 10% of the base current. If this current is greater or equal to 10% of the base current, then the hot curve characteristic is applied.

The IEC255-8 cold curve operate time is defined as follows (EQN 1):

$$t_{op} = \tau_{op} \times \ln \{I^2 / (I^2 - (k \cdot I_b)^2)\}$$

The IEC255-8 hot curve operate time is defined as follows (EQN 2):

$$t_{op} = \tau_{op} \times \ln \{(I^2 - I_p^2) / (I^2 - (k \cdot I_b)^2)\}$$

where:

- t_{op} = time to operate
- τ_{op} = operate time constant
- I = measured overload RMS current
- I_p = measured load RMS current before overload occurs
- k = IEC 255-8 k-factor applied to I_b , defining maximum permissible current above nominal current
- I_b = protected element base (nominal) current or full load current (FLA)

For example, when this element is used for the generator overload protection, I_b is the generator rated current calculate from the Rated MVA and Rated Voltage set under **Path: Setpoints > System > Generator > General**.

I_b is calculated as follows (EQN 3):

$$I_b = \text{Rated MVA} / \sqrt{3}(\text{Rated Voltage})$$

The square of the load RMS current (I_p), in EQN 2, represents the thermal capacity before overload occurs, as determined by EQN 6. Therefore, the trip time obtained from the IEC hot curve takes into account the percentage of thermal capacity that has already been used. The cold curve characteristic is applied when the previous averaged load current over the last 5 cycles is less than 10% of the base current. If this current is greater or equal to 10% of the base current, then the hot curve characteristic is applied.

The reset time of the thermal overload protection element is also time delayed using following formula (EQN 4):

$$t_{\text{reset}} = \tau_{\text{reset}} \times \ln \left\{ (k \cdot I_b)^2 / (I^2 - (k \cdot I_b)^2) \right\} + T_{\text{min}}$$

where:

- t_{Reset} = time to reset
- T_{Reset} = reset time constant
- T_{min} = minimum reset time setting

In some applications, the shape of the power system element thermal damage curve substantially deviates from the standard IEC curve. It may be necessary to use a custom curve in order to incorporate the exact match of the actual overload damage curve without compromising protection. For these conditions, it is recommended that the FlexCurves be used. FlexCurves allows the user to program selected operate (t_{op}) and reset time (t_{Reset}) for pre-determined current levels.

The relay incorporates four programmable FlexCurves™ - FlexCurve A, B, C and D. The points for these curves are defined by the user in EnerVista D&I Setup. User-defined curves can be used for thermal overload protection in the same way as IEC curves. Each of the four FlexCurves™ has 120-point settings for entering times to reset and operate; 40 points for reset (from 0 to 0.98 times the Pickup value) and 80 for operate (from 1.03 to 20 times the Pickup value).

Note:

The equations shown above (EQN1, 2, 3, 4) are not applicable when a setpoint Overload Curve is programmed as a FlexCurve.

Once the load current exceeds the overload level ($k \times I_b$), it enters an overload phase; that is, heat accumulation becomes greater than heat dissipation. The thermal overload element reacts by incrementing the thermal capacity used (TCU) at a rate dependent on the selected thermal curve and overload level. When the accumulated thermal capacity reaches 100%, the Thermal OL OP operand is set. This operand remains asserted until it is reset.

The thermal overload protection element estimates thermal capacity used TCU using the following equations calculated each power cycle. When current is greater than the pickup level, $I > k \times I_b$, element starts increasing the thermal capacity (EQN 5):

$$TCU_n = TCU_{(n-1)} + \frac{\Delta t}{t_{\text{op}}} \times 100\%$$

When current is less than the dropout level, $|I| < 0.97 \times k \times I_b$, the element starts decreasing the thermal capacity (EQN 6):

$$TCU_n = TCU_{n-1} - \frac{\Delta t}{t_{\text{Reset}}} \times 100\%$$

where:

- TCU_n = thermal capacity used at index n
- TCU_{n-1} = thermal capacity used at index $n - 1$
- Δt = power cycle duration

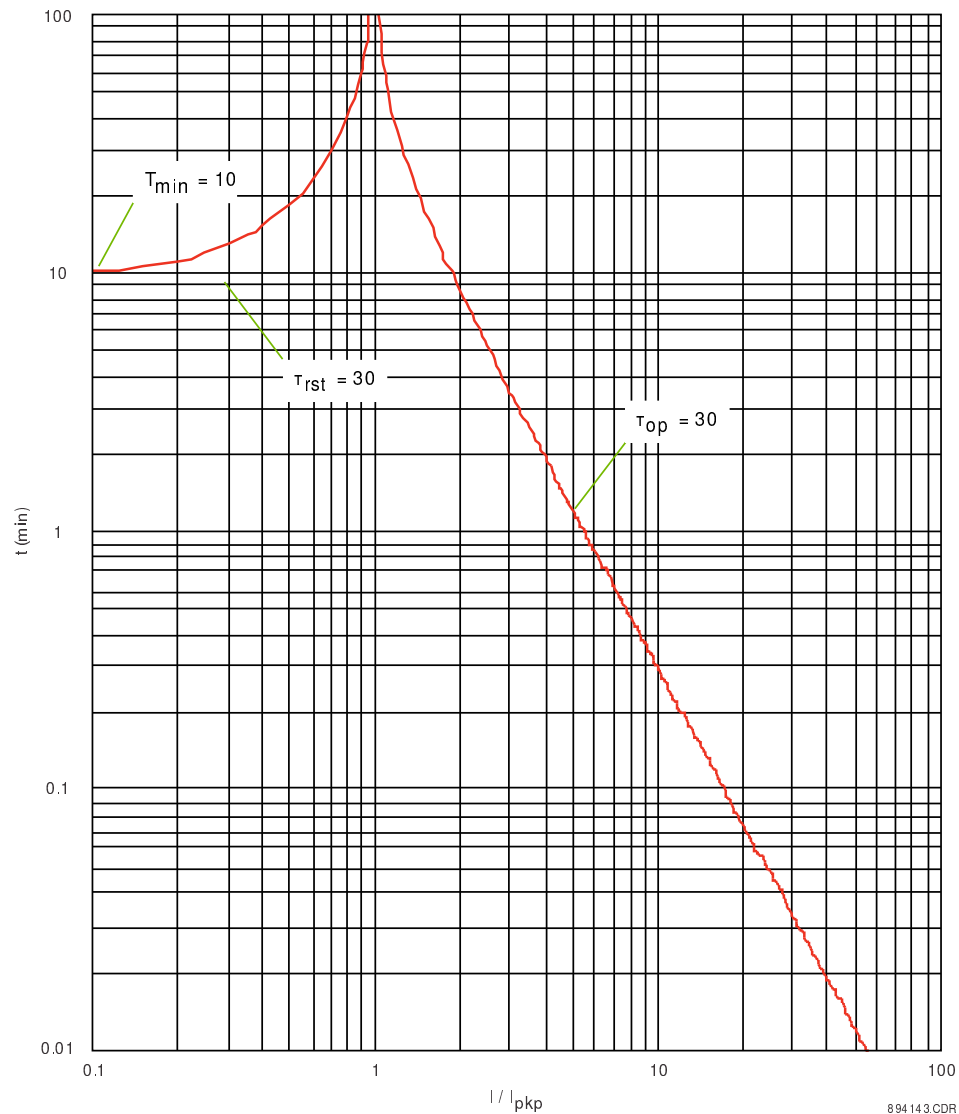


Figure 242: IEC 255-8 Sample Operate and Reset Curves

The thermal overload protection element removes the Thermal OP output operand when $E < 5\%$. In case of emergency, the thermal memory and Thermal OP output operand can be reset using the FlexLogic operand programmed under the Thermal Reset setting.

All calculations are performed per phase. If the accumulated thermal capacity reaches a value of 100% in any phase, the thermal overload protection element operates, and only resets when thermal capacity is less than 5% in all three phases.

Path: *Setpoints > Monitoring > Thermal Overload Protection*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

This setting enables the Thermal Overload functionality.

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the selection for the 3-Phase CT bank inputs. This setting allows applying this element either on the terminal side or neutral side of the Generator.

k-FACTOR

Range: 1.00 to 1.50 in steps of 0.01

Default: 1.10

This setting defines the current level at which the power system element is considered to be overloaded. If the current exceeds the $k \times I_b$ threshold, the thermal overload protection reacts by accumulating thermal capacity.

OVERLOAD CURVE

Range: IEC, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D

Default: IEC

The thermal overload curve determines the thermal limit overload conditions that can damage the power system element. The overload curve can take one of five formats: IEC, FlexCurve A, FlexCurve B, FlexCurve C, or FlexCurve.

OPERATE TIME CONSTANT

Range: 0.0 to 1000.0 min in steps of 0.1 min

Default: 45 min

This setting specifies thermal operate time constant for IEC curves as defined by the IEC 255-8 standard equations (EQN 1 & 2). When the IEC curves are selected, the thermal overload element calculates the time to operate (top) using the IEC255-8 cold curve and IEC255-8 hot curve equations, and increases thermal capacity as defined by the equation EQN 5.

TD MULTIPLIER

Range: 0.00 to 600.00 in steps of 0.01 when the thermal model curve is a FlexCurve

Default: 1.00

This setting is only applicable when the Overload Curve setting is programmed as one of the FlexCurves (A, B, C, or D). TD Multiplier is used to shift the overload curve on the time axis to create a family of the different curves. The TD Multiplier value is used to select the curve that best matches the thermal characteristics of the protected power system element.

This setting allows the selection of a multiple of the base curve shape (where the time dial multiplier = 1) with the curve shape setting. For example, all times for a TDM = 10 are ten times the multiplier 1, or base curve values.

RESET TIME CONSTANT

Range: 0.0 to 1000.0 min in steps of 0.1 min

Default: 45 min

This setting specifies the thermal reset time constant for IEC curves, to determine the reset time using EQN 4 to reset the thermal overload protection.

MIN RESET TIME

Range: 0.0 to 1000.0 min in steps of 0.1 min

Default: 10.0 min

This setting specifies the minimum time to reset the thermal overload protection. This setting is only applicable to IEC curves.

THERMAL RESET

Range: Off, Any FlexLogic operand

Default: Off

In case of emergency, the thermal memory and thermal OP output operand can be reset using the Thermal Reset operand.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The thermal overload protection can be blocked by any asserted FlexLogic™ operand.

RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

Any assignable output relay can be selected to operate upon Thermal Protection operation.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

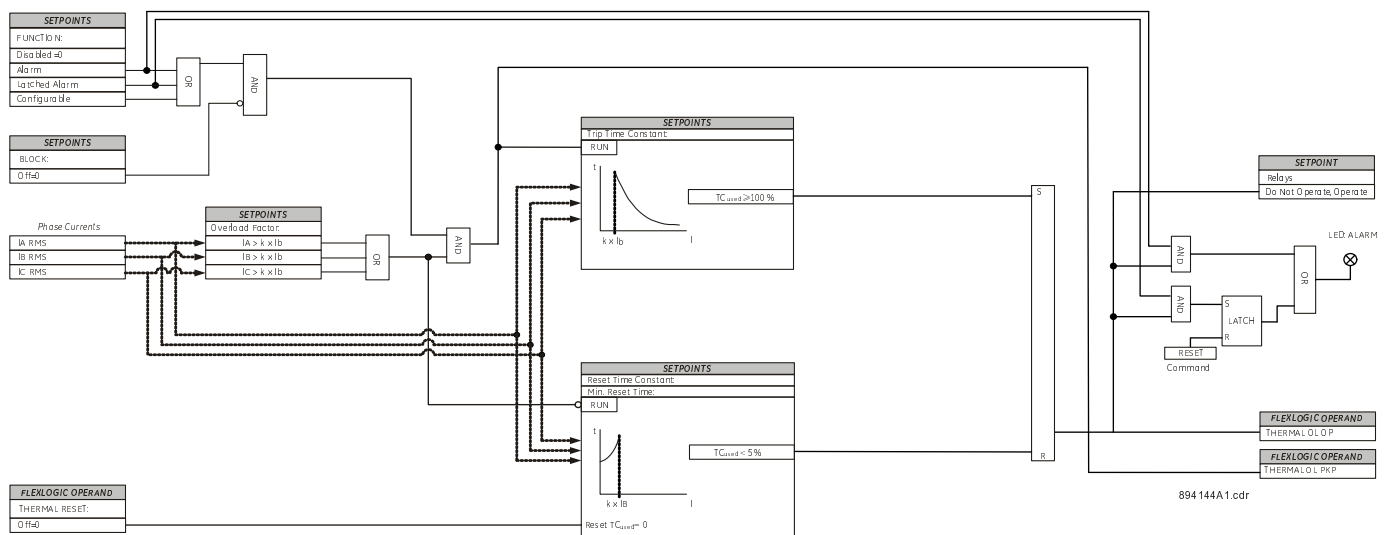


Figure 243: Thermal Model Logic Diagram

10.3.4 POWER FACTOR

When using a synchronous machine, it is desirable not to trip or alarm on power factor until the field has been applied. Therefore, this feature can be blocked until the machine comes up to speed and the field is applied. From that point forward, the power factor trip and alarm elements will be active. Once the power factor is less than either the Lead or Lag level, for the specified delay, a trip or alarm will occur indicating a Lead or Lag condition. The power factor alarm can be used to detect loss of excitation and out of step.

The relay calculates the average Power Factor in the three phases as follows:

$$\text{Average Power Factor} = \text{Total 3-Phase Real Power} / \text{Total 3-Phase Apparent Power}$$

For delta-connected VTs, the Power Factor feature is inhibited from operating unless all three voltages are above the selected voltage threshold and one or more currents are above the selected current threshold. Power Factor element delay timers are only allowed to time when the voltage threshold is exceeded on all phases and current threshold is exceeded on one phase. In the same way, when a Power Factor condition starts the Power Factor delay timer, if all three phase voltages fall below the threshold and one phase current threshold falls below the timer has timed-out, the element resets without operating. A loss of voltage during any state returns both Power Factor elements to the Reset state.

For wye-connected VTs, the power factor value is calculated from the valid phase(s) for which voltage and current are above the user selected thresholds. Power Factor element delay timers are only allowed to time when the supervision conditions are met. In the same way, when a Power Factor condition starts the Power Factor delay timer, if one or more valid phases no longer satisfy the supervision conditions, the power factor is re-calculated based on the still valid phase(s). If the element is continuously asserted with the new power factor value, the timer would continue timing, otherwise, the element resets without operating.

The minimum operating voltage and current are set as a threshold below which the element is reset.

The following figure illustrates the conventions established for use, where the negative value means the lead power factor, and the positive value means the lag power factor.

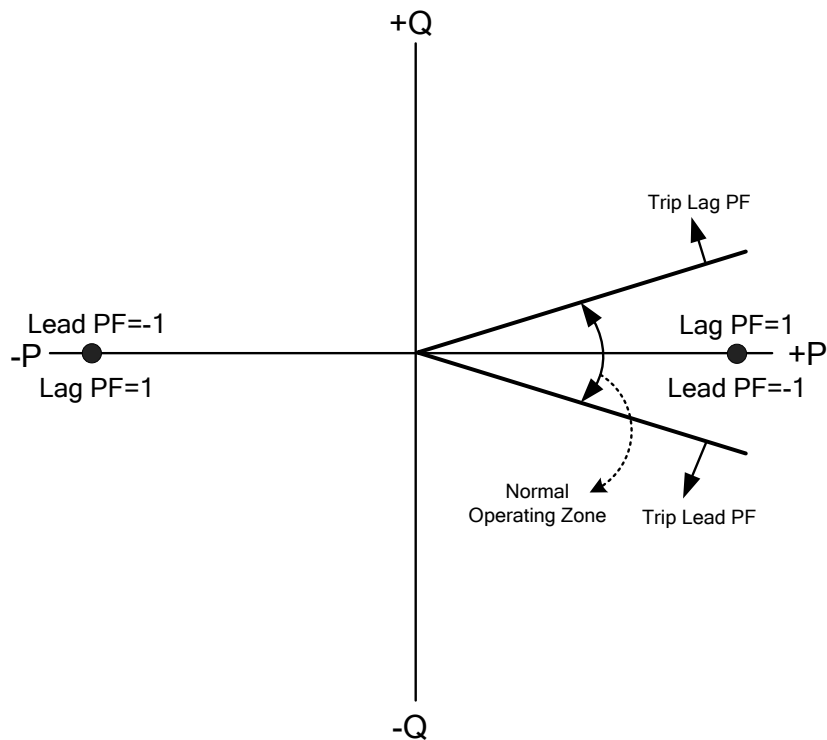


Figure 244: Power Factor Conventions

In a synchronous machine, this type of machine can operate in lagging (under excitation), leading (over excitation) or unity power factor conditions depending on the applied field current. As shown in below figure, V-curves are normally provided by the machine manufacturer to determine the relationship between the field current and power factor.

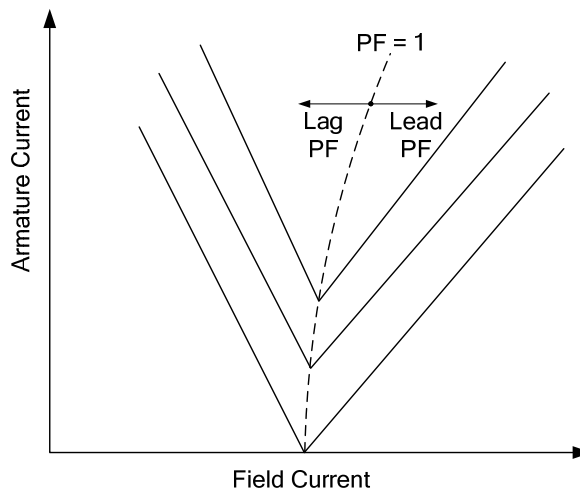


Figure 245: Synchronous Machine Simplified V-Curve Example

In synchronous motor applications, in case of a lagging power factor, two modes of power factor protection are available. They are as follows:

Resync Mode

When the setpoint PF Mode is set to Resync, this feature initiates an attempt to automatically resynchronize the motor (instead of direct Tripping when the motor goes into a pull-out condition). When the power factor lags below the configurable setpoint **TRIP LAG LEVEL**, the operand SM Resync Init Cmd is asserted. This feature allows the motor to continue running with field removed for the set **Resync Check Delay** time, and if resynchronization does not occur within this time, the Trip relay can then be operated to stop the motor.

Energizing the output relay configured to open the field switching device and/or auto-loading is recommended, using the FlexLogic operand SM Resync Init Cmd in order to remove the motor-field excitation and disconnect the load. Note that operand SM Resync Init Cmd, when set to high, remains latched until the motor is successfully synchronized (i.e. operand SM Running = 1 and **PF Trip Lag** condition becomes false) or the motor resynchronization fails (operand SM Resync Failed = 1) or the motor is stopped or tripped.

Ride-thru mode

If the alternate *ride-thru* mode is selected, the field is not removed immediately as in the Resync mode. Instead, if the power factor dips below the configured threshold of setpoint **TRIP LAG LEVEL** and persists for the set **TRIP PICKUP DELAY** time, the Trip relay operates and the motor stops.

Note:

After the synchronous motor starts, the PF protection function remains inactive in induction mode until the motor completes its startup sequence and reaches the status **SM Running**. This indicates that the motor's field is applied, and it has successfully synchronized. However, if there is an abrupt loss of the field while the main power supply remains connected, the PF protection in **Ride-Thru** mode will remain active in induction mode (without field applied) until the pickup delay time elapses. This allows PF protection to trip or alarm after the programmed delay.

Path: Setpoints > Monitoring > Functions > Power Factor

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

This setting enables the Power Factor Trip functionality.

PF MODE

Range: Resync, Ride-thru

Default: Ride-thru

Note:

This setpoint is only applicable to synchronous motor applications with proper order code selection.

Ride-through Mode: This mode allows the motor to ride through power factor dips with duration less than the **TRIP PICKUP DELAY**.

Resync Mode: Upon measuring a power factor below the **TRIP LAG LEVEL** setpoint, the relay may de-energize the field switching device and Auto-loading relays and attempt to resynchronize the motor. The motor continues to run with the field removed for the programmed Resync Check Delay, and if resynchronization does not occur within this time a trip occurs, operating the trip relay and stopping the motor.

Note:

Notes:

Note:

*PF Mode only activates when the relay measures lagging PF below the setpoint **TRIP LAG LEVEL**. PF Mode is not applicable when the motor is running with leading PF.*

Note:

*This setting is hidden when setpoint **SYNC. MOTOR TYPE** (under **Setpoints > System > Motor > Setup**) is set to `None`.*

Note:

This setting is hidden unless order code option C5/D5 is selected for 'Phase Currents-Slot K Bank 1/2'.

TRIP LEAD LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00 Lag

This setting specifies the Power Factor Lead Trip level.

Note:

Enter 1.00 to turn off the Trip Lead Level. The HMI also shows it is "OFF".

TRIP LAG LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00

This setting specifies the Power Factor Lag Trip level.

Note:

When the Trip Lag Level is set to 1.00, the pickup level turns it off.

TRIP PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a time delay for the trip function.

TRIP DROPOUT DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a dropout time delay for the trip function.

TRIP OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latch Alarm

Default: Disabled

This setting enables the Power Factor Alarm functionality.

ALARM LEAD LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00

This setting specifies the Power Factor Lead Alarm level.

Note:

Enter 1.00 to turn off the Alarm Lead Level. The HMI shows "OFF".

ALARM LAG LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00

This setting specifies the Power Factor Lag alarm level.

Note:

Enter 1.00 to turn off the Alarm Lag Level. The HMI shows OFF".

ALARM PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a time delay for the alarm function.

ALARM DROPOUT DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a dropout time delay for the alarm function.

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

START BLOCK DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The Power Factor element can be blocked until the machine comes up to speed and the field is applied. The element is blocked upon initiation of a motor Starting status for a period of time defined by this setting.

Note:

START BLOCK DELAY is not applicable to synchronous motor applications. The PF element remains blocked until the motor start sequence is completed.

MINIMUM VOLTAGE

Range: 0.00 to $1.25 \times VT$ in steps of $0.01 \times VT$

Default: $0.30 \times VT$

This setting sets the minimum voltage for the Power Factor element operation specified times VT.

MINIMUM CURRENT

Range: 0.00 to $10.00 \times CT$ in steps of $0.01 \times CT$

Default: $0.20 \times CT$

This setting sets the minimum current for the Power Factor element operation specified times CT.

RESYNC INITIATE

Range: Off, any FlexLogic Operand

Default: Off

In addition to the power factor initiating motor Resync functionality, this setpoint allows a specified input (e.g. Reactive Power, Out-of-step, loss of excitation) to initiate the Resync function for resynchronization of the synchronous motor. When the assigned input is active, the SM Resync Init Cmd is asserted and the **TRIP PICKUP DELAY** timer starts. If the motor fails to resynchronize within the **TRIP PICKUP DELAY** time, the PF Trip operates.

If more than one input is required to initiate the restoration function, the FlexLogic builder must be used to build the required logic.

Note:

*This setting is hidden unless setpoint **PF MODE** is selected as Resync Mode and order code option C5/D5 is selected from 'Phase Currents-Slot K Bank 1/2'.*

RESYNC CHECK DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 2.00 s

This timer is only applicable to power factor Resync Mode for synchronous motor applications. Upon initiation of the auto-resynchronization command, the motor continues running with the field removed for the **RESYNC CHECK DELAY** time, and if resynchronization does not occur within this time, the Trip relay can be operated to stop the motor.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The element is blocked when the selected operand is asserted.

EVENTS

Range: Enabled, Disabled


Default: Enabled

The selection of “Enabled” enables the events of the function.

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

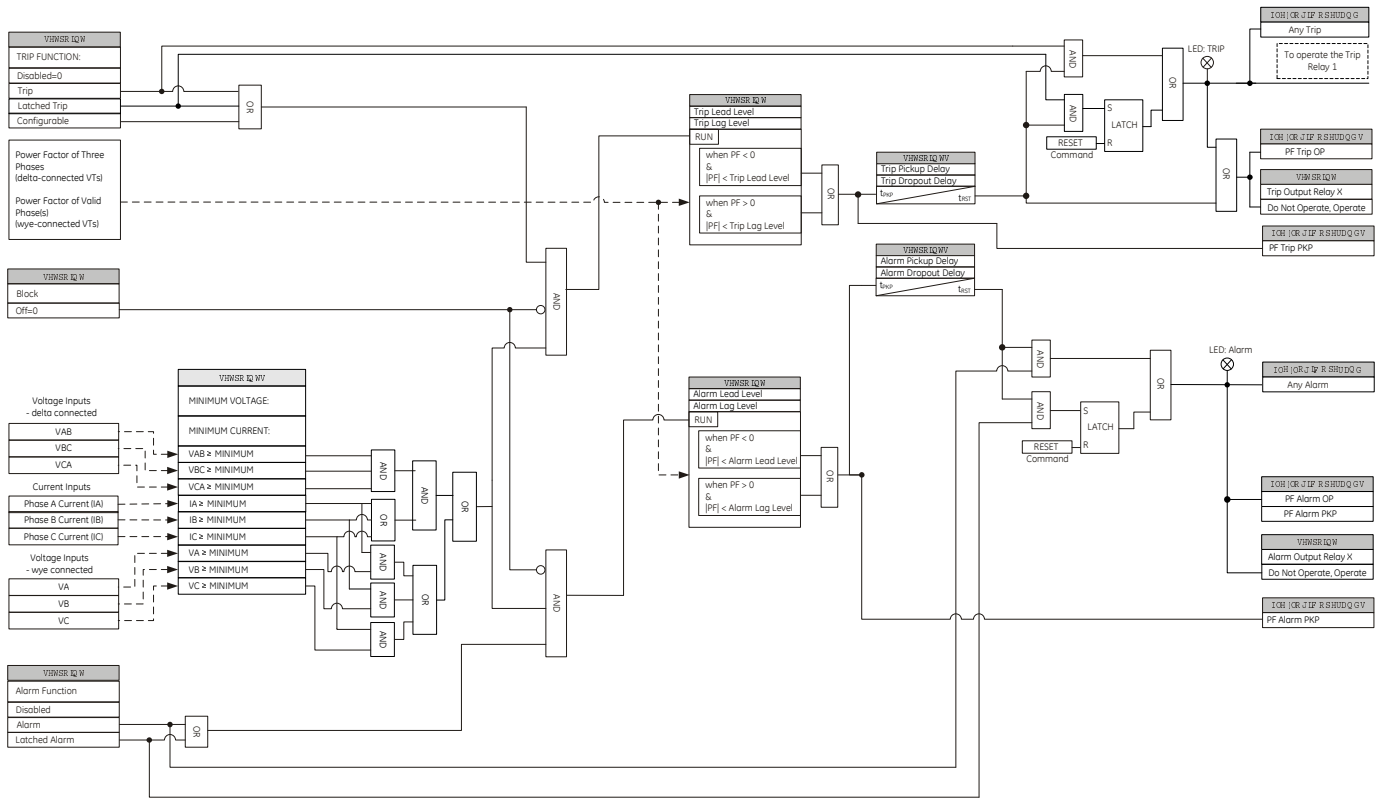

894171C1

Figure 246: Power Factor logic diagram

10.3.5 SPEED

The relay is capable of measuring the motor/generator speed. Any of the input contacts can be used to read the pulses from the input source. The source of the pulses can be an inductive proximity probe or Hall Effect gear tooth sensor. The speed algorithm calculates the number of pulses in the window length (WL) and converts it into an RPM value. A minimum pulse width of 10% of a revolution is required to detect a pulse from the pulse source.

The following equation is used to calculate the speed based on the detection of the number of pulses N during window length WL.

$$RPM = \frac{N}{PPR} \cdot \frac{60}{WL} \cdot f$$

Where:

- N = number of pulses during time defined by the Cal. Window Length (WL)
- PPR = pulses per revolution defined by setpoint **PULSES PER REV** (PPR)
- f = system frequency
- WL is calculated window length in cycles is defined as: $WL = (60 \times f) / (PPR \times 50)$

This element has two modes of speed: under speed and over speed which is defined by the setpoint **DIRECTION**.

In the under speed mode, a trip and alarm is configured so that the machine must be at a certain speed within a set period of time from starting. The trip and alarm features are configured so that the specified speed (**TRIP PICKUP** or **ALARM PICKUP**) must be reached in the specified time (**TRIP DELAY** or **ALARM DELAY**) otherwise the element operates. Initially, the time delay begins when the machine starts rotating and resets when the desired speed is reached. Once the machine is running with the rated speed and then that speed drops below the set threshold, the time delay restarts and the designated output contact will operate if the machine fails to reach the set speed in the allotted time.

In the over speed mode, the tachometer trip and alarm features are configured so that if the specified speed (**TRIP PICKUP** or **ALARM PICKUP**) is exceeded for the specified time (**TRIP DELAY** or **ALARM DELAY**), the element operates. Initially, the time delay begins when the machine speed exceeds the pickup value resets when the speed drops below the pickup.

Path: *Setpoints > Monitoring > Speed*

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

This setting enables the Speed protection Trip functionality.

INPUT

Range: Off, Any Digital Input

Default: Off

Any of the digital input contacts can be used to read the pulses from the input source. For example, an inductive proximity probe or Hall Effect gear tooth sensor may be used to sense the key on the machine. The probe can be powered by the +24 V from the input switch power supply. The NPN transistor output can be sent to one of the digital inputs.

Note:

The voltage threshold must be set to 17 V for the inputs to be recognized using the internal +24 V.

The following figure illustrates wiring examples of PNP-type and NPN-type speed probes connected to the input terminals.

For illustration purposes, the breaker status inputs are shown along with the speed probe input.

Example a and b: Internal +24V supply is used to power both the speed probe connected to CI # 4 and breaker status signals (DRY type) connected to CI # 1 & 2 of the same Slot F.

Example c and d: Internal +24V supply is used to power the speed probe connected to CI # 4 while an external dc power supply is used by the breaker status signals (WET type) connected to CI # 1 and 2. In this example, since both speed probe and breaker status signals are connected to Slot F, the voltage threshold must be set to 17V.

Note:

When the NPN type speed probe is used, the on/off state of the sensor input is reversed. When the probe sensor state is On (Closed), the relay sensor Input will indicate Off (Open) and when the probe sensor state is Off (Open), the relay sensor Input will indicate On (Closed). Thus, when the motor is stopped, the speed sensor input will be ON.

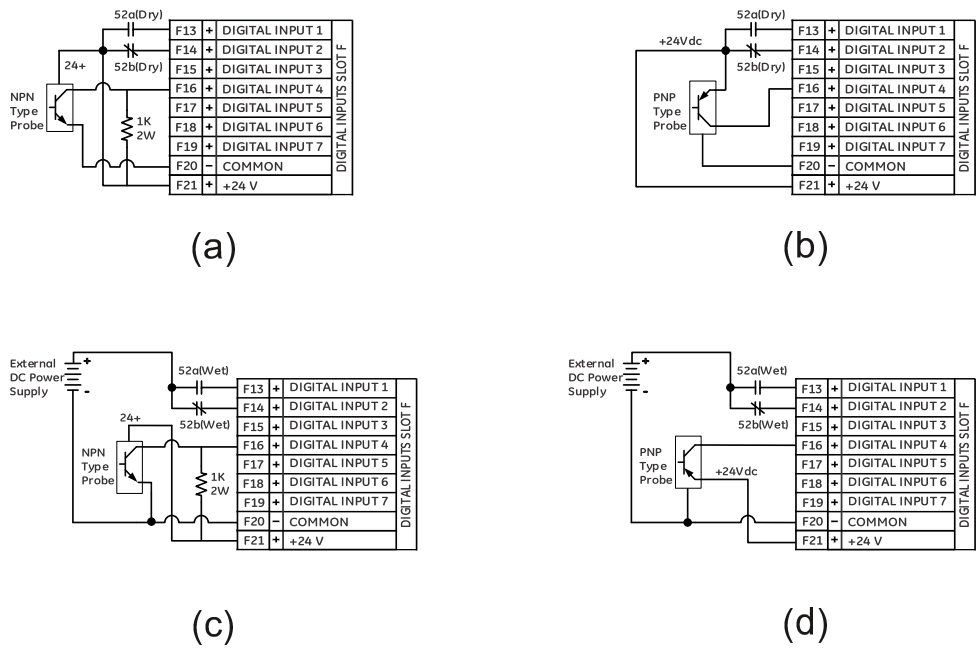


Figure 247: Wiring Examples of Speed Protection Input

Note:
The maximum load current that can be delivered by the internal +24 V supply is 80 mA. When the internal +24 V supply is used to power the probe, the current limitations of the 24V supply must be considered.

RATED SPEED

Range: 100 to 7200 RPM in steps of 1
Default: 3600 RPM
RPM defines the rated speed of the motor.

Note:
This setting is located under **Setpoints > System > Motor Setup**

Note:
In a two speed motor application, when 2-Speed Motor Protection is “Enabled” and Speed2 Motor Switch is “On”, the setpoint Speed2 **RATED SPEED**, programmed under **System > Motor > Setup**, is used by the Speed protection as the rated value.

PULSES PER REV

Range: 1 to 6 PPR in steps of 1 PPR
Default: 1 PPR
The Number of pulses per revolution (PPR) is required to calculate the switching frequency of the input pulses. Switching frequency can be calculated as follows.
$$\text{Switching frequency} = (\text{PPR} \times \text{RPM}) / 60$$

Where:
PPR = pulses per revolution
RPM = rated speed

DIRECTION

Range: Underspeed, Overspeed

Default: Underspeed

This setting defines the mode for speed protection. When **DIRECTION** is set to Underspeed, the Trip and/or Alarm function picks up when the measured motor speed is below the set pickup level. Likewise, when the Direction is set to Overspeed, the Trip and/or Alarm function picks up when the measured motor speed is above the programmed pickup level.

Note:

When **TRIP FUNCTION** is set to *Trip* and **DIRECTION** is set to Underspeed, the speed function requires a block signal configured under the setpoint **BLOCK** to reset the outputs. It is recommended to use the breaker/contactors open status operand (Brk1 Opened/Contactor Opened) to indicate that the machine is stopped.

TRIP PICKUP

Range: 20 to 120% in steps of 1

Default: 75%

This setting specifies a pickup threshold for the trip function.

TRIP PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a pickup threshold for the trip function.

TRIP OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

This setting enables the speed protection Alarm functionality

ALARM PICKUP

Range: 20 to 120% in steps of 1

Default: 80%

This setting specifies a pickup threshold for the Alarm function.

ALARM PICKUP DELAY

Range: 0.00 to 600.00 s steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the Alarm function.

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Speed protection can be blocked by any asserted FlexLogic operand.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Latched

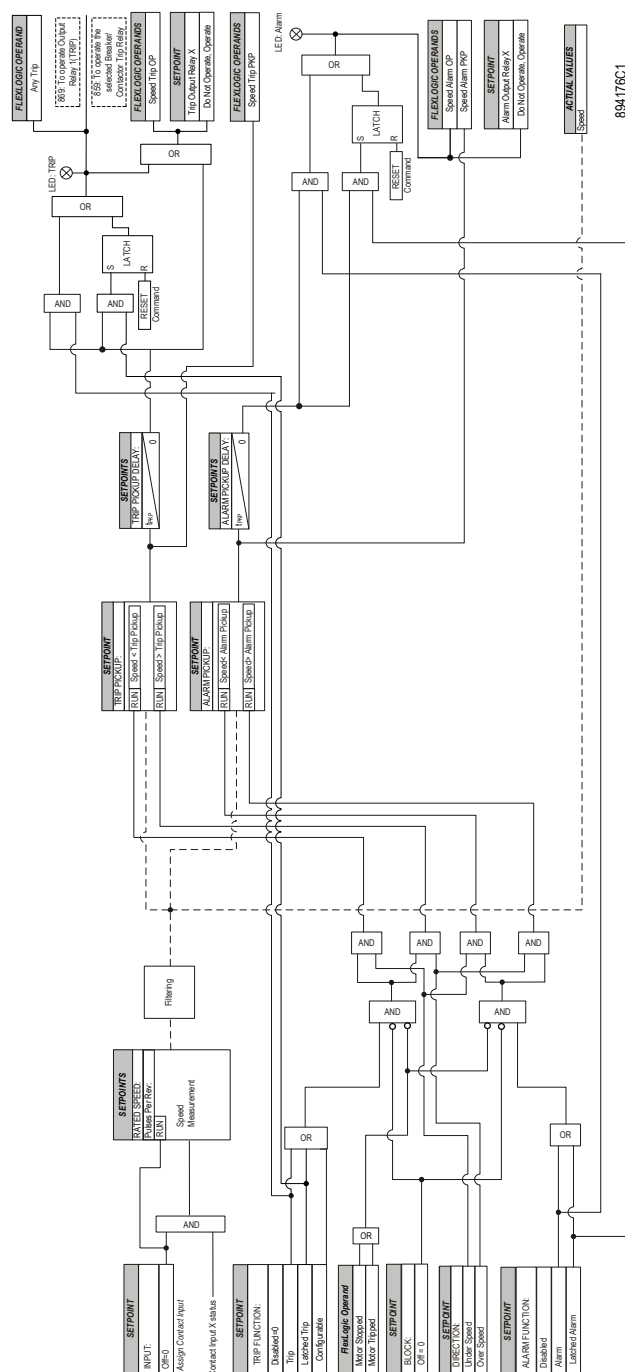


Figure 248: Speed Protection logic diagram

10.3.6 SPEED

The relay is capable of measuring the motor/generator speed. Any of the input contacts can be used to read the pulses from the input source. The source of the pulses can be an inductive proximity probe or Hall Effect gear tooth sensor. The speed algorithm calculates the number of pulses in the window length (WL) and converts it into an RPM value. A minimum pulse width of 10% of a revolution is required to detect a pulse from the pulse source.

The following equation is used to calculate the speed based on the detection of the number of pulses N during window length WL.

$$RPM = \frac{N}{PPR} \cdot \frac{60}{WL} \cdot f$$

Where:

- N – number of pulses during time defined by the Cal. Window Length (WL)
- PPR – pulses per revolution defined by setpoint **PULSES PER REV** (PPR)f – system frequency
- WL – calculated window length in cycles is defined as: $WL = (60 \times f) / (PPR \times 50)$
- This element has two modes of speed: under speed and over speed which is defined by the setpoint **DIRECTION**.

In the under speed mode, a trip and alarm is configured so that the machine must be at a certain speed within a set period of time from starting. The trip and alarm features are configured so that the specified speed (**TRIP PICKUP** or **ALARM PICKUP**) must be reached in the specified time (**TRIP DELAY** or **ALARM DELAY**) otherwise the element operates. Initially, the time delay begins when the machine starts rotating and resets when the desired speed is reached. Once the machine is running with the rated speed and then that speed drops below the set threshold, the time delay restarts and the designated output contact will operate if the machine fails to reach the set speed in the allotted time.

In the over speed mode, the tachometer trip and alarm features are configured so that if the specified speed (**TRIP PICKUP** or **ALARM PICKUP**) is exceeded for the specified time (**TRIP DELAY** or **ALARM DELAY**), the element operates. Initially, the time delay begins when the machine speed exceeds the pickup value resets when the speed drops below the pickup.

Path: *Setpoints > Monitoring > Speed*

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

This setting enables the Speed protection Trip functionality.

INPUT

Range: Off, Any Digital Input

Default: Off

Any of the digital input contacts can be used to read the pulses from the input source. For example, an inductive proximity probe or Hall Effect gear tooth sensor may be used to sense the key on the motor. The probe can be powered by the +24 V from the input switch power supply. The NPN transistor output can be sent to one of the digital inputs.

Note:

The voltage threshold must be set to 17 V for the inputs to be recognized using the internal +24 V.

The following figure illustrates wiring examples of PNP-type and NPN-type speed probes connected to the input terminals.

For illustration purposes, the breaker status inputs are shown along with the speed probe input.


Example a and b: Internal +24V supply is used to power both the speed probe connected to CI # 4 and breaker status signals (DRY type) connected to CI # 1 & 2 of the same Slot F.

Example c and d: Internal +24V supply is used to power the speed probe connected to CI # 4 while an external dc power supply is used by the breaker status signals (WET type) connected to CI # 1 and 2. In this example,


since both speed probe and breaker status signals are connected to Slot F, the voltage threshold must be set to 17V.

Note:


When the NPN type speed probe is used, the on/off state of the sensor input is reversed. When the probe sensor state is On (Closed), the relay sensor Input will indicate Off (Open) and when the probe sensor state is Off (Open), the relay sensor Input will indicate On (Closed). Thus, when the motor is stopped, the speed sensor input will be ON.

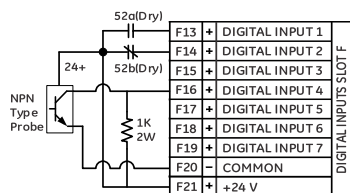


(a)

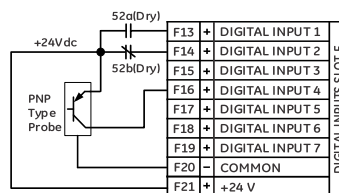

(b)

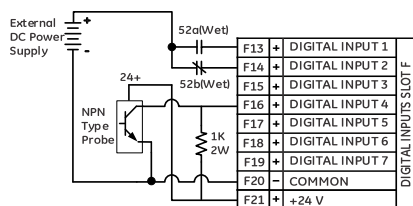

(c)

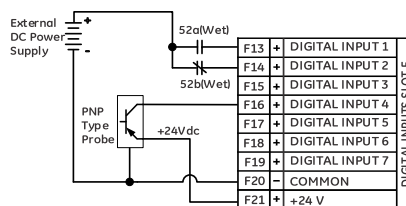

(d)

Figure 249: Wiring Examples of Speed Protection Input

Note:

The maximum load current that can be delivered by the internal +24 V supply is 80 mA. When the internal +24 V supply is used to power the probe, the current limitations of the 24V supply must be considered.

RATED SPEED

Range: 100 to 7200 RPM in steps of 1

Default: 3600 RPM

RPM defines the rated speed of the motor.

Note:

This setting is located under **Setpoints > System > Generator Setup**

PULSES PER REV

Range: 1 to 6 PPR in steps of 1 PPR

Default: 1 PPR

The Number of pulses per revolution (PPR) is required to calculate the switching frequency of the input pulses. Switching frequency can be calculated as follows.

$$\text{Switching frequency} = (\text{PPR} \times \text{RPM}) / 60$$

Where:

PPR = pulses per revolution

RPM = rated speed

DIRECTION

Range: Underspeed, Overspeed

Default: Overspeed

This setting defines the mode for speed protection. When **DIRECTION** is set to Underspeed, the Trip and/or Alarm function picks up when the measured motor speed is below the set pickup level. Likewise, when the Direction is set to Overspeed, the Trip and/or Alarm function picks up when the measured speed is above the programmed pickup level.

TRIP PICKUP

Range: 20 to 120% in steps of 1

Default: 75%

This setting specifies a pickup threshold for the trip function.

TRIP PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a pickup threshold for the trip function.

TRIP OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

This setting enables the speed protection Alarm functionality

ALARM PICKUP

Range: 20 to 120% in steps of 1

Default: 80%

This setting specifies a pickup threshold for the Alarm function.

ALARM PICKUP DELAY

Range: 0.00 to 600.00 s steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the Alarm function.

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Speed protection can be blocked by any asserted FlexLogic operand.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Latched



10.4 BREAKER MONITORING

10.4.1 TRIP AND CLOSE CIRCUIT MONITORING

The first and second Form A relay outputs on slot F include a circuit to monitor the DC voltage across the output contact when it is open. To do that, an external jumper is wired between the terminals **FA_1 COM** and **FA_1 OPT/V** for the Trip coil monitoring, or/and **FA_2 COM** and **FA_2 OPT/V** for the Close coil monitoring.

The monitor contains a level detector whose output is set to logic 1 (ON) when the voltage is above 20 volts. The voltage monitor is used to check the health of the overall trip and closing circuit.

The two figures below show the two different connections of the breaker trip and close coils to the relay's trip and close output relays for either no voltage monitoring and for voltage monitoring of the circuits.

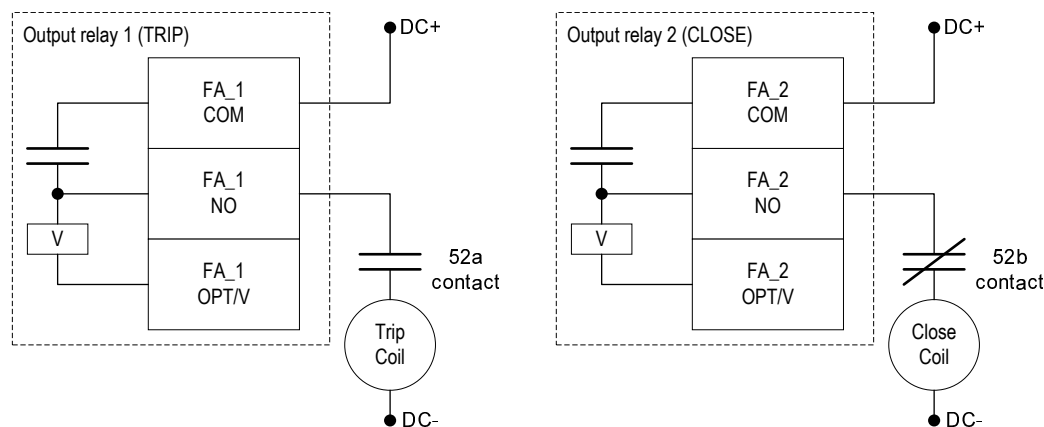


Figure 251: Coil Circuits without Monitoring

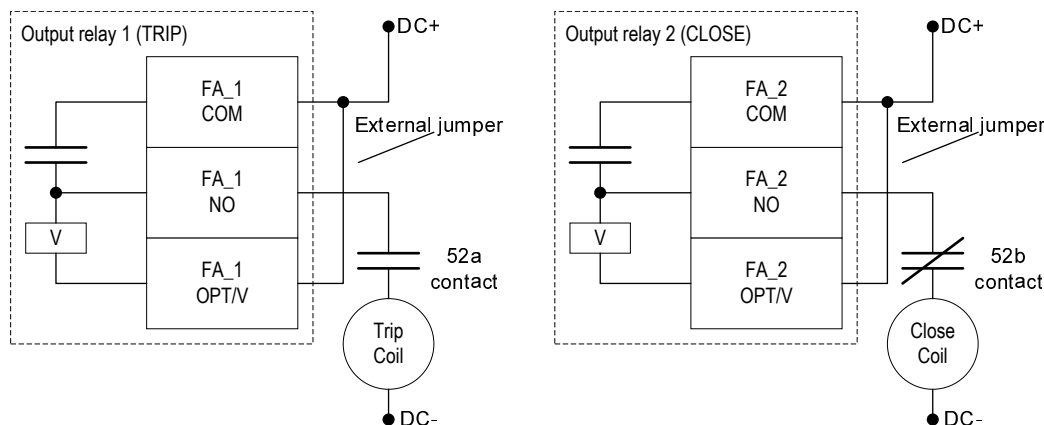


Figure 252: Coil Circuits with Monitoring

To monitor the trip coil circuit integrity, use the relay terminals **FA_1 NO** and **FA_1 COM** to connect the Trip coil, and provide a jumper between terminals **FA_1 COM** and **FA_1 OPT/V** (voltage monitor).

To monitor the close coil circuit integrity, use the relay terminals **FA_2 NO** and **FA_2 COM** to connect the Close coil and provide a jumper between terminals **FA_2 COM** and **FA_2 OPT/V** (voltage monitor).

Some applications require monitoring of the Trip coil or/and Close coil continuously, regardless of the breaker position (open or closed). This can be achieved by connecting a suitable resistor across the auxiliary contacts. With such connections, the trickle current is maintained by the resistor. For these applications the setting for the Bypass Breaker Status should be enabled.

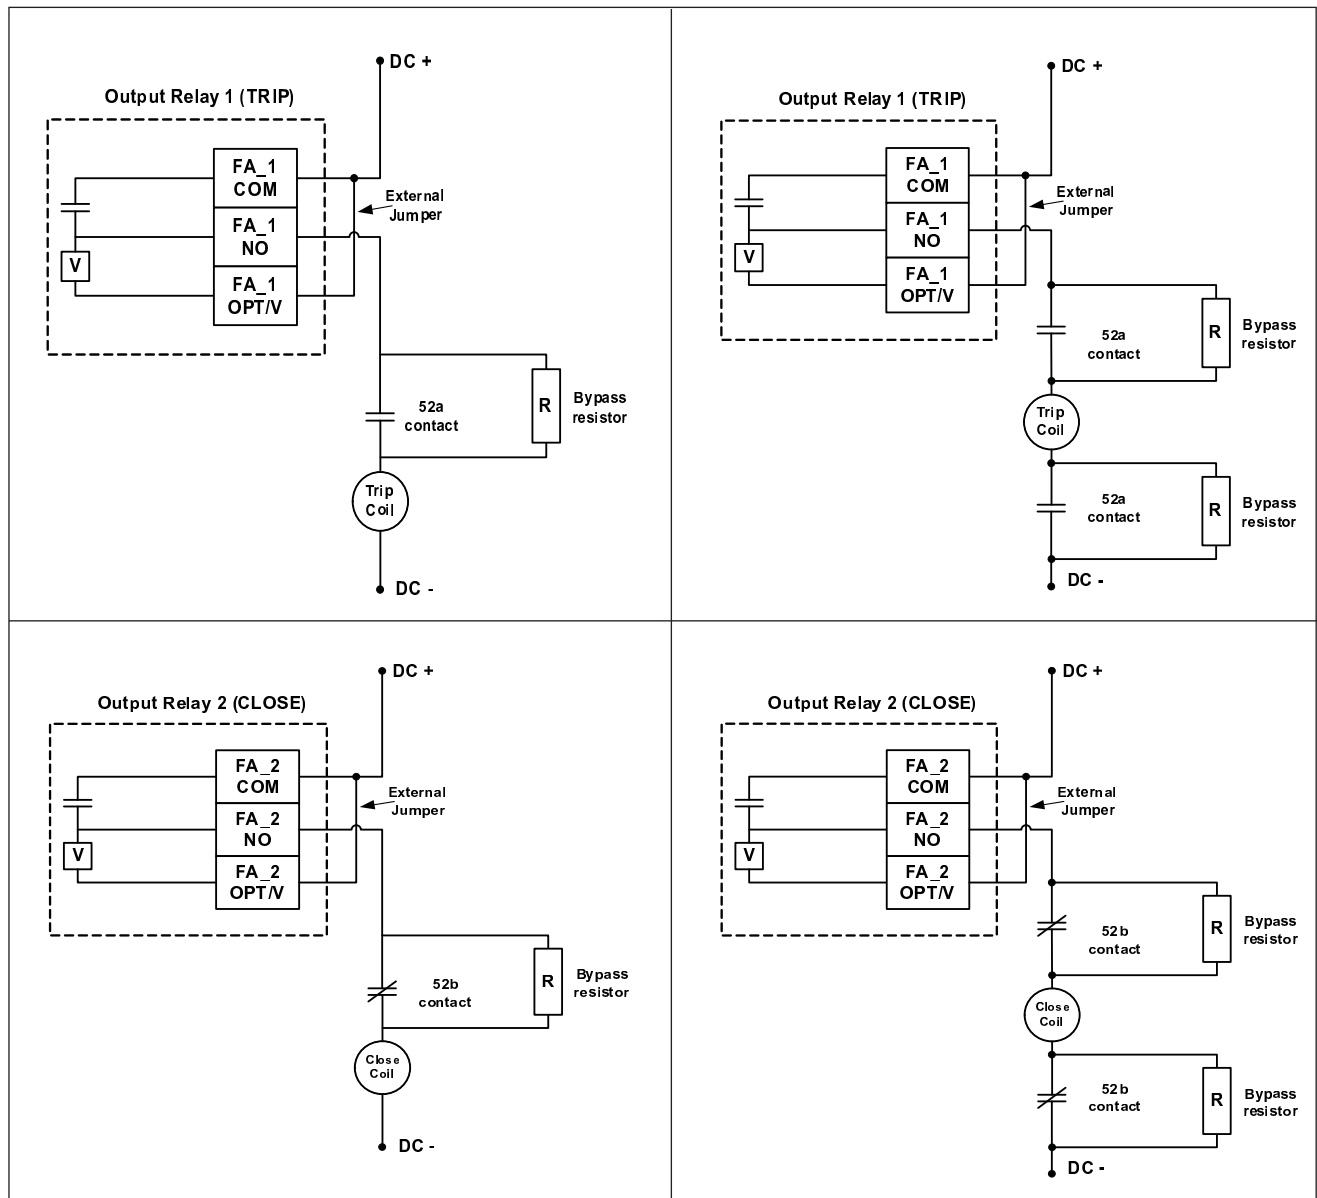


Figure 253: Trip and Close Coil Circuit with Continuous Monitoring

The value of the resistor is shown in the following table:

Power Supply (V DC)	Resistance (Ohms)	Power (Watts)
24	1000	2
48	10000	2
110	25000	5
125	25000	5
220	50000	5



Warning:
The Trip and Close Contacts must be considered unsafe to touch when the relay is energized.

Path: *Setpoints > Monitoring > Breaker 1 > Trip Circuit Monitoring*

TRIP CIRCUIT MONITORING

FUNCTION:

Range: Disabled, Latched Alarm, Alarm, Configurable

Default: Disabled

PICKUP DELAY:

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 10.000 s

DROPOUT DELAY:

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides selection for reset time delay used to delay the dropout of the detection of the TCM element.

TRIP RELAY SELECT:

Default: Relay 1

Range: Off, Relay X

Any output relay from the list of available output relays can be programmed for breaker tripping coil monitoring.

Note:

It is recommended to select the same Trip Relay set under the "Breaker: Trip Relay Select" option.

BYPASS BREAKER STATE:

Range: Enabled, Disabled

Default: Disabled

Set the Bypass Breaker State to Enabled when a by-pass resistor is connected across the breaker auxiliary contact for continuous Trip circuit monitoring. The circuits are monitored regardless of breaker position.

BLOCK:

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X


Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS:

Range: Disabled, Enabled

Default: Enabled

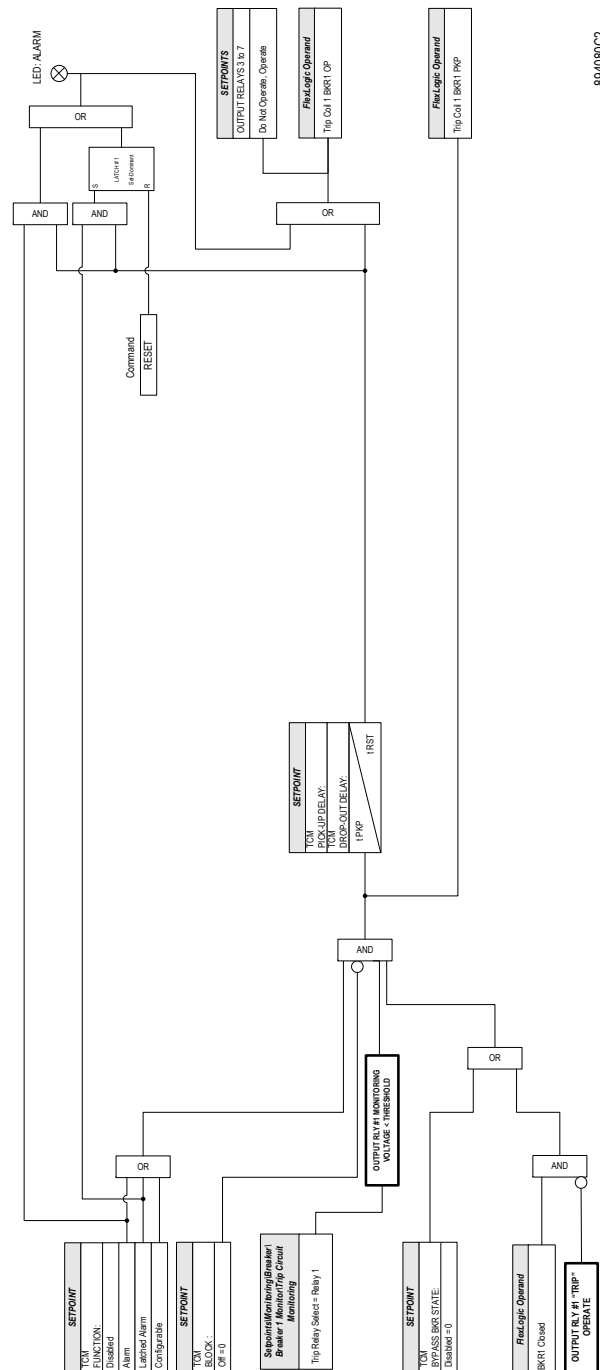TARGETS:*Default: Self-reset**Range: Disabled, Self-reset, Latched***Figure 254: Trip Circuit Monitoring Diagram****CLOSE CIRCUIT MONITORING****Path: Setpoints > Monitoring > Breaker 1 > Close Circuit Monitoring**

FUNCTION:

Range: Disabled, Latched Alarm, Alarm, Configurable

Default: Disabled

PICKUP DELAY:

Default: 10.000 s

Range: 0.000 to 6000.000 s in steps of 0.001 s

DROPOUT DELAY:

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

CLOSE RELAY SELECT:

Default: Relay 2

Range: Off, Relay X

Any output relay from the list of available output relays can be programmed for breaker coil closing monitoring.

Note:

*We recommend selecting the same Trip Relay set under the **Breaker: Close Relay Select** option.*

BYPASS BREAKER STATE:

Range: Enabled, Disabled

Default: Disabled

Set the Bypass Breaker State to Enabled when a by-pass resistor is connected across the breaker auxiliary contact for continuous Close circuit monitoring. The circuits are monitored regardless of breaker position.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK:

Default: Off

Range: Off, Any FlexLogic operand

EVENTS:

Range: Disabled, Enabled

Default: Enabled

TARGETS:

Range: Disabled, Self-reset, Latched

Default: Self-reset

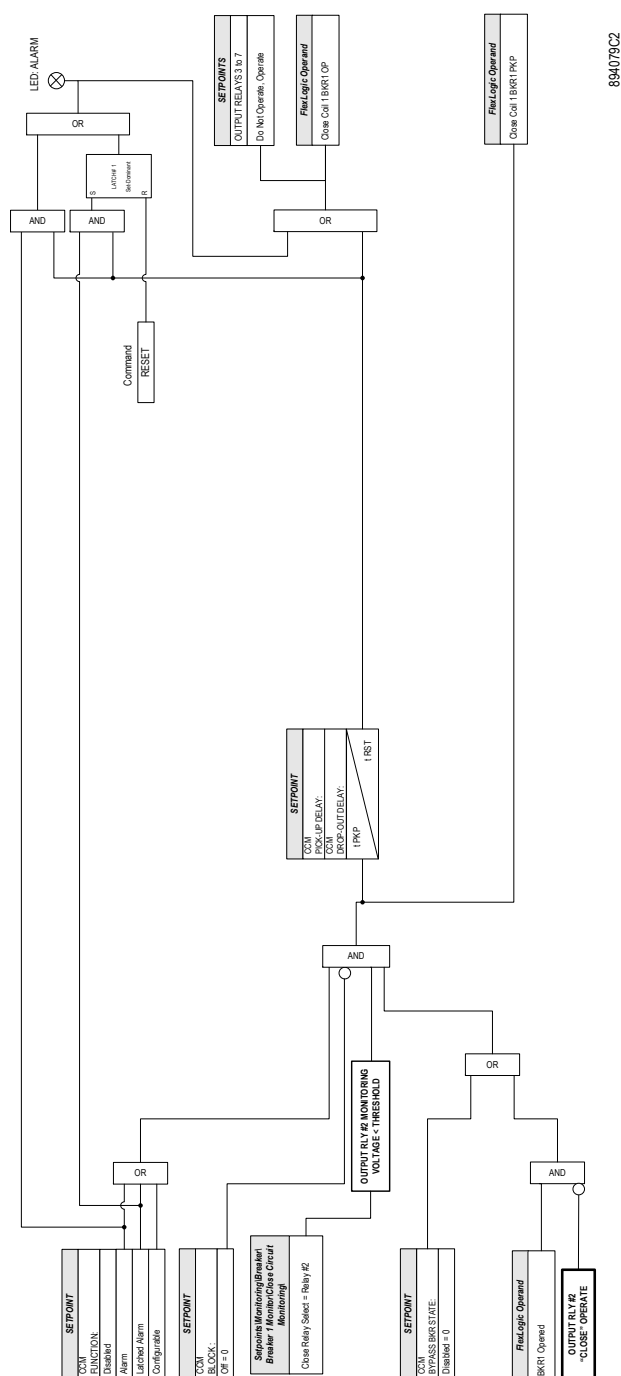


Figure 255: Close Circuit Monitoring Diagram

10.4.2 BREAKER ARCING CURRENT

The relay provides one Breaker Arcing Current element. This element calculates an estimate of the per-phase wear on the breaker contacts by measuring and integrating the current squared passing through the breaker contacts as an arc. These per-phase values are added to accumulated totals for each phase and compared to a programmed threshold value. When the threshold is exceeded in any phase, the relay can set an output operand and set an alarm. The accumulated value for each phase can be displayed as an actual value.

The same output operands that are selected to operate the Trip output relay that is used to trip the breaker indicating a tripping sequence has begun, are used to initiate this feature. A time delay is introduced between initiation and starting of integration to prevent integration of current flow through the breaker before the contacts

have parted. This interval includes the operating time of the output relay, any other auxiliary relays and the breaker mechanism. For maximum measurement accuracy, the interval between the change-of-state of the operand (from 0 to 1) and contact separation should be measured for the specific installation. Integration of the measured current continues for 100 ms, which is expected to include the total arcing period.

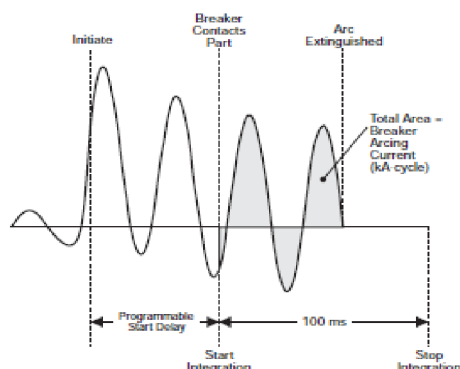


Figure 256: Breaker Arcing Current Measurement

Path: *Setpoints > Monitoring > Breaker > BKR 1 Monitor > BKR 1 Arcing Current*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT (not used in 859)

Range: CT Bank 1 -J1, CT Bank 2 -K1, CT Bank 3 -K2

Default: CT Bank 1 -J1

This setting provides selection of the current input source.

INITIATION

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand, digital input, virtual input or remote input that initiates the Breaker Arcing Current scheme, typically the Trip signals from internal protection functions.

DELAY

Range: 0.000 to 6000.00 s in steps of 0.001 s

Default: 0.030 s

The setpoint provides a delay interval between the time the tripping sequence is initiated and the time the breaker contacts are expected to part, starting the integration of the measured current.

ALARM LEVEL

Range: 0 to 50000 kA2-c in steps of 1 kA2-c

Default: 1000 kA2-c

The setpoint specifies the threshold value (kA2-cycle) above which the output operand is set.

OUTPUT RELAYS X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

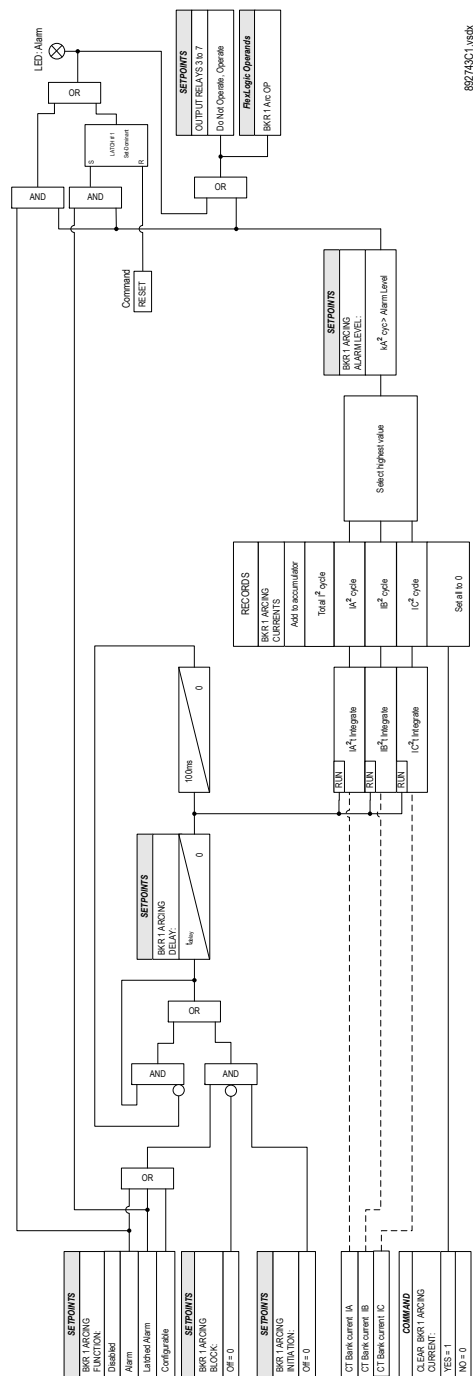


Figure 257: Breaker Arcing Current logic diagram

10.4.3 BREAKER HEALTH

The relay provides breaker health information by monitoring and analyzing the operation count, arcing energy of breaking current, arcing time, tripping time, closing time and spring charging time if applicable. The breaker health status depends on many factors, such as permissible operation number, magnitude of breaking current, mechanical wear and contact wear.

The operation count is able to give direct information by comparing it with the permissible operation number. The longer tripping time and closing time can provide an approximate estimation of trip/close coils and mechanical wear. The increasing spring charging time may imply developing problems in motor and spring mechanisms. Meanwhile, the increase in arcing energy of the breaking current may reflect the possibility of contact wear. Longer arcing time

may suggest the loss of dielectric strength in the arc chamber. If the arcing energy or any of the time intervals is above the related Pickup levels for the use-defined times, the Alarm Led is lit.

The scheme is equipped with three incomplete sequence timers for Trip/Close time, arc time and spring charge time respectively. So it automatically resets the related time interval after the programmed delay.

A breaker operation function is also included, where breaker operation failure is caused by either of the following conditions:

- The breaker does not respond to a Trip command within the programmed breaker operation delay time.
- The breaker does not respond to a Close command within the programmed time.

Path: Setpoints > Monitoring > Breaker 1 > Breaker Health

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

MODE

Range: Detection, Monitoring

Default: Detection

The Breaker Health has two running modes: detection and monitoring. Since the monitored time intervals differ for different breaker types and manufacturers, the detection mode can be used to help set the Pickup settings based on the historical true values. The operation count, arcing energy of the breaking current, arcing time, tripping time, closing time and spring charging time are measured and displayed in **Records > Breaker Health**, but the element does not pick up when in detection mode. Monitoring mode is the normal mode, wherein measurements are analyzed and the element may pick up accordingly.

PRESET TRIP COUNTER

Range: 0 to 100000 in steps of 1

Default: 0

This setting pre-sets the actual operation number when the relay is starting in service or the record is cleared.

TRIP TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setting assigns the trip initiation signal.

CLOSE TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setting assigns the close initiation signal.

SPRING CHARGE STATUS

Range: Off, Any FlexLogic operand

Default: Off

The setting selects the signal to show the status of Spring Charge. Normally, the contact input connected to the auxiliary contact of the limit switch can be used.

TRIP TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.050 s

The setting sets the Pickup level of the Trip time. The Trip time interval is initiated by the Trip Trigger signal and stopped by the Open Status signal.

CLOSE TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.050 s

The setting sets the Pickup level of the Close time. The Close time interval is initiated by the Close Trigger signal and stopped by the Close Status signal.

INCOMPLETE TRP/CLS TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The setting declares a breaker operation failure condition if the breaker does not respond within this time delay. The setting should be greater than the Trip time PKP value and Close time PKP value.

ARC TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The setting sets the Pickup level of the Arc time. The Arc time is initiated by the Open Status signal and stopped when the current samples in one cycle are less than 0.02 CT. Then the Arc time is equal to the calculated time interval minus one cycle.

INCOMPLETE ARC TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.300 s

The setting declares an Arc time failure condition if there are currents flowing through the breaker after this time delay. This setting should be greater than the Arc time PKP value.

SPRING CHARGE TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 15.000 s

This setting sets the Pickup level of the Spring Charge time. The Spring Charge time is measured from the pulse duration of the Spring Charge Status.

INCOMPLETE CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 45.000 s

The setting declares a Charge time failure condition if the spring charging process is not finished after this time delay. The setting should be greater than the Charge time PKP value.

ARC ENERGY PICKUP

Range: 1 to 100000 kA²-c in steps of 1 kA²-c

Default: 1000 kA²-c

The setting sets the Pickup level of the arc energy. The arc energy value is calculated in the Breaker Arcing Current element.

Note:

The arc energy is calculated by the breaker arcing current element. If the breaker arcing current element is disabled, the arc energy is not calculated and this setting should not be used. The arc energy used here is the individual value for each trip and not the accumulated value recorded in the Breaker Arcing Current element.

ALARM COUNTER

Range: 1 to 100 in steps of 1

Default: 5

The setting sets the alarm counter level. One counter is used to accumulate the Pickup data from all monitoring quantities. If the counter value is above the alarm counter level, the LED is lit and one operand is asserted.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

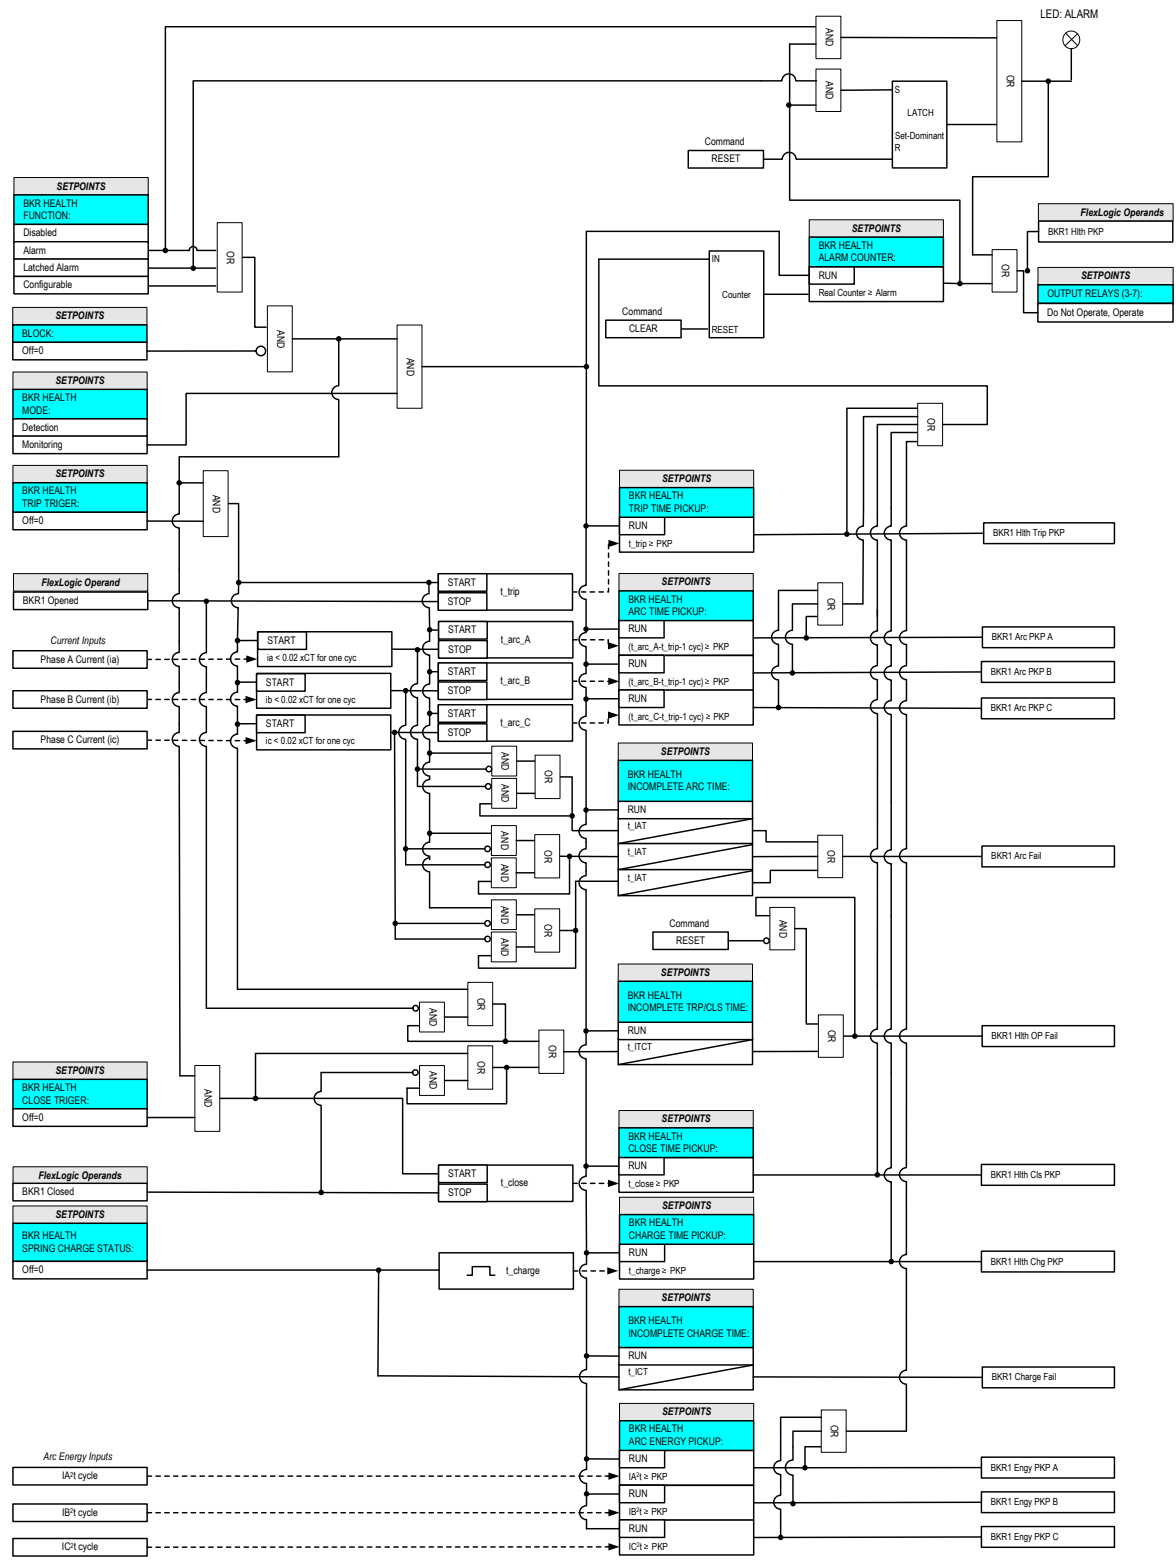


Figure 258: Breaker Health and Operation logic diagram

10.5 FUNCTIONS

10.5.1 POWER FACTOR

When using a synchronous machine, it is desirable not to trip or alarm on power factor until the field has been applied. Therefore, this feature can be blocked until the machine comes up to speed and the field is applied. From that point forward, the power factor trip and alarm elements will be active. Once the power factor is less than either the Lead or Lag level, for the specified delay, a trip or alarm will occur indicating a Lead or Lag condition. The power factor alarm can be used to detect loss of excitation and out of step.

The relay calculates the average Power Factor in the three phases as follows:

$$\text{Average Power Factor} = \text{Total 3-Phase Real Power} / \text{Total 3-Phase Apparent Power}$$

For delta-connected VTs, the Power Factor feature is inhibited from operating unless all three voltages are above the selected voltage threshold and one or more currents are above the selected current threshold. Power Factor element delay timers are only allowed to time when the voltage threshold is exceeded on all phases and current threshold is exceeded on one phase. In the same way, when a Power Factor condition starts the Power Factor delay timer, if all three phase voltages fall below the threshold and one phase current threshold falls below the timer has timed-out, the element resets without operating. A loss of voltage during any state returns both Power Factor elements to the Reset state.

For wye-connected VTs, the power factor value is calculated from the valid phase(s) for which voltage and current are above the user selected thresholds. Power Factor element delay timers are only allowed to time when the supervision conditions are met. In the same way, when a Power Factor condition starts the Power Factor delay timer, if one or more valid phases no longer satisfy the supervision conditions, the power factor is re-calculated based on the still valid phase(s). If the element is continuously asserted with the new power factor value, the timer would continue timing, otherwise, the element resets without operating.

The minimum operating voltage and current are set as a threshold below which the element is reset.

The following figure illustrates the conventions established for use, where the negative value means the lead power factor, and the positive value means the lag power factor.

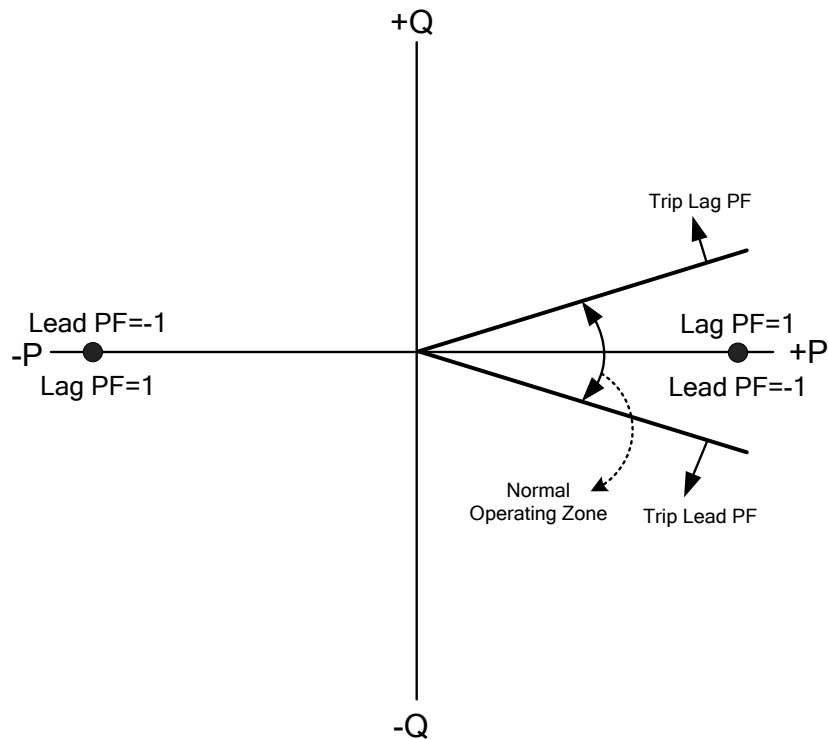


Figure 259: Power Factor Conventions

In a synchronous machine, this type of machine can operate in lagging (under excitation), leading (over excitation) or unity power factor conditions depending on the applied field current. As shown in below figure, V-curves are normally provided by the machine manufacturer to determine the relationship between the field current and power factor.

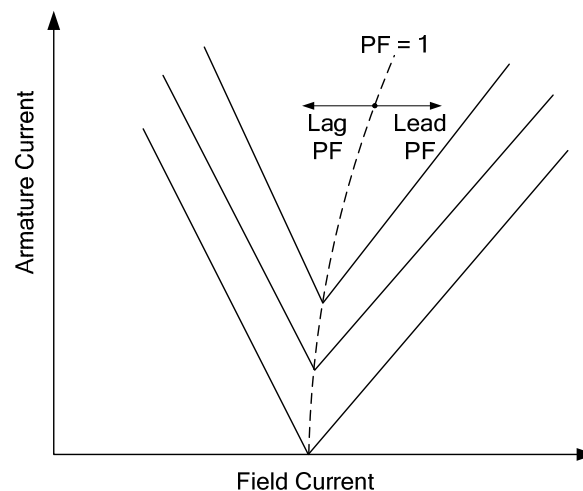


Figure 260: Synchronous Machine Simplified V-Curve Example

In synchronous motor applications, in case of a lagging power factor, two modes of power factor protection are available. They are as follows:

Resync Mode

When the setpoint PF Mode is set to Resync, this feature initiates an attempt to automatically resynchronize the motor (instead of direct Tripping when the motor goes into a pull-out condition). When the power factor lags below the configurable setpoint **TRIP LAG LEVEL**, the operand SM Resync Init Cmd is asserted. This feature allows the

motor to continue running with field removed for the set **Resync Check Delay** time, and if resynchronization does not occur within this time, the Trip relay can then be operated to stop the motor.

Energizing the output relay configured to open the field switching device and/or auto-loading is recommended, using the FlexLogic operand SM Resync Init Cmd in order to remove the motor-field excitation and disconnect the load. Note that operand SM Resync Init Cmd, when set to high, remains latched until the motor is successfully synchronized (i.e. operand SM Running =1 and **PF Trip Lag** condition becomes false) or the motor resynchronization fails (operand SM Resync Failed = 1) or the motor is stopped or tripped.

Ride-thru mode

If the alternate *ride-thru* mode is selected, the field is not removed immediately as in the Resync mode. Instead, if the power factor dips below the configured threshold of setpoint **TRIP LAG LEVEL** and persists for the set **TRIP PICKUP DELAY** time, the Trip relay operates and the motor stops.

Note:

*After the synchronous motor starts, the PF protection function remains inactive in induction mode until the motor completes its startup sequence and reaches the status **SM Running**. This indicates that the motor's field is applied, and it has successfully synchronized. However, if there is an abrupt loss of the field while the main power supply remains connected, the PF protection in **Ride-Thru** mode will remain active in induction mode (without field applied) until the pickup delay time elapses. This allows PF protection to trip or alarm after the programmed delay.*

Path: Setpoints > Monitoring > Functions > Power Factor

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

This setting enables the Power Factor Trip functionality.

PF MODE

Range: Resync, Ride-thru

Default: Ride-thru

Note:

This setpoint is only applicable to synchronous motor applications with proper order code selection.

Ride-through Mode: This mode allows the motor to ride through power factor dips with duration less than the **TRIP PICKUP DELAY**.

Resync Mode: Upon measuring a power factor below the **TRIP LAG LEVEL** setpoint, the relay may de-energize the field switching device and Auto-loading relays and attempt to resynchronize the motor. The motor continues to run with the field removed for the programmed Resync Check Delay, and if resynchronization does not occur within this time a trip occurs, operating the trip relay and stopping the motor.

Note:

Notes:

Note:

*PF Mode only activates when the relay measures lagging PF below the setpoint **TRIP LAG LEVEL**. PF Mode is not applicable when the motor is running with leading PF.*

Note:

This setting is hidden when setpoint **SYNC. MOTOR TYPE** (under **Setpoints > System > Motor > Setup**) is set to *None*.

Note:

This setting is hidden unless order code option C5/D5 is selected for 'Phase Currents-Slot K Bank 1/2'.

TRIP LEAD LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00 Lag

This setting specifies the Power Factor Lead Trip level.

Note:

Enter 1.00 to turn off the Trip Lead Level. The HMI also shows it is "OFF".

TRIP LAG LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00

This setting specifies the Power Factor Lag Trip level.

Note:

When the Trip Lag Level is set to 1.00, the pickup level turns it off.

TRIP PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a time delay for the trip function.

TRIP DROPOUT DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a dropout time delay for the trip function.

TRIP OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latch Alarm

Default: Disabled

This setting enables the Power Factor Alarm functionality.

ALARM LEAD LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00

This setting specifies the Power Factor Lead Alarm level.

Note:

Enter 1.00 to turn off the Alarm Lead Level. The HMI shows "OFF".

ALARM LAG LEVEL

Range: 0.05 to 1.00 in steps of 0.01

Default: 1.00

This setting specifies the Power Factor Lag alarm level.

Note:

Enter 1.00 to turn off the Alarm Lag Level. The HMI shows OFF".

ALARM PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a time delay for the alarm function.

ALARM DROPOUT DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The setting specifies a dropout time delay for the alarm function.

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

START BLOCK DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

The Power Factor element can be blocked until the machine comes up to speed and the field is applied. The element is blocked upon initiation of a motor Starting status for a period of time defined by this setting.

Note:

START BLOCK DELAY is not applicable to synchronous motor applications. The PF element remains blocked until the motor start sequence is completed.

MINIMUM VOLTAGE

Range: 0.00 to 1.25 x VT in steps of 0.01 x VT

Default: 0.30 x VT

This setting sets the minimum voltage for the Power Factor element operation specified times VT.

MINIMUM CURRENT

Range: 0.00 to 10.00 x CT in steps of 0.01 x CT

Default: 0.20 x CT

This setting sets the minimum current for the Power Factor element operation specified times CT.

RESYNC INITIATE

Range: Off, any FlexLogic Operand

Default: Off

In addition to the power factor initiating motor Resync functionality, this setpoint allows a specified input (e.g. Reactive Power, Out-of-step, loss of excitation) to initiate the Resync function for resynchronization of the synchronous motor. When the assigned input is active, the SM Resync Init Cmd is asserted and the **TRIP PICKUP DELAY** timer starts. If the motor fails to resynchronize within the **TRIP PICKUP DELAY** time, the PF Trip operates.

If more than one input is required to initiate the restoration function, the FlexLogic builder must be used to build the required logic.

Note:

*This setting is hidden unless setpoint **PF MODE** is selected as Resync Mode and order code option C5/D5 is selected from 'Phase Currents-Slot K Bank 1/2'.*

RESYNC CHECK DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 2.00 s

This timer is only applicable to power factor Resync Mode for synchronous motor applications. Upon initiation of the auto-resynchronization command, the motor continues running with the field removed for the **RESYNC CHECK DELAY** time, and if resynchronization does not occur within this time, the Trip relay can be operated to stop the motor.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The element is blocked when the selected operand is asserted.

EVENTS

Range: Enabled, Disabled


Default: Enabled

The selection of “Enabled” enables the events of the function.

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

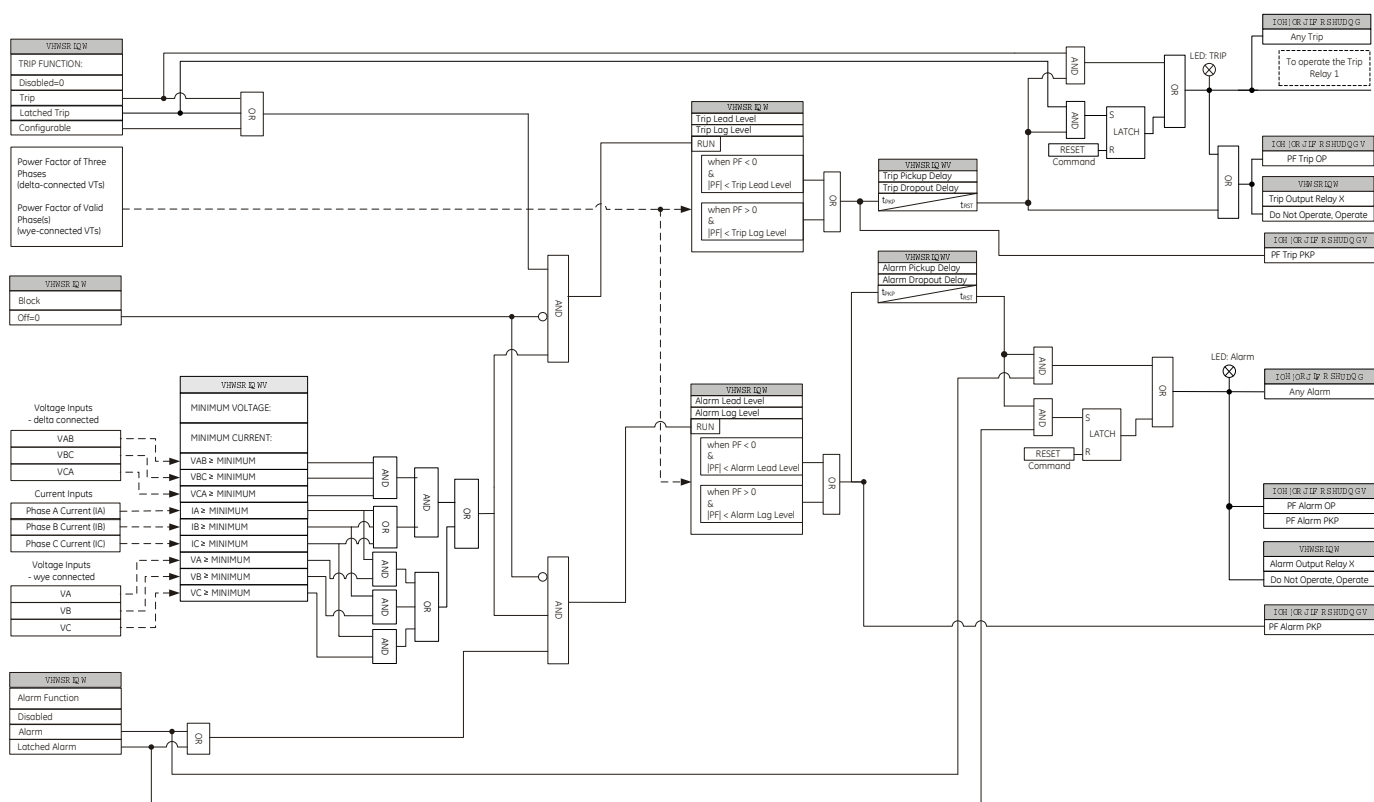

894171C1

Figure 261: Power Factor logic diagram

10.5.2 DEMAND

Current Demand is measured on each phase, and on three phases for real, reactive, and apparent power. Setpoints allow emulation of some common electrical utility demand measuring techniques for statistical or control purposes.

Note:

The relay is not approved as, or intended to be, a revenue metering instrument. If used in a peak load control system, the user must consider the accuracy rating and method of measurement employed, and the source VTs and CTs, in comparison with the electrical utility revenue metering system.

The relay can be set to calculate Demand by any of three methods; Thermal Exponential, Block Interval, Rolling Demand.

Thermal Exponential

This selection emulates the action of an analog peak recording Thermal Demand meter. The relay measures the quantity (RMS current, real power, reactive power, or apparent power) on each phase every second, and assumes the circuit quantity remains at this value until updated by the next measurement. It calculates the Thermal Demand equivalent based on:

$$d(t) = D(1 - e^{-kt})$$

Where:

- d = demand value after applying input quantity for time t (in minutes)
- D = input quantity (constant)
- k = 2.3/thermal 90% response time.

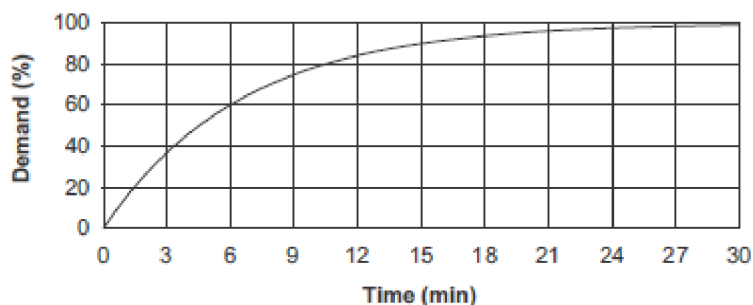


Figure 262: Thermal Demand Characteristic (15 min response)

The 90% thermal response time characteristic defaults to 15 minutes. A setpoint establishes the time to reach 90% of a steady-state value, just as with the response time of an analog instrument. A steady-state value applied for twice the response time will indicate 99% of the value.

Block Interval

This selection calculates a linear average of the quantity (RMS current, real power, reactive power, or apparent power) over the programmed Demand time interval, starting daily at 00:00:00 (i.e. 12 am). The 1440 minutes per day is divided into the number of blocks as set by the programmed time interval. Each new value of Demand becomes available at the end of each time interval.

Rolling Demand

This selection calculates a linear average of the quantity (RMS current, real power, reactive power, or apparent power) over the programmed Demand time interval, in the same way as Block Interval. The value is updated every minute and indicates the Demand over the time interval just proceeding the time of update.

10.5.2.1 CURRENT DEMAND

The Current Demand for each phase is calculated individually, and the Demand for each phase is monitored by comparison with a single Current Demand Pickup value. If the Current Demand Pickup is equaled or exceeded by any phase, the relay can cause an alarm or signal an output relay.

Path: *Setpoints > Monitoring > Functions > Demand > Current Demand 1(X)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the selection for the current input bank. The bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Dmd

Default: Blk Interval

This setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

This setpoint sets the time required for a steady state current to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

This setpoint sets the time period over which the current demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 10 to 10000 A in steps of 1 A

Default: 5000 A

This setpoint sets the Current Demand Pickup level.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Enabled, Disabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

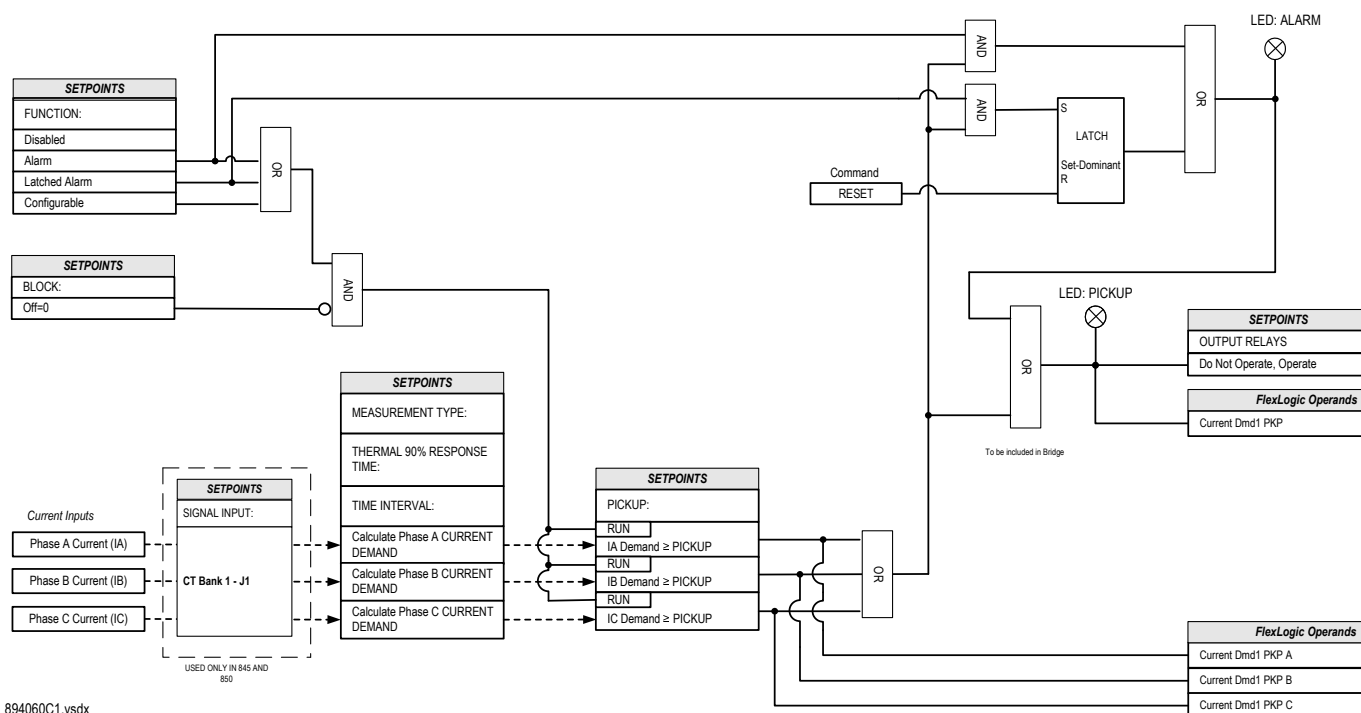

894060C1.vsd

Figure 263: Current Demand logic diagram

10.5.2.2 REAL POWER DEMAND

The Real Power Demand is monitored by comparing it to a Pickup value. If the Real Power Demand Pickup is ever equaled or exceeded, the relay can be configured to cause an alarm or signal an output relay.

Path: *Setpoints > Monitoring > Functions > Demand > Real Power Demand 1(X)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: Power x, (Dependent on order code)

Default: Power 1

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Demand

Default: Blk Interval

This setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

This setpoint sets the time required for steady-state Real Power to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

This setpoint sets the time period over which the Real Power Demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 0.1 to 300000.0 kW in steps of 0.1 kW

Default: 5000.0 kW

This setting sets the Real Power Demand Pickup level. The absolute value of real power demand is used for the Pickup comparison.

RESET DEMAND

Range: Off, Any FlexLogic operand

Default: Off

Any FlexLogic operand can be used to reset the minimum and maximum real power demand from the current value to zero. These values are reset to zero at the rising edge of the set operand. After reset to zero, calculation of minimum and maximum real power demand values continues until the next rising edge of the reset operand.

An application example is the monitoring of the minimum and maximum demand values per shift. A shift can be defined by the breaker status operand (open or closed) or operand derived from the **Time of Day Timer** element.

The Reset Demand operand does not reset the current value of the demand used by the **Real Power Demand** function.

OUTPUT RELAYS X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled


Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

Logic Diagram

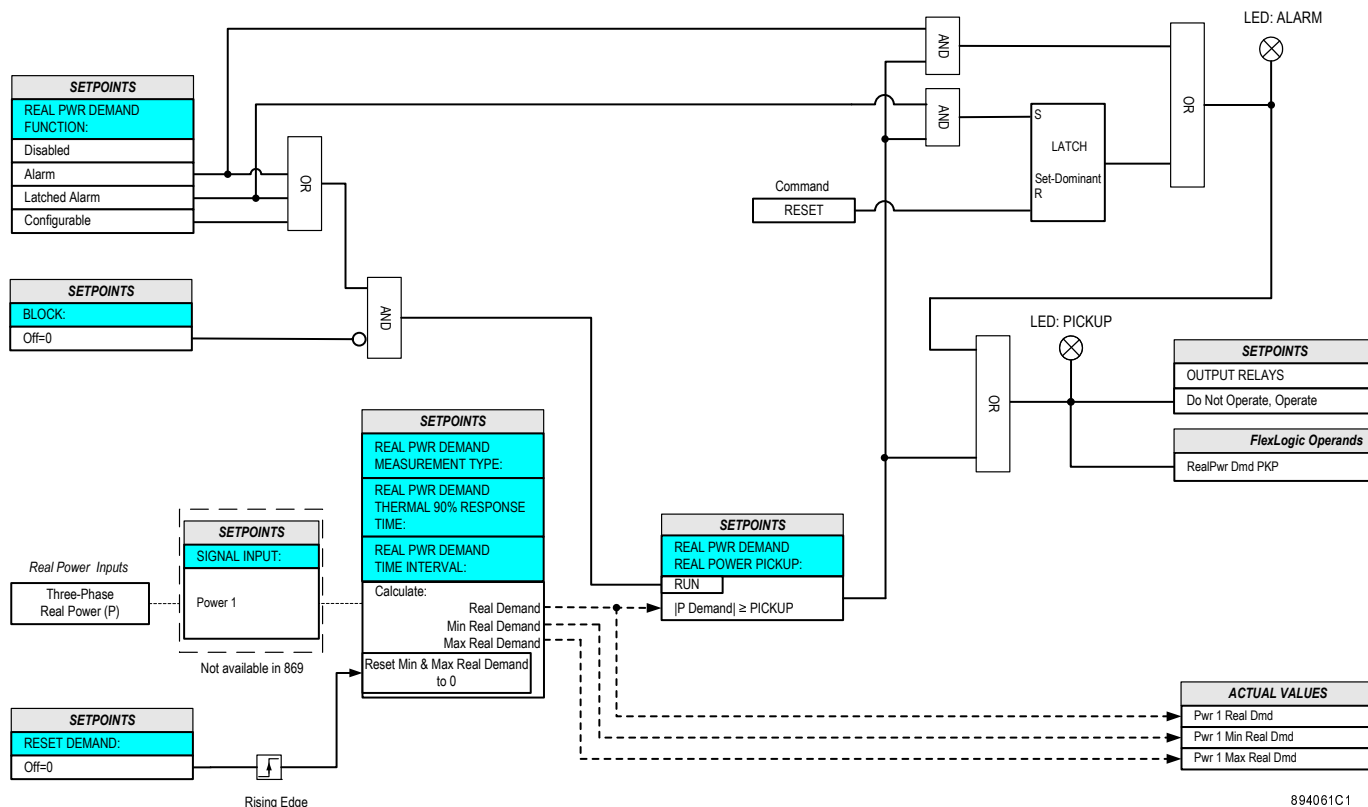

894061C1

Figure 264: Real Power Demand logic diagram

10.5.2.3 REACTIVE POWER

The Reactive Power Demand is monitored by comparing to a Pickup value. If the Reactive Power Demand Pickup is ever equaled or exceeded, the relay can be configured to cause an alarm or signal an output relay.

Path: Setpoints > Monitoring > Functions > Demand > Reactive Power Demand 1(X)

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: Power x (Dependent on order code)

Default: Power 1

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Demand

Default: Blk Interval

The setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

The setpoint sets the time required for a steady state Reactive Power to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

The setpoint sets the time period over which the Reactive Power Demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 0.1 to 300000.0 kvar in steps of 0.1 kvar.

Default: 5000.0 kvar

Any FlexLogic operand can be used to reset the accumulated reactive power demand from its current value to zero. The accumulated value resets at the rising edge of the set operand. After reset to zero, the reactive power demand element continues calculating the demand until the next rising edge of the reset operand.

RESET DEMAND

Range: Off, Any FlexLogic operand

Default: Off

Any FlexLogic operand can be used to reset the minimum and maximum reactive power demand from its current value to zero. The minimum and maximum values reset at the rising edge of the set operand. After reset to zero, calculation of minimum and maximum reactive power demand values continues until the next rising edge of the reset operand.

The Reset Demand operand doesn't reset the current value of the demand used by the Reactive Power Demand function.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Enabled, Disabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

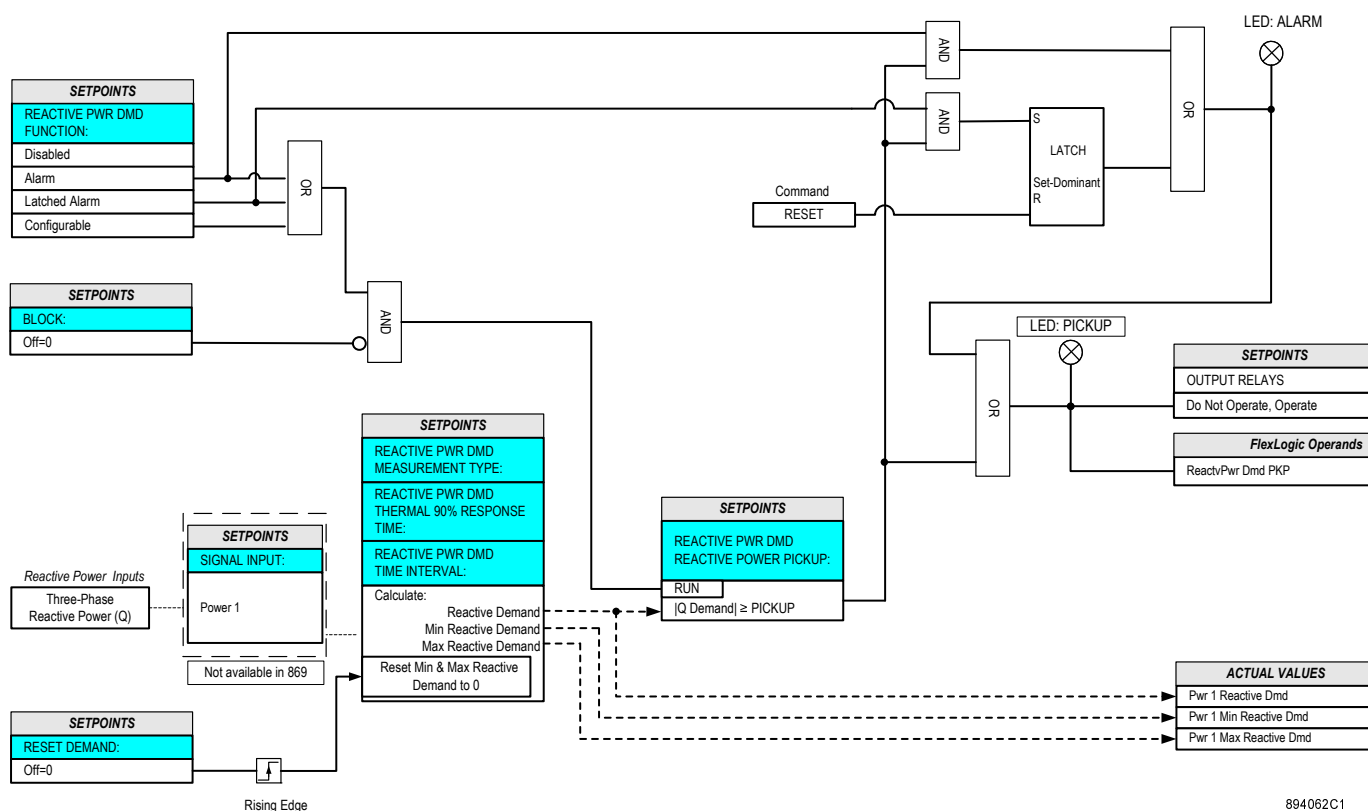

894062C1

Figure 265: Reactive Power Demand logic diagram

10.5.2.4 APPARENT POWER DEMAND

The Apparent Power Demand is monitored by comparing to a Pickup value. If the Apparent Power Demand Pickup is ever equaled or exceeded, the relay can be configured to cause an alarm or signal an output relay.

Path: Setpoints > Monitoring > Functions > Demand > Apparent Power Demand 1(X)

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: Power x (Dependent on order code)

Default: Power 1

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Demand

Default: Blk Interval

The setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

The setpoint sets the time required for a steady state Apparent Power to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

The setpoint sets the time period over which the Apparent Power Demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 0.1 to 300000.0 kVA in steps of 0.1 kVA

Default: 5000.0 kVA

The setting sets the Apparent Power Demand Pickup level.

RESET DEMAND

Range: Off, Any FlexLogic operand

Default: Off

Any FlexLogic operand can be used to reset the minimum and maximum apparent power demand from its current value to zero. The minimum and maximum values reset at the rising edge of the set operand. After reset to zero, calculation of minimum and maximum apparent power demand values continues until the next rising edge of the reset operand.

The Reset Demand operand doesn't reset the current value of the demand used by the Apparent Power Demand function.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Enabled, Disabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

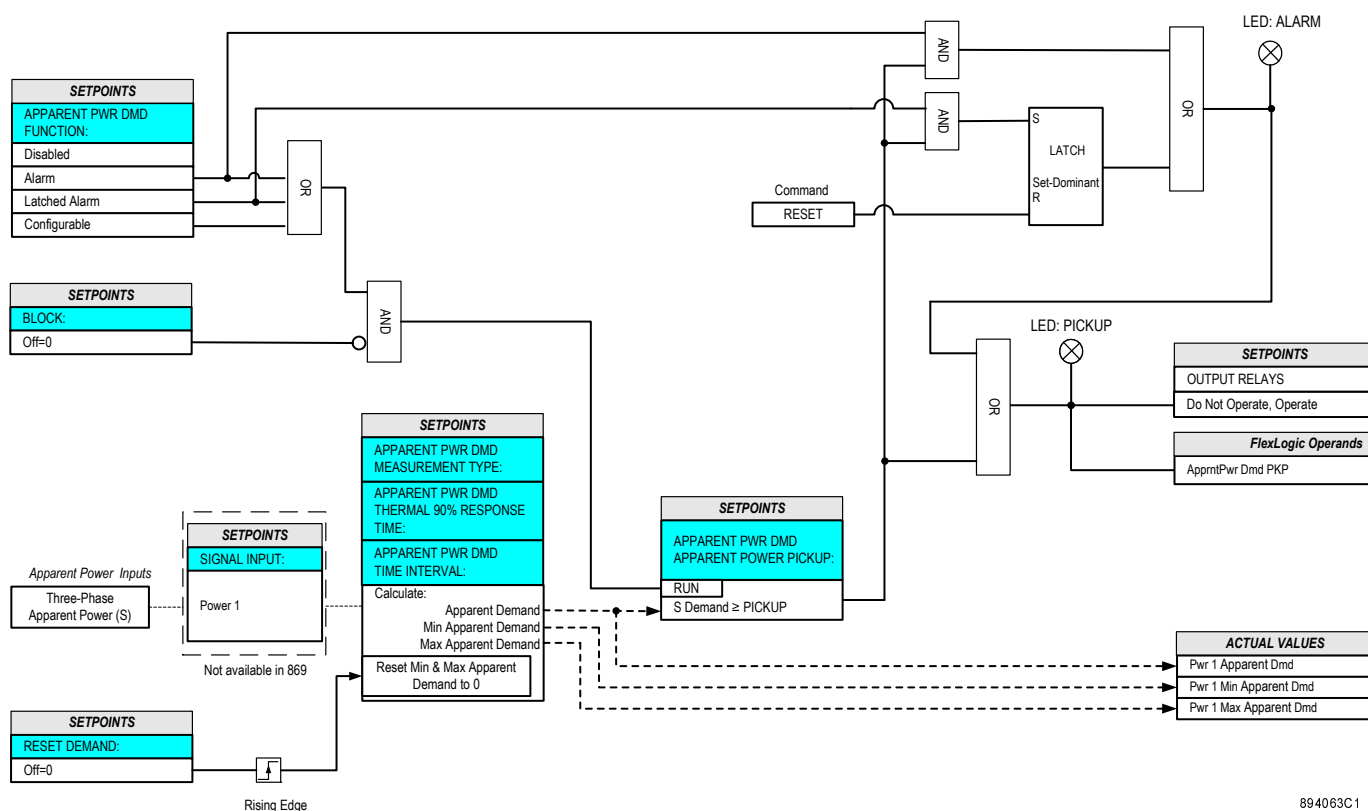

894063C1

Figure 266: Apparent Power Demand logic diagram

10.5.3 PULSED OUTPUTS

The relay provides a Pulse Output element for four energy measurements. The Pulse Output element can operate auxiliary relays after an adjustable energy increment for the quantities of positive and negative MWh (Megawatt hours) and positive and negative MVARh (Mega Volt Amp Reactive hours).

Pulses occur at the end of each programmed energy increment. Upon power-up of the relay, the Pulse Output function, if enabled, continues from where it was at the time of loss of control power. For example, if control power is removed when the positive Watt hours stored at last pulse was 24.000 MWh, when control power is re-applied a pulse occurs at 34.000 MWh if the energy increment is set at 10.000 MWh.

1. The Auxiliary Output relay(s) used for this element must be set to *Self-Resetting*. The pulses consist of a one second on-time and a one second off-time. This feature is programmed such that no more than one pulse per two seconds is required.
2. The relay is not a revenue class meter and cannot be used for billing purposes.
3. Energy quantities are displayed in MWh and MVarh, with resolutions of 1 kWh and 1 kVarh respectively.

Path: *Setpoints > Monitoring > Functions > Pulsed Outputs*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

SIGNAL INPUT (not used in 859)

Range: Power x (Dependent on order code)

Default: Power 1

This setting provides the power element selection for the CT and VT bank identification.

POS WHS PULSE INCREMENT

Range: 0.000 to 1000.000 MWh in steps of 0.001 MWh

Default: 10.000 MWh

The setpoint specifies the positive Watthours threshold pulse increment after which the output pulse and output operand are set.

POS WHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

NEG WHS PULSE INCREMENT

Range: 0.000 to 1000.000 MWh in steps of 0.001 MWh

Default: 10.000 MWh

The setpoint specifies the negative Watthours threshold pulse increment after which the output pulse and output operand are set.

NEG WHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

POS VARHS PULSE INCREMENT

Range: 0.000 to 1000.000 MVARh in steps of 0.001 MVARh

Default: 10.000 MVARh

The setpoint specifies the positive VARhours threshold pulse increment after which the output pulse and output operand are set.

POS VARHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

NEG VARHS PULSE INCREMENT

Range: 0.000 to 1000.000 MVARh in steps of 0.001 MVARh

Default: 10.000 MVARh

The setpoint specifies the positive VARhours threshold pulse increment after which the output pulse and output operand are set.

NEG VARHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-Reset

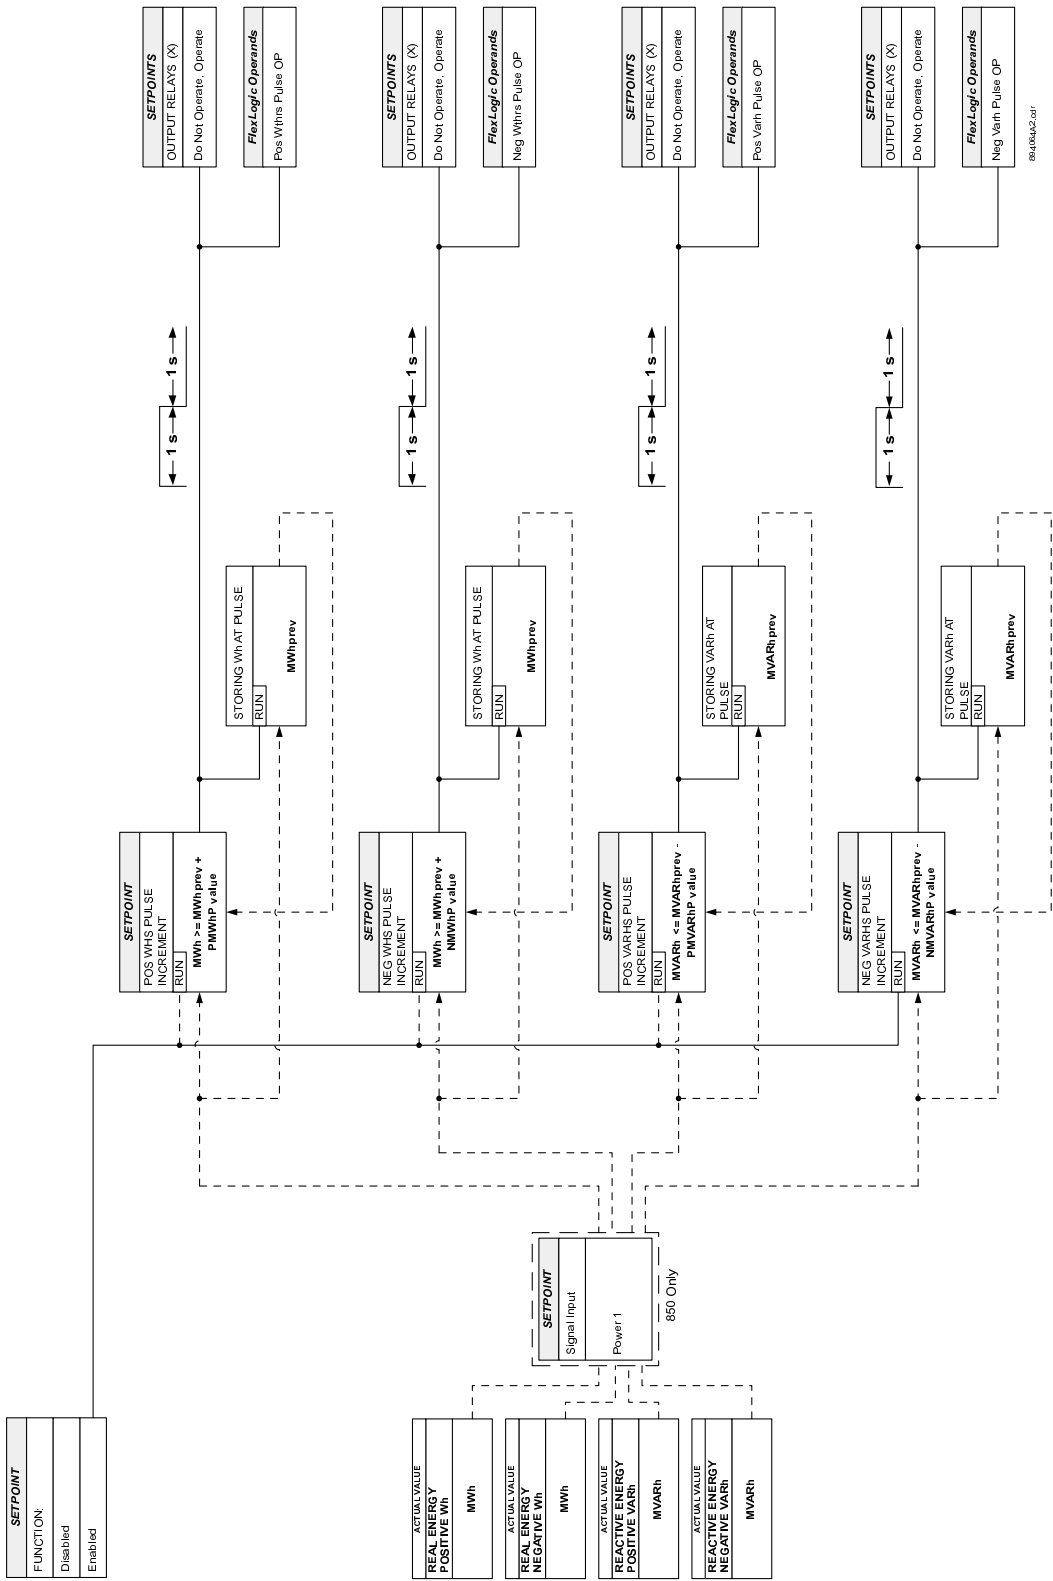


Figure 267: Pulsed Outputs logic diagram

10.5.4 DIGITAL COUNTERS

The relay provides sixteen identical Digital Counters. A Digital Counter counts the number of state transitions from logic 0 to logic 1.

The Digital Counters are numbered from 1 to 16. The counters are used to count operations such as the Pickups of an element, the changes of state of an external contact (e.g. breaker auxiliary switch), or the pulses from a watt-hour meter.

Path: *Setpoints > Monitoring > Functions > Digital Counters > Digital Counter 1 (16)*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

NAME

Range: Any 13 alphanumeric characters

Default: Counter 1

UNITS

Range: Any 5 alphanumeric characters

Default: Units

Assigns a label to identify the unit of measure with respect to the digital transitions to be counted. The units label will appear in the metering corresponding Actual Values Status under **Records > Digital Counters**.

PRE-SET

Range: -2147483648, 0, +2147483647

Default: 0

The setpoint sets the count to a required pre-set value before counting operations begin, as in the case where a substitute relay is installed in place of an in-service relay, or while the Counter is running.

COMPARE

Range: -2147483648, 0, +2147483647

Default: 0

The setpoint sets the value to which the accumulated count value is compared. Three FlexLogic output operands are provided to indicate if the present value is 'more than (HI)', 'equal to (EQL)', or 'less than (LO)' the set value.

UP

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for incrementing the Counter. If an enabled UP input is received when the accumulated value is at the limit of +2147483647, the counter rolls over to -2147483648 and shows the alarm 'Digital Counter 1 at Limit'.

DOWN

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for decrementing the Counter. If an enabled DOWN input is received when the accumulated value is at the limit of +2147483647, the counter rolls over to -2147483648 and shows the alarm 'Digital Counter 1 at Limit'.

SET TO PRE-SET

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand used to set the counter to the pre-set value. The counter is set at pre-set value in the following situations:

When the Counter is enabled and Digital Counter 1 Set to Pre-Set operand has value 1 (when the Counter is enabled and Digital Counter 1 Set to Pre-Set operand has value 0, the Counter will be set to 0).

When the Counter is running and Digital Counter 1 Set to Pre-Set operand changes the state from 0 to 1 (Digital Counter 1 Set to Pre-Set changing from 1 to 0 while the Counter is running has no effect on the count).

When a reset or reset/freeze command is sent to the Counter and Digital Counter 1 Set to Pre-Set operand has the value 1 (when a reset or reset/freeze command is sent to the Counter and Digital Counter 1 Set to Pre-Set operand has the value 0, the Counter will be set to 0).

RESET

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for setting the count, either 0 or the pre-set value depending on the state of the Counter 1 Set to Pre-set operand.

FREEZE/RESET

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for freezing (capturing) the accumulating count value into a separate register with the associated date and time of the operation while resetting the count to either 0 or the pre-set value depending on the state of the Counter 1 Set to Pre-set operand.

FREEZE/COUNT

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for freezing (capturing) the accumulating count value into a separate register with the associated date and time of the operation while continuing counting. The present accumulated value and frozen (captured) value with the associated date/time stamp are available as STATUS values. If control power is interrupted, during the power-down operation, the accumulated and frozen (captured) values are saved into non-volatile memory.

HI OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EQL OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

LO OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled

Note:

The counter accumulated value can be reset to zero either by asserting an operand programmed under Reset from the counter menu, executing the clear Digital Counters command under the Records/Clear menu, or by setting the function of the counter to "Disabled".

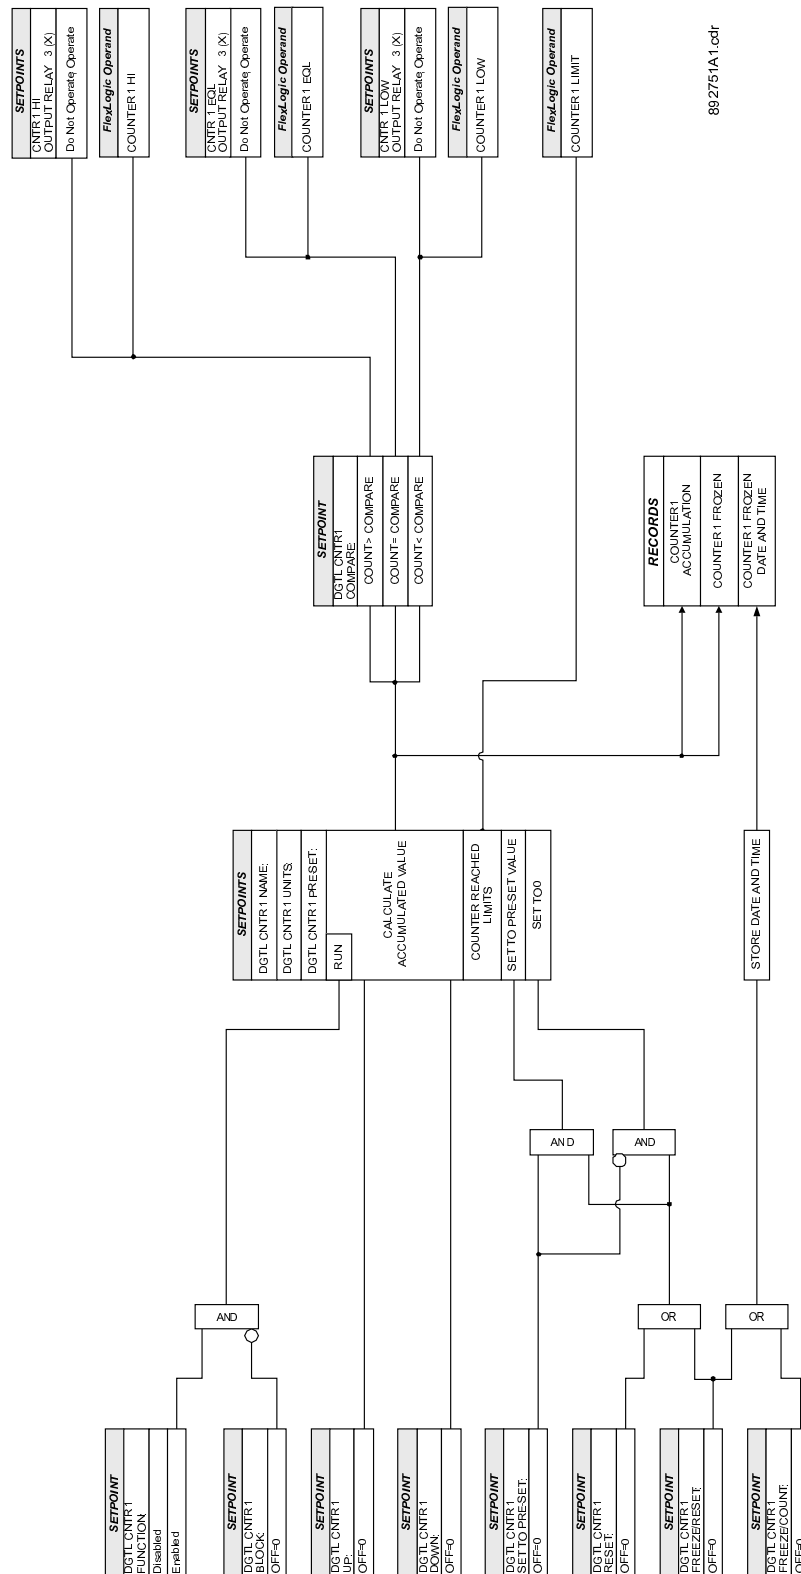


Figure 268: Digital Counter logic diagram

10.6 HARMONIC DETECTION

The Harmonic detection 1(6) element monitors the selected 2nd to 5th harmonic or Total Harmonics Distortion (THD), which is present in the phase currents. The relay provides six identical Harmonic Detection elements.

In a distribution network, harmonic detection can be used to monitor spurious harmonics from inverter based distributed energy resources, and take control actions such as islanding DERs or turning on harmonic filters. During transformer energization or motor starts, the inrush current present in phase currents can impact some sensitive elements, such as negative sequence overcurrent. Therefore, the ratio of the second harmonic to the fundamental magnitude per phase is monitored, while exceeding the settable pickup level, an operand is asserted, which can be used to block such sensitive elements.

During startup or shutdown of generator connected transformers, or following a load rejection, the transformer can experience an excessive ratio of volts to hertz, that is, become overexcited. Similarly, the ratio of the fifth harmonic to the fundamental magnitude can be monitored to detect the overexcitation condition.

Note:

The harmonics monitored in this element is calculated from the phase currents, unlike the second or fifth harmonic differential current used in the transformer differential element.

Note:

The harmonics are updated every protection pass. The THD is updated every three cycles, which is not recommended as a blocking signal.

Path: *Setpoints > Monitoring > Harmonic Detection > Harmonic Detection 1(X)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT (not used in 859)

Range: dependent upon the order code

Default: CT Bank 1–J1

HARMONIC

Range: 2nd, 3rd, 4th, 5th, THD

Default: 2nd

This setting selects the specified harmonic or THD to be monitored. The harmonic or THD is expressed in percent relative to the fundamental magnitude.

PICKUP

Range: 0.1 to 100.0% in steps of 0.1%

Default: 20.0%

PICKUP DELAY

Range: 0.000 to 60000.000 s in steps of 0.001 s

Default: 0.000 s

PHASES FOR OPERATION

Range: Any One, Any Two, All Three, Average

Default: Any One

This setting defines the phases required for operation, and the detail is explained below:

ANY ONE: At least one phase picked up.

ANY TWO: Two or more phases picked up.

ANY THREE: All three phases picked up.

AVERAGE: The average of three-phase harmonics or THDs picked up.

If set to *Average*, the relay calculates the average level of the selected harmonic and compares this level against the pickup setting. Averaging of the selected harmonic follows an adaptive algorithm depending on the fundamental current magnitude per-phase. If the fundamental magnitude on any of the three phases goes below the current cut-off level, the selected harmonic current from that phase is dropped (zeroed) from the equation for averaging, and the divider is decreased from 3 to 2. The same happens if the magnitude of the fundamental magnitude on one of remaining two phases drops below the cut-off level. In this case the selected harmonic on this phase is dropped from summation, and the divider is decreased to 1.

MIN OPER CURRENT

Range: 0.03 to 1.00 x CT in steps of 0.01

Default: 0.10 x CT

This setting sets the minimum value of current required to allow the Harmonic Detection element to operate.

If **PHASES FROM OPERATION** is set to *Average*, the average of three-phase currents is used for supervision. A similar adaptive average algorithm is applied to calculate the average of operation current magnitude.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

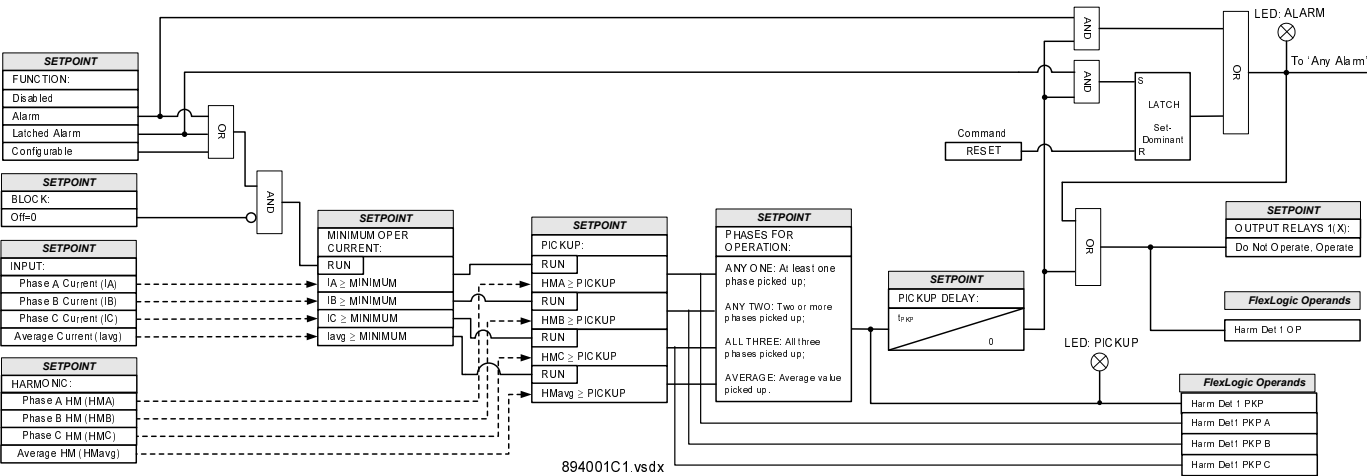


Figure 269: Harmonic Detection logic diagram

10.7 SPEED

The relay is capable of measuring the motor/generator speed. Any of the input contacts can be used to read the pulses from the input source. The source of the pulses can be an inductive proximity probe or Hall Effect gear tooth sensor. The speed algorithm calculates the number of pulses in the window length (WL) and converts it into an RPM value. A minimum pulse width of 10% of a revolution is required to detect a pulse from the pulse source.

The following equation is used to calculate the speed based on the detection of the number of pulses N during window length WL.

$$RPM = \frac{N}{PPR} \cdot \frac{60}{WL} \cdot f$$

Where:

- N = number of pulses during time defined by the Cal. Window Length (WL)
- PPR = pulses per revolution defined by setpoint **PULSES PER REV** (PPR)
- f = system frequency
- WL is calculated window length in cycles is defined as: $WL = (60 \times f) / (PPR \times 50)$

This element has two modes of speed: under speed and over speed which is defined by the setpoint **DIRECTION**.

In the under speed mode, a trip and alarm is configured so that the machine must be at a certain speed within a set period of time from starting. The trip and alarm features are configured so that the specified speed (**TRIP PICKUP** or **ALARM PICKUP**) must be reached in the specified time (**TRIP DELAY** or **ALARM DELAY**) otherwise the element operates. Initially, the time delay begins when the machine starts rotating and resets when the desired speed is reached. Once the machine is running with the rated speed and then that speed drops below the set threshold, the time delay restarts and the designated output contact will operate if the machine fails to reach the set speed in the allotted time.

In the over speed mode, the tachometer trip and alarm features are configured so that if the specified speed (**TRIP PICKUP** or **ALARM PICKUP**) is exceeded for the specified time (**TRIP DELAY** or **ALARM DELAY**), the element operates. Initially, the time delay begins when the machine speed exceeds the pickup value resets when the speed drops below the pickup.

Path: Setpoints > Monitoring > Speed

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

This setting enables the Speed protection Trip functionality.

INPUT

Range: Off, Any Digital Input

Default: Off

Any of the digital input contacts can be used to read the pulses from the input source. For example, an inductive proximity probe or Hall Effect gear tooth sensor may be used to sense the key on the machine. The probe can be powered by the +24 V from the input switch power supply. The NPN transistor output can be sent to one of the digital inputs.

Note:

The voltage threshold must be set to 17 V for the inputs to be recognized using the internal +24 V.

The following figure illustrates wiring examples of PNP-type and NPN-type speed probes connected to the input terminals.

For illustration purposes, the breaker status inputs are shown along with the speed probe input.

Example a and b: Internal +24V supply is used to power both the speed probe connected to CI # 4 and breaker status signals (DRY type) connected to CI # 1 & 2 of the same Slot F.

Example c and d: Internal +24V supply is used to power the speed probe connected to CI # 4 while an external dc power supply is used by the breaker status signals (WET type) connected to CI # 1 and 2. In this example, since both speed probe and breaker status signals are connected to Slot F, the voltage threshold must be set to 17V.

Note:
When the NPN type speed probe is used, the on/off state of the sensor input is reversed. When the probe sensor state is On (Closed), the relay sensor Input will indicate Off (Open) and when the probe sensor state is Off (Open), the relay sensor Input will indicate On (Closed). Thus, when the motor is stopped, the speed sensor input will be ON.

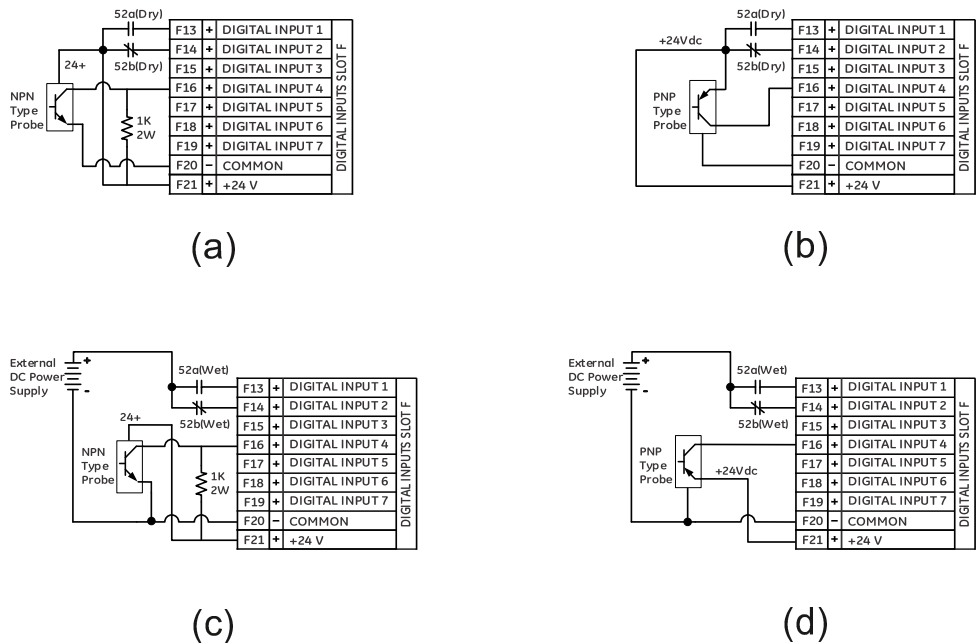


Figure 270: Wiring Examples of Speed Protection Input

Note:
The maximum load current that can be delivered by the internal +24 V supply is 80 mA. When the internal +24 V supply is used to power the probe, the current limitations of the 24V supply must be considered.

RATED SPEED

Range: 100 to 7200 RPM in steps of 1

Default: 3600 RPM

RPM defines the rated speed of the motor.

Note:
This setting is located under **Setpoints > System > Motor Setup**

Note:

In a two speed motor application, when 2-Speed Motor Protection is “Enabled” and Speed2 Motor Switch is “On”, the setpoint Speed2 **RATED SPEED**, programmed under **System > Motor > Setup**, is used by the Speed protection as the rated value.

PULSES PER REV

Range: 1 to 6 PPR in steps of 1 PPR

Default: 1 PPR

The Number of pulses per revolution (PPR) is required to calculate the switching frequency of the input pulses. Switching frequency can be calculated as follows.

$$\text{Switching frequency} = (\text{PPR} \times \text{RPM}) / 60$$

Where:

PPR = pulses per revolution

RPM = rated speed

DIRECTION

Range: Underspeed, Overspeed

Default: Underspeed

This setting defines the mode for speed protection. When **DIRECTION** is set to Underspeed, the Trip and/or Alarm function picks up when the measured motor speed is below the set pickup level. Likewise, when the Direction is set to Overspeed, the Trip and/or Alarm function picks up when the measured motor speed is above the programmed pickup level.

Note:

When **TRIP FUNCTION** is set to *Trip* and **DIRECTION** is set to Underspeed, the speed function requires a block signal configured under the setpoint **BLOCK** to reset the outputs. It is recommended to use the breaker/contactors open status operand (Brk1 Opened/Contactor Opened) to indicate that the machine is stopped.

TRIP PICKUP

Range: 20 to 120% in steps of 1

Default: 75%

This setting specifies a pickup threshold for the trip function.

TRIP PICKUP DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 1.00 s

This setting specifies a pickup threshold for the trip function.

TRIP OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

This setting enables the speed protection Alarm functionality

ALARM PICKUP

Range: 20 to 120% in steps of 1

Default: 80%

This setting specifies a pickup threshold for the Alarm function.

ALARM PICKUP DELAY

Range: 0.00 to 600.00 s steps of 0.01 s

Default: 1.00 s

This setting specifies a time delay for the Alarm function.

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Speed protection can be blocked by any asserted FlexLogic operand.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Latched



Figure 271: Speed Protection logic diagram

10.8 RTD TEMPERATURE

The Resistance Temperature Detector (RTD) wiring diagram is shown below:

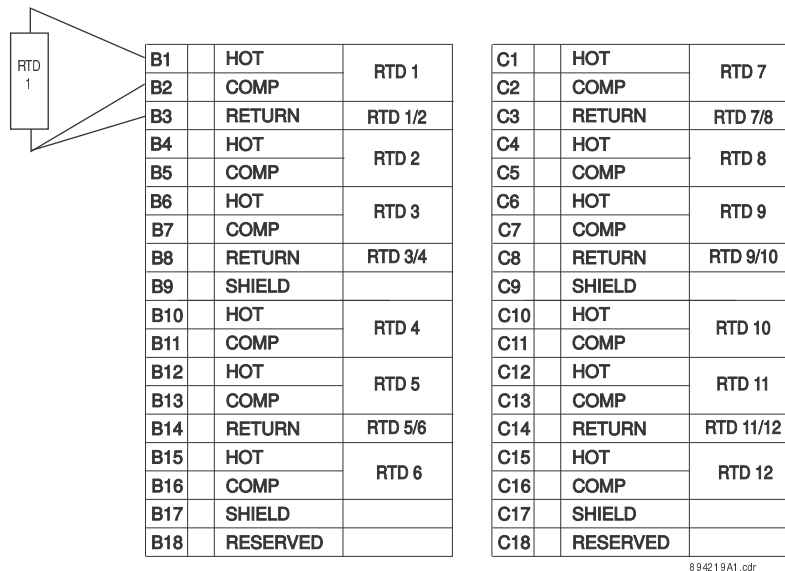


Figure 272: RTD Wiring diagram

Note:

To enhance the accuracy of the RTD, ensure all 3 cables are of the same length and gauge. In addition, the Compensation and Return wires must be connected on the RTD side and not on the relay side.

RTD Inputs

The relay has two methods of supporting RTD inputs.

- I/O cards installed in the relay can supply up to 13 RTDs.
- An optional CANBUS-based Remote Input/Output module (RMIO unit) can also be installed, which can monitor up to 12 additional RTDs (referred to as RRTDs). The RMIO unit supports 6, 9, or 12 RRTDs.

Hardware and software is provided to receive signals from external Resistance Temperature Detectors (RTDs) and convert these signals into a digital format for use as required. These channels are intended to be connected to any of the RTD types in common use.

Depending on the order code (Advanced Monitoring option selected), the relay is supplied with one combo card consisting of one RTD input, one Ohms input, four DCmA inputs and seven DCmA outputs. Additionally, the relay can be furnished with up to two optional RTD cards, each of them having 6 RTD input channels. Only slots B and C can accept the optional RTD cards.

Note:

If only one RTD card is ordered at the time the relay is ordered, this RTD card is always shown in slot B. The order code selection does not allow for an RTD card in slot C, if no RTD card is ordered in slot B.

Note:

An I/O card L ordered in Slot G will contain an additional RTD input on the card. It will be the highest RTD number shown (i.e. if 1 additional RTD card is used, then the low voltage I/O (LVIO) RTD will be RTD #7).

An alphanumeric name is assigned to each channel; this name is included in the channel actual values. It is also used to reference the channel as the input parameter to features designed to measure this type of parameter. Selecting the type of RTD connected to the channel configures the channel. The conversion chart is shown in the following table.

RTD Temperature vs. Resistance

TEMPERATURE		RESISTANCE (IN OHMS)			
°C	°F	100 Ω PT (IEC 60751)	120 Ω NI	100 Ω NI	10 Ω CU
-40	-40	84.27	92.76	77.30	7.49
-30	-22	88.22	99.41	82.84	7.88
-20	-4	92.16	106.15	88.45	8.26
-10	14	96.09	113.00	94.17	8.65
0	32	100.00	120.00	100.00	9.04
10	50	103.90	127.17	105.97	9.42
20	68	107.79	134.52	112.10	9.81
30	86	111.67	142.06	118.38	10.19
40	104	115.54	149.79	124.82	10.58
50	122	119.40	157.74	131.45	10.97
60	140	123.24	165.90	138.25	11.35
70	158	127.08	174.25	145.20	11.74
80	176	130.90	182.84	152.37	12.12
90	194	134.71	191.64	159.70	12.51
100	212	138.51	200.64	167.20	12.90
110	230	142.29	209.85	174.87	13.28
120	248	146.07	219.29	182.75	13.67
130	266	149.83	228.96	190.80	14.06
140	284	153.58	238.85	199.04	14.44
150	302	157.33	248.95	207.45	14.83
160	320	161.05	259.30	216.08	15.22
170	338	164.77	269.91	224.92	15.61
180	356	168.48	280.77	233.97	16.00
190	374	172.17	291.96	243.30	16.39
200	392	175.86	303.46	252.88	16.78
210	410	179.53	315.31	262.76	17.17
220	428	183.19	327.54	272.94	17.56
230	446	186.84	340.14	283.45	17.95
240	464	190.47	353.14	294.28	18.34
250	482	194.10	366.53	305.44	18.73

Note:

RTD type copper (Cu) is only available when order code option 'S' is chosen for Slot B or C.

RTD Protection

The relay can monitor up to 13 RTDs and 12 RRTDs, each of which can be configured to have a trip temperature and an alarm temperature. The RTD Temperature protection menu will be seen on the relay upon availability of RTD input/inputs. The RRTD Temperature protection setpoints can be seen only if the relay has the RMIO module installed and validated. The minimum RTD Temperature requirement is to set the setpoint **TYPE**. The default value for **TYPE**, for each RTD is *100 Ω Platinum*. The protection RTD Trip, and RTD Alarm from the menu are optional. They respond to directly measured RTD temperature.

Trip Voting has been added for extra security in the event of RTD malfunction. If enabled, a second RTD must also exceed its own programmed Trip Temperature before a trip will be issued. If the RTD is chosen to vote with itself, the voting feature is disabled. Each RTD may also be configured as being of application type None, Stator, Bearing, Ambient or Other. RTDs configured as Stator type are also used by the thermal model for determining the RTD Bias.

This element also monitors the RTD broken connection and blocks the RTD trip and alarm functions if the RTD connection is detected as Open or Shorted and generates RTD Open and RTD Shorted FlexLogic operands. An RTD is detected as Open when the RTD connection is either open or the temperature is greater than 250°C. An RTD is detected as Shorted when the RTD connection is either shorted or the temperature is equal to less than -40°C.

Note:

The RTD input is active regardless of whether or not, the RTD Trip, or/and RTD Alarm functions are enabled.

Path: *Setpoints > RTD Temperature > RTD 1[X]*

Path: *Setpoints > RRTD Temperature > RRTD 1[X]*

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

If a trip is not required from the RTD, select *Configurable*. This enables the RTD without producing a trip.

NAME

Range: Up to 13 alphanumeric characters

Default: RTD 1

TYPE

Range: 100 Ω Platinum, 100 Ω Nickel, 120 Ω Nickel, 10 Ω Copper

Default: 100 Ω Platinum

Selects the type of the RTD used.

APPLICATION

Range: None, Stator, Bearing, Ambient, Other

Default: None

The setting allows each individual RTD to be assigned to a group application. This is useful for some applications, which require group measurement. Selecting *None* means that the RTD operates individually and is not part of any RTD group. Common groups are provided for needs at rotating machines applications such as *Ambient* or *Bearing*.

VOTING

Range: Off, RTD 1, RTD 2....RTD 12, All Stator

Default: Off

This setting selects the RTD that must also exceed its own programmed Trip Temperature for a trip to occur. Selecting the same RTD to which the element is related to, has the same effect as selecting "Off". When this RTD is set to vote with All Stator RTDs, the relay will only trip if this RTD is above its trip level and any one of the other stator RTDs is also above its own trip level. RTD voting is typically only used on Stator RTDs and typically done between adjacent RTDs to detect hot spots.

TRIP TEMPERATURE

Range: 1°C to 250°C in steps of 1°C (33°F to 482°F in steps of 2°F)

Default: 155°C (311°F)

TRIP PICKUP DELAY

Range: 0 s to 600 s in steps of 1 s

Default: 2 s

TRIP DROPOUT DELAY

Range: 0 s to 600 s in steps of 1 s

Default: 0 s

TRIP OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

ALARM TEMPERATURE

Range: 1°C to 250°C in steps of 1°C (33°F to 482°F in steps of 2°F)

Default: 130°C (266°F)

ALARM PICKUP DELAY

Range: 0 s to 600 s in steps of 1 s

Default: 2 s

ALARM DROPOUT DELAY

Range: 0 s to 600 s in steps of 1 s

Default: 0 s

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

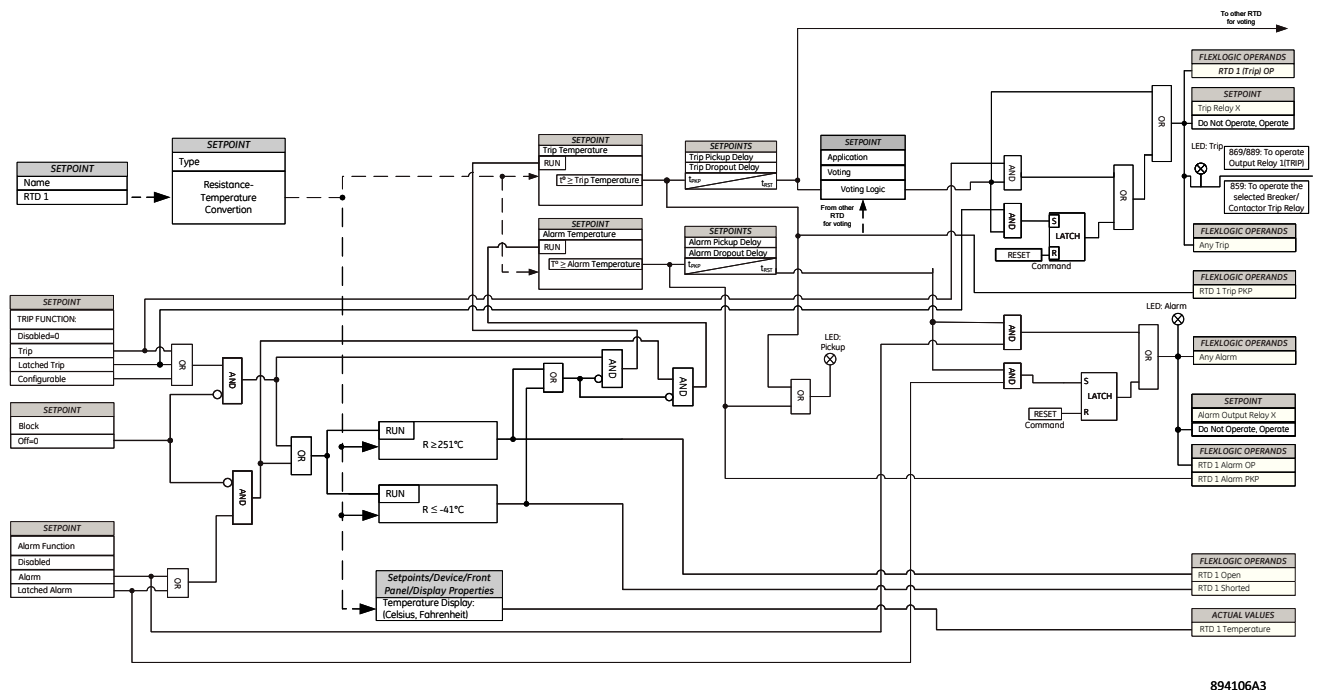

894106A3

Figure 273: RTD Protection logic diagram

10.9 RTD TROUBLE

When set to Alarm or Latched Alarm, this element monitors all the RTDs that are either programmed as Alarm or Trip or Configurable and generates an alarm if any of the RTDs are detected as Open or Shorted. Upon detection of an RTD Open or Shorted condition, the element also asserts the RTD Trouble PKP and RTD Trouble OP and operates the assigned output relay. Both RTDs and RRTDs can be monitored using this element.

Path: *Setpoints > Monitoring > RTD Trouble*

FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS


Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

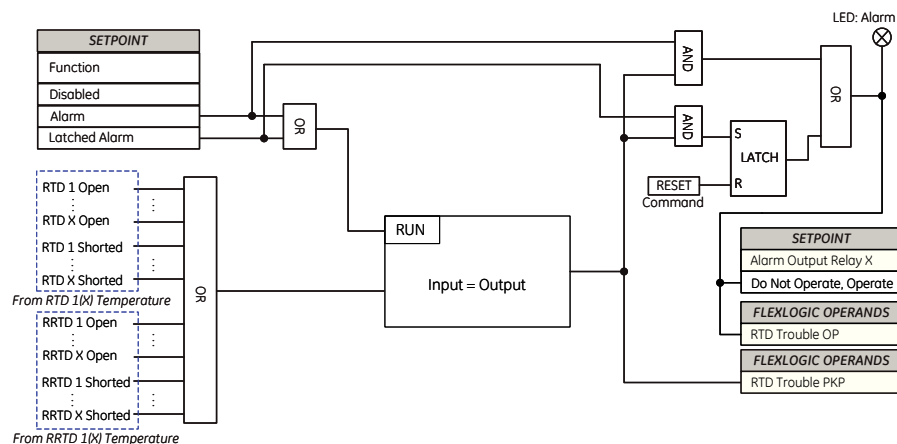

894178A2

Figure 274: RTD Trouble logic diagram

10.10 LOSS OF COMMUNICATIONS

This section covers the functionality of the Loss of Communications element.

The relay monitors activity on an interface via the configured protocol for this interface. The communications status is set for each protocol.

If communication is lost, the enabled interface will issue a *Loss of Comms* event and operate a combination of output relays/states.

Note:

The **MODBUS ACTIVITY TIMEOUT** specifies the minimum time without Modbus communication. This timeout is used to declare the Modbus 'Loss of Communication' state. The **MODBUS ACTIVITY TIMEOUT** must be set to a value other than 0 for the Loss of Communication monitoring to work properly.

Note:

MODBUS ACTIVITY TIMEOUT is set under: **Setpoints > Device > Communications > Modbus Protocol**

Path: **Setpoints > Monitoring > Loss of Comms**

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

INTERFACE

Range: Serial, Serial + Ethernet, Ethernet, All

Default: Serial

Only the protocols associated with the selected interface are shown in this screen as options. For example, if "Ethernet" is selected, select the Ethernet protocols to monitor. The Ethernet protocols selection is defined as EthernetProtocolBitmask bitmasks.

PICKUP DELAY

Range: 0 to 600 s in steps of 1

Default: 2 s

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched
Default: Latched

Logic diagram

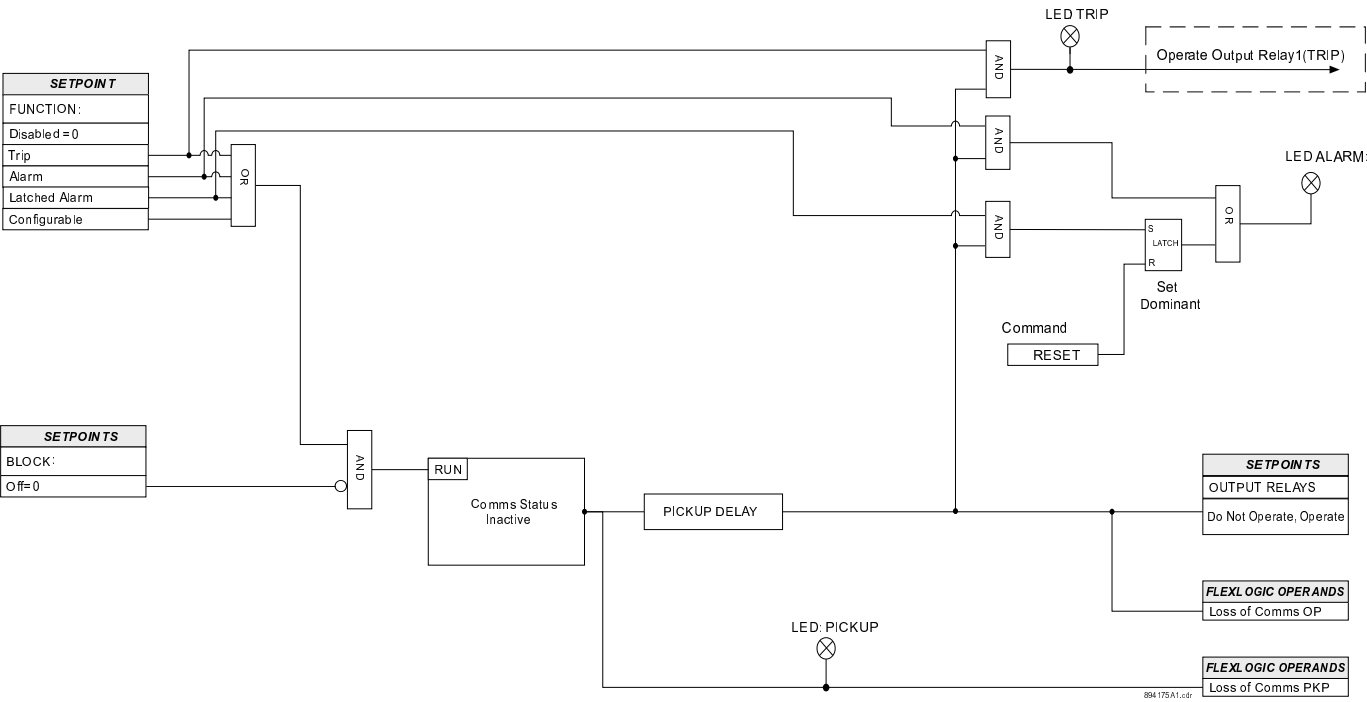


Figure 275: Loss of Communications logic diagram

CHAPTER 11

CONTROL

11.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	587
Control Overview	588
Setpoint Group	589
Generator control	591
Local Control Mode	596
Breaker Control	606
Switch Control (89)	611
Virtual Input Control	615
Trip Bus	616
Breaker Failure (50BF)	619
Arc Flash Protection	625
Synchrocheck (25)	628
VT Fuse Failure (VTFF)	633
Digital Elements	636

11.2 CONTROL OVERVIEW

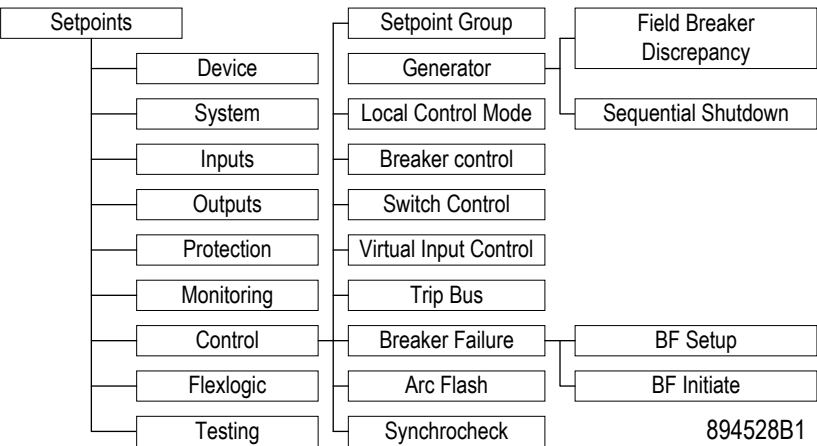


Figure 276: Control Display Hierarchy

11.3 SETPOINT GROUP

The relay provides six setpoint groups. All setpoints contained under the protection setpoints are reproduced in six groups, identified as Setpoint Groups 1, 2, 3, 4, 5 and 6. These multiple setpoints provide the capability for both automatic and manual switching to protection settings for different operating situations. Automatic (adaptive) protection setpoint adjustment is available to change settings when the power system configuration is altered.

Automatic group selection can be initiated from the autoreclose, **SETPOINT GROUPS** and by use of a **SET GROUP x ACTIVE** setpoint input. The group selection can be initiated by this input from any FlexLogic operands, inputs, pushbuttons or communications.

Group 1 is the default for the Active Group and is used unless another group is requested to become active. The active group can be selected with the **ACTIVE SETPOINT GROUP** setpoint, by **SET ACTIVE x GROUP** input or inputs from autoreclose, **SETPOINT GROUPS**. If there is a conflict in the selection of the active group, between a setpoint, inputs and inputs from functions, the higher numbered group is made active. For example, if the inputs for Group 2, 4, and 6 are all asserted the relay uses Group 6. If the logic input for Group 6 then becomes de-asserted, the relay uses Group 4. Some application conditions require that the relay does not change from the present active group. This prevention of a setpoint group change can be applied by setting Change Inhibit inputs (1 to 16). If needed, typically this change inhibit is done when any of the overcurrent (phase, neutral, ground, or negative sequence), overvoltage, bus or line undervoltage, or underfrequency elements are picked-up.

Path: Setpoints > Control > Setpoint Groups

ACTIVE SETPOINT GROUP

Range: 1,2,3,4,5,6

Default: 1

The **ACTIVE SETPOINT GROUP** setting is used for manual selection of the Active Setpoint Group.

SET GROUP 2 (3,4,5,6) ACTIVE

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand that initiates change of the **ACTIVE SETPOINT GROUP**.

GROUP CHANGE INHIBIT 1 (UP TO 16)

Range: Off, Any FlexLogic operand

Default: Off


The setpoint selects the FlexLogic operand that inhibits change of the active setpoint group.

EVENTS

Range: Disabled, Enabled

Default: Enabled

Logic diagram

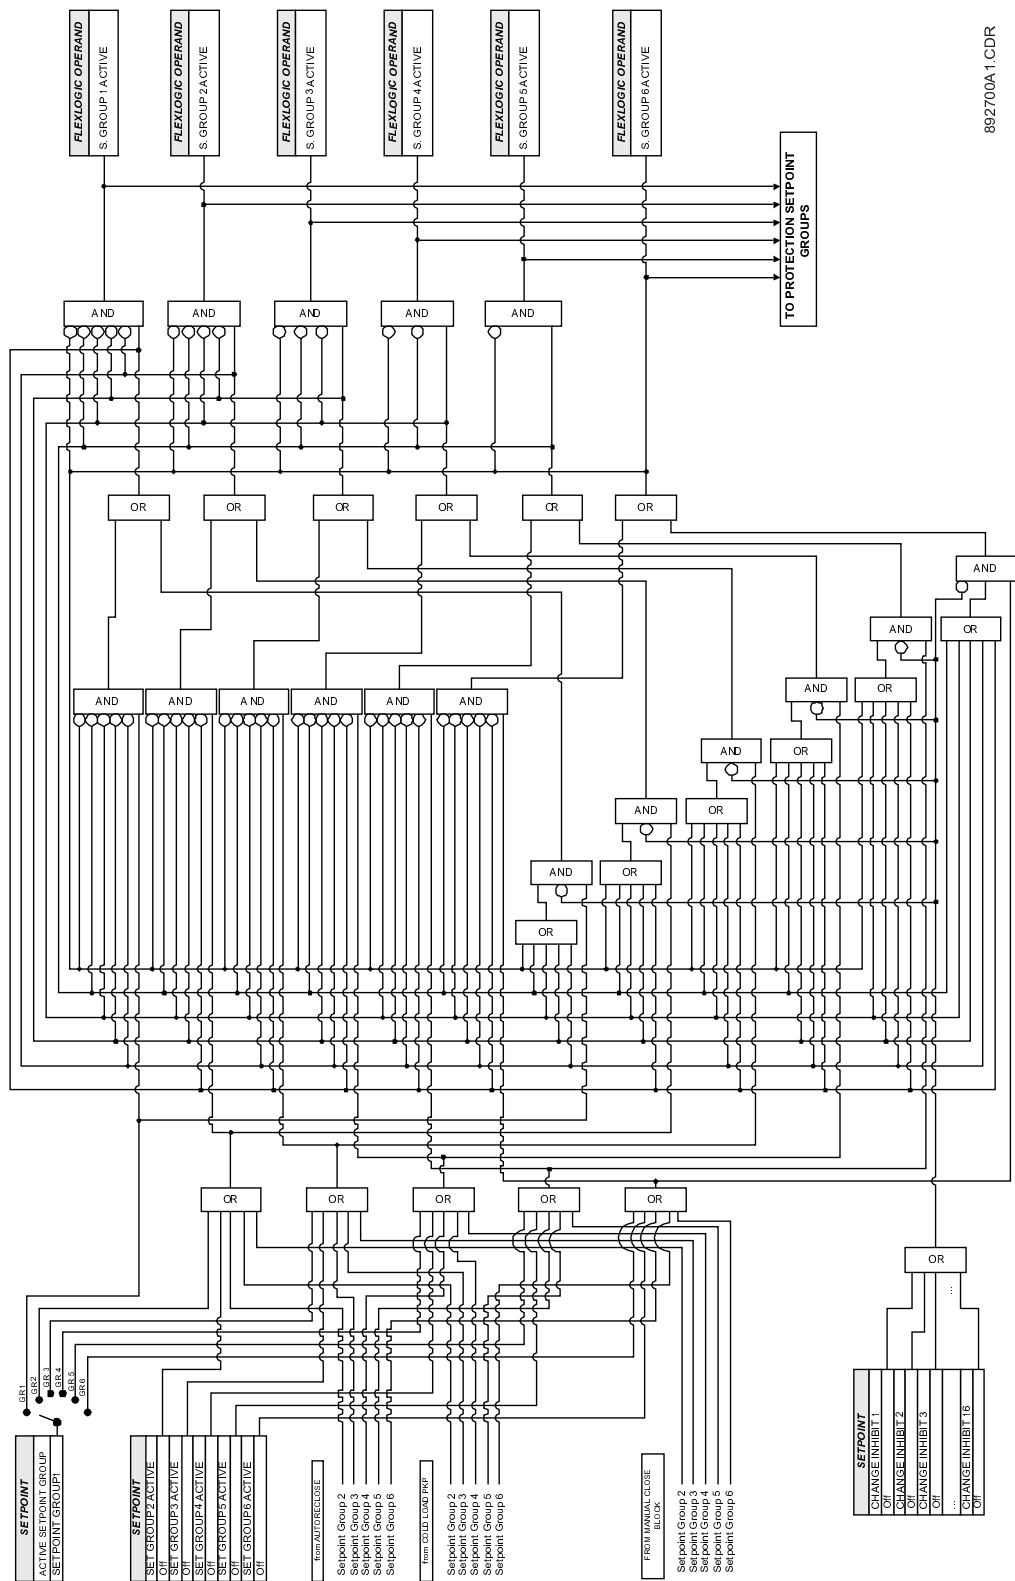

892700A 1.CDR

Figure 277: Setpoint Groups logic diagram

11.4 GENERATOR CONTROL

11.4.1 FIELD BREAKER DISCREPANCY

The field breaker discrepancy function is intended for use with synchronous generators. If a digital input is assigned to this function the following condition applies:

Any time the **field status** contact indicates the field is not applied AND the generator status indicates that the generator is online, a trip occurs once the time delay expires.

The time delay may be used to prevent possible nuisance tripping during shutdown. The field breaker status contact type can be selected as either *Auxiliary 52a* or *Auxiliary 52b*.

Path: *Setpoints > Control > Generator > Field Breaker Discrepancy*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

ASSIGN DIGITAL INPUT

Range: Off, FlexLogic Operand

Default: Off

This setting assigns the digital input, which represents the status of the field breaker.

FIELD STATUS CONTACT

Range: Auxiliary 52a, Auxiliary 52b

Default: Auxiliary 52a

For *Auxiliary 52a*: Closed (Digital Input = 1) indicates that the field breaker is closed.

For *Auxiliary 52b*: Open (Digital Input = 0) indicates the field breaker is closed.

PICKUP DELAY

Range: 0.10 to 600.00 s in steps of 0.01 s

Default: 1.00 s

OUTPUT RELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENT:

Range: Enabled, Disabled

Default: Enabled

TARGET:

Range: Self-reset, Latched, Disabled

Default: Self-reset

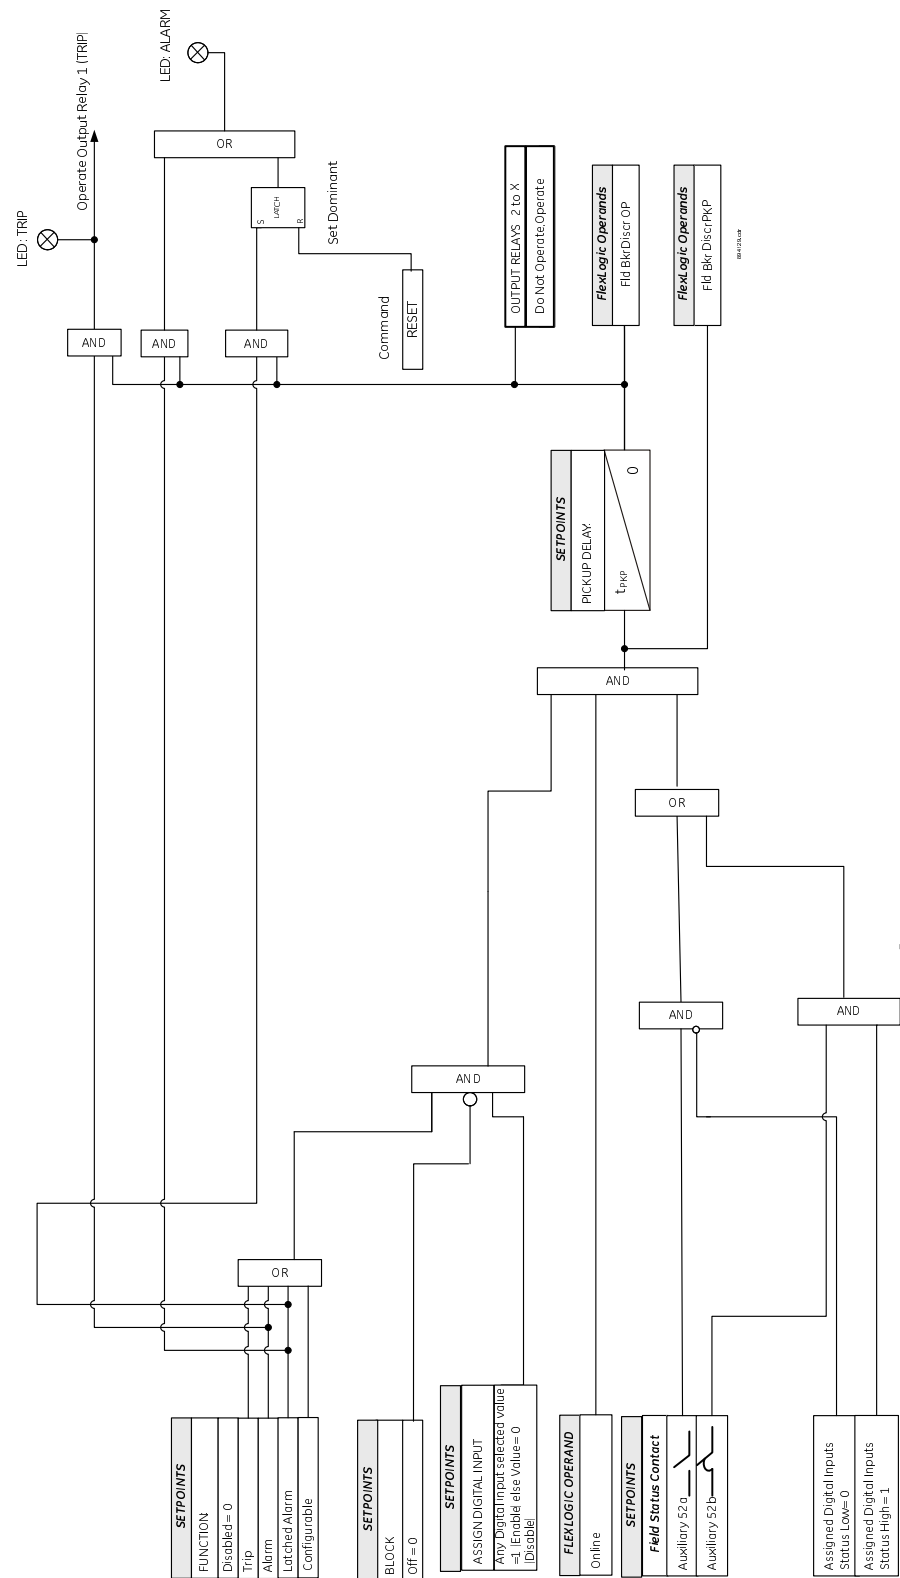


Figure 278: Field Breaker Discrepancy Logic Diagram

11.4.2 SEQUENTIAL SHUTDOWN

During routine shutdown and for less critical trips, it may be desirable to use the sequential shutdown function to prevent overspeed. Any FlexLogic operand (e.g. Digital Inputs) can be assigned as *arming input* to enable this function. The arming input enables either a low forward power or reverse power function, based on the power direction setting selection. Once the measured 3-phase total power falls below the forward power level or exceeds the reverse power level for the period of specified time, a trip will occur. This time delay will typically be shorter than that used for standard reverse power or low forward power elements. The level is programmed per unit of generator rated MW calculated from the rated MVA and rated power factor.

Note:

A reverse power element may not be suitable when set to a very low setting, particularly under conditions of large reactive loading on the generator. Under such conditions, we recommend low forward power.

Path: *Setpoints > Control > Generator > Sequential Shutdown*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

ARMING INPUT

Range: Off, Any FlexLogic operand

Default: Off

This setting selects a specific arming input from FlexLogic operands. Normally, sequential shutdown is armed/initiated from digital input (from an external device).

Note:

NOTE: *The **Arming Input** should remain ON/latched until the sequential shutdown operation is executed.*

POWER DIRECTION

Range: Forward, Reverse

Default: Forward

This setting provides options for the direction of power flow.

PICKUP MW LEVEL

Range: 0.02 to 0.99 x Rated in steps of 0.01

Default: 0.05 x Rated

When the measured 3-phase total power falls below the setting of the forward pickup power level, or exceeds the reverse power pickup level for the period of time specified, an OP operand is issued.

PICKUP DELAY

Range: 0.20 to 180.00 s in steps of 0.01 s

Default: 10.00 s

OUTPUT DELAY

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENT:

Range: Enabled, Disabled

Default: Disabled

TARGET:

Range: Self-reset, Latched, Disabled

Default: Self-reset

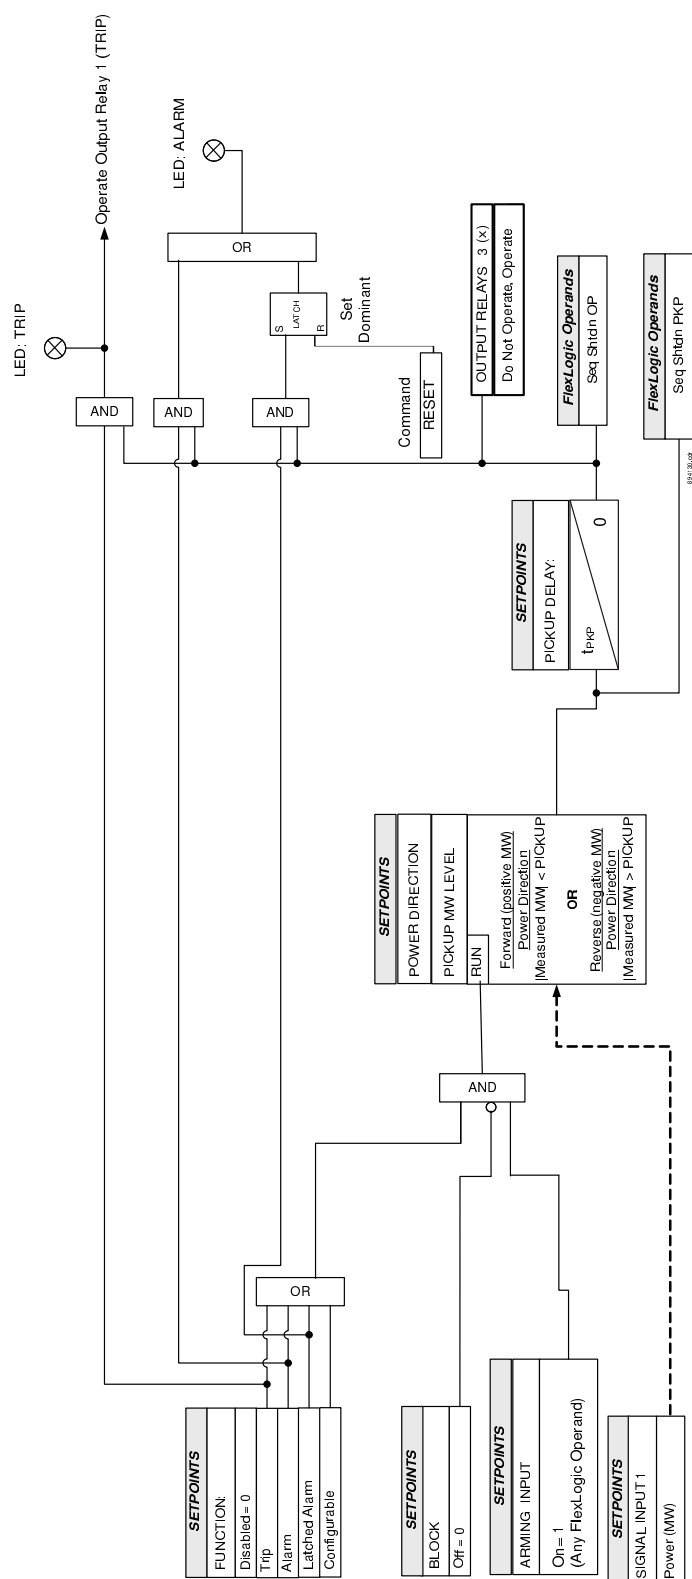


Figure 279: Sequential Shutdown Logic Diagram

11.5 LOCAL CONTROL MODE

Local Mode

When the setpoint **LOCAL MODE** is enabled, Open and Close control of breakers and switches is performed using relay pushbuttons (PBs), or contact inputs from PBs installed in close proximity to the relay (such as on the relay panel, or in the relay cubicle).

The addition of contact inputs and other FlexLogic operands for closing and opening the breaker, or switch while in local mode provides the flexibility to use PBs mounted near the relay.

If contact inputs or other FlexLogic operands are used while the Select Before Operate (SBO) mechanism is enabled, the breaker or the switch shall first be selected using the relay PBs, and then opened or closed using the designated relay panel or cubicle PBs. (The **SELECT BEFORE OPERATE** setpoint is only available for relays supporting a single breaker.) If the SBO mechanism is disabled while the relay supports configurable single line diagrams (SLDs), only the breaker PBs either on the relay front panel or mounted nearby will work. The menu setpoints for local switch Open and Close are hidden and deactivated.

If the relay does not support configurable SLD, the setpoints for local switch Open and Close are omitted from the menu.

While in Local Mode, the letters LM are displayed on the relay display banner. In addition, an LED can be programmed to turn ON when the relay is set to Local Mode. By default the relay comes with one LED programmed to show Local Mode.

In Local Mode, control for the breakers and disconnect switches can be accessed from the relay front panel (PBs programmed for Open and Close) or by contact inputs for Open and Close from PBs installed near the relay. Hard coded SLD PBs are designated for Tag, Block and Bypass Block for each component upon selection. In this mode, the **LOCAL OPEN** and **LOCAL CLOSE** setpoints for Breaker Control or Switch Control (see the respective logic) are active.

The same Local Control Mode applies if Contactor is selected as a switching device.

Remote Mode

When Remote Mode is enabled, the switches are controlled (open/close) from any assigned FlexLogic operand, contact input, virtual input, virtual output, remote input, or via communication. The Control Mode menu is designed to switch the control for both breakers and switches to either Remote Mode (**LOCAL MODE** setpoint set to Off, or the selected Local Mode input de-asserted), or Local Mode (**LOCAL MODE** setpoint asserted).

Breaker Mode defaults

The default value of the breaker control mode with one breaker is *Remote* (**LOCAL MODE** set to Off or the selected Local Mode input de-asserted). In this mode, all programmed setpoints from the respective menus for Breaker Control and Switch Control are active. The same Remote Mode applies if a Contactor is selected as a switching device. The default value for relays with two breakers is *Local*.

Navigation

The 8 Series front panel provides navigation pushbuttons (PBs) which highlight the component (breaker or disconnect switch) from the single line diagram. The navigation PBs (Up/Down or Up/Down/Left/Right depending on relay front panel model), are used to browse through the Single Line Drawing (SLD) components. These PBs are used for SLD navigation only. The navigation starts with highlighting the first breaker, and then goes through all other components in sequence, until the last one (breaker or switch). Only the breakers and switches included in the SLD from the display will be browsed (navigated).

Select Before Operate

Once the breaker or the switch is highlighted in the SLD using the navigation PBs, the component must be selected before open or close action is performed. The selection of the component is performed by pressing "ENTER" key

from the front panel. A flash message `BKR # Selected`, or `Sw # Selected` appears on the screen to denote the selection. Once selected, the text from the first three tabs from the display corresponding to the PBs 1, 2, and 3 changes to **Tag**, **Block**, and **Bypass**. At this stage, the selected breaker or switch can be Opened or Closed using the programmed PBs, and Tagged/Blocked/Bypassed using the SLD PBs.

For PBs supporting one breaker only, the Local Control Mode menu includes the setpoint **SELECT BEFORE OPERATE**, which can be set to either Enabled or Disabled. When it is set to Disabled, tagging, blocking and block bypassing commands are disabled from both Local and Remote control. In this mode the breaker can be controlled directly by the programmed Open and Close PBs. The local control for the disconnect switches is suspended. In this mode they can only be controlled remotely, i.e. using pre-programmed contact inputs, virtual inputs, comms, or any selected FlexLogic operand for closing and opening commands. The remote block and block bypass flags are also suspended. With **SELECT BEFORE OPERATE** set to Disabled the relay behaves similar to some other legacy relays, where when in Local mode the breaker is directly controlled by pressing the Open and Close PBs without additional confirmation, and when in Remote mode the breaker is directly controlled by executing the remote open and close commands from the configured setpoints.

When the **SELECT BEFORE OPERATE** setpoint is set to Enabled, the navigation, the breaker or switch selection, as well as the blocking, bypassing and tagging are operational when in Local mode. When switched to Remote mode, the remote blocking and bypassing will also be operational.

Note:

*The selected component from SLD will be deselected if either the time programmed in setpoint **Bkr/Sw Select Timeout** expires, or the **ESCAPE** pushbutton is pressed. The **HOME** button will not de-select the selected object. To navigate to home page, the component must be first de-selected on the SLD page.*

The programmed PBs for breaker or switch Open and Close can be used only in local mode when an active object is selected in the SLD. The selected device can be opened or closed provided it is not blocked or tagged. If no operation is detected, the selection is removed, and the selected PB must be pressed again to enable the selection. The local mode breaker selection and operation is only active if the user has proper level security access.

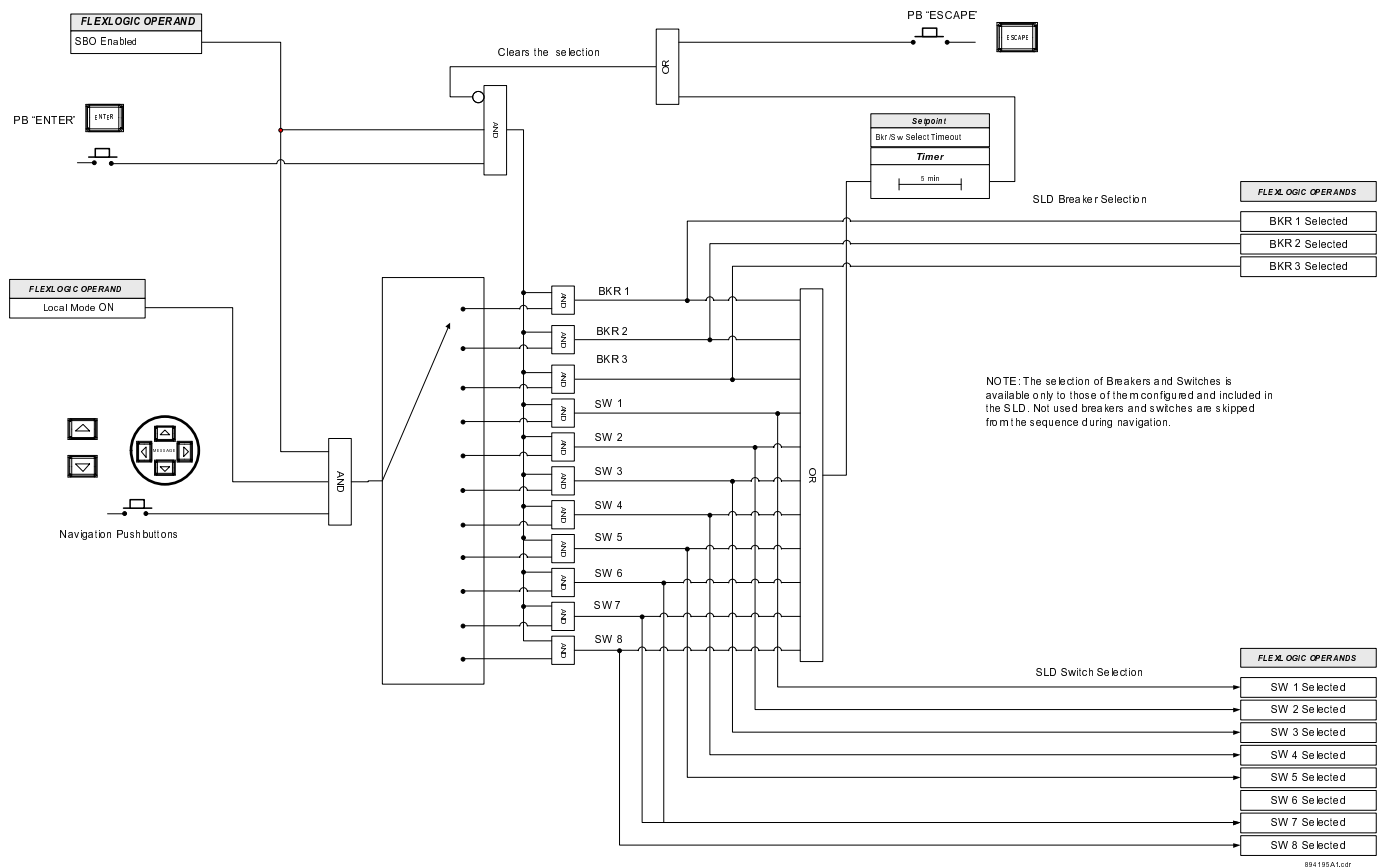


Figure 280: Navigation and SLD component selection

PB Block (Hard coded SLD Pushbutton)

Blocking of a breaker or switch can be used for inhibiting the close or open operation while in Local Mode. The selected breaker or disconnect switch can be blocked. If block was not applied to the selected component, pressing the **Block** PB will block either the Open or Close command depending on the existing state. When the block is active, the letter **B** appears in the SLD next to the controlled component

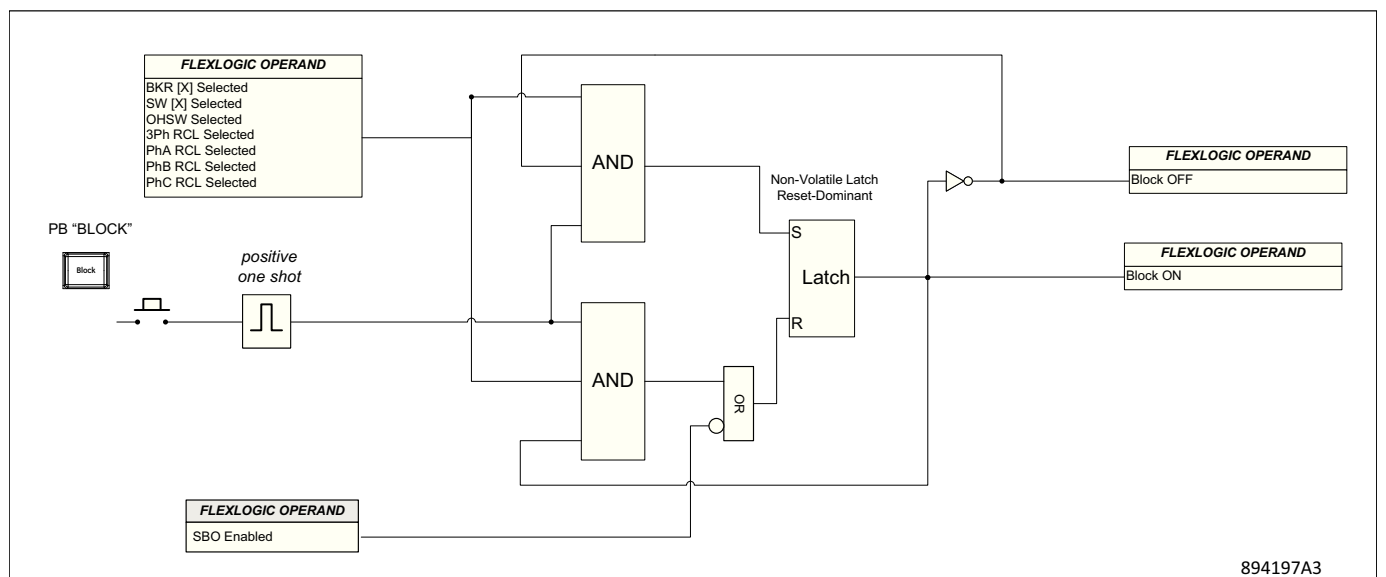


Figure 281: SLD Pushbutton Block logic diagram

PB Bypass (Hard coded SLD Pushbutton)

Blocking of the command can be bypassed using the SLD pushbutton **Bypass**. When pressed, the previously applied block is bypassed. For example if the block was applied when the Breaker/Switch was opened, pressing the PB **Bypass** will allow closing command. If the bypass is active for the selected breaker or switch, the letters **By** appear next to the symbol in the SLD.


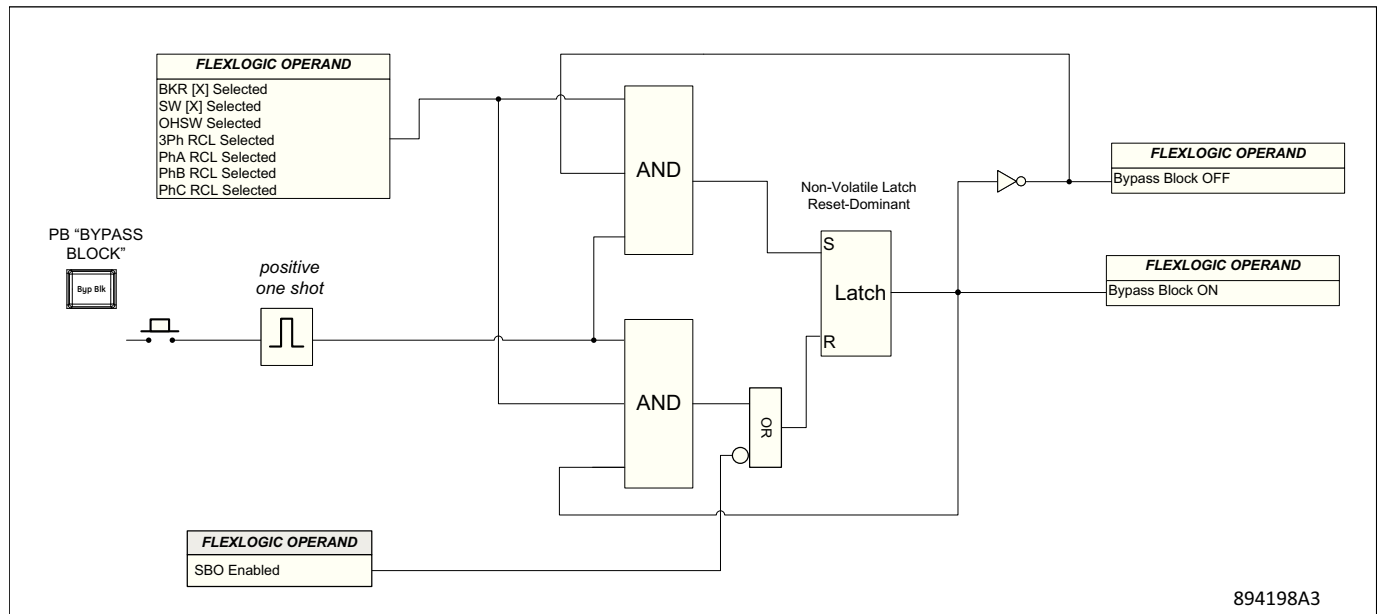


Figure 282: SLD Pushbutton Bypass Block logic diagram

PB Tag (Hard coded SLD pushbutton)

Lockout/Tagout is a practice and procedure to safeguard employees from unexpected energization or startup of machinery and equipment, or hazardous energy during service or maintenance activities. If a breaker or disconnect switch is tagged, the open and close controls are inhibited.

Both remote and local control commands are blocked if the tagged operand BKR# Tag ON, or SW# Tag ON is active for the selected particular breaker or switch respectively. The breaker or switch is tagged by pressing the SLD pushbutton **Tag**. If the selected switching device is tagged, a letter **T** appears under its symbol. Tagging can be achieved in local mode using the front panel control from the configurable SLD screens. The Pushbutton Tag logic diagram shows the tagging logic diagram for a switch. The logic applies to one breaker or switch at the time in the single line diagram.

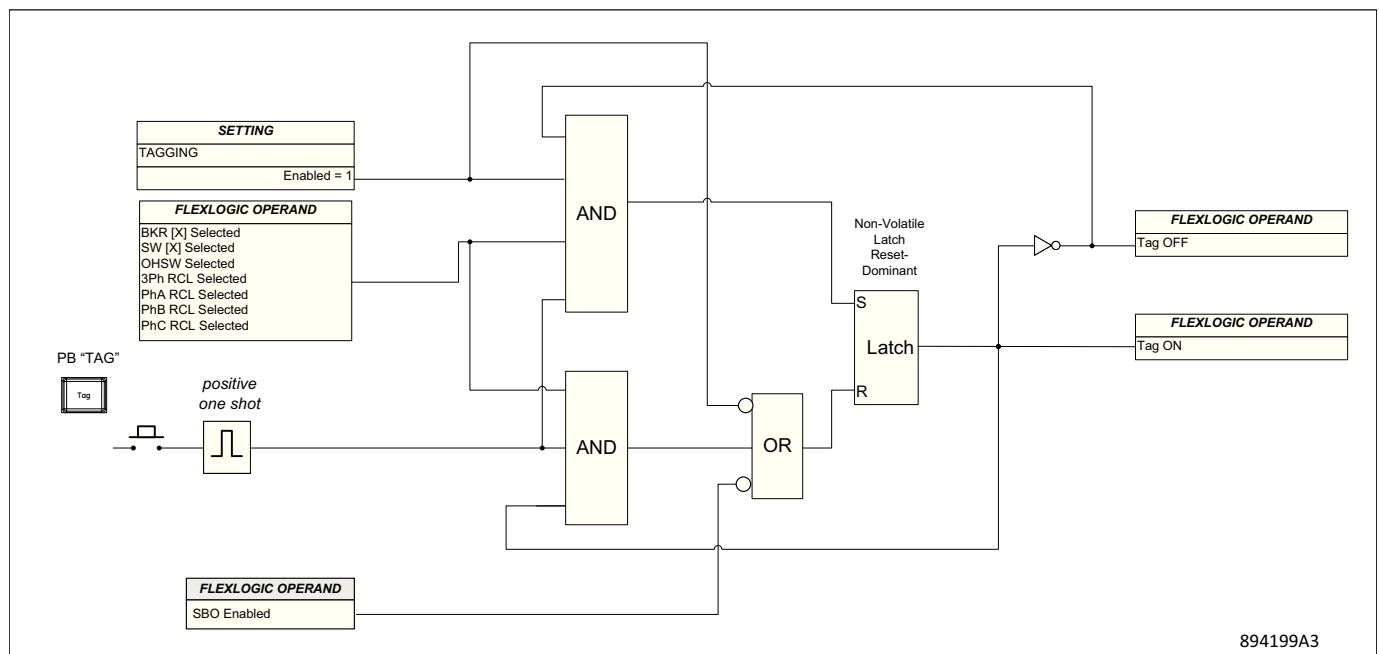

894199A3

Figure 283: Pushbutton Tag logic diagram**Note:**

The pushbuttons, Tag, Block and Bypass Block are used for both breakers and switches when selected in the SLD. Only one component at the time can be selected in the SLD.

Note:

Tagging, blocking, or bypassing block can be performed in Local Mode, and only when the component (breaker or switch) is selected in the SLD. The applied action of tagging, blocking or bypassing block is retained for this component after it's been deselected. To change the status of the applied action, the component need be reselected.

Note:

The Local Mode control allows programming of separate pair of PBs for Open and Close commands to breakers and for Open and Close commands to switches. If desired, one pair of pushbuttons can be programmed for Open and Close commands to both breakers (contactors) and switches.

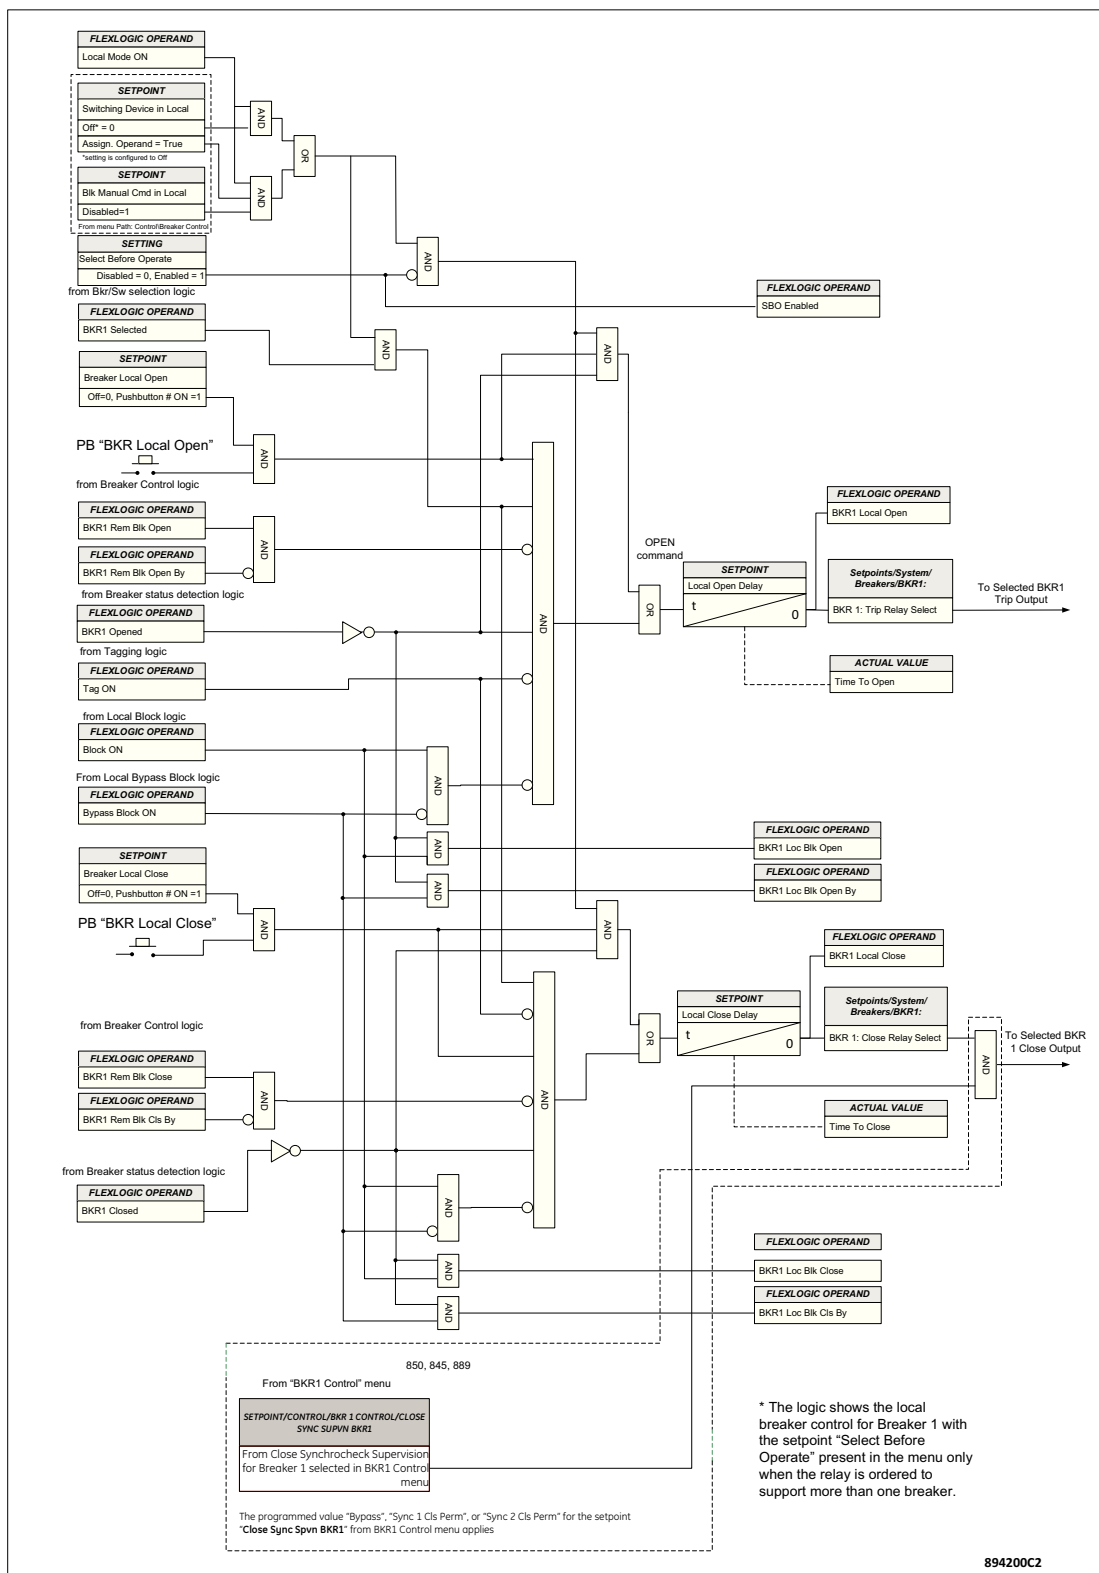


Figure 284: Local Control for breakers

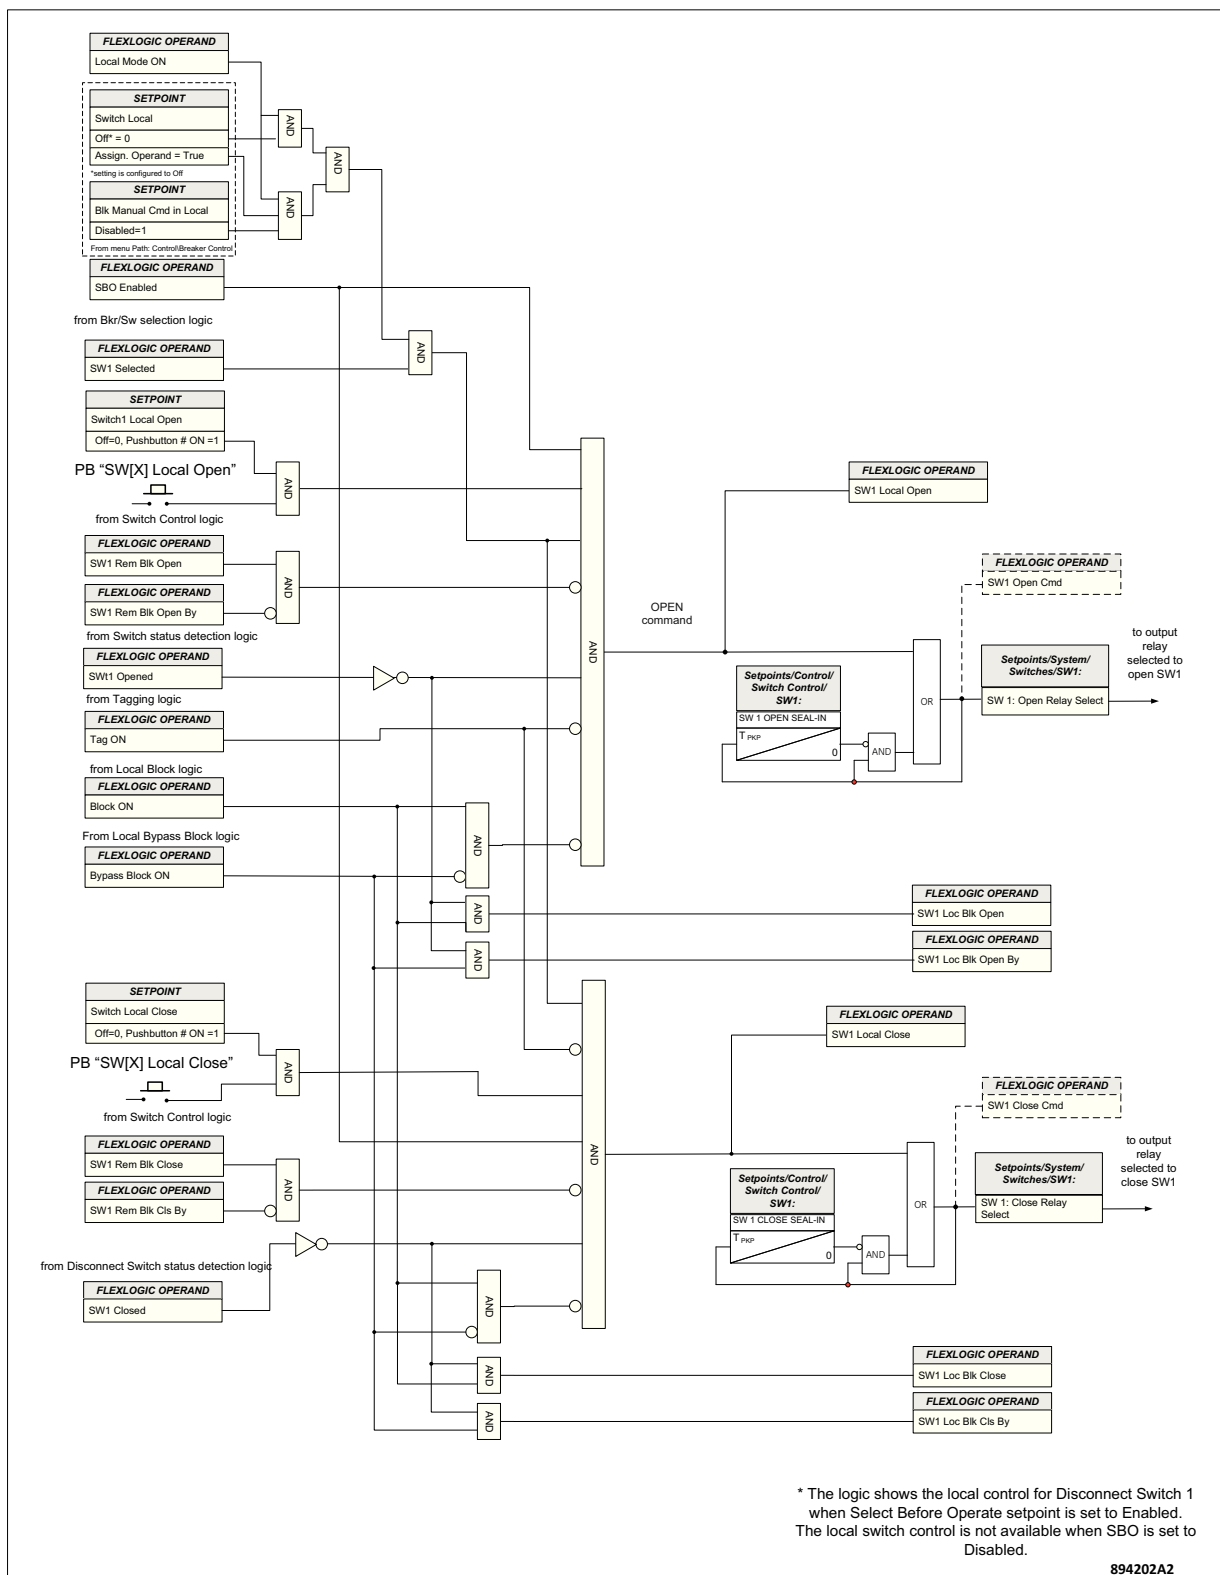


Figure 285: Local Control for Switches

Path: **Setpoints > Control > Local Control Mode**

For this path the HMI menus vary depending on the order code and the number of breakers selected.

Note:

For relays supporting single breaker control, the SW Local Open and SW Local Close setpoints appear in the menu only if the relay is ordered with Advanced SLD; and the **SELECT BEFORE OPERATE** setpoint is enabled. In all other cases, these setpoints are hidden and inactive.

SELECT BEFORE OPERATE

Range: Disabled, Enabled

Default: Disabled (in most cases, but dependent on order code)

This setpoint is included in the Local Control Mode menu only if the 8 Series relay supports one breaker. This setpoint is omitted for relays supporting more than one breaker.

When the Select Before Operate (SBO) is disabled, and Local Mode is set, the breaker control can be performed directly by pressing the corresponding front panel pushbuttons (or those mounted in close proximity to the relay). No component selection or additional confirmation is needed. The same applies when the breaker control is in Remote mode.

Note:

When SBO is disabled, all local and remote flags such as blocking, bypassing, and tagging are reset.

Setting the SBO to Enabled enables the navigation and the selection of a component from the SLD, so that the pushbuttons Open or Close from the front panel (or those mounted in close proximity to the relay) can be used in Local Mode only after the component is selected. All flags such as blocking, bypassing and tagging can be initiated during this mode. Blocking and bypassing can also be initiated remotely, when in Remote Mode.

LOCAL MODE

Range: Off, On, Any FlexLogic operand

Default: On or Pushbutton 5 Off

The **LOCAL MODE** setting places the relay in Local Mode. The relay is in Remote mode, if not forced into Local mode by this setpoint (i.e. **LOCAL MODE** is disabled, or the selected input de-asserted). When in Local Mode, both Breakers and Disconnect switches can be controlled using the faceplate pushbuttons and SLD pushbuttons.

Moreover, if the relay is ordered with IEC 61850, it can enter into local control when operand programmed to IEC Local Status (Path: Product Setup\Communication\General) becomes true.

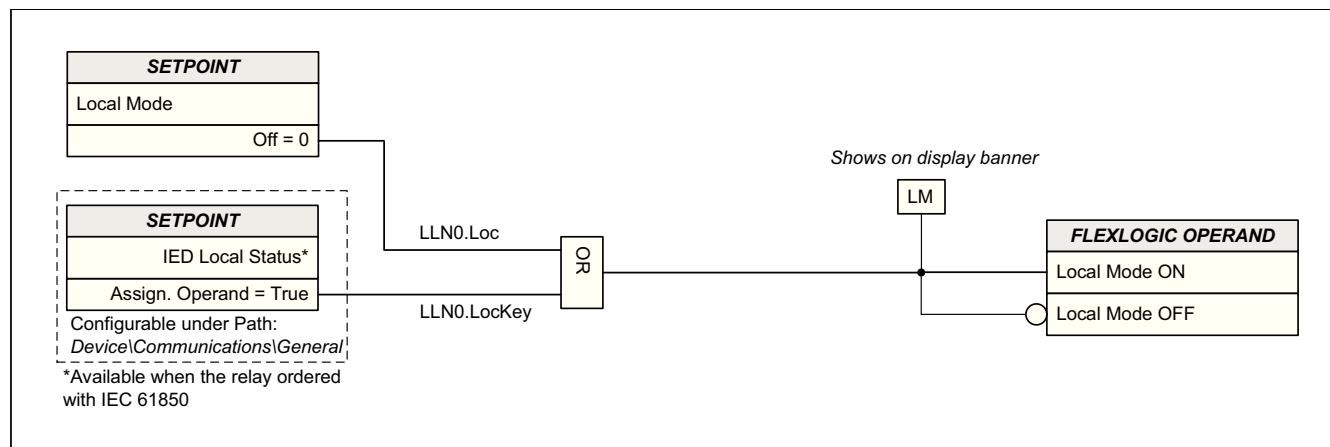


Figure 286: Local Mode On Logic

BKR /SW SELECT TIMEOUT

Range: 1 to 10 min in steps of 1 min

Default: 5 min

This setting specifies the available time for open/close commands, after a breaker or a disconnect switch has been selected in the single line diagram.

BKR(CONTACTOR) LOCAL OPEN

Range: Off, Any FlexLogic operand

Default: Pushbutton 1 ON

This setpoint is active, when Local Mode is activated. The breaker open command can be initiated by the selected configured pushbutton.

BKR(CONTACTOR) LOCAL CLOSE

Range: Off, Any FlexLogic operand

Default: Pushbutton 2 ON

This setpoint is active, when Local Mode is activated. The breaker close command can be initiated by the selected configured pushbutton.

Note:

When you close a selected breaker locally using a relay pushbutton, Synchrocheck supervision is used, as defined by the setting value configured for the setpoint **Close Sync Spvn BKR[X]** from the **BKR[X] Control** menu. For example, if you select the value **Sync 1 CIs Perm** in the **Close Sync Spvn BKR1** setpoint, initiation of the **BKR Local Close** command will not close BKR1 unless the Synchrocheck 1 permits closing by producing a Sync 1 CIs Perm signal

SW LOCAL OPEN

Range: Off, Any FlexLogic operand

Default: Pushbutton 1 ON

This setpoint is active, when Local Mode is activated. The switch open command can be initiated by the configured pushbutton. The setpoint appears in the Local Control Mode menu only when advanced SLD is selected when ordering the relay.

SW LOCAL CLOSE

Range: Off, Any FlexLogic operand

Default: Pushbutton 2 ON

This setpoint is active, when Local Mode is activated. The switch close command can be initiated by the programmed faceplate pushbutton. The setpoint appears in the Local Control Mode menu only when advanced SLD is selected when ordering the relay.

TAGGING

Range: Enabled, Disabled

Default: Enabled

When enabled, tagging control is enabled and the TAG key is displayed on the front panel interface. When a breaker or a switch is tagged both the local and remote control of the device is inhibited.

Note:

Tagging is applied only from the TAG key and is mostly used for maintenance purposes, and in general when either the open or close control must be inhibited. The tagging cannot be bypassed and can only be disabled (untagged) by pressing the TAG key again.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

11.6 BREAKER CONTROL

While the Local breaker control is generic as the same front panel pushbuttons are used for control of each selected breaker from the SLD, the remote breaker control requires programming of setpoints for each individual breaker. When the relay is in Remote mode (Local Mode set to Off, or the assigned operand de-asserted), the setpoint **REMOTE BLOCK OPEN** and **REMOTE BLOCK CLOSE** from the breaker menu can be used. These setpoints can be used to provide Interlocking to the breaker control by assigning appropriate operands. The control for each breaker can be programmed to have Bypass Remote Block Open and Bypass Remote Block Close inputs. These inputs can be programmed if temporary permission for open or close is required.

The remote breaker open and close controls, as well as the blocking and bypassing the block commands are executed as per the programmed setpoints from the Breaker Control menu.

Note:

The breaker flags **Remote Block Open**, **Remote Block Close**, **Bypass Rem Blk Open** and **Bypass Rem Blk Close** are inhibited, when the setpoint **SELECT BEFORE OPERATE** residing under Local Control Mode menu is disabled. The breaker remote open and close commands are operational.

Note:

An additional remote breaker status is available for HMI status only.

Path: *Setpoints > Control > Breaker Control > BKR1(X)*

REMOTE OPEN

Range: Off, Any FlexLogic operand

Default: Off

The setting specifies the input which, when asserted, initiates a Trip command to output relay selected to open the recloser. When the selected input is asserted, the Trip contact is energized and stays energized until the input drops off, the breaker opens, and the selected Trip seal-in time expires. This setpoint provides the flexibility to operate the Trip output relay by selecting an operand from the list of FlexLogic operands, contact inputs, virtual inputs, or remote inputs. For example the operand Trip Bus 1 Op can be selected to activate this output according to the Trip conditions configured under the Trip Bus 1 menu.

REMOTE CLOSE

Range: Off, Any FlexLogic operand

Default: Off

The setting specifies the input which, when asserted, initiates a Close command to the output relay selected to close the breaker. This setpoint provides flexibility to operate the output relay by selecting an operand from the list of FlexLogic operands.

REMOTE BLOCK OPEN

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the breaker from opening/tripping.

REMOTE BLOCK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the breaker from closing.

BYPASS REM BLK OPEN

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies selection of an input which when asserted bypasses the asserted remote block open signal. Open command is permitted for the breaker.

BYPASS REM BLK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies selection of an input which when asserted bypasses the asserted remote block close signal. Close command is permitted for the breaker.

CLOSE SYNC SPVN BKR

Range: Bypass, Sync 1 CIs Perm

Default: order code dependent (e.g. Bypass or Sync 1CIs Perm)

This setpoint selects whether or not the closing of the breaker is supervised by the synchrocheck function. For this purpose the Synchrocheck element must be enabled.

If the supervision is not bypassed and Close is applied for an application where the breaker is located on radial feeders, or the line is powered by one source only, the **DEAD SOURCE PERM** setpoint from the Synchrocheck menu shall not be disabled.

INTERLOCK OPEN

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Breaker Interlock status for "Open/Off" command from an IEC 61850 client. When the operand value is set (CBCILO1.EnaOpn.stVal: is set to false), the "Open/Off" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command.

INTERLOCK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Breaker Interlock status for "Close/On" command from an IEC 61850 client. When the operand value is set (CBCILO1.EnaCls.stVal: is set to false), the "Close/On" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command

BAY LEVEL 61850 AUTHORITY

Range: Off, Any FlexLogic operand

Default: Off

This selects an operand that indicates the Bay level authority status. The operand status is modeled in the IEC 61850 server using the respective breaker's CSWI Loc data object and the operand status is applied to the control authority table to determine the control authority for different levels. It is an Edge driven function.

STATION LEVEL 61850 AUTHORITY

Range: Off, Any FlexLogic operand

Default: Off

This selects an operand that indicates the Station level authority status. The operand status is modeled in the IEC 61850 server using the respective breaker's CSWI Loc data object and the operand status is applied to the control authority table to determine the control authority for different levels. It is an Edge driven function.

SWITCHING DEVICE IN LOCAL

Range: Off, Any FlexLogic operand

Default: Off

The selected operand indicates the Breaker control behavior from an IEC 61850 client. When the operand value is true, it indicates the Breaker is in Local mode and the remote commands from IEC 61850 client are blocked.

Note:

If this setting is not configured (i.e., remains Off), it is not applicable and not considered for enabling local mode. However, once an operand is assigned, local mode will be enabled only when the assigned operand becomes True, indicating that the switching device is in local mode.

BLK MANUAL CMD IN LOCAL

Range: Off, Any FlexLogic operand

Default: Off

When this setting is enabled, and the "Switching Device in Local" operand state is true (i.e. the Breaker is in Local mode and XCBR.Loc is True), manual commands originating from the front panel pushbuttons and graphical front panel are blocked. When disabled, manual commands originating from the relay are allowed even when the Breaker is in Local mode. This setting is available only if the order code includes IEC 61850.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

Logic diagram

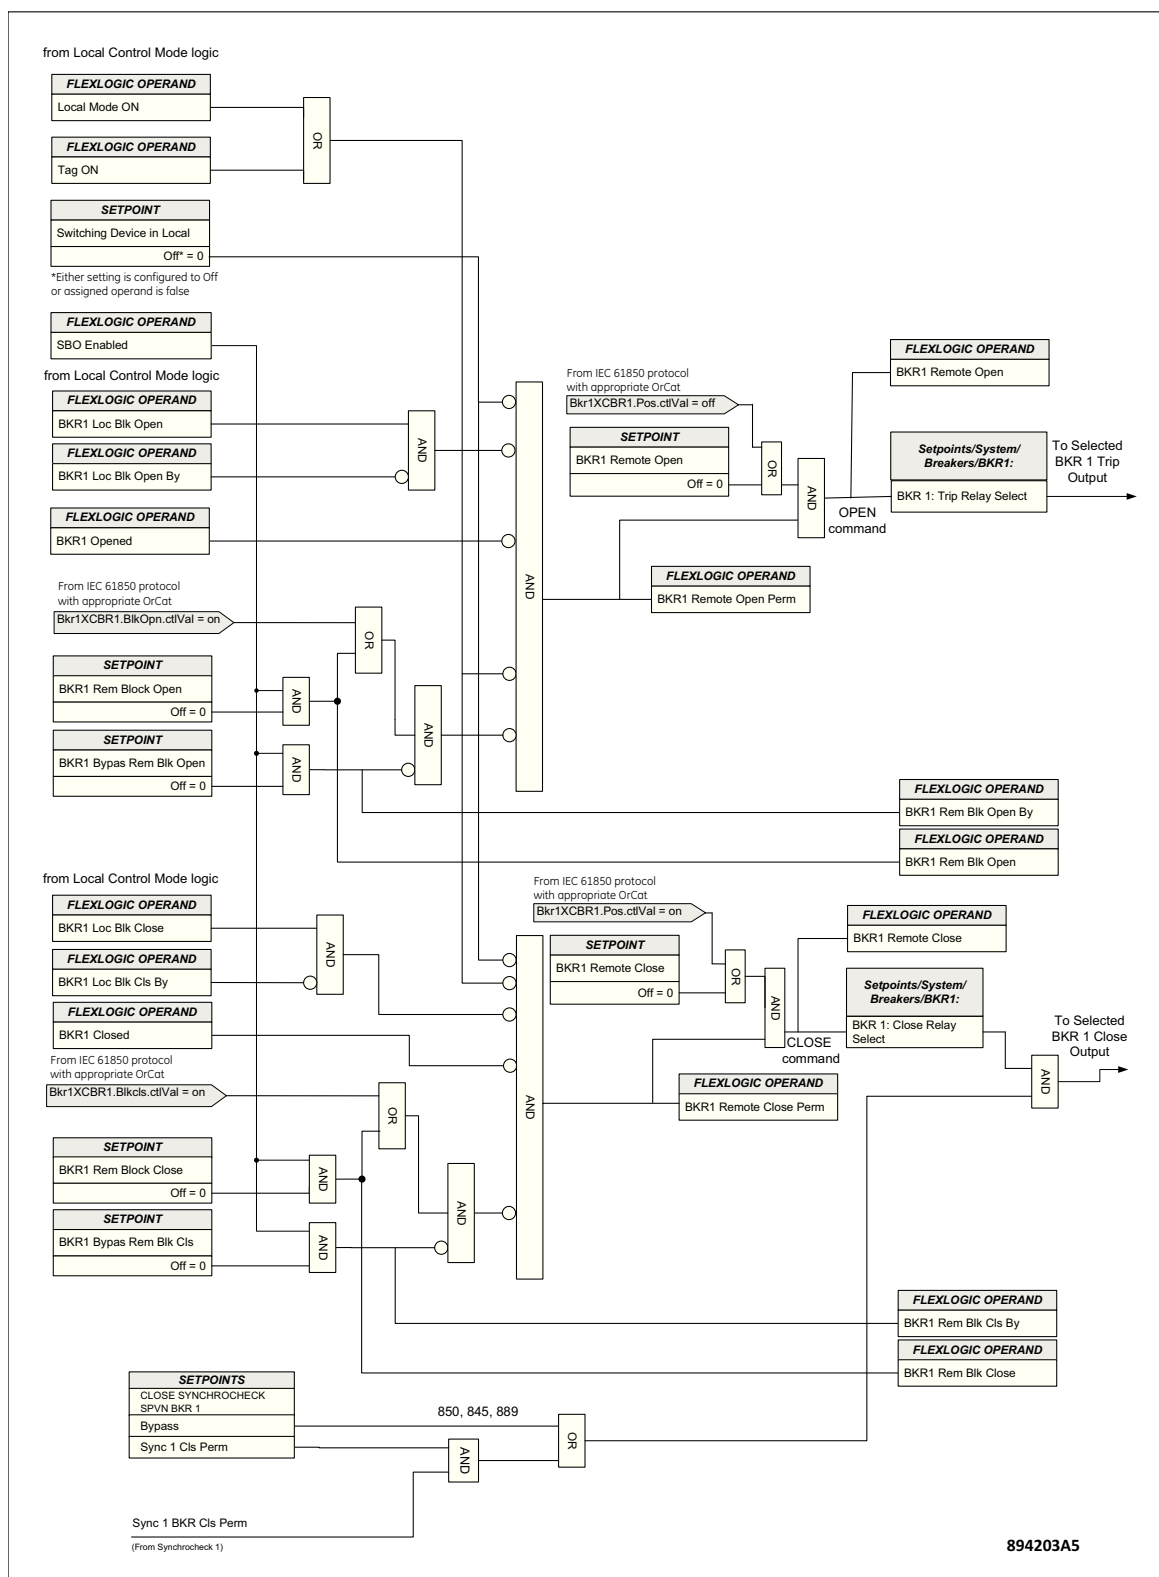


Figure 287: Breaker Control logic diagram

11.6.1 CONTROL AUTHORITY

This section describes the 61850 control authority feature implementation. Within the substation, control commands to the primary equipment, such as the breaker or the disconnect switch, can be originated from one of three levels – Bay, Station or Remote. The local/remote control feature (described in IEC61850 7-4: Annex B) allows users to enable or disable control authority from one or more of the three levels.

The table below shows the control authority applied in the 8 series.

	Switch	Bay control			Manual Control at D&I Platform (process) b	Non 61850 Bay Control (Front Panel PB, HMI)a	Command from			
							Bay	Station	NCC	
			Mode of switching authority for local control	Local Control Behavior			Control Authority At Station Level	OrCat		
		XCBR.Loc XSWI.Loc	LLN0.MltLev	CSWI.Loc			CSWI.LocSta	Local Ctl (Bay)	Station	Remote
Setting “Blk Manual Cmd in Local”	Setting "Switching Device in Local" c	Setting “Multilevel Control” = Enabled	Setting “Bay Level 61850 Authority” = 1 (ON)	Setting “Station Level 61850 Authority” = 1 (ON)						
Enabled	T	F	NA	NA	AA	NA	NA	NA	NA	
Disabled	T	F	NA	NA	AA	AA	NA	NA	NA	
NA	F	F	T	NA	AA	AA	AA	NA	NA	
NA	F	F	F	T	AA	AA	NA	AA	NA	
NA	T	F	F	F	AA	AA	NA	NA	AA	
Enabled	T	T	NA	NA	AA	NA	NA	NA	NA	
Disabled	T	T	NA	NA	AA	AA	NA	NA	NA	
	F	T	T	NA	AA	AA	AA	NA	NA	
	F	T	F	T	AA	AA	AA	AA	NA	
	F	T	F	F	AA	AA	AA	AA	AA	

11.7 SWITCH CONTROL (89)

The disconnect switch control provides local and remote opening and closing of the switches. The local control (Open, Close, Tag, Block, Bypass Block) is performed from the relay front panel pushbuttons when Local Mode is active, and the switch is selected from the displayed single line diagram. The remote switch open and close controls, as well as the blocking and bypassing the block commands are executed as per the programmed setpoints from the Switch Control menu. While the Local switch control is generic and the same front panel pushbuttons are used for every selected component from the SLD, the remote switch control requires programming of setpoints per each individual switch. These settings are defined in the menu of each individual switch control. When the relay is in Remote mode (Local Mode set to Off, or the assigned operand de-asserted), the setpoint **Remote Block Open** and **Remote Block Close** from the Switch Control menus can be used. These setpoints can be used to provide Interlocking to the switch control by assigning appropriate operands. The control for each disconnect switch can be programmed to have Bypass Remote Block Open and Bypass Remote Block Close inputs. These inputs can be programmed if temporary permission for open or close is required.

Note:

The switch **Remote Block Open**, **Remote Block Close**, **Bypass Remote Block Open** and **Bypass Remote Block Close** flags are inhibited, when the setpoint **Select Before Operate** residing under Local Control Mode menu is disabled. The remote open and close commands are still operational.

Path: *Setpoints > Control > Switch Control > SW 1(X) Control*

REMOTE OPEN

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies an input which when asserted initiates the open command to the switch. This setpoint is active only when the operand assigned for Local Mode is de-asserted, or Local Mode is set to "Off".

REMOTE CLOSE

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies an input which when asserted initiates the close command to the switch. This setpoint is active only when the operand assigned for Local Mode is de-asserted, or Local Mode is set to "Off".

OPEN SEAL-IN

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting specifies the seal-in time of the open commands due to an operator initiated manual or remote open command to the disconnect switch.

CLOSE SEAL-IN

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting specifies the seal-in time of the open commands due to an operator initiated manual or remote close command to the disconnect switch.

Note:

To maintain the close/open command for a certain time, do so by either using the seal-in timers *Open Seal-In* and *Close Seal-In*, or the setpoint "Seal-in" from the output relays, or FlexLogic.

REMOTE BLOCK OPEN

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the disconnect switch from opening.

REMOTE BLOCK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the disconnect switch from closing.

BYPASS REM BLK OPEN

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies the selection of an input which when asserted bypasses the block to the disconnect open control. The Open command is permitted.

BYPASS REM BLK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies the selection of an input which when asserted bypasses the block to the disconnect close control. The Close command is permitted.

INTERLOCK OPEN (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Switch Interlock status for "Open/Off" command from an IEC 61850 client. When the operand value is set (**SWICILO1.EnaOpn.stVal: is set to false**), the "Open/Off" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command.

INTERLOCK CLOSE (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Switch Interlock status for "Close/On" command from an IEC 61850 client. When the operand value is set (**SWICILO1.EnaCls.stVal: is set to false**), the "Close/On" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command

BAY LEVEL 61850 AUTHORITY (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Selects an operand, that indicates the Bay level authority status. The operand status is modelled in IEC61850 server using respective switch's CSWI Loc data object and the operand status is **applied to control authority table** (Table 1) to determine the control authority for different levels. It is Edge driven function.

STATION LEVEL 61850 AUTHORITY (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Selects an operand, that indicates the Station level authority status. The operand status is modelled in IEC61850 server using respective switch's CSWI LocSta data object and the operand **status is applied to control authority** table (Table 1) to determine the control authority for different levels. It is Edge driven function.

SWITCH LOCAL (not 869)

Range: Off, Any FlexLogic operand

Default: Off

The selected operand indicates the Switch control behavior from an IEC 61850 client. When the operand value is true, it indicates the Switch is in Local mode and the remote commands from **IEC 61850 client are blocked**.

Note: If this setting is not configured (i.e., remains Off), it is not applicable and not considered for enabling local mode. However, once an operand is assigned, local mode will be enabled only when the assigned operand becomes True, indicating that the switching device is in local mode.

BLK MANUAL CMD IN LOCAL (not 869)

Range: Off, Any FlexLogic operand

Default: Off

When this setting is enabled, and the Switch Local operand state is true (i.e. the Switch is in Local mode and XSWI.Loc is True), manual commands originating from the front panel pushbuttons, **graphical front panel are blocked**. When disabled, manual commands originating from the relay are allowed even when the Switch is in Local mode. This setting is available only if the order code includes IEC 61850.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

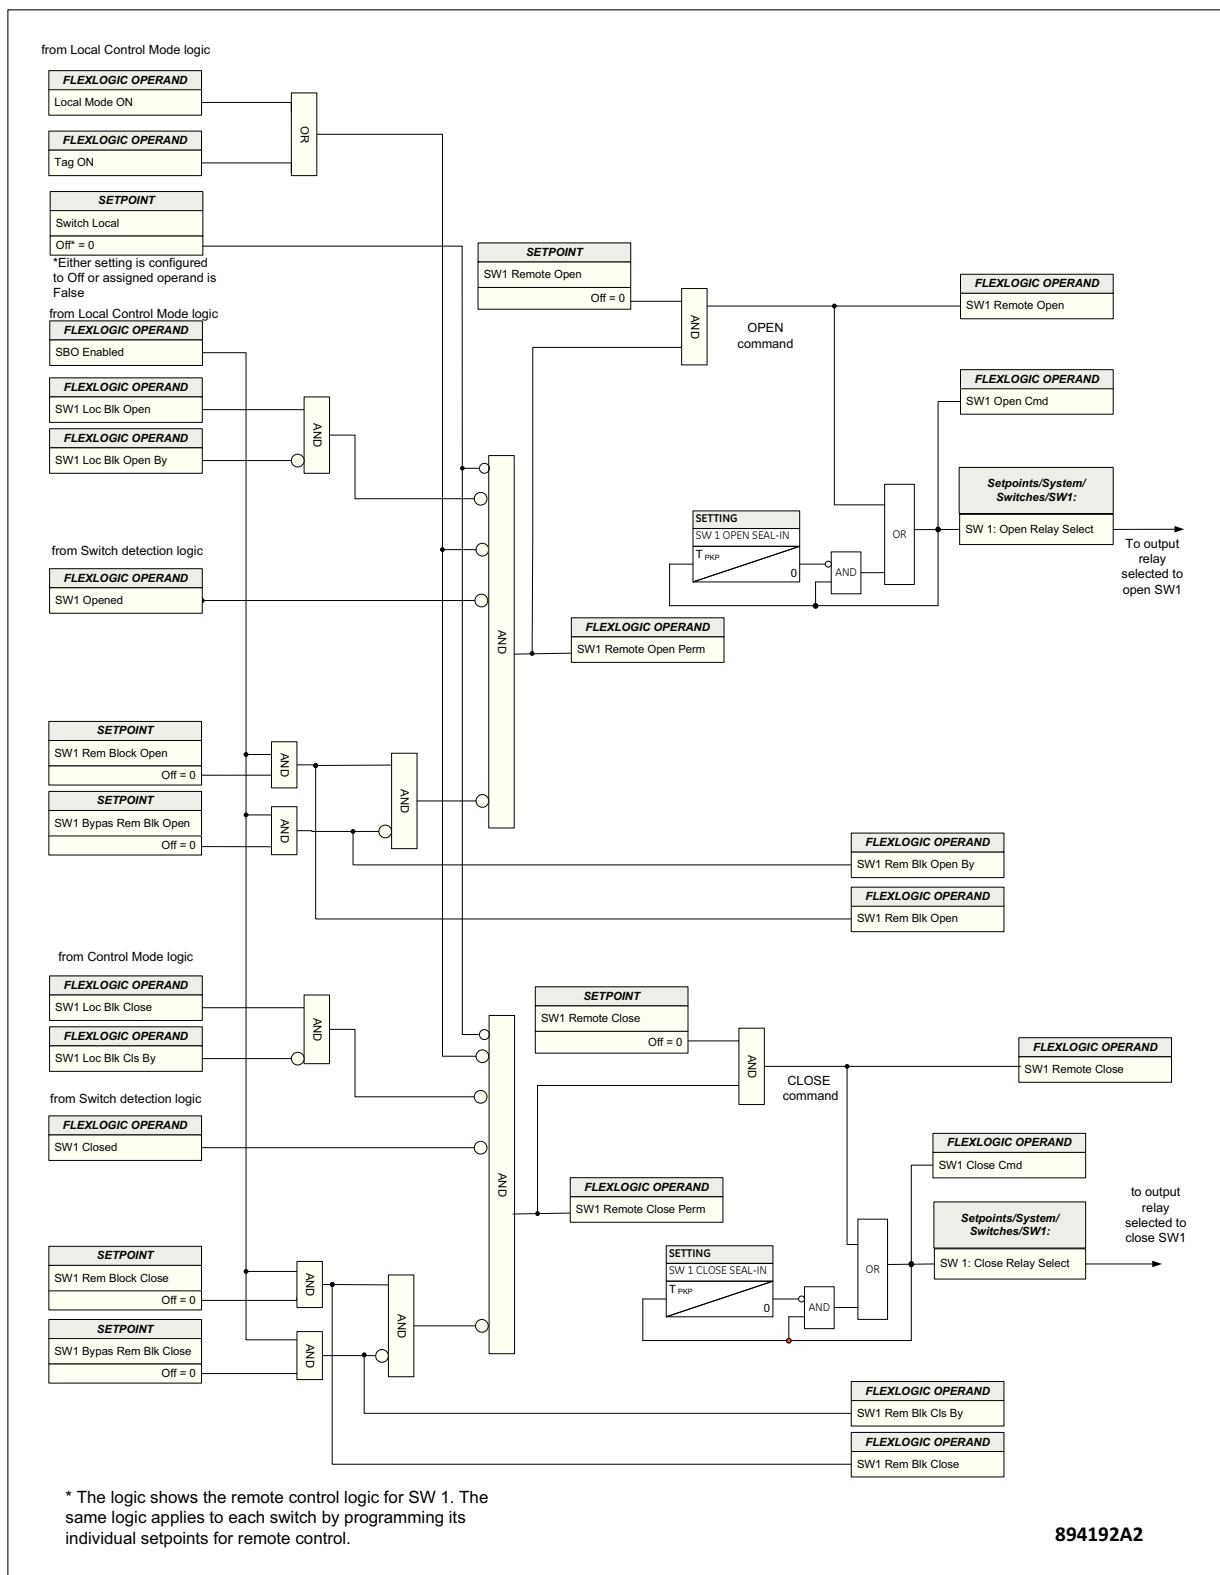


Figure 288: Switch Control logic diagram

11.8 VIRTUAL INPUT CONTROL

Path: *Setpoints > Control > Virtual Input Control*

FORCE VIRTUAL INPUT 1 (64)

Range: Off, On

Default: Off

The states of up to 64 Virtual Inputs are changed here. The current or selected status of the Virtual Input is also shown here. The status is a state OFF (logic 0) or ON (logic 1). If the corresponding Virtual Input selected under Setpoints/Inputs/Virtual Inputs is set to *Latched*, the ON command initiated from this menu stays on and the status of this Virtual Input is also on until the OFF command is received. If the Virtual Input type is *Self-Reset*, the command and status of this Virtual Input reverts to OFF after one evaluation of the FlexLogic equations.

11.9 TRIP BUS

Note:

Output Relays configured for Recloser operation are under the Trip Close Logic. Setpoints under Trip Bus are not applicable to the output relays set under Trip Close Logic.

The relay provides six identical Trip Bus elements. The Trip Bus element allows aggregating outputs of protection, control elements, inputs without using FlexLogic and assigning them in a simple and effective manner. Each Trip Bus can be assigned to trip, alarm or the other logic actions. Simple trip conditioning such as latch, delay, and seal-in delay are available.

Path: **Setpoints > Control > Trip Bus 1(X)**

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

Output relay #1, "Trip", will operate only when the Trip or Latched Trip function is selected and the Trip Bus X operates. If Latched Trip function is selected, the output relay will be ON even after the input conditions are cleared until reset command is issued. The "ALARM" LED will not turn on if the Trip Bus X operates when set to Trip or Latched Trip.

When the Alarm function is selected and the Trip Bus X operates, the "ALARM" LED will flash and will self-reset when the operating conditions are cleared.

When the Latched Alarm function is selected, and the Trip Bus X operates, the "ALARM" LED will flash during the Trip Bus X operating condition, and will be lit steadily after the conditions are cleared. The "ALARM" LED can be cleared by issuing a Reset command.

The output relay #1, "Trip", will not operate if the Latched Alarm or Alarm setting is selected. The Output relay #1 can be configured to operate using the Trip Bus X output operands and the FlexLogic.

When the Configurable function is selected, neither the Trip output, nor the "ALARM" LED will turn on automatically. These must be configured using their own menus and FlexLogic operands.

INPUT 1 to 16

Range: Off, Any FlexLogic operand

Default: Off

These settings select a FlexLogic operand to be assigned as an input to the Trip Bus.

LATCHING

Range: Enabled, Disabled

Default: Disabled

The setting enables or disables latching of the Trip Bus output. This is typically used when lockout is required or user acknowledgement of the relay response is required.

When the NV Latch is enabled using this setting, the PKP operand remains latched after the input trip condition becomes false, and PKP Delay timer continues to run. The Trip Bus operates once the Pickup Delay timer elapses to zero. Both the PKP and OP signals, along with the assigned output relay, will remain latched until the operand configured under the Reset setting becomes true.

It is important to clarify that the NV Latch is distinct from the Trip/Alarm Latched functionality specified under setting Function. The NV Latch holds both PKP and OP signals, including the output relay, whereas Trip/Alarm

Latch is applicable only to output signals, specifically Trip Bus OP and the assigned output relay. The Trip/Alarm Latch resets upon the initiation of the Reset command via the Reset button located on the front panel or through Device\Resetting. However, the NV Latch has a specific resetting input configured under the RESET setting.

If both the Trip/Alarm Latched Function and NV Latching are not required simultaneously, either the Function setting should be configured to Trip/Alarm rather than Latched Trip/Alarm, or NV Latching should be disabled.

RESET

Range: Off, Any FlexLogic operand

Default: Off

The trip bus output is reset when the operand assigned to this setting is asserted.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled


Default: Self-reset

Note:

The Any Trip operand must not be programmed as an input for the Trip Bus function.

Note:

When Trip Bus is programmed as Latched Trip, multiple resets are required to clear the trip

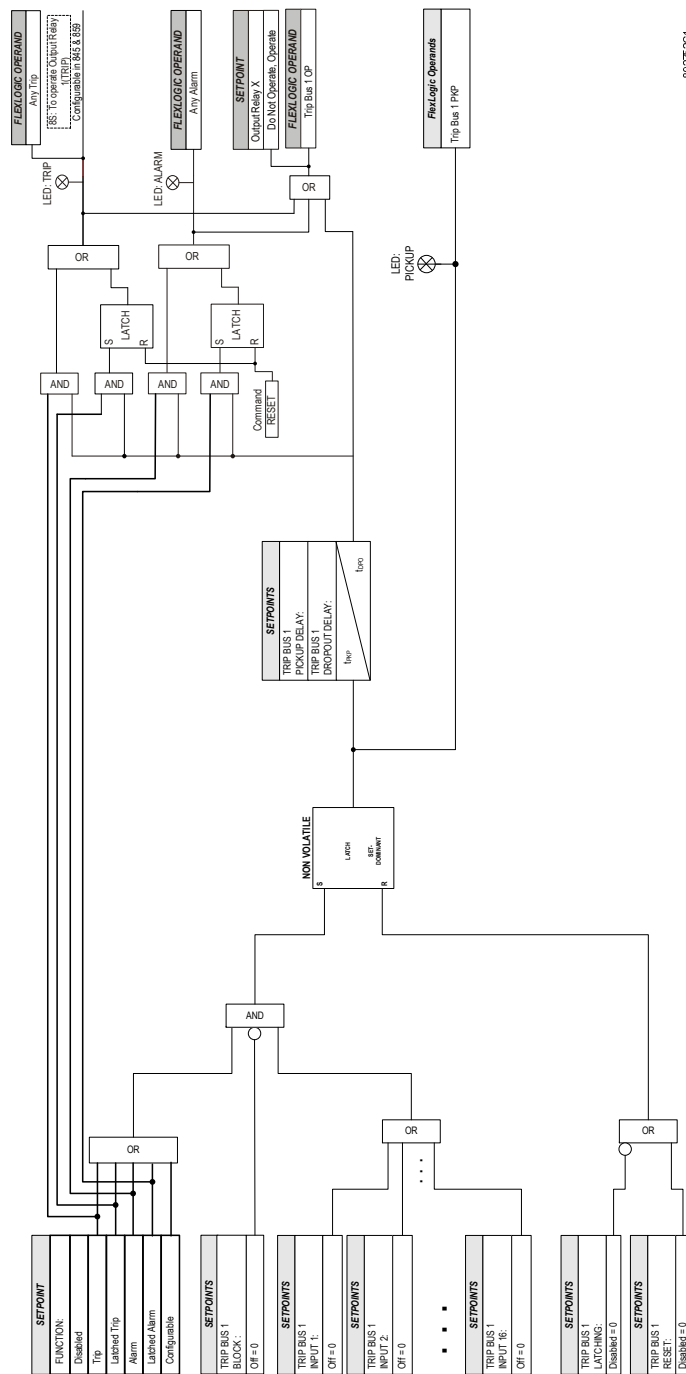

892752C1

Figure 289: Trip Bus logic diagram

11.10 BREAKER FAILURE (50BF)

The Breaker Failure element determines that a breaker signaled to Trip has not cleared a fault within a definite time. The Breaker Failure scheme must trip all breakers that can supply current to the faulted zone. Operation of a breaker Failure element causes clearing of a larger section of the power system than the initial Trip. Because Breaker Failure can result in tripping a large number of breakers and this can affect system safety and stability, a very high level of security is required.

The Breaker Failure function monitors phase and neutral currents and/or status of the breaker while the protection trip or external initiation command exists. If Breaker Failure is declared, the function operates the selected output relays, forces the autoreclose scheme to lockout and raises FlexLogic operands.

The operation of a Breaker Failure element consists of three stages: initiation, determination of a Breaker Failure condition, and outputs.

Initiation of a Breaker Failure

The protection signals initially sent to the breaker or external initiation (FlexLogic operand that initiates Breaker Failure) initiates the Breaker Failure scheme. The initiating signal should be sealed-in if primary fault detection can reset before the breaker failure timers have finished timing. The seal-in is supervised by current level, so it is reset when the fault is cleared. If required, an incomplete sequence seal-in reset can be implemented by using the initiating operand to initiate a FlexLogic timer, set longer than any breaker failure time, with the output operand selected to block the breaker failure scheme.

When the scheme is initiated, it sends a Trip signal after a pick-up delay, to the breaker initially signaled to Trip (this feature is usually described as re-trip). This reduces the possibility of widespread tripping that can result from a declaration of a failed breaker.

Determination of a Breaker Failure condition

The schemes determine a Breaker Failure condition supervised by one of the following:

- Current supervision only
- Breaker status only
- Both (current and breaker status)

Each type of supervision is equipped with a time delay, after which a failed breaker is declared and Trip signals are sent to all breakers required to clear the zone. The delays are associated with breaker failure timers 1, 2, and 3.

Timer 1 logic is supervised by current level only. If fault current is detected after the delay interval, an output is issued. The continued presence of current indicates that the breaker has failed to interrupt the circuit. This logic detects a breaker that opens mechanically but fails to interrupt fault current.

Timer 2 logic is supervised by both current supervision and breaker status. If the breaker is still closed (as indicated by the auxiliary contact) and fault current is detected after the delay interval, an output is issued.

Timer 3 logic is supervised by a breaker auxiliary contact only. There is no current level check in this logic as it is intended to detect low magnitude faults. External logic may be created to include control switch contact used to indicate that the breaker is in out-of-service mode, disabling this logic when the breaker is out-of-service for maintenance.

Timer 1 and 2 logic provide two levels of current supervision - high-set and low-set - that allow the supervision level to change (for example: from a current which flows before a breaker inserts an opening resistor into the faulted circuit to a lower level after resistor insertion). The high-set detector is enabled after the timeout of timer 1 or 2, along with a timer low-set delay that enables the low-set detector after its delay interval. The delay interval between high-set and low-set is the expected breaker opening time. Both current detectors provide a fast operating time for currents at small multiples of the Pickup value. The overcurrent detectors are required to operate after the Breaker Failure delay interval to eliminate the need for very fast resetting overcurrent detectors.

Outputs

The outputs from the schemes are:

- Re-trip of the protected breaker
- FlexLogic operand that reports on the operation of the portion of the scheme where high-set or low-set current supervision is used
- FlexLogic operand that reports on the operation of the portion of the scheme where 52b status supervision is used only
- FlexLogic operand that initiates tripping required to clear the faulted zone. The Breaker Failure output can be sealed-in for an adjustable period
- Target message indicating a failed breaker has been declared.

11.10.1 BREAKER FAILURE SETUP

Path: **Setpoints > Control > Breaker Failure > BF1(X) > BF1(X) Setup**

FUNCTION

Range (3.xx): Disabled, Retrip, Alarm, Latched Alarm, Configurable

Range (4.10): Disabled, Retrip, Latched Retrip, Alarm, Latched Alarm, Configurable

Default: Disabled

When a *Retrip* function is selected and Breaker Failure is initiated (with re-trip current supervision), the output relay Trip operates but the alarm LED does not turn on.

SIGNAL INPUT (not used in 859)

Range: dependent upon the order code

Default: CT Bank 1-J1

USE SEAL-IN

Range: Yes, No

Default: Yes

If set to *Yes*, the element will only be initiated if current flowing through the breaker is above the supervision pickup level.

PH RETRIP SUPERV PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the phase current Retrip level, which when exceeded after Breaker Failure initiation, will re-trip its own breaker. The setting is set to detect the lowest expected fault current on the protected circuit.

NTRL RETRIP SUPERV PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

This setpoint specifies the neutral current Retrip level, which when exceeded after Breaker Failure initiation, will Retrip its own breaker. The setting detects the lowest expected fault current on the protected circuit. Neutral Retrip current supervision is used to provide increased sensitivity.

RETRIP PICKUP DELAY

Range: 00.000 to 6000.000 s in steps of 0.001 s

Default: 0.033 s

This setting specifies a pickup delay for the re-trip command. This delay should be set longer than the possible spurious contact input activation duration due to transients or temporary dc grounds by taking the contact input de-bounce time into account. This will avoid re-trip operation for such transients.

SUPERVISION

Range: Current, 52b & Current, 52b

Default: Current

The setpoint specifies the type of supervision of the Breaker Failure element. There are three options: current only, breaker status only, or both.

BREAKER CLOSED

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand (auxiliary switch contact) to indicate that the circuit breaker is closed.

T1 PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.120 s

The setting provides a delay for Timer 1 logic which is supervised with current supervision only. The timer is set to the expected opening time of the circuit breaker, plus a safety margin intended to overcome the relay measurement and timing errors as well as relay processing time and current supervision reset time. In a microprocessor relay this time is not significant. The current magnitude ramps-down to zero in $\frac{3}{4}$ of a power cycle after the current is interrupted.

Note:

In bulk oil circuit breakers, the interrupting time for currents less than 25% of the interrupting rating can be significantly longer than the normal interrupting time.

T2 PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.120 s

The setting provides a delay for Timer 2 logic which is supervised with current supervision and breaker status (52b indication). The timer is set to the expected opening time of the circuit breaker, plus a safety margin intended to overcome the relay measurement and timing errors, relay processing time, current supervision reset time, and the time required for the breaker auxiliary contact to open.

T3 PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.120 s

The setting provides a delay for Timer 3 logic which is supervised with breaker status only (52b indication). The timer is set to the expected opening time of the circuit breaker, plus a safety margin intended to overcome the relay timing errors, and the time required for the breaker auxiliary contact to open.

PHASE HIGHSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the phase current output supervision level. The setting detects the lowest expected fault current on the protected circuit.

NEUTRAL HIGHSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the neutral current output supervision level. The setting detects the lowest expected fault current on the protected circuit. Neutral current supervision is used to provide increased sensitivity.

LOWSET DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

The setting provides the lowest current supervision Pickup. The setting is used in applications where a change in supervision current level is required (for example: breakers with opening resistors).

The lowest delay (interval between high-set and low-set) is the expected breaker opening time.

PHASE LOWSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the phase current output supervision level. The setting detects the lowest expected fault current on the protected circuit where significant change in current level is expected (for example: breakers with opening resistors).

NEUTRAL LOWSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the neutral current output supervision level. The setting detects the lowest expected fault current on the protected circuit where significant change in current level is expected (for example: breakers with opening resistors). Neutral current supervision is used to provide increased sensitivity.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The setting is used to set the period of time for which the Breaker Fail output is sealed-in. This timer must be coordinated with the automatic reclosing scheme of the failed breaker, to which the Breaker Failure element sends a cancel reclosure signal. Reclosure of a remote breaker can also be prevented by holding a transfer Trip signal on for longer than the reclaim time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

11.10.2 INITIATE

Path: Setpoints > Control > Breaker Failure 1(X) > BF1(X) Initiate

EXTERNAL INITIATE

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand that initiates the Breaker Failure scheme; typically the trip signals from external devices.

Note:

The trip signals from internal protection functions may be used with the help of FlexLogic, but for easier setting the Breaker Failure function is provided with a BF1 INITIATE submenu.

INITIATE IN1(15)

Range: Off, Any FlexLogic operand

Default: Ph TOC 1 OP

The setpoint selects the FlexLogic operand that initiates the Breaker Failure scheme; typically the trip signals from internal protection functions.

Logic diagram



Figure 290: Breaker Failure logic diagram

11.11 ARC FLASH PROTECTION

The Arc Flash Protection module supports fast and secure protection against an arc flash event for a safe working environment. The relay provides two Arc Flash protection elements (AF1 and AF2). Each element can utilize up to four arc flash sensor inputs. The relay supports two different arc flash sensor types, point and loop. Arc Flash protection uses up to eight light detection fiber sensors and a dedicated high-speed instantaneous overcurrent element with secure Finite Response Filtering.

Light from the light sensor AND logic with high-speed overcurrent ensures fast and secure operation. Further enhancement includes continuous monitoring of individual light sensors with self-test trouble indication. Eight Arc Flash elements with self-test from the individual light sensors can be used to design flexible Arc Flash protection schemes for different configurations depending upon the physical locations of the sensors. Each individual element can also provide a higher level of redundancy/reliability of the system.

In case any issues with the sensors are detected (i.e. failure of a self-test), the corresponding light sensor trouble operand (Light Sensor # Trouble) is asserted. Very fast detection of the Arc flash light event is also possible using Light as the only detection parameter for alarm purposes. In addition, customized logic can be designed using individual AF1 Light # PKP and Arc Flash 1 S# OP operands from different light sensors in the FlexLogic engine.

Note:

When using arc flash protection, the critical failure relay must be connected to annunciate the status of the device.

Path: *Setpoints > Control > Arc Flash > Arc Flash 1*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

The selection of Trip, Alarm, Latched Alarm or Configurable setting enables the HS Phase/Ground IOC function.

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1 - J1

This setting provides the selections for the current input bank. The default bank names can be changed in:

Setpoints > System > Current Sensing > [Name] > CT Bank Name.

HS PHASE PKP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 2.000 x CT

HS GROUND PKP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

Note:

The value of HS Gnd PICKUP can be set to a very high value, when only the HS Phs element needs to be applied for Arc Flash detection.

Note:

The HS Ground PKP setting is not available if the order code is selected to have just one sensitive ground current input on the J1-Bank (4-0B in the order code).

LIGHT SENSOR 1(4)

Range: Disabled, Enabled

Default: Disabled

Light Sensor 1 (4) is the setting used to enable/disable a specific light sensor. It is important to disable each unused light sensors, even if nothing is connected to it. If not, the Light Sensor 1 (8) Trouble operands and Light Sensor Trouble operand will engage for the unused sensors..

Note:

No light settings are needed due to the automatic threshold capabilities included in the relay, described in the next section.

SEAL-IN TIME

Range: 0.00 to 10.00 s in steps of 0.01 s

Default: 0.00 s

This setting specifies length of time to extend the Arc Flash S1(4) OP and Arc Flash OP operands by a time beyond which any of the light sensors AND any of the HS current elements are picked up. The recommended time is the expected breaker operating time plus some margin, typically 30%.

Note:

The Arc Flash OP operand is typically much shorter than the actual breaker operating time; hence there is a risk that the relay trip contact could attempt to open the DC trip circuit long before the breaker auxiliary contacts open the DC trip circuit, which could damage the relay trip contact. Hence the need for this seal-in delay: during an actual arc flash event, the light pulse can be as short as 20msec. The arc flash logic of the relay extends the arc flashlight operands by 20msec of a cycle for added dependability, however this is still much shorter than the expected breaker operating time. With the Seal-in Time setting, the Arc Flash OP operand can be coordinated with expected HS current operating time, which is very similar to the breaker trip time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

This setting enables or disables the events of the Arc Flash function.

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched

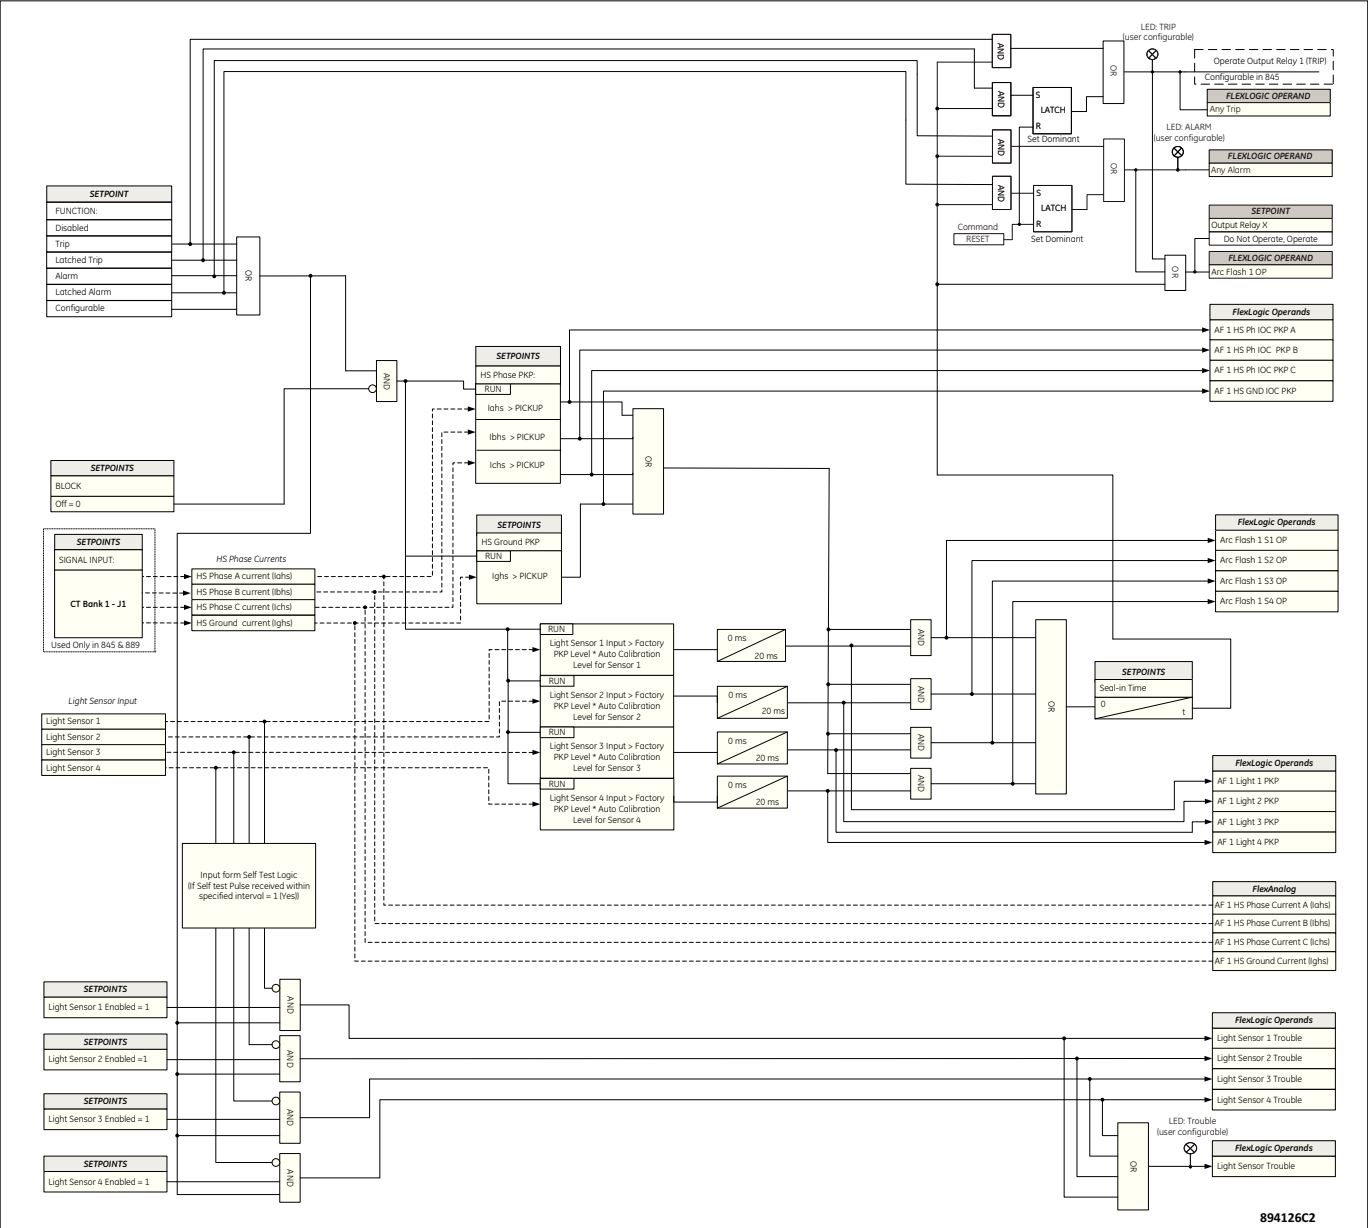


Figure 291: Arc Flash logic diagram

11.12 SYNCHROCHECK (25)

The synchronism check (Synchrocheck) function is intended for supervising the paralleling of two parts of a system which are to be joined by the closure of a circuit breaker. The Synchrocheck elements are typically used at locations where the two parts of the system are interconnected.

If a breaker can be a paralleling point between two generation sources, it is common practice to automatically perform a check to ensure the sources are within allowable voltage limits before permitting closing of the breaker. Synchrocheck provides this feature by checking that the bus and line input voltages are within the programmed differentials of voltage magnitude, phase angle position, and frequency. If this feature is enabled, the check will be performed before either manual close or automatic reclose signals can operate the Close Output Relay. The Synchrocheck programming can allow permitted closing if either or both of the sources are de-energized.

Synchrocheck verifies that the voltages (BUS and LINE) on the two sides of the supervised circuit breaker are within set limits of magnitude, angle and frequency difference. The time during which the two voltages remain within the admissible angle difference is determined by the setting of the phase angle difference $\Delta\Phi$ (without angle compensation) and the frequency difference ΔF (slip frequency). It can be defined as the time it would take the voltage phasor, BUS or LINE, to traverse an angle equal to $2 \times \Delta\Phi$ at a frequency equal to the frequency difference ΔF . This time can be calculated by:

$$T = \frac{1}{\frac{360^\circ}{2 \times \Delta\Phi} \times \Delta F}$$

where:

- $\Delta\Phi$ = phase angle difference in degrees
- ΔF = frequency difference in Hz.

Example: For the values of $\Delta\Phi = 30^\circ$ and $\Delta F = 0.1$ Hz, the time during which the angle between the two voltages is less than the set value is:

$$T = \frac{1}{\frac{360}{2 \times 30} \times 0.1} = 1.66 \text{ sec}$$

As a result the breaker closing time must be less than this computed time, to successfully close and connect both energized sides.

If one or both sides of the synchronizing breaker are de-energized, the Synchrocheck programming can allow for closing of the circuit breaker using undervoltage control to by-pass the Synchrocheck measurements (dead source function).

The measured bus and line input voltage magnitudes, angles and frequencies, and calculated differential values of angle magnitude and frequency are available as actual values under **Metering > Synchrocheck 1**.

The selection of *Aux VT Connection* under **Setpoints > System > Voltage Sensing** determines the voltage used for Synchrocheck as derived from the three-phase voltages available on the relay. For example, if the Aux VT Connection is selected as Vab, and the three-phase VTs are connected in Wye configuration, the relay computes delta voltage Vab as well, and uses it for Synchrocheck.

Note:

*The Synchrocheck cannot be performed if the three-phase VTs are Delta connected, and the Wye single voltage input is selected under **Aux VT connection**. Wye voltages cannot be calculated from Delta connected VTs.*

Note:

If both Line and Bus sides are three-phase VTs, the VT types must match, i.e. either both Line and Bus Volt inputs are Delta or both are Wye. If both sides are single-phase Aux VT inputs, then both Aux VT connection types must match, i.e. if the Line side Aux VT type is V_{ab} , then the Bus side Aux VT type must be V_{ab} . Aux VT connection V_n is not a valid type for synchrocheck.

Caution:

If the VT types on the Line and Bus side do not match, as specified above, the Synchrocheck does not run even when the Function is set to Enabled.

Note:

Once the Synchrocheck function is programmed, it will perform a voltage input selection check, to determine that the voltage magnitudes are not different by more than 5%. This check depends only on the settings entered for phase and auxiliary VTs under **Setpoints > System > Voltage Sensing**. If the difference between the selected voltage inputs by calculation is bigger than 5%, the Synchrocheck will not work. For example, the phase VT can be set to Wye connection with secondary voltage of 66.4V. The Aux. VT can be connected between phase A to B with the secondary voltage set to 115V. Then, one of the Synchrocheck inputs can be set as the Wye connected phase voltage bank, and the other input can be the Aux. VT with voltage V_{ab} . Since the difference between the computed V_{ab} input and the Aux. VT setting is 0%, the Synchrocheck will work. However, if this difference is bigger than 5%, the Synchrocheck will not work.

Path: **Setpoints > Control > Synchrocheck 1(X)**

FUNCTION

Range: Disabled, Enabled

Default: Disabled

BUS VOLTS INPUT

Range: dependent upon the order code

Default: J2-3VT

The setting provides selection of the Bus Volts input; either three-phase voltages from the three-phase VTs connected to the relay, or a single voltage from the Auxiliary VT also connected to the relay Aux VT input. The setup of these VTs is outlined under **Setpoints > System > Voltage Sensing**.

LINE VOLTS INPUT

Range: dependent upon the order code

Default: J2-Vx

The setting provides selection of the Line Volts input; either three-phase voltages from the three-phase VTs connected to the relay, or a single voltage from the Auxiliary VT also connected to the relay Aux VT input. The setup of these VTs is outlined under **Setpoints > System > Voltage Sensing**.

MAX FREQ DIFFERENCE

Range: 0.01 to 5.00 Hz in steps of 0.01 Hz

Default: 0.20 Hz

The setting selects the maximum frequency difference in 'Hz' between the two sources. A frequency difference between the two input voltage systems below this value is within the permissible limit for synchronism.

MAX ANGLE DIFFERENCE

Range: 1 to 100° in steps of 1°

Default: 20°

The setpoint selects the maximum angular difference in degrees between the two sources. An angular difference between the two input voltage phasors below this value is within the permissible limit for synchronism.

MAX VOLT DIFFERENCE

Range: 10 to 600000 V in steps of 1 V

Default: 2000 V

The setpoint selects the maximum primary voltage difference in volts between the two sources. A primary voltage magnitude difference between the two input voltages below this value is within the permissible limit for synchronism.

MAX FREQ HYSTERESIS

Range: 0.01 to 0.10 Hz in steps of 0.01 Hz

Default: 0.05 Hz

The setpoint specifies the required hysteresis for the maximum frequency difference condition. The condition becomes satisfied when the frequency difference becomes lower than SYNC1 MAX FREQ DIFFERENCE. Once the Synchrocheck element has operated, the frequency difference must increase above the SYNC1 MAX FREQ DIFFERENCE + SYNC1 MAX FREQ HYSTERESIS sum to drop out (assuming the other two conditions, voltage and angle, remain satisfied).

DEAD SOURCE PERM

Range: Disabled, LB & DL, DB & LL, DB & DL, DB OR DL, DB XOR DL

Default: Disabled

The setpoint selects the combination of dead and live sources that bypass the synchronism check function and permit the breaker to be closed when one or both of the two voltages (Bus Voltage or/and Line Voltage) are below the maximum voltage threshold. A dead or live source is declared by monitoring the voltage level. Six options are available.

The voltage levels that determine whether a source is dead or live are configurable in the four setpoints following this one.

The DEAD SOURCE PERMISSION range is as follows:

Disabled: Dead source permissive is disabled.

LB & DL: Live Bus AND Dead Line. "DB & LL": Dead Bus AND Live Line.

DB & DL: Dead Bus AND Dead Line.

DB OR DL: Dead Bus OR Dead Line.

DB XOR DL: Dead Bus XOR Dead Line (one source is Dead and one is Live).

Note:

For an application where the breaker is located on radial feeders, or line is powered by one source only, the DEAD SOURCE PERM setpoint shall not be disabled.

LIVE BUS VOLTS MIN

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.80 x VT

The setpoint establishes a minimum voltage magnitude for the Bus Voltage. Above this magnitude, the Bus Voltage input used for Synchrocheck is considered “Live” or energized.

LIVE LINE VOLTS MIN

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.80 x VT

The setpoint establishes a minimum voltage magnitude for the Line Voltage. Above this magnitude, the Line Voltage input used for Synchrocheck is considered “Live” or energized.

DEAD BUS VOLTS MAX

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

The setpoint establishes a maximum voltage magnitude for the Bus Voltage. Below this magnitude, the Bus Voltage input used for Synchrocheck is considered “Dead” or de-energized.

DEAD LINE VOLTS MAX

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

This setpoint establishes a maximum voltage magnitude for the Line Voltage. Below this magnitude, the Line Voltage input used for Synchrocheck is be considered “Dead” or de-energized.

SYNCCHECK BYPASS

Range: Off, Any FlexLogic operand

Default: Off

The Synchrocheck is bypassed when the selected operand is asserted. Typically BKR(X) Disconnected is used to bypass Synchrocheck.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Synchrocheck is blocked when the selected operand is asserted. Typically 52a (the circuit breaker closed) contact is used to block Synchrocheck (Synchrocheck is needed only when the circuit breaker is open). Synchrocheck can be also blocked when the relay is tripping.

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

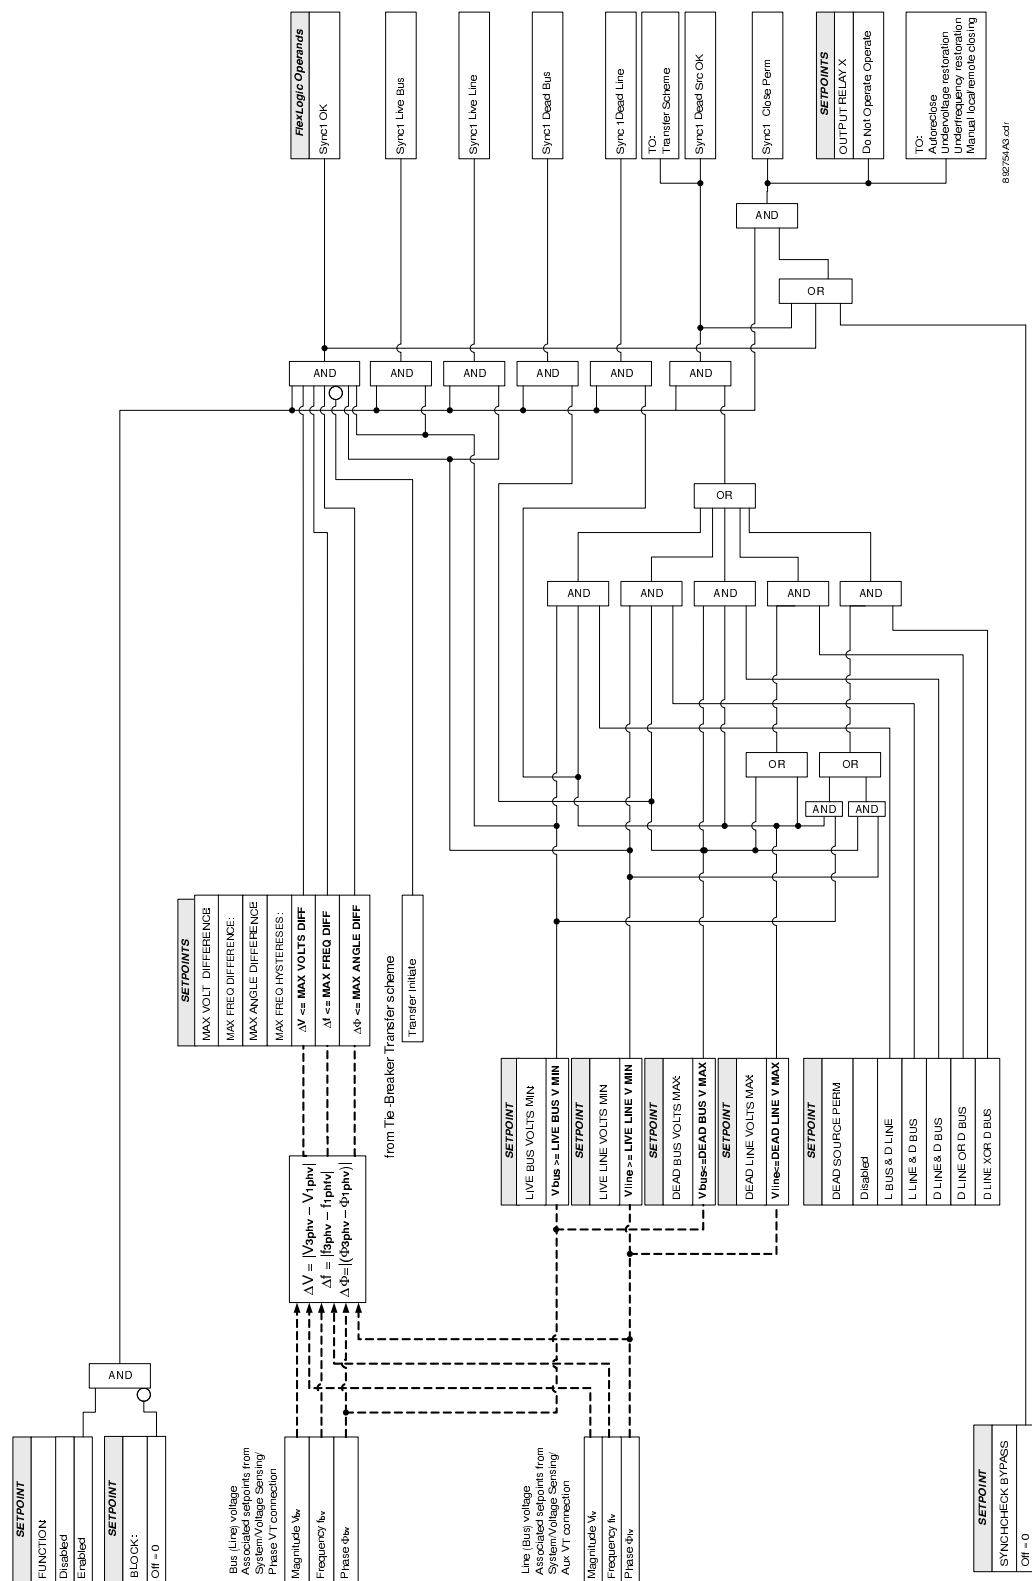


Figure 292: Synchroncheck logic diagram

11.13 VT FUSE FAILURE (VTFF)

The VT Fuse Failure detector can be used to raise an alarm and/or block elements that may operate incorrectly for a full or partial loss of AC potential caused by one or more blown fuses. Some elements that might be blocked (via the BLOCK input) are voltage restrained overcurrent, directional current, power functions. This loss can be caused by a blown primary voltage transformer fuse (or fuses), or by voltage transformer secondary circuit protection fuse failure.

There are two classes of fuse failure that may occur:

1. Class A: loss of one or two phases
2. Class B: loss of all three phases.

Different means of detection are required for each class. An indication of a Class A failure is a significant level of negative sequence voltage, whereas an indication of a Class B failure is the presence of positive sequence current and an insignificant amount of positive sequence voltage. These noted indications of fuse failure could also be present when faults are present on the system, so a means of detecting faults and inhibiting fuse failure declarations during these events is provided.

Once the fuse failure condition is declared, it is sealed-in until the cause that generated it disappears. An additional condition is introduced to inhibit a fuse failure declaration when the monitored circuit is de-energized: positive sequence voltage and current are both below threshold levels.

The settings of this function are applied to three-phase voltage input (supervised with positive, negative and zero sequence current components) to produce an Operate flag.

This function also provides detection of the VT neutral wire open condition using the third harmonic content in the 3V0 (i.e. $V_a + V_b + V_c$) signal. Under neutral wire open condition, 3V0 contains small fundamental content under balance load condition but contains significant 3rd harmonic contents regardless of the load condition (balance or imbalance).

11.13.1 VT FUSE FAILURE SETTINGS

Path: *Setpoints > Control > VT Fuse Failure 1 (2)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

VT INPUT

Range: Dependent upon the order code

Default: Ph VT Bnk1-J2

CT INPUT

Range: Dependent upon the order code

Default: CT Bnk1-J1

TIME DELAY

Range: 0 to 60000 s in steps of 0.1 s

Default: 0.1 s

This setting can be used to avoid fuse failure detection in the case of sudden loss of voltage when the current is zero (breaker remains in open condition) and the transient negative sequence voltage appears. This setting should be used where the VT is on the Bus side, in which case the relay may detect voltage loss when the breaker is open.

Operate Delay:

Range: 1 to 10 sec in steps of 1 sec

Default: 5 Sec

This setting determines the operate time-delay upon detection of a VTS condition.

VT Ntrl Wire Det

Range: Disabled, Enabled

Default: Disabled

This setting enables and disables the VT neutral wire open detection function. When the VT is connected in Delta, do not enable this function because there is no neutral wire for Delta connected VT.

VT Ntrl Wire PKP

Range: 0.0 to 100.0% in steps of 0.1 %

Default: 10.0 %

This setting specifies the pickup level of 3rd harmonic of 3V0 signal for the VT neutral wire open detection logic to pick up. % is calculated based on the Phase VT Secondary

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

Figure 293:

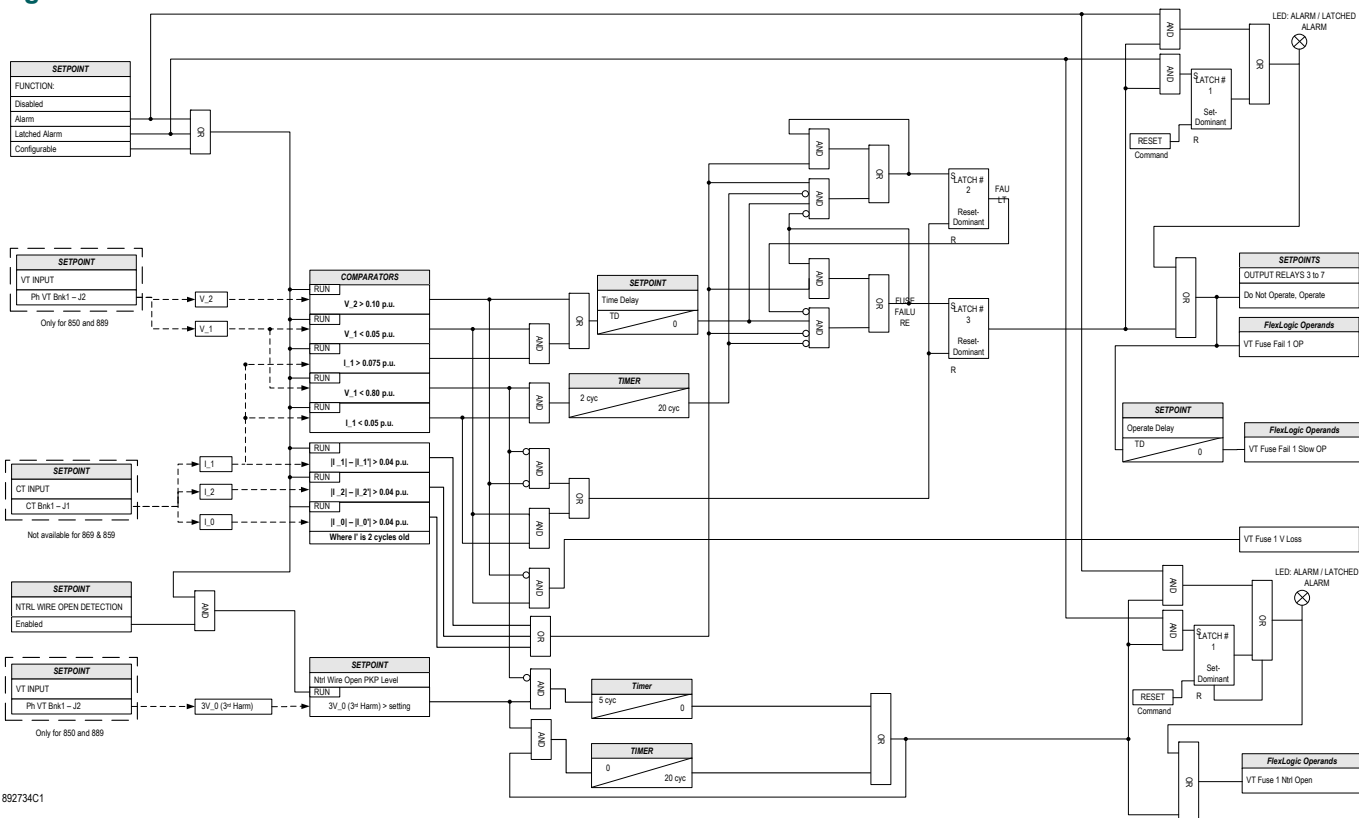


Figure 294: VT Fuse Failure logic diagram

11.14 DIGITAL ELEMENTS

The 8Series has 64 identical digital elements available. A digital element can monitor any FlexLogic operand and present a target message and enable events recording depending on the output operand state. The digital element settings include:

- a name to be referenced in any target message
- a blocking input from any selected FlexLogic operand
- a timer for pickup and reset delays for the output operand

Digital elements run once per power system cycle. As such they can easily fail to react to an input signal or a block signal with a duration less than one power system cycle. This also means that digital element output can react up to one power system cycle later than the pickup and reset delay settings indicate. Therefore, do not use digital elements:

- with transient signals, such as communications commands.
- where random delays of up to one cycle cannot be tolerated, such as in high speed protection.

Example : Trip circuit integrity monitoring

In many applications it is desirable to monitor the breaker trip circuit integrity such that problems can be detected before a trip operation is required. The circuit is considered to be healthy when the voltage monitor connected across the trip output contact detects a low level of current (Contact output voltage is not zero), well below the operating current of the breaker trip coil. If the circuit presents a high resistance, the trickle current falls below the monitor threshold, and an alarm is declared.

In most breaker control circuits, the trip coil is connected in series with a breaker auxiliary contact, which is open when the breaker is open. To prevent unwanted alarms in this situation, the trip circuit monitoring logic must include the breaker position.

Assume that output 1 is a trip contact. Using the output settings, this output is given an ID name; for example, **Cont Op 1**. Assume a 52a breaker auxiliary contact is connected to contact input 1 to monitor breaker status (Block when contact input 1 is OFF).

Using the contact input settings, this input is given a name, for example, **CI 1**, and is set *On* when the breaker is closed. The function is blocked when breaker is open, i.e. **CI 1** is Off. The settings to use digital element 1 to monitor the breaker trip circuit are shown below:

SETTING	PARAMETER
Function	Enabled
Name	Bkr Trip Cct Out
Input	Cont Op 1
Pickup Delay	0.200 s
Dropout Delay	0.100 s
Relays	Relay : Disabled
Block	CI 1 Off
Target	Self-Reset
Events	Enabled

NAME

Range : 13 alphanumeric characters

Default: Digital Elem1

Assign a user-defined name to the Digital Element. This Name is used In Flexlogic operands, Target messages, a blocking input from any selected flexlogic operands, and a timer for pickup and reset delays for the output operands.

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm or Configurable

Default: Disabled

INPUT

Range : Off, Any FlexLogic operand

Default: Off

Selects a FlexLogic operand to be monitored by the digital element.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000

Sets the required time delay from element pickup to element operation. If a pickup delay is not required, set to "0.000," To avoid nuisance alarms, set the delay greater than the operating time of the breaker.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000

Sets the dropout time delay to reset. If a reset delay is not required, set to "0.000."

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset



889-1601-0320 638

CHAPTER 12

FLEXLOGIC

12.1 CHAPTER OVERVIEW

This chapter describes the FlexLogic and Testing setpoints. FlexLogic setpoints provide access to the variable logic used with the relay. Testing setpoints include simulated current and voltage inputs, and test operations for LEDs, input contacts, and output relays.

This chapter contains the following sections:

Chapter Overview	640
FlexLogic	641

12.2 FLEXLOGIC

To provide maximum flexibility, the arrangement of internal digital logic combines fixed and user-programmed parameters. Logic upon which individual features are designed is fixed, and all other logic, from digital input signals through elements or combinations of elements to digital outputs, is variable. The user has complete control of all variable logic through FlexLogic. In general, the system receives analog and digital inputs, which then uses FlexLogic to produce analog and digital outputs.

Note:

For information on the Logic Designer and Logic Monitor menu items, refer to the EnerVista D & I Setup help menu.

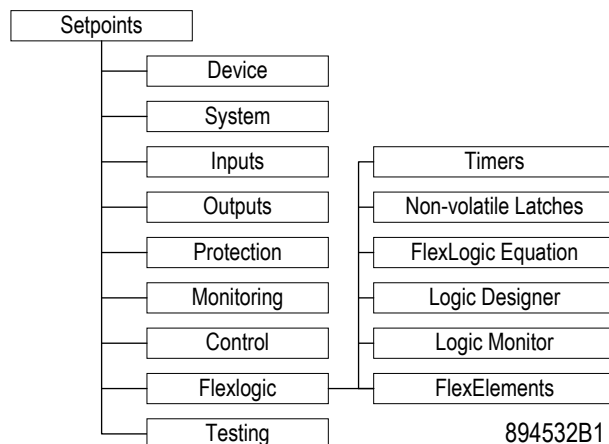


Figure 296: FlexLogic Display Hierarchy

The states of all digital signals are represented by flags (FlexLogic operands). A digital 1 is represented by a *Set* flag. Any external contact change-of-state can be used to block an element from operating, as an input to a control feature in a FlexLogic equation, or to operate an output relay. The state of the contact input can be displayed locally or viewed remotely via the communications facilities provided. In a simple scheme where a contact input is used to block an element is desired, this selection is made within the menu of the element. This applies to other features that set flags: elements, virtual inputs, remote inputs, schemes, and human operators.

When more complex logic than the one presented above is required, the FlexLogic tool should be used. For example, if it is desired to block the operation of a Phase Time Overcurrent element by the closed state of a contact input, and the operated state of a Phase Undervoltage element, the two input states need be programmed in a FlexLogic equation. This equation ANDs the two inputs to produce a virtual output which then must be programmed within the menu of the Phase Time Overcurrent as a blocking input. Virtual outputs can be created only by FlexLogic equations.

Traditionally, protective relay logic has been relatively limited. Any unusual applications involving interlocks, blocking, or supervisory functions had to be hard-wired using contact inputs and outputs. FlexLogic minimizes the requirement for auxiliary components and wiring while making more complex schemes possible.

The logic that determines the interaction of inputs, elements, schemes and outputs is field programmable through the use of logic equations that are sequentially processed. The use of virtual inputs and outputs in addition to hardware is available internally and on the communication ports for other relays to use (distributed FlexLogic).

FlexLogic allows customization of the relay through a series of equations that consist of operators and operands. The operands are the states of inputs, elements, schemes and outputs. The operators are logic gates, timers and latches (with set and reset inputs). A system of sequential operations allows any combination of specified operands to be assigned, as inputs to specified operators, to create an output. The final output of an equation is a numbered register called a 'Virtual Output'. Virtual Outputs can be used as an input operand in any equation, including the equation that generates the output, as a seal-in or other type of feedback.

A FlexLogic equation consists of parameters that are either operands or operators. Operands have a logic state of 1 or 0. Operators provide a defined function, such as an AND gate or a Timer. Each equation defines the combinations of parameters to be used to set a Virtual Output flag. Evaluation of an equation results in either a 1 (=ON, i.e. flag set) or 0 (=OFF, i.e. flag not set). Each equation is evaluated at least 4 times during every power system cycle.

Some types of operands are present in the relay in multiple instances; e.g. contact and remote inputs. These types of operands are grouped together (for presentation purposes only) on the faceplate display. The characteristics of the different types of operands are listed in the table below.

FlexLogic Operands

FlexOperands 889 430

The following operands can be re-named if required

- Breakers in the breaker control feature
- ID (identification) of contact inputs
- ID of virtual inputs
- ID of virtual outputs.
- If the default name or ID of any of these operands are changed, the assigned name appears in the relay list of operands.

FlexLogic Operators

TYPE	SYNTAX	DESCRIPTION	NOTES
Editor	INSERT	Insert a parameter in an equation list.	
	DELETE	Delete a parameter from an equation list.	
End	END	The first END encountered signifies the last entry in the list of processed FlexLogic™ parameters.	
One-shot	POSITIVE ONE SHOT	One shot that responds to a positive going edge.	A 'one shot' refers to a single input gate that generates a pulse response to an edge on the input. The output from a 'one shot' is True (positive) for only one pass through the FlexLogic equation. There is a maximum of 64 'one shots'.
	NEGATIVE ONE SHOT	One shot that responds to a negative going edge.	
	DUAL ONE SHOT	One shot that responds to both the positive and negative going edges.	

TYPE	SYNTAX	DESCRIPTION	NOTES
Logic gate	NOT	Logical NOT	Operates on the previous parameter.
	OR(2)↓ OR(16)	2 input OR gate↓ 16 input OR gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	AND(2)↓ AND(16)	2 input AND gate↓ 16 input AND gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	NOR(2)↓ NOR(16)	2 input NOR gate↓ 16 input NOR gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	NAND(2)↓ NAND(16)	2 input NAND gate↓ 16 input NAND gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	XOR(2)	2 input Exclusive OR gate	Operates on the 2 previous parameters.
	LATCH (S,R)	Latch (set, reset): reset-dominant	The parameter preceding LATCH(S,R) is the reset input. The parameter preceding the reset input is the set input.
Timer	TIMER 1↓ TIMER 32	Timer set with FlexLogic™ timer 1 settings.↓ Timer set with FlexLogic™ timer 32 settings.	The timer is started by the preceding parameter. The output of the timer is TIMER #.
Assign virtual output	= Virt Op 1↓ = Virt Op 32	Assigns previous FlexLogic™ operand to virtual output 1.↓ Assigns previous FlexLogic™ operand to virtual output 96.	The virtual output is set by the preceding parameter

The characteristics of the logic gates are tabulated below, and the operators available in FlexLogic are listed in the FlexLogic operators table.

FlexLogic Gate Characteristics

GATES	NUMBER OF INPUTS	OUTPUT IS 1 (= ON) IF...
NOT	1	input is '0'
OR	2 to 16	any input is '1'
AND	2 to 16	all inputs are '1'
NOR	2 to 16	all inputs are '0'
NAND	2 to 16	any input is '0'
XOR	2	only one input is '1'

FLEXLOGIC RULES

When forming a FlexLogic equation, the sequence in the linear array of parameters must follow these general rules:

- Operands must precede the operator which uses the operands as inputs.
- Operators have only one output. The output of an operator must be used to create a Virtual Output if it is to be used as an input to two or more operators.
- Assigning the output of an operator to a Virtual Output terminates the equation.
- A timer operator (for example, TIMER 1) or Virtual Output assignment may only be used once. If this rule is broken, a syntax error will be declared.

FLEXLOGIC EVALUATION

- Each equation is evaluated in the order in which the parameters have been entered.
- FlexLogic provides latches which by definition have a memory action, remaining in the set state after the set input has been asserted. However, they are volatile; that is, they reset on the re-application of control power.
- When making changes to settings, all FlexLogic equations are re-compiled whenever any new setting value is entered, so all latches are automatically reset. If it is necessary to re-initialize FlexLogic during testing, for example, it is suggested to power the unit down then back up.

12.2.1 TIMERS

Path: *Setpoints > FlexLogic > Timers*

There are 32 identical FlexLogic timers available. These timers can be used as operators for FlexLogic equations.

TIMER 1 TYPE

Range: Milliseconds, Seconds, Minutes

Default: Milliseconds

The setpoint is used to select the time measuring unit.

TIMER 1 MODE

Range: Pickup, Dropoff, Dwell, Pulse, Pickup/Dropoff,

Default: Pickup

TIMER 1 PICKUP DELAY

Range: 0 to 60000 s in steps of 1 s

Default: 0 s

The setpoint sets the time delay to Pickup. If a Pickup delay is not required, set this function to "0".

This setting is used to set the time delay for Pickup, Dwell, Pulse and Pickup/Dropoff.

TIMER 1 DROPOUT DELAY

Range: 0 to 60000 s in steps of 1 s

Default: 0 s

The setpoint sets the time delay to Dropout. If a Dropout delay is not required, set this function to "0".

This setting is used to set the drop-off time delay for Dropoff, Pickup/Dropoff.

12.2.2 NON-VOLATILE LATCHES

The purpose of a Non-volatile Latch is to provide a permanent logical flag that is stored safely and does not reset when the relay reboots after being powered down. Typical applications include sustaining operator commands or permanently blocking relay functions such as Autorecloser, until a deliberate HMI action resets the latch.

Operation of the element is summarized in the following table:

LATCH 1 TYPE	LATCH 1 SET	LATCH 1 RESET	LATCH 1 ON	LATCH 1 OFF
Reset Dominant	On	Off	On	Off
	Off	Off	Previous State	Previous State
	On	On	Off	On
	Off			

LATCH 1 TYPE	LATCH 1 SET	LATCH 1 RESET	LATCH 1 ON	LATCH 1 OFF
Set Dominant	On	Off	On	Off
		On		
	Off	Off	Previous State	Previous State
	Off	On	Off	On

Path: *Settings > FlexLogic > Non-volatile Latches > Latch 1(16)*

NV LATCH 1 FUNCTION

Range: Disabled, Enabled

Default: Disabled

The setpoint enables or disables the Non-volatile Latch function.

NV LATCH 1 TYPE

Range: Reset-Dominant, Set-Dominant

Default: Reset-Dominant

The setting characterizes NV LATCH 1 to be set- or reset-dominant.

NV LATCH 1 SET

Range: Any FlexLogic operand

Default: Off

If asserted, this specified FlexLogic operand sets NV LATCH 1.

LATCH 1 RESET

Range: Any FlexLogic operand

Default: Off

If asserted, this specified FlexLogic operand resets NV LATCH 1.

12.2.3 FLEXLOGIC EQUATION

Path: *Setpoints > FlexLogic > FlexLogic Equation*

The FlexLogic Equation screen is one of two options available to configure FlexLogic. The other option is Logic Designer.

Three time stamp variables: Logic Design Last Saved, Logic Design Last Compiled and FlexLogic Editor Last Saved, have been included in this screen.

Look at the time stamps to easily see which of the options: FlexLogic Editor or Logic Designer is currently being used.

There are 1024 FlexLogic entries available, numbered from 1 to 1024 (i.e. FlexLogic Entry X – where X ranges from 1 to 1024) with default END entry settings. If a Disabled Element is selected as a FlexLogic entry, the associated state flag is never set to 1.

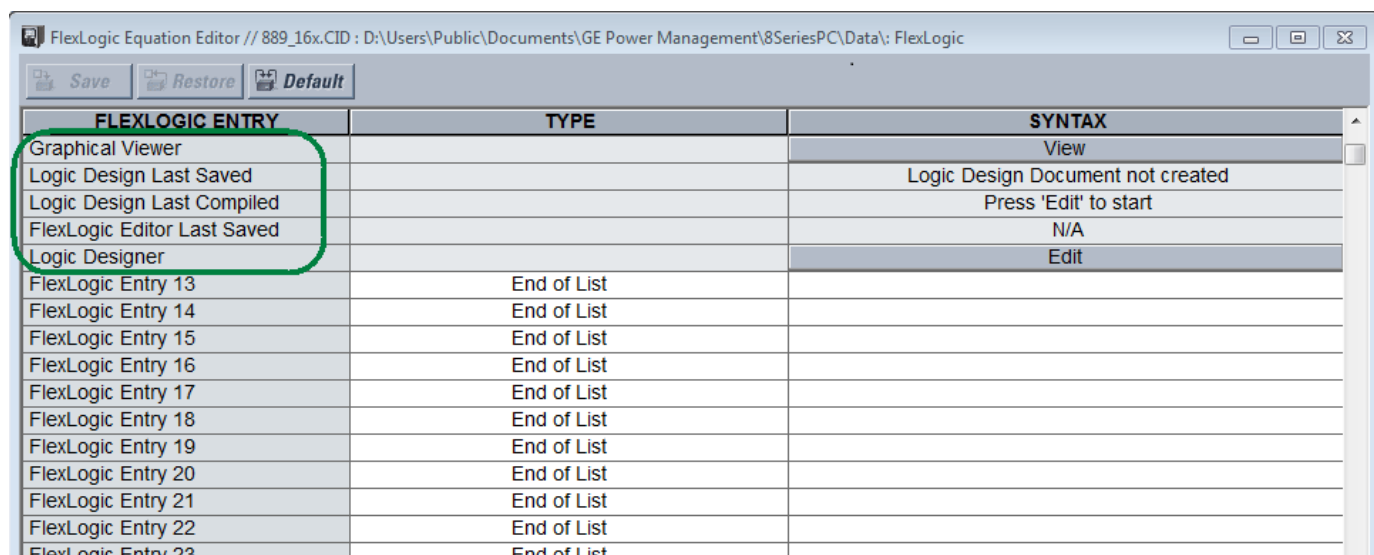


Figure 297: FlexLogic Equation Editor Screen

The FlexLogic entries are defined as follows.

Graphical Viewer: Clicking on the View button enables the FlexLogic equation to be presented in graphical format (Read-only). Refer to the *Viewing FlexLogic Graphics* section for more details.

Logic Design Last Saved, Logic Design Last Compiled, and FlexLogic Editor Last Saved: Each of these three read-only variables holds the time stamp that represents the time that the operation (of the respective variable) was performed.

- When no Logic (New file creation) is present these timestamps are set to default text representations.
- Time stamps are displayed in the format 'Mon DD YYYY HH:MM:SS' [Jun 22 1981 14:20:00]
- Each time a 'Save' operation is performed in the 'FlexLogic Equation Editor' screen, the 'FlexLogic Editor Last Saved' entry gets updated.
- Based on the values present at each launch of the 'FlexLogic Equation Editor' screen, internal validation prompts the relevant messages. These prompts must be followed to ensure that the 'FlexLogic' configuration is synchronized with the 'Logic Designer'. These three variables are shown in color in the FlexLogic Equation Editor based on timestamps. Color is used to indicate the change (non-synchronization if any) of FlexLogic between the FlexLogic Editor and Logic Designer Screens.

File Conversion and Handling of Time Stamps: When File Conversion is applied the three time stamps are processed (either carry forwarded, defaulted, updated with latest PC time) based on the Source and Destination File versions and Order code supported.


The following cases depict the nature of the three time stamps after a file conversion.

Source Version	Target Version	Is FlexLogic Change Detected?	Time Stamps [LDLs, LDLc, FELs]**
>= 160	>= 160	YES	[0^ , 0 , PCTime**]
>= 160	>=160	NO	*Existing time stamps are copied to the converted file
< 160	>= 160	YES	[0 , 0 , PCTime]
< 160 (& > 120***)	>= 160	NO	[PCTime, PCTime, PCTime,]

**	LDLs – Logic Designer Last Saved, LDLc– Logic Designer Last Compiled and FELs – FlexLogic Editor Last Saved
** PCTime	The time that the file conversion took place

^ 0	Indicates the time stamps are being defaulted
***	There is no support for Logic Designer [Graphical Editor] below version 130
*	For each specific case, the source files for Logic Designer (Graphical) content will also get copied "as is" to the destination folder. This enables the user to retain old content "as is".

In a typical scenario where both the FlexLogic Designer and FlexLogic Editor are used for configuring FlexLogic, the updated time stamps appear as shown in the following figure.

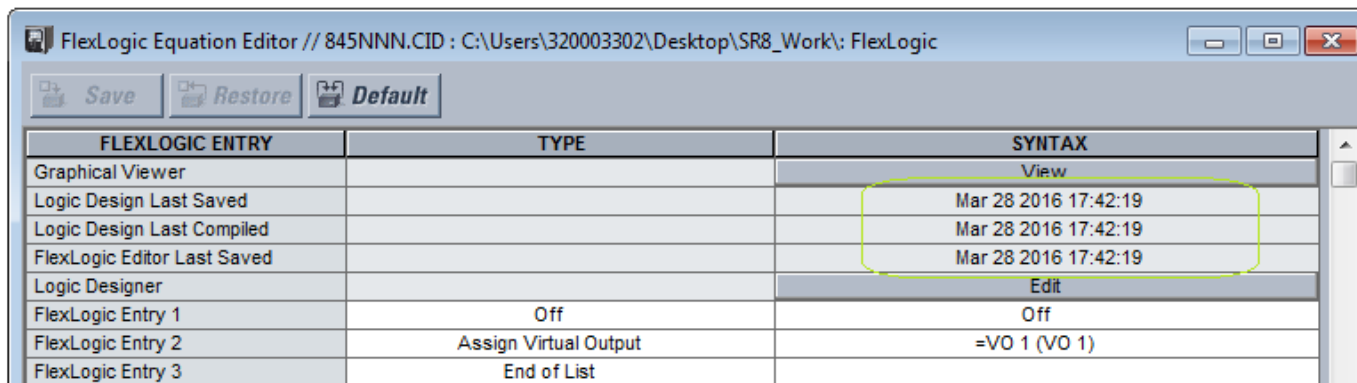

The screenshot shows the 'FlexLogic Equation Editor' window. At the top, there are buttons for 'Save', 'Restore', and 'Default'. Below these is a table with three columns: 'FLEXLOGIC ENTRY', 'TYPE', and 'SYNTAX'. The table contains several entries, including 'Graphical Viewer', 'Logic Design Last Saved', 'Logic Design Last Compiled', 'FlexLogic Editor Last Saved', 'Logic Designer', 'FlexLogic Entry 1', 'FlexLogic Entry 2', and 'FlexLogic Entry 3'. The 'SYNTAX' column for the first four entries shows a timestamp 'Mar 28 2016 17:42:19', which is highlighted with a yellow box. The 'SYNTAX' column for 'Logic Designer' shows 'Edit', and for 'FlexLogic Entry 1' it shows 'Off'. For 'FlexLogic Entry 2', the 'TYPE' is 'Assign Virtual Output' and the 'SYNTAX' is '=VO 1 (VO 1)'. For 'FlexLogic Entry 3', the 'TYPE' is 'End of List'.

FLEXLOGIC ENTRY	TYPE	SYNTAX
Graphical Viewer		View
Logic Design Last Saved		Mar 28 2016 17:42:19
Logic Design Last Compiled		Mar 28 2016 17:42:19
FlexLogic Editor Last Saved		Mar 28 2016 17:42:19
Logic Designer		Edit
FlexLogic Entry 1	Off	Off
FlexLogic Entry 2	Assign Virtual Output	=VO 1 (VO 1)
FlexLogic Entry 3	End of List	

Logic Designer: This entry can be used to initiate the launch of the Logic Designer screen. Once chosen, the existing FlexLogic Equation Editor screen is set to Read-only and then the Logic Designer screen launch is initiated. If the user wants to re-visit the FlexLogic Editor Screen, any existing read-only screen has to be closed first. Then, the screen has to be re-opened. The FlexLogic Editor screen is now editable, again.

In order to maintain synchronization of FlexLogic, the following update rules are defined.

For example, when a user tries to open the 'FlexLogic Equation Editor' of a particular device or file.

- If the Logic Designer screen is open and in Edit mode, a message prompts to save any changes. The FlexLogic Equation Editor is not launched.
- If the Logic Designer is open and in saved mode (no edits to save or compile), the Logic Designer screen is closed and then the FlexLogic Equation Editor launch is initiated.

12.2.4 VIEWING FLEXLOGIC GRAPHICS

To verify that the FlexLogic equation(s) and its selected parameters produce the desired logic, the expression can be viewed by converting the derived equation into a graphic diagram. It is strongly recommended and helpful to view an equation as a graphic diagram before it is saved to the relay in order to troubleshoot any possible error in the equation.

To View the FlexLogic Graphic

Click on the View button at the top of the Type column in the FlexLogic Equation screen, see previous figure. Provided the equation is entered correctly, this generates a graphical representation of the expression previously entered. If any operator inputs are missing or any FlexLogic rules have been violated, the EnerVista D&I Setup displays a message box indicating any problems in the equation when the view feature is attempted.

The expression is also listed to the left of the diagram to demonstrate how the diagram was created. The End statement is added as parameter 5 (End of list).

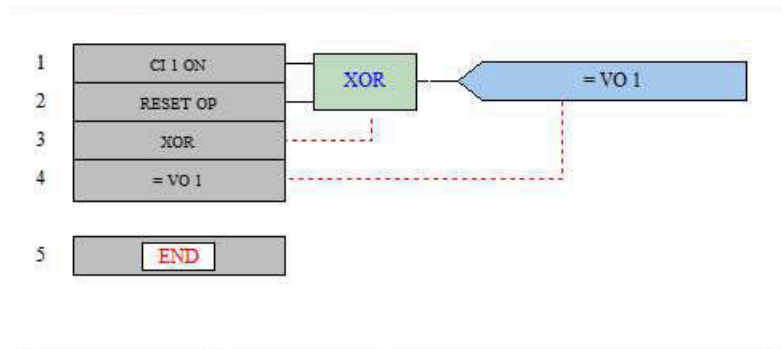


Figure 298: FlexLogic Graphic Example

12.2.5 FLEXELEMENTS

There are 8 identical FlexElements. A FlexElement is a universal comparator, that can be used to monitor any analog actual value measured or calculated by the relay, or a net difference of any two analog actual values of the same type. Depending on how the FlexElement is programmed, the effective operating signal could be either a signed signal or an absolute value.

You can configure the element to respond either to a signal level or to a rate-of-change (delta) over a pre-defined period of time. The output operand is asserted when the operating signal is higher than a threshold or lower than a threshold chosen.

When configuring a FlexElement, keep in mind the following limitations:

1. The analog inputs for any FlexElement must be from the same quantity.
 - current and current (in any combination, phase-symmetrical, phase-phase, kA-A, differential, restraint, etc.)
 - voltage and voltage (as above)
 - active power and active power (Watts and Watts)
 - reactive power and reactive power (Vars and Vars)
 - apparent power and apparent power (VA and VA)
 - angle and angle (any, no matter what signal, for example angle of voltage and angle of current are a valid pair)
 - % and % (any, for example THD and harmonic content is a valid pair)
 - V/Hz and V/Hz
 - °C and °C
 - I^2t and I^2t
 - FlexElement actual and FlexElement actual

For all the other combinations, the element displays 0.000 or N/A and will not assert any output operand.
2. The analog value associated with one FlexElement can be used as an input to another FlexElement "Cascading".

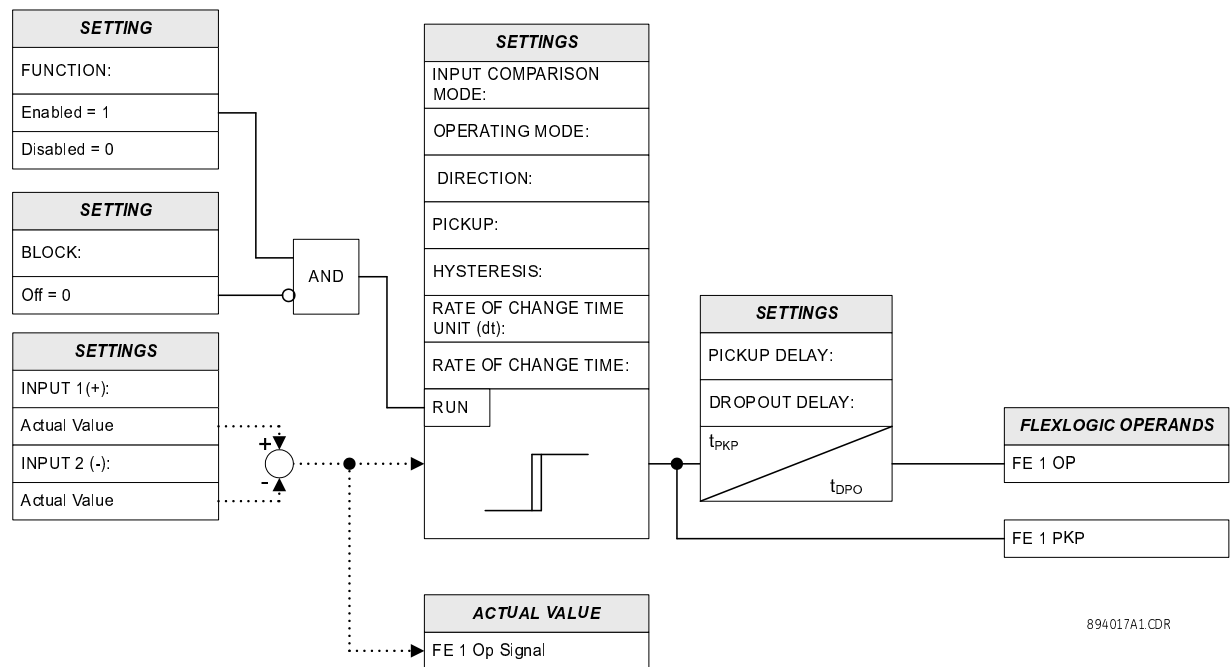


Figure 299: FlexElement logic diagram

12.2.5.1 FLEXELEMENT SETTINGS

Path: **Setpoints > FlexLogic > FlexElements > FlexElement 1**

FUNCTION

Range: Disabled, Enabled

Default: Disabled

NAME

Range: Up to 13 alphanumeric characters

Default: FlexEl 1

INPUT 1 (+)

Range: Off, any FlexAnalog signal

Default: Off

This setting specifies the first input (non-inverted) to the FlexElement. Zero is assumed as the input if this setting is set to *Off*. For proper operation of the element at least one input must be selected. Otherwise, the element will not assert its output operands.

INPUT 2 (-)

Range: Off, any FlexAnalog signal

Default: Off

This setting specifies the second input (inverted) to the FlexElement. Zero is assumed as the input if this setting is set to *Off*. For proper operation of the element at least one input must be selected. Otherwise, the element will not assert its output operands.

This input should be used to invert the signal if needed for convenience, or to make the element respond to a differential signal such as for a top-bottom oil temperature differential alarm.

A warning message is displayed and the element does not operate if the two input signals are of different types, for example if one tries to use active power and phase angle to build the effective operating signal.

PICKUP

Range: -30.000 to 30.000 pu in steps of 0.001 pu

Default: 1.000

This setting specifies the operating threshold for the effective operating signal of the element.

If the *Over* direction is set, the element picks up when the operating signal exceeds the Pickup value.

If the *Under* direction is set, the element picks up when the operating signal falls below the Pickup value.

The **HYSTERISIS** setting controls the element drop out.

Notice that both the operating signal and the pickup threshold can be negative when facilitating applications such as reverse power alarms.

The FlexElement can be programmed to work with all analog values measured or computed by the relay. The **PICKUP** setting is entered in pu values using the following definitions of the base units:

Definitions of the Base Unit for the FLEXELEMENT

Measured or calculated analog value related to:	Base Unit
Voltage	V_{BASE} = maximum nominal primary RMS value of the Input 1(+) and input 2(-) inputs
Current	I_{BASE} = maximum nominal primary RMS value of the Input 1(+) and input 2(-) inputs
Power	P_{BASE} = maximum value of $V_{BASE} * I_{BASE}$ for the Input 1(+) and input 2(-) inputs
Power Factor	PF_{BASE} = 1.00
Phase Angle	Deg_{BASE} = 360 deg
Harmonic Content	H_{BASE} = 100% of nominal
THD	THD_{BASE} = 100%
Frequency	f_{BASE} = nominal frequency as entered under the SYSTEM SETUP menu
Volt/Hz	$BASE$ = 1.00
dcmA	$BASE$ = DCMA INPUT MAX (setting under the DCMA menu). If two DCMA signals are used by the FlexElement, the maximum of the above setting among the two elements is used as the base.
RTDs	$BASE$ = 100.00°C
I^2t (arcing Amps)	$BASE$ = 2000 kA ² *cycle
Load Current	I_{BASE} = Full Load Current (FLA) of the generator
Unbalance Current	$BASE$ = 100%
Differential and Restraint Currents (Percent Differential and Overall Differential)	I_{BASE} = Primary of the CT with maximum primary current rating
Source Energy (Positive and Negative Watthours, Positive and Negative Varhours)	E_{BASE} = 10000 MWh or MVAh, respectively
3rd Harm VN in Sec, 3rd Harm V0 in Sec, 3rd Harm VN+V0 in Sec	V_{BASE} = Nominal Secondary Auxiliary voltage of the slot J-Vx (secondary) setpoints

Measured or calculated analog value related to:	Base Unit
Positive Impedance	$Z_{BASE} = \text{PhaseVTSecondary} / \text{PhaseCTSecondary}$, where PhaseVTSecondary and PhaseCTSecondary are the secondary nominal voltage and the secondary nominal current of voltage and current bank to calculate the impedance. PhaseVTSecondary is specified in the setting under Setpoints > System > Voltage Sensing, and PhaseCTSecondary is determined by the order code.
Harmonic Detection	$HD_{BASE} = 1.00$
Differential and Restraint Currents (RGF)	$IBASE = \text{CT Primary from the CT bank selected for the RGF element (the same base as the one for the RGF element)}$
Thermal Capacity Used	$BASE = 100\%$
Estimated Time on OL	$BASE = 10 \text{ seconds}$

HYSTERESIS

Range: 0.1 to 50.0% in steps of 0.1%

Default: 3.0%

This setting defines the pickup – drop out relation of the element by specifying the width of the hysteresis loop as a percentage of the pickup value as shown above in the *Direction, Pickup, and Hysteresis setpoints* figure.

RATE OF CHANGE TIME UNIT (dt)

Range: millisecond, second, minute

Default: milliseconds

This setting specifies the time base dt when programming the FlexElement as a rate of change element.

The setting is applicable only if the Input Comparison Mode is set to *Delta*.

RATE OF CHANGE TIME

Range: 40 to 65535 in steps of 1

Default: 40

This setting specifies the duration of the time interval for the rate of change mode of operation.

The setting is applicable only if the Input Comparison Mode is set to *Delta*.

12.2.5.2 FLEXELEMENTS - EXAMPLES

T13.8 kV power system:

- Phase VT Connection: Wye
- Phase VT Secondary: 66.4 V
- Phase VT Ratio: 120:1 (phase to neutral primary voltage = $120 \times 66.4 = 7968 \text{ V}$)
- Aux VT Connection: Vab
- Aux VT Secondary: 115 V
- Aux VT Ratio: 120:1 (phase-phase primary voltage = 13800V)
- Phase CTs Primary: 2000 A
- Ground CT Primary: 500 A
- Frequency: 60Hz

Detecting voltage difference:

The voltage difference between calculated phase-phase voltage derived from Wye connected phase VTs, and the directly measured phase-phase voltage from auxiliary VT can be monitored by programming a FlexElement.

FlexElement settings:

- Input 1(+): J2 Vab RMS
- Input 2 (-): J2 Vaux RMS (input from VT connected between phases A and B)
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over

The analog input J2 Vab is phase-phase voltage computed by the relay based on three-phase Wye voltages. As per the Phase VT setup, the primary RMS nominal voltage for J2 Vab input is $66.4 \text{ V} * 120 = 7.968\text{kV}$.

The analog input J2 Vaux is directly measured phase-phase voltage and its primary RMS nominal voltage is $115\text{V} * 120 = 13.8\text{kV}$

$$V_{\text{BASE}} = \max(7.968\text{kV}, 13.8\text{kV}) = 13.8\text{kV}.$$

If we want to detect 2% voltage difference ($2\% @ 13.8\text{kV} = 276\text{V}$) between the computed phase to phase Vab voltage, and the measured Vaux voltage from a VT connected between phases A and B, the pickup per-unit setting for the FlexElement can be set as follows:

$$\text{Pickup} = 276\text{V}/13800\text{V} = 0.02 \text{ pu}$$

If the voltage difference between the selected inputs becomes bigger than 276 Volts, the FlexElement will pickup, and operate, which can be used to energize contact, or initiate alarm, or trip.

Detecting current difference between Neutral and Ground currents:

In a balanced system, the computed neutral and the measured ground currents is 0 Amps. However, during ground faults their values are not zero. More specifically if the phase and ground CTs are located on the same transformer winding, such that the ground CT is installed on the grounded neutral of the winding, their values supposed to be the same during external fault, and would be different during internal fault. The FlexElement can be used for detecting the differential signal between these quantities. For example the following condition can be made:

$$I_{\text{BASE}} = \max(2000\text{A}, 500\text{A}) = 2000\text{A}$$

FlexElement settings:

- Input 1(+): J1
- Input 2 (-): J1 Ig
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over
- Pickup = $200\text{A}/2000\text{A} = 0.1 \text{ pu}$

When no CT saturation conditions exist, if the difference between the neutral current and the ground current becomes more than 200 Amps primary, this can be treated as an indication of an internal ground fault, which should be cleared. With $I_{\text{BASE}} = \max(2000\text{A}, 500\text{A}) = 2000\text{A}$, the pickup can be set as follows: $\text{Pickup} = 200\text{A}/2000\text{A} = 0.1 \text{ pu}$

Detecting Low 3-ph Apparent Power:

$$V_{\text{BASE}} = 7.968\text{kV}$$

$$I_{\text{BASE}} = 1000 \text{ A}$$

$$P_{\text{BASE}} = V_{\text{BASE}} * I_{\text{BASE}} = 7968 \text{ V} * 2000\text{A} = 15.936\text{MVA}$$

The FlexElement can be set to detect under-power conditions and produce alarm, or trip if the apparent power is less than 500kVA. In this case the pickup setting for the FlexElement can be computed as follows:

$$\text{Pickup} = 0.5\text{MVA} / 15.936 \text{ MVA} = 0.0313 \text{ pu}$$

FlexElement settings:

- Input 1(+): Pwr1 Apparent
- Input 2(-): Off
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Under
- Pickup: 0.0313 pu

Power Factor Cap Bank Switch-In Example

$$\text{PF}_{\text{BASE}} = 1.00$$

FlexElement can be programmed to switch-in cap bank, if for example the measured 3Ph Power Factor has negative value(lag), and drops below the pickup of -0.7 pu. Programming the Hysteresis setpoint to the desired percentage can define the PF value at which the cap bank can be switched off. For example, if the cap bank is required to be switched off at PF value of -0.9, than the percent hysteresis is computed as:

$$\% \text{ hysteresis} = ((\text{abs}(-0.9) - \text{abs}(-0.7)) / \text{PF}_{\text{BASE}}) * 100 = 20\%$$

Note:

The minimum pickup should not be less than 0.01 pu, as the measurement resolution for the Power Factor is 0.01.

- Input 1(+): Pwr1 PF
- Input 2(-): Off
- Operating Mode: Signed
- Input Comparison Mode: Level
- Direction: Under
- Pickup: -0.700 pu
- Hysteresis: 20.0 %

Detecting high THD (Total Harmonic Distortion)

$$\text{THD}_{\text{BASE}} = 100\%$$

A FlexElement can be programmed to detect excessive amount of harmonics in the system, and Alarm, Trip, or switch-in/out an equipment to suppress the high amount of harmonics. The Total Harmonic Distortion is an estimation of how the AC signals are distorted and as shown above, it can be used as an input for the FlexElement.

For example if an operation from a FlexElement is desired when the THD for the phase A voltage exceeds 20%, then having a base of 100%, the pickup setting should be set to 0.200 pu.

- Input 1(+): J2 Phase A THD
- Input 2(-): Off
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over
- Pickup: 0.200 pu

Note:

The harmonics and THD values are measured as percentage of the fundamental signal, and have resolution of 0.01%. However for the minimum pickup setting of 0.001 pu, this would mean percentage step of 0.1%.

Simple V/Hz ratio detection for protected equipment

$V/Hz_{BASE} = 1.00$ High V/Hz ratios in the power system are harmful for the insulation of the protected equipment – transformer, generator, or elsewhere in the power system. If not detected, it can lead to excessive heat and degradation of the insulation which will damage the equipment. A FlexElement can be used for simple detection of V/Hz values, and to issue an Alarm, or Trip, if detected above Pickup setting. Since the base unit for V/Hz = 1.00, programming of the pickup setpoint is straight forward for the desired FlexElement operation. For the example given here, a value of 1.200 pu has been selected.

- Input 1(+): Volts Per Hertz Input 2(-): Off Operating Mode: Absolute Input Comparison Mode: Level Direction: Over Pickup: 1.200 pu Hysteresis: 8.3%

Now, if the FlexElement is needed to drop down when the V/Hz ratio becomes equal to 1.1, the hysteresis can be calculated as: $1.2pu - 1.1pu = 0.1 pu$ $Hysteresis = (0.1 * 100) / 1.2 = 8.3\%$

High Breaker Arcing current detection

High breaker arcing current can be detected by using a FlexElement during the opening of a breaker. One or more FlexElements can be configured for detecting levels of maximum arcing current during the tripping of a particular breaker, and give an indication for the health of the breaker.

The base unit for the breaker arcing current is programmed in the relay as: $BASE = 2000 \text{ kA}^2 \cdot \text{cycle}$

- Input 1(+): Total Arcing Current
- Input 2(-): Off
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over
- Pickup: 2.500 pu
- Hysteresis: 0.0%

To configure the pickup setpoint for a total arcing current of $5000 \text{ kA}^2 / \text{cycle}$, the per-unit pickup value can be calculated as follows:

$$\text{Pickup} = 5000 \text{ kA}^2 \cdot \text{cycle} / 2000 \text{ kA}^2 \cdot \text{cycle} = 2.500 \text{ pu}$$

CHAPTER 13

TESTING

13.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	656
Testing display hierarchy	657
Simulation	658
General	662
Test LEDs	664
Contact Inputs	665
Output Relays	666
GOOSE	667

13.2 TESTING DISPLAY HIERARCHY

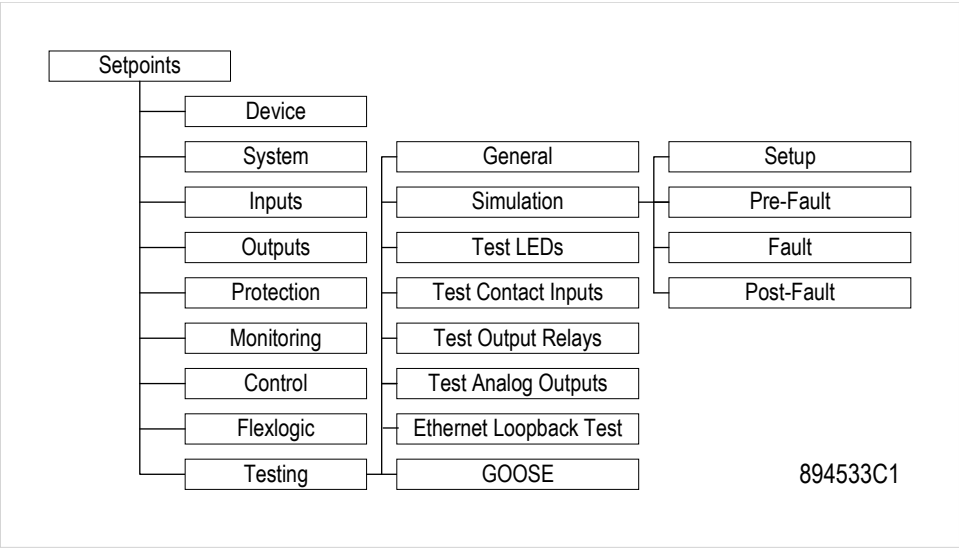


Figure 300: Testing Display Hierarchy

Path:*Setpoints > Testing*

The relay can simulate current and voltage inputs when the Simulation feature is enabled. Other test operations are also possible such as LED lamp test of each color, contact input states and testing of output relays.

13.3 SIMULATION

Path: **Setpoints > Testing > Simulation**

- Setup
- Pre-Fault
- Fault
- Post-Fault

The Simulation feature is provided for testing the functionality of the relay in response to programmed conditions, without the need of external AC voltage and current inputs. First time users will find this to be a valuable training tool. System parameters such as currents, voltages and phase angles are entered as setpoints. When placed in simulation mode, the relay suspends reading actual AC inputs, generates samples to represent the programmed phasors, and loads these samples into the memory to be processed by the relay. Normal (pre-fault), fault and post-fault conditions can be simulated to exercise a variety of relay features. There are three sets of input parameters used during simulation, each provides a particular state of the system as follows.

Note:

Simulation mode current input should be set at more than three times the CT rating. All Simulation setpoints revert to default values at power-up.

Note:

Testing of Arc Flash functionality is not possible with the Simulation feature.

13.3.1 SIMULATION SETUP

Path: **Setpoints > Testing > Simulation > Setup**

SIMULATION STATE

Range: Disabled, Prefault State, Fault State, Postfault State

Default: Disabled

Disable this setpoint if actual system inputs are to be monitored. If set to any other value, the relay is in test mode and actual system parameters are not monitored, including Current, Voltage, and Contact Inputs. The system parameters simulated by the relay will be those in the section below that correspond to the set value of this setpoint. For example, if set to *Fault*, the system parameters will be set to those defined by the **FAULT** setpoint values.

PRE-FAULT TO FAULT TRIGGER

Range: Off, On, Any FlexLogic Operand

Default: Off

POST-FAULT TO PRE-FAULT TRIGGER

Range: Off, On, Any FlexLogic Operand

Default: Off

FORCE RELAYS

Range: Disabled, Enabled

Default: Disabled

When in test mode, and **FORCE RELAYS** is enabled, relay states can be forced from the **Setpoints > Testing > Output Relays** menu, which overrides the normal operation of the output contacts. When in test mode, and **FORCE RELAYS** is disabled, the relay states maintain their normal operation. Forcing of output relay states is not performed when the Simulation State is disabled.

FORCE LEDS

Range: Disabled, Enabled

Default: Disabled

When in test mode, and **FORCE LEDS** is enabled, LED states and colors can be forced from the **Setpoints > Testing > Test LEDS** menu, this will override the normal operation of the LEDs. When in test mode, and **FORCE LEDS** is disabled, the LED states and colors will maintain their normal operation. Forcing of LEDs is not performed when the **SIMULATION STATE** is disabled.

13.3.2 SIMULATION PRE-FAULT

This state is intended to simulate the normal operating condition of a system by replacing the normal input parameters with programmed pre-fault values. For proper simulation, values entered here must be below the minimum trip setting of any protection feature.

Voltage magnitudes and angles are entered as Wye values only. The voltage setpoints are not available if the corresponding VT Bank **PHASE VT CONNECTION** setpoint is Delta. Voltages are set in secondary VT units.

The CT and VT Bank availability is dependent on the installed Order Code options.

Path: **Setpoints > Testing > Simulation > Pre-Fault**

J2 Prefault Van(Vbn,Vcn,Vx) Voltage:

Range: 0.00 to 300.00 V in steps of 0.01

Default: 0.00 V

J2 Prefault Van(Vbn,Vcn,Vaux) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

J1(K1,K2) Prefault Phase Ia(Ib,Ic):

Range: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

Phase current magnitudes are entered as a multiple of the corresponding CT Bank **PHASE CT PRIMARY** setpoint.

J1(K1,K2) Prefault Phase Ig:

Range: For Ground CT: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

The ground current magnitude setpoint range is dependent on the ground CT type as defined in the Order Code options. For Ground CT, the magnitude is entered as a multiple of the corresponding CT Bank **GROUND CT PRIMARY** setpoint.

J1(K1,K2) Prefault Ia(Ib,Ic,Ig) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

13.3.3 SIMULATION FAULT

The Fault state is intended to simulate the faulted operating condition of a system by replacing the normal input parameters with programmed fault values.

Voltage magnitudes and angles are entered as Wye values only. The voltage setpoints are not available if the corresponding VT Bank **PHASE VT CONNECTION** setpoint is Delta. Voltages are set in secondary VT units.

The CT and VT Bank availability is dependent on the installed Order Code options.

Path: **Setpoints > Testing > Simulation > Fault**

J2 Fault Van(Vbn,Vcn,Vx) Voltage:

Range: 0.00 to 300.00 V in steps of 0.01

Default: 0.00 V

J2 Fault Van(Vbn,Vcn,Vaux) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

J1(K1,K2) Fault Phase Ia(Ib,Ic):

Range: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

J1(K1,K2) Fault Phase Ig:

Range: For Ground CT: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

J1(K1,K2) Fault Ia(Ib,Ic,Ig) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

13.3.4 SIMULATION POST-FAULT

The Post-fault state is intended to simulate a system that has tripped by replacing the normal input parameters with programmed post-fault values.

Voltage magnitudes and angles are entered as Wye values only. The voltage setpoints are not available if the corresponding VT Bank **PHASE VT CONNECTION** setpoint is Delta. Voltages are set in secondary VT units.

The CT and VT Bank availability is dependent on the installed Order Code options.

Path: **Setpoints > Testing > Simulation > Post-Fault**

J2 Postfault Van(Vbn,Vcn,Vx) Voltage:

Range: 0.00 to 300.00 V in steps of 0.01

Default: 0.00 V

J2 Postfault Van(Vbn,Vcn,Vaux) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

J1(K1,K2) Postfault Phase Ia(Ib,Ic):

Range: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

J1(K1,K2) Postfault Phase Ig:

Range: For Ground CT: 0.000 to 46.000 x CT in steps of 0.001 x CT For Sensitive Ground CT: 0.000 to 4.600 x CT in steps of 0.001 x CT For CBCT: 0.000 to 15.000 A in steps of 0.001

Default: 0.000 x CT

J1(K1,K2) Postfault Ia(Ib,Ic,Ig) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

13.4 GENERAL

The relay enters into test mode when any of the test operations (Simulation, Contact Inputs, Contact Output Relays, LEDs or Analog Outputs) is programmed to Enabled. The actual system parameters are not monitored, including Current, Voltage, and Contact Inputs.

Simulation State

Range: Disabled, Prefault State, Fault State, Postfault State

Default: Disabled

Set the Simulation State to *Disabled* if you want to monitor the actual system inputs.

If set to any other value, the relay is in test mode and the actual system parameters are not monitored, including Current, Voltage, and Contact Inputs. The system parameters simulated by the relay will be those in the section below that correspond to the configured value of this setpoint. For example, if set to **Fault**, then the system parameters will be set to those defined by the **Fault** setpoint values.

When Fault State is set as the Simulation State and a Trip occurs, the Simulation State automatically transitions to the Postfault State.

Force LEDs

Range: Disabled, Enabled

Default: Disabled

When enabled, the relay enters in test mode and LED states and colors can be forced from the **Setpoints \Testing\Test LEDs** menu.

This will override the normal operation of the LEDs. When disabled, the LED states and colors will maintain their normal operation.

Force Contact Inputs

Range: Disabled, Enabled

Default: Disabled

When **Force Contact Inputs** is enabled, the relay enters test mode and the contact inputs states can be forced from the **Testing\Contact Inputs** menu.

This will override the normal operation of the input contacts. When **Force Contact Inputs** is disabled, the relay states will maintain their normal operation.

Force Relays

Range: Disabled, Enabled

Default: Disabled

When **Force Relays** is enabled, the relay enters test mode and the relay states can be forced from the **Testing \Output Relays** menu.

This will override the normal operation of the output contacts. When **Force Relays** is disabled, the relay states will maintain their normal operation.

Force Analog Outputs

Range: Disabled, Enabled

Default: Disabled

When **Force Analog Outputs** is enabled, the relay enters test mode and the output will reflect the forced value as a percentage of the range 0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, or 4 to 20 mA.

When **Force Analog Outputs** is disabled, the relay states will maintain their normal operation.

13.5 TEST LEDS

The Test LEDs setting is used to program the state and color of each LED when in test mode and **FORCE LEDS** is enabled.

Note:
Test LEDs setpoints here will revert to default values at power-up.

Path: *Setpoints > Testing > Test LEDs*

LED 1 (17)

Range: Off, Red, Green, Orange

Default: Off

LED 1 (24)

Range for 1(14): Off, Red, Green, Orange

Range for 15(24): Off, Orange

Default: Off

13.6 CONTACT INPUTS

This section is used to program the state of each contact input when enabled in test mode. The number of Contact Inputs available is dependent on the installed Order Code options.

Note:

Contact Inputs setpoints here will revert to default values at power-up.

Path: *Setpoints > Testing > Contact Inputs*

CI 1(X):

Range: Off, On

Default: Off

The item name displays the user configurable name for the contact input.

13.7 OUTPUT RELAYS

This section is used to program the state of each output relay when **FORCE RELAYS** is enabled.

Select *Off* to force the output relay to the de-energized state, or select *On* to force the output relay to the energized state.

The number of Output Relays available is dependent on the installed Order Code options.

Note:

Output Relays setpoints here will revert to default values at power-up.

Path: *Setpoints > Testing > Output Relays*

OUTPUT RELAY 1(X)

Range: Off, On

Default: Off

13.8 GOOSE

When the relay provides GOOSE, a menu is available for testing GOOSE messaging

SETPOINTS > TESTING > GOOSE

TXGOOSE Sim Mode

Range: Disabled, Enabled

Default: Disabled

When disabled, the SIM bit in all transmitted GOOSE messages are set to *FALSE*. When enabled, the SIM bit in all transmitted GOOSE messages are set to *TRUE*.

Accept Sim GOOSE

Range: Disabled, Enabled

Default: Disabled

When disabled, the relay SIM attribute (LPHD1.Sim.StValin) is set to *FALSE* and the GOOSE/SV messages received with simulation bit set are ignored. When enabled, the relay SIM attribute (LPHD1.Sim.StValin) is set to *TRUE* so that if GOOSE/SV messages are received with the SIM bit set, these will be used in place of the normal messages.

CHAPTER 14

STATUS

14.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	669
Summary	670
Generator status	673
Breaker status	675
Information	676
Communications status	679
Other status settings	683

14.2 SUMMARY

Configurable Single Line Diagram (SLD)

The status of each SLD screen is displayed under **Status > Summary > Configurable SLDs > SLD1(X)**.

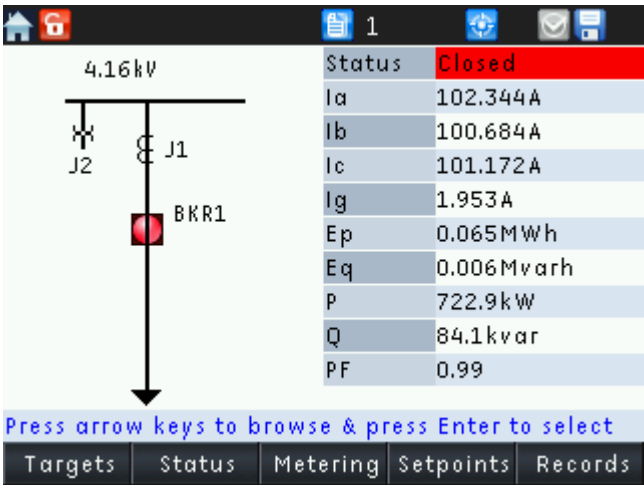


Figure 301: Sample SLD

Once in the SLD screen, by default no breaker/switch is highlighted or selected. Pressing the Up/Dn (or Up/Dn/Left/Right) navigation keys highlights BKR1 and navigates through BKR1, 2, 3, etc. and then through Switch1, 2, 3, etc.

If the Up/Dn/Left/Right keys are used, the selection moves to the closest available breaker/switch from the currently highlighted object. To select the breaker/switch, press the enter key. Upon pressing the Enter key, the tab labels change to the programmable tab pushbutton labels and a flash message for the breaker selected appears (Flash Message: BKR1 Selected). Pressing Escape de-selects the breaker/switch and the tab pushbutton labels.

Annunciator

The graphical annunciator panel emulates a physical annunciator panel. Indicators on the graphical panel are backlit and have a description of the alarm condition that lights each indicator. The annunciator panel status window shows the alarms that are active.

To reset an active alarm, first highlight the active alarm using the navigation keys, then press the reset button to reset the highlighted alarm. If no indicator is selected, all alarms on the page are reset by pushing the reset button.

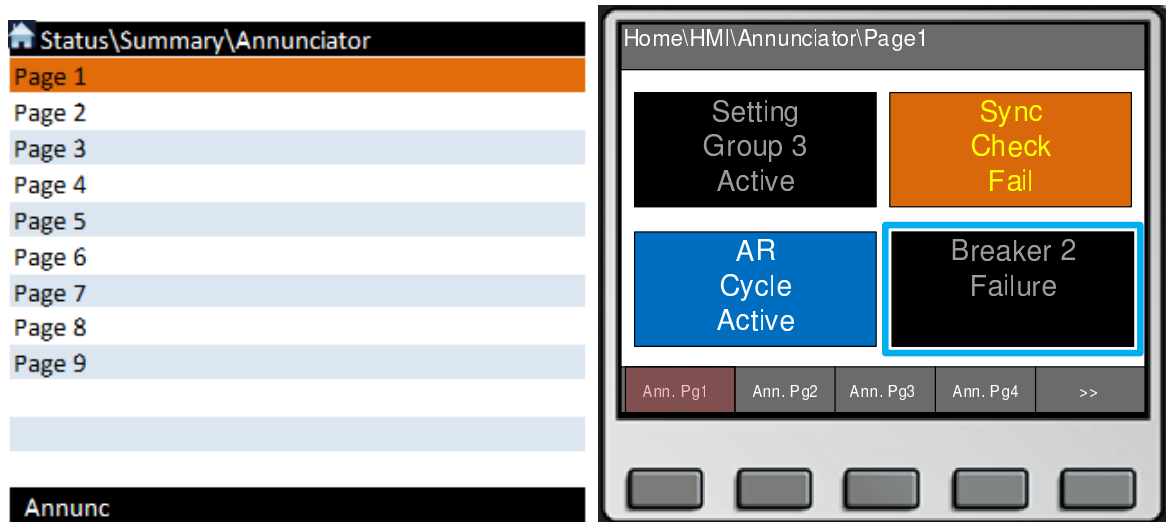


Figure 302: Physical and Graphical Annunciator Panels

Tab pushbuttons

Navigation

There are two ways to navigate to the Tab Pushbutton control pages:

- Relay Home Screens
- **Path: Status > Summary > Tab Pushbuttons** (from relay) **Home Screens**

By default, the Tab Pushbuttons summary page is programmed as one of the Home Screens. Press the home button repeatedly to cycle through the programmed Home Screens.

Note:

Tab pushbuttons can only be controlled physically through the front panel of the relay. Their operation is not available from the setup software.

Path: Status > Summary > Tab Pushbuttons

The initial view of the Tab Pushbutton controls is the Summary page, which shows the status of all 20 pushbuttons. To operate the pushbuttons, navigate to the individual pages where the tab pushbuttons can be used to activate them.

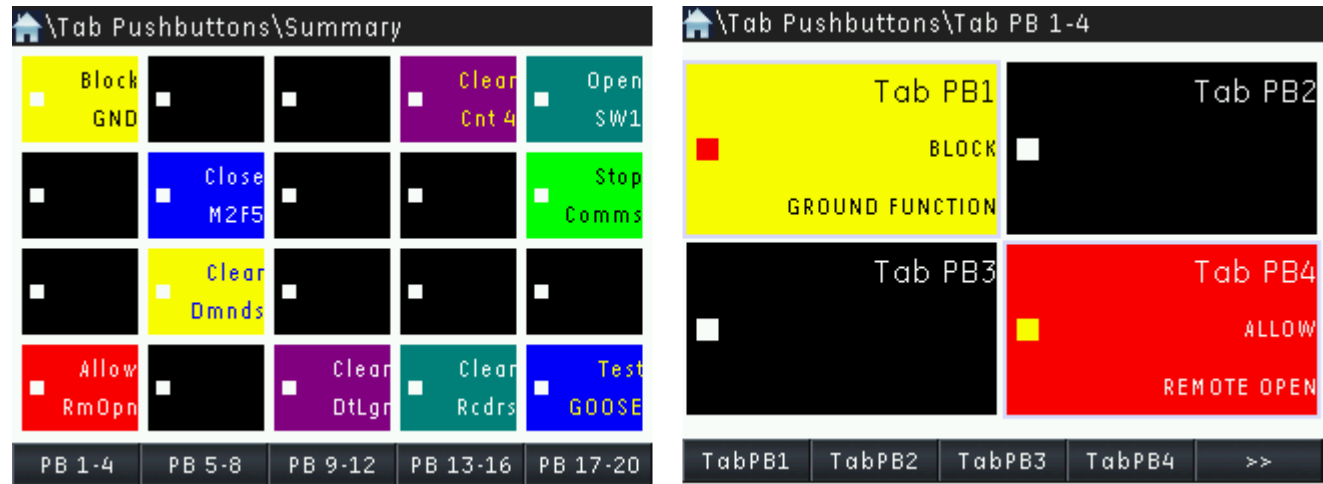


Figure 303: Tab pushbutton summary (left) and detailed view (right)

Only the tab pushbuttons that are not set to Disabled are shown in color; labels for the tab pushbuttons are shown for both active and disabled pushbuttons if labels have been configured. (Configure tab pushbuttons from **Device > Front Panel > Tab PBs > Tab PB1(X).**)

When the actual button is pressed, the button on the screen is highlighted in blue and the PB [X] PRESS operand becomes active. Although a disabled pushbutton can be pressed, no action is taken and its operands are not activated. Pressing ESCAPE returns the screen to Tab Pushbutton summary page. The Short Text for each Tab Pushbutton is used on the Summary Page.

Pressing >> shows the next set of tab pushbuttons. For example, when in the page with pushbuttons 1 to 4, pressing >> will navigate to the screen with pushbuttons 5 to 8. Press >> to cycle through all five pushbutton screens. To go from page 2 to page 1, press >> 4 times to cycle through and navigate to page 1 with pushbuttons 1 to 4. Alternatively, escape to the overall summary screen and navigate to any desired page of pushbuttons.

14.3 GENERATOR STATUS

Path: **Status > Generator**

GENERATOR STATUS

Range: Online, Offline, Tripped, Unknown

Default: Offline

The Generator Status can be one these options: Online (connected to the system through breaker), Offline (either not running or not connected to the system), Tripped (any tripped and with the system breaker open), or Unknown (the generator is not tripped, online or offline, or the breaker status is unknown). Terminal voltage and breaker status is used to determine if generator is online. The status is also available as FlexLogic operands, and only one status is possible at a time. Refer to the generator status logic diagram.

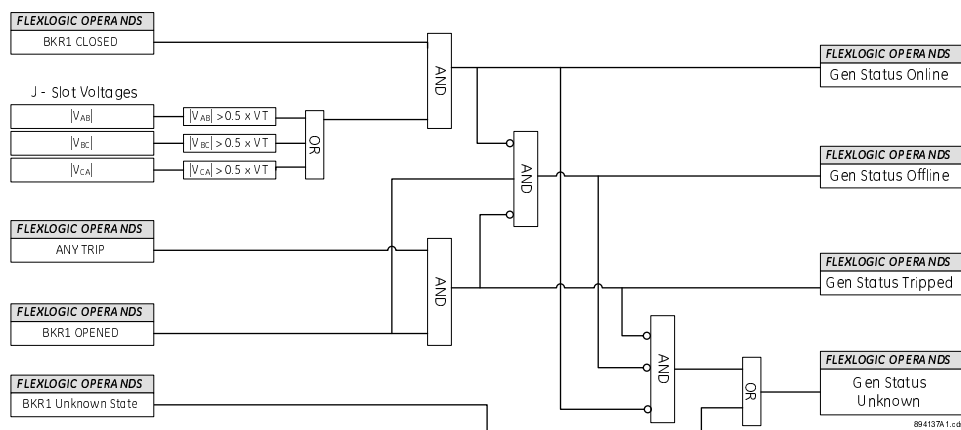


Figure 304: Generator Status Logic Diagram

Note:

The Generator breaker has to be configured as Breaker 1. If it is not configured as Breaker 1 or its status is unknown, the Generator Status shows as Unknown.

RUNNING HOURS

Range: 0 to 100,000 hrs in steps of 1

Default: 0 hrs

The Running Hours field shows accumulated generator running time in hours. Refer to the Running Hours element description for more details.

FIELD BKR STATUS

Range: Unknown, Open, Close

Default: Unknown

The Field Breaker Status shows Open or Close if the Field Breaker Discrepancy element is configured. Otherwise the status displays Unknown.

THERMAL CAPACITY USED

Range: 0 to 100 % in steps of 1 %

Default: 0 %

The Thermal Capacity Used value is continuously calculated in percentage and irrespective of whether the Thermal Model element is enabled or not enabled. This value is only displayed when the Thermal Model element is enabled.

ESTIMATED TRIP TIME ON OL

Range: Never, 0 to 65000 s in steps of 1 s

Default: Never

This value is available when the Thermal Overload element is enabled, and represents the estimated time to trip (in seconds) from the thermal overload model assuming that the generator current remains at its current level. By default the value is 'Never' which indicates that the Thermal Overload element never operated.

Thermal Lockout Time

Range: 0 to 65000 s in steps of 1

Default: 0 s

When the generator trips offline due to thermal overload, the Thermal Inhibit OP will be asserted until generator thermal capacity reaches 15%. Thermal Inhibit OP operand can be used to inhibit the generator starting after generator is tripped due to thermal overload until TCU drops to 15%.

The Thermal Lockout time calculation is executed once in 10 seconds when the generator is neither stopped nor tripped. When the generator is stopped or tripped, the rate is 1 time / cycle. The formula is:

$$T = SCTC \times \ln (TCU / (100\% - 85\%))$$

Where:

T = Thermal Lockout Time

SCTC = Stopped Cool Time Constant (min)

TCU = Thermal Capacity Used (%)

If $T \leq 0$, then display $T = 0$

Since T is calculated in minutes, it has to be converted to seconds and compared with other lockout times.

If the Emergency Restart input is asserted during a thermal lockout, the TCU is set to zero and the Thermal Trip OP is reset. This causes resetting of Thermal Lockout Time to zero.

14.4 BREAKER STATUS

The status of the breaker/breakers is displayed individually. If the selected trip output relay is Form A-type, the status of the breaker Trip and Close circuitry is also displayed here. The screen also includes the total accumulated arcing current information for the breaker.

Path: *Status* > *Breaker* > *Breaker X Status*

STATE

Range: Not Configured, Opened, Closed, Disconnected, State Unknown

The Unknown state is displayed upon discrepancy of the 52a and 52b contacts for more than 30 milliseconds.

Range: Not Set, Fail, OK

The Close coil state is displayed when Form -A output relays are used, and Close Coil monitoring is enabled.

BKR TROLLEY STATE

Range: Not Configured, Opened, Closed, State Unknown

TRIP COIL

Range: Not Set, Fail, OK

The Trip Coil state is displayed when Form -A output relays are used, and Trip Coil monitoring is enabled.

CLOSE COIL

Range: Not Set, Fail, OK

The Close coil state is displayed when Form -A output relays are used, and Close Coil monitoring is enabled.

TOTAL ARCING CURRENT

Range: 0.00 to 42949672.95 kA2-cyc in steps of 0.01

The measure of arcing current from all three phases during breaker trips. Refer to the Breaker Arcing Current element description (under **Setpoints** > **Monitoring** > **Breaker**) for more details.

14.5 INFORMATION

Path: *Status > Information > Relay Info*

The Information pages display fixed device information. the pages are divided into three sections: Main CPU, Comms CPU, and Hardware Versions.

Main CPU

The Information related to the Main CPU is displayed here.

Path: *Status > Information > Relay Info > Main CPU*

- **Order Code:** The installed Order Code
- **Product Serial #:** The relay serial number
- **Hardware Revision:** The hardware revision of the relay
- **Firmware Version:** The firmware version of the Main CPU
- **Firmware Date:** The Main CPU firmware build date in the format mm/dd/yyyy
- **Firmware Time:** The Main CPU firmware build time
- **Boot 1/2 Version:** The boot 1/2 code version of the Main CPU
- **Boot 1/2 Date:** The Main CPU boot 1/2 code build date in the format mm/dd/yyyy
- **Boot 1/2 Time:** The Main CPU boot 1/2 code build time
- **MAC Address 1:** The MAC address for copper Ethernet port 1
- **Remote CANBUS RMIO:** The commissioned value of the CANBUS IO is displayed here. If the relay has never been commissioned then the value is None, i.e. default = None and Range = 6 alphanumeric characters.
- **NUM of RMIO RTDs:** The number of remote RTDs detected

Comms CPU

The Information related to the Comms CPU is displayed here.

Path: *Status > Information > Relay Info > Comms CPU*

- **Comms CPU FW Version:** The firmware version of the Comms CPU
- **Comms CPU Firmware Date:** The Comms CPU firmware build date in the format mm/dd/yyyy
- **Comms CPU Firmware Time:** The Comms CPU firmware build time
- **Boot Version:** The boot code version of the Comms CPU
- **Boot Date:** The Comms CPU boot code build date in the format mm/dd/yyyy
- **Boot Time:** The Comms CPU boot code build time
- **MAC Address 1:** The MAC address for Ethernet port 4
- **MAC Address 2:** The MAC address for Ethernet port 5

Hardware versions

Path: *Status > Information > Relay Info > Hardware Versions*

The Information related to the relay hardware is displayed here.

Hardware Versions	
FPGA Firmware Version	03:14:10:31
IO F CPLD	05:14:12:09
IO G CPLD	05:14:12:09
AN J CPLD	08:14:12:03
AN K CPLD	08:14:12:03
Display CPLD	02:13:05:10

Figure 305: Information for Hardware Versions

- **FPGA Firmware Version:** The firmware version of the FPGA
- **IO F CPLD:** The version of the CPLD in IO slot F
- **IO G CPLD:** The version of the CPLD in IO slot G
- **AN J CPLD:** The version of the CPLD in analog slot J
- **AN K CPLD:** The version of the CPLD in analog slot K
- **Display CPLD:** The version of the CPLD of the display

Environment

The Information related to Environmental is displayed here.

Note:

The Temperature Display setpoint can be changed from Celsius to Fahrenheit under **Setpoints > Device > Installation**.

Path: **Status > Information > Environment**

- **Instantaneous Temperature:** The most recent temperature measurement taken by the EAM.
- **Firmware Version:** The software version of the EAM module found in the relay.
- **Last Poll Date/ Time:** The date and time on which the last measurements were recorded in the format MM/DD/YY and HH/MM/SS.
- **Average Humidity:** The average of all the humidity measurements taken over time (last 1 hr) by the EAM.
- **Maximum Humidity:** The maximum humidity measurement taken by the EAM since it began recording data.
- **Minimum Humidity:** The minimum humidity measurement taken by the EAM since it began recording data.
- **Average Ambient Temp:** The average of all the instantaneous temperature measurements taken over time (last 1 hr) by the EAM.
- **Maximum Ambient Temp:** The maximum temperature taken by the EAM since it began recording data.
- **Minimum Ambient Temp:** The minimum temperature taken by the EAM since it began recording data.
- **Humidity (e.g. <30%):** The accumulated amount of time (hrs) that the humidity measured by the EAM stayed in the range specified.
- **Temp (e.g. <=-20°C):** The accumulated amount of time (hrs) that the temperature measured by the EAM stayed in the range specified.
- **Temp and Humidity (e.g. >40°C and <55%):** The accumulated amount of time (hrs) that the temperature and humidity measured by the EAM stayed in the ranges specified.
- **Surge Count:** The number of surge (>500 V/1.2/50 µS) events that have occurred since the EAM started recording data.

The Information related to settings changes and settings file history is displayed here.

Settings Audit

Path: *Status > Information > Settings Audit*

- **Last Setting Change:** The date and time of the last setting change.
- **File Modified:**
- **File Received:**
- **File Origin:**
- **File Name:**

14.6 COMMUNICATIONS STATUS

14.6.1 GOOSE

The relay supports 16 GOOSE transmissions and 64 GOOSE receptions each with 64 items per transmission or reception. Non-structured GOOSE is supported. Each item within the GOOSE message can be a digital or analog value. Messages are launched within one scan of a digital point status change or an analog exceeding its deadband.

The server supports a subset of the server features described in part 7.2 of the IEC 61850 standard.

GOOSE Messaging

The details are shown in the table below:

Service	Launch Speed	Support for Programmable time to live	# of Tx	# of Rx	Test Bit Support	Number of items in each transmission or reception	Number of remote inputs per relay
Configurable GOOSE	Within 2 ms (1 CPU scan)	Time to live programmable from 1000 to 60000 ms	16	64	Y	64 Data Items per Data Set	32

14.6.2 COMMUNICATIONS STATUS SETTINGS

REMOTE INPUTS

Path: *Status > Communications > Remote Inputs*

The present state of the 32 remote inputs are shown here. The state displayed is the remote point unless the remote device has been established to be Offline in which case the value shown is the programmed default state for the remote input.

GGIO1 INDICATIONS

Path: *Status > Communications > GGIO1 Indications*

The present state of the 32 GGIO1 Indications are shown here. There are up to 32 GGIO indications that can be used to map any FlexLogic operand into the IED 61850 information model. Default value is "Off".

GOOSE STATUS

Path: *Status > Communications > GOOSE Status*

Range: OFF, ON

Default: OFF

This setting indicates GOOSE communications are being received. A **GOOSE STATUS** of "ON" indicates successful receipt of the last GOOSE packet. A **GOOSE STATUS** of "OFF" indicates the communications link has failed, with the speed this setting changes determined by the Update Time setting configured under GOOSE Transmission.

GOOSE HEADER

Path: *Status > Communications > GOOSE HDR Status*

Range: OFF, ON

Default: OFF

This setting validates the GOOSE packet structure. A **GOOSE HEADER STATUS** of "ON" indicates that the structure of the last GOOSE packet was valid.

GOOSE ANALOG

Path: *Status* > *Communications* > *GOOSE Analog AV*

FLOAT 1 to 24

Range:

Default: 0.0

SINT32 1 to 8

Range:

Default: 0

IEC 61850 STATUS

Path: *Status* > *Communications* > *IEC 61850 Status*

COMMS NOT VALIDATED OK

Range: NO, YES

Default: NO

COMMS NOT VALIDATED DONE

Range: YES, NO

Default: YES

COMMS VALIDATED OK

Range: YES, NO

Default: YES

COMMS VALIDATED DONE

Range: YES, NO

Default: YES

MAIN NOT VALIDATED OK

Range: NO, YES

Default: NO

MAIN NOT VALIDATED DONE

Range: YES, NO

Default: YES

MAIN VALIDATED OK

Range: YES, NO

Default: YES

MAIN VALIDATED DONE

Range: YES, NO

Default: YES

NOT RUNNING.ERROR CID

Range: NO, YES

Default: NO

RUNNING.DEFAULT CID

Range: NO, YES

Default: NO

RUNNING.SAVING CID TO FLASH

Range: NO, YES

Default: NO

CID HANDLING DONE

Range: YES, NO

Default: YES

NUMBER OF CONNECTED CLIENTS

Default: 0

CLIENT 1(8) IP ADDRESS

Range: 0, 0xFFFFFFFF

Default: 0

ACTIVITY STATUS

The communication state for each enabled communication type is shown by its value. The main CPU and Comms software sets/resets the active bits for all enabled communication types. The communication state bits are not latched.

Path: *Status > Communications > Activity Status*

SERIAL MODBUS

Range: NONE, ACTIVE

Default: NONE

ETHERNET MODBUS

Range: NONE, ACTIVE

Default: NONE

Note:

The **MODBUS ACTIVITY TIMEOUT** specifies the minimum time without Modbus communication. This timeout is used to declare the Modbus 'Loss of Communication' state. The **MODBUS ACTIVITY TIMEOUT** must be set to a value other than 0 for the Serial Modbus and Ethernet Modbus Activity Status to work properly.

Note:

MODBUS ACTIVITY TIMEOUT is set under: *Setpoints > Device > Communications > Modbus Protocol*

CONNECTIONS

Path: *Status > Communications > Connections*

MMS TCP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

MMS TCP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

Modbus TCP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

Modbus TCP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

DNP TCP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

DNP TCP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

IEC - 104 - Maximum

Range: 0 to 99 in steps of 1

Default: 0

IEC - 104 - Remaining

Range: 0 to 99 in steps of 1

Default: 0

OPC - UA - Maximum

Range: 0 to 99 in steps of 1

Default: 0

OPC - UA - Remaining

Range: 0 to 99 in steps of 1

Default: 0

SFTP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

SFTP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

14.7 OTHER STATUS SETTINGS

Switches

Path: Status > Switches

SWITCH 1(X)

Range: Not Configured, Opened, Closed, Intermittent, Discrepancy

Default: Not Configured

Last Trip Data

There is no Enabling/Disabling of this feature. It is always ON.

Path: Status > Last Trip Data

CAUSE

Range: Off, Any FlexLogic Operand

Default: No trip to Date

EVENT

Range: 0 to 4294967295 in steps of 1

Default: 0

DATE

Range: MM/DD/YYYY HH:MM

Default: 01/01/08 00:00:00

PARAMETER 1 to 64

Range: -2147483648 to 2147483647 in steps of 1

Default: 0

Arc Flash

Path: Status > Arc Flash > Arc Flash 1

The status value shows the state of the given Flex operand related to Arc Flash protection.

Light 1(4) PKP

Range: ON, OFF

HS Phase IOC PKP A/B/C

Range: ON, OFF

HS Ground IOC PKP

Range: ON, OFF

Arc Flash OP

Range: ON, OFF

Contact Inputs

Path: Status > Contact Inputs

The status of the Contact Inputs is shown here (see device menu via the menu path). The Off/On display indicates the logic state of the Contact Input.

Output Relays

Path: *Status > Output Relays*

The status of all output relays is shown here, see above. In the Parameter column, the value indicates the label on the output terminal. The Value column indicates the present ON or OFF state of the output relay.

Virtual Inputs

Path: *Status > Virtual Inputs 1(X)*

The state of all virtual inputs is shown here, see next figure. The value for each Virtual Input is shown on the control panel graphically as a toggle switch in either the On (I) state or the Off (O) state.

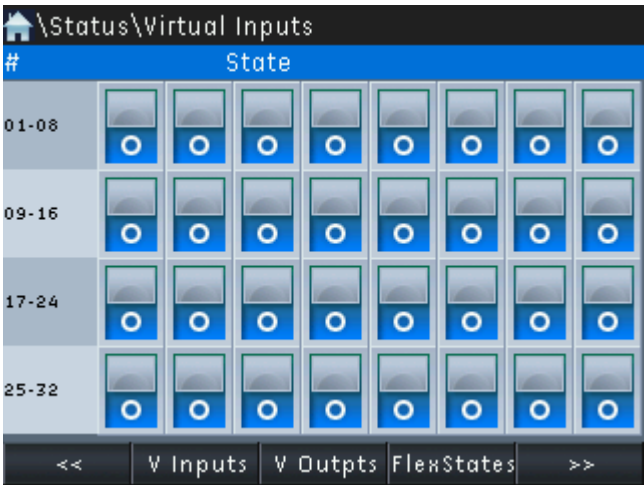


Figure 306: Status of Virtual Inputs, HMI

PARAMETER	VALUE
Virtual Input 1 ()	Off
Virtual Input 2 ()	Off
Virtual Input 3 ()	Off
Virtual Input 4 ()	Off
Virtual Input 5 ()	Off
Virtual Input 6 ()	Off
Virtual Input 7 ()	Off
Virtual Input 8 ()	Off
Virtual Input 9 ()	Off

Figure 307: Status of Virtual Inputs, EnerVista D&I Setup

Virtual Outputs

Path: *Status > Virtual Outputs*

The state of all virtual outputs is shown here, see next figure. The value for each Virtual Output is shown on the control panel graphically as a toggle switch in either the On (I) state or the Off (O) state.

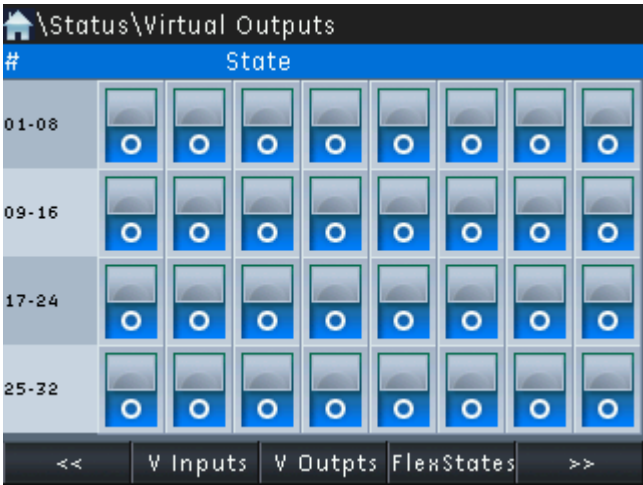


Figure 308: Status of Virtual Outputs, HMI

PARAMETER	VALUE
Virtual Output 1 ()	Off
Virtual Output 2 ()	Off
Virtual Output 3 ()	Off
Virtual Output 4 ()	Off
Virtual Output 5 ()	Off
Virtual Output 6 ()	Off
Virtual Output 7 ()	Off
Virtual Output 8 ()	Off

Figure 309: Status of Virtual Outputs, EnerVista D&I Setup

Flex State

Path: *Status > Flex States*

There are 256 Flex state bits available. The status value indicates the state of the given Flex state bit.

Device Status

The general status of system components is displayed here.

Path: *Status > Device Status*

RUNNING, SAVING CID to FLASH

Range: YES, NO

Default: NO

CID HANDLING DONE

Range: YES, NO

Default: YES

SELF-TEST FAULT

Range: YES, NO

Default: NO

MAINTENANCE

Range: YES, NO

Default: NO

IN SERVICE

Range: YES, NO

Default: YES

PICKUP STATE

Range: YES, NO

Default: YES

BREAKER X CONNECTED

Range: YES, NO

Default: YES

BREAKER X CLOSED

Range: YES, NO

Default: NO

BREAKER X TRIPPED

Range: YES, NO

Default: NO

ALARM

Range: YES, NO

Default: NO

TRIP

Range: YES, NO

Default: NO

ACTIVE GROUP

Range: SP Group 1-6 Active

Default: SP Group 1 Active

Clock Status

Path: Status > Clock

SYSTEM CLOCK

Range: MMM DD YY HH:MM:SS

RTC SYNC SOURCE

Range: None, Port 4 PTP Clock, Port 5 PTP Clock, IRIG-B, SNTP Server 1, SNTP Server 2

The RTC SYNC SOURCE actual value is the time synchronizing source the relay is using at present.

PTP Status

The present values of the PTP protocol are displayed here.

Path:Status > PTP

Grandmaster ID is the grandmaster Identity code being received from the present PTP grandmaster, if any. When the relay is not using any PTP grandmaster, this actual value is zero. The grandmaster Identity code is specified by PTP to be globally unique, so one can always know which clock is grandmaster in a system with multiple grandmaster-capable clocks.

RTC Accuracy is the estimated maximum time difference at present in the Real Time Clock (RTC), considering the quality information imbedded in the received time signal, how long the relay has had to lock to the time source, and in the case of time signal interruptions, the length of the interruption. The value 999,999,999 indicates that the magnitude of the estimated difference is one second or more, or that the difference cannot be estimated.

Port 4 (5) PTP State is the present state of the port's PTP clock. The PTP clock state is:

- DISABLED: If the port's function setting is Disabled
- NO SIGNAL: If enabled but no signal from an active master has been found and selected
- CALIBRATING: If an active master has been selected but lock is not at present established
- SYNCH'D (NO PDELAY): If the port is synchronized, but the peer delay mechanism is non-operational
- SYNCHRONIZED: If the port is synchronized

HMI Display

The HMI Display menu option opens a virtual HMI Display window within the EnerVista D&I Setup. The virtual HMI display provides front panel access to the relay with clickable buttons and realtime display of the front panel, including navigation and viewing relay settings, screens, and LEDs.

Path:Status > HMI Display

Note:

The HMI Display functionality is not available with the Advanced Cybersecurity option

CHAPTER 15

METERING

15.1 CHAPTER OVERVIEW

This chapter provides some information about the device maintenance.

This chapter contains the following sections:

Chapter Overview	689
Metering Overview	690
Metering Summary	693
Generator functions	694
Impedance/admittance	697
Currents	699
Neutral IOC	701
Voltages	702
Frequency	705
Harmonics	707
Synchrocheck	708
Inter-Turn Fault Detection	709
Power functions	712
Energy	716
Demand	719
Power Demand	720
Voltage Transformer Fuse Failure	721
Arc Flash	722
Resistance Temperature Detectors	723
Resistance Temperature Detectors	724
Resistance Temperature Detectors	725
Resistance Temperature Detectors	726
Analog Inputs	727
FlexElements	728

15.2 METERING OVERVIEW

All phasors calculated by 8 Series relays and used for protection, control and metering functions are rotating phasors, that maintain the correct phase angle relationships with each other at all times.

For display and oscillography purposes, all phasor angles in a given relay are referred to an AC input channel pre-selected as the phase A voltage. If there is no voltage input, the phase A current is used for angle reference. The phase angle of the reference signal always display zero degrees and all other phase angles are relative to this signal. If the preselected reference signal is not measurable at a given time, the phase angles are not referenced.

The phase angles are always presented as negative values in the lagging direction as illustrated in the following.

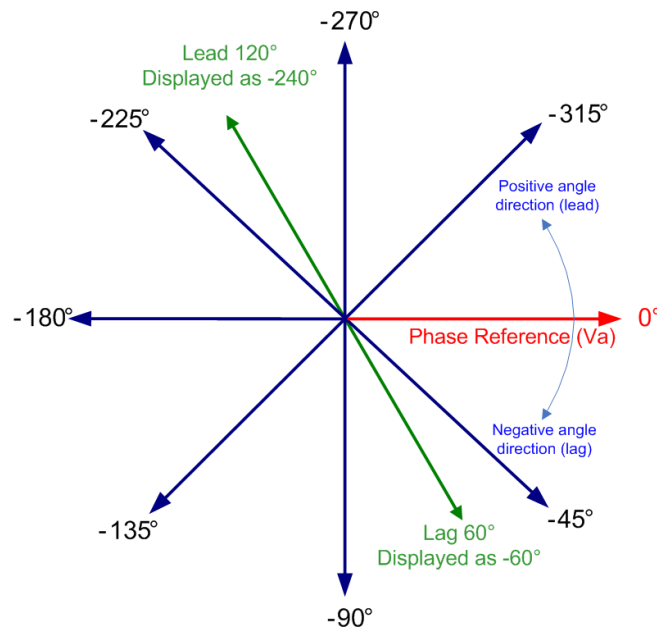


Figure 310: Phase Angle Measurement 8 Series Convention

The relay measures all RMS (root mean square) currents and voltages, frequency, and all auxiliary analog inputs. Other values like neutral current, phasor symmetrical components, power factor, power (real, reactive, apparent), are derived. A majority of these quantities are recalculated every protection pass and perform protection and monitoring functions. Displayed metered quantities are updated approximately three (3) times a second for readability. All phasors and symmetrical components are referenced to the A-N voltage phasor for wye-connected VTs; to the A-B voltage phasor for delta-connected VTs; or to the phase A current phasor when no voltage signals are present.

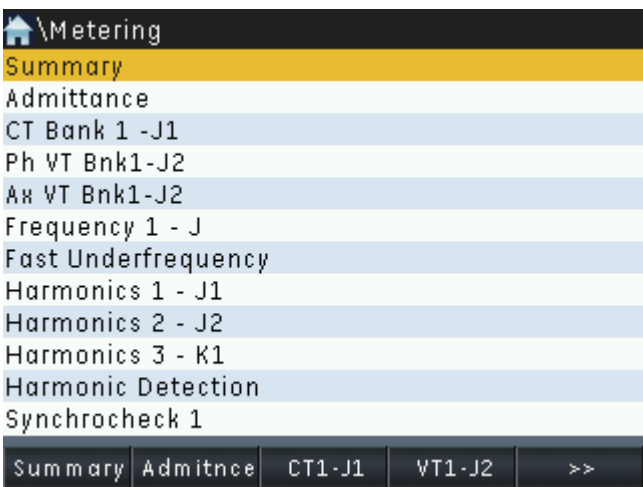


Figure 311: An example of the Metering menu (not representative of all models)

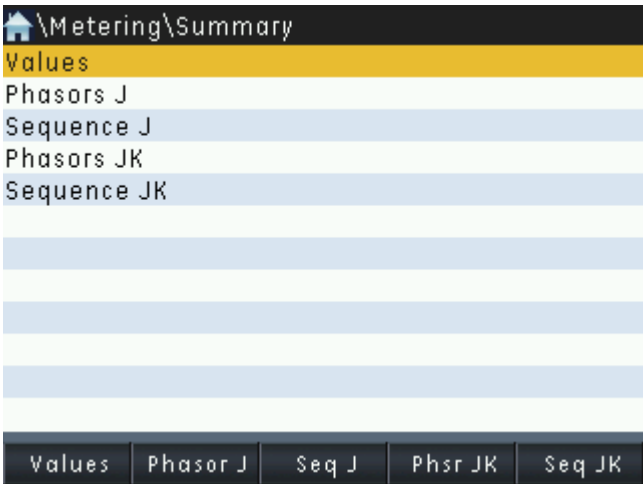



Figure 312: An example of the Metering Summary submenu

All the measured values can be viewed on the front panel display or monitored by remote devices through the communication system. An example of the HMI display showing actual currents is shown here.

\Metering\CT Bank 1 -J1		
Item Name	Value	Unit
J1 Ia	0.000	A
J1 Ib	0.000	A
J1 Ic	0.000	A
J1 Ig	0.000	A
J1 In	0.000	A
J1 Ia RMS	0.000	A
J1 Ib RMS	0.000	A
J1 Ic RMS	0.000	A
J1 Ig RMS	0.000	A
J1 In RMS	0.000	A
J1 Ia Angle	0.0	°
Summary	Motor	CT1-J1 CT2-K1 >>

Figure 313: An example of HMI display showing actual currents

The measured values can also be displayed in the PC (EnerVista D&I Setup). An example follows.

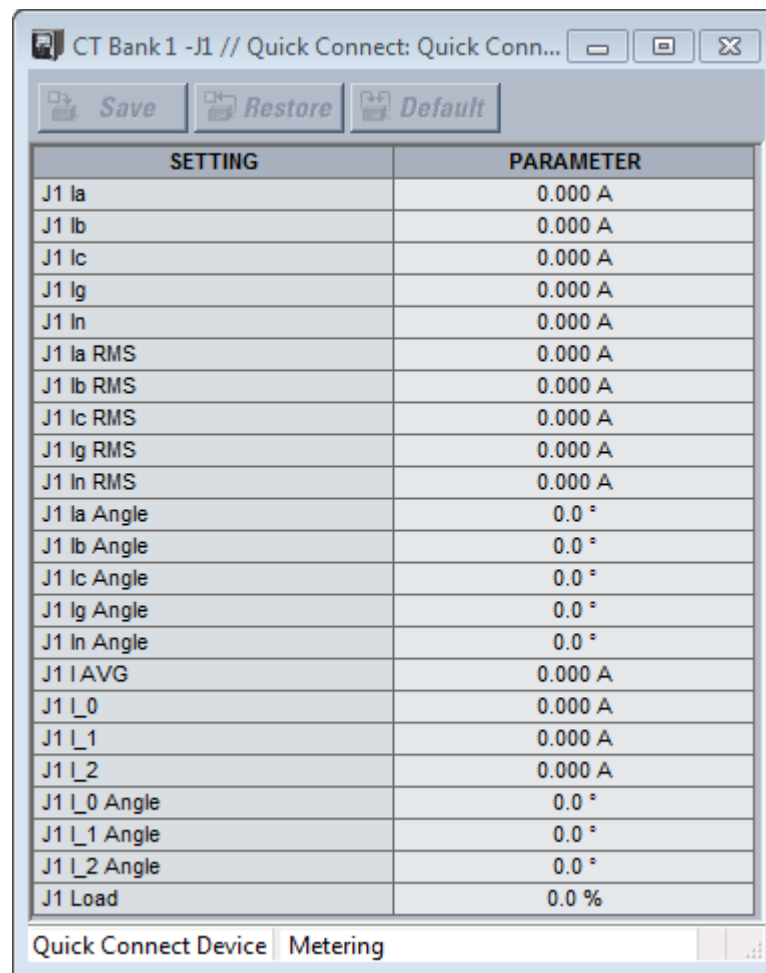

SETTING	PARAMETER
J1 Ia	0.000 A
J1 Ib	0.000 A
J1 Ic	0.000 A
J1 Ig	0.000 A
J1 In	0.000 A
J1 Ia RMS	0.000 A
J1 Ib RMS	0.000 A
J1 Ic RMS	0.000 A
J1 Ig RMS	0.000 A
J1 In RMS	0.000 A
J1 Ia Angle	0.0 °
J1 Ib Angle	0.0 °
J1 Ic Angle	0.0 °
J1 Ig Angle	0.0 °
J1 In Angle	0.0 °
J1 I AVG	0.000 A
J1 L0	0.000 A
J1 L1	0.000 A
J1 L2	0.000 A
J1 L0 Angle	0.0 °
J1 L1 Angle	0.0 °
J1 L2 Angle	0.0 °
J1 Load	0.0 %

Quick Connect Device Metering

Figure 314: Current Metering Screen

The complete list of actual values available in the Metering menu is covered in the following sections.

15.3 METERING SUMMARY

Path: *Metering* > *Summary*

The Metering Summary menu consists of three display screens, including a graphical presentation of key phasor quantities as shown below:

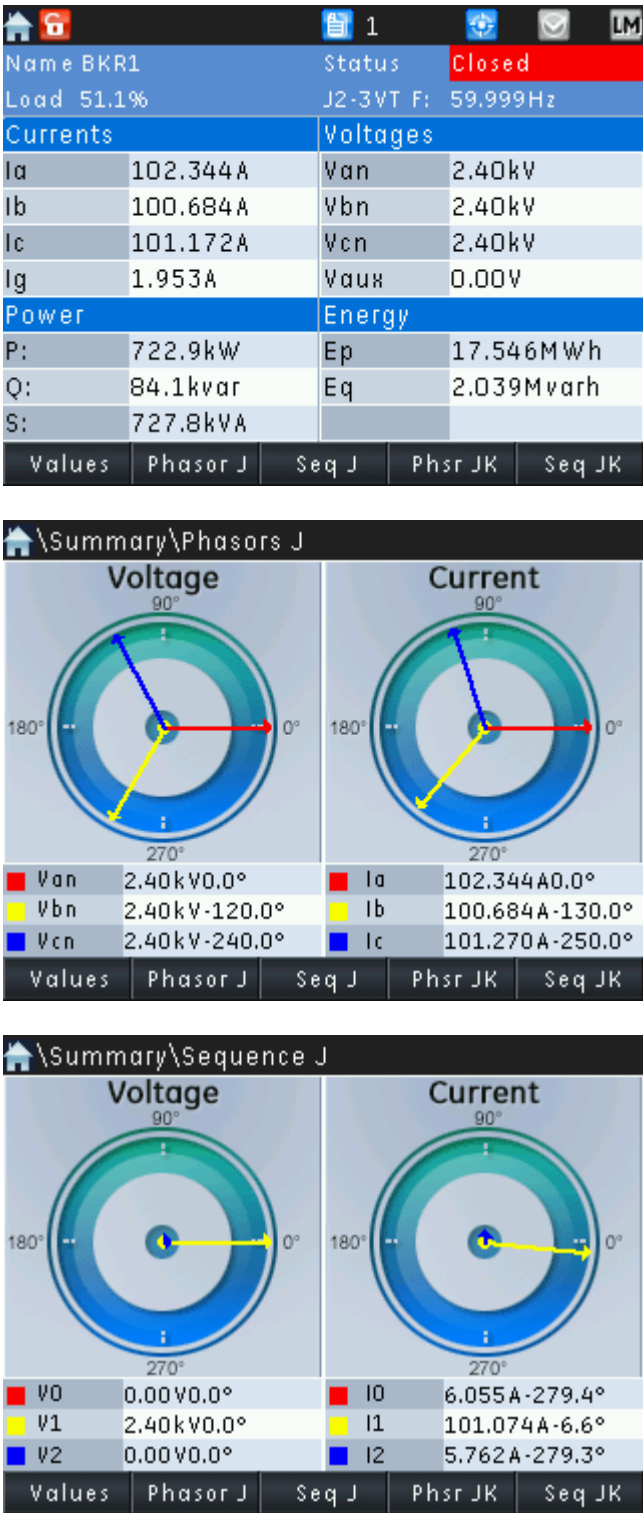


Figure 315: Metering summary screens

15.4 GENERATOR FUNCTIONS

15.4.1 GENERAL

Path: *Metering > Generator > General*

Therm Model Biased Load

Range: 0.00 to 40.00 x FLA in steps of 0.01 x FLA

Default: 0.00 x FLA

This value represents the unbalance bias generator load that shows the equivalent motor heating current caused by the Unbalance Bias K Factor.

15.4.2 PERCENT DIFFERENTIAL CURRENT

Path: *Metering > Generator > Percent Differential*

The phasors of differential and restraint currents are displayed in primary amperes.

Phase A differential (Ia Diff)

Range: 0.000 to 120000.000 A

Phase B differential (Ib Diff)

Range: 0.000 to 120000.000 A

Phase C differential (Ic Diff)

Range: 0.000 to 120000.000 A

Phase A restraint (Ia Restr)

Range: 0.000 to 120000.000 A

Phase B restraint (Ib Restr)

Range: 0.000 to 120000.000 A

Phase C restraint (Ic Restr)

Range: 0.000 to 120000.000 A

15.4.3 OVERALL DIFFERENTIAL CURRENT

Path: *Metering > Generator > Overall Differential*

Ia Overall Differential (Ia Ovrl Diff)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ib Overall Differential (Ib Ovrl Diff)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ic Overall Differential (Ic Ovrl Diff)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ia Overall Restraint (Ia Ovrl Restr)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ib Overall Restraint (Ib Ovrl Restr)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ic Overall Restraint (Ic Ovrl Restr)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ia Differential 2nd Harmonic (Ia Diff 2nd Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ib Differential 2nd Harmonic (Ib Diff 2nd Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ic Differential 2nd Harmonic (Ic Diff 2nd Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ia Differential 5th Harmonic (Ia Diff 5th Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ib Differential 5th Harmonic (Ib Diff 5th Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ic Differential 5th Harmonic (Ic Diff 5th Harm)

Range: 0.0 to 100.0% in steps of 0.1

Note:

The values for differential and restraint currents are displayed in per times CT. The CT primary, from the K2 CT Bank assigned as Signal Input for Winding 1, is the reference CT (base CT) used for estimating the differential and restraint currents. The winding reference is explained in the Transformer Setup section.

15.4.4 SPEED

Path: **Metering** > **Generator** > **Speed**

SPEED

Range: 0 to 8640 RPM in steps of 1

Default: 0

15.4.5 FREQUENCY OOB ACCUMULATION

The Frequency Out-Of-Band (OOB) Accumulation feature provides diagnostic information and alarms based on the accumulated off-nominal (out-of-band) frequency operation time of a turbine over several frequency bands. Details of the feature settings can be found under Path: **Setpoints** > **Monitoring** > **Generator** > **Frequency OOB Accumulation** > **General**

Note:

The following screen is only displayed if **Setpoints \ Monitoring \ Generator \ Freq OOB Accum \ Accum 1 \ Function** is not disabled.

Path: Setpoints > Metering > Generator > Frequency OOB Accumulation

FREQ OOB 1(7) ACCUM

Range: 0 to 100 % in steps of 0.1 %

For configured accumulators, this value displays to the nearest 0.1% the ratio of present accumulation to the TIME LIMIT set for the accumulator.

15.4.6 STATOR GROUND 3RD HARMONIC

Path: Metering > Generator > Stat Gnd 3rd Harm

3rd Harm VN in Sec

Range: 0.00 to 99.99 V in steps of 0.01 V

Default: 0.00 V

This value represents the magnitude of the 3rd harmonic component of neutral voltage connected via an auxiliary voltage channel of the relay Ax VT Bnk1-J2 bank input.

3rd Harm VO in Sec

Range: 0.00 to 99.99 V in steps of 0.01 V

Default: 0.00 V

This value represents the magnitude of the 3rd harmonic in the zero-sequence voltage at the generator output terminals.

3rd Harm VN+VO in Sec

Range: 0.00 to 99.99 V in steps of 0.01 V

Default: 0.00 V

This value represents the vectorial sum of the secondary voltage quantities **3rd Harm VN in Sec** and **3rd Harm VO in Sec**.

Note:

Metering value **3rd Harm VN+VO in Sec** is only available if **Setpoints>Protection>Group x >Generator > 3rd Harm Voltage Difference trip** or alarm functions are not disabled.

15.5 IMPEDANCE/ADMITTANCE

15.5.1 IMPEDANCE/ADMITTANCE

15.5.2 PHASE DISTANCE

The loop impedances of three phase distance elements are shown here. The ohm values are presented in secondary ohms.

Path: Metering > Impedance > Phase Distance

AB LOOP RESISTANCE RAB

Range: -21474836.47 to 21474836.47 in step of 0.01

Default: 0.00 ohm

AB LOOP REACTANCE XAB

Range: -21474836.47 to 21474836.47 in step of 0.01

Default: 0.00 ohm

AB LOOP IMPEDANCE ZAB

Range: 0.00 to 21474836.47 in step of 0.01

Default: 0.00 ohm

AB LOOP IMPEDANCE ANGLE

Range: -359.9° to 359.9° in step of 0.1

Default: 0.0°

BC LOOP RESISTANCE RBC

Range: -21474836.47 to 21474836.47 in step of 0.01

Default: 0.00 ohm

BC LOOP REACTANCE XBC

Range: -21474836.47 to 21474836.47 in step of 0.01

Default: 0.00 ohm

BC LOOP IMPEDANCE ZBC

Range: 0.00 to 21474836.47 in step of 0.01

Default: 0.00 ohm

BC LOOP IMPEDANCE ANGLE

Range: -359.9° to 359.9° in step of 0.1

Default: 0.0°

CA LOOP RESISTANCE RCA

Range: -21474836.47 to 21474836.47 in step of 0.01

Default: 0.00 ohm

CA LOOP REACTANCE XCA

Range: -21474836.47 to 21474836.47 in step of 0.01

Default: 0.00 ohm

CA LOOP IMPEDANCE ZCA

Range: 0.00 to 21474836.47 in step of 0.01

Default: 0.00 ohm

CA LOOP IMPEDANCE ANGLE

Range: -359.9° to 359.9° in step of 0.1

Default: 0.0°

15.6 CURRENTS

Note:
The number of Currents supported is order code dependent.

The CT bank names shown are set in the CT Bank Name setpoints under **Setpoints > System > Current Sensing > CT Bank X**.

Note:
Below is a complete list of quantities. The quantities visible to you will depend on the model and order code

Path: Metering > CT Bank 1-J1 (CT Bank 2-K1) (CT Bank 3-K2) (CT Bank 4-JK)

Phase A/B/C (Ia/Ib/Ic) 0.000 A

Range: 0.000 to 12000.000 A

Ground (Ig)

Range: 0.000 to 12000.000 A

Sensitive Ground (Isg)

Range: 0.000 to 1200.000 A

Neutral (In)

Range: 0.000 to 12000.000 A

Phase A/B/C (Ia/Ib/Ic RMS)

Range: 0.000 to 12000.000 A

Ground (Ig RMS)

Range: 0.000 to 12000.000 A

Sensitive Ground (Isg RMS)

Range: 0.000 to 1200.000 A

Neutral (In RMS)

Range: 0.000 to 12000.000 A

Phase A/B/C Angle (Ia/Ib/Ic Angle)

Range: 0.0 to 359.9°

Ground Angle (Ig Angle)

Range: 0.0 to 359.9°

Sensitive Ground Angle (Isg Angle)

Range: 0.0 to 359.9°

Neutral Angle (In Angle)

Range: 0.0 to 359.9°

Average (I AVG)

Range: 0.000 to 12000.000 A

Zero Sequence (I_0)

Range: 0.000 to 12000.000 A

Positive Sequence (I_1)

Range: 0.000 to 12000.000 A

Negative Sequence (I_2)

Range: 0.000 to 12000.000 A

Zero Sequence (I_0 Angle)

Range: 0.0 to 359.9°

Positive Sequence Angle (I_1 Angle)

Range: 0.0 to 359.9°

Negative Sequence Angle (I_2 Angle)

Range: 0.0 to 359.9°

Ground Differential (Igd)

Range: 0.000 to 12000.000 A

Ground Differential Angle (Igd Angle)

Range: 0.0 to 359.9°

Load (I%) (not applicable to all models)

Range: 0.0 to 100.0%

Note:

Percent of load-to-trip is calculated from the phase with the highest current reading. This metered value is the ratio between the highest phase current injected for the current bank, and the lowest pickup setting among all Phase Timed and Instantaneous overcurrent elements. If all these elements are disabled, the value displayed is 0.

Note:

For example, if the lowest pickup is 0.5 xCT, and the highest injected phase current is 1 xCT, the displayed value for load-to-trip is 200%.

15.7 NEUTRAL IOC

Path: *Metering > Neutral IOC*

Neutral IOC1(X) Iop

Range: 0.000 to 12000.000 A

Default: 0 A

This value represents the operating quantity of the Neutral IOC element. For more details, see Neutral Instantaneous Overcurrent Protection.

15.8 VOLTAGES

Note:

The number of Voltages supported is order code dependent.

Note:

*The VT bank names shown are set in the Phase VT Bank Name setpoints under **Setpoints > System > Voltage Sensing > VT**.*

Note:

Below is a complete list of quantities. The quantities visible to you will depend on the model and order code

Path: Metering > VT Bank > Ph VT Bnk1-J2 (Ph VT Bnk2-K2)

Phase A (Van)

Range: 0.00 to 600000.00 V

Phase B (Vbn)

Range: 0.00 to 600000.00 V

Phase C (Vcn)

Range: 0.00 to 600000.00 V

Phase to Phase AB (Vab)

Range: 0.00 to 600000.00 V

Phase to Phase BC (Vbc)

Range: 0.00 to 600000.00 V

Phase to Phase CA (Vca)

Range: 0.00 to 600000.00 V

Neutral (Vn)

Range: 0.00 to 600000.00 V

Phase A (Van RMS)

Range: 0.00 to 600000.00 V

Phase B (Vbn RMS)

Range: 0.00 to 600000.00 V

Phase C (Vcn RMS)

Range: 0.00 to 600000.00 V

Phase to Phase AB (Vab RMS)

Range: 0.00 to 600000.00 V

Phase to Phase BC (Vbc RMS)

Range: 0.00 to 600000.00 V

Phase to Phase CA (Vca RMS)

Range: 0.00 to 600000.00 V

Neutral (Vn RMS)

Range: 0.00 to 600000.00 V

Phase A Angle (Van Angle)

Range: 0.0 to 359.9°

Phase B Angle (Vbn Angle)

Range: 0.0 to 359.9°

Phase C Angle (Vcn Angle)

Range: 0.0 to 359.9°

Phase to Phase AB Angle (Vab Angle)

Range: 0.0 to 359.9°

Phase to Phase BC Angle (Vbc Angle)

Range: 0.0 to 359.9°

Phase to Phase CA Angle (Vca Angle)

Range: 0.0 to 359.9°

Neutral Angle (Vn Angle)

Range: 0.0 to 359.9°

Average Phase to Phase (V AVG L-L)

Range: 0.00 to 600000.00 V

Average Phase (V AVG L-N)

Range: 0.00 to 600000.00 V

Zero Sequence (V0)

Range: 0.00 to 600000.00 V

Positive Sequence (V1)

Range: 0.00 to 600000.00 V

Negative Sequence (V2)

Range: 0.00 to 600000.00 V

Zero Sequence Angle (V0 Angle)

Range: 0.0 to 359.9°

Positive Sequence Angle (V1 Angle)

Range: 0.0 to 359.9°

Negative Sequence Angle (V2 Angle)

Range: 0.0 to 359.9°

Path: *Metering* > *Aux VT Bank* > *Ax VT Bnk1-J2 (Ax VT Bnk2-K2)*

Auxiliary Voltage (Vaux)

Range: 0.00 to 600000.00 V

Auxiliary Voltage RMS (Vaux RMS)

Range: 0.00 to 600000.00 V

Auxiliary Voltage Angle (Vaux Angle)

Range: 0.0 to 359.9°

15.9 FREQUENCY

Note:

Below is a complete list of quantities. The quantities visible to you will depend on the model and order code

Path: *Metering* > *Frequency 1 - J*

Frequency (Current Input J1-CT)

Range: 2.000 to 90.000 Hz

CT Frequency

Range: 20 to 100 Hz

CT Frequency Rate of Change

Range: -20.00 to 20.00 Hz/s

Frequency Rate of Change (Current Input J1-CT)

Range: -20.00 to 20.00 Hz/s

Frequency (Phase Voltage Input J2-3VT)

Range: 2.000 to 90.000 Hz

3 VT Frequency

Range: 20 to 100 Hz

3 VT Frequency Rate of Change

Range: -20.00 to 20.00 Hz/s

Frequency Rate of Change (Phase Voltage Input J2-3VT)

Range: -20.00 to 20.00 Hz/s

Frequency (Auxiliary Voltage Input J2-Vx)

Range: 2.000 to 90.000 Hz

Frequency Rate of Change (Auxiliary Voltage Input J2-Vx)

Range: -20.00 to 20.00 Hz/s

Frequency (Phase Voltage Input LEA1)

Range: 2.000 to 90.000 Hz

Frequency Rate of Change (Phase Voltage Input LEA1)

Range: -20.00 to 20.00 Hz/s

Frequency (Phase Voltage Input LEA2)

Range: 2.000 to 90.000 Hz

Frequency Rate of Change (Phase Voltage Input LEA2)

Range: -20.00 to 20.00 Hz/s

15.9.1 HIGH-SPEED FREQUENCY

Path: *Metering > Hi-speed Freq*

The high speed frequency and high speed rate of change monitored in the High-Speed Underfrequency element are displayed here only if the High Speed Frequency is Enabled under the Common Setup section.

- High Speed Frequency
- High Speed ROCOF

Range: -120.00 to 120.00 Hz/s in steps of 0.01

HIGH-SPEED FREQ MAG

Range: 40.00 to 70.00 Hz in steps 0.01 Hz

Default: 60.00 Hz

HIGH-SPEED ROCOF

Range: -120.00 to 120.00 Hz/sec in steps 0.01 Hz/sec

Default: 0.00 Hz/sec

4TH HIGH-SPEED FREQ MAG

Range: 40.00 to 70.00 Hz in steps 0.01 Hz

Default: 60.00 Hz

4TH HIGH-SPEED ROCOF

Range: -120.00 to 120.00 Hz/sec in steps 0.01 Hz/sec

Default: 0.00 Hz/sec

15.9.2 VOLTS PER HERTZ

Path: *Metering > Volts per Hertz*

VOLTS PER HERTZ 1 (2)

Range: 0.00 to 4.00 V/Hz in steps of 0.01

Default: 0.00 V/Hz

15.10 HARMONICS

Note:

The number of Harmonics supported is dependent on the model and the order code.

All values relate to phase currents measured on the input cards (J1, etc.).

Path: *Metering* > *Harmonics 1 - J1*

Phase A/B/C Total Harmonic Distortion (Phase A/B/C THD)

Range: 0.0 to 100.0%

Phase A/B/C Second Harmonic (Phase A/B/C 2)

Range: 0.0 to 100.0%

Phase A/B/C Third Harmonic (Phase A/B/C 3)

Range: 0.0 to 100.0%

...

Phase A/B/C Twenty Fifth Harmonic (Phase A/B/C 25)

Range: 0.0 to 100.0%

15.10.1 HARMONIC DETECTION

The second, third, fourth, and fifth harmonics per phase are shown here. The harmonics values are presented in percent relative to the fundamental magnitude.

It should be noted that the similar harmonic ratios and THD values are also displayed under the general metering menus, **Harmonics 1 - J1 Current**, **Harmonics 3 - K1 Current**, or **Harmonics 4 - K2 Current**, where all values are calculated every three cycles. The THD values used in the Harmonic Detection element are the same to the general metering, so they are not shown here again. The harmonic ratios in the Harmonic Detection element are calculated and updated every protection pass.

Path: *Metering* > *Harmonic Detection*

HD Ph A/B/C 2nd Harm

Range: 0.00 to 100.0%

HD Ph A/B/C 3rd Harm

Range: 0.00 to 100.0%

HD Ph A/B/C 4th Harm

Range: 0.00 to 100.0%

HD Ph A/B/C 5th Harm

Range: 0.00 to 100.0%

15.11 SYNCHROCHECK

Path: *Metering* > *Synchrocheck*

Bus Voltage Magnitude (Bus Volts Magnitude)

Range: 0.00 to 600000.00 V

Bus Voltage Angle (Bus Volts Angle)

Range: 0.0 to 359.9°

Bus Voltage Frequency (Bus Volts Frequency)

Range: 2.000 to 90.000 Hz

Line Voltage Magnitude (Line Volts Magnitude)

Range: 0.00 to 600000.00 V

Line Voltage Angle (Line Volts Angle)

Range: 0.0 to 359.9°

Line Voltage Frequency (Line Volts Frequency)

Range: 2.000 to 90.000 Hz

Voltage Difference (Volts Difference)

Range: 0.00 to 600000.00 V

Voltage Angle Difference (Angle Difference)

Range: 0.0 to 359.9°

Voltage Frequency Difference (Frequency Difference)

Range: 2.000 to 90.000 Hz

15.12 INTER-TURN FAULT DETECTION

The harmonic derating factor for each of the windings shows the effect of non-sinusoidal load currents on the power transformer's rated full load current. The actual values messages display the harmonic derating factor for windings 1 through 3.

The relay displays winding load parameters as follows:

Path: *Metering* > *Transformer* > *Inter-Turn Fault Detection*

Winding

Inter-Turn Flt Comp Ia Diff

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Phase A compensated differential current.

Inter-Turn Flt Comp Ib Diff

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Phase B compensated differential current.

Inter-Turn Flt Comp Ic Diff

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Phase C compensated differential current.

Inter-Turn Flt ka Factor Mag

Default: 0.0000

Range: 0.0000 to 1.2000 in steps of 0.0001

Magnitude of Phase A voltage compensation factor.

Inter-Turn Flt kb Factor Mag

Default: 0.0000

Range: 0.0000 to 1.2000 in steps of 0.0001

Magnitude of Phase B voltage compensation factor.

Inter-Turn Flt kc Factor Mag

Default: 0.0000

Range: 0.0000 to 1.2000 in steps of 0.0001

Magnitude of Phase C voltage compensation factor.

Inter-Turn Flt ka Factor Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle of phase A voltage compensation factor.

Inter-Turn Flt kb Factor Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle of phase B voltage compensation factor.

Inter-Turn Flt kc Factor Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle of phase C voltage compensation factor.

Inter-Turn Flt Raw Ia Diff Mag

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Magnitude phase A differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ib Diff Mag

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Magnitude phase B differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ic Diff Mag

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Magnitude phase C differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ia Diff Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle phase A differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ib Diff Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle phase B differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ic Diff Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle phase C differential current without 0.04 x CT cutoff.

1 load (W1 Load (% of rated))

Range: 0.0 to 100.0 %

Winding 1 average phase current (W1 Average Ph Current)

Range: 0.000 to 120000.000 A

Winding 1 harmonic derating factor (W1 Harm Derate Factor)

Range: 0.00 to 1.00

Winding 2 load (W2 Load (% of rated))

Range: 0.0 to 100.0 %

Winding 2 average phase current (W2 Average Ph Current)

Range: 0.000 to 120000.000 A

Winding 2 harmonic derating factor (W2 Harm Derate Factor)

Range: 0.00 to 1.00

Winding 3 load (W3 Load (% of rated))

Range: 0.0 to 100.0 %

Winding 3 average phase current (W3 Average Ph Current)

Range: 0.000 to 120000.000 A

Winding 3 harmonic derating factor (W3 Harm Derate Factor)

Range: 0.00 to 1.00

For a two winding transformer the winding load and winding average phase current are calculated as:

$$W(1/2) \text{ Load (\% of rated)} = \sqrt{3} \times I_{\text{avg}}(1/2) \times V_{\text{rated}}(1/2) \times 100\% / S_{\text{rated}}$$

Where:

I_{avg} = **(I_a + I_b + I_c)/3** is the actual average phase current (W(1/2) Average Ph Current) for the corresponding winding.

I_a , **I_b** , **I_c** are magnitudes of the corresponding actual phase currents of the winding.

V_{rated} is the rated phase to phase nameplate voltage for the corresponding winding.

S_{rated} is the rated nameplate apparent power for the transformer.

For a three winding transformer the winding load and winding *average phase current are calculated as:*

$$W(1/2/3) \text{ Load (\% of rated)} = \sqrt{3} \times I_{\text{avg}}(1/2/3) \times V_{\text{rated}}(1/2/3) \times 100\% / S_{\text{Wrated}}(1/2/3)$$

Where:

I_{avg} = **(I_a + I_b + I_c)/3** is the actual average phase current (W(1/2/3) Average Ph Current) for the corresponding winding.

I_a , **I_b** , **I_c** are magnitudes of the corresponding actual phase currents of the winding.

V_{rated} is the rated phase to phase nameplate voltage for the corresponding winding.

S_{rated} is the rated nameplate apparent power for the transformer.

15.13 POWER FUNCTIONS

15.13.1 POWER

The following figure illustrates the convention used for measuring power and energy in the 8 Series devices.

Note:

Power 1 is calculated using 3-phase J1 Currents & 3-phase J2 Voltages.

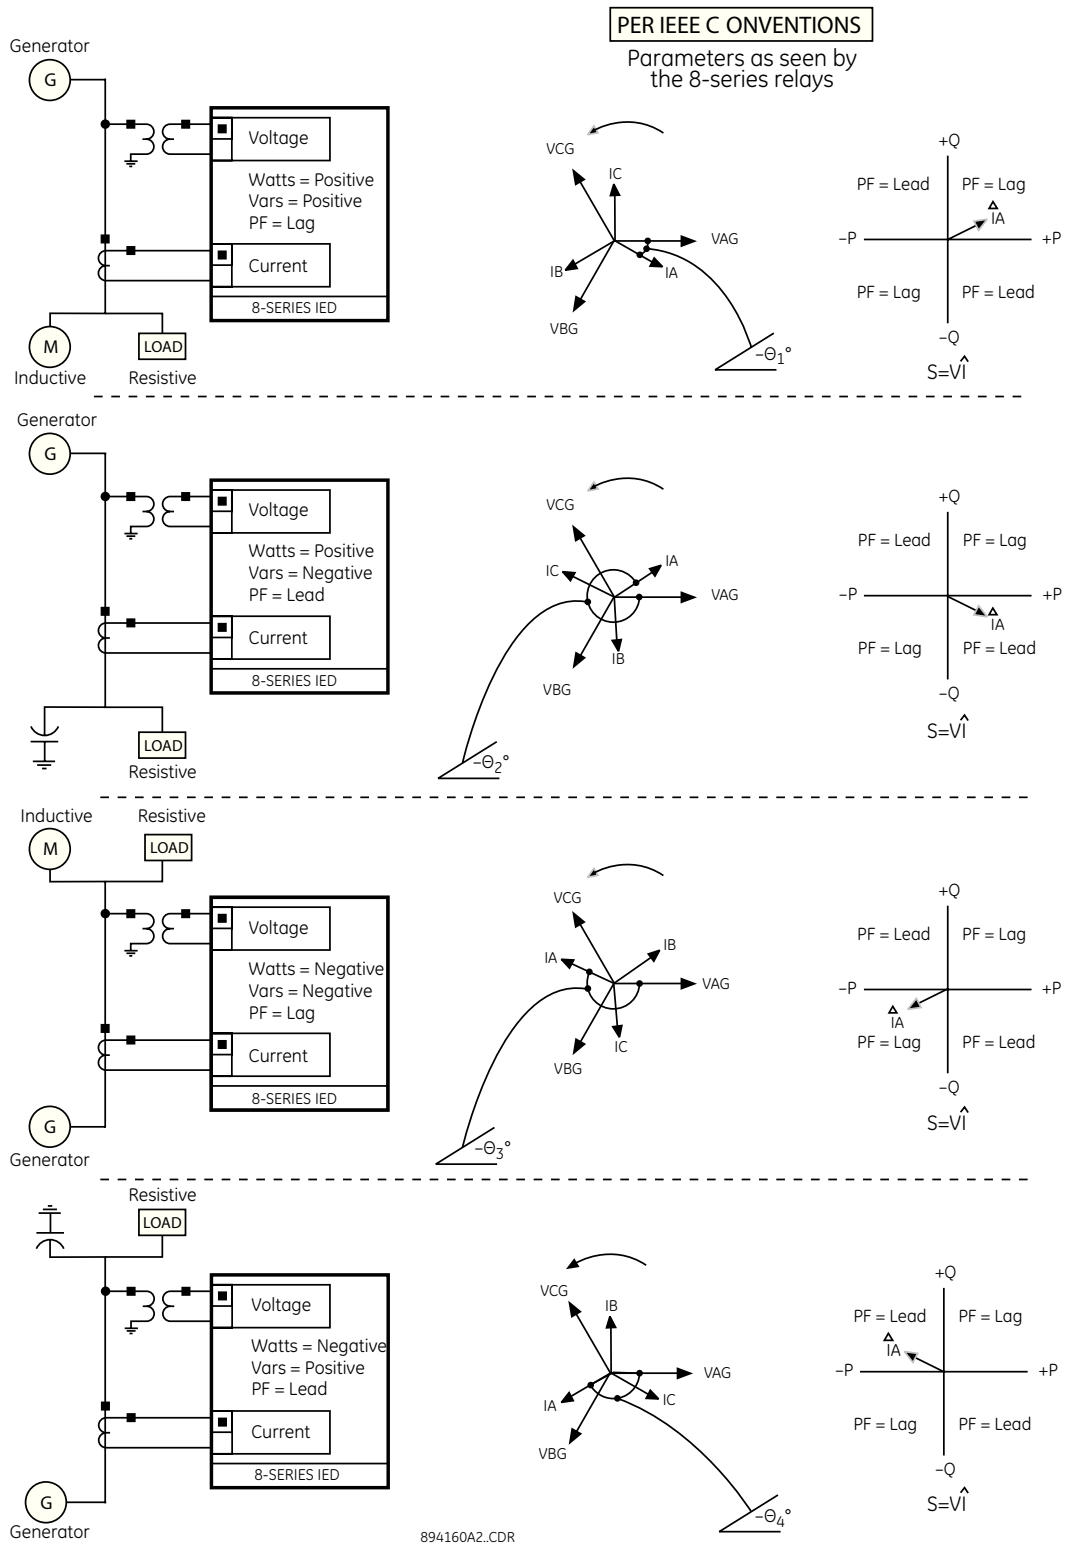


Figure 316: Flow direction of signed values for watts and VARs

Path: Metering > Power 1(X)

Real Total (Real)

Range: - 214748364.8 kW to 214748364.7 kW

Reactive Total (Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Apparent Total (Apparent)

Range: 0 kVA to 214748364.7 kVA

Phase A Real (Ph A Real)

Range: - 214748364.8 kW to 214748364.7 kW

Phase B Real (Ph B Real)

Range: - 214748364.8 kW to 214748364.7 kW

Phase C Real (Ph C Real)

Range: - 214748364.8 kW to 214748364.7 kW

Phase A Reactive (Ph A Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Phase B Reactive (Ph B Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Phase C Reactive (Ph C Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Phase A Apparent (Ph A Apparent)

Range: 0 kVA to 214748364.7 kVA

Phase B Apparent (Ph B Apparent)

Range: 0 kVA to 214748364.7 kVA

Phase C Apparent (Ph C Apparent)

Range: 0 kVA to 214748364.7 kVA

Power Factor Total (PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

Phase A Power Factor (Ph A PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

Phase B Power Factor (Ph B PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

Phase C Power Factor (Ph C PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

15.13.2 POWER FACTOR

Path: Metering > Power Factor

The power factor value input to the power factor element(s) is displayed here. Note that the value may not be equal to the power factor value displayed under **Metering > Power 1** since the supervision conditions are applied in the element.

POWER FACTOR 1(X)

Range: -0.99 to 1.00 in steps of 0.01

Default: 0.00

15.13.3 DIRECTIONAL POWER

Path: Metering > Directional Power

The effective operating quantities of the sensitive directional power elements are displayed here. The display may be useful to calibrate the feature by compensating the angular errors of the CTs and VTs with the use of the **RCA** and **CALIBRATION** settings.

Directional Power 1

Range: -214748364.8 kW to 214748364.7 kW

Default: 0.0 kW

...

Directional Power X

Range: -214748364.8 kW to 214748364.7 kW

Default: 0.0 kW

15.14 ENERGY

15.14.1 ENERGY (X)

Note:

Below is a complete list of quantities. The quantities visible to you will depend on the model and order code.

Path: *Metering* > *Energy* > *Energy 1(X)*

Reset Energy D/T

Range: MM/DD/YY HH:MM:SS

Positive Watt Hours (Pos WattHours)

Range: 0.000 MWh to 4294967.295 MWh

Pos WattHours Cost

Default: 0.00 \$ to 42949672.95 \$

Negative Watt Hours (Neg WattHours)

Range: 0.000 MWh to 4294967.295 MWh

Neg WattHours Cost

Default: 0.00 \$ to 42949672.95 \$

Positive Var Hours (Pos VarHours)

Range: 0.000 Mvarh to 4294967.295 Mvarh

Negative Var Hours (Neg VarHours)

Range: 0.000 Mvarh to 4294967.295 Mvarh

15.14.2 ENERGY LOG

Path: *Metering* > *Energy 1* > *Energy Log*

Pwr1 Last Event Pos WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This is the logged value of Pos WattHours energy accumulated during the last event or shift interval. The shift interval refers to the time between the last two reset commands, where the reset command refers to the rising edge of the FlexLogic operand set under setpoint Reset Event Energy (**Power Systems** > **Power Sensing**). An application example is the monitoring of the total energy accumulated at the end of an event or a shift interval. An event/shift interval can be defined by the breaker status operand (open or closed).

Pwr1 Last Event Neg WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the logged value of Neg WattHours energy accumulated during the last event or shift interval.

Pwr1 Last Event Pos VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the logged value of Pos VarHours energy accumulated during the last event or shift interval.

Pwr1 Last Event Neg VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the logged value of Neg VarHours energy accumulated during the last event or shift interval.

Pwr1 Today Pos WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Pos WattHours energy accumulated since the start of the day, that is time 00:00 (midnight). At the end of the day this value resets to zero and the total accumulated energy value is logged as Yesterday Pos WattHours.

Pwr1 Today Neg WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg WattHours energy accumulated since the start of the day.

Pwr1 Today Pos VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the current value of Pos VarHours energy accumulated since the start of the day.

Pwr1 Today Neg VarHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg VarHours energy accumulated since the start of the day.

Pwr1 Yesterday Pos WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Pos WattHours energy accumulated during the previous day. This value is logged at the end of the day, midnight, or 23:59 hrs.

Pwr1 Yesterday Neg WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg WattHours energy accumulated during the previous day.

Pwr1 Yesterday Pos VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the current value of Pos VarHours energy accumulated during the previous day.

Pwr1 Yesterday Neg VarHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg VarHours energy accumulated during the previous day.

Note:

*All Energy Log values can be reset to zero using the command Energy Log Data under **Records > Clear Records** or by the Flexlogic operand programmed by the setpoint **ENERGY LOG DATA** under **Device > Clear Records**. The Reset Energy Log D/T in either case is recorded and displayed.*

15.15 DEMAND

15.15.1 CURRENT DEMAND

Note:

The number of Current Demand supported is Order Code dependent.

The relay measures Current Demand on each phase, and three phase Demand for real, reactive, and apparent power. These parameters can be monitored to reduce supplier Demand penalties or for statistical metering purposes. Demand calculations are based on the measurement type selected under **Monitoring > Functions > Demand**. For each quantity, the relay displays the Demand over the most recent Demand time interval, the maximum Demand since the last maximum Demand reset, and the time and date stamp of this maximum Demand value. Maximum Demand quantities can be reset to zero at **Records > Clear Records > Max Current Demand**.

15.15.1.1 CURRENT DEMAND 1(X)

Path: *Metering > Current Demand 1(X)*

Cur1 Ph A/B/C Demand

Range: 0.000 to 12000.000 A

Cur1 Max Ph A/B/C Demand

Range: 0.000 to 12000.000 A

Cur1 D/T Ph A/B/C Demand MM/DD/YY HH:MM:SS

15.16 POWER DEMAND

For real/reactive/apparent power quantities, the relay displays the Demand values over the most recent time interval. The time interval refers to the time since the last reset.

Power demand quantities can be reset to zero by either of the following methods:

- **Records > Clear Records** command - resets the corresponding demand quantities.
- Using any operand programmed under the setpoint Reset Demand (**Monitoring > Functions > Demand**) - resets the max and min demand values
- using any operand programmed under **Device > Clear Records** - resets the max and min demand values.

Note:

If average current drops below $0.02 \times CT$, calculation of the minimum real/reactive/apparent demand is blocked, and metering remains at the level measured at the time of the block.

Path: *Metering > Power Demand x*

RESETR DMD DATE/TIME

Range: MM/DD/YY 00:00:00

REAL DEMAND (REAL DMD)

Range: 0.0 kW to 214748364.7 kW

MAX REAL DMD

Range: 0.0 kW to 214748364.7 kW

DATE/TIME REAL DMD

Range: MM/DD/YY 00:00:00

REACTIVE DEMAND (REACTIVE DMD)

Range: 0.0 kvar to 214748364.7 kvar

MAX REACTIVE DMD

Range: 0.0 kvar to 214748364.7 kvar

D/T REACTIVE DMD

Range: MM/DD/YY 00:00:00

APPARENT DEMAND (APPARENT DMD)

Range: 0.0 kVA to 214748364.7 kVA

MAX APPARENT DMD

Range: 0.0 kVA to 214748364.7 kVA

D/T APPARENT DMD

Range: MM/DD/YY 00:00:00

15.17 VOLTAGE TRANSFORMER FUSE FAILURE

Path: *Metering\VT Fuse Failure*

VTFF 1(2) 3V0 3rd Harm

Range: 0.0 to 100.0%

Default: 0.0 %

This value represents the percentage of third harmonic content in 3V0. This value is calculated based on the Phase VT Secondary

15.18 ARC FLASH

Path: *Metering > Arc Flash > Arc Flash 1*

HS Phase Current A/B/C

Range: 0.00 to 120000.00 A in steps of 0.01

HS Ground Current

Range: 0.00 to 120000.00 A in steps of 0.01

15.19 RESISTANCE TEMPERATURE DETECTORS

Temperature can be displayed in Celsius or Fahrenheit. The selection is made in **Setpoints > Device > Installation > Temperature Display**.

Path: *Metering > RTDs*

Hottest Stator RTD

Range: 1 to 13

Hottest Stator RTD Temp

Range: -50 to 252°C (-58 to 485.6°F)

This value shows the hottest RTD temperature from the group of RTDs when the setpoint **APPLICATION** is set to *Stator*. The other conditions to display this value are: RTD N must not be Disabled (both Trip and Alarm functions) and must not be detected as *Shorted* or *Open* RTD.

Hottest Bearing RTD

Range: 1 to 13

Hottest Bearing RTD Temp

Range: -50 to 252°C (-58 to 485.6°F)

This value shows the hottest RTD temperature from the group of RTDs when the setpoint **APPLICATION** is set to *Bearing*.

RTD1(13)

Range: -40 to 250°C (-40 to 482°F)

Temperatures < -40°C are displayed as *Shorted* and temperatures > 250°C are displayed as *Open* RTD.

15.20 RESISTANCE TEMPERATURE DETECTORS

Path: Metering > RRTDs

Hottest Stator RRTD

Range: 1 to 12

Hottest Stator RRTD Temp

Range: -40 to 250°C (-40 to 482°F)

This value shows the hottest RTD temperature from the group of RTDs when the setpoint **APPLICATION** is set to *Stator*. The other conditions to display this value are: RTD N must not be Disabled (both Trip and Alarm functions) and must not be detected as *Shorted* or *Open* RTD.

Hottest Bearing RRTD

Range: 1 to 12

Hottest Bearing RRTD Temp

Range: -40 to 250°C (-40 to 482°F)

This value shows the hottest RTD temperature from the group of RTDs when the setpoint **APPLICATION** is set to *Bearing*.

RRTD1(12)

Range: -40 to 250°C

Temperatures < -40°C or temperatures >250°C are displayed as *Trouble* RRTD

15.21 RESISTANCE TEMPERATURE DETECTORS

Temperature can be displayed in Celsius or Fahrenheit. The selection is made in **Setpoints > Device > Installation > Temperature Display**.

Path: Metering > RTD Maximums

Reset RTD Date/Time

Range: DD/MM/YY hh/mm/ss

Maximum RTD values can be cleared (reset) by setting the value of **Setpoints > Records > Clear Records > RTD Maximums** to ON. Executing this command loads -40°C (or -40°F) as the initial Maximum RTD value.

RTD1(13) Max

Range: -40 to 250°C (-40 to 482°F)

Temperatures < -40°C are displayed as `Shorted` and temperatures > 250°C are displayed as `Open` RTD.

RTD1(13) Max Date/Time

Range: DD/MM/YY hh/mm/ss

15.22 RESISTANCE TEMPERATURE DETECTORS

Temperature can be displayed in Celsius or Fahrenheit. The selection is made in **Setpoints > Device > Installation > Temperature Display**.

Path: Metering > RTD Maximums

Reset RRTD Date/Time

Range: DD/MM/YY hh/mm/ss

Maximum RTD values can be cleared (reset) by setting the value of **Setpoints > Records > Clear Records > RRTD Maximums** to ON. Executing this command loads -40°C (or -40°F) as the initial Maximum RRTD value.

RRTD1(12) Max

Range: -40 to 250°C (-40 to 482°F)

Temperatures < -40°C are displayed as `Shorted` and temperatures > 250°C are displayed as `Open` RRTD.

RRTD1(12) Max Date/Time

Range: DD/MM/YY hh/mm/ss

15.23 ANALOG INPUTS

Path: *Metering > Analog Inputs*

Analog Ip x

Range: -500000 to 500000 units in steps of 1

15.24 FLEXELEMENTS

Path: *Metering* > *FlexElements*

The operating signals for the FlexElements are displayed in pu values using the definitions of the base units in the *Definitions of the Base Unit for the FLEXELEMENT* table. This table can be found in **Setpoints** > **FlexLogic** > **FlexElements**.

FlexElement Operating Signals:

- FlexEI 1 Op Signal
- FlexEI 2 Op Signal
- FlexEI 3 Op Signal
- FlexEI 4 Op Signal
- FlexEI 5 Op Signal
- FlexEI 6 Op Signal
- FlexEI 7 Op Signal
- FlexEI 8 Op Signal

CHAPTER 16

RECORDS

16.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	730
Events	731
Transient Records	735
Fault Reports	736
Data Logger	738
Breakers	739
Digital Counters	741
Remote Modbus Device	742
Clear Records	745

16.2 EVENTS

The relay has an event recorder, which runs continuously. All event records are stored in non-volatile memory such that information is permanently retained. The events are displayed from newest to oldest event. Each event has a header message containing a summary of the event that occurred, and is assigned an event number equal to the number of events that have occurred since the recorder was cleared. The event number is incremented for each new event.

The Event Recorder captures contextual data associated with the last 1024 events listed in chronological order from most recent to oldest. Events for a particular element are captured, if the setpoint **EVENTS** is selected as "Enabled". By default, the **EVENTS** setpoint from all elements is enabled.

Path: *Records > Event Records*

The events are cleared by pressing the pushbutton corresponding to the tab CLEAR, or when issuing clear event records command from the general clear records menu.

16.2.1 EVENT VIEWER

The Event Viewer provides a consolidated view of up to 1024 events from a single 8 Series device or up to as many as ten connected 8 Series devices or event files (10 x 1024 events in total).

To open the Event Viewer for a connected device, follow these steps in the EnerVista D&I Setup:

1. Establish communications with the relay.
2. Select the **Setpoints > Records > Events** menu item.
3. A small Events window opens displaying the following:
 - Date/Time of Last Clear
 - Events Since Last Clear
 - Date/Time of Last Retrieval
4. In addition, the Event Viewer launches for a detailed view of up to 1024 of the most recent events.

The screenshot shows the 'EnerVista Events' application window. It has a menu bar (File, Home, Data) and a toolbar with icons for event selection. The main area displays a list of events with columns for Date/Time, Event, Cause of Event, and Data. To the right, there are statistics: Sources (1), Events (170), and Filtered (170). Below the event list, there is a detailed view of three events, each with its own table of data.

Date / Time	Event	Cause of Event	Data
Nov 9 2018 11:38:17.335891	163	Slot JIO S/N Invalid	
Nov 9 2018 11:29:21.963961	162	PQ Rec Trigger - VD3 - Vc	
Nov 9 2018 11:29:21.963961	161	PQ Rec Trigger - VD3 - Va	
Nov 9 2018 11:29:21.963961	160	PQ Rec Trigger - VD2 - Vc	
Nov 9 2018 11:29:21.963961	159	PQ Rec Trigger - VD2 - Va	
Nov 9 2018 11:29:21.963961	158	PQ Rec Trigger - VD1 - Vc	
Nov 9 2018 11:29:21.963961	157	PQ Rec Trigger - VD1 - Va	
Nov 9 2018 11:29:21.945212	156	PQ Rec Trigger - VD3 - Vb	
Nov 9 2018 11:29:21.945212	155	PQ Rec Trigger - VD2 - Vb	
Nov 9 2018 11:29:21.945212	154	PQ Rec Trigger - VD1 - Vb	
Nov 9 2018 11:28:53.883876	153	Volt Swell3 OP B	
Nov 9 2018 11:28:53.881792	152	Trans. Rec Trigger	

Item Name	Value at T1	Value at T2	Value at T3
Date/Time	Nov 9 2018 11:29:21.963961	Nov 9 2018 11:29:21.945212	Nov 9 2018 11:28:53.883876
Source Name	Device 99	Device 99	Device 99
Cause of Event	PQ Rec Trigger - VD1 - Va	PQ Rec Trigger - VD3 - Vb	Volt Swell3 OP B
Event Number	157	156	153
Record Number	13	12	
Element Instance	VD1	VD3	
Source Phase	Va	Vb	
Event Type	Volt Swell	Volt Swell	
RMS Voltage	40.85 V	40.80 V	
Duration	33.084 s	33.064 s	
J1 Ia (A)	0.000	0.000	0.000
J1 Ia Angle (°)	0.0	0.0	0.0
J1 Ib (A)	0.000	0.000	0.000

The Event Viewer window runs as a separate application, and can be moved outside of the main window and resized as needed.

If EnerVista D&I Setup is closed, the Event Viewer remains open but offline (no further events are received from running devices, however event data is still available).

The Event List includes all events in descending chronological order. For multiple sources, a Source column showing the device name or file name is shown between the Date/Time and the Event columns.

To add an additional connected 8 Series relay to the open Event Viewer, follow these steps:

1. Establish communications with the relay.
2. Select the **Setpoints > Records > Events** menu item.
3. The Event Viewer adds up to 1024 of the most recent events to the open window, labeled with the new device name in the Source column.

The Event column is only shown when **Show Event Numbers** is selected on the **Data** tab.

	Date / Time	Source	Event	Cause of Event	Data
☒	Nov 8 2018 16:07:14.989887	Device 99	7	VD1 Rise Armed C	
☒	Nov 8 2018 16:07:14.989887	Device 99	6	VD1 Rise Armed B	
☒	Nov 8 2018 16:07:14.989887	Device 99	5	VD1 Rise Armed A	
☒	Nov 8 2018 16:07:14.989887	Device 99	4	VD1 Rise Armed	
☒	Nov 8 2018 16:06:57.968508	Device 99	3	Clear Start Rec	
☒	Nov 8 2018 16:06:57.712274	Device 99	2	Clear Transt Rec	
☒	Nov 8 2018 16:06:56.572667	Device 99	1	Clear Event Rec	
☒	Nov 8 2018 12:55:18.528669	Device 212	23115	Critical Fail On	
☒	Nov 8 2018 12:55:18.528669	Device 212	23114	In-Service	
☒	Nov 8 2018 12:55:14.751534	Device 212	23111	Relay Not Ready	
☒	Nov 8 2018 12:55:14.750886	Device 212	23113	Critical Fail Off	
☒	Nov 8 2018 12:55:14.750886	Device 212	23112	Out-Of-Service	

On the left side of the Event List a checkbox column with a toggle button at the top allows selection of specific events. Only the selected events are saved or copied by the **Save to File** and **Copy to Clipboard** options in the **File** tab.

Use the following keys to navigate quickly through the Event List:

- **End** scrolls to the bottom of the Event List
- **Home** scrolls to the top of the Event List
- **Page Down** scrolls one page down in the Event List
- **Page Up** scrolls one page up in the Event List

When the Event Viewer and the EnerVista D&I Setup are both open, new events from connected devices are added to the Event Viewer as they occur and oscillography and fault report records are gradually retrieved from the device, in order of oldest to newest (assuming oscillography records and fault report records are saved in a common location).

	Date/Time	Cause of Event	Data
☒	Nov 10 2017 10:20:20.842706	Fault Rpt Trig	Fault report symbol 
☒	Nov 10 2017 10:19:08.006650	Trans. Rec Trigger	Oscillography record symbol 

Oscillography record events (such as Trans. Rec Trigger shown above) have a symbol in the Data column that includes a link to launch the oscillography record in the EnerVista D&I Setup.

Fault report events (such as Fault Rpt Trig shown above) can be opened in the same manner by clicking the fault report symbol in the Data column.

FILE TAB

Use the **File** tab to open event files in the Event Viewer, save events to a file, or copy events to the clipboard.

- **Open File:** opens a window to browse to an events file (of type .eev, .txt, or .evt) and opens it in the existing Event Viewer window, or in a new Event Viewer window.
 - Check **In New Window** to open the file in a new Event Viewer window.
- **Save to File:** saves the selected events to a file. Hidden (filtered) events are not saved.
 - Select the events to save using the checkboxes on the left of the events list.
 - Check **Include Event Data** to save full details of each event instead of just a summary.
- **Copy to Clipboard:** copies the selected events to the clipboard. Hidden (filtered) events are not copied.
 - Select the events to copy using the checkboxes on the left of the events list.
 - Check **Include Event Data** to copy full details of each event instead of just a summary.

HOME TAB

Use the **Home** tab to select the events shown in the detailed view, measure time between events, and view the current Event Viewer statistics.

By default, the Event Viewer opens displaying the **Home** tab with the last three events selected. Details of these three events are displayed in the lower pane of the Event Viewer window.

To select up to three events from the list displayed in the Event Viewer, follow these steps:

1. From the **Home** tab, choose which event to set by clicking button 1, 2, or 3 above the **Event Selector** label.
2. Click an event from the list of displayed events.
3. The event changes color to match the selected button (blue for 1, green for 2, or red for 3) and the event details display in the lower pane, highlighted in the same color.

The absolute times between the three selected events are displayed above the **Delta Times** label.

The **Statistics** area in the **Home** tab includes the following information:

- **Sources:** the number of event sources (devices and files) currently available.
- **Events:** the number of events being managed by the Event Viewer.
- **Filtered:** the number of events shown after any active filters are applied. (Filters are applied in the **Data** tab).

DATA TAB

Use the **Data** tab to filter the events shown in the Event Viewer.

- **Show Event Numbers:** toggles on and off the event number column in the list of events. The event number can be useful for reconciling events between the Event Viewer and local HMI.
- **Select Event Sources:** provides a drop-down list of all available event sources (devices and files). Uncheck a device or file to hide the associated events from the main list.
- By default events from all sources are shown.
- **Cause of Event Filter:** provides an alphabetized list of all event names, allowing different event types to be shown or hidden.
- By default all events are shown.

16.3 TRANSIENT RECORDS

Path: *Records > Transients > Transient Records*

Using the EnerVista D&I Setup, select a record and then click the **Launch Viewer** button to view the waveform.

16.4 FAULT REPORTS

The latest fault reports can be displayed.

Path: *Records > Fault Reports*

NUMBER OF REPORTS

This value shows the number of reports since the last clear.

LAST TRIP DATE/TIME

Range: MM/DD/YY/ HH:MM:SS

This value is the date and time on which the last report was generated.

LAST CLEAR DATE/TIME

Range: MM/DD/YY/ HH:MM:SS

This value is the date and time on which the record was cleared.

TYPE OF FAULT

Range: N/A, AG, BG, CG, AB, BC, CA, ABG, BCG, CAG, ABC

Default: N/A

This record displays the type of fault.

DISTANCE TO FAULT

Range: 0.00 to 99.99 km/Mile in steps of 0.01 km/Mile

Default: 0.00 km/Mile

This record displays the distance to fault, in kilometers or miles as selected by the UNITS OF LENGTH setpoint.

FAULT REPORT X TIME

Range: MM/DD/YY/ HH:MM:SS

This value is the date and time on which the specified fault report was generated.

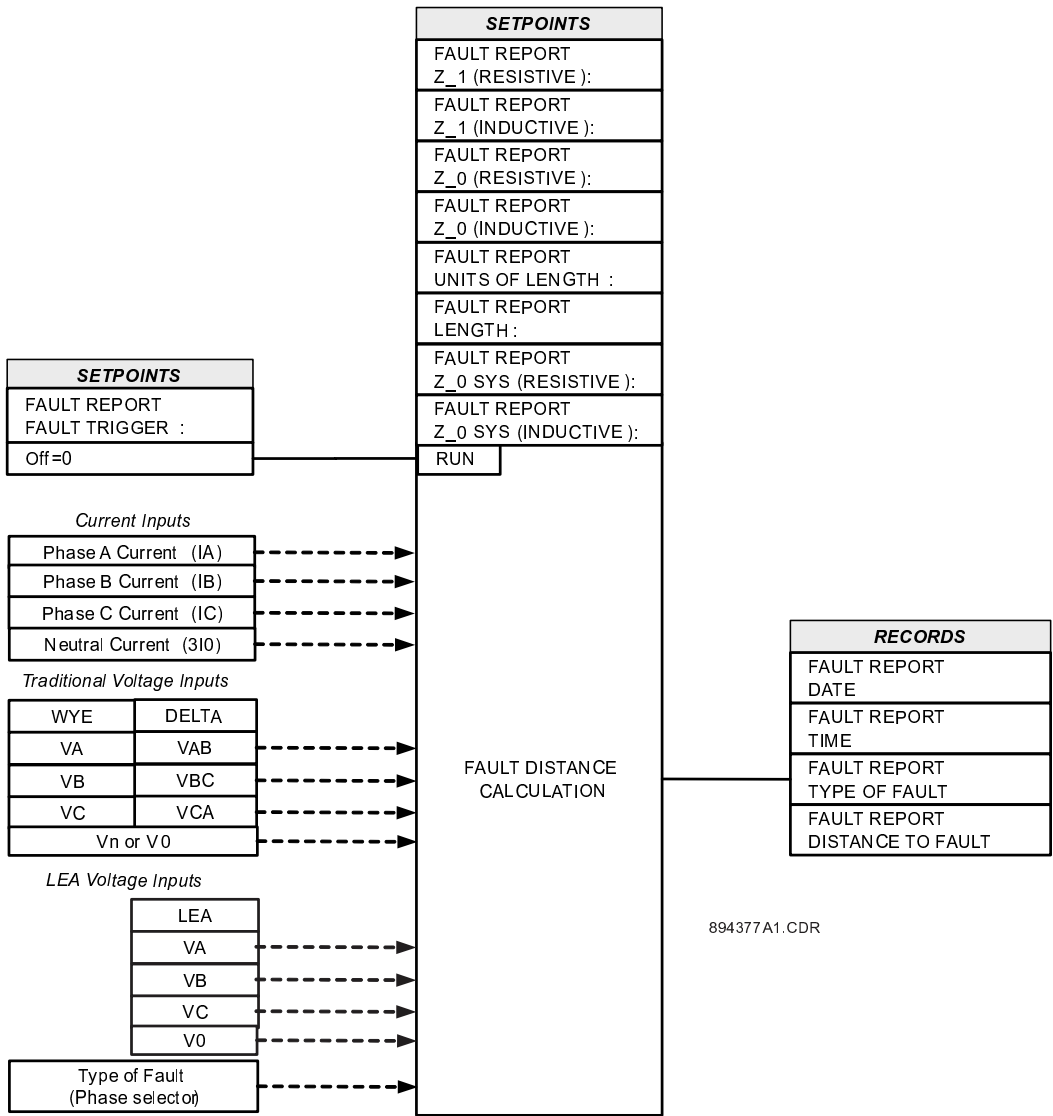


Figure 317: Fault Locator Logic diagram

16.5 DATA LOGGER

The Data Logger record can be retrieved and seen from this window. It displays the oldest and newest timestamps, and the total number of samples captured for all channels programmed in **Setpoints > Device > Data Logger** menu.

Path: *Records > Data Logger*

16.6 BREAKERS

16.6.1 BREAKER ARCING CURRENT

Path: *Records > Breakers Records > Breaker x*

ARCING CURRENT PHASE A

Range: 00.00 TO 42949672.95 kA2-cyc in steps of 0.01

ARCING CURRENT PHASE B

Range: 00.00 TO 42949672.95 kA2-cyc in steps of 0.01

ARCING CURRENT PHASE C

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

TOTAL ARCING CURRENT

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

16.6.2 BREAKER HEALTH

The menu displays the breaker monitoring values. The latest value, average of last five values and average of values since last reset are recorded, calculated and displayed.

When the DETECTION mode is selected, the values displayed here can be used as the reference for user settings. The values are saved into non-volatile memory to avoid the loss of data during the power down period.

Path: *Records > Breakers Records > Breaker Health*

TOTAL BREAKER TRIPS

Range: 0 to 10000 in steps of 1

TRIPS SINCE LAST RESET

Range: 0 to 10000 in steps of 1

ALARM COUNTER

Range: 0 to 100 in steps of 1

LAST TRIP TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF 5 TRIP TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF TRIP TIME

Range: 0 TO 4294967295 ms in steps 1

LAST CLOSE TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF 5 CLOSE TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF CLOSE TIME

Range: 0 TO 4294967295 ms in steps 1

LAST PH A/B/C ARC TIME

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

AVG. OF 5 PH A/B/C ARC TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF PH A/B/C ARC TIME

Range: 0 TO 4294967295 ms in steps 1

LAST SPRING CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001

AVG. OF 5 CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001

AVG. OF CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001

LAST PH A/B/C ARC ENERGY

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

AVG. OF 5 PH A/B/C ARCENER

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

AVG. OF PH A/B/C ARC ENERGY

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

16.7 DIGITAL COUNTERS

The present status of the sixteen Digital Counters is shown here. The status of each Counter, with the user-defined Counter name, includes the accumulated and frozen counts (the count units label also appears). Also included, is the date and time stamp for the frozen count. The Counter microseconds frozen value refers to the microsecond portion of the time stamp.

Path: *Records > Digital Counter 1 (16)*

COUNTER X ACCUMULATED

Range: -2147483648 to 2147483647 in steps of 1

COUNTER X FROZEN

Range: -2147483648 to 2147483647 in steps of 1

DATE/TIME FROZEN

Range: Date/Time Format (MM/DD/YY HH:MM:SS)

Default: 01/01/70 00:00:00

COUNTER X μ s FROZEN

Range: 0 to 999999 μ s in steps of 1

16.8 REMOTE MODBUS DEVICE

Up to 64 FlexAnalog operands and 32 FlexLogic operands are supported in the configurable Remote Modbus Device. Profiles are configured under **Device > Communications > Remote Modbus Device > Device 1**, with details provided in Chapter 5. Up to 10 format codes enumerations (by default GMD_FC1 to GMD_FC10) can be defined separately for each Modbus Device Profile. For the default BSG3 device profile, 27 analogs and 27 digital operands are pre-configured in the default CID settings file.

All parameters are polled consecutively. Each FlexLogic value can be read from a different Modbus address and bit mask which is then mapped into any of the available 64 bit locations.

Path: Records > Remote Modbus Device > Device 1 > Status

DEVICE STATUS

Range: Offline, Online

Default: Offline

The DEVICE STATUS operand is asserted when the last communication attempt has failed. The operand is deasserted following a successful communication attempt.

LAST SUCCESSFUL POLL

Range: MM/DD/YYYY HH:MM:SS

Default: 01/01/2000 00:00

This is a timestamp value for the last successful read. The LAST SUCCESSFUL POLL is updated if the update of all pooled data is successful.

Path: Records > Remote Modbus Device > Device 1 > Digital States

FLEXLOGIC OPERANDS 1-32

Range: Defined by Remote Modbus Device Profile

Default: Off

Up to 32 FlexLogic operands can be shown here.

The displayed text is the FlexLogic name defined in the Remote Modbus Device Editor **Label** field for each Digital Point in the current profile. See **Device > Communications > Remote Modbus Device > Device 1**.

The value displayed is based on the Enumeration field defined in the Remote Modbus Device Editor for each specific digital point.

\Device 1\Digital States		
Item Name	Value	Unit
Status 1	On	
Status 2	On	
Status 3	On	
Status 4	Off	
Status 5	On	
Status 6	On	
Status 7	On	
Status 8	Off	
Status 9	On	
Warning 1	Yes	
Warning 2	Yes	
Status	Digital	Analog

\Device 1\Digital States		
Item Name	Value	Unit
Warning 3	Yes	
Warning 4	No	
Warning 5	Yes	
Warning 6	Yes	
Warning 7	Yes	
Warning 8	No	
Warning 9	Yes	
Alarm 1	No	
Alarm 2	No	
Alarm 3	No	
Alarm 4	No	
Status	Digital	Analog

Figure 318: Example of Digital States for the default BSG3 RMD profile

Path: *Records > Remote Modbus Device > Device 1 > Analog Values*

RMD-FLEXANALOG 1-64

Range: -2147483648 to 2147483647 in steps of 1


Default: 0

Up to 64 FlexAnalog operands can be shown here.

The value displayed is based on the Enumeration field defined in the Remote Modbus Device Editor for each specific digital point.

The displayed text is the FlexAnalog name defined in the Remote Modbus Device Editor 'Label' field for each Analog Point in the current profile. See **Device > Communications > Remote Modbus Device > Device 1**.

The value displayed is based on the Data Type, Multiplier, Decimals, and Units fields defined in the Remote Modbus Device Setpoint for each specific analog point.

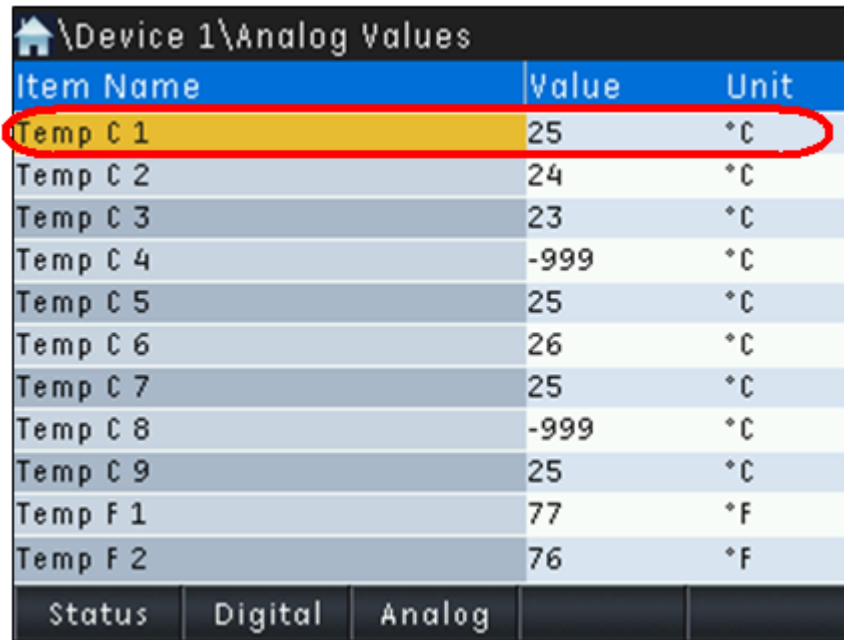

\Device 1\Analog Values		
Item Name	Value	Unit
Temp C 1	25	°C
Temp C 2	24	°C
Temp C 3	23	°C
Temp C 4	-999	°C
Temp C 5	25	°C
Temp C 6	26	°C
Temp C 7	25	°C
Temp C 8	-999	°C
Temp C 9	25	°C
Temp F 1	77	°F
Temp F 2	76	°F

Status
 Digital
 Analog

Figure 319: Example for Analog Values of the default BSG3 RMD profile

16.9 CLEAR RECORDS

The Clear Records command is accessible from the front panel and from the EnerVista D&I Setup.

Path: *Device > Clear Records*

Records can be cleared either by assigning “On” or a FlexLogic operand to the appropriate setting.

With the optional 10 PB Membrane Front Panel all Clear Records commands related to Demand default to PB7 ON. This includes Clear Records for Max Current Demand, Max Real Power Demand, Max Reactive Power Demand and Max Apparent Power Demand.

Note:

*The Clear Records command is also available from **Records > Clear Records**, however there the allowable settings are only ON and OFF. (FlexLogic operands cannot be used.)*

CHAPTER 17

MAINTENANCE

17.1 CHAPTER OVERVIEW

This chapter provides some information about the device maintenance.

This chapter contains the following sections:

Chapter Overview	747
Environmental Health Report	748
General maintenance	750

17.2 ENVIRONMENTAL HEALTH REPORT

Prolonged exposure to harsh environments and transient conditions that exceed those stated in the device specifications will reduce the life of the product. The relay has a patented Environmental Awareness Module (EAM) to record environmental data over the life of the product. The module measures temperature, humidity, surge pulses and accumulates the events every hour in pre-determined threshold buckets over a period of 15 years. Using EnerVista D&I Setup, you can retrieve this data in the form of a histogram. This will help you to quickly identify any changes in the operating condition of installed products and arrange necessary remedial action. An example of a report is provided below.

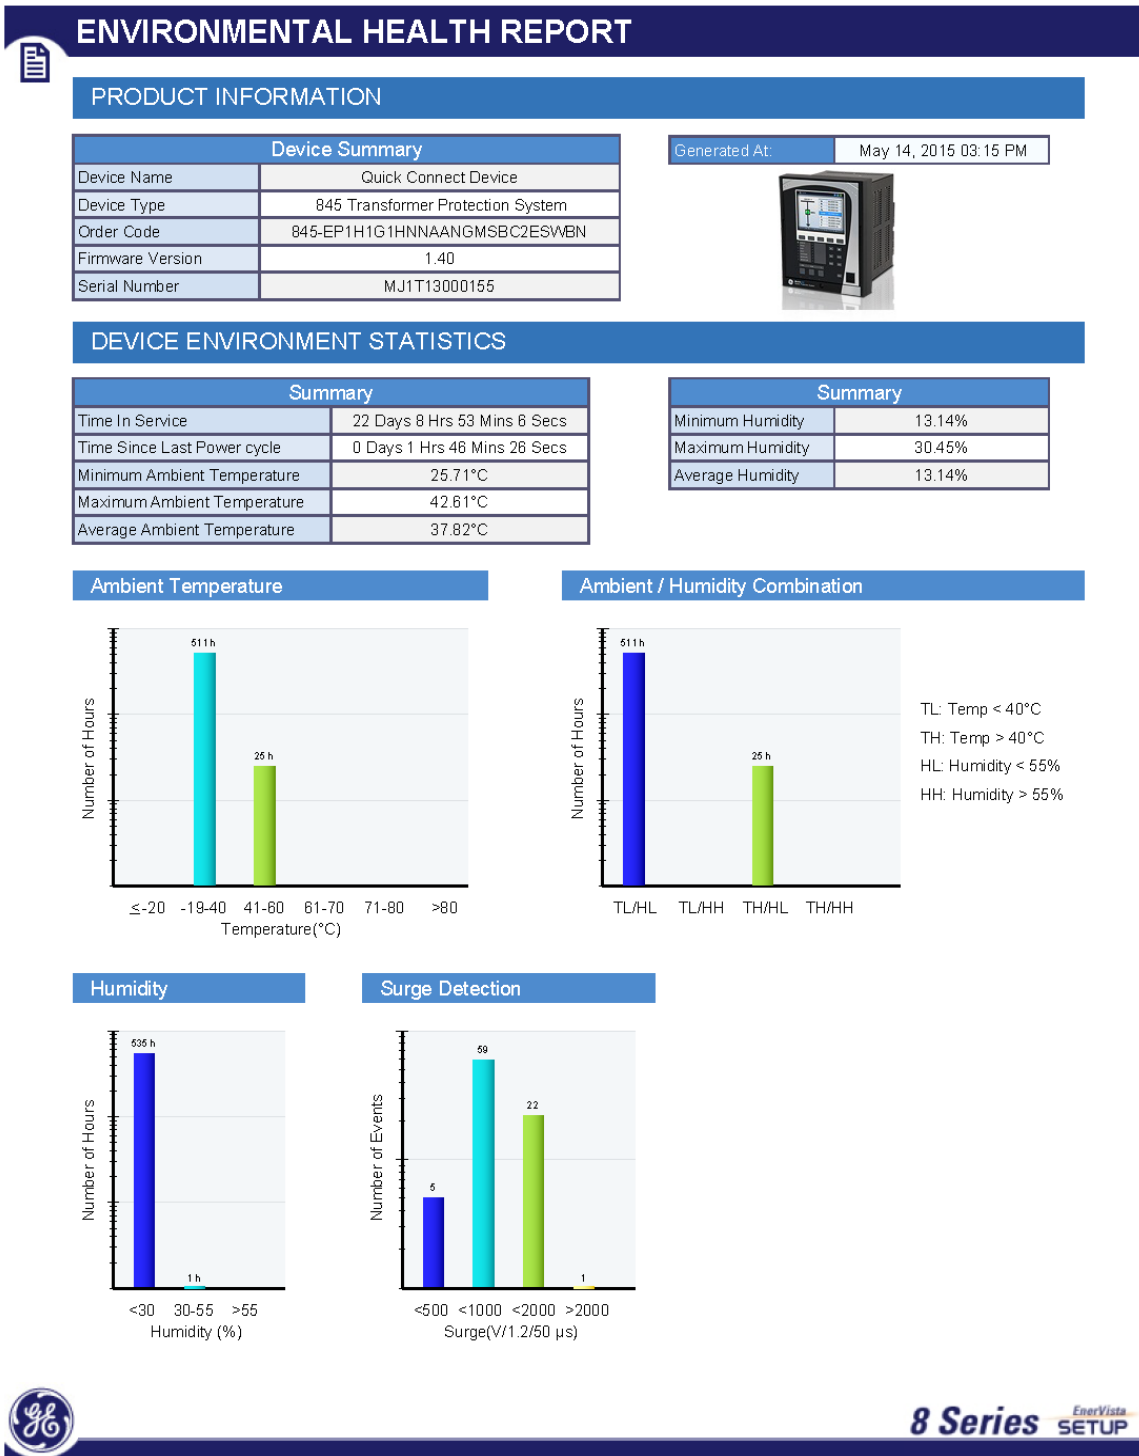


Figure 320: Environmental Report

17.3 GENERAL MAINTENANCE

As the relay is microprocessor-based, its characteristics do not change over time. In addition, the relay has continuous self-monitoring during operation, reporting any issues detected. For these reasons, routine maintenance of the relay is not required. When used in a controlled indoor environment with electrical conditions compliant with the specifications, the expected service life is 20 years, if manufactured after June 2014.

We appreciate that some customer maintenance practices stipulate routine maintenance of products in excess of the manufacturer's recommendation. Should this be your organization's policy, you might consider the following maintenance options:

In-service maintenance

- Visual verification of the analog values integrity, such as voltage and current (in comparison to other devices on the corresponding system).
- Visual verification of active alarms, relay display messages, and LED indications.
- LED test.
- Visual inspection for any damage, corrosion, dust, or loose wires.
- Event recorder file download with further events analysis.

Out-of-service maintenance

- Check wiring connections for firmness.
- Analog values (currents, voltages, RTDs, analog inputs) injection test and metering accuracy verification. Calibrated test equipment is required.
- Protection elements setting verification (analog values injection or visual verification of setting file entries against relay settings schedule).
- Contact inputs and outputs verification. This test can be conducted by direct change of state forcing or as part of the system functional testing.
- Visual inspection for any damage, corrosion, or dust.
- Event recorder file download with further events analysis.
- LED Test and pushbutton continuity check.

Note:

To avoid deterioration of electrolytic capacitors, power up units that are stored in a de-energized state once per year, for one hour continuously.

Unscheduled maintenance (system interruption)

View the event recorder and oscillography or fault report for correct operation of inputs, outputs, and elements.

17.3.1 IN-SERVICE MAINTENANCE

In-service maintenance consists of the following activities:

1. Visual verification of the analog values integrity, such as voltage and current (in comparison to other devices on the corresponding system).
2. Visual verification of active alarms, relay display messages, and LED indications.
3. Visual inspection for any damage, corrosion, dust, or loose wires.
4. Event recorder file download with further events analysis.

17.3.2 OUT-OF-SERVICE MAINTENANCE

Out-of-service maintenance consists of the following activities:

1. Check wiring connections for firmness.
2. Analog values (currents, voltages, RTDs, analog inputs) injection test and metering accuracy verification. Calibrated test equipment is required.
3. Protection elements setting verification (analog values injection or visual verification of setting file entries against relay settings schedule).
4. Contact inputs and outputs verification. This test can be conducted by direct change of state forcing or as part of the system functional testing.
5. Visual inspection for any damage, corrosion, or dust.
6. Event recorder file download with further events analysis.

17.3.3 UNSCHEDULED MAINTENANCE (SYSTEM INTERRUPTION)

Unscheduled maintenance consists of the following activities:

- Viewing the event recorder and oscillography for correct operation of inputs, outputs, and elements.

CHAPTER 18

SPECIFICATIONS

18.1 DEVICE

18.1.1 ANNUNCIATOR PANEL

ANNUNCIATOR PANEL	
Number of Elements:	1 (36 indicators)
Layout:	Grid of 2x2 or 3x3
Data Storage:	Non-volatile memory
Mode:	Self-reset, latched, acknowledgeable
Display Text:	3 lines of 15 characters maximum
Visual Indication:	Flashing: 2Hz @ 50% duty cycle

18.1.2 CUSTOM CONFIGURATIONS

CUSTOM CONFIGURATIONS	
Config Mode:	Simplified, Regular

18.2 PROTECTION ELEMENTS

To obtain the total operating time, i.e. from the presence of a trip condition to initiation of a trip, add 8 ms output relay time to the operate times listed below.

Note:

If the Operate time and/or Timer Accuracy (in ms) for 25 Hz is not specified, then it is 2 times longer than the time specified for 50 Hz or 2.4 times longer if specified for 60 Hz only.

18.2.1 THERMAL OVERLOAD PROTECTION

THERMAL OVERLOAD PROTECTION	
Thermal Overload Curves:	IEC hot and cold curves, FlexCurves
FlexCurve Time Multiplier:	0.00 to 600.00 in steps of 0.01
Operate Time Constant:	0 to 1000 min in steps of 0.1 min
Overload (k) Factor:	1.00 to 1.50 in steps of 0.01
Reset Time Constant:	0.0 to 1000.0 min in steps of 0.1 min
Minimum Reset Time:	0.0 to 1000.0 min in steps of 0.1 min
Timer Accuracy (hot curve):	±100 ms or ±2%, whichever is greater
Timer Accuracy (cold curve):	±500 ms or ±2%, whichever is greater

18.2.2 PERCENT DIFFERENTIAL (87G)

PERCENT DIFFERENTIAL (87G)	
Pickup Level:	0.05 to 1.00 x CT in steps of 0.01
Dropout Level:	97 to 98% of Pickup
Slope 1 and 2:	1 to 100% in steps of 1
Break 1:	0.50 to 2.00 x CT in steps of 0.01
Break 2:	2.00 to 30.00 x CT in steps of 0.01
Operate Time:	<16 ms at >3 × Pickup at 60 Hz <20 ms at >3 × Pickup at 50 Hz

18.2.3 OVERALL PERCENT DIFFERENTIAL

OVERALL PERCENT DIFFERENTIAL PROTECTION	
Differential/Restraint Characteristic:	Dual Slope, Dual Breakpoint
Minimum Pickup level:	0.05 to 1.00 x CT in steps of 0.01
Slope 1 range:	1 to 100% in steps of 1%
Slope 2 range:	1 to 100% in steps of 1%
Breakpoint 1:	0.50 to 2.00 x CT in steps of 0.01
Breakpoint 2:	2.00 to 30.00 x CT in steps of 0.01
2 nd harmonic inhibit level:	0.1 to 40.0% in steps of 0.1%
2 nd harmonic inhibit mode:	Per-phase, Average, 2-out-of-3, 1-out-of-3
5 th harmonic inhibit level:	1.0 to 40.0% in steps of 0.1%
Dropout level:	97 to 98% of Pickup

OVERALL PERCENT DIFFERENTIAL PROTECTION

Operate time:	< 16/22 ms at >3 x Pickup @60Hz (harmonic inhibits disabled/enabled) < 18/26 ms at >3 x Pickup @50Hz (harmonic inhibits disabled/enabled)
Level accuracy:	±0.5% of reading current, or ±1% of rated

18.2.4 GENERATOR UNBALANCE**GENERATOR UNBALANCE (46)**

Stages:	2 (I ² t trip with linear reset and definite-time alarm)
Trip/Alarm Pickup Level:	0.00 to 100.00% FLA in steps of 0.01
Constant K:	0.00 to 100.00 in steps of 0.01
Maximum Time:	0 to 1000 s in steps of 1 s
Reset Time:	0.00 to 1000.00 s in steps of 0.01 s
Alarm Delay:	0.00 to 600.00 s in steps of 0.01 s
Pickup Accuracy:	±0.025 A or ±3% of reading, whichever is greater
Operate Time:	< 20 ms at 1.10 x pickup at 60 Hz
Timing Accuracy:	±3% of operate time or ±20 ms (whichever is greater)
Generator Unbalance Element:	Trip and Alarm

18.2.5 INADVERTENT ENERGIZATION**INADVERTENT ENERGIZATION**

Operate time:	<12 ms at >3 x O/C Pickup@60Hz <15 ms at >3 x O/C Pickup@50Hz
---------------	--

18.2.6 THIRD HARMONIC NEUTRAL UNDERVOLTAGE**THIRD HARMONIC NEUTRAL UNDERVOLTAGE**

Operating Quantity:	3 rd harmonic of auxiliary voltage
Pickup Level:	0.10 to 20.00 V secondary in steps of 0.01
Dropout Level:	103% of pickup for >5V; (pickup + 0.15V) for <5V
Level Accuracy:	±5% of reading for >0.5V up to 45V secondary; 30mV for <0.5V
Pickup Time Delay:	0.00 to 600.00 s in steps of 0.01
Timer Accuracy:	±3% of the delay setting time or ±½ cycle (whichever is greater) from pickup to operate
Power Inhibit Pickup Level:	0.000 to 1.250 x Rated in steps of 0.001
Power Inhibit Dropout Level:	102 to 103% of pickup for maximum blocking power 97 to 98% of pickup for minimum blocking power
Power Level Accuracy:	±1% of reading or ±0.0025 of rated whichever is greater
Blocking Low Voltage Level:	0.00 to 1.50 x VT in steps of 0.01
Blocking Low Voltage Dropout Level:	102 to 103% of pickup for blocking low voltage level
Blocking Low Voltage Accuracy:	±0.5% of reading from 10 to 208 V
Operate Time:	< 30 ms @ 0.90 x Pickup @ 60 Hz < 36 ms @ 0.90 x Pickup @ 50 Hz
Elements:	Trip and Alarm

18.2.7 THIRD HARMONIC VOLTAGE DIFFERENCE

THIRD HARMONIC VOLTAGE DIFFERENCE	
Operating Quantity:	
Pickup Level:	0.005 to 0.900 in steps of 0.001
Level Accuracy:	±0.02 pu
Dropout Level:	103% of Pickup for > 0.333; (Pickup+0.010) for <0.33397% of (1-Pickup) for >0.333; (1-Pickup)-0.010 for <0.333
Voltage Supervision Level:	0.5 to 30.0 V in steps of 0.1
Supervision Level Accuracy:	±5% of reading for >1V up to 45 V secondary; 0.07 V for <1V
Supervision Dropout Level:	97% of pickup for >7V; (Pickup – 0.2V) for <7V
Pickup Time Delay:	0.00 to 600.00 s in steps of 0.01
Timer Accuracy:	±3% of the delay setting time or ±½ cycle (whichever is greater) from pickup to operate
Operate Time:	< 30 ms @ 0.90 x Pickup @ 60 Hz < 36 ms @ 0.90 x Pickup @ 50 Hz

18.2.8 OFFLINE OVERCURRENT

OFFLINE OVERCURRENT	
Pickup Level:	0.05 to 1.00 x CT in steps of 0.01 of any one phase
Time Delay:	0.00 to 600.00 s in steps of 0.01 s
Pickup Accuracy:	as per Phase Current Inputs
Operate Time:	< 12 ms at 3 x Pickup at 60 Hz
Timer Accuracy:	±3% of operate time or ±¼ cycle (whichever is greater)

18.2.9 CURRENT UNBALANCE (46)

CURRENT UNBALANCE (46)	
Unbalance:	$\text{Unbal} = (I_2 / I_1) \times A_{\text{factor}} \times 100\%$ $A_{\text{factor}} = (I_{\text{avg}} / \text{FLA}) \text{ if } I_{\text{avg}} < \text{FLA}$ $A_{\text{factor}} = 1 \text{ if } I_{\text{avg}} \geq \text{FLA}$
Trip/Alarm Pickup Level:	4.0 to 50.0% in steps of 0.1%
Trip Operating Curves:	Definite Time: $T = \text{TDM sec.}$ Inverse Time: $T = (\text{TDM} / [\text{Unbal}]^2) \text{ sec}$
Trip Pickup Delay:	0.00 to 180.00 s in steps of 0.01 s when Trip Curve = Definite Time
Trip Time Dial Multiplier (TDM):	0.00 to 180.00 in steps of 0.01 when Trip Curve = Inverse Curve
Trip Maximum Time:	0.00 to 1000.00 s in steps of 0.01 s
Trip Minimum Time:	0.00 to 1000.00 s in steps of 0.01 s
Trip Reset Time:	0.00 to 1000.00 s in steps of 0.01 s
Alarm Time Delay:	0.00 to 180.00 s in steps of 0.01 s
Single Phasing Pickup Level:	unbalance level > 40% or when $I_{\text{avg}} \geq 25\% \text{FLA}$ and current in any phase is less than the cutoff current
Single Phasing Time Delay:	2 seconds
Pickup Accuracy:	±2% of the reading
Operate Time:	<2 cycles at 1.10 x pickup (NOTE 1)

CURRENT UNBALANCE (46)

Timing Accuracy:	±3% of delay setting time or ±20 ms, whichever is greater
Element:	Trip and Alarm
Single Phasing Element:	Trip

18.2.10 SPEED PROTECTION**SPEED PROTECTION**

Configuration:	Assign to any contact input
Operating Range:	20 to 120% of Rated RPM
Minimum Pulse Width:	>8% of a revolution
Level Accuracy:	±1% of rated speed
Timer Accuracy:	±3% of delay setting or ±2 power cycles (whichever is greater) from pickup to operate
Element:	Trip and Alarm

18.2.11 LOSS OF EXCITATION (40)**LOSS OF EXCITATION (40)**

Operating Condition:	Positive-sequence impedance
Characteristic:	2 independent negative mho circles (LOE circle 1, 2)
Circle 1(2) Diameter:	0.1 to 300.0 Ω (in secondary) in steps of 0.1 Ω
Circle 1(2) Offset:	0.1 to 300.0 Ω (in secondary) in steps of 0.1 Ω
Reach (Impedance) Accuracy:	±5%
Under Voltage (UV) Supervision Level:	0.00 to 1.50 x VT in steps of 0.01 x VT
UV Pickup Accuracy:	as per phase voltage inputs
Pickup Delay:	0.00 to 600.00 s in steps of 0.01 s
Timer Accuracy:	±3% of delay setting or ±½ cycle (whichever is greater)
Operate Time:	< 3 cycles

18.2.12 OUT-OF-STEP (78)**OUT-OF-STEP (78)**

Characteristic:	Single blinder with offset mho supervisory
Measured Impedance:	Positive-sequence
Current Supervision Pickup Level:	0.05 to 10.00 x CT in steps of 0.01 x CT
Fwd/Reverse Reach (sec.):	0.10 to 500.00 Ω in steps of 0.01 Ω
Left and Right Blinders (sec.):	0.10 to 500.00 Ω in steps of 0.01 Ω
Impedance Accuracy:	±5%
Blinder RCA:	40° to 90° in steps of 1°
Angle Accuracy:	±2°
Timer Accuracy:	±3% of operate time or ±¼ cycle (whichever is greater)

18.2.13 OVERLOAD ALARM

OVERLOAD ALARM	
Operating Parameter:	Average phase current (RMS)
Pickup Level:	0.50 to 3.00 x FLA in steps of 0.01 x FLA
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: $\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater. For $> 2.0 \times$ CT rating $\pm 1.5\%$ of reading
Pickup Delay:	0.00 to 180.00 s in steps of 0.01 s
Dropout Delay:	0.00 to 180.00 s in steps of 0.01 s
Timer Accuracy:	$\pm 3\%$ of delay setting or $\pm \frac{1}{2}$ cycle (whichever is greater) from pickup to operate

18.2.14 PHASE REVERSAL (47)

PHASE REVERSAL (47)	
Phase Reversal Condition:	$V_2/V_1=100\%$ when phase to phase voltages are greater than 50% of V_T
Configuration:	ABC or ACB phase rotation
Pickup/Dropout Time Delay:	0.00 to 180.00 s in steps of 0.01 s
Timer Accuracy:	$\pm 3\%$ of delay setting or $\pm 1\%$ cycle (whichever is greater) from pickup to operate

18.2.15 PHASE INSTANTANEOUS OVERCURRENT (50P)

PHASE INSTANTANEOUS OVERCURRENT (50P)	
Operating Parameter	I_a, I_b, I_c (Fundamental Phasor Magnitude or RMS)
Pickup Level:	0.010 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: $\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater, for $> 2.0 \times$ CT: $\pm 1.5\%$ of reading. (For Neutral IOC, $I_{op} = 3 * (I_{0} - K * I_{1})$ where $K = 1/16$ and $ I_{0} = 1/3 * I_n $)
Operate Time:	< 12 ms typical at $3 \times$ Pickup at 60 Hz < 15 ms typical at $3 \times$ Pickup at 50 Hz (Phase/Ground IOC)
Timer Accuracy	$\pm 3\%$ of delay setting or $\pm \frac{1}{4}$ cycle (whichever is greater) from pickup to operate

18.2.16 NEUTRAL INSTANTANEOUS OVERCURRENT (50N)

NEUTRAL INSTANTANEOUS OVERCURRENT (50N)	
Operating Parameter	Fundamental Phasor Magnitude
Pickup Level:	0.010 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: $\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater, for $> 2.0 \times$ CT: $\pm 1.5\%$ of reading. (For Neutral IOC, $I_{op} = 3 * (I_{0} - K * I_{1})$ where $K = 1/16$ and $ I_{0} = 1/3 * I_n $)

NEUTRAL INSTANTANEOUS OVERCURRENT (50N)

Operate Time:	<16 ms typical at 3 × Pickup at 60 Hz (Neutral IOC) <20 ms typical at 3 × Pickup at 50 Hz
Timer Accuracy	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate

18.2.17 GROUND INSTANTANEOUS OVERCURRENT (50G)**GROUND INSTANTANEOUS OVERCURRENT (50G)**

Operating Parameter	Ig Fundamental Phasor Magnitude
Pickup Level:	0.010 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy (for 0.1 to 2.0 x CT):	±0.5% of reading or ±0.4% of rated, whichever is greater
Level Accuracy (for > 2.0 x CT):	±1.5% of reading.
Operate Time:	<12 ms typical at 3 × Pickup at 60 Hz
Timer Accuracy from pickup to operate	±3% of delay setting or ±¼ cycle (whichever is greater)

18.2.18 PHASE TIME OVERCURRENT (51P/V)**PHASE TIME OVERCURRENT (51P/V)**

Current:	Phasor or RMS
Pickup Level:	0.010 to 30.000 in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: ±0.5% of reading or ±0.4% of rated, whichever is greater. For > 2.0 x CT: ±1.5% of reading 50:0.025A CT: For 0.5A to 4A: ±0.1A; For > 4A: ±0.2A (889 only)
Curve Shape:	Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I ² t, I ⁴ t, Rapid Inverse, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D
Curve Multiplier	
TDM:	0.01 to 28800.00 in steps of 0.01
TMS:	0.025 – 1.200 in steps of 0.005
K (RI):	0.10 – 10.00 in steps of 0.01
Time Delay:	0.01 to 28800.00 in steps of 0.01
Reset Char:	DT, Inverse
Reset Time:	0.000 to 28800.000s in steps of 0.001 s
Reset Time:	Instantaneous, Timed
Curve Timing Accuracy:	Currents > 1.03 to 20 x pickup: ±3% of operate time or ±½ cycle (whichever is greater) from pickup to operate
Voltage Dependent OC (51V):	VCO (Voltage Controlled Overcurrent), VRO (Voltage Restraint Overcurrent)

18.2.19 NEUTRAL/GROUND TIME OVERCURRENT (51N/G)**NEUTRAL/GROUND TIME OVERCURRENT (51N/G)**

Operating Parameter:	In/Ig (RMS or Fundamental)
----------------------	----------------------------

NEUTRAL/GROUND TIME OVERCURRENT (51N/G)	
Pickup Level:	0.010 to 30.000 in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy for 0.1 to 2.0 x CT	±0.5% of reading or ±0.4% of rated, whichever is greater
Level Accuracy for > 2.0 x CT:	±1.5% of reading
Curve Shape:	Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I ² t, I ⁴ t, Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D
Time Delay:	0.000 – 200.000 in steps 0.001
Curve Multiplier	
TDM:	0.01 to 600.00 in steps of 0.01
TMS:	0.025 – 1.200 in steps of 0.005
K (RI):	0.10 – 10.00 in steps of 0.01
IDG Is:	1.0 -4.0 in steps of 0.1
IDG Time:	1.00-2.00 in steps of 0.01
Reset Char:	DT, Inverse
Reset Time:	0.000 – 100.000 in steps of 0.001 s
Curve Timing Accuracy:	Currents > 1.03 to 20 x pickup: ±3% of operate time or ±½ cycle (whichever is greater) from pickup to operate

18.2.20 PHASE DIRECTIONAL OVERCURRENT (67P)

PHASE DIRECTIONAL OVERCURRENT (67P)	
Relay Connection:	90°(Quadrature)
Quadrature Voltage:	ABC phase seq.: phase A (Vbc), phase B (Vca), phase C (Vab) ACB phase seq.: phase A (Vcb), phase B (Vac), phase C (Vba)
Polarizing Voltage Threshold (up to FW 3.xx):	0.050 to 3.000 x VT in steps of 0.001 x VT
Polarizing Voltage Threshold (from FW 4.10):	0.015 to 3.000 x VT in steps of 0.001 x VT
Current Sensitivity Threshold:	0.05 x CT
Characteristic Angle:	0° to 359° in steps of 1°
Angle Accuracy:	±3°
Operation Time (FlexLogic™ operands):	Reverse to Forward transition: < 12 ms, typically. Forward to Reverse transition: <8 ms, typically.

18.2.21 NEUTRAL DIRECTIONAL OVERCURRENT (67N)

NEUTRAL DIRECTIONAL OVERCURRENT (67N)	
Directionality:	Co-existing forward and reverse
Polarizing:	Voltage, Current, Dual
Polarizing Current:	Ig
Operating Current:	I0
Level Sensing:	3 x (I0 – K x I1), Ig
Restraint, K:	0.000 to 0.500 in steps of 0.001
Characteristic Angle:	-90° to 90° in steps of 1°

NEUTRAL DIRECTIONAL OVERCURRENT (67N)

Limit Angle:	40° to 90° in steps of 1°, independent for forward and reverse
Angle Accuracy:	±3° (both voltage and current (1A/5A only) polarizing signals)
Pickup Level:	0.050 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Operate Time (no direction transition):	< 16 ms at 3 x Pickup at 60 Hz < 20 ms at 3 x Pickup at 50 Hz

18.2.22 GROUND DIRECTIONAL OVERCURRENT (67G)**GROUND DIRECTIONAL OVERCURRENT (67G)**

Directionality:	Co-existing forward and reverse
Polarizing (845):	Voltage
Polarizing (850, 889):	Voltage, Current, Dual
Polarizing Voltage:	V ₀ or V _X
Polarizing Current:	I _{pol}
Operating Current:	I _g
Level Sensing:	I _g , I _{pol}
Characteristic Angle:	-90° to 90° in steps of 1°
Limit Angle:	40° to 90° in steps of 1°, independent for forward and reverse
Angle Accuracy:	±3°
Pickup Level (up to FW 3.xx)	0.050 to 30.000 x CT in steps of 0.001
Pickup Level (from FW 4.10)	0.010 to 30.000 x CT in steps of 0.001
Dropout Level:	97 to 98%
Operate Time (no direction transition):	< 12 ms typical at 3 x Pickup at 60 Hz < 15 ms typical at 3 x Pickup at 50 Hz

18.2.23 NEGATIVE SEQUENCE INSTANTANEOUS OVERCURRENT**NEGATIVE SEQUENCE INSTANTANEOUS OVERCURRENT (50_2)**

Current:	I ₂ Fundamental Phasor Magnitude
Pickup Level:	0.0020 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy for 0.1 to 2.0 x CT:	±0.5% of reading or ±0.4% of rated, whichever is greater,
Level Accuracy for > 2.0 x CT:	±1.5% of reading. (For I _{op} = I ₂ - K * I ₁ , where K = 1/8
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Overreach:	< 2%
Operate Time:	< 12 ms typical at 3 x Pickup at 60 Hz < 15 ms typical at 3 x Pickup at 50 Hz
Timer Accuracy:	±3% of delay setting or ±½ cycle (whichever is greater) from pickup to operate

18.2.24 SENSITIVE GROUND DIRECTIONAL OVERCURRENT (67SG)

SENSITIVE GROUND DIRECTIONAL OVERCURRENT (67SG)	
Directionality:	Co-existing forward and reverse
Polarizing:	Voltage, Current, Dual
Polarizing Voltage:	V ₀ or VX
Polarizing Current:	I _g
Operating Current:	I _{sg}
Level Sensing:	I _g , I _{sg}
Characteristic Angle:	-90° to 90° in steps of 1°
Limit Angle:	40° to 90° in steps of 1°, independent for forward and reverse
Angle Accuracy:	±3°
Pickup Level:	0.00100 to 3.00000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98%
Operate Time (no direction transition):	< 12 ms typical at 3 × Pickup at 60 Hz < 15 ms typical at 3 × Pickup at 50 Hz
SENSITIVE GROUND INSTANTANEOUS OVERCURRENT (50SG)	
Operating Parameter:	I _{sg} (Fundamental Phasor Magnitude)
Pickup Level:	0.005 to 3.000 x CT in steps of 0.001 x CT 0.50 to 15.00 A in steps of 0.01 A (For 50:0.025)
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: ±0.5% of reading or ±0.4% of rated (whichever is greater). For > 2.0 x CT: ±1.5% of reading > 2.0 x CT rating For 50:0.025: ±0.1 A for 0.5 A to 4 A; ±0.2 A for > 4 A
Operate Time:	< 12 ms at 3 × Pickup at 60 Hz
Timer Accuracy:	±3% of operate time or ±¼ cycle (whichever is greater)
SENSITIVE GROUND TIME OVERCURRENT (51SG)	
Operating Parameter:	I _{sg} (RMS or Fundamental)
Pickup Level:	0.005 to 3.000 x CT in steps of 0.001 x CT
Pickup Level for 50:0.025 (850 only)	0.50 to 15.00 A in steps of 0.01 A
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	±1.5% of setting or ±0.6% of rated (whichever is greater)
Level Accuracy for 50:0.025 (850 only)	±0.1A for 0.5A to 4A; ±0.2A for > 4A
Dropout Level:	97 to 98% of Pickup
Curve Shape:	Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I2t, I4t, Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D
Curve Multiplier:	0.05 to 600.00 in steps of 0.01
Reset Time:	Instantaneous, Timed
Curve Timing Accuracy:	Currents > 1.03 to 20 x pickup: ±%3 of operate time or ±½ cycle (whichever is greater) from pickup to operate

SENSITIVE GROUND TIME OVERCURRENT (51SG)

Delay:	0.000 – 200.000 in steps 0.001
TDM	0.01 – 600.00 in steps of 0.01
TMS:	0.025 – 1.200 in steps of 0.005
K (RI)	0.10 – 10.00 in steps of 0.01
Time Dial:	0.01 – 600.00 in steps of 0.01
IDG Is:	1.0 - 4.0 in steps of 0.1
IDG Time	1.00 - 2.00 in steps of 0.01
Reset Char:	DT, Inverse
tRESET:	0.000 – 100.000 in steps of 0.001 s

18.2.25 PHASE OVERVOLTAGE (59P)**PHASE OVERVOLTAGE (59P)**

Voltage:	Fundamental Phasor Magnitude
Pickup Level:	0.02 to 3.00 x VT in steps of 0.01 x VT
Dropout Level (up to 3.xx):	97 to 98% of Pickup
Dropout Level (from 4.10):	Configurable: Either 97 to 98% of pickup or 95 to 97% of pickup
Level Accuracy:	±0.5% of reading from 10 to 208 V
Phases Required for Operation:	Any one, Any two, All three
Curves:	Definite Time, Inverse Time, Flex Curves A/B/C/D
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001s (Definite Time)
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001s (Definite Time)
Reset mode:	Definite Time, Dependent Time
Pickup Accuracy:	Per phase voltage input channel error
Operate Time:	< 30 ms at 1.1 x pickup at 60Hz < 35 ms at 1.1 x pickup at 50Hz
Curve Timing Accuracy	at >1.1 x PKP: 3.5% of operate time or ± ½cycle (whichever is greater) from pickup to operate
Timer Accuracy:	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate

18.2.26 NEUTRAL OVERVOLTAGE (59N)**NEUTRAL OVERVOLTAGE (59N)**

Operating Parameter:	3V_0 calculated from phase to ground voltages
Pickup Level:	0.02 to 3.00 x VT in steps of 0.01 x VT
Dropout Level:	Configurable: Either 97 to 98% of Pickup, or 95 to 98% of Pickup.
Level Accuracy:	±0.5% of reading from 10 to 208 V
Neutral Overvoltage Curves:	Definite time, FlexCurve A/B/C/D, Inverse time (from FW 4.10)
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s (Definite Time)
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s (Definite Time)
Operate Time:	< 30 ms at 1.1 x pickup at 60Hz < 35 ms at 1.1 x pickup at 50Hz

NEUTRAL OVERVOLTAGE (59N)

Curve Timing Accuracy:	at $> 1.1 \times$ Pickup: $\pm 3\%$ of curve delay or ± 1 cycle (whichever is greater) from pickup to operate
------------------------	---

18.2.27 AUXILIARY OVERVOLTAGE (59X)**AUXILIARY OVERVOLTAGE (59X)**

Operating Parameter:	Vx (Phasor)
Pickup Level:	0.00 to $3.00 \times V_T$ in steps of $0.01 \times V_T$
Dropout Level (up to 3.xx):	97 to 98% of Pickup
Dropout Level (from 4.10):	Configurable: Either 97 to 98% of pickup or 95 to 97% of pickup
Level Accuracy:	$\pm 0.5\%$ of reading from 10 to 240 V
Overvoltage Curves:	Definite Time, Inverse Time, FlexCurves A/B/C/D
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Pickup Accuracy:	Auxiliary voltage input channel error
Operate Time:	< 30 ms at $1.1 \times$ pickup at 60Hz
Curve Timing Accuracy:	at $> 1.1 \times$ PKP: 3.5% of operate time $\pm \frac{1}{2}$ cycle (whichever is greater) from pickup to operate
Timer Accuracy:	$\pm 3\%$ of operate time or $\pm \frac{1}{2}$ cycle (whichever is greater)

18.2.28 NEGATIVE SEQUENCE OVERVOLTAGE (59_2)**NEGATIVE SEQUENCE OVERVOLTAGE (59_2)**

Operating Parameter:	V ₂
Pickup Level:	0.00 to $3.00 \times V_T$ in steps of $0.01 \times V_T$
Dropout Level (up to 3.xx):	97 to 98% of Pickup
Dropout Level (from 4.10):	Configurable: Either 97 to 98% of pickup or 95 to 97% of pickup
Level Accuracy:	$\pm 0.5\%$ of reading from 10 to 208 V
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Operate Time:	< 25 ms at $1.1 \times$ pickup at 60 Hz < 30 ms at $1.1 \times$ pickup at 50 Hz
Timer Accuracy:	$\pm 3\%$ of delay setting or $\pm \frac{1}{4}$ cycle (whichever is greater) from pickup to operate

18.2.29 PHASE UNDERVOLTAGE (27P)**PHASE UNDERVOLTAGE (27P)**

Voltage:	Fundamental Phasor Magnitude
Minimum Voltage:	0.00 to $1.50 \times V_T$ in steps of $0.01 \times V_T$
Pickup Level:	0.00 to $1.50 \times V_T$ in steps of $0.01 \times V_T$
Dropout Level:	Selectable. Either 101 to 103% of pickup or 103 to 105% of pickup
Level Accuracy:	$\pm 0.5\%$ of reading from 10 to 208 V
Phases Required for Operation:	Any one, Any two, All three
Undervoltage Curves:	Definite Time, Inverse Time, FlexCurves A/B/C/D

PHASE UNDERVOLTAGE (27P)	
Pickup Time Delay:	0.020 to 6000.000 s in steps of 0.001s
Pickup Accuracy:	Per phase voltage input channel error
Reset Time Delay:	0.000 – 6000.00 s in steps of 0.001s
Reset Mode:	Definite Time, Dependent Time
Operate Time:	< 20 ms at 0.90 x pickup at 60 Hz < 25 ms at 0.90 x pickup at 50 Hz
Curve Timing Accuracy:	At < 0.90 x pickup: $\pm 3.5\%$ of curve delay or $\pm \frac{1}{2}$ cycle (whichever is greater) from pickup to operate

18.2.30 VOLTAGE INTERRUPTION

NEUTRAL OVERVOLTAGE (59N)	
Operating Parameter:	V1
Minimum Voltage	0.00 to 1.50 x VT in steps of 0.01 VT
Pickup Level:	0.02 to 3.00 x VT in steps of 0.01 VT
Dropout Level:	101 to 104% of Pickup

18.2.31 VOLTS PER HERZ (24)

VOLTS PER HERTZ (24)	
Voltages:	Phasor only
Pickup Level:	0.80 to 4.00 in steps of 0.01 pu
Dropout Level:	97 to 98% of pickup
Level Accuracy:	± 0.02 pu
Timing Curves:	Definite Time; IEC Inverse A/B/C; FlexCurves A, B, C, and D
TD Multiplier:	0.05 to 600.00 s in steps of 0.01
Reset Delay:	0.00 to 6000.000 s in steps of 0.01
Timer Accuracy:	Typically, $\pm 3\%$ of operate time or ± 15 cycles (whichever is greater) for values greater than 1.1 x pickup
Operate Time:	< 2 cycles
Number of Elements:	6

18.2.32 OVERFREQUENCY (81O)

OVERFREQUENCY (81O)	
Pickup Level Normal Frequency:	20.00 to 65.00 Hz in steps of 0.01
Pickup Level High Frequency:	40.00 to 65.00 Hz in steps of 0.01
Dropout Level:	Pickup -0.03 Hz
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Minimum Operating Voltage:	0.000 to 1.250 x VT in steps of 0.001 x VT
Level Accuracy Normal Frequency (40 to 70 Hz)	± 0.01 Hz
Level Accuracy High Frequency (40 to 70 Hz)	± 0.02 Hz

OVERFREQUENCY (81O)

Timer accuracy	$\pm 3\%$ of delay setting or $\pm \frac{1}{4}$ cycle (whichever is greater) from pickup to operate
Operate Time:	Typically 7.5 cycles at 0.1 Hz/s change. Typically 7 cycles at 0.3 Hz/s change. Typically 6.5 cycles at 0.5 Hz/s change.

Note:

Typical times are average Operate Times including variables such as frequency change instance, test method, etc., and may vary by ± 0.5 cycles.

18.2.33 UNDERFREQUENCY (81U)**UNDERFREQUENCY (81U)**

Pickup Level:	20.00 to 65.00 Hz in steps of 0.01
High-speed Frequency Input	40.00 to 65.00 Hz in steps of 0.01
Dropout Level:	Pickup +0.03 Hz
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Minimum Operating Voltage:	0.000 to $1.250 \times V_T$ in steps of $0.001 \times V_T$
Minimum Operating Current:	0.000 to $30.000 \times C_T$ in steps of $0.001 \times C_T$
Level Accuracy (Normal Frequency Input):	± 0.01 Hz
Level Accuracy (High-speed Frequency Input):	± 0.02 Hz
Timer Accuracy:	$\pm 3\%$ of delay setting or $\pm \frac{1}{4}$ cycle (whichever is greater) from pickup to operate
Operate Time:	Typically 7.5 cycles at 0.1 Hz/s change. Typically 7 cycles at 0.3 Hz/s change. Typically 6.5 cycles at 0.5 Hz/s change.

Note:

Typical times are average Operate Times including variables such as frequency change instance, test method, etc., and may vary by ± 0.5 cycles.

18.2.34 RATE OF CHANGE OF FREQUENCY (81R)**FREQUENCY RATE OF CHANGE (81R)**

df/dt Trend:	Increasing, Decreasing, Bi-directional
df/dt Pickup Level:	0.10 to 15.00 Hz/s in steps of 0.01 Hz/s
df/dt Dropout Level:	96% of Pickup Level
df/dt Level Accuracy:	80 mHz/s or 3.5%, whichever is greater
Frequency (normal):	20.00 to 80.00 Hz in steps of 0.01 Hz
Frequency (high-speed):	40.00 to 70.00 Hz in steps of 0.01 Hz
Minimum Voltage Threshold:	0.000 to $1.250 \times V_T$ in steps of $0.001 \times V_T$
Minimum Current Threshold:	0.000 to $30.000 \times C_T$ in steps of $0.001 \times C_T$
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Timer Accuracy:	$\pm 3\%$ of delay setting or $\pm \frac{1}{4}$ cycle (whichever is greater) from pickup to operate

FREQUENCY RATE OF CHANGE (81R)

95% Settling Time for df/dt :	< 24 cycles
Typical Operate Time:	6.5 cycles at 2 × Pickup 5.5 cycles at 3 × Pickup 4.5 cycles at 5 × Pickup

18.2.35 DIRECTIONAL POWER**DIRECTIONAL POWER (32)**

Measured Power	3-phase
Number of Stages	2
Characteristic Angle	0° to 359° in steps of 1°
Calibration Angle	0.00° to 0.95° in steps of 0.05°
Power Pickup Range	–1.200 to 1.200 x Rated Power in steps of 0.001
Pickup Level Accuracy	±1% or ±0.001 x Rated Power, whichever is greater
Hysteresis	2% or 0.001 x Rated Power, whichever is greater
Pickup Time Delay	0.000 to 6000.000 s in steps of 0.001 s
Operate Time	< 55 ms at 1.1 x pickup at 60 Hz < 65 ms at 1.1 x pickup at 50 Hz
Timer Accuracy	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate

18.2.36 REACTIVE POWER (40Q)**REACTIVE POWER (40Q)**

Operating Condition:	Three-phase reactive power
Positive/Negative var Trip/Alarm Pickup Level	0.02 to 2.00 x Rated in steps of 0.01
Pickup Level Accuracy:	±1.0% of reading
Positive/Negative var Trip/Alarm Pickup Delay:	0.00 to 600.00 s in steps of 0.01 s
Timer Accuracy:	±3.0% of delay time or ±10 ms, whichever is greater
Hysteresis:	2 to 3%
Operate Time:	< 45 ms at 60 Hz < 50 ms at 50 Hz
Elements:	Trip and Alarm

18.2.37 RTD PROTECTION**RTD PROTECTION**

Pickup:	1°C to 250°C in steps of 1°C
Hysteresis:	2°C
Timer Accuracy:	<2 s
Elements:	Trip and Alarm

18.2.38 ARC FLASH HS PHASE/GROUND INSTANTANEOUS OVERCURRENT (50P/50G)**ARC FLASH HS PHASE/GROUND INSTANTANEOUS OVERCURRENT HS 50P/50G**

Current:	Phasor Magnitude (special high speed algorithm)
----------	---

ARC FLASH HS PHASE/GROUND INSTANTANEOUS OVERCURRENT HS 50P/50G	
Pickup Level:	0.050 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 0.2 x CT: $\pm 0.2\%$ of reading or 1.5% of rated, whichever is greater For > 0.2 x CT: $\pm 1.5\%$ of reading
Operate Time:	2ms for light-only detection using FlexLogic operands 4 ms at > 6 x Pickup at 60 Hz 5 ms at > 6 x Pickup at 50 Hz 4-6 ms at > (3-6) x Pickup at 60 Hz 4-8 ms at > (3-6) x Pickup at 50 Hz All above operate time accuracy : +/- 1ms (SSR operate time is included)
Seal-in Time	0.00 to 10.00 Seconds

18.3 CONTROL

18.3.1 FIELD BREAKER DISCREPANCY

FIELD BREAKER DISCREPANCY	
Configurable:	Assigned to any FlexLogic operand (digital input preferred)
Time Delay:	0.10 to 600.00 s in steps of 0.01 s
Timing Accuracy:	±100 ms or ±0.5% of total time

18.3.2 SEQUENTIAL SHUTDOWN

SEQUENTIAL SHUTDOWN	
Arming Input:	Configurable to any FlexLogic operand
Pickup Level:	0.02 to 0.99 x Rated MW in steps of 0.01
Power Direction:	Low Forward Power or Reverse Power
Time Delay:	0.20 to 180.00 s in steps of 0.01 s
Pickup Accuracy:	see Power Metering
Timing Accuracy:	±100 ms or ±0.5% of total time

18.3.3 SYNCHROCHECK

SYNCHROCHECK (25)	
Maximum Frequency Difference:	0.01 to 5.00 Hz in steps of 0.01 Hz for frequency window of $f_{nom} \pm 5$ Hz
Maximum Angle Difference:	1° to 100° in steps of 1°
Maximum Voltage Difference:	10 to 600000 V in steps of 1 V
Hysteresis for Maximum Frequency Difference:	0.01 to 0.10 Hz in steps of 0.01 Hz
Breaker Closing Time:	0.000 to 6000.000 s in steps of 0.001 s
Dead Source Function:	None, LB & DL, DB & LL, DB & DL, DB OR DL, DB XOR DL
Dead/Live Levels for Bus and Line:	0.00 to 1.50 x VT in steps of 0.01 x VT

18.3.4 BREAKER CONTROL

BREAKER CONTROL	
Operation:	Asserted FlexLogic Operands
Function:	Opens/closes, blocks, bypasses blocks to the feeder breaker

18.3.5 LOCAL CONTROL MODE

LOCAL CONTROL MODE	
Number of Elements:	1
Select Before Operate Mode:	Disabled, Enabled
Mode:	Local Mode ON, Local Mode OFF
Display Status:	LM (local mode) displayed in banner
Tagging:	Disabled, Enabled

18.3.6 SWITCH CONTROL

SWITCH CONTROL	
Operation:	Local (PB control and SLD) and Remote (asserted FlexLogic operands)
Function:	Opens/Closes the disconnect switch
Timers:	0.000 to 6000.000 s in steps of 0.001 s

18.3.7 TRIP BUS

TRIP BUS	
Number of Elements:	6
Number of Inputs:	16
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Operate Time:	< 2 ms at 60 Hz
Timer Accuracy:	±3% of delay time or ±¼ cycle (whichever is greater) from pickup to operate

18.3.8 DIGITAL ELEMENTS

DIGITAL ELEMENTS	
Number of elements:	64
Operating signal:	Any FlexLogic operand
Operate time:	Digital Elements are processed once per cycle(16 ms at 60 Hz, 20 ms at 50 Hz)
Pickup Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Delay:	0.000 to 6000.000 s in steps of 0.001 s
Timer accuracy	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate 20 ms at 50 Hz)

18.4 MONITORING

18.4.1 FREQUENCY OOB ACCUMULATION

FREQUENCY OOB ACCUMULATION	
Frequency OOB Accumulation:	7 sets; 5.00 to 70.00 Hz in steps of 0.01 Hz
Frequency OOB Accumulation Pickup:	0 to 100000 s in steps of 1 s
Frequency OOB Accumulator Preset:	0 to 100000 s in steps of 1 s
Level Accuracy (for 15 to 70 Hz Band only):	±0.01 Hz
Volt Supervision:	0.10 to 1.25 x VT in steps of 0.01 x VT
Timer Accuracy of Accumulation:	±1% or ±1 s, whichever is greater

18.4.2 BREAKER ARCING CURRENT

BREAKER ARCING CURRENT	
Mode:	3-pole
Principle:	accumulates breaker duty (I^2t) during fault
Initiation:	any operand
Alarm Threshold:	0 to 50000 kA ² -cycle in steps of 1 kA ² -cycle
Timer Accuracy:	±3% of delay setting or ±1 cycle (whichever is greater) from pickup to operate

18.4.3 BREAKER FAILURE

BREAKER FAILURE	
Mode:	3-pole
Current Supervision:	phase and neutral current (fundamental phasor magnitude)
Current Supervision Pickup:	0.050 to 30.000 x CT in steps of 0.001 x CT
Current Supervision Dropout:	97 to 98% of pickup
Current Supervision Accuracy:	For 0.1 to 2.0 x CT: ±0.5% of reading or ±0.4% of rated (whichever is greater) For > 2.0 x CT: ±1.5% of reading
Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Timer Accuracy:	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate
Reset Time:	19 to 30 ms at 1.5 to 20 x Pickup

18.4.4 BREAKER HEALTH

BREAKER HEALTH	
Timer Accuracy:	±3% of delay setting or ±1 cycle (whichever is greater) from pickup to operate

18.4.5 TRIP CIRCUIT MONITORING

TRIP CIRCUIT MONITOR (TCM)	
Applicable Voltage:	20 to 250 VDC
Trickle Current:	1 to 2.5 mA
Timing Accuracy:	±3 % or ±4 ms, whichever is greater

18.4.6 CLOSE CIRCUIT MONITORING

CLOSE CIRCUIT MONITOR (CCM)	
Applicable Voltage:	20 to 250 VDC
Trickle Current:	1 to 2.5 mA
Timing Accuracy:	±3 % or ±4 ms, whichever is greater

18.4.7 DEMAND

DEMAND	
Measured Values:	Phase A/B/C present and maximum current, three-phase present, maximum real/reactive/apparent power, minimum real/reactive/apparent power
Measurement Type:	Thermal Exponential, 90% response time (programmed): 5 to 90 min in steps of 1 min. Block Interval / Rolling Demand, time interval (programmed): 5 to 90 min in steps of 1 min.
Current Pickup Level (845, 850, 889):	10 to 10000 in steps of 1 A
Dropout Level:	96-98% of Pickup level
Level Accuracy:	±2%

18.4.8 HARMONIC DETECTION

HARMONIC DETECTION	
Operating Parameter:	Current 2 nd , 3 rd , 4 th , 5 th harmonic or THD per phase
Timer Accuracy:	Harmonics: ±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate. THD: ±3% of delay setting or ±3 cycles (whichever is greater) from pickup to operate

18.4.9 POWER FACTOR (55)

POWER FACTOR (55)	
Lead/Lag Trip/Alarm Pickup Level::	0.05 to 0.99 in steps of 0.01, lead and lag
Lead/Lag Trip/Alarm Time Delay:	0.000 to 600.00 s in steps of 0.01 s
Modes of Control:	Resync Mode or Ride-Thru Mode
Start Block Delay:	0.000 to 600.00 s in steps of 0.01 s
Minimum Operating Voltage:	0.00 to 1.25 x VT in steps of 0.01 x VT
Minimum Operating Current:	0.00 to 10.00 x CT in steps of 0.01 x CT
Level Accuracy:	±0.02
Timer Accuracy:	±3% of delay setting or ±1¼ cycle (whichever is greater) from pickup to operate
Stages:	Trip and Alarm

POWER FACTOR (55)	
No. of Elements:	1

18.5 RECORDING

18.5.1 TRANSIENT RECORDER

TRANSIENT RECORDER	
Default AC Channels:	8 currents + 4 voltages
Configurable Channels:	16 analog and 64 digital channels
Sampling Rate:	128/c, 64/c, 32/c, 16/c, 8/c
Trigger Source:	Any element pickup, dropout or operate, digital input or output change of state, FlexLogic operand
Trigger Position:	0 to 100%
Storage Capability:	Non-volatile memory

18.5.2 DATA LOGGER

DATA LOGGER	
Data Logger channels:	16
Data Logger Rate:	1 cycle, 1 sec., 30 sec., 1 min., 15 min., 30 min., 1 hour, 6 hours, 8 hours, 12 hours, 24 hours
Inputs:	Any analog parameter from the list of available analog parameters
Data Collection Mode:	Continuous, Triggered
Trigger Source:	Any digital flag from the list of digital flags
Trigger Position:	0 to 50% in steps of 1%
Channel 1(16) Mode:	Sample, Min, Max, Mean

18.5.3 EVENT RECORDER

EVENT RECORDER	
Number of events:	1024
Header:	relay name, order code, firmware revision
Content:	any element pickup, any element operate, digital input change of state, digital output change of state, self-test events
Data Storage:	non-volatile memory
Time-tag Accuracy:	to one microsecond

18.5.4 LAST TRIP DATA

LAST TRIP DATA	
Number of Records:	1
Data Storage:	Non-volatile memory
Time-tag Accuracy:	One microsecond
Actuals:	Event Number of Last Trip, Timestamp of Last Trip, Cause of Last Trip, 64 Configurable FlexAnalog values
Commands:	Clear Last Trip Data

18.5.5 FAULT REPORTS

FAULT REPORTS	
Number of Reports:	15
Captured Data:	Pre-fault and fault phasors for all CT and VT banks, pre-fault and fault trigger operands, user-programmable analog channels 1 to 32

18.6 USER-PROGRAMMABLE ELEMENTS

18.6.1 FLEXLOGIC

FLEXLOGIC	
Lines of code:	1024
Supported operations:	NOT, XOR, OR (2 to 16 inputs), AND (2 to 16 inputs), NOR (2 to 16 inputs), NAND (2 to 16 inputs), latch (reset-dominant), edge detectors, timers
Inputs:	any logical variable, contact, or virtual input
Number of timers:	32
Pickup delay:	0 to 60000 (ms, sec., min.) in steps of 1
Dropout delay:	0 to 60000 (ms, sec., min.) in steps of 1
Timer accuracy:	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater) from pickup to operate

18.6.2 FLEXELEMENTS

FLEXELEMENTS	
Number of elements:	8
Operating signal:	Any analog actual value, or two values in a differential mode
Operating signal mode:	Signed, or Absolute value
Operating mode:	Level, Delta
Comparison direction:	Over, Under
Operate time:	FlexElements are processed once per cycle (16 ms at 60 Hz, 20 ms at 50 Hz)
Pickup Level:	-30.000 to 30.000 pu in steps of 0.001 pu
Hysteresis:	0.1 to 50.0% in steps of 0.1%
Delta dt:	40 msec to 45 days
Pickup and dropout delays:	0.000 to 6000.000 s in steps of 0.001 s

18.6.3 FLEXSTATES

FLEXSTATES	
Number of States:	256 logical variables grouped under 16 Modbus addresses
Programmability:	Any FlexLogic operand, any digital input, any virtual input, any remote input

18.6.4 FLEXCURVES

FLEXCURVES	
Number:	4 (A, B, C, D)
Reset points:	40 (0.00 to 0.98 x pickup)
Operate points:	80 (1.03 to 20.0 x pickup)
Time delay:	0 to 200,000,000 ms in steps of 1 ms

FLEXCURVES

Saturation level:	20 times the pickup level
-------------------	---------------------------

18.6.5 NON-VOLATILE LATCHES**NON-VOLATILE LATCHES**

Type:	Set-dominant or Reset-dominant
Range:	16 individually programmed
Output:	Stored in non-volatile memory
Execution sequence:	As input prior to protection, control and FlexLogic

18.6.6 USER-PROGRAMMABLE LEDS**USER-PROGRAMMABLE LEDS**

Number:	17 (14 + 3 PB LEDS)
Programmability:	any logic variable, contact, or virtual input
Reset mode:	self-reset or latched

18.6.7 TAB PUSHBUTTONS**TAB PUSHBUTTONS**

Number of elements:	1 (20 Tab Pushbuttons)
Data Storage:	Non-volatile memory
Mode:	Self-reset, latched
Display Message:	2 lines; 15 characters per line
Dropout Timer:	0.000 to 60.000 s in steps of 0.005
Auto-reset Timer:	0.2 to 600.0 s in steps of 0.1
Hold Timer:	0.1 to 10.0 s in steps of 0.1
Timer Accuracy:	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate

18.6.8 USER-PROGRAMMABLE PUSHBUTTONS**USER-PROGRAMMABLE PUSHBUTTONS**

Number of pushbuttons:	3 (Membrane and Rugged Front Panels)
Mode:	Self-reset, latched
Display message:	2 lines of 13 characters on each line
Dropout timer:	0.000 to 60.000 s in steps of 0.005
Auto-reset timer:	0.2 to 600.0 s in steps of 0.1
Hold timer:	0.0 to 10.0 s in steps of 0.1

18.7 METERING

18.7.1 RMS PARAMETERS

Currents	
Parameters:	Phase A, B, C, Neutral, Ground
Accuracy:	$\pm 0.25\%$ of reading or $\pm 0.2\%$ of rated (whichever is greater) from 0.1 to 2.0 x CT $\pm 1\%$ of reading > 2.0 x CT

Voltages	
Parameters:	Wye VTs: A-n, B-n, C-n, A-B, B-C, C-A, Average Phase, Neutral and Residual. Delta VTs: A-B, B-C, C-A, Neutral and Residual
Accuracy:	$\pm 0.5\%$ of reading from 15 to 208 V $\pm 2\%$ for open Delta connections

Sensitive Ground	
Parameter:	I _{sg}
Accuracy (from 0.01 to 0.2 x CT):	$\pm 1.30\%$ of rated
Accuracy (> 0.2 x CT):	$\pm 0.30\%$ of reading or $\pm 0.60\%$ of rated (whichever is greater)

Real Power (Watts)	
Range:	-214748364.8 kW to 214748364.7 kW
Parameters:	Wye VTs: 3-phase and per phase. Delta VTs: 3-phase only
Accuracy:	$\pm 1.0\%$ of reading or 0.2 kW (whichever is greater) at $-0.8 < PF \leq -1.0$ and $0.8 < PF < 1.0$

Reactive Power (Vars)	
Range:	-214748364.8 kvar to 214748364.7 kvar
Parameters:	Wye VTs: 3-phase and per phase. Delta VTs: 3-phase only
Accuracy:	$\pm 1.0\%$ of reading or 0.2 kvar (whichever is greater) at $-0.2 < PF \leq 0.2$

Apparent Power (VA)	
Range:	0 kVA to 214748364.7 kVA
Parameters:	Wye VTs: 3-phase and per phase. Delta VTs: 3-phase only
Accuracy:	$\pm 1.0\%$ of reading or 0.2 kVA (whichever is greater)

Power Factor	
Parameters:	3-phase; per phase if VT is Wye
Range:	0.01 Lag to 1.00 to 0.01 Lead
Accuracy:	± 0.02 for 50 Hz and 60 Hz; ± 0.05 for 25 Hz

Watt-hours (positive and negative)	
Range:	0.000 MWh to 4294967.295 MWh
Parameters:	3-phase only
Update Rate:	50 ms
Accuracy:	±2.0% of reading

Var-hours (positive and negative)	
Range:	0.000 Mvarh to 4294967.295 Mvarh
Parameters:	3-phase only
Update Rate:	50 ms
Accuracy:	±2.0% of reading

18.7.2 PHASORS

PHASORS	
Current	
Parameters:	Phase A, B, C, Neutral and Ground
Magnitude Accuracy:	±0.5% of reading or ±0.2% of rated (whichever is greater) from 0.1 to 2.0 x CT ±1.0% of reading > 2.0 x CT
Angle Accuracy:	2° (3° for 25 Hz)
CBCT Angle Accuracy:	±25° (For 50:0.025 CT between 0.5A to 15A)
Voltages	
Parameters:	Wye VTs: A-n, B-n, C-n, A-B, B-C, C-A, Average Phase, Neutral and Residual Delta VTs: A-B, B-C, C-A, Neutral and Residual
Magnitude Accuracy:	±0.5% of reading from 15 to 208 V ±1% for open Delta connections ±10% for 25 Hz with 150 V < V < 208V
Angle Accuracy:	0.5° (15 V < V < 208 V)

18.7.3 FREQUENCY

FREQUENCY	
Range:	2.000 to 90.000 Hz
Accuracy at:	V = 15 to 208 V: ±0.01 Hz (input frequency 15 to 70 Hz); I = 0.1 to 0.4 x CT: ±0.020 Hz (input frequency 15 to 70 Hz); I > 0.4 x CT: ±0.01 Hz (input frequency 15 to 70 Hz)

18.7.4 CURRENT AND VOLTAGE HARMONICS

CURRENT AND VOLTAGE HARMONICS	
Parameters:	Magnitude of each harmonic and THD
Range:	2 nd to 25 th harmonic: per-phase displayed as % of f ₁ fundamental frequency THD: per-phase displayed as % of f ₁

18.8 INPUTS

18.8.1 AC CURRENTS

AC CURRENTS	
CT Rated Primary:	1 to 20000 A
CT Rated Secondary:	1 A or 5 A based on relay ordering
Nominal Frequency:	50 Hz and 60 Hz
Burden:	< 0.2 VA at rated secondary
Conversion Range:	Standard CT: 0.02 to 46 x CT rating RMS symmetrical. Sensitive Ground CT module: 0.002 to 4.6 x CT rating RMS symmetrical. CBCT (50:0.025): 0 to 15 A
Short Term CT Withstand:	1 second at 100 x rated current 2 seconds at 40 x rated current Continuous 3 x rated current
CBCT (50:0.025) Withstand:	Continuous 150 mA

18.8.2 AC VOLTAGES

AC VOLTAGE	
VT Range:	10 to 260 V
Nominal Frequency:	20 to 65 Hz
Burden:	<0.0042 VA at 120 V
Conversion Range:	1 to 275 V
Voltage Withstand:	continuous at 260 V to neutral. 1 min/hr at 420 V to neutral

18.8.3 ANALOG INPUTS

ANALOG INPUTS	
Current Input (mA DC):	0 to 1mA, 0 to 5mA, 0 to 10mA, 0 to 20mA, 4 to 20mA (configurable)
Input Impedance:	375 Ω $\pm$ 10%
Conversion range:	0 to +21 mA DC
Accuracy:	$\pm$ 1% of full scale,
Type:	Passive
Sampling Interval:	Typically 500 ms
Cable:	Twisted-pair shielded cable

18.8.4 INPUT FREQUENCY

FREQUENCY	
Nominal frequency setting:	25 Hz, 50 Hz, 60 Hz
Sampling frequency:	64 samples per power cycle. 128 samples per power cycle (available for transient recorder)

FREQUENCY	
Tracking frequency range:	2 to 72 Hz

18.8.5 ARC FLASH SENSOR/FIBER

ARC FLASH SENSOR/FIBER	
Number of Point Sensors:	8 (Point and/or Loop sensors). 4 sensors per instance
Detection Radius:	180 degrees
Fiber Length (Point Sensor):	35 m
Fiber Length (Loop Sensor):	70 m
Fiber Size:	1000 um
Mode:	Multi-mode
Connector:	Small Media Interface (SMI)
Fiber Type:	Plastic Optical Fiber
Bend Radius:	>25 mm

18.8.6 CONTACT INPUTS

CONTACT INPUTS	
Number of Inputs:	Based on relay order code
Type:	Wet or Dry
Wet Contacts:	300 VDC maximum
Selectable thresholds:	Programmable: 17 VDC (For 24 VDC Operating Voltage) 33 VDC (For 48 VDC and 60 VDC Operating Voltage) 84 VDC (For 110 VDC and 125 VDC Operating Voltage) 166 VDC (For 220 VDC and 250 VDC Operating Voltage)
Tolerance:	17 VDC: Vlow (off) <10V, Vhigh (on) >19V. 33 VDC: Vlow (off) <23V, Vhigh (on) >38V. 84 VDC: Vlow (off) <70V, Vhigh (on) >88V. 166 VDC: Vlow (off) <140V, Vhigh (on) >176V.
Recognition time:	1 ms (typical)
Debounce time:	0.0 to 16.0 ms in steps of 0.5 ms
Continuous current draw (burden):	2 mA
CLOCK	
Setup:	Date and Time, Daylight Saving Time, UTC (Coordinated Universal Time)
Backup Retention:	31 days
Typical clock drift:	+/- 5minutes per month

Note:

For relays with Hardware Revision A, Clock Backup Retention is only 1 hour

18.8.7 IRIG-B INPUT

IRIG-B INPUT	
Auto-detect:	DC and AM
Amplitude Modulation:	1 V to 10 V pk-to-pk

IRIG-B INPUT	
DC Shift:	TTL
Input Impedance:	40 k Ω
Isolation:	2 kV
IRIG-B Format:	IEEE 1344-1995 (with control bits extension)

18.8.8 RTD INPUTS

RTD INPUTS	
Types (3-wire):	100 Ω Platinum, 120 Ω Nickel, 100 Ω Nickel, 10 Ω Copper (RMIO only supports 100 Ω Platinum)
Sensing current:	5 mA
Range:	-40 to +250°C (-40 to +482°F)
Accuracy (onboard):	$\pm 2^{\circ}\text{C}$ ($\pm 4^{\circ}\text{F}$)
Accuracy (using RMIO):	$\pm 3^{\circ}\text{C}$ ($\pm 5.4^{\circ}\text{F}$)
Isolation:	36 V pk-pk (a group of RTDs to ground) 2 kV from base unit (RMIO only)
Lead Resistance:	25 Ω max. per lead for platinum or nickel and 3 Ω max. per lead for copper RTDs
RTD Inputs Available:	6 RTD inputs with one module or 12 inputs with 2 modules (IO cards R or S). 1 RTD input with IO card L.6 to 12 RTD inputs with RMIO modules 1 through 4
Cable:	Three-wire shielded cable

18.9 OUTPUTS

18.9.1 ANALOG OUTPUTS

ANALOG OUTPUTS	
Range (configurable):	0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, 4 to 20 mA
Max. load resistance:	10 k Ω @ 1 mA, 600 Ω @ 20 mA
Accuracy:	$\pm 1\%$ of full scale
Isolation:	500V DC for one minute (functional isolation between analog inputs and output group; and each group of chassis)
Driving Signal:	any Analog quantity
Sampling Interval:	Typically 100 ms
Upper and lower limit (for the driving signal):	-90 to 90 pu in steps of 0.001
Cable:	Twisted-pair shielded cable

18.9.2 FORM C OUTPUT RELAYS

FORM C OUTPUT RELAYS	
Maximum Working Voltage:	300VDC/300VAC
Make and short-time carry current:	30A/0.2s per IEEE C37.90
Maximum Continuous Current per contact:	10A
Total maximum current for contacts connected to common potential:	10A
Breaking Capacity (DC inductive) with respect to source voltage, @L/R = 40 ms (10000 Operation, per IEC 60255-1 2009-08):	24 V-1 A; 48 V-0.5 A; 125 V-0.3 A; 250 V-0.2 A
Breaking Capacity (DC resistive) with respect to source voltage:	24 V-10 A; 48 V-1.5 A; 125 V-0.4 A; 250 V-0.3 A
Breaking Capacity (AC inductive) with respect to source voltage, @PF= 0.4 or less:	A300, Pilot duty 720 VA
Breaking Capacity (AC resistive) with respect to source voltage:	277V-10A
Operating Time (coil energization to contact closure, resistive load):	<8ms
Contact Material:	Silver alloy
Mechanical Endurance (no load):	> 10,000
Maximum Frequency of operation:	360/h
Protection Device across contact:	EMI Suppression Cap, 1nF

Note:

For order codes with a combined total of 2 or 3 type A and M I/O cards, the following ratings are applied to meet UL508 requirements: 1 second on / 10 seconds off, 9% duty cycle

18.9.3 FORM A VOLTAGE MONITOR

FORM-A VOLTAGE MONITOR	
Applicable voltage:	20 to 250 VDC
Trickle current:	1 to 2.5 mA
Timer accuracy:	±3% of operate time or ±¼ cycle (whichever is greater)

18.9.4 SOLID STATE RELAYS

SOLID STATE RELAYS ON I/O CARD M	
Maximum Working Voltage:	300 VDC
Make and short-time carry current:	30A/0.2 s per IEEE C37.90
Maximum Continuous Current per contact:	10 A
Total maximum current for contacts connected to common potential:	10 A
Breaking Capacity (DC inductive) with respect to source voltage, @L/R = 40 ms (10000 Operation, per IEC 60255-1 2009-08):	250 VDC - 10 A (or 2.5 kW) (Maximum 10 A and 300 VDC)
Breaking Capacity (DC resistive) with respect to source voltage:	250 V - 30 A (or 7500 W)
Breaking Capacity (AC inductive) with respect to source voltage, @PF= 0.35 or less:	N/A
Breaking Capacity (AC resistive) with respect to source voltage:	N/A
Operating Time (coil energization to contact closure, resistive load):	<0.2 ms
Contact Material:	Hybrid
Mechanical Endurance (no load):	> 10,000
Maximum Frequency of operation:	360/h
Protection Device across contact:	MO V, rated @ 250 VAC/320 VDC

18.9.5 PULSED OUTPUTS

PULSED OUTPUTS	
Mode:	3-phase positive and negative active energy measurement, 3-phase positive and negative reactive energy measurements
Principle:	Pulsed output is energized for one second and then de-energized for one second after the programmed energy increment.

18.9.6 COIL ACTUATOR OUTPUTS

COIL ACTUATOR OUTPUTS	
No. of Coil Actuators:	3 (1 per phase)
Open Maximum Current:	5 to 20 A
Close Maximum Current:	5 to 20 A
Open Pulse Time:	15 to 100 ms
Close Pulse Time:	15 to 100 ms
Operate Time:	< 8 ms

COIL ACTUATOR OUTPUTS	
Intervals between full sequence operation:	Minimum 60 s between two consecutive full sequence operations. Minimum 30 mins after 6 consecutive full sequence operations with minimum interval.

18.10 POWER SUPPLY

18.10.1 VOLTAGE SUPPLIES

(FOR H AND R OPTIONS ONLY)	
Nominal DC Voltage:	125 to 250 V
Minimum DC Voltage:	88 V
Maximum DC Voltage:	300 V
Nominal AC Voltage:	100 to 240 V at 50/60 Hz
Minimum AC Voltage:	88 V at 50 to 60 Hz
Maximum AC Voltage:	265 V at 50 to 60 Hz

(FOR L DC OPTION ONLY)	
Nominal DC Voltage:	24 V to 48 V
Minimum DC Voltage:	20 V
Maximum DC Voltage:	60 V

18.10.2 POWER CONSUMPTION

POWER CONSUMPTION	
Typical:	20 W / 40 VA
Maximum:	34 W / 70 VA

18.10.3 VOLTAGE LOSS RIDE-THROUGH

VOLTAGE LOSS RIDE THROUGH	
Typical (at typical power consumption):	50 ms
For R order code:	200 ms

18.11 COMMUNICATIONS

18.11.1 ETHERNET

μETHERNET – BASE OFFERING (“SE” OPTION)

Modes:	10/100 Mbps
One Port:	RJ45
Protocol:	Modbus TCP, DNP
Cable type:	CAT 5 or CAT 6 Shielded Twisted Pair

ETHERNET – CARD OPTION “C” - 2X COPPER (RJ45) PORTS

Modes:	10/100 MB
Two Ports:	RJ45 (with this option both enabled ports are on the communications card; the Ethernet port located on the base CPU is disabled)
Protocols:	Modbus TCP, DNP3.0, IEC60870-5-104, IEC 61850 Ed.2, IEC 61850 Ed.2 GOOSE, IEEE 1588 (PTP version 2), SNTP, IEC 62439-3 clause 4 (PRP)

ETHERNET – CARD OPTION “S” - 2X ST FIBER PORTS

Emitter, fiber type:	1300 nm Multi-mode (see table below)
Two Ports:	ST (with this option both enabled ports are on the communications card; the Ethernet port located on the base CPU is disabled)
Protocols:	Modbus TCP, DNP3.0, IEC60870-5-104, IEC 61850 Ed.2, IEC 61850 Ed.2 GOOSE, IEEE 1588 (PTP version 2), SNTP, IEC 62439-3 clause 4 (PRP), OPC-UA
Wavelength:	1310nm
Typical link distance:	4 km

ETHERNET – CARD OPTION “S” - 2X ST FIBER PORTS

Emitter, fiber type	Cable type	Transmit power	Received sensitivity	Power budget max	Optical input power
1300 nm Multi-mode	62.5/125 μm	-20 dBm	-31 dBm	11 dBm	-14 dBm
	50/125 μm	-23 dBm	-31 dBm	7.5 dBm	-14 dBm

18.11.2 USB

USB

Standard specification:	Compliant with USB 2.0
Protocols:	Modbus TCP, TFTP

18.11.3 SERIAL

SERIAL

RS485 port:	Isolated
Baud rates:	Supports 9600, 19200, 38400, 57600, and 115200 kbps

SERIAL	
Response time:	10 ms typical
Parity:	None, Odd, Even
Protocol:	Modbus RTU, DNP 3.0, IEC 60870-5-103
Maximum distance:	1200 m (4000 feet)
Isolation:	2 kV
Cable:	24 AWG stranded, shielded twisted-pair

18.11.4 WIFI

WIFI	
Standard specification:	IEEE802.11bgn
Range:	30 ft (direct line of sight)

18.11.5 REMOTE MODBUS

REMOTE MODBUS DEVICE PROFILE	
Device Name:	BSG3 (13 alphanumeric characters maximum)
IP Address:	0.0.0.0 – standard Ethernet address
Slave Address:	254 (1 to 254)
Modbus Port:	502 (0 to 10000, default 502)
Poll Rate:	1 minute (OFF, 1 to 120 minutes), the continuous mode poll interval is defined as the poll rate interval
Trigger:	Off (any FlexLogic Operand), the trigger mode is based on the FlexLogic operand designed to trigger the poll

18.11.6 CONTROLLER AREA NETWORK

CAN (RMIO)	
Maximum Distance:	250 m (820 ft)
Cable Type:	Shielded twisted pair
Cable Gauge:	24 AWG for distances up to 100m; 22 AWG for distances up to 250 m.

18.12 CERTIFICATIONS AND APPROVALS

18.12.1 APPROVALS

	APPLICABLE COUNCIL DIRECTIVE	ACCORDING TO
CE compliance	Low voltage directive	EN60255-27
	EMC Directive	EN60255-26
	R&TTE Directive	ETSI EN300 328, ETSI EN301 489-1, ETSI EN301-489-17,
	RoHS Directive	RoHS Directive 2011/65/EU, 2015/863
North America	cULus	UL508, e57838 NKCR, NRGU
		CSA C22.2.No 14, e57838 NKCR7, NRGU7
ISO	Manufactured under a registered quality program	ISO9001

18.12.2 TESTING AND CERTIFICATION

Testing and Certification

TEST	REFERENCE STANDARD	TEST LEVEL
Dielectric voltage withstand	EN60255-5/IEC60255-27	2.3 kV
Impulse voltage withstand	EN60255-5/IEC60255-27	5 kV
Insulation resistance	IEC60255-27	500 VDC
Damped Oscillatory	IEC61000-4-18	2.5 kV CM, 1 kV DM, 1 MHz
Electrostatic Discharge	EN61000-4-2	Level 4
RF immunity	EN61000-4-3	Level 3
Fast Transient Disturbance	EN61000-4-4	Class A and B
Surge Immunity	EN61000-4-5	Level 3
Conducted RF Immunity	EN61000-4-6	Level 3
Power Frequency Immunity	IEC60255-26	Class A & B
Voltage variation, interruption and Ripple DC	IEC60255-26	PQT levels based on IEC61000-4-29, IEC61000-4-11 and IEC61000-4-17
Radiated & Conducted Emissions	CISPR11 /CISPR22	Class A
Sinusoidal Vibration	IEC60255-21-1	Class 1
Shock & Bump	IEC60255-21-2	Class 1
Seismic	IEC60255-21-3	Class 2
Power magnetic Immunity	IEC61000-4-8	Level 5
Pulse Magnetic Immunity	IEC61000-4-9	Level 4
Damped Magnetic Immunity	IEC61000-4-10	Level 4
Voltage Dip & interruption	IEC61000-4-11	0, 40, 70, 80% dips, 250/300 cycle interrupts
Harmonic Immunity	IEC61000-4-13	Class 3
Conducted RF Immunity 0-150kHz	IEC61000-4-16	Level 4
Ingress Protection	IEC60529	IP54 front

TEST	REFERENCE STANDARD	TEST LEVEL
Environmental (Cold)	IEC60068-2-1	-40C 16 hrs
Environmental (Dry heat)	IEC60068-2-2	85C 16hrs
Relative Humidity Cyclic	IEC60068-2-30	6 day humidity variant 2
EFT	IEEE/ANSI C37.90.1	4kV, 5 kHz
Damped Oscillatory	IEEE/ANSI C37.90.1	2.5 kV, 1 MHz
Dielectric Between contacts	IEEE C37.90	1500Vrms
Make and Carry	IEEE C37.90	30A /200 ops
Electrostatic Discharge (ESD)	IEEE/ANSI C37.90.3	8kV DC/ 15 kV AD
Product Safety	IEC60255-27	As per standard
Rated Burden,	IEC60255-1	Sec 6.10
Contact Performance	IEC60255-1	Sec 6.11

Note:

May contain components with FCC ID: XF6-RS9110N1122 and IC ID: 8407A-RS9110N1122

18.13 ENVIRONMENTAL

AMBIENT TEMPERATURES	
Storage/Shipping:	-40°C to 85°C
Operating:	-40°C to 60°C
Humidity	Operating up to 95% (non condensing) @ 55°C (As per IEC60068-2-30 Variant 2, 6 days)
Altitude:	2000m (standard base reference evaluated altitude) 5000m (maximum achievable altitude)
Pollution Degree:	II
Overvoltage Category:	II
Ingress Protection:	IP54 Front (845,850, 869, 889) IP 50 Front (859)
Insulation Class:	1
Noise:	0 dB

18.14 LONG-TERM STORAGE

The device should be stored in an environment that is dry, corrosive-free, and not in direct sunlight.

Correct storage will prevent premature component failures caused by environmental factors such as moisture or corrosive gases. Exposure to high humidity or corrosive environments will prematurely degrade the electronic components in any electronic device regardless of its use or manufacturer, unless specific precautions, such as those mentioned in the Environmental section, are taken.

We recommend that you power up all stored relays once per year, for one hour continuously, to avoid deterioration of electrolytic capacitors and subsequent relay failure.

CHAPTER 19

APPENDICES

19.1 ABBREVIATIONS

Abbreviation	Meaning
A	Ampere
AC	Alternating Current
A/D	Analog to Digital
AE	Accidental Energization, Application Entity
AMP	Ampere
ANG	Angle
ANSI	American National Standards Institute
APDU	Application Protocol Data Unit
AR	Automatic Reclosure
ARP	Address Resolution Protocol
ASDU	Application-layer Service Data Unit
ASYM	Asymmetry
AUTO	Automatic
AUX	Auxiliary
AVG	Average
AWG	American Wire Gauge
BCD	Binary-Coded Decimal
BCS	Best Clock Selector
BER	Bit Error Rate
BF	Breaker Fail
BFI	Breaker Failure Initiate
BKR	Breaker
BLK	Block
BLKG	Blocking
BNC	Bayonet Neill-Concelman
BPNT	Breakpoint of a characteristic
BRKR	Breaker
CA	Certificate Authority
CAP	Capacitor
CC	Coupling Capacitor
CCVT	Coupling Capacitor Voltage Transformer
CFG	Configure / Configurable
.CFG	Filename extension for oscillography files
CHK	Check
CHNL	Channel
CID	Configured IED Description
CLS	Close
CLSD	Closed
CMND	Command

Abbreviation	Meaning
CMPRSN	Comparison
CO	Contact Output
COM	Communication
COMM	Communications
COMP	Compensated, Comparison
ConfRev	Configuration Revision
CONN	Connection
CONT	Continuous, Contact
CO-ORD	Coordination
CPU	Central Processing Unit
CRC	Cyclic Redundancy Code/Check
CRL	Certificate Revocation List
CRT, CRNT	Current
CSA	Canadian Standards Association
CT	Current Transformer
CVT	Capacitive Voltage Transformer
D/A	Digital to Analog
DA	Data Attribute
DANH	Doubly Attached Node with HSR
DANP	Doubly Attached Node with DANP
DC (dc)	Direct Current
DCE	Data Communications Equipment
DCS	Distributed Control System
DD	Disturbance Detector
DFLT	Default
DGNST	Diagnostics
DIFF	Differential
DIR	Directional
DISCREP	Discrepancy
DIST	Distance
DMD	Demand
DNP	Distributed Network Protocol
DPO	Dropout
DPS	Double-Point Status
DSP	Digital Signal Processor
DST	Daylight Savings Time
dt	Rate of Change
DTT	Direct Transfer Trip
DUTT	Direct Under-reaching Transfer Trip
EAD	Expert Arc Detector
EGD	Ethernet Global Data

Abbreviation	Meaning
ENCRMNT	Encroachment
EPRI	Electric Power Research Institute
.EVT	Filename extension for event recorder files
EXT	Extension, External
F	Field
FAIL	Failure
FCDA	Functional Constraint Data Attributes
FD	Fault Detector
FDH	Fault Detector high-set
FDL	Fault Detector low-set
FIR	Finite Impulse Response
FLA	Full Load Current
FO	Fiber Optic
FPGA	Field-programmable Gate Array
FREQ	Frequency
FSK	Frequency-Shift Keying
FTP	File Transfer Protocol
FxE	FlexElement™
FWD	Forward
G	Generator
GCM	Galois Counter Mode
GDOI	Group Domain of Interpretation
GFP	Graphical Front Panel
GIS	Gas Insulated Switchgear
GND	Ground
GNTR	Generator
GoCB	GOOSE Control Block
GOOSE	General Object Oriented Substation Event
GPS	Global Positioning System
GSU	Generator Step-Up
HARM	Harmonic / Harmonics
HCT	High Current Time
HGF	High-Impedance Ground Fault (CT)
HIZ	High-Impedance and Arcing Ground
HMI	Human-Machine Interface
HSR	High-availability Seamless Redundancy
HTTP	Hyper Text Transfer Protocol
HV	High Voltage
HYB	Hybrid
Hz	Hertz

Abbreviation	Meaning
I	Instantaneous
I ₀	Zero Sequence current
I ₁	Positive Sequence current
I ₂	Negative Sequence current
IA	Phase A current
IAB	Phase A minus B current
IB	Phase B current
IBC	Phase B minus C current
IC	Phase C current
ICA	Phase C minus A current
ICD	IED Capability Description
ID	Identification
IED	Intelligent Electronic Device
IEC	International Electrotechnical Commission
IEEE	Institute of Electrical and Electronic Engineers
IG	Ground (not residual) current
Igd	Differential Ground current
IGMP	Internet Group Management Protocol
IID	Instantiated IED Capability Description
IN	CT Residual Current (3I ₀) or Input
INC SEQ	Incomplete Sequence
INIT	Initiate
INST	Instantaneous
INV	Inverse
I/O	Input/Output
IOC	Instantaneous Overcurrent
IOV	Instantaneous Overvoltage
IRC	Inter-Relay Communication
IRIG	Inter-Range Instrumentation Group
ISO	International Standards Organization
IUV	Instantaneous Undervoltage
K ₀	Zero Sequence Current Compensation
kA	kiloAmpere
KDC	Key Distribution Center
kV	kiloVolt
LCD	Liquid Crystal Display
LDBN	Bias Neutral Level Detector
LED	Light Emitting Diode
LEO	Line End Open
LFT BLD	Left Blinder

Abbreviation	Meaning
LOOP	Loopback
LPU	Line Pickup
LRA	Locked-Rotor Current
LTC	Load Tap-Changer
LV	Low Voltage
M	Machine
M2M	Machine to Machine
mA	MilliAmpere
MAG	Magnitude
MAN	Manual / Manually
MAX	Maximum
Mb	Megabit
MIC	Model Implementation Conformance
MIN	Minimum, Minutes
MMI	Man Machine Interface
MMS	Manufacturing Message Specification
MRT	Minimum Response Time
MSG	Message
MTA	Maximum Torque Angle
MTR	Motor
MU	Merging Unit
MVA	MegaVolt-Ampere (total 3-phase)
MVA_A	MegaVolt-Ampere (phase A)
MVA_B	MegaVolt-Ampere (phase B)
MVA_C	MegaVolt-Ampere (phase C)
MVAR	MegaVar (total 3-phase)
MVAR_A	MegaVar (phase A)
MVAR_B	MegaVar (phase B)
MVAR_C	MegaVar (phase C)
MVARH	MegaVar-Hour
MW	MegaWatt (total 3-phase)
MW_A	MegaWatt (phase A)
MW_B	MegaWatt (phase B)
MW_C	MegaWatt (phase C)
MWH	MegaWatt-Hour
N	Neutral
N/A, n/a	Not Applicable
NCIT	Non-conventional instrument transformer
NEG	Negative
NMPLT	Nameplate
NOM	Nominal

Abbreviation	Meaning
NTR	Neutral
O	Over
OC, O/C	Overcurrent
OCSP	Online Certificate Status Protocol
OF	Overload Factor
O/P, Op	Output
OP	Operate
OPER	Operate
OPERATG	Operating
O/S	Operating System
OSI	Open Systems Interconnect
OSB	Out-of-Step Blocking
OUT	Output
OV	Overvoltage
OVERFREQ	Overfrequency
OVL	Overload
P	Phase
PB	Process Bus
PBM	Process Bus Module
PC	Phase Comparison, Personal Computer
PCNT	Percent
PF	Power Factor (total 3-phase)
PF_A	Power Factor (phase A)
PF_B	Power Factor (phase B)
PF_C	Power Factor (phase C)
PFLL	Phase and Frequency Lock Loop
PHS	Phase
PICS	Protocol Implementation & Conformance Statement
PKI	Public Key Infrastructure
PKP	Pickup
PLC	Power Line Carrier
POS	Positive
POTT	Permissive Over-reaching Transfer Trip
PP	Power Profile
PPP	Point-to-Point
PPS	Pulse per Second
PRESS	Pressure
PRI	Primary
PROT	Protection
PRP	Parallel Redundancy Protocol
PSEL	Presentation Selector

Abbreviation	Meaning
PTP	Precision Time Protocol
pu	Per Unit
PUIB	Pickup Current Block
PUIT	Pickup Current Trip
PUSHBTN	Pushbutton
PUTT	Permissive Under-reaching Transfer Trip
PWM	Pulse Width Modulated
PWR	Power
QUAD	Quadrilateral
R	Rate, Reverse
RA	Registration Authority
RCA	Reach Characteristic Angle
RedBox	Redundancy Box
REF	Reference
REM	Remote
REV	Reverse
R-GOOSE	Routable GOOSE
RI	Reclose Initiate
RIP	Reclose In Progress
RGT BLD	Right Blinder
RMA	Return Materials Authorization
RMS	Root Mean Square
ROCOF	Rate of Change of Frequency
ROD	Remote Open Detector
RRTD	Remote Resistance Temperature Detector
RST	Reset
RSTR	Restrained
RTD	Resistance Temperature Detector
RTU	Remote Terminal Unit
RX (Rx)	Receive, Receiver
s	second
S	Sensitive
SAN	Singly Attached Node
SAT	CT Saturation
SBO	Select Before Operate
SCADA	Supervisory Control and Data Acquisition
SCC	Serial Communication Controller
SCD	System Configuration Description
SCL	Substation Configuration Language
SCEP	Simple Certificate Enrollment Protocol

Abbreviation	Meaning
SEC	Secondary
SEL	Select / Selector / Selection
SENS	Sensitive
SEQ	Sequence
SFTP	Secure Shell (SSH) File Transfer Protocol, Secure File Transfer Protocol
SIR	Source Impedance Ratio
SmpSynch	Samples Synchronized
SNTP	Simple Network Time Protocol
SRC	Source
SSB	Single Side Band
SSEL	Session Selector
STATS	Statistics
SUPN	Supervision
SUPV	Supervise / Supervision
SV	Supervision, Service, Sampled Value
SYNC	Synchrocheck
SYNCHCHK	Synchrocheck
T	Time, transformer
TC	Thermal Capacity
TCP	Transmission Control Protocol
TCU	Thermal Capacity Used
TD MULT	Time Dial Multiplier
TEMP	Temperature
TFTP	Trivial File Transfer Protocol
TGFD	Transient Ground Fault Detection
THD	Total Harmonic Distortion
TMR	Timer
TOC	Time Overcurrent
TOV	Time Overvoltage
TRANS	Transient
TRANSF	Transfer
TSEL	Transport Selector
TUC	Time Undercurrent
TUV	Time Undervoltage
TX (Tx)	Transmit, Transmitter
U	Under
UC	Undercurrent
UCA	Utility Communications Architecture
UDP	User Datagram Protocol
UL	Underwriters Laboratories
UNBAL	Unbalance

Abbreviation	Meaning
UR	Universal Relay
URC	Universal Recloser Control
.URS	Filename extension for settings files
UV	Undervoltage
V/Hz	Volts per hertz
V_0	Zero Sequence voltage
V_1	Positive Sequence voltage
V_2	Negative Sequence voltage
VA	Phase A voltage
VAB	Phase A to B voltage
VAG	Phase A to Ground voltage
VARH	Var-hour voltage
VB	Phase B voltage
VBA	Phase B to A voltage
VBG	Phase B to Ground voltage
VC	Phase C voltage
VCA	Phase C to A voltage
VCG	Phase C to Ground voltage
VF	Variable Frequency
VIBR	Vibration
VT	Voltage Transformer
VTFF	Voltage Transformer Fuse Failure
VTLOS	Voltage Transformer Loss Of Signal
WDG	Winding
WH	Watt-hour
w/ opt	With Option
WGS	World Geodetic System
WRT	With Respect To
X	Reactance
XDUCER	Transducer
XFMR	Transformer
Z	Impedance, Zone

19.2 REVISION HISTORY

MANUAL PART NUMBER	RELEASE DATE
1601-0320-A1	March 2016
1601-0320-A2	December 2016
1601-0320-A3	July 2017
1601-0320-A4	February 2018
1601-0320-A5	March 2018
1601-0320-A6	July 2018
1601-0320-A7	December 2018
1601-0320-A8	May 2019
1601-0320-A9	January 2020
1601-0320-AA	August 2020
1601-0320-AB	June 2021
1601-0320-AC	December 2022
1601-0320-B300-1	September 2023
1601-0320-C410-1	September 2023
889-1601-0320-C420-1	February 2025
889-1601-0320-C430-1	June 2025
889-1601-0320-C430-2	December 2025
889-1601-0320-C430-3	March 2026

For information on the updates included in this release of the Instruction Manual, please refer to the latest release notes online.



GE VERNOVA

© 2024 General Electric. All rights reserved. Information contained in this document is indicative only. No representation or warranty is given or should be relied on that it is complete or correct or will apply to any particular project. This will depend on the technical and commercial circumstances. It is provided without liability and is subject to change without notice. Reproduction, use or disclosure to third parties, without express written authority, is strictly prohibited.