



GE VERNOVA

8 Series 845

Instruction Manual

Transformer Protection System

Hardware Version: C

Firmware Version: 4.30

Publication Reference: 845-1601-0651-C430-3



Copyright statement

Copyright © 2025 GE Vernova. All rights reserved.

GridBeats, Universal Relay, Multilin, MiCOM, S1 Agile, P40 Agile, DS Agile, EnerVista, CyberSentry, HardFiber, FlexLogic, FlexElement, FlexCurve, FlexAnalog, FlexInteger and FlexState are trademarks or registered trademarks of GE Vernova.

The contents of this manual are the property of GE Vernova. This documentation is furnished on license and may not be reproduced in whole or in part without the permission of GE Vernova. The content of this manual is for informational use only and is subject to change without notice.

Disclaimer

It is the responsibility of the user to verify and validate the suitability of all GE Vernova products. This equipment must be used within its design limits. The proper application including the configuration and setting of this product to suit the power system assets, is the responsibility of the user, who is also required to ensure that all local or regional safety guidelines are adhered to. Incorrect application of this product could risk damage to property, the environment, personal injuries or fatalities and it is the sole responsibility of the person/entity applying and qualifying the product for use.

The content of this document has been developed to provide guidance to properly install, configure and maintain this product for its intended applications. This guidance is not intended to cover every possible contingency that may arise during commissioning, operation, service, or maintenance activities. Should you encounter any circumstances not clearly addressed in this document, please contact your local GE Vernova service site.

It is the sole responsibility of the user to secure their network and associated devices against cybersecurity intrusions or attacks. GE Vernova and its affiliates are not liable for any damages or losses arising from or related to such security intrusion or attacks.

The information contained in this document is subject to change without notice.

Warranty

GE Vernova warrants most of its manufactured products for 10 years.

For warranty details including any limitations and disclaimers, see the Terms and Conditions at <http://www.gevernova.com/gegridsolutions.com/multilin/warranty.htm>

Major changes

For information on the updates included in this release of the manual, please refer to the latest release notes.

Contents

Chapter 1	Introduction	1
1.1	Chapter Overview	2
1.2	Foreword	3
1.2.1	Target Audience	3
1.2.2	Typographical conventions	3
1.2.3	Nomenclature	4
1.3	Product overview	5
1.4	General description of the 8 Series	6
1.5	Functions and features	8
1.6	Security Overview	11
1.7	Order Codes	13
1.8	Cautions, warnings and notes	17
1.8.1	Safety words and definitions	17
1.8.2	General Cautions and Warnings	17
1.9	Must-read Information	20
1.9.1	Storage	20
1.10	For Further Assistance	21
1.10.1	Repairs	21
Chapter 2	Installation	22
2.1	Chapter Overview	24
2.2	Product Identification	25
2.3	Dimensions	26
2.4	Mounting	27
2.4.1	Standard Panel Mount	27
2.5	Draw-out Unit Withdrawal and Insertion	32
2.6	Removable Power Supply	34
2.7	Removable Magnetic Module	35
2.8	Remote Module I/O (RMIO)	38
2.9	IP20 Back Cover	40
2.10	Arc Flash Sensor	41
2.11	Physical considerations of wiring	50
2.11.1	Terminal Strip Types	51
2.11.2	Wire Size	52
2.12	Terminal connections	53
2.12.1	General connections	54
2.13	Terminal Identification	56
2.14	RMIO Module Installation	59
2.15	Phase Sequence and Transformer Polarity	61
2.16	Ground CT inputs	62
2.17	Zero-Sequence CT Installation	63
2.18	Voltage Inputs	64
2.19	RTD sensor connections	65
2.20	Restricted Ground Fault Inputs	68
2.21	Control Power	69
2.22	Contact Inputs	70
2.23	Output Relays	72
2.24	Serial Communications	75
2.25	IRIG-B	76
2.26	Typical Wiring Diagrams	77
Chapter 3	Interfaces	80

3.1	Chapter Overview	81
3.2	First access	82
3.3	Front panel options	83
3.3.1	Graphical Display Pages	84
3.3.1.1	Menu hierarchy	85
3.3.1.2	Working with Graphical Display Pages	86
3.3.1.3	Single Line Diagram	88
3.3.2	Three-pushbutton front panel LEDs	91
3.3.3	Ten-pushbutton front panel LEDs	92
3.3.4	Home screen icons	94
3.3.5	Relay Messages	95
3.3.5.1	Target Messages	95
3.3.5.2	Self-test errors	96
3.3.5.3	Out of Service	100
3.3.5.4	Flash Messages	100
3.3.6	Label Removal	100
3.4	Software Interface	102
3.4.1	EnerVista D&I Setup	102
3.4.1.1	Hardware & Software Requirements	102
3.4.1.2	Installing EnerVista D&I Setup	102
3.4.1.3	Upgrading EnerVista D&I Setup	103
3.4.2	Connecting EnerVista D&I Setup to the relay	103
3.4.2.1	Using the Quick Connect Feature	103
3.4.2.2	Configuring Ethernet Communications	103
3.4.2.3	Connecting to the Relay	104
3.4.2.4	Configuring USB Address	104
3.4.3	Working with Setpoints	106
3.4.3.1	Engaging a Device	106
3.4.3.2	Entering Setpoints	106
3.4.3.3	Using Setpoint Files	108
3.4.3.4	Downloading and saving Setpoint files	109
3.4.3.5	Adding Setpoint files to the environment	109
3.4.3.6	Creating a new Setpoints file	109
3.4.3.7	Upgrading Setpoint files to a new revision	110
3.4.3.8	Printing Setpoints	110
3.4.3.9	Printing values from a connected device	110
3.4.3.10	Loading Setpoints from a File	111
3.4.3.11	Uninstalling files and clearing data	111
3.4.4	Quick Setup	111
3.4.5	Upgrading relay firmware	111
3.4.5.1	Loading new relay firmware	112
3.4.6	SLD Configurator	113
3.4.6.1	Control Objects	114
3.4.6.2	Status Objects	116
3.4.6.3	Metering Objects	116
3.4.6.4	Device Status Object	117
3.4.6.5	Static Objects	117
3.4.6.6	Front Panel Interaction	117
3.4.7	FlexCurve Editor	119
3.4.8	Transient Recorder (Waveform Capture)	120
3.4.9	Protection Summary	123
3.4.10	FlexLogic Favourites	124
3.4.11	Offline Settings File Conversion	124
3.4.11.1	Converting legacy files	124
3.4.11.2	Conversion Summary Report	125
3.4.11.3	Results Window	125
3.4.11.4	Self-test errors	125
3.4.11.5	Self-test errors	130

Chapter 4	Cyber-security	135
4.1	Overview	136
4.2	The Need for Cyber-Security	137
4.3	Standards	138
4.3.1	NERC Compliance	138
4.3.1.1	CIP 002	139
4.3.1.2	CIP 003	139
4.3.1.3	CIP 004	139
4.3.1.4	CIP 005	139
4.3.1.5	CIP 006	140
4.3.1.6	CIP 007	140
4.3.1.7	CIP 008	140
4.3.1.8	CIP 009	140
4.3.2	IEEE 1686-2013	140
4.3.3	IEC 62351	141
4.4	Cybersecurity Implementation	146
4.4.1	RBAC Functionality	146
4.4.2	Basic Security Implementation	147
4.4.2.1	Device/Local Authentication	147
4.4.2.2	Four-level Access	147
4.4.2.3	Bypass Access	148
4.4.2.4	Enhanced Password Security	149
4.4.2.5	Disabling Physical and Logical Ports	149
4.4.2.6	Non-Encrypted/Clear Text Modbus	150
4.4.2.7	Security Events	150
4.4.3	Advanced Cybersecurity Implementation	151
4.4.3.1	Permissions Vs Access Matrix/Permission Assignment	151
4.4.3.2	Server/Remote Authentication	152
4.4.3.3	Server/Remote Authentication (RADIUS)	152
4.4.3.4	Server/Remote Authentication (LEGACY LDAP PULL MODEL)	153
4.4.4	Unique Configurable Usernames	156
4.4.5	Secure Encrypted Communication	156
4.4.5.1	ModBus/SSH	156
4.4.5.2	SFTP	156
4.4.6	Syslog	157
4.4.7	Increased product hardening	158
4.4.7.1	Additional Features	158
4.4.8	Lost Password	159
4.4.9	Loading Factory Configuration	159
4.4.10	Additional Features	159
4.4.10.1	Lost Password	159
4.4.10.2	Loading Factory Configuration	159
4.5	RBAC User Management Cybersecurity Configuration Tool	160
4.5.1	Cybersecurity Modbus Settings Configuration	160
4.5.1.1	Cybersecurity Non-Modbus Settings Configuration	160
4.5.1.2	User Management Configuration	161
4.5.1.3	Roles Configuration	163
4.5.1.4	Security Settings Configuration	166
4.5.1.5	Syslog Configuration	169
Chapter 5	About Setpoints	171
5.1	Chapter Overview	172
5.2	About Setpoints	173
5.3	Protection and Trip Breaker Selection	174
5.3.1	Programming Output Relays for Breaker Tripping and Closing	179
5.4	Setpoints Entry Methods	185

5.5	Common Setpoints	186
5.6	Logic Diagrams	188
Chapter 6	Device Setpoints	189
6.1	Chapter Overview	190
6.2	Device menu hierarchy	191
6.3	Custom Configuration	192
6.4	Real-time Clock	195
6.4.1	PTP Configuration	195
6.4.2	Clock	197
6.4.3	SNTP Protocol	198
6.5	Communications	200
6.5.1	General	200
6.5.2	Modbus Protocol	200
6.5.3	Modbus configurable parameters	201
6.5.4	RS485	203
6.5.5	Wi-Fi	203
6.5.6	Wi-Fi Quick Start Procedure	205
6.5.7	USB	206
6.5.8	Ethernet Ports	207
6.5.8.1	Network Settings Menu	207
6.5.9	Routing	210
6.5.10	DNP Protocol settings	212
6.5.11	DNP and IEC104 point lists	215
6.5.12	IEC60870-5-104	218
6.5.13	IEC60870-5-103	219
6.5.14	IEC 103 Point Lists	220
6.5.14.1	Binary Input Points	220
6.5.14.2	Measurands	220
6.5.14.3	Commands	221
6.5.15	IEC 103 Disturbance Recorder	221
6.5.16	GOOSE Subscribe	222
6.5.16.1	Remote Inputs	222
6.5.16.2	Remote Inputs DPS	222
6.5.16.3	GOOSE Analog	222
6.5.17	Remote Modbus Device	224
6.5.17.1	Remote Modbus Device Editor	224
6.5.18	IEC 61850 MMS	226
6.5.19	TFTP	226
6.5.20	SFTP/SSH	226
6.5.21	SNMP	226
6.5.21.1	SNMP MIB	228
6.5.22	OPC-UA	232
6.5.23	EthernetIP	232
6.5.24	IEC 61850	232
6.5.24.1	IEC61850 Configurator	233
6.6	Transient Recorder	236
6.7	Data Logger	238
6.8	Fault Reports	241
6.9	Event Data	243
6.10	Flex states	244
6.11	Front Panel	245
6.11.1	Programmable LEDs	245
6.11.1.1	LED allocation tables	246
6.11.2	Programmable Pushbuttons	247
6.11.2.1	Ten Pushbutton allocation tables	253

6.11.3	Tab Pushbuttons	253
6.11.4	Annunciator	256
6.11.5	Display Properties	260
6.11.5.1	Support for Cyrillic languages	261
6.11.6	Default Screens	261
6.11.7	Home Screens	262
6.11.8	FlexScreens	263
6.12	Resetting	265
6.13	Installation	266
6.14	Self-Test Monitor	268
6.15	Clear Records	269

Chapter 7 System Setpoints **270**

7.1	Chapter Overview	271
7.2	System menu hierarchy	272
7.3	Current Sensing	273
7.4	Voltage sensing	274
7.5	Power Sensing	276
7.6	Power System	277
7.7	Transformer	278
7.7.1	General setup	278
7.7.2	Phase relationships	281
7.7.3	Magnitude compensation	281
7.7.4	Phase compensation	283
7.7.5	Magnitude, Phase Angle, and Zero Sequence Compensation	290
7.7.6	Differential and Restraint Current Calculations	291
7.7.7	Transformer Types and Phase Shift compensation angles	293
7.7.8	Transformer Status Detection	304
7.7.9	Thermal inputs	307
7.7.10	On-load Tap Changer	308
7.8	Breakers	316
7.9	Switches	319
7.10	FlexCurves	323

Chapter 8 Input and Output Setpoints **326**

8.1	Chapter Overview	327
8.2	Inputs	328
8.2.1	Contact Inputs	328
8.2.2	Virtual Inputs	331
8.2.3	Analog Inputs	332
8.2.4	Remote Inputs	338
8.3	Outputs	339
8.3.1	Output Relays	339
8.3.1.1	Output Relay Availability	342
8.3.1.2	Critical failure relay	342
8.3.1.3	Relay selected for breaker Trip	343
8.3.1.4	Relay selected for breaker close	346
8.3.2	Virtual Outputs	347
8.3.3	Analog Outputs	348

Chapter 9 Protection **351**

9.1	Chapter Overview	352
9.2	Protection	353
9.3	Transformer elements overview	354

9.3.1	PercentDifferential	354
9.3.1.1	Percent Differential example	362
9.3.2	Transformer Inter-Turn Fault Detection	366
9.3.3	Transformer Overload	371
9.4	Current elements overview	373
9.4.1	Inverse Time Overcurrent Curves	373
9.4.2	Percent of load-to-trip	386
9.4.3	Phase Time Overcurrent Protection (51P)	386
9.4.4	Phase Instantaneous Overcurrent Protection (50P)	391
9.4.5	Phase Directional Overcurrent Protection (67P)	393
9.4.6	Neutral Time Overcurrent Protection (51N)	397
9.4.7	Neutral Instantaneous Overcurrent Protection (50N)	401
9.4.8	Neutral Directional Overcurrent Protection (67N)	403
9.4.9	Ground Time Overcurrent Protection (51G)	408
9.4.10	Ground Instantaneous Overcurrent Protection (50G)	412
9.4.11	Ground Directional Overcurrent Protection (67G)	414
9.4.12	Restricted Ground Fault (87G)	415
9.4.13	Negative Sequence Time Overcurrent Protection (51_2)	420
9.4.14	Negative Sequence Instantaneous Overcurrent Protection (50_2)	424
9.5	Voltage elements overview	427
9.5.1	Undervoltage Curves	427
9.5.2	Phase Undervoltage Protection (27P)	428
9.5.3	Auxiliary Undervoltage (27X)	432
9.5.4	Phase Overvoltage Protection (59P)	434
9.5.5	Auxiliary Overvoltage Protection (59X)	439
9.5.6	Neutral Overvoltage Protection (59N)	441
9.5.7	Negative Sequence Overvoltage Protection (59_2)	445
9.5.8	Volts per Hertz (24)	448
9.6	Power elements	454
9.6.1	Directional Power (32)	454
9.7	Frequency elements	459
9.7.1	Frequency Protection Common Setup	459
9.7.2	Underfrequency (81U)	459
9.7.3	Overfrequency (81O)	462
9.7.4	Frequency Rate of Change (81R)	465
Chapter 10	Monitoring	470
10.1	Chapter Overview	471
10.2	Monitoring Overview	472
10.3	Transformer monitoring	473
10.3.1	Harmonic Derating	473
10.3.2	Thermal Elements	475
10.3.3	Hottest spot	477
10.3.4	Aging Factor	479
10.3.5	Loss of transformer life	480
10.3.6	Tap Changer Failure	481
10.4	Breaker monitoring	484
10.4.1	Trip and Close Circuit Monitoring	484
10.4.2	Breaker Arcing Current	489
10.4.3	Breaker Health	492
10.5	Functions	497
10.5.1	Power Factor (55)	497
10.5.2	Demand	502
10.5.2.1	Current Demand	503
10.5.2.2	Real Power Demand	505

10.5.2.3	Reactive Power	507
10.5.2.4	Apparent Power Demand	509
10.5.3	Pulsed Outputs	511
10.5.4	Digital Counters	514
10.6	Harmonic Detection	518
10.7	RTD Temperature	521
10.8	RTD Trouble	526
10.9	Loss of Communications	527

Chapter 11 Control 529

11.1	Chapter Overview	530
11.2	Control Overview	531
11.3	Setpoint Group	532
11.4	Local Control Mode	534
11.5	Breaker Control	544
11.5.1	Control Authority	548
11.6	Switch Control (89)	549
11.7	Virtual Input Control	553
11.8	Trip Bus	554
11.9	Breaker Failure (50BF)	557
11.9.1	Breaker Failure Setup	558
11.9.2	Initiate	561
11.10	Arc Flash Protection	563
11.11	Synchrocheck (25)	566
11.12	VT Fuse Failure (VTFF)	571
11.12.1	VT Fuse Failure settings	571
11.13	Digital Elements	574

Chapter 12 Flexlogic 577

12.1	Chapter Overview	578
12.2	FlexLogic	579
12.2.1	Timers	582
12.2.2	Non-volatile Latches	582
12.2.3	FlexLogic Equation	583
12.2.4	Viewing FlexLogic Graphics	585
12.2.5	FlexElements	586
12.2.5.1	FlexElement settings	587
12.2.5.2	FlexElements - Examples	589

Chapter 13 Testing 593

13.1	Chapter Overview	594
13.2	Testing display hierarchy	595
13.3	Simulation	596
13.3.1	Simulation Setup	596
13.3.2	Simulation Pre-Fault	597
13.3.3	Simulation Fault	598
13.3.4	Simulation Post-Fault	598
13.4	General	600
13.5	Test LEDs	602
13.6	Contact Inputs	603
13.7	Output Relays	604
13.8	GOOSE	605

Chapter 14	Status	606
14.1	Chapter Overview	607
14.2	Summary	608
14.3	Breaker status	611
14.4	Information	612
14.5	Communications status	615
14.5.1	GOOSE	615
14.5.2	Communications Status settings	615
14.6	Other status settings	619
Chapter 15	Metering	624
15.1	Chapter Overview	625
15.2	Metering Overview	626
15.3	Metering Summary	629
15.4	Transformer metering	630
15.4.1	Windings	631
15.4.2	Thermal Elements	632
15.4.3	Tap Changer	632
15.5	Currents	633
15.6	Neutral IOC	635
15.7	Voltages	636
15.8	Frequency	639
15.8.1	High-speed frequency	640
15.8.2	Volts Per Hertz	640
15.9	Harmonics	641
15.9.1	Harmonic Magnitude	641
15.9.2	Harmonic Detection	642
15.10	Synchrocheck	644
15.11	Percent Differential Current	645
15.12	Inter-Turn Fault Detection	646
15.13	Power functions	648
15.13.1	Power	648
15.13.2	Power Factor	650
15.13.3	Directional Power	651
15.14	Energy	652
15.14.1	Energy (X)	652
15.14.2	Energy Log	652
15.15	Demand	655
15.15.1	Current Demand	655
15.15.1.1	Current Demand 1(X)	655
15.15.1.2	Current Demand K1	655
15.15.1.3	Current Demand K2	656
15.16	Voltage Transformer Fuse Failure	657
15.17	Arc Flash	658
15.18	Resistance Temperature Detectors	659
15.19	Resistance Temperature Detectors	660
15.20	Resistance Temperature Detectors	661
15.21	Resistance Temperature Detectors	662
15.22	Analog Inputs	663
15.23	FlexElements	664
Chapter 16	Records	665
16.1	Chapter Overview	666
16.2	Events	667

16.2.1	Event Viewer	667
16.3	Transient Records	671
16.4	Fault Reports	672
16.5	Data Logger	674
16.6	Breakers	675
16.6.1	Breaker Arcing Current	675
16.6.2	Breaker Health	675
16.7	Digital Counters	677
16.8	Remote Modbus Device	678
16.9	Clear Records	681

Chapter 17 Transformer monitoring and diagnostics **682**

17.1	Chapter Overview	683
17.2	Overview	684
17.3	DGA Monitoring	685
17.4	Device Data	687
17.5	Dissolved Gas Analysis	688
17.6	Learned Data Records	689
17.7	Energization Records	690
17.8	Digital Fault Records	691
17.9	Models	692
17.9.1	Transformer Models	692
17.9.2	DGA Models	692
17.10	Historical Maximum Record	694
17.11	Transformer Health Report	695
17.12	DGA Historical Trend	696

Chapter 18 Maintenance **697**

18.1	Chapter Overview	698
18.2	Environmental Health Report	699
18.3	General maintenance	701
18.3.1	In-service Maintenance	701
18.3.2	Out-of-service Maintenance	702
18.3.3	Unscheduled Maintenance (System Interruption)	702

Chapter 19 Specifications **703**

19.1	Device	704
19.1.1	Annunciator panel	704
19.1.2	Custom configurations	704
19.2	Protection elements	705
19.2.1	Transformer Percent Differential Protection	705
19.2.2	Transformer Inter-Turn Fault Detection	705
19.2.3	Transformer Overload	705
19.2.4	Instantaneous phase differential function	706
19.2.5	Restricted ground fault (87G)	706
19.2.6	Phase directional overcurrent (67P)	706
19.2.7	Neutral directional overcurrent (67N)	706
19.2.8	Ground directional overcurrent (67G)	707
19.2.9	Phase Instantaneous Overcurrent (50P)	707
19.2.10	Neutral Instantaneous Overcurrent (50N)	707
19.2.11	Ground Instantaneous Overcurrent (50G)	708
19.2.12	Phase time overcurrent (51P/V)	708
19.2.13	Neutral/ground time overcurrent (51N/G)	709
19.2.14	Negative sequence instantaneous overcurrent	709

19.2.15	Negative Sequence Time Overcurrent	710
19.2.16	Phase overvoltage (59P)	710
19.2.17	Neutral overvoltage (59N)	711
19.2.18	Auxiliary overvoltage (59X)	711
19.2.19	Negative sequence overvoltage (59_2)	711
19.2.20	Phase undervoltage (27P)	712
19.2.21	Auxiliary undervoltage (27X)	712
19.2.22	Voltage Interruption	712
19.2.23	Volts per Herz (24)	713
19.2.24	Overfrequency (81O)	713
19.2.25	Underfrequency (81U)	713
19.2.26	Rate of change of frequency (81R)	714
19.2.27	Directional power	714
19.2.28	RTD protection	715
19.2.29	Arc flash HS phase/ground instantaneous overcurrent (50P/50G)	715
19.3	Control	716
19.3.1	Synchrocheck	716
19.3.2	Breaker control	716
19.3.3	Local control mode	716
19.3.4	Switch control	716
19.3.5	Trip bus	716
19.3.6	Digital Elements	717
19.4	Monitoring	718
19.4.1	Winding hottest spot	718
19.4.2	Aging acceleration factor	718
19.4.3	Transformer loss of life	718
19.4.4	Harmonic derating	718
19.4.5	Tap changer failure	718
19.4.6	Power factor (55)	718
19.4.7	Breaker arcing current	719
19.4.8	Breaker failure	719
19.4.9	Breaker health	719
19.4.10	Trip circuit monitoring	719
19.4.11	Close circuit monitoring	719
19.4.12	Demand	720
19.4.13	Harmonic detection	720
19.5	Recording	721
19.5.1	Transient recorder	721
19.5.2	Event data	721
19.5.3	Data logger	721
19.5.4	Event recorder	721
19.5.5	Last trip data	722
19.5.6	Fault reports	722
19.6	User-programmable elements	723
19.6.1	FlexLogic	723
19.6.2	FlexElements	723
19.6.3	FlexStates	723
19.6.4	Non-volatile latches	723
19.6.5	FlexCurves	724
19.6.6	Tab pushbuttons	724
19.6.7	User-programmable LEDs	724
19.6.8	User-programmable pushbuttons	724
19.7	Metering	725
19.7.1	RMS parameters	725
19.7.2	Phasors	726
19.7.3	Frequency	726

19.7.4	Current and voltage harmonics	726
19.8	Inputs	727
19.8.1	Tap changer input	727
19.8.2	AC currents	727
19.8.3	AC voltages	727
19.8.4	Analog inputs	727
19.8.5	Frequency	727
19.8.6	Arc flash sensor/fiber	728
19.8.7	Contact Inputs	728
19.8.8	IRIG-B input	728
19.8.9	RTD inputs	729
19.8.10	Ohms input	729
19.8.11	Tap changer input	729
19.9	Outputs	730
19.9.1	Analog outputs	730
19.9.2	Form C output relays	730
19.9.3	Form A voltage monitor	731
19.9.4	Solid state relays	731
19.9.5	Pulsed outputs	731
19.9.6	Coil actuator outputs	731
19.10	Power supply	733
19.10.1	Voltage supplies	733
19.10.2	Power consumption	733
19.10.3	Voltage loss ride-through	733
19.11	Communications	734
19.11.1	Ethernet	734
19.11.2	USB	734
19.11.3	Serial	734
19.11.4	WiFi	735
19.11.5	Remote Modbus	735
19.11.6	Controller Area Network	735
19.12	Certifications and approvals	736
19.12.1	Approvals	736
19.12.2	Testing and Certification	736
19.13	Environmental	738
19.14	Long-term storage	739
Chapter 20	Appendices	740
20.1	Abbreviations	741
20.2	Revision History	750

CHAPTER 1

INTRODUCTION

1.1 **CHAPTER OVERVIEW**

This chapter provides some general information about the technical manual and an introduction to the device(s) described in this technical manual.

This chapter contains the following sections:

Chapter Overview	2
Foreword	3
Product overview	5
General description of the 8 Series	6
Functions and features	8
Security Overview	11
Order Codes	13
Cautions, warnings and notes	17
Must-read Information	20
For Further Assistance	21

1.2 FOREWORD

This technical manual provides a functional and technical description of the relay, as well as a comprehensive set of instructions for using it. The level at which this manual is written assumes that you are already familiar with protection engineering and have experience in this discipline. The description of principles and theory is limited to that which is necessary to understand the product. For further details on general protection engineering theory, we refer you to the publication, Protection and Automation Application Guide, which is available online.

We have attempted to make this manual as accurate, comprehensive and user-friendly as possible. However we cannot guarantee that it is free from errors. Nor can we state that it cannot be improved. We would therefore be very pleased to hear from you if you discover any errors, or have any suggestions for improvement. Our policy is to provide the information necessary to help you safely specify, engineer, install, commission, maintain, and eventually dispose of this product. We consider that this manual provides the necessary information, but if you believe that more details are needed, please contact us.

1.2.1 TARGET AUDIENCE

This manual is aimed towards all professionals charged with installing, commissioning, maintaining, troubleshooting, or operating any of the products within the specified product range. This includes installation and commissioning personnel as well as engineers who will be responsible for operating the product.

The level at which this manual is written assumes that installation and commissioning engineers have knowledge of handling electronic equipment. Also, system and protection engineers have a thorough knowledge of protection systems and associated equipment.

1.2.2 TYPOGRAPHICAL CONVENTIONS

The following typographical conventions are used throughout this manual.

- Description of software menu items, buttons, labels or hardware keys and buttons written in bold type and colored in Vernova dark green.
For example: Select **Save** from the file menu
- The names for special keys, appear in in upper case bold type and colored in Vernova dark green.
For example: **ENTER**
- Filenames, paths, code, and text that appears on a command line interface use the courier font
For example: `Example\File.text`
- Special terminology is written with leading capitals
For example: Line Differential Relay
- If reference is made to the relay's internal settings database on the relay's LCD screen, the menu items are written in bold italics
For example: ***SECURITY*** (on the relay's LCD screen), or ***Security*** (in the EnerVista D&I Setup software)
- Menu paths are shown with > separators. This applies to both software menu paths and relay menu paths
For example: ***SETTINGS > SYSTEM SETUP > AC INPUTS*** (for relay path), or **File > Save** (for software path)
- Setting values are written with the courier font and are italicized
For example: `Enabled`
- The products, use Flexlogic operands. Flexlogic operands are written in dark Vernova green uppercase courier font
For example: `PUSHBUTTON 1 ON`
- Sometimes it is beneficial to emphasize some words. Depending on the case in question, this may be done with bold, italic or upper case font attributes.
- Notes are written in italic in, and are surrounded by a border.
For example:

Note:
This is a note

1.2.3 NOMENCLATURE

Due to the technical nature of this manual, many special terms, abbreviations and acronyms are used throughout the manual. Some of these terms are well-known industry-specific terms while others may be special product-specific terms used by GE Vernova. The first instance of any acronym or term used in a particular chapter is explained.

We would like to highlight the following changes of nomenclature however:

- The word *relay* and *IED* (Intelligent Electronic Device) are both used to describe the protection device. The term *IED* is associated with the IEC61850 standard, whereas the term *relay* is the long-used traditional term. It may also be referred to simply as the *device* or the *product*.
- American English and spelling is used throughout this manual.
- The term 'Earth' and American term 'Ground' are equivalent. You may find either used in the manual.
- When depicting a generic instance of a number of items, this manual uses <n> where n can be any integer.

1.3 PRODUCT OVERVIEW

The Multilin 845 is a microprocessor-based device intended for the management and primary protection of the medium to large size medium voltage (MV) and high voltage (HV) power transformers. Both 2-winding and 3-winding transformers are supported. The relay also provides a number of primary and backup current and voltage based protection functions.

This relay supports the control of the circuit breakers at each winding plus a range of monitoring and control functions.

Each relay provides protection, control, and monitoring functions with both local and remote human interfaces. They also display the present trip/alarm conditions, and many of the measured system parameters. It also provides a rich recording facility for items such as last trip, alarm or control events, maximum demand levels, and energy consumption.

1.4 GENERAL DESCRIPTION OF THE 8 SERIES

Each relay provides protection, control, and monitoring functions with both local and remote human interfaces. They also display the present trip/alarm conditions, and most of the more than 35 measured system parameters. Recording of past trip, alarm or control events, maximum demand levels, and energy consumption is also performed.

To meet diverse utility standards and industry requirements, you can program these relays to meet specific requirements. This flexibility will naturally make a piece of equipment difficult to learn. To aid new users in getting basic protection operating quickly, setpoints are set to typical default values and advanced features are disabled. You can reprogram these settings any time.

It is possible for you to program these relays using the front panel keys and display. However, due to the numerous settings, this manual method can be laborious. To simplify programming and provide a more intuitive interface, you can enter setpoints with a PC running the EnerVista D&I Setup. Even with minimal computer knowledge, this menu-driven software provides easy access to all front panel functions. Actual values and setpoints can be displayed, altered, stored, and printed. If settings are stored in a setpoint file, they can be downloaded at any time to the front panel program port of the relay via a computer cable connected to the USB port of any personal computer.

Analog Input and Waveform Capture

Magnetic transformers are used to scale-down the incoming analog signals from the source instrument transformers. The analog signals are then passed through a 11.5 kHz low pass analog anti-aliasing filter. All signals are then simultaneously captured by sample and hold buffers to ensure there are no phase shifts. The signals are converted to digital values by a 16-bit A/D converter before finally being passed on to the CPU for analysis.

The raw samples are scaled in software, then placed into the waveform capture buffer, thus emulating a fault recorder. The waveforms can be retrieved from the relay via the software for display and diagnostics.

Frequency

Frequency measurement is accomplished by measuring the time between zero crossings of the composite signal of three-phase bus voltages, line voltage or three-phase currents. The signals are passed through a low pass filter to prevent false zero crossings. Frequency tracking utilizes the measured frequency to set the sampling rate for current and voltage which results in better accuracy for the Discrete Fourier Transform (DFT) algorithm for off-nominal frequencies.

The main frequency tracking source uses three-phase bus voltages. The frequency tracking is switched automatically by an algorithm to the alternative reference source, i.e., three-phase currents signal or line voltage for the configuration of tie-breaker, if the frequency detected from the three-phase voltage inputs is declared invalid. The switching will not be performed if the frequency from the alternative reference signal is detected invalid. Upon detecting valid frequency on the main source, the tracking will be switched back to the main source. If a stable frequency signal is not available from all sources, then the tracking frequency defaults to the nominal system frequency.

Phasors, Transients, and Harmonics

All waveforms are processed eight times every cycle with a DC decaying removal filter and a DFT. The resulting phasors have fault current transients and all harmonics removed. This results in an overcurrent relay that is extremely secure and reliable and one that will not overreach.

Processing of AC Current Inputs

The DC Decaying Removal Filter is a short window digital filter, which removes the DC decaying component from the asymmetrical current present at the moment a fault occurs. This is done for all current signals used for overcurrent protection; voltage signals use the same DC Decaying Removal Filter. This filter ensures no overreach of the overcurrent protection.

The DFT uses exactly one cycle of samples to calculate a phasor quantity which represents the signal at the fundamental frequency; all harmonic components are removed. All subsequent calculations (e.g. power, etc.) are

based upon the current and voltage phasors, such that the resulting values have no harmonic components. RMS (root mean square) values are calculated from one cycle of samples prior to filtering.

Protection Elements

All voltage, current and frequency protection elements are processed eight times every cycle to determine if a pickup has occurred or a timer has expired. The voltage and current protection elements use RMS current/voltage, or the magnitude of the phasor.




Figure 1: Single Line Diagram

ANSI Device Numbers and Functions

ANSI Device	Description	ANSI Device	Description
24	Volts per Hertz	51_2	Negative Sequence Time Overcurrent
25	Synchrocheck	55	Power Factor
27P	Phase Undervoltage	59N	Neutral Overvoltage
27X	Auxiliary Undervoltage	59P	Phase Overvoltage
32	Directional Power	59X	Auxiliary Overvoltage
49	Hottest Spot Temperature	59_2	Negative Sequence Overvoltage
	Aging Factor	67G	Ground Directional Element
	Loss of Life	67N	Neutral Directional Element
50/87	Instantaneous Differential Overcurrent	67P	Phase Directional Element
50BF	Breaker Failure	81O	Overfrequency
50G	Ground Instantaneous Overcurrent	81U	Underfrequency
50N	Neutral Instantaneous Overcurrent	81R	Frequency Rate of Change
50P	Phase Instantaneous Overcurrent	87G	Restricted Ground Fault (RGF)
50_2	Negative Sequence Instantaneous Overcurrent	87T	Transformer Differential
51G	Ground Time Overcurrent	AFP	Arc Flash Protection
51N	Neutral Time Overcurrent	VTFF	Voltage Transformer Fuse Failure
51P	Phase Time Overcurrent	n/a	PseudoVoltage

Other Device Functions

Description	Description
Analog Input	Non-volatile Latches
Analog Output	OPC-UA Communications
Breaker Arcing Current (I _{2t})	Output Relays
Breaker Control	Setpoint Groups (6)
Breaker Health	Transformer Dissolved Gas Analysis
Data Logger	Transformer Energization Reports
Demand	Transformer Integrated Fault Report
Digital Counters	Transformer Overload
Event Recorder	Transformer Loss of Life
Fault Report	Trip Bus (6)
FlexElements	Transient Recorder (Oscillography)
FlexLogic Equations	Trip and Close Coil Monitoring
Flex States	User-programmable LEDs
IEC 61850 Communications	User-programmable Pushbuttons
Metering: current, voltage, power, PF, energy, frequency, harmonics, THD	Virtual Inputs (32)
Modbus User Map	Virtual Outputs (32)

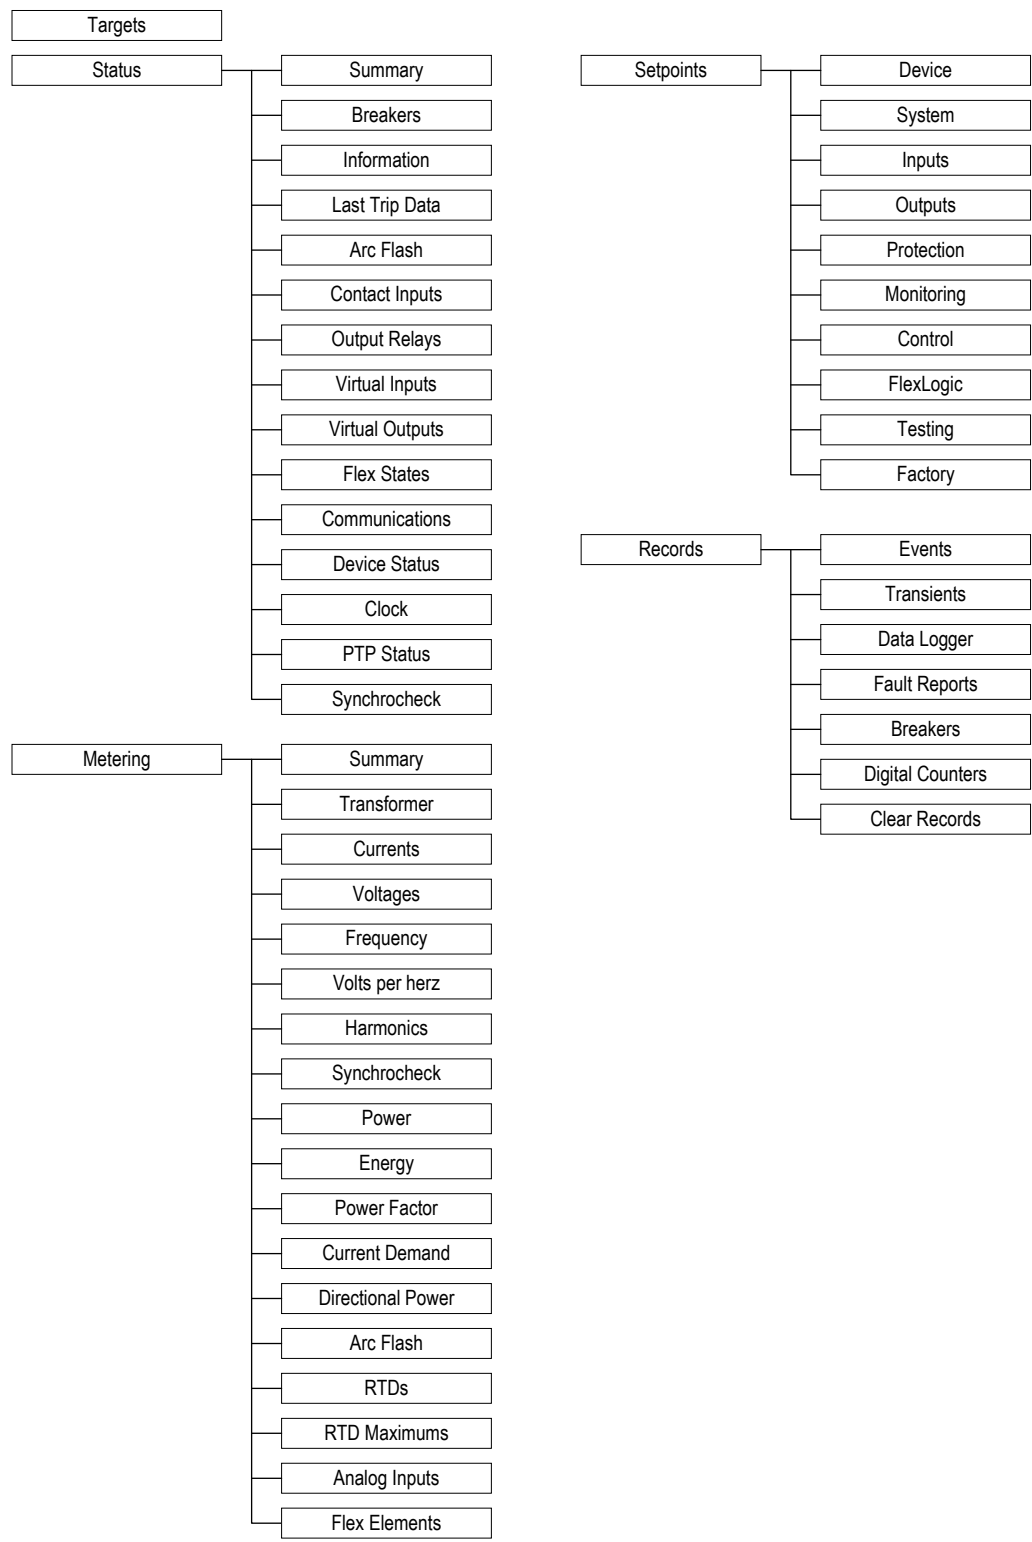

894500B1

Figure 2: Main Menu Hierarchy

1.6 SECURITY OVERVIEW

The following security features are available:

BASIC SECURITY

The basic security feature is present in the default offering of the relay. The relay introduces the notion of roles for different levels of authority. Roles are used as login names with associated passwords stored on the device. The following roles are available at present: Administrator, Engineer, Operator, Factory and Viewer, with a fixed permission structure for each one. Note that the Factory role is not available for users, but strictly used in the manufacturing process.

The relay can still use the **SETPOINT ACCESS** switch feature, but enabling the feature can be done only by an Administrator. Setpoint access is controlled by a keyed switch to offer some minimal notion of security.

CYBERSENTRY

The CyberSentry Embedded Security feature is a software option that provides advanced security services. When the software option is purchased, the Basic Security is automatically disabled.

CyberSentry provides security through the following features:

- An Authentication, Authorization, Accounting (AAA) Remote Authentication Dial-In User Service (RADIUS) client that is centrally managed, enables user attribution, and uses secure standards based strong cryptography for authentication and credential protection.
- A Role-Based Access Control (RBAC) system that provides a permission model that allows access to device operations and configurations based on specific roles and individual user accounts configured on the AAA server. At present the defined roles are: Administrator, Engineer, Operator and Viewer.
- Strong encryption of all access and configuration network messages between the EnerVista software and devices using the Secure Shell (SSH) protocol, the Advanced Encryption Standard (AES), and 128-bit keys in Galois Counter Mode (GCM) as specified in the U.S. National Security Agency Suite B extension for SSH and approved by the National Institute of Standards and Technology (NIST) FIPS-140-2 standards for cryptographic systems.
- Security event reporting through the Syslog protocol for supporting Security Information Event Management (SIEM) systems for centralized cyber security monitoring.

There are two types of authentication supported by CyberSentry that can be used to access the device:

- Device Authentication – in which case the authentication is performed on the device itself, using the predefined roles as users (No RADIUS involvement).
 - Device authentication using local roles may be done either from the front panel or through EnerVista.
- Server Authentication - in which case the authentication is done on a RADIUS server, using individual user accounts defined on the server. When the user accounts are created, they are assigned to one of the predefined roles recognized by the relay.
 - Device authentication using RADIUS server may be done only through EnerVista.

Note:

EnerVista Viewpoint Monitor does not currently support CyberSentry security.

With the CyberSentry security option, many communication settings cannot be changed remotely. All communication settings can still be changed through the relay front panel.

When both device and server authentication are enabled, the relay automatically directs authentication requests to the device or the respective RADIUS server, based on user names. If the user ID credential does not match one of the device local accounts, the relay automatically forwards the request to a RADIUS server when one is provided. If a RADIUS server is provided, but is unreachable over the network, server authentication requests are denied. In this situation, use local device accounts to gain access to the system.

USER ROLES

User Access Levels are used to grant varying permissions to specific user roles. User roles are used by both Basic Security and CyberSentry.

The following user roles are supported:

- **Administrator:** The Administrator role has complete read and write access to all settings and commands. The role does not allow concurrent access. The Administrator role also has an operand to indicate when it is logged on.
- **Engineer:** This role has similar rights to the Administrator role, except that some commands, the security settings modification and firmware upload are not allowed.
- **Operator:** The Operator role is present to facilitate operational actions that may be programmed and assigned to buttons on the front panel. The Operator has read/write access to all settings under the command menu/section. The Operator can also use the Virtual Input command under the control menu/section. The Operator can view settings from EnerVista or the front panel but does not have the ability to change any settings. This role is not a concurrent role.
- **Viewer:** The Viewer role has read-only access to all 8 Series settings. This role allows concurrent access. The Viewer is the default role if no authentication has been done to the device. This role can download settings files and records from the device.
- **Factory:** This is an internal non-user accessible role used for manufacturing diagnostics. The ability to enable or disable this role is a security setting that the Administrator controls.

GENERAL RULES FOR USER ROLES WITH CYBERSENTRY

1. The only concurrent role is Observer. If the user is logged in through serial, front panel, or over the network, that counts as the role being logged in for concurrency reasons.
2. Both EnerVista and the front panel provide a one-step logoff. For the front panel, the root menu has a logoff command. From EnerVista right-clicking on a device and providing a logoff function from the context menu is sufficient.
3. The EnerVista Login Screen has **User Name:** and **Password:** fields for the default remote (Radius) authentication, but when a **Local Authentication** checkbox is selected the **User Name:** field changes to a drop down menu where the user can select one of the predefined roles.

1.7 ORDER CODES

Support of some of the features are order code dependent. Each relay is ordered with a number of required and optional modules. Each of these modules can be supplied in a number of configurations specified at the time of ordering. The information to specify a relay model is provided in the following Order Code table:

ORDER CODE FOR 845 TRANSFORMER PROTECTION SYSTEM																						
Pos.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	
845	E	P5	R5	G5	H	N	N	A	N	N	G	A	P	F	M	2	E	S	W	A	N	Example 845
																						APPLICATION
	E																					Standard
																						PHASE CURRENTS - SLOT J
		NN																				Two windings, no voltage
		P1																				1A three-phase current inputs (J1), voltage inputs (J2)
		P5																				5A three-phase current inputs (J1), voltage inputs (J2)
																						PHASE CURRENTS - SLOT K
			M1																			1A three-phase current inputs (K1), 1A three-phase current inputs (K2)
			M5																			5A three-phase current inputs (K1), 5A three-phase current inputs (K2)
			MX																			5A three-phase current inputs (K1), 1A three-phase current inputs (K2)
			H1																			1A three-phase current inputs (K1) - two windings with voltage
			H5																			5A three-phase current inputs (K1) - two windings with voltage
			R1																			1A three-phase current inputs (K1), 1A three-phase current inputs (K2) - three windings with voltage
			R5																			5A three-phase current inputs (K1), 5A three-phase current inputs (K2) - three windings with voltage
																						GROUND CURRENTS
				G1																		1A ground input (1 per phase current bank)
				G5																		5A ground input (1 per phase current bank)
				Q1																		5A ground input (J1), 1A ground input (K1)
				Q2																		5A (J1) + 1A (K1) + 1A (K2)
				Q3																		1A (J1) + 5A (K1) + 5A (K2)
																						POWER SUPPLY
					H																	125 to 250 V DC/100 to 240 V AC
					R																	125 to 250 V DC/100 to 240 V AC - Extended Ride-through
					L																	24 to 48 VDC
																						SLOT B
						N																None
						S																6 X RTDs (Pt100, Ni100, Ni120, Cu10)
						C																15 Digital Inputs (24 V DC, Ext Supply)
																						SLOT C
							N															None

14

ORDER CODE FOR 845 TRANSFORMER PROTECTION SYSTEM																					
Pos.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
													P								
Advanced: Standard, 24, 25, 32, 55, 59_2, 81R																					
CONTROL																					
													B								
Basic: Setpoint Group Control, Virtual Inputs, Trip Bus, Breaker Control, Digital Elements																					
													F								
Standard: Setpoint Group Control, Virtual Inputs, Trip Bus, Breaker Control, Digital Elements, FlexLogic, 50BF, VTFF																					
													T								
Advanced HMI: Standard, Tab Pushbuttons, Annunciator Panel, Configurable SLDs with Bay Control																					
MONITORING																					
													B								
Basic: Breaker Coil Monitoring, Breaker Arcing, Harmonics, THD, Demand, Trip Counters, Harmonic Derating Factor																					
													C								
Standard: Basic, Breaker Health, Health Report, Thermal Elements, Tap Changer, Learned Data, Energization and Historical Max Record																					
													A								
Advanced: Standard, Harmonic Detection																					
													M								
M&D: Standard, Dissolved Gas Analysis, Integrated Fault Report																					
COMMUNICATIONS																					
													S	E							
Standard: Front USB, 1x Rear RS485 (Modbus RTU/TCP, DNP 3.0, IEC 60870-5-103), 1x Ethernet RJ45 port (Modbus TCP, DNP).																					
													1	E							
Advanced: Standard + IEC 60870-5-104, 1588, SNTP, OPC-UA,SNMP																					
													1	P							
Advanced + PRP + HSR +RSTP																					
													3	A							
Advanced + IEC 61850																					
													3	F							
Advanced + PRP + HSR + RSTP+ IEC 61850																					
													3	E							
Advanced + PRP+HSR+RSTP+IEC61850+EthernetIP																					
													4	E							
Advanced + 1x additional RS485 Port + HSR + PRP +RSTP + IEC 61850																					
													4	F							
Advanced + 1x additional RS485 Port + HSR + PRP +RSTP + IEC 61850 + EthernetIP																					
ADVANCED COMMUNICATIONS CONNECTOR																					
																	N				
None, no additional communication ports. RJ45 Port 1 Enabled, RJ45 Port 2 disabled																					
																	S				
ST, Multi-mode 1310nm - With 1E to 3E, 3F,the user gets 2x Fiber ST Ports. RJ45 ports 1 and 2 are disabled. With 4E,4F user gets 2x Fiber ST ports and 2xRJ45 Ports																					
																	C				
RJ45, Copper 10/100M - With 1E to 3E, 3F, the user gets 2x RJ45 ports. RJ45 ports 1 and 2 are disabled. With 4E, 4F, user gets 4x RJ45 Ports																					
																	T				
1x additional RS485 Port and 1x additional RJ45 Copper 10/100M port																					
WIRELESS COMMUNICATION																					
																		N			
None																					
																		W			
WiFi 802.11																					
SECURITY																					
																				B	
Basic																					

ORDER CODE FOR 845 TRANSFORMER PROTECTION SYSTEM																						
Pos.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	
																				A		Advanced: CyberSentry Level 1
																						FW OPTION
																				N		FW version 3.xx or earlier
																					4	FW version 4.xx

- Harsh Environment Coating is a standard feature on all relays.
- Advanced security is only available with advanced communications (1E, 1P, 3A, 3E, 3F, 4E, 4F).
- Retrofit order codes must be configured using the GE VERNOVA Online Store (OLS) based on the existing relay order code and additional requirements. Refer to the GE VERNOVA website and search for the **Buy Retrofit Kit** for further information.

Remote Module I/O (RMIO)

The Remote RTD module provides additional protection.

RMIO ¹ - * G G * *					
Power Supply	L				24 - 48 V DC
	H				110 - 250 V DC / 110 - 230 V AC
I/O Module 1	G				Remote Module I/O (3 - 100 Ohm Platinum RTDs)
I/O Module 2	G				Remote Module I/O (3 - 100 Ohm Platinum RTDs)
I/O Module 3 ²	G				Remote Module I/O (3 - 100 Ohm Platinum RTDs)
	X				None
I/O Module 4	G				Remote Module I/O (3 - 100 Ohm Platinum RTDs)
	X				None

1. RMIO requires firmware version 2.00 and later and hardware version B. Check the hardware version under **Status > Information > Main CPU**. If RMIO support is required for relays with earlier hardware versions, contact the factory.

2. RMIO comes standard with 6 RTDs (Modules 1 and 2).

892800RMIO-A1.fm

Other Accessories

- 18J0-0030 8 Series Depth Reducing Collar - 1 3/8"
- 18J0-0029 8 Series Depth Reducing Collar - 3"
- 8 Series Retrofit Kit, 750/760 to 850
- 8 Series Retrofit Kit, 735 to 850

1.8 CAUTIONS, WARNINGS AND NOTES

Before attempting to install or use the device, review all safety indicators in this document to help prevent injury, equipment damage, or downtime.

1.8.1 SAFETY WORDS AND DEFINITIONS

The following symbols and formatting are used in this document indicate certain types of information:



Caution:
Refer to equipment documentation. Failure to do so could result in damage to the equipment



Warning:
Risk of electric shock



Warning:
Risk of damage to eyesight

Note:
Indicates practices not related to personal injury.

1.8.2 GENERAL CAUTIONS AND WARNINGS

The following general safety precautions and warnings apply.



Caution:
Before attempting to use the equipment, it is important that all danger and caution indicators are reviewed.
If the equipment is used in a manner not specified by the manufacturer or functions abnormally, proceed with caution. Otherwise, the protection provided by the equipment may be impaired and can result in impaired operation and injury.



Warning:
Hazardous voltages can cause shock, burns or death.



Caution:
Installation/service personnel must be familiar with general device test practices, electrical awareness and safety precautions must be followed.
Before performing visual inspections, tests, or periodic maintenance on this device or associated circuits, isolate or disconnect all hazardous live circuits and sources of electric power.



Warning:

Failure to shut equipment off prior to removing the power connections could expose you to dangerous voltages causing injury or death.

Ensure that all connections to the product are correct so as to avoid accidental risk of shock and/or fire, for example from high voltage connected to low voltage terminals.



Caution:

Follow the requirements of this manual, including adequate wiring size and type, terminal torque settings, voltage, current magnitudes applied, and adequate isolation/clearance in external wiring from high to low voltage circuits.

Use the device only for its intended purpose and application.

Ensure that all ground paths are un-compromised for safety purposes during device operation and service.

All recommended equipment that should be grounded and must have a reliable and un-compromised grounding path for safety purposes, protection against electromagnetic interference and proper device operation.

Equipment grounds should be bonded together and connected to the facility's main ground system for primary power.

Keep all ground leads as short as possible.

In addition to the safety precautions mentioned all electrical connections made must respect the applicable local jurisdiction electrical code.

It is recommended that a field external switch, circuit breaker be connected near the equipment as a means of power disconnect. The external switch or circuit breaker is selected in accordance with the power rating.

This product itself is not Personal Protective Equipment (PPE). However, it can be used in the computation of site specific Arc Flash analysis when the arc flash option is ordered. If a new appropriate Hazard Reduction Category code for the installation is determined, user should follow the cautions mentioned in the arc flash installation section.

The critical failure relay must be connected to annunciate the status of the device for ALL applications. This is particularly important for when the Arc Flash option is ordered.

Ensure that the control power applied to the device, the AC current, and voltage input match the ratings specified on the relay nameplate. Do not apply current or voltage in excess of the specified limits.

Only qualified personnel are to operate the device. Such personnel must be thoroughly familiar with all safety cautions and warnings in this manual and with applicable country, regional, utility, and plant safety regulations.



Warning:

Hazardous voltages can exist in the power supply and at the device connection to current transformers, voltage transformers, control, and test circuit terminals. Make sure all sources of such voltages are isolated prior to attempting work on the device.

Hazardous voltages can exist when opening the secondary circuits of live current transformers. Make sure that current transformer secondary circuits are shorted out before making or removing any connection to the current transformer (CT) input terminals of the device.



Caution:

For tests with secondary test equipment, ensure that no other sources of voltages or currents are connected to such equipment and that trip and close commands to the circuit breakers or other switching apparatus are isolated, unless this is required by the test procedure and is specified by appropriate utility/plant procedure.

When the device is used to control primary equipment, such as circuit breakers, isolators, and other switching apparatus, all control circuits from the device to the primary equipment must be isolated while personnel are working on or around this primary equipment to prevent any inadvertent command from this device. Use an external disconnect to isolate the mains voltage supply.



Warning:

LED transmitters are classified as IEC 60825-1 Accessible Emission Limit (AEL) Class 1M. Class 1M devices are considered safe to the unaided eye. Do not view directly with optical instruments.

Note:

To ensure the settings file inside the relay is updated, wait 30 seconds after a setpoint change before cycling power. This product is rated to Class A emissions levels and is to be used in Utility, Substation Industrial environments. Not to be used near electronic devices rated for Class B levels.

1.9 MUST-READ INFORMATION

The following general statements apply and are repeated in the relevant sections of the manual.

- Before upgrading firmware, it is very important to save the current settings to a file on your PC. After the firmware has been upgraded, it is necessary to load this file back into the device.
- The **SNTP** and **IRIG-B** settings take effect after rebooting the relay.
- Commands may be issued freely through other protocols than Modbus (i.e., DNP, IEC 104, and, IEC 61850) without user authentication or encryption of data taking place, even if the relay has the advanced security feature enabled.
- Note that the factory role password may not be changed.
- Both DNP and IEC104 protocols can work at the same time, but consider that there is only one point map. So, both protocols use the same configured points.
- The 52b contact is closed when the breaker is open and open when the breaker is closed.
- The Phase Directional element responds to the forward load current. In the case of a following reverse fault, the element needs some time – in the order of 8 ms – to change the directional signal. Some protection elements such as Instantaneous Overcurrent may respond to reverse faults before the directional signal has changed. A coordination time of at least 10 ms must therefore be added to all the instantaneous protection elements under the supervision of the Phase Directional element. If current reversal is a concern, a longer delay – in the order of 20 ms – is needed.
- The same curves used for the time overcurrent elements are used for Neutral Displacement. When using the curve to determine the operating time of the Neutral Displacement element, substitute the ratio of neutral voltage to Pickup level for the current ratio shown on the horizontal axis of the curve plot.
- The relay is not approved as, or intended to be, a revenue metering instrument. If used in a peak load control system, consider the accuracy rating and method of measurement employed, and the source VTs and CTs, in comparison with the electrical utility revenue metering system.
- In bulk oil circuit breakers, the interrupting time for currents is less than 25% of the interrupting rating and can be significantly longer than the normal interrupting time.
- For future reference, make a printout of the conversion report immediately after the conversion in case conversion reports are removed or settings modified from the 8 Series Setup Software.
- To monitor the trip coil circuit integrity, use the relay terminals “FA_1 NO” and “FA_1 COM” to connect the Trip coil, and provide a jumper between terminals “FA_1 COM” and “FA_1 OPT/V” voltage monitor).
- WiFi and USB do not currently support CyberSentry security. For this reason WiFi is disabled by default if the CyberSentry option is purchased. WiFi can be enabled, but be aware that doing so violates the security and compliance model that CyberSentry is supposed to provide.
- In Power factor monitoring, **SWITCH-IN** and **SWITCH-OUT** are mutually exclusive settings. (845, 850)

1.9.1 STORAGE

Store the unit indoors in a cool, dry place. If possible, store in the original packaging. Follow the storage temperature range outlined in the Specifications.

If applicable, use the factory-provided dust caps on all Arc Flash sensor fiber and connectors when not in use, to avoid dust contamination in the transceiver and sensor plugs.

1.10 FOR FURTHER ASSISTANCE

For product support, contact us as follows:

GE Vernova

650 Markland Street

Markham, Ontario

Canada L6C 0M1

Worldwide telephone: +1 905 927 7070

Europe/Middle East/Africa telephone: +34 94 485 88 54

North America toll-free: 1 800 547 8629

Fax: +1 905 927 5098

Worldwide e-mail: ga.support@gevernova.com

Website: <https://www.gevernova.com>

1.10.1 REPAIRS

The firmware and software can be upgraded without return of the device to the factory.

For issues not solved by troubleshooting, the process to return the device to the factory for repair is as follows:

- Contact a GE Vernova Grid Solutions Technical Support Center. Contact information is found in the first chapter.
- Obtain a Return Materials Authorization (RMA) number from the Technical Support Center.
- Verify that the RMA and Commercial Invoice received have the correct information.
- Tightly pack the unit in a box with bubble wrap, foam material, or styrofoam inserts or packaging peanuts to cushion the item(s). You may also use double boxing whereby you place the box in a larger box that contains at least 5 cm of cushioning material.
- Ship the unit by courier or freight forwarder, along with the Commercial Invoice and RMA, to the factory.
- Customers are responsible for shipping costs to the factory, regardless of whether the unit is under warranty.
- Fax a copy of the shipping information to the GE Vernova Grid Solutions service department.

Use the detailed return procedure outlined at



<https://www.gevernova.com/grid-solutions/return-procedures>

The current warranty and return information are outlined at

<https://www.gevernova.com/grid-solutions/multilin/warranty>


CHAPTER 2

INSTALLATION

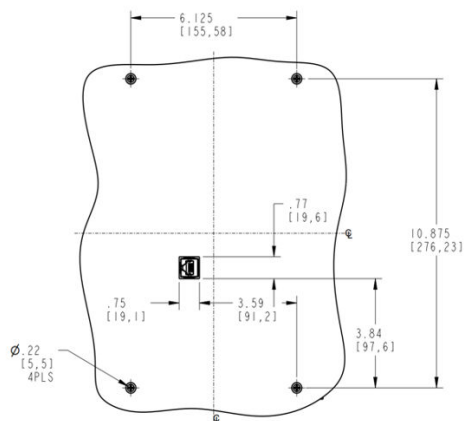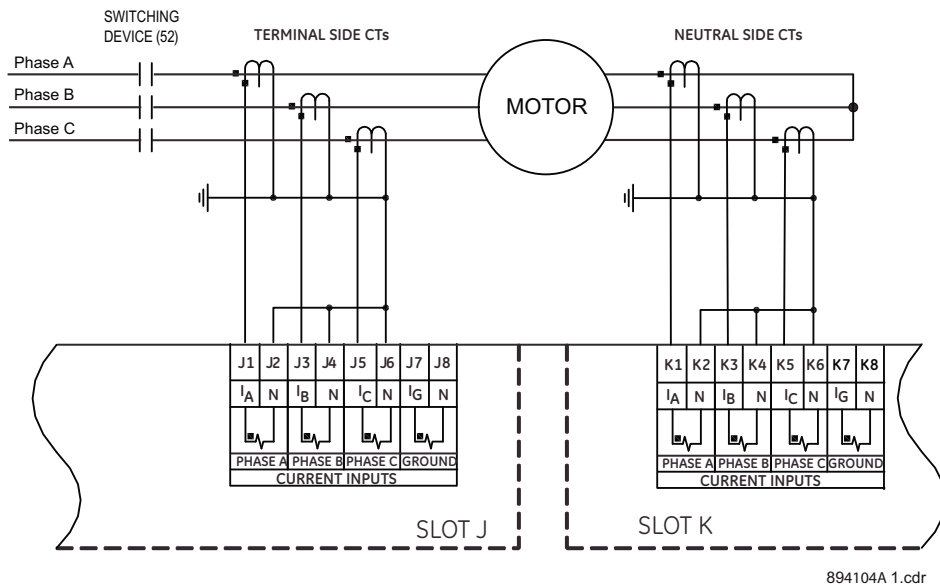

DISPLAY MODULE

use 4 screws (out of bag of 8) provided with the unit to mount the display

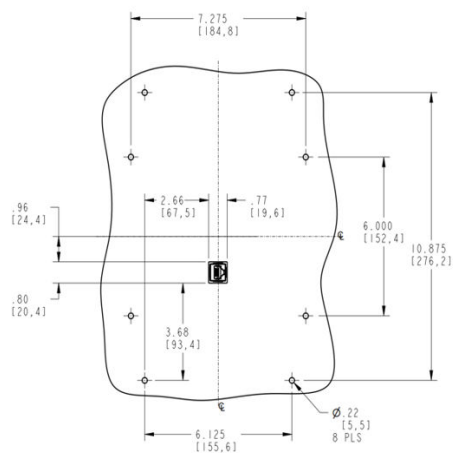

I/O HOUSING

to mount the I/O HOUSING suggest using 8 #10x1/2" (or M5x12mm) screws spring washers and nuts

2.1 CHAPTER OVERVIEW

This chapter describes the mechanical and electrical installation of the relay.

This chapter contains the following sections:

Chapter Overview	24
Product Identification	25
Dimensions	26
Mounting	27
Draw-out Unit Withdrawal and Insertion	32
Removable Power Supply	34
Removable Magnetic Module	35
Remote Module I/O (RMIO)	38
IP20 Back Cover	40
Arc Flash Sensor	41
Physical considerations of wiring	50
Terminal connections	53
Terminal Identification	56
RMIO Module Installation	59
Phase Sequence and Transformer Polarity	61
Ground CT inputs	62
Zero-Sequence CT Installation	63
Voltage Inputs	64
RTD sensor connections	65
Restricted Ground Fault Inputs	68
Control Power	69
Contact Inputs	70
Output Relays	72
Serial Communications	75
IRIG-B	76
Typical Wiring Diagrams	77

2.2 PRODUCT IDENTIFICATION


The product identification label is located on the side panel of the relay. This label indicates the product model, serial number, and date of manufacture. The following figure shows an example of such a label.

Note:
This example label is specific to a particular order of the 850 and may not represent your model.



Figure 3: Product label example

2.3 DIMENSIONS

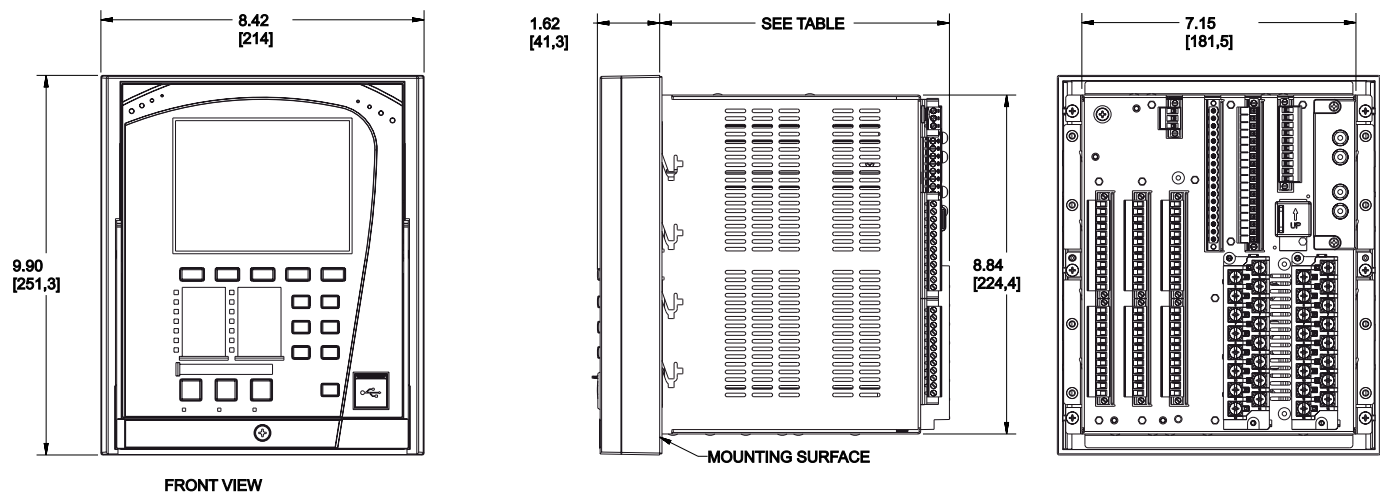

The relay dimensions are shown below. Additional dimensions for mounting, and panel cutouts, are shown in the following sections.

Figure 4: Relay Dimensions

2.4 MOUNTING

The relay can be mounted two ways: standard panel mount or optional tab mounting, if required.

- **Standard panel mounting:** From the front of the panel, slide the empty case into the cutout. From the rear of the panel, screw the case into the panel at the 8 screw positions.
- **Optional tab mounting:** The V tabs are located on the sides of the case and appear as shown in the following figure. Use needle nose pliers to bend the retaining V tabs outward to about 90°. Use caution and do not bend and distort the wall of the enclosure adjacent to the tabs. The relay can now be inserted and can be panel wired.

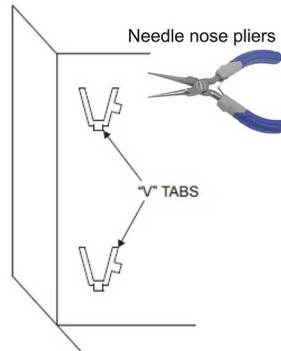


Figure 5: V Tabs Located on Case Side

2.4.1 STANDARD PANEL MOUNT

The standard panel mount and cutout dimensions are illustrated below.



Caution:

To avoid the potential for personal injury due to fire hazards, ensure the unit is mounted in a safe location and/or within an appropriate enclosure.

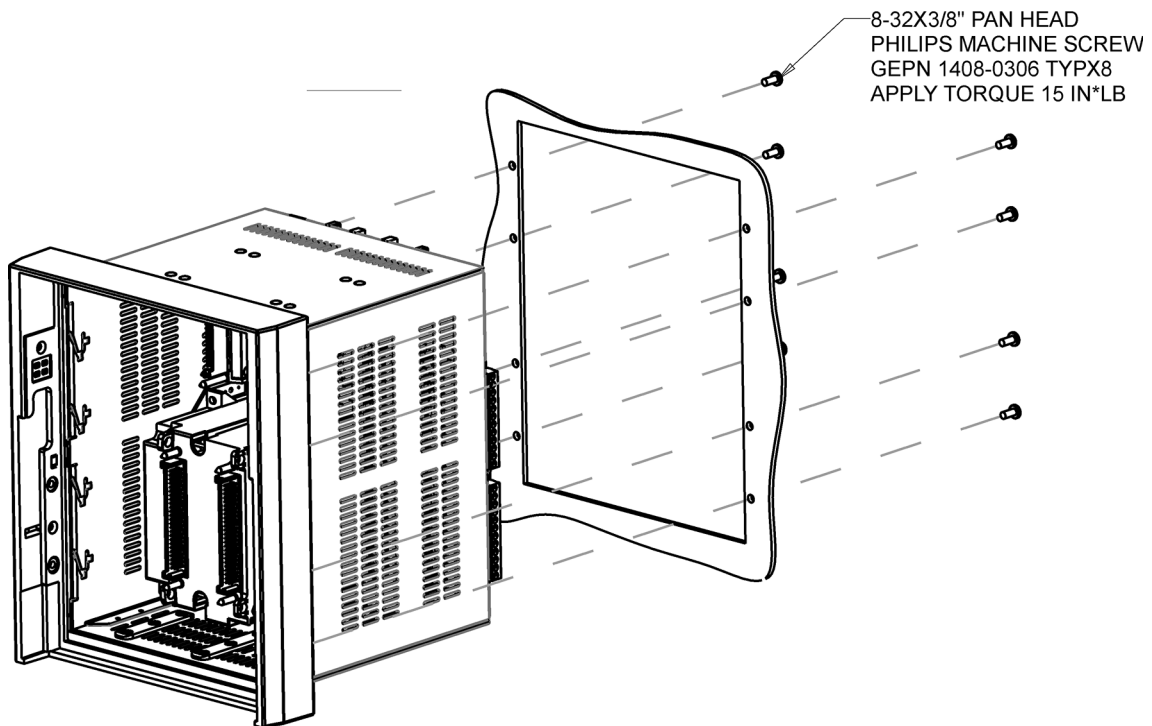


Figure 6: Standard panel mount

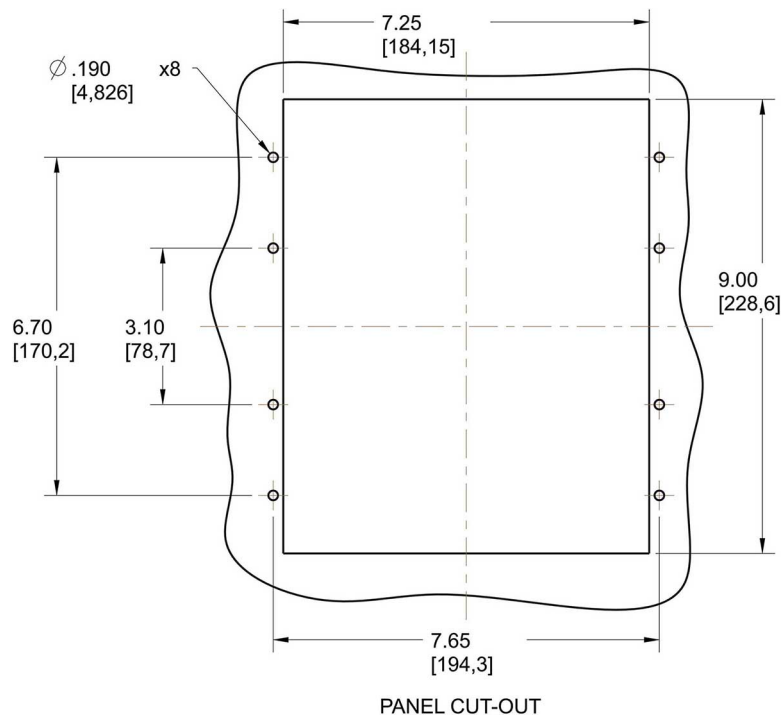



Figure 7: Panel cutout dimensions

Depth reducing collar

Three different sizes of optional depth reducing collar are available for mounting relays in narrow-depth service panels, or wherever space is an issue.

Note:
The drill hole locations are different when a depth reducing collar is used. See the Depth reducing collar panel cutout figure below.

- 18J0-0030 8 Series Depth Reducing Collar - 1 3/8"
- 18J0-0029 8 Series Depth Reducing Collar - 3"
- 18J0-0184 8 Series Depth Reducing Collar - 3 3/4"

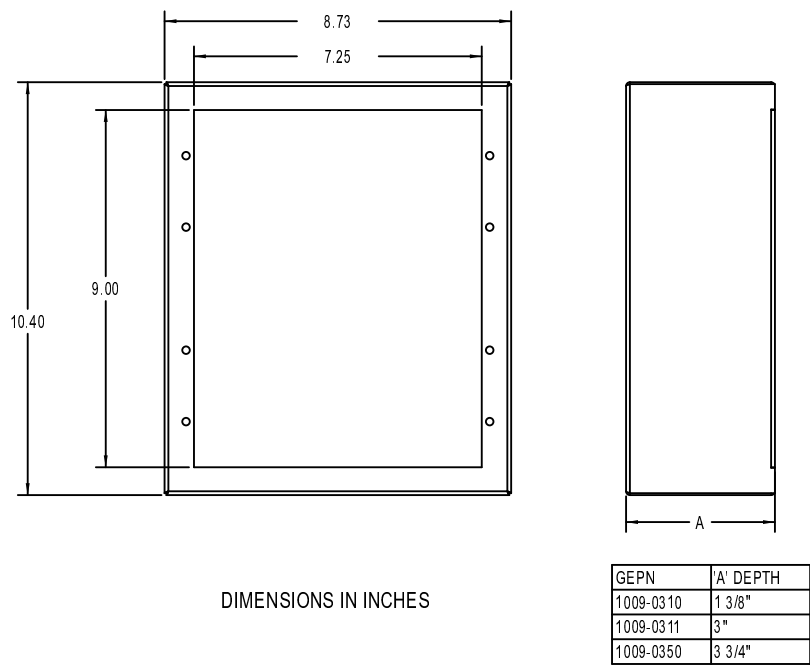

892703A2.cdr

Figure 8: Depth reducing collar dimensions


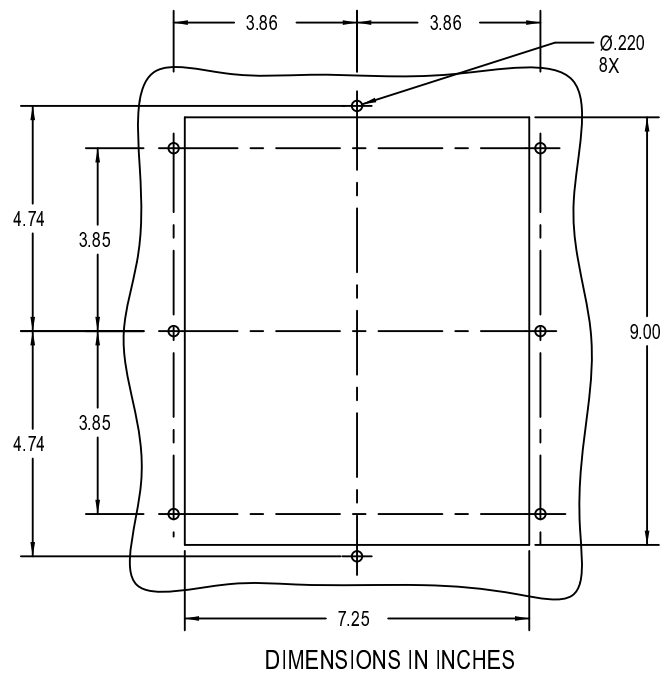


Figure 9: Depth reducing collar panel cutout

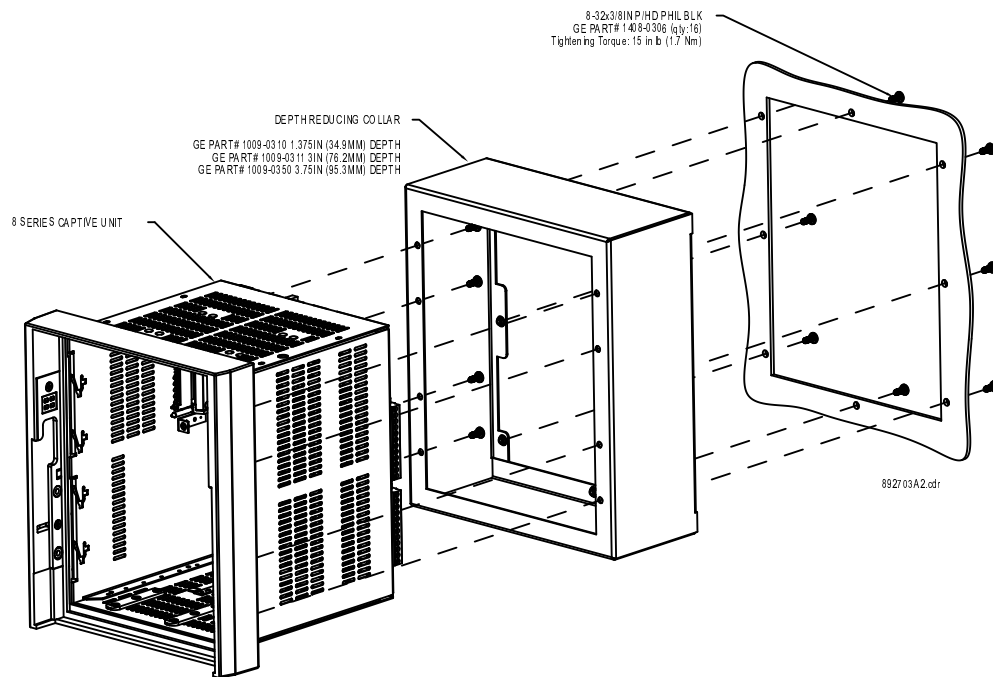

- PANEL MOUNTING WITH DEPTH REDUCING COLLAR:
1. DRILL MOUNTING HOLES AS SHOWN ON THE PANEL CUTOUT DRAWING
 2. MOUNT THE COLLAR TO THE CAPTIVE UNIT USING 8 SCREWS AS SHOWN
 3. MOUNT COMBINATION OF UNIT AND COLLAR TO THE PANEL USING 8 SCREWS AS SHOWN

Figure 10: Depth reducing collar installation

To mount an 8 Series relay with a depth reducing collar, follow these steps:

1. Drill mounting holes as shown on the Depth reducing collar panel cutout figure above.
2. Mount the collar on the captive unit using eight screws.
3. Mount the combined unit and collar on the panel using eight screws.


2.5 DRAW-OUT UNIT WITHDRAWAL AND INSERTION

Caution:


Turn off control power before drawing out or re-inserting the relay to prevent mal-operation.

Follow the steps outlined in the diagrams below to insert and withdraw.

STEP 1

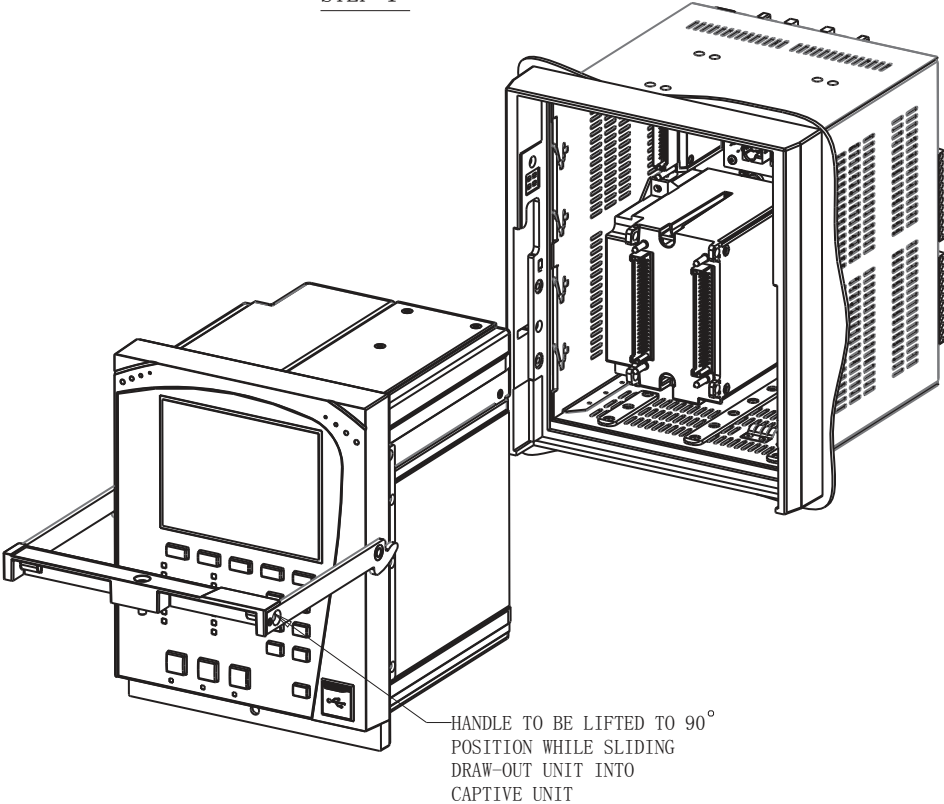

STEP 2

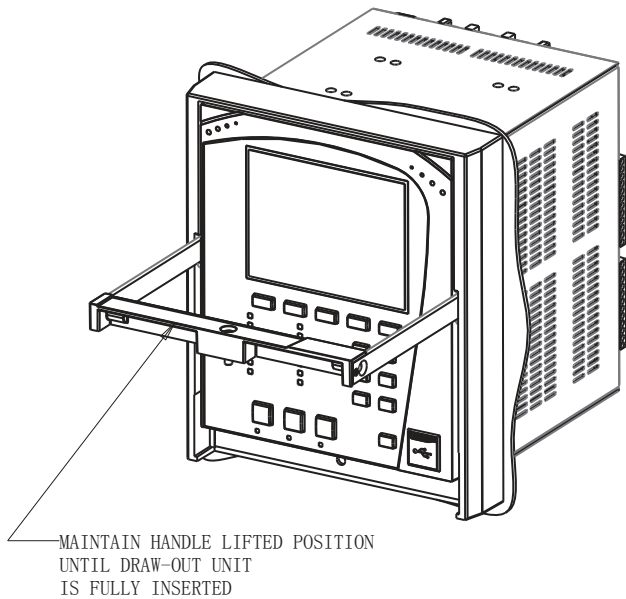

STEP 3

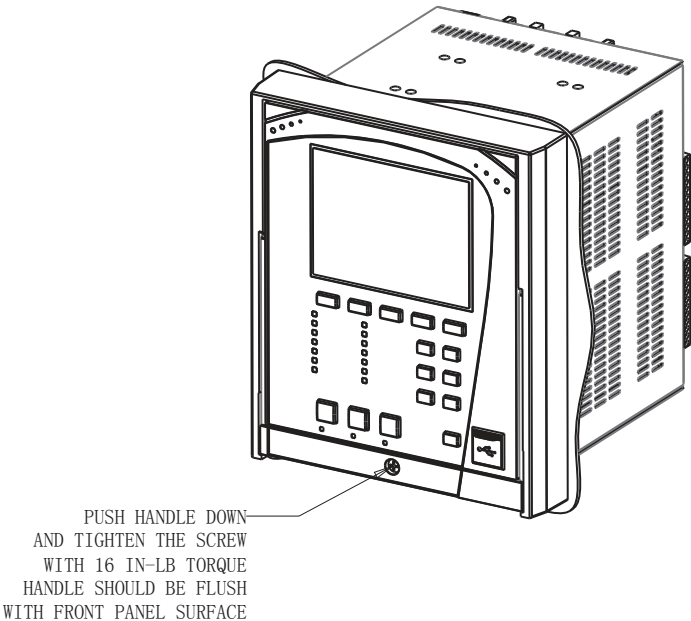


Figure 11: Unit withdrawal and insertion diagram

2.6 REMOVABLE POWER SUPPLY

Follow the steps outlined in the below diagram to insert (#1) or remove (#2) the power supply from the unit.

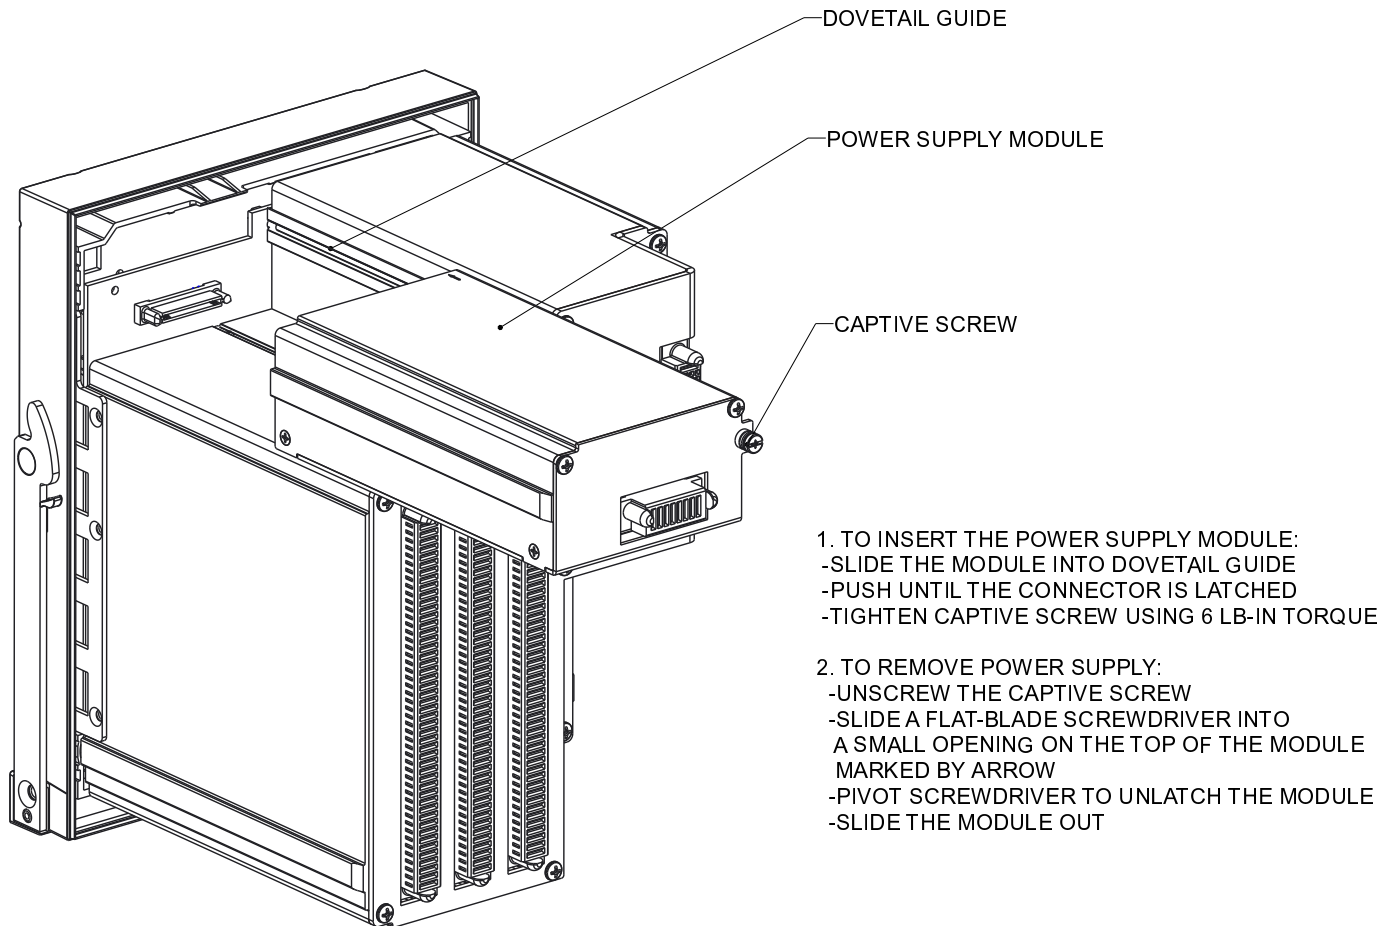


Figure 12: Insert or Remove the Power Supply

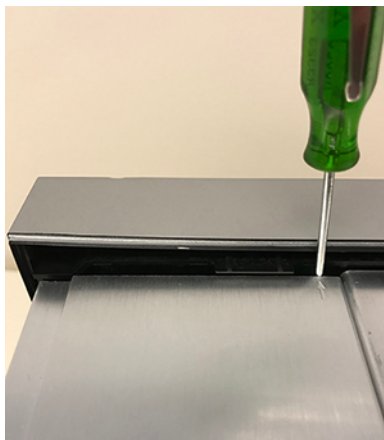


Figure 13: Unlatch Module

2.7 REMOVABLE MAGNETIC MODULE



Warning:
You must follow all preparation steps before removing the CT/VT magnetic module.

Warning:
You must identify all current and voltage sources connected to the relay before starting the removal process.

Warning:
Only suitably-qualified personnel may remove the magnetic module from an installed relay.

Warning:
Appropriate PPE is required based on the arc flash calculations.



Caution:
LOTO (Lockout Tag Out) of the system is required prior to module removal/replacement.

Follow the procedures outlined below to remove or replace the CT/VT magnetic module.

PREPARATION

1. Shut down and de-energize all systems connected to the relay.
2. Review all cautions and warnings in the introduction.



Warning:
A relay, with the magnetic module removed, does NOT have an internal automatic CT shorting mechanism.

Warning:
Hazardous voltages may exist when opening the secondary circuits of live current transformers.

Warning:
Make sure that in-field current transformer secondary circuits are shorted out before making or removing any connection to the current transformer (CT) input terminals.

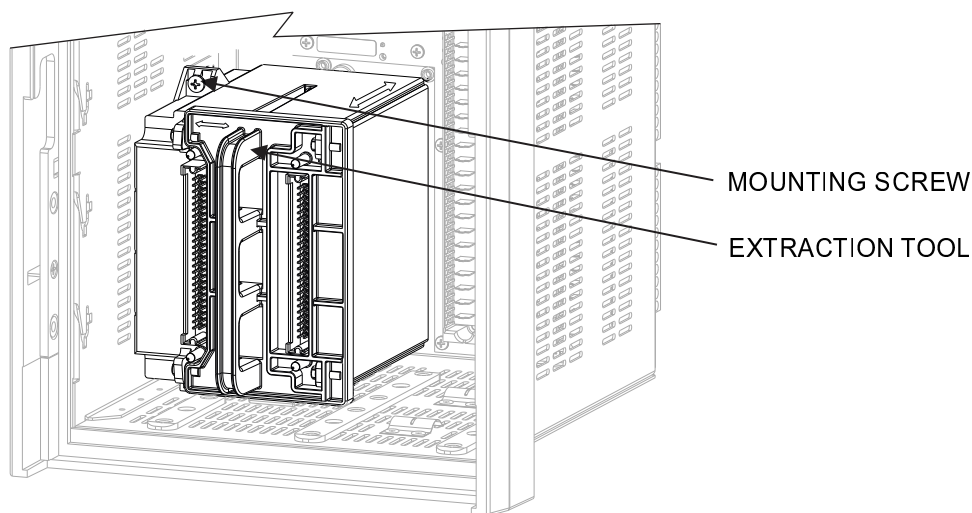


Figure 14: Removing/replacing the CT/VT Magnetic Module

REMOVAL



Caution:
LOTO (Lockout Tag Out) of the system is required prior to module removal/ replacement.

1. Remove the draw-out unit from the chassis. Carefully set aside.
2. Within the captive chassis, unscrew the mounting screw (as indicated in the following figure).
3. Insert the magnetic module extractor tool as shown in the following figure, without engaging the pins.
4. Slide the tool to the left, engaging the pins fully (see arrow in figure).
5. Pull the tool handle towards the operator to disengage the module, and carefully remove the module from the chassis.
6. Remove the tool from the module, and save for future use.

REPLACEMENT



Caution:
LOTO (Lockout Tag Out) of the system is required prior to module removal/ replacement.
Ensure the replacement CT /VT module is the same type as the removed module.
Alternate models and configurations may be unsafe for use.

1. Insert the extractor tool into the front of the module, then slide the tool to the left to engage the tool pins.
2. Place the module/tool at the front of the chassis so that it is flush with the left and bottom sides.
3. Slide the module/tool into the back of the chassis as far as it will go, making sure the connectors mate while keeping the module flush to the left and bottom sides of the chassis.
4. Tighten the captive mounting screw using a torque of 6 in-lbs.
5. Remove the tool from the magnetics module and save for future use.
6. Insert the draw-out unit.
7. Re-energize the relay system.
8. Remove the external shorting equipment from the CT inputs.

9. Ensure the In Service LED on the relay front panel is green.
10. Navigate to the Target message screen (press **Home** and then **Targets**) and check that the Target screen does not show any Self-Test errors. Self-Test errors may indicate that the module has not been mounted properly.
11. Verify that CTs and VTs, digital inputs and other circuits are all metering correctly.

2.8 REMOTE MODULE I/O (RMIO)

If using the Remote RTD module, follow these installation steps.

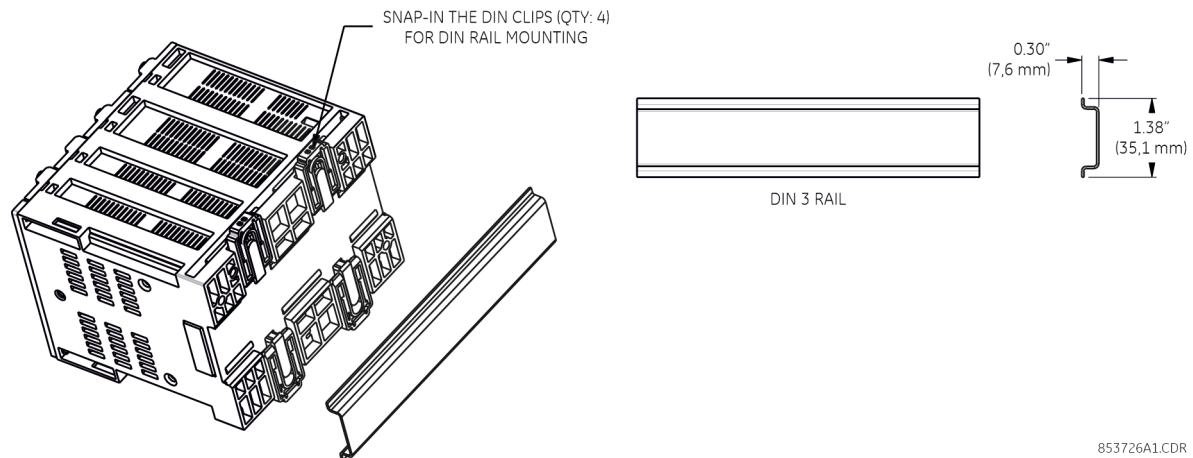


Figure 15: RMIO - DIN rail mounting - Base & Expansion units

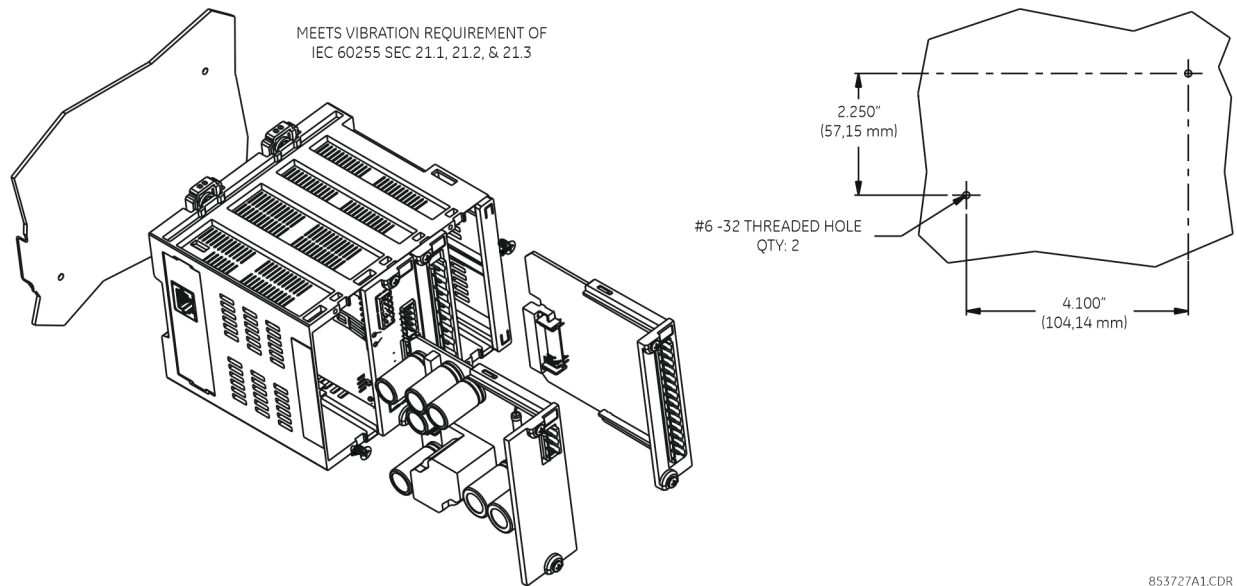


Figure 16: RMIO - Base Unit screw mounting

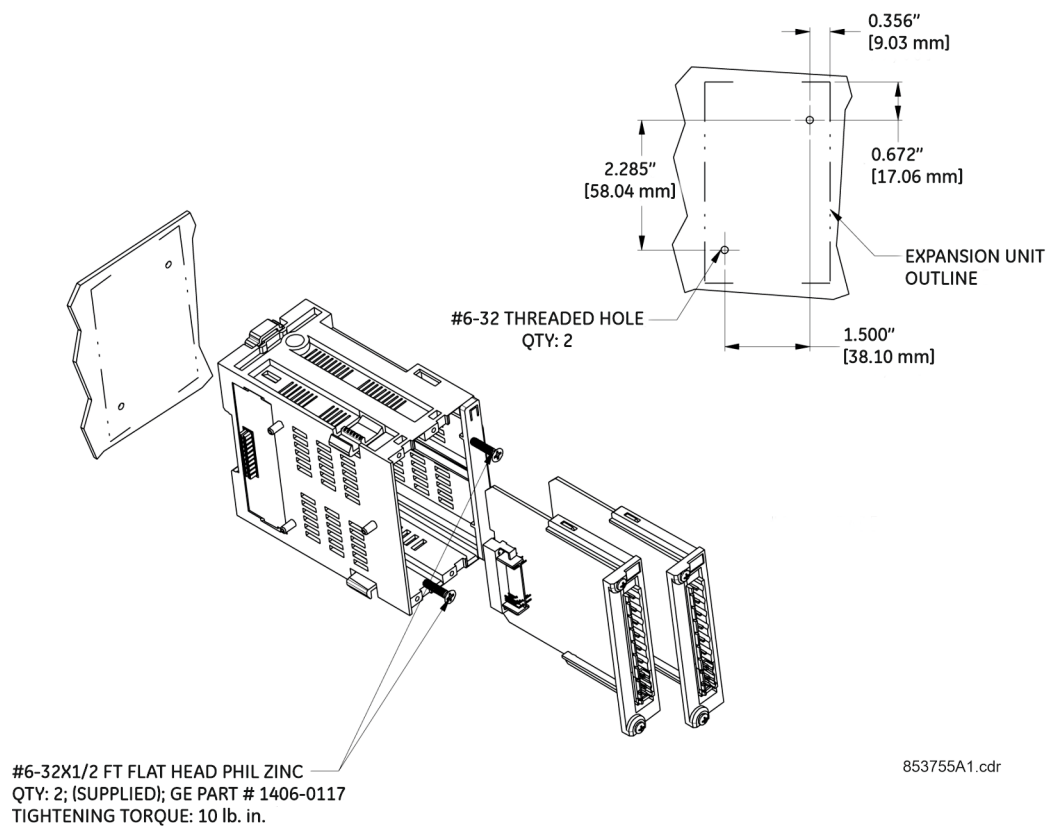


Figure 17: RMIO - Expansion Unit screw mounting

2.9 IP20 BACK COVER

If using the IP20 back cover, follow these installation steps.

1. Place the IP20 cover in the orientation shown over the CT/VT terminal blocks, routing wiring through the cover slots.
2. Secure the cover with the 4 screws provided. Suggested tightening torque is 8 lb-in (0.9 Nm).

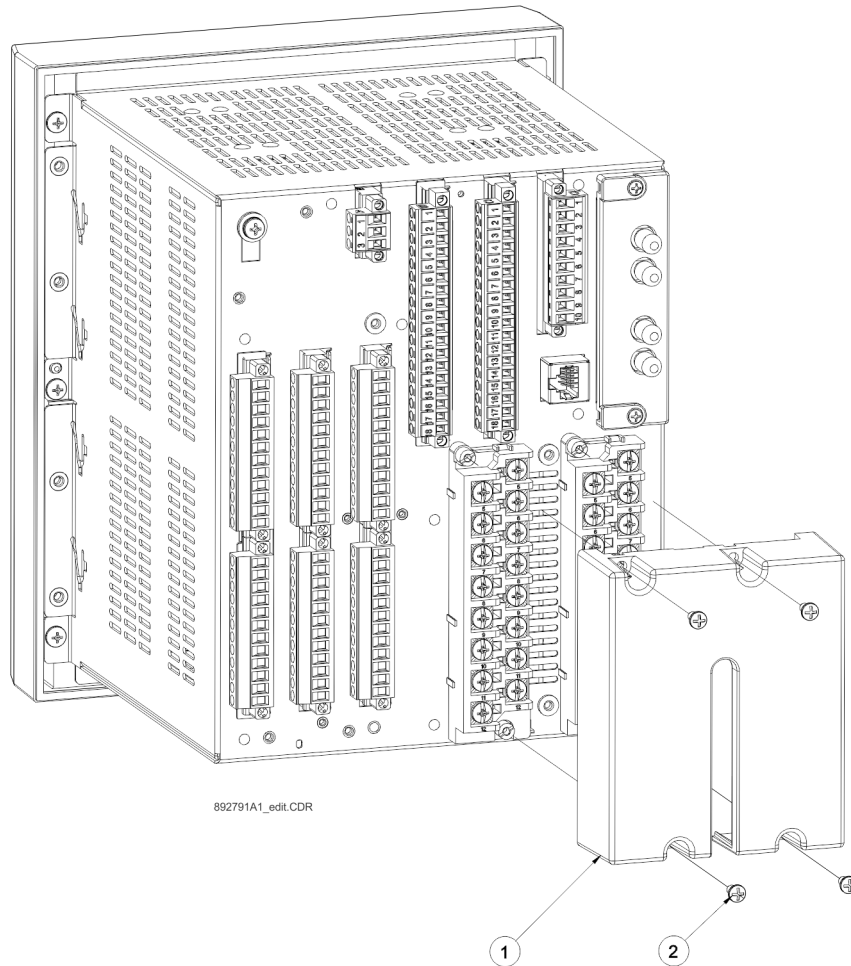


Figure 18: IP20 Back Cover installation

2.10 ARC FLASH SENSOR

The Arc Flash sensor houses the fiber optics that are used to detect the arc flash, there are two types of the sensors: loop sensor and point sensor.



Caution:

If the Arc Flash Protection is used, operands for Arc Flash sensor failures must be assigned to an auxiliary output relay. This must be connected to the control logic of the breaker equipment to ensure safe operations when the output relay is asserted. In the event of this assertion, the Hazard Reduction Category code cannot be maintained unless backup protection is continuing to maintain it.



Caution:

This product uses optical electronic devices (loop or point sensors) to sense arc flash fault conditions. It is recommended to follow proper housekeeping measures & establish a regularly scheduled preventive maintenance routine to ensure proper device operation .

Caution:

Read the following guidelines fully before proceeding.

Care must be taken when handling the Arc Flash sensor fiber, which can be damaged if twisted, bent, or clamped tightly during installation.

- Do not bend sensor fiber sharply, or with a radius of less than 35 mm (1½ inches). Sharp bends can damage the fiber. Do not pull or tug loops of sensor fiber, as sharp bends may result.
- Do not clamp sensor fiber tightly during installation. Sensor fiber should be held in place loosely for the best long-term performance. Avoid over-tightening ties which may deform or break the sensor fiber.
- Do not pull or tug sensor fiber with force, as this may cause internal damage or separate the fiber from the cable connector.
- Do not twist the sensor fiber, as twisting can damage the fiber resulting in substandard performance.
- Do not attach sensor fiber directly to the bus or live conductors.
- Avoid installing sensor or sensor fiber on surfaces where temperatures might go above 70 °C or 158 °F to prolong the life of the fiber.
- Secure all sensor fibers (loosely but securely) away from any moving parts.
- When holes are drilled for sensor fiber installation, install rubber grommets around the drilled holes to protect the sensor fiber.
- Before installing arc flash sensor units, ensure that all other drilling and installation is complete to minimize possible damage to the sensitive unit and connected sensor fiber cable.
- Ensure that sensor fiber cable is installed clear from any switchgear moving parts, and can't be snagged or damaged during any switchgear operations, including maintenance activities.
- Ensure there is no dirt or dust inside the point sensor or on the surface of both the point sensor head and transparent loop sensors because it reduces the capturing efficiency of the device, increases its transmission loss, or both. If the sensor is covered with dust, clean it by blowing or wiping the dust off the point sensor. Dish soap or organic solvents (ethanol based) can be used. Avoid using any other type of corrosive solvents.

- For each of the sensors, plan the path of the sensor carefully, keeping it as short as possible for the point sensor, however extra looping is recommended for the loop sensor
- If a sensor fiber extension is used, ensure that it is long enough to reach the loop sensor without pulling or bending sharply.
- If the bulkhead connectors are used to connect the fiber extension to a loop sensor, mount the bulkhead connector through the drilled ends of the switch gear chamber (if needed to extend from one to another chamber) using below dimensions. Keep in mind that the maximum thickness the bulkhead connector can tolerate is 4.11mm (0.16"), and space the bulkhead connector holes properly to allow for the 11mm (0.42") installation washers.

Sensor Type

Arc flash sensors are available in two different configurations, point and loop. Loop sensors can be used with a black-coated sensor fiber extension to connect the ends of the loop sensor to the 8 Series relay through panels up to 51 mm (2 inches) thick.

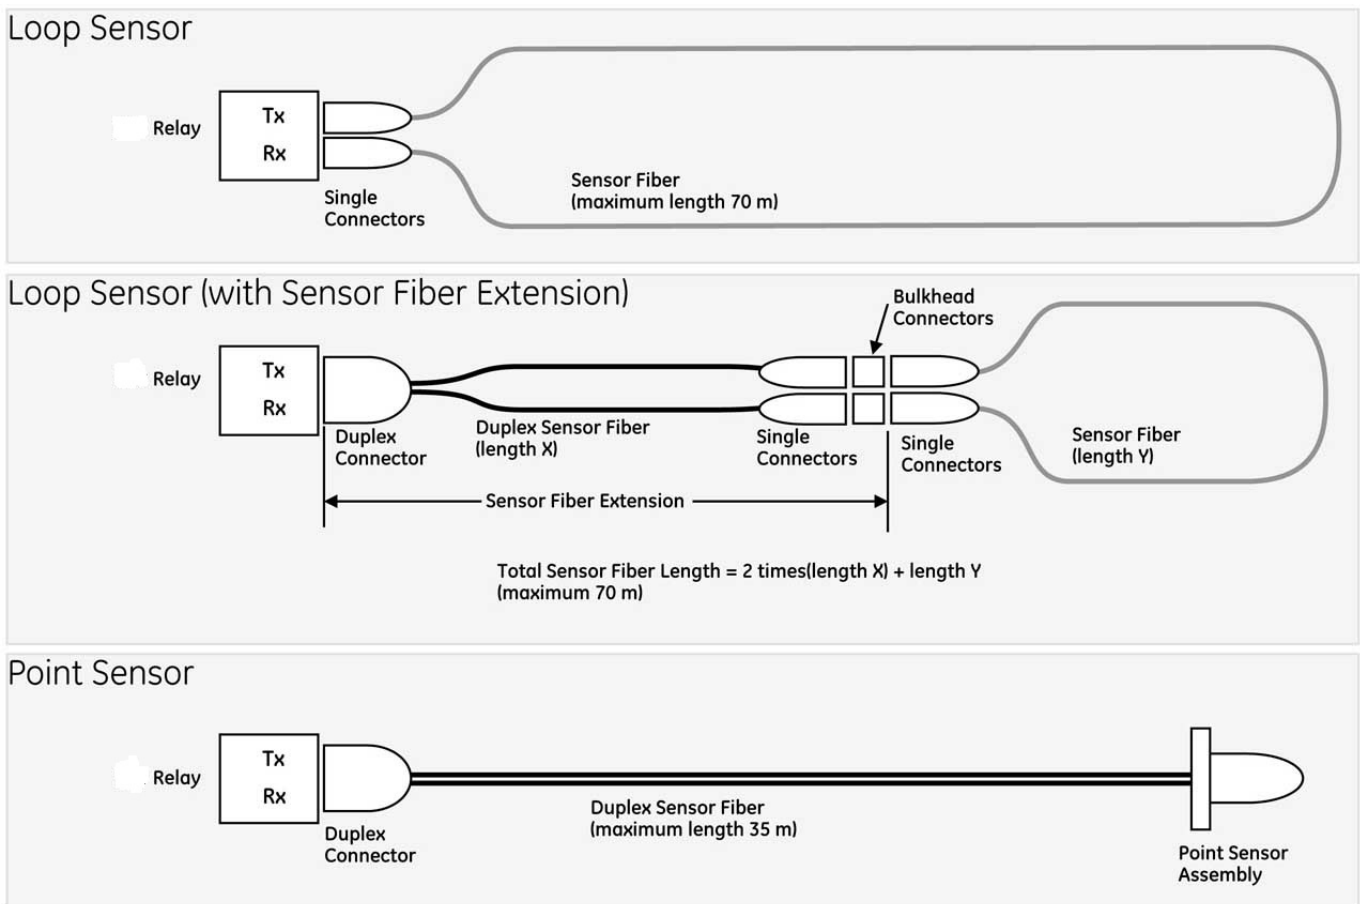


Figure 19: Arc Flash Loop and Point Sensors

Arc flash sensors of either type can be connected to any of the four or eight arc flash ports on the back of the 8 Series relay, as shown.



Figure 20: Arc Flash Sensors connected to the 8 Series relay

Point Sensor Installation



Figure 21: Order code T type Arc Flash point sensor without sensor fiber connected

Figure 22:

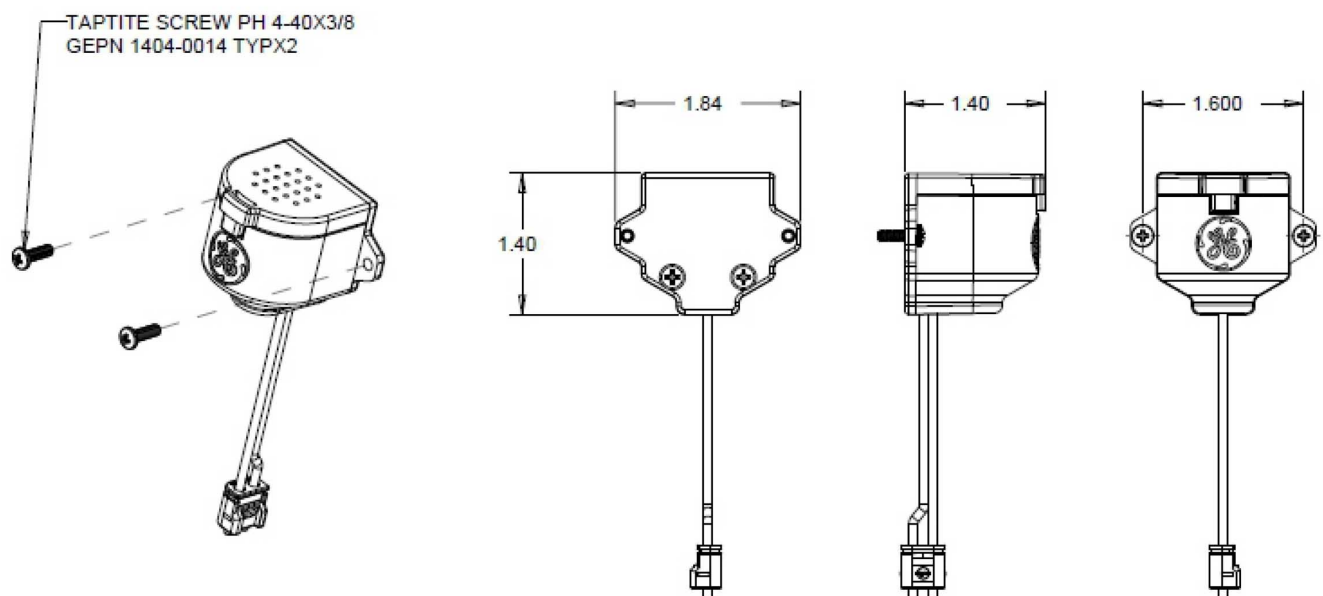


Figure 23: Order code F type Point Sensor - dimensions of sensor tip.

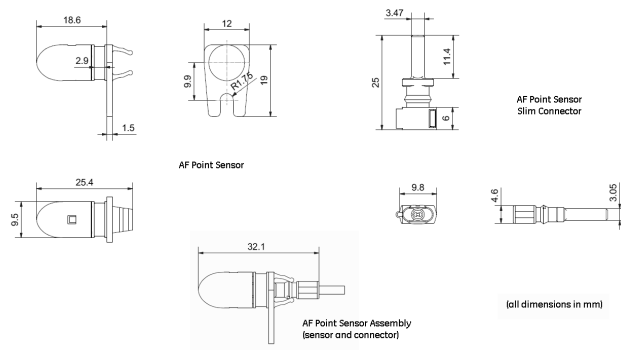


Figure 24: Order code T type Point sensor and slim connector dimensions

Figure 25:

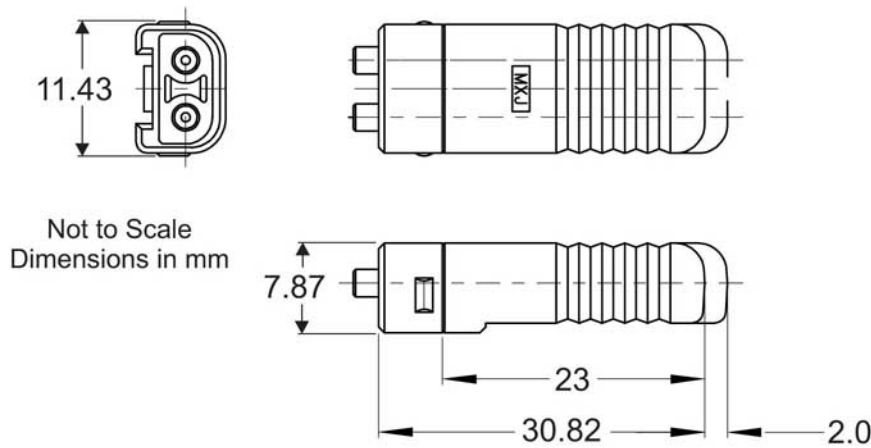


Figure 26: Order code T type Point sensor - dimensions of sensor tip

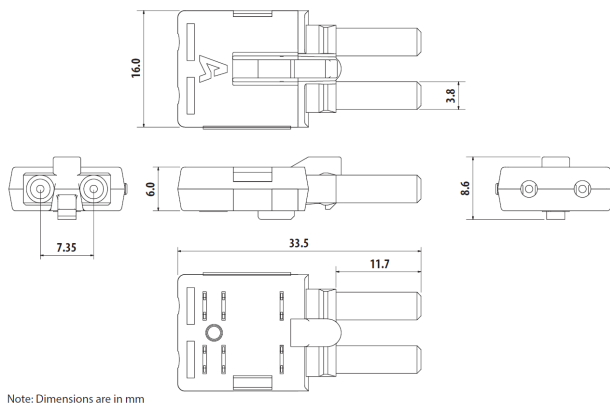


Figure 27: Duplex connector dimensions (point sensor, and sensor fiber extension for loop sensor)

The point sensor fiber includes a duplex connector to connect to the back of the 8 Series relay on one end, and a compressed slim connector that connects to the sensor itself on the other end.

Before installing the AF sensor units, ensure that all other drilling and installation is complete to minimize possible damage to the sensitive unit and connected sensor fiber cable. Choose a location for the sensor clear of any obstructions that could shield the sensor from arc flash light.

Note:

Sensor fiber should be held in place loosely for the best long-term performance. Avoid over-tightening ties which may deform or break the sensor fiber.

General installation

1. Choose a location for the point sensor. Arc flash point sensors should be installed clear of any obstructions that could shield the sensor from arc flash light, and less than 2m (6ft 6") from any potential arc flash source. The sensor head should be pointed towards the most likely source of arc flash.
2. Remove the slim connector from the point sensor assembly.
3. Carefully route the duplex sensor fiber from the point sensor location to the back of the relay unit, minimizing loops and curves for the strongest possible signal. Ensure all sensor fiber handling precautions are followed. The slim connector fits through holes with a diameter of 11 mm or greater, and can be threaded through holes drilled in any panels between the relay and arc flash detection location.
4. Mount the point sensor using either a cable tie mount or through-hole mount, as detailed below.
5. Reconnect the slim connector to the point sensor.

Note:

Install protective grommets when routing sensor fiber through metal walls.

Arc flash point sensors can be installed in one of two ways, using a cable tie mount or a through-hole mount.

Cable tie mount

- Requires a 2.5-mm-wide cable tie.
- Mount the sensor on a stick or similar using the cable tie, as shown in the following figure.



Figure 28: AF point sensor, cable tie mount

Through-hole mount

- Requires a standard or self-tapping M3 screw, and optionally an M3 washer.
- Mount the sensor through a 10 mm hole made in the surface of any mechanical structure inside the switchgear or on the surface of one side of the switchgear itself, as shown in the following figure.

Figure 29:

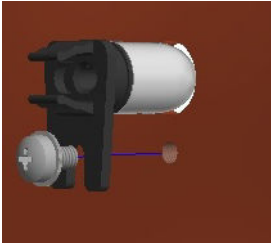


Figure 30: AF point sensor, through-hole mount


Make sure there is no dirt or dust inside the point sensor or on the surface because it reduces the capturing efficiency of the device, increases its transmission loss, or both. If the point sensor is covered with dust, clean it by blowing or wiping the dust off the point sensor.

Note:

The material of the point sensor is not affected by water-based cleaning agents, dish soap, or organic solvents with an alcohol (ethanol) base. Do not use solvents or solvent mixtures that contain acids because they can attack or dissolve the optical plastic material.

Loop sensor installation

The loop sensor transparent sensor fiber has a single connector on either end. The sensor fiber extension has a duplex connector on one end, two single connectors on the other end, and comes with two single bulkhead connectors. Both come in custom lengths, which can be ordered to fit your installation.

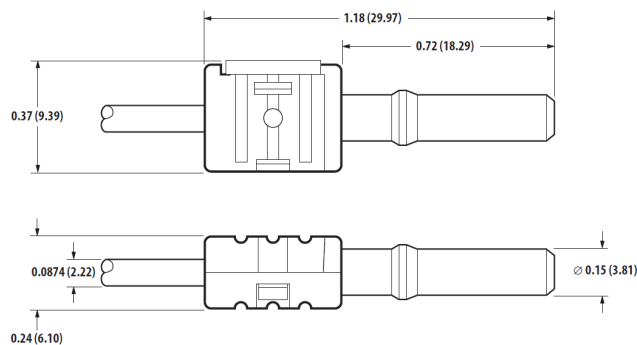

All dimensions are in inches and (millimeters).

Figure 31: Single connector dimensions (loop sensor, and sensor fiber extension for loop sensor)

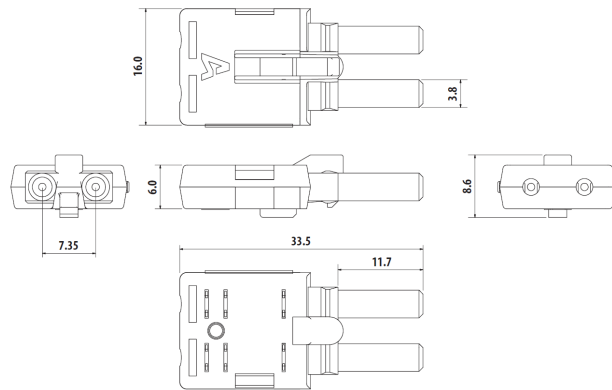


Figure 32: Duplex connector dimensions (point sensor, and sensor fiber extension for loop sensor)

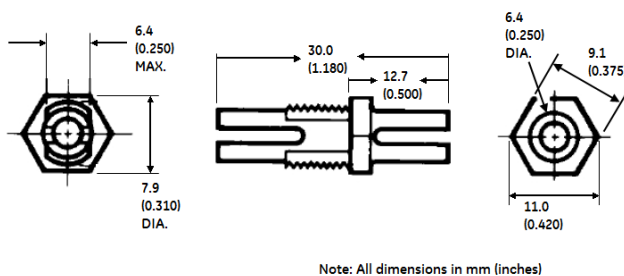


Figure 33: Single bulkhead connector dimensions

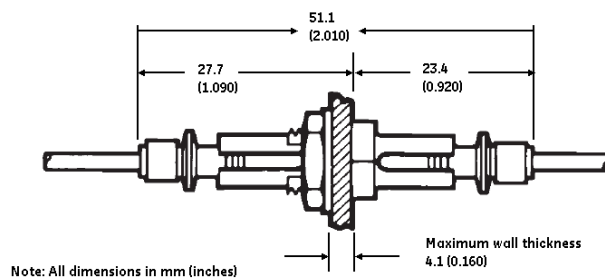


Figure 34: Single bulkhead connector with single connectors and sensor fiber

Before installing the AF sensor units, ensure that all other drilling and installation is complete to minimize possible damage to the sensitive unit and connected sensor fiber cable.

Note:

Sensor fiber should be held in place loosely for the best long-term performance. Avoid over-tightening ties which may deform or break the sensor fiber.

Note:

The loop sensor fiber can be connected directly to the 8 Series relay without a sensor fiber extension, however, care must be taken to ensure correct alignment of the loop sensor single connectors into the relay light sensor input.

Installing the loop sensor fiber without an extension

1. Plan the path of the loop sensor fiber, looping through the chamber or chambers requiring arc flash detection.

2. Ensure that both ends of the loop remain close together and can reach the 8 Series relay light sensor inputs.
3. Install the loop sensor carefully, following all sensor fiber handling guidelines.
4. Plug the single connectors into the back of the 8 Series relay.

Installing the loop sensor fiber with a sensor fiber extension

1. Plan the path of the loop sensor fiber, looping through the chamber or chambers requiring arc flash detection.
2. Ensure that both ends of the loop remain close enough together to be reached by the sensor fiber extension. If needed, gently pull apart the duplex sensor fiber extension from the end with two single connectors, being careful not to bend the fiber with a radius of less than 35 mm (1.3 inches).
3. Ensure that the sensor fiber extension is long enough to reach the 8 Series relay from the bulkhead connector location.
4. Mount the bulkhead connector on the side of the chamber, following the drill hole dimensions provided. Note that the single bulkhead connector uses washers 11.0 mm (0.420 in) wide, so the drill holes must be spaced accordingly if the loop sensor path begins and ends in the same place.

Note: All dimensions in mm (inches)

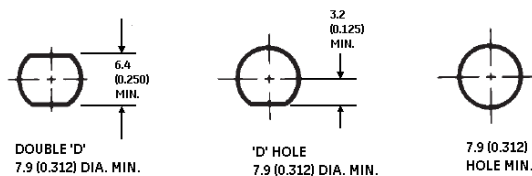


Figure 35: Bulkhead connector cutout

5. Install the loop sensor carefully, following all sensor fiber handling guidelines.
6. Plug the ends of the loop sensor into the bulkhead connectors.
7. Plug the single connectors on the sensor fiber extension into the other sides of the bulkhead connectors, and the duplex connector into the back of the 8 Series relay.

2.11 PHYSICAL CONSIDERATIONS OF WIRING

When installing two lugs on one terminal, both lugs must be oriented as shown in the picture below. This is to ensure the adjacent lower terminal block does not interfere with the lug body.

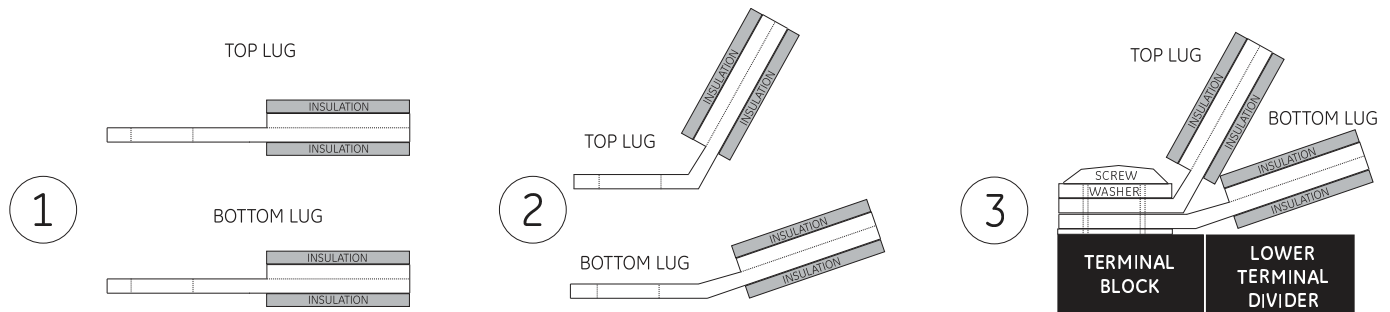


Figure 36: Positioning the lugs correctly



Figure 37: Correct Installation Method

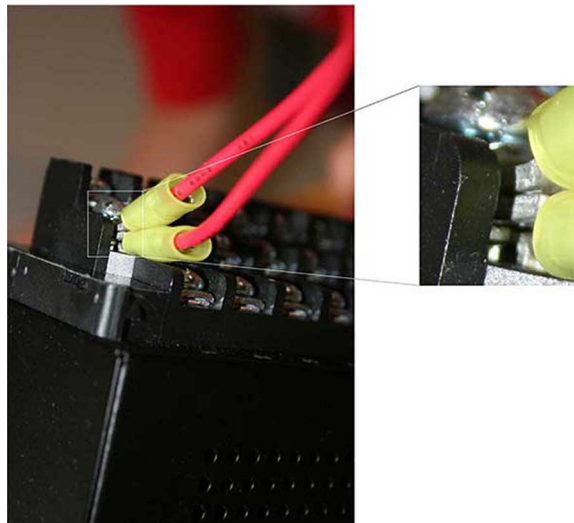


Figure 38: INCORRECT INSTALLATION METHOD (lower lug reversed)

2.11.1 TERMINAL STRIP TYPES

There are two types of removable terminal strips as shown: right-angle plugs with side screw connections, and straight plugs with front screw connections.

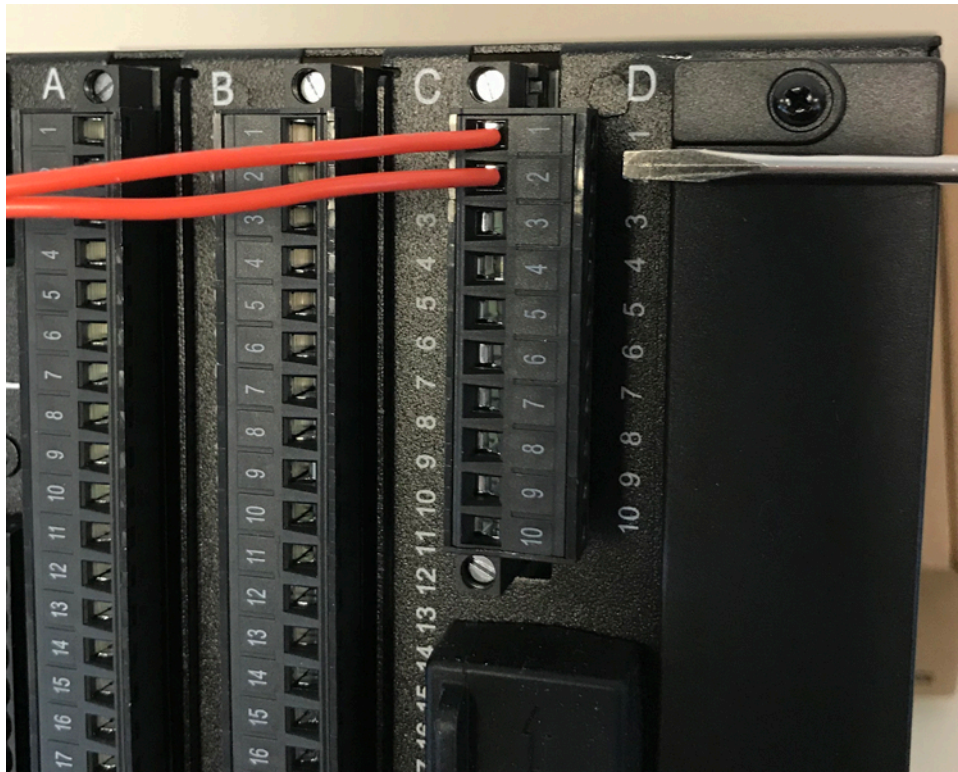


Figure 39: Right-angle plugs with side screw connections

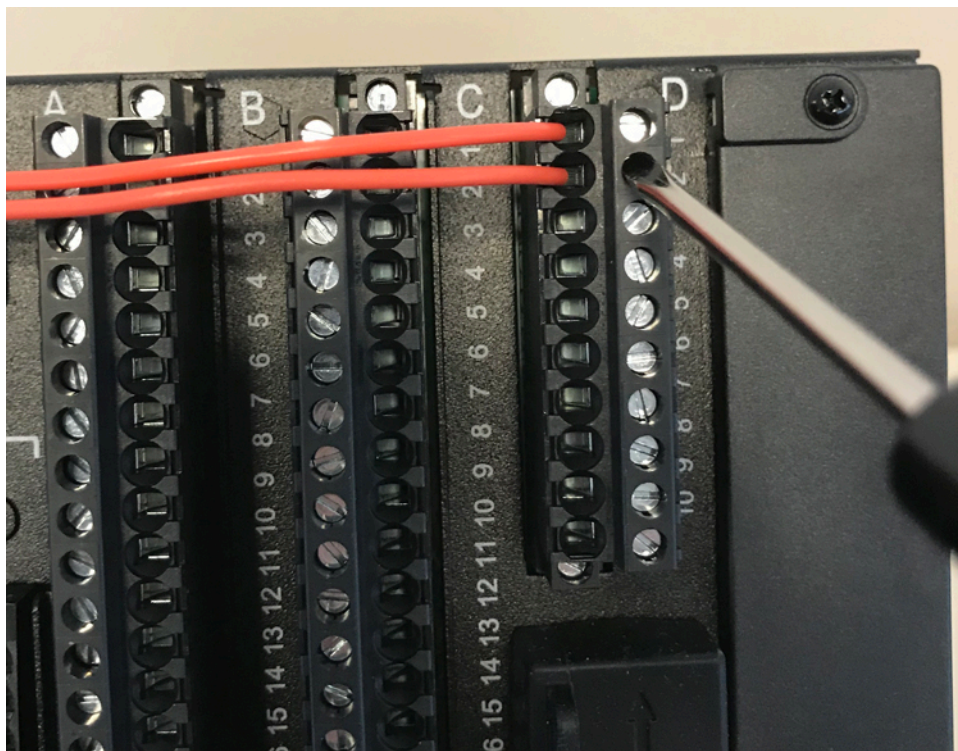


Figure 40: Straight plugs with front screw connections

2.11.2 WIRE SIZE

Use the following guideline for wiring to terminal strips A, B, C, D, F, G, H:

- 12 AWG to 24 AWG
- Suggested wiring screw tightening torque: 4.5 in-lbs (0.5 N-m)
- Usage of ferrules or pin terminals is recommended
- Suggested wire stripping / pin contact length:
 - Right-angle connection type plug: 7 to 8 mm
 - Front connection type plug: 12 mm

Use the following guideline for wiring to terminal blocks J, K:

- 12 AWG to 22 AWG (3.3 mm² to 0.3 mm²): Single wire termination with/without 9.53 mm (0.375") maximum diameter ring terminals.
- 14 AWG to 22 AWG (2.1 mm² to 0.3 mm²): Multiple wire termination with 9.53 mm (0.375") maximum diameter ring terminals. Two ring terminals maximum per circuit.
- Suggested wiring screw tightening torque: 15 in-lb (1.7 N-m)
- Suggested mounting screw tightening torque (to attach terminal block to chassis): 8 in-lb (0.9 N-m)

2.12 TERMINAL CONNECTIONS

All the terminal strips are labeled with a slot letter to identify the module slot position and numbers to identify the terminals within the module.

Note:

Make sure that the first letter on the terminal strip corresponds to the slot location identified on the chassis silkscreen.

Due to the possible number of applications, it is not possible to present typical connections for all possible schemes. The information in this section covers the main aspects of interconnectivity, in the general areas of inputs, outputs, communications and grounding. The figure below shows the rear terminal layout of the 8 Series platform.



Power Supply

H - HV Power Supply		L - LV Power Supply	
Terminal	Description	Terminal	Description (DC Voltage input polarity)
1	Line	1	+ve (positive)
2	Neutral	2	-ve (negative)
3	Ground	3	Ground

Communications

Terminals	Order Code : SE-N	Order Code : SE-T	Order Code: 1E/1P/2A/2E/3E/3A - S/C	Order Code : 1E/1P/3E/3A -T	Order Code : 4E/4F - S/C
1	IRIG-B (+)	IRIG-B (+)	IRIG-B (+)	IRIG-B (+)	IRIG-B (+)
2	IRIG-B (-)	IRIG-B (-)	IRIG-B (-)	IRIG-B (-)	IRIG-B (-)
3	RS485_1 (+)	RS485_1 (+)/ RS422_Rx(+)	RS485_1 (+)	RS485_1 (+)	RS485_1 (+)/ RS422_Rx(+)
4	RS485_1 (-)	RS485_1 (-)/ RS422_Rx(-)	RS485_1 (-)	RS485_1 (-)	RS485_1 (-)/ RS422_Rx(-)
5	RS485_1 COM	RS485_1 COM	RS485_1 COM	RS485_1 COM	RS485_1 COM
6	RESERVED	RS422_Tx(+)	RESERVED	RS422_Tx(+)	RS422_Tx(+)
7	RESERVED	RS422_Tx(-)	RESERVED	RS422_Tx(-)	RS422_Tx(-)
8	RMIO shield	COM/shield	RMIO shield	COM/shield	COM/shield
9	RMIO +	RS485_2(+)/RMIO +	RMIO +	RS485_2(+)/RMIO +	RS485_2(+)/RMIO +
10	RMIO -	RS485_2(-)/RMIO -	RMIO -	RS485_2(-)/RMIO -	RS485_2(-)/RMIO -
RJ45 - P1	ETHERNET	ETHERNET	NOT USED	ETHERNET	ETHERNET
RJ45 - P2	NOT USED	ETHERNET	NOT USED	ETHERNET	ETHERNET
RJ45 - P4	N/A	N/A	ETHERNET	N/A	ETHERNET
RJ45 - P5	N/A	N/A	ETHERNET	N/A	ETHERNET

2.13 TERMINAL IDENTIFICATION

Optional I/O Card A, slot F, G, or H				Optional I/O Card M, slot F, G, or H				Optional I/O Card L, slot G			
F/G/H1	NO	TRIP		F/G/H1	COMMON	HSHB 1 (with Vmon)		G1	+	ANALOG OUTPUT 1	
F/G/H2	COMMON			F/G/H2	NO			G2	+	ANALOG OUTPUT 2	
F/G/H3	OPT/V			F/G/H3	RESERVED			G3	+	ANALOG OUTPUT 3	
F/G/H4	NO	CLOSE /AUX		F/G/H4	COMMON	HSHB 2 (with Vmon)		G4	+	ANALOG OUTPUT 4	
F/G/H5	COMMON			F/G/H5	NO			G5	+	ANALOG OUTPUT 5	
F/G/H6	OPT/V			F/G/H6	RESERVED			G6	+	ANALOG OUTPUT 6	
F/G/H7	NC	AUX		F/G/H7	COMMON	HSHB 3 (w/o Vmon)		G7	+	ANALOG OUTPUT 7	
F/G/H8	COMMON			F/G/H8	NO			G8	-	RETURN	
F/G/H9	NO			F/G/H9	RESERVED			G9	-	SHIELD	
F/G/H10	NC	AUX		F/G/H10	COMMON	HSHB 4 (w/o Vmon)		G10	+	ANALOG INPUT 1	
F/G/H11	COMMON			F/G/H11	NO			G11	+	ANALOG INPUT 2	
F/G/H12	NO			F/G/H12	RESERVED			G12	+	ANALOG INPUT 3	
F/G/H13	+	THRESHOLD SETTING GROUP 1		F/G/H13	+	THRESHOLD SETTING GROUP 1		G13	+	ANALOG INPUT 4	
F/G/H14	+			F/G/H14	+			G14	-	RETURN	
F/G/H15	+			F/G/H15	+			G15		SHIELD	
F/G/H16	+			F/G/H16	+			G16	+	OHMS INPUT	
F/G/H17	+			F/G/H17	+			G17	-	OHMS INPUT	
F/G/H18	+			F/G/H18	+			G18		SHIELD	
F/G/H19	+			F/G/H19	+			G19	+	HOT	
F/G/H20	-	AUX*		F/G/H20	-	FORM C CFR*		G20	+	COMP	
F/G/H21	+			F/G/H21	+			G21	-	RETURN	
F/G/H22	NC			F/G/H22	NC			G22	-	SHIELD	
F/G/H23	COMMON			F/G/H23	COM			G23		RESERVED	
F/G/H24	NO			F/G/H24	NO			G24		RESERVED	

Optional I/O Card R or S**, slot B or C				Optional I/O Card F, slot H				Optional I/O Card C, slot B or C				
B1/C1	HOT	RTD 1		H1	+	DIGITAL INPUTS		B/C1	+	THRESHOLD SETTING GROUP 1		
B2/C2	COMP			H2	+			B/C2	+			
B3/C3	RETURN	RTD 1/2		H3	+			B/C3	+			
B4/C4	HOT			H4	+			B/C4	+			
B5/C5	COMP	RTD 2		H5	+			B/C5	+			
B6/C6	HOT			H6	+			B/C6	-			
B7/C7	COMP	RTD 3		H7	+			B/C7	+	THRESHOLD SETTING GROUP 2		
B8/C8	RETURN			H8	+			B/C8	+			
B9/C9	SHIELD	RTD 3/4		H9	+			B/C9	+			
B10/C10	HOT			H10	+			B/C10	+			
B11/C11	COMP	RTD 4		H11	-			B/C11	+			
B12/C12	HOT			H12	+			B/C12	-			
B13/C13	COMP	RTD 5		CH1	FIBER INPUT 1	DIGITAL INPUTS		B/C13	+	THRESHOLD SETTING GROUP 3		
B14/C14	RETURN			CH2	FIBER INPUT 2			B/C14	+			
B15/C15	HOT	RTD 6		CH3	FIBER INPUT 3			B/C15	+			
B16/C16	COMP			CH4	FIBER INPUT 4			B/C16	+			
B17/C17	SHIELD	RTD 6						B/C17	+			
B18/C18	RESERVED							B/C18	-			


NOTES:

- Digital Input/Output numbering is sequential starting with Slot F.
- RTD numbering is sequential starting with Slot B.
- * This output is the Critical Fail Relay (CFR) when used in Slot F only
- ** Card S also supports 10 Ohm Copper RTD

894213C1.CDR

Figure 42: Optional I/O card terminal mappings

Figure 43:

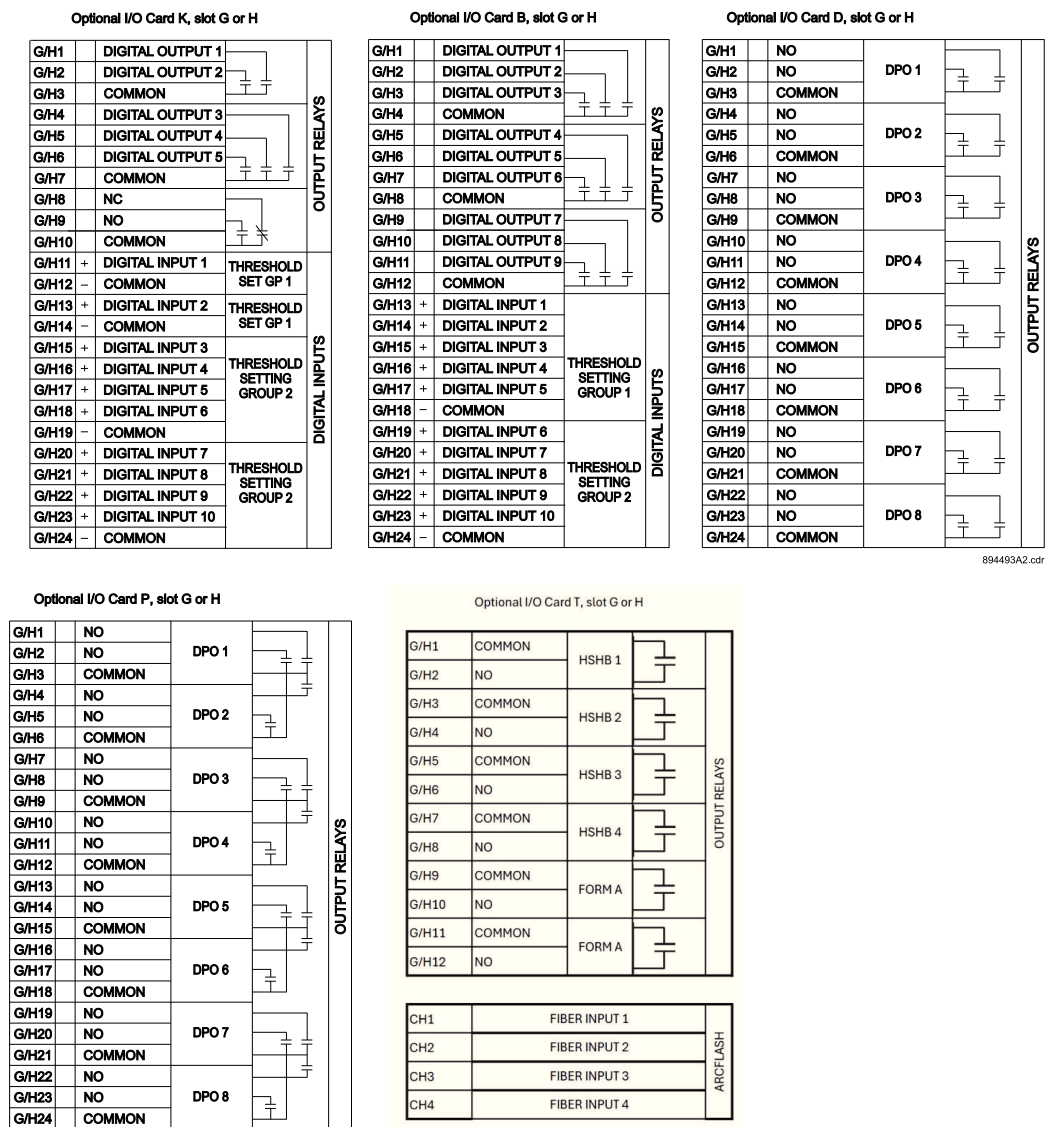

894493A2.cdr

Figure 44: Optional I/O card terminal mappings cont.

AC Analog, Slot J (2W/3W with VTs)

AC Inputs - 1 X 3-Phase 1/5A CT, 4 VT	
Terminal	Description
1	CT1 PhA
2	CT1 PhA RETURN
3	CT1 PhB
4	CT1 PhB RETURN
5	CT1 PhC
6	CT1 PhC RETURN
7	CT1 N/G
8	CT1 N/G RETURN
9	VT1A IN
10	VT1A RETURN
11	VT1B IN
12	VT1B RETURN
13	VT1C IN
14	VT1C RETURN
15	VT1N IN
16	VT1N RETURN

AC Analog, Slot K

AC Inputs - 2 X 3-Phase 1/5A CT	
Terminal	Description
1	CT2 PhA
2	CT2 PhA RETURN
3	CT2 PhB
4	CT2 PhB RETURN
5	CT2 PhC
6	CT2 PhC RETURN
7	CT2 N/G
8	CT2 N/G RETURN
9	CT3 PhA
10	CT3 PhA RETURN
11	CT3 PhB
12	CT3 PhB RETURN
13	CT3 PhC
14	CT3 PhC RETURN
15	CT3 N/G
16	CT3 N/G RETURN


2.14 RMIO MODULE INSTALLATION

The optional remote module (RMIO) is designed to be mounted near the load to be monitored. This eliminates the need for multiple RTD cables to run back from the installation, which may be in a remote location, to the switchgear.

Although the RMIO is internally shielded to minimize noise pickup and interference, it should be mounted away from high current conductors or sources of strong magnetic fields.



Figure 45: RMIO unit showing 2 IO_G modules

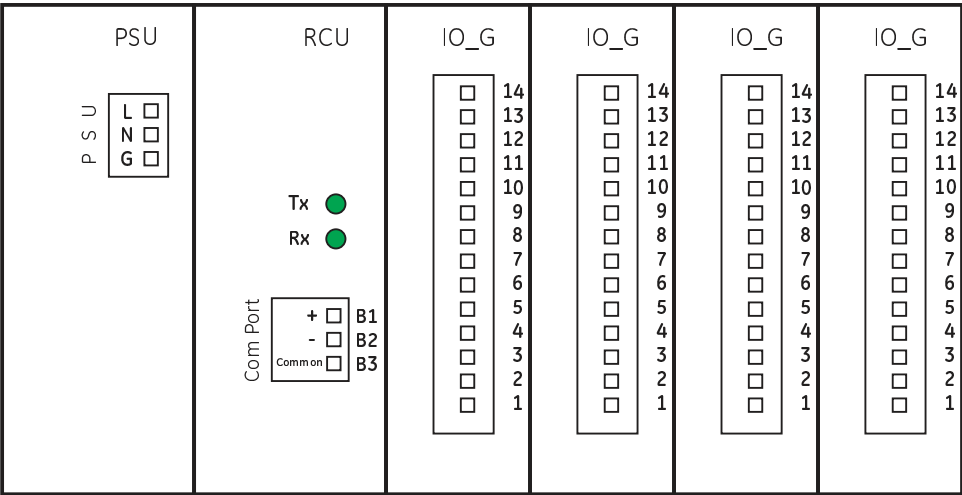

896750.cdr

Figure 46: RMIO terminal identification with 4 IO_G modules

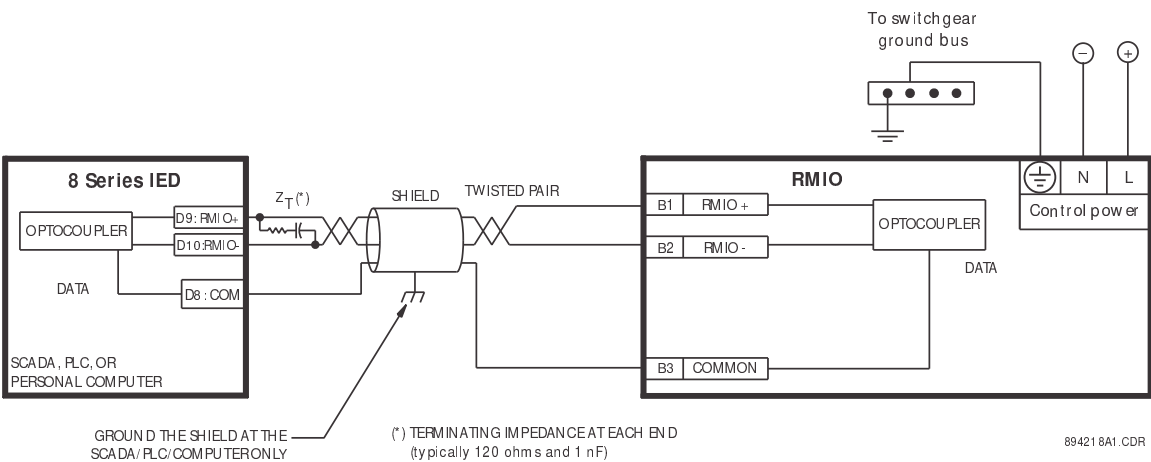


Figure 47: RMIO wiring diagram

2.15 PHASE SEQUENCE AND TRANSFORMER POLARITY

For correct operation of the relay features, follow the instrument transformer polarities, shown in the wiring diagrams. Note the solid square markings that are shown with all instrument transformer connections. When the connections adhere to the drawing, the arrow shows the direction of power flow for positive watts and the positive direction of lagging vars. The phase sequence is user programmable for either ABC or ACB rotation.

Depending on order code, the relay can have up to four (4) current inputs in each J slot and K slot. Three of them are used for connecting to the phase CT phases A, B, and C. The fourth input is a ground input that can be connected to either a ground CT placed on the neutral from a Wye connected transformer winding, or to a donut type CT measuring the zero sequence current from a grounded system. The relay CTs are placed in a packet mounted to the chassis of the relay. There are no internal ground connections on the current inputs. Current transformers with 1 to 12000 A primaries may be used.

**Caution:**

Verify that the relay's nominal input current of 1 A or 5 A matches the secondary rating of the connected CTs. Unmatched CTs may result in equipment damage or inadequate protection.

Caution:

IMPORTANT: The phase and ground current inputs correctly measure up to 46 times the current input's nominal rating. Time overcurrent curves become horizontal lines for currents above $20 \times \text{PKP}$.


Note:

The phase CTs should be chosen so the FLA is no less than 20% of the rated phase CT primary. Ideally, the phase CT primary should be chosen such that the FLA is 100% of the phase CT primary or slightly less, never more. This will ensure maximum accuracy for the current measurements.

2.16 GROUND CT INPUTS

Before making ground connections, be aware that the relay automatically calculates the neutral (residual) current from the sum of the three phase current phasors. The following figures show three possible ground connections using the ground current input (Terminals J7 and J8).

The ground input (Terminals J7 and J8) is used in conjunction with a Zero Sequence CT as source, or in the neutral of wye-connected source CTs. The ground current input can be used to polarize the neutral. When using the residual connection, set the **GROUND CT PRIMARY** setpoint to a value equal to the **PHASE CT PRIMARY** setpoint.

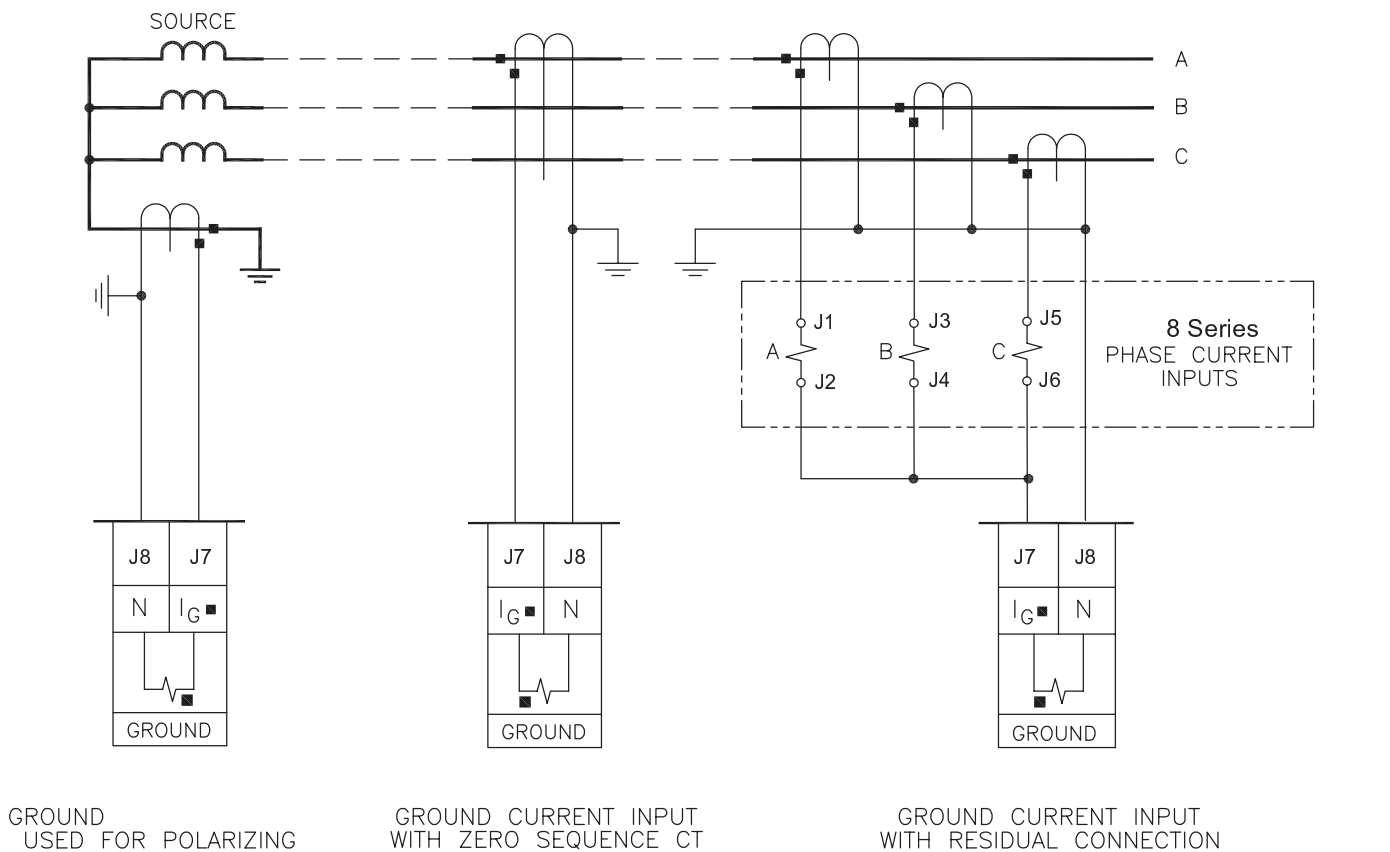

892773A2.cdr

Figure 48: Ground Inputs

2.17 ZERO-SEQUENCE CT INSTALLATION

The figure below shows the various CT connections and the exact placement of a Zero Sequence current CT, so that ground fault current can be detected. Twisted pair cabling on the Zero Sequence CT is recommended.


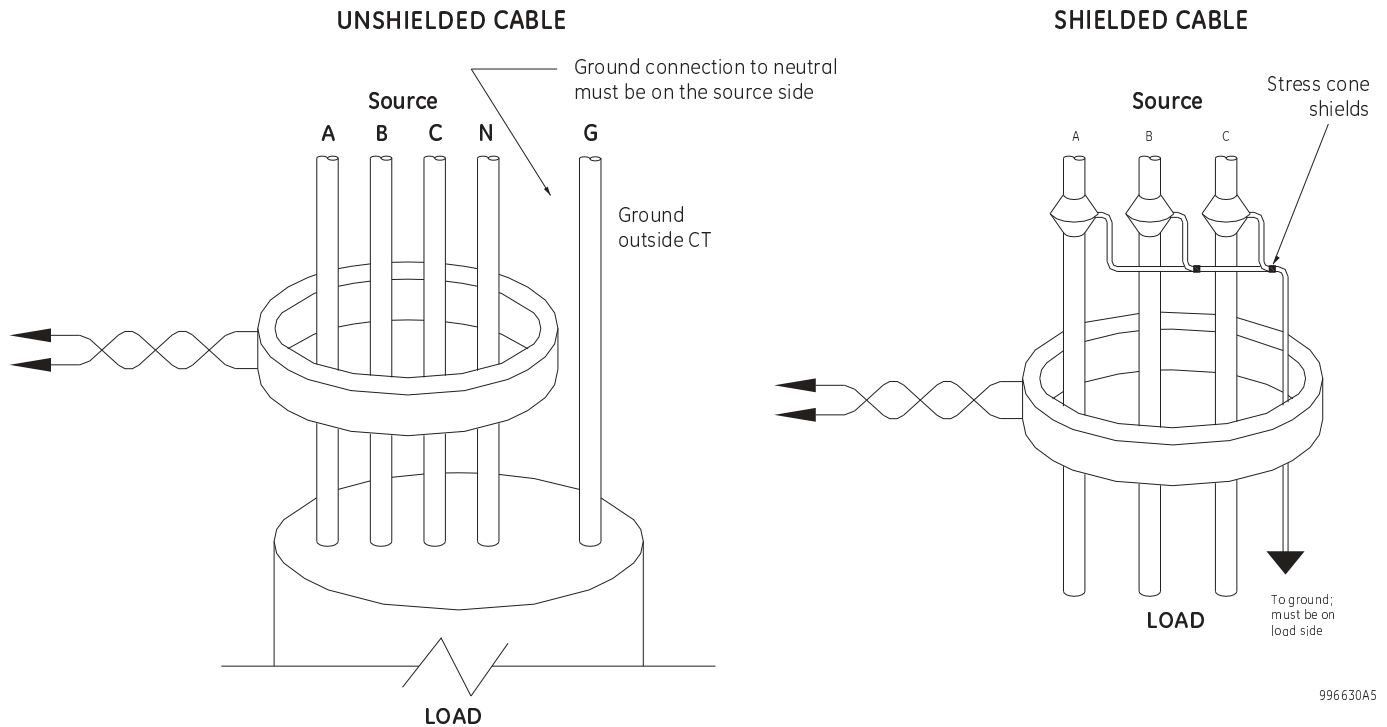


Figure 49: Zero Sequence (Core Balance) CT Installation

2.18 VOLTAGE INPUTS

The relays have four channels for AC voltage inputs, each with an isolating transformer in each J and K slot. Voltage transformers up to a maximum 5000:1 ratio may be used. The nominal secondary voltage must be in the 10 to 240 V range.

The Bus VT connections most commonly used, wye and delta (or open delta), are shown in the typical wiring diagram. The single Auxiliary voltage input is commonly used as the line voltage. For LEA inputs, the line voltage connection is line to neutral voltages. The line VT input channel, used for the synchrocheck feature, can be connected for phase-neutral voltages V_{an} , V_{bn} , or V_{cn} ; or for phase-phase voltages V_{ab} , V_{bc} , or V_{ca} as shown.

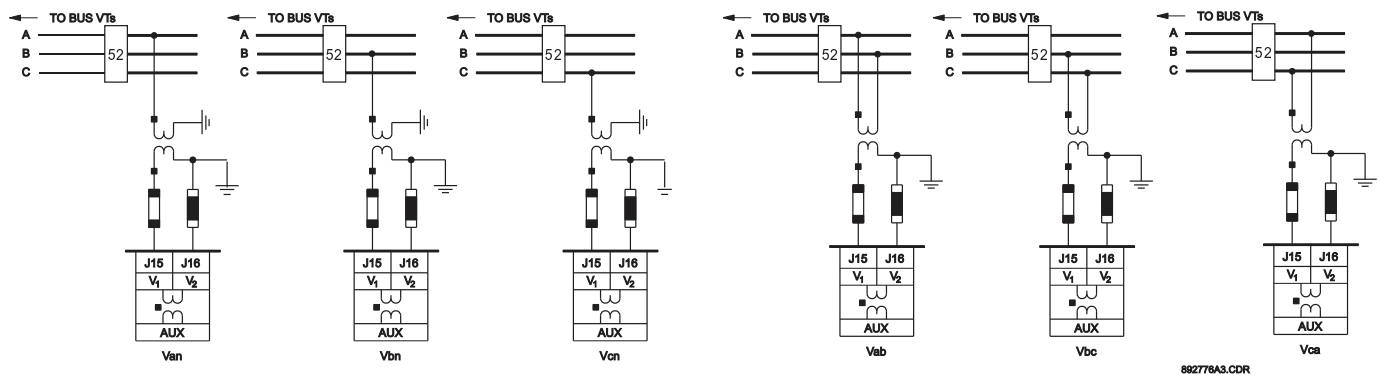

882776A3.CDR

Figure 50: Line VT Connections



Caution:

If Delta VTs are used for three-phase voltages, the zero sequence voltage (V0) and neutral ground polarizing voltage ($-V_0$) are zero. Also, with the Delta VT connection, the phase-neutral voltage cannot be measured and is not displayed.

2.19 RTD SENSOR CONNECTIONS

The relay monitors up to 12 or 13 RTD inputs (depending on model) for Stator, Bearing, Ambient, or other temperature monitoring. The type of each RTD is field programmable as 100 ohms Platinum, 100 ohms Nickel, 120 ohms Nickel, or 10 ohms Copper. RTDs must be three wire type. Every two RTDs shares a common return. The RTD circuitry compensates for lead resistance, provided that each of the three leads is the same length. Lead resistance should not exceed 25 ohms per lead for platinum/nickel RTDs or 3 ohms per lead for copper RTDs. Shielded cable should be used to prevent noise pickup in the industrial environment. RTD cables should be kept close to grounded metal casings and away from areas of high electromagnetic or radio interference. RTD leads should not be run adjacent to or in the same conduit as high current carrying wires.

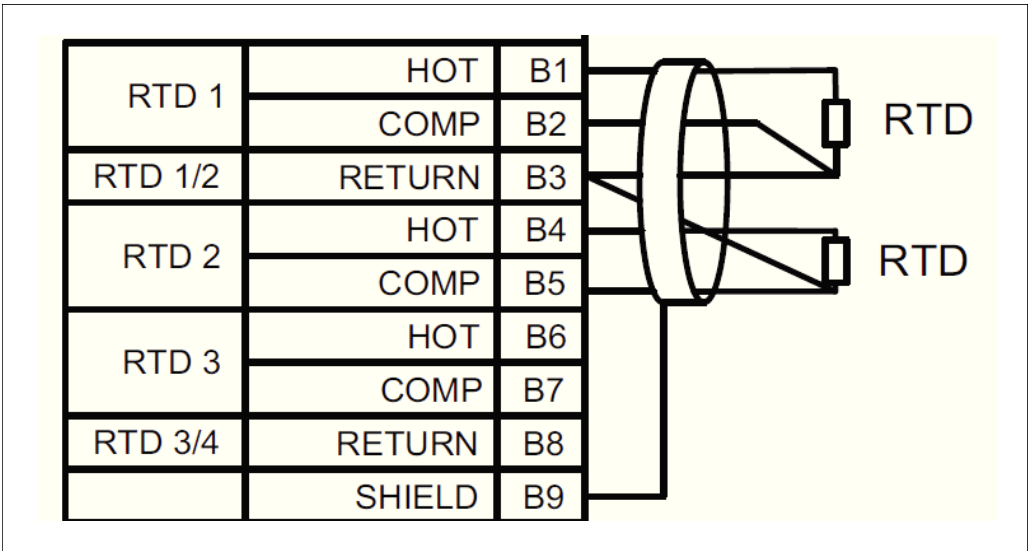


Figure 51: RTD Wiring

The relay requires three leads to be brought back from each RTD: Hot, Return and Compensation. In case when it is not possible to connect or bring all three RTD leads to the relay terminals, it is possible to reduce the number of leads required to 3 for the first RTD and 1 for each successive RTD. Refer to the figure below for wiring configuration for this application

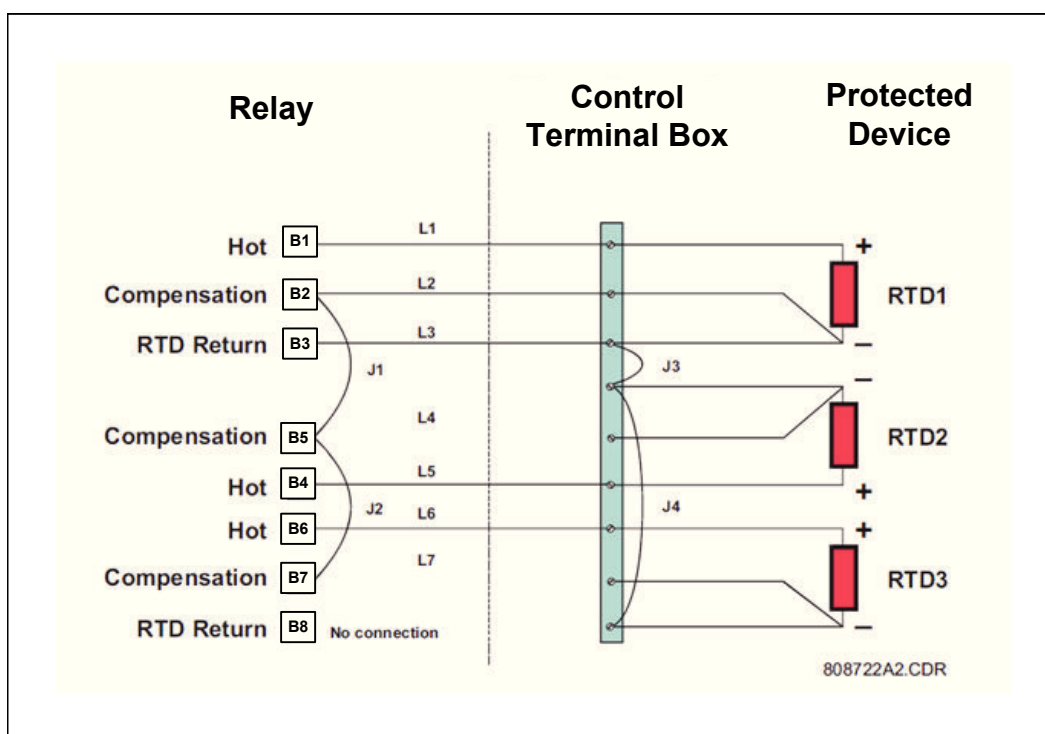


Figure 52: Reduced Wiring RTDs

The Hot line would have to be run as usual for each RTD. The Compensation and Return leads, however, need only be run for the first RTD. At the motor RTD terminal box, the RTD

Return leads must be connected together with jumpers that are as short as possible. The Compensation leads must be connected together with jumpers at the relay. Note that an error is produced on each RTD equal to the voltage drop across the jumper on the RTD return. This error increases with each successive RTD added.

$$VRTD1 = VRTD1$$

$$VRTD2 = VRTD2 + VJ3$$

$$VRTD3 = VRTD3 + VJ3 + VJ4, \text{ etc.}$$

This error is directly dependent on the length and gauge of the wire used for the jumpers and any error introduced by a poor connection. For RTD types other than 10 ohm Copper, the error introduced by the jumpers is negligible. Although this RTD wiring technique reduces the cost of wiring, the following disadvantages must be noted:

1. There will be an error in temperature readings due to lead and connection resistances. This technique is NOT recommended for 10 ohm Copper RTDs.
2. If the RTD Return lead or any of the jumpers break, all RTDs from the point of the break will read open.
3. If the Compensation lead or any of the jumpers break, all RTDs from the point of the break will function without any lead compensation.

Two-Wire RTD Lead Compensation

An example of how to add lead compensation to a two wire RTD may is shown in the figure below.

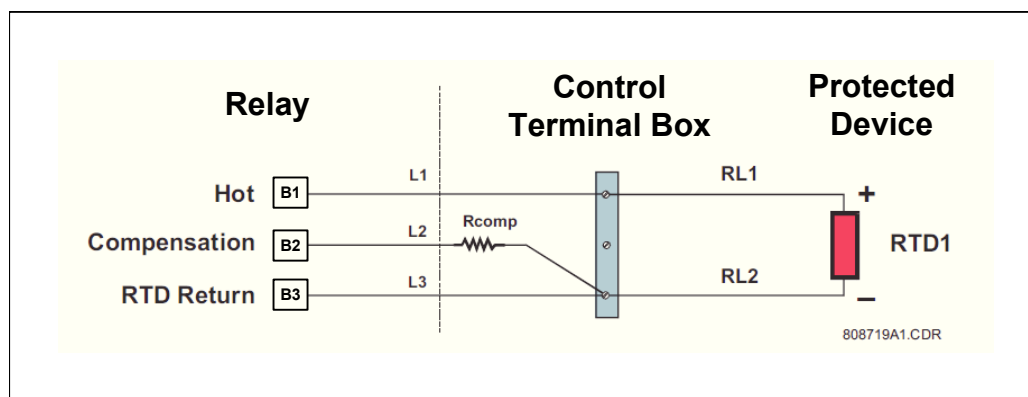


Figure 53: Two-Wire RTD Lead Compensation

The compensation lead L2 is added to compensate for Hot (L1) and Return (L3), assuming they are all of equal length and gauge. To compensate for leads RL1 and RL2, a resistor equal to the resistance of RL1 or RL2 could be added to the compensation lead, though in many cases this is unnecessary.

RTD Grounding

Grounding of one lead of the RTDs is done at either the 869 or at the motor. Grounding should not be done in both places as it could cause a circulating current. Only RTD Return leads may be grounded. When grounding at the relay only one Return lead need be grounded as they are hard-wired together internally. No error is introduced into the RTD reading by grounding in this manner.

If the RTD Return leads are tied together and grounded at the motor, only one RTD Return lead can be run back to the relay. Running more than one RTD Return lead to the relay causes significant errors as two or more parallel paths for the return current have been created. Use of this wiring scheme causes errors in readings equivalent to that in the Reduced RTD Lead Number application described earlier.

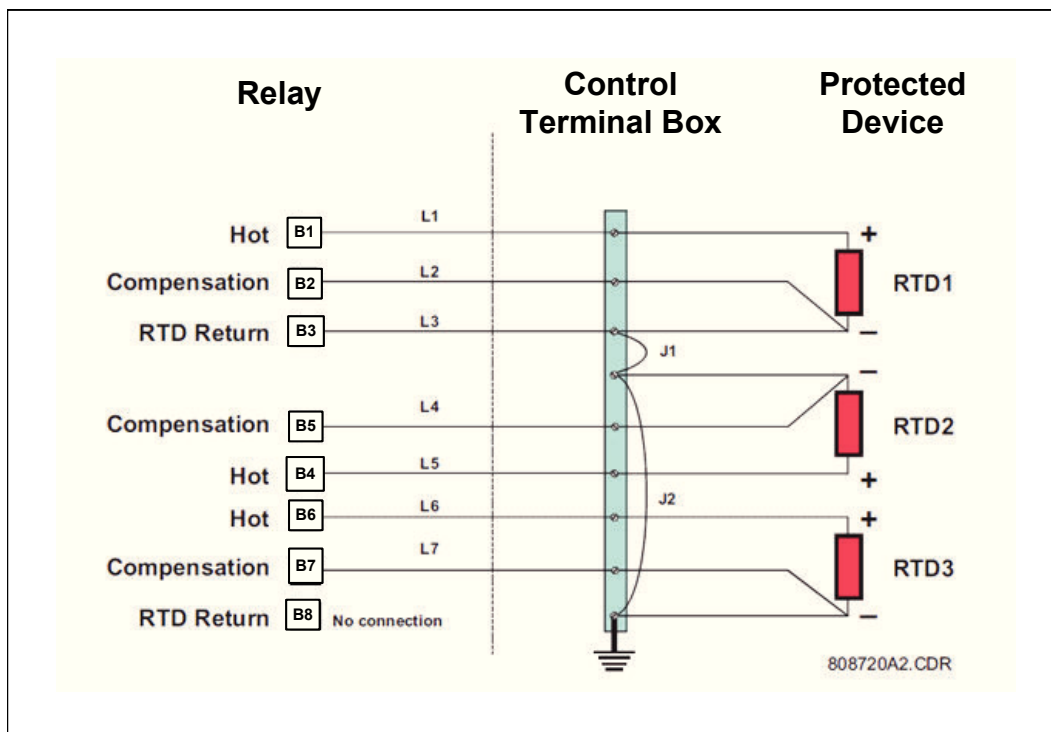


Figure 54: RTD Alternate Grounding

2.20 RESTRICTED GROUND FAULT INPUTS

Restricted Ground Fault protection, (also referred to as Restricted Earth Fault protection), is often applied to transformers having grounded Wye windings to provide ground fault detection for faults near the transformer neutral. Each current bank on the relay has 3 phase current inputs and one ground input. Any of the available inputs on the relay current banks can be selected as a signal input for an RGF element.

The phase and ground input CT connections to the relay are shown below:

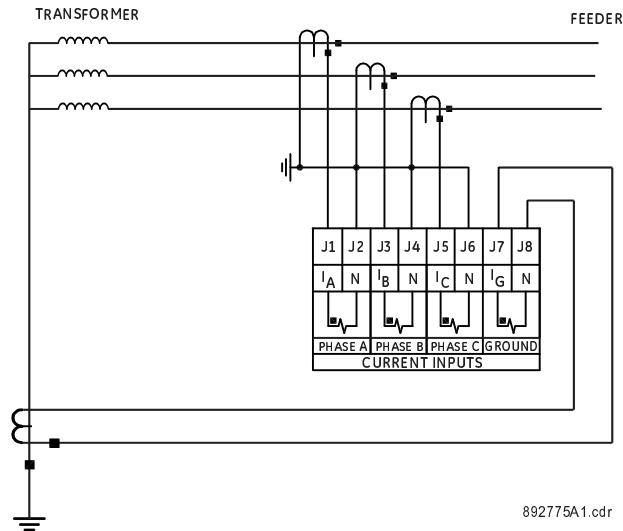


Figure 55: Restricted Ground Fault Inputs

2.21 CONTROL POWER

Control power is supplied to the relay such that it matches the relay's installed power supply range.



Caution:

Control power supplied to the relay must match the installed power supply range. If the applied voltage does not match, damage to the unit may occur. All grounds **MUST** be connected for normal operation regardless of control power supply type.

For more details, please refer to the power supply section.



Caution:

The relay should be connected directly to the ground bus, using the shortest practical path. A tinned copper, braided, shielding and bonding cable should be used. As a minimum, 96 strands of number 34 AWG should be used. Belden catalog number 8660 is suitable.

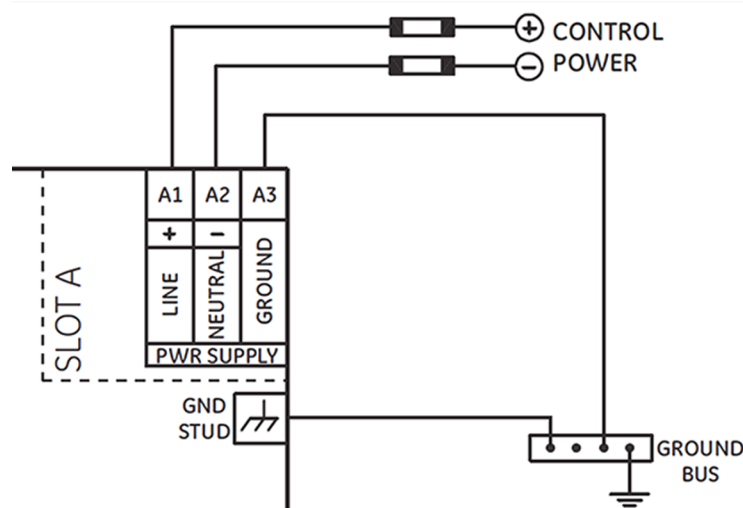


Figure 56: Control Power Connection

2.22 CONTACT INPUTS

Depending on the order code, the relay has a different number of contact inputs which can be used to operate a variety of logic functions for circuit switching device control, external trips, blocking of protection elements, etc. The relay has contact inputs and virtual inputs that are combined in a form of programmable logic to facilitate the implementation of various schemes.

The voltage threshold at which the contact inputs detect a closed contact input is programmable as 17 V DC for 24 V sources, 33 V DC for 48 V sources, 84 V DC for 110 to 125 V sources, and 166 V DC for 250 V sources.

Wet or Dry input signal types can be connected to contact input terminals as shown in the figure: Wet and Dry Contact Input Wiring Examples.

Dry inputs use an internal +24V supply. The voltage threshold must be set to 17V for the inputs to be recognized using the internal +24V.

Note:

The same type of input signal must be connected to all contact inputs on the same contact input card.

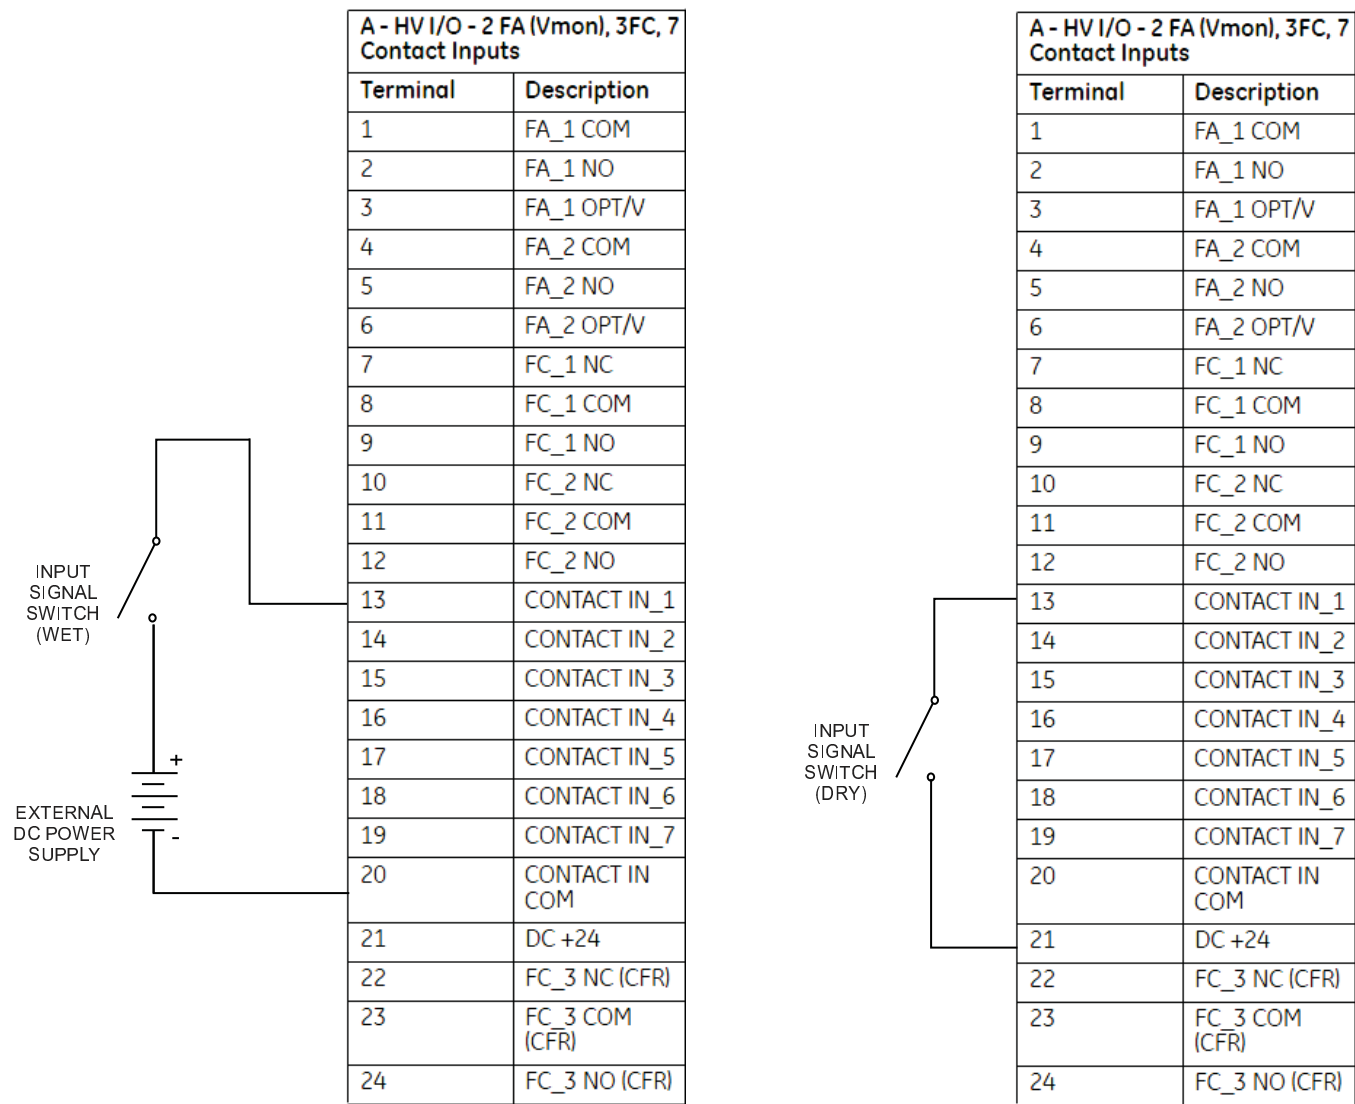


Figure 57: Wet and Dry Contact Input Wiring Examples

2.23 OUTPUT RELAYS

The locations of the output relays have a fixed assignment for the platform called the master identifier. I/O options that include inputs occupy the fixed assigned output locations so in these cases the relay assignment maps to the master identifier.

The output relays for the 8 Series relay are fully programmable, and can be assigned in the transformer breakers menu for breaker tripping or closing. The output relays assigned for breaker closing, are automatically excluded from the menus for output selection for the rest of the elements.

The critical failure output relay is reserved as Relay_8 and it is omitted and is not programmable.

Slots F, G, H Terminal Master Identifier				Slots F,G,H with I/O options A, A, A			
Terminal#	SLOT F	SLOT G	SLOT H	Terminal#	SLOT F	SLOT G	SLOT H
1	RELAY_1	RELAY_9	RELAY_17	1	RELAY_1	RELAY_9	RELAY_17
2	RELAY_1	RELAY_9	RELAY_17	2	RELAY_1	RELAY_9	RELAY_17
3	RELAY_1	RELAY_9	RELAY_17	3	RELAY_1	RELAY_9	RELAY_17
4	RELAY_2	RELAY_10	RELAY_18	4	RELAY_2	RELAY_10	RELAY_18
5	RELAY_2	RELAY_10	RELAY_18	5	RELAY_2	RELAY_10	RELAY_18
6	RELAY_2	RELAY_10	RELAY_18	6	RELAY_2	RELAY_10	RELAY_18
7	RELAY_3	RELAY_11	RELAY_19	7	RELAY_3	RELAY_11	RELAY_19
8	RELAY_3	RELAY_11	RELAY_19	8	RELAY_3	RELAY_11	RELAY_19
9	RELAY_3	RELAY_11	RELAY_19	9	RELAY_3	RELAY_11	RELAY_19
10	RELAY_4	RELAY_12	RELAY_20	10	RELAY_4	RELAY_12	RELAY_20
11	RELAY_4	RELAY_12	RELAY_20	11	RELAY_4	RELAY_12	RELAY_20
12	RELAY_4	RELAY_12	RELAY_20	12	RELAY_4	RELAY_12	RELAY_20
13	RELAY_5	RELAY_13	RELAY_21	13	Digital In_1	Digital In_8	Digital In_15
14	RELAY_5	RELAY_13	RELAY_21	14	Digital In_2	Digital In_9	Digital In_16
15	RELAY_5	RELAY_13	RELAY_21	15	Digital In_3	Digital In_10	Digital In_17
16	RELAY_6	RELAY_14	RELAY_22	16	Digital In_4	Digital In_11	Digital In_18
17	RELAY_6	RELAY_14	RELAY_22	17	Digital In_5	Digital In_12	Digital In_19
18	RELAY_6	RELAY_14	RELAY_22	18	Digital In_6	Digital In_13	Digital In_20
19	RELAY_7	RELAY_15	RELAY_23	19	Digital In_7	Digital In_14	Digital In_21
20	RELAY_7	RELAY_15	RELAY_23	20	Common	Common	Common
21	RELAY_7	RELAY_15	RELAY_23	21	+24V	+24V	+24V
22	RELAY_8	RELAY_16	RELAY_24	22	RELAY_8	RELAY_16	RELAY_24
23	RELAY_8	RELAY_16	RELAY_24	23	RELAY_8	RELAY_16	RELAY_24
24	RELAY_8	RELAY_16	RELAY_24	24	RELAY_8	RELAY_16	RELAY_24

Slots F, G, H with I/O options M, L, F					Slots F,G,H with I/O options A, L, A			
Terminal#	SLOT F	SLOT G	SLOT H		Terminal#	SLOT F	SLOT G	SLOT H
1	RELAY_1	Analog Out_1	Digital In_8		1	RELAY_1	Analog Out_1	RELAY_9
2	RELAY_1	Analog Out_2	Digital In_9		2	RELAY_1	Analog Out_2	RELAY_9
3	Reserved	Analog Out_3	Digital In_10		3	RELAY_1	Analog Out_3	RELAY_9
4	RELAY_2	Analog Out_4	Digital In_11		4	RELAY_2	Analog Out_4	RELAY_10
5	RELAY_2	Analog Out_5	Digital In_12		5	RELAY_2	Analog Out_5	RELAY_10
6	Reserved	Analog Out_6	Digital In_13		6	RELAY_2	Analog Out_6	RELAY_10
7	RELAY_3	Analog Out_7	Digital In_14		7	RELAY_3	Analog Out_7	RELAY_11
8	RELAY_3	Return	Digital In_15		8	RELAY_3	Return	RELAY_11
9	Reserved	Shield	Digital In_16		9	RELAY_3	Shield	RELAY_11
10	RELAY_4	Analog In_1	Digital In_17		10	RELAY_4	Analog In_1	RELAY_12
11	RELAY_4	Analog In_2	Common		11	RELAY_4	Analog In_2	RELAY_12
12	Reserved	Analog In_3	+24V		12	RELAY_4	Analog In_3	RELAY_12
13	Digital In_1	Analog In_4	ARC FLASH Sensor 1 Sensor 2 Sensor 3 Sensor 4		13	Digital In_1	Analog In_4	Digital In_8
14	Digital In_2	Return			14	Digital In_2	Return	Digital In_9
15	Digital In_3	Shield			15	Digital In_3	Shield	Digital In_10
16	Digital In_4	Ohms Input +			16	Digital In_4	Ohms Input +	Digital In_11
17	Digital In_5	Ohms Input -			17	Digital In_5	Ohms Input -	Digital In_12
18	Digital In_6	Shield			18	Digital In_6	Shield	Digital In_13
19	Digital In_7	RTD_Hot			19	Digital In_7	RTD_Hot	Digital In_14
20	Common	RTD_Comp			20	Common	RTD_Comp	Common
21	+24V	RTD_Return			21	+24V	RTD_Return	+24V
22	RELAY_8	Shield			22	RELAY_8	Shield	RELAY_16
23	RELAY_8	Reserved			23	RELAY_8	Reserved	RELAY_16
24	RELAY_8	Reserved			24	RELAY_8	Reserved	RELAY_16

Slots F,G,H with I/O options A, A, F					Slots F, G, H with I/O options A, N, F		
Terminal #	SLOT F	SLOT G	SLOT H		Terminal #	SLOT F	SLOT H
1	RELAY_1	RELAY_9	Digital In_15		1	RELAY_1	Digital In_8
2	RELAY_1	RELAY_9	Digital In_16		2	RELAY_1	Digital In_9
3	RELAY_1	RELAY_9	Digital In_17		3	RELAY_1	Digital In_10
4	RELAY_2	RELAY_10	Digital In_18		4	RELAY_2	Digital In_11
5	RELAY_2	RELAY_10	Digital In_19		5	RELAY_2	Digital In_12
6	RELAY_2	RELAY_10	Digital In_20		6	RELAY_2	Digital In_13
7	RELAY_3	RELAY_11	Digital In_21		7	RELAY_3	Digital In_14
8	RELAY_3	RELAY_11	Digital In_22		8	RELAY_3	Digital In_15
9	RELAY_3	RELAY_11	Digital In_23		9	RELAY_3	Digital In_16
10	RELAY_4	RELAY_12	Digital In_24		10	RELAY_4	Digital In_17

Slots F,G,H with I/O options A, A, F					Slots F, G, H with I/O options A, N, F		
Terminal #	SLOT F	SLOT G	SLOT H		Terminal #	SLOT F	SLOT H
11	RELAY_4	RELAY_12	Common		11	RELAY_4	Common
12	RELAY_4	RELAY_12	+24V		12	RELAY_4	+24V
13	Digital In_1	Digital In_8	ARC FLASH Sensor 1 Sensor 2 Sensor 3 Sensor 4		13	Digital In_1	ARC FLASH Sensor 1 Sensor 2 Sensor 3 Sensor 4
14	Digital In_2	Digital In_9			14	Digital In_2	
15	Digital In_3	Digital In_10			15	Digital In_3	
16	Digital In_4	Digital In_11			16	Digital In_4	
17	Digital In_5	Digital In_12			17	Digital In_5	
18	Digital In_6	Digital In_13			18	Digital In_6	
19	Digital In_7	Digital In_14			19	Digital In_7	
20	Common	Common			20	Common	
21	+24V	+24V			21	+24V	
22	RELAY_8	RELAY_16			22	RELAY_8	
23	RELAY_8	RELAY_16			23	RELAY_8	
24	RELAY_8	RELAY_16			24	RELAY_8	

2.24 SERIAL COMMUNICATIONS

One two-wire RS485 port is provided. Up to thirty-two relays can be daisy-chained together on a communication channel without exceeding the driver capability. For larger systems, additional serial channels must be added. Commercially available repeaters can also be used to add more than 32 relays on a single channel. Suitable cable should have a characteristic impedance of 120 ohms and total wire length should not exceed 1,200 meters (4,000 ft).

Voltage differences between remote ends of the communication link are not uncommon. For this reason, surge protection devices are internally installed across all RS485 terminals. Internally, an isolated power supply with an opto-coupled data interface is used to prevent noise coupling.

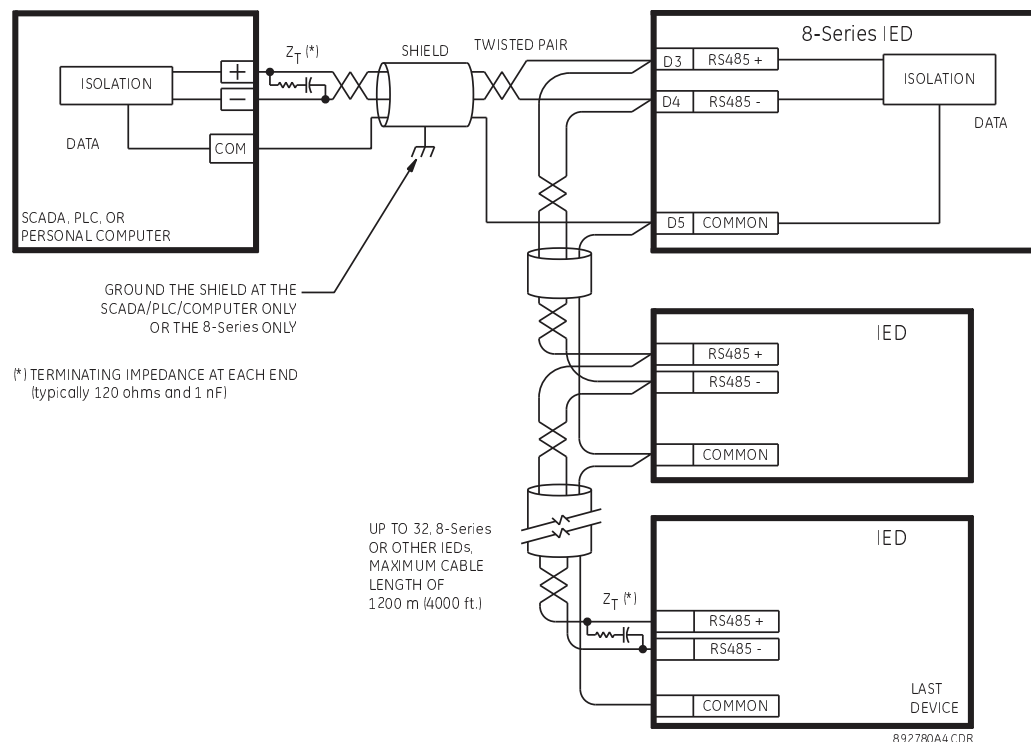


Figure 58: RS485 wiring diagram



Caution:

To ensure that all devices in a daisy-chain are at the same potential, it is imperative that the common terminals of each RS485 port are tied together and grounded at the master end. Failure to do so may result in intermittent or failed communications.

The source computer/PLC/SCADA system should have similar transient protection devices installed, either internally or externally. Ground the shield at one point only, as shown in the figure above, to avoid ground loops. Correct polarity is also essential. The relays must be wired with all the positive (+) terminals connected together and all the negative (–) terminals connected together. Each relay must be daisy-chained to the next one. Avoid star or stub connected configurations. The last device at each end of the daisy-chain should be terminated with a 120 ohm ¼ watt resistor in series with a 1 nF capacitor across the positive and negative terminals. Some systems allow the shield (drain wire) to be used as a common wire and to connect directly to the COM terminal; others function correctly only if the common wire is connected to the COM terminal, but insulated from the shield. Observing these guidelines ensure a reliable communication system immune to system transients.

2.25 IRIG-B

IRIG-B is a standard time code format that allows time stamping of events to be synchronized among connected devices within 1 millisecond. The IRIG-B time code formats are serial, width-modulated codes which can be either DC level shift or amplitude modulated (AM) form. The type of form is auto-detected by the relay. Third party equipment is available for generating the IRIG-B signal; this equipment may use a GPS satellite system to obtain the time reference so that devices at different geographic locations can also be synchronized.

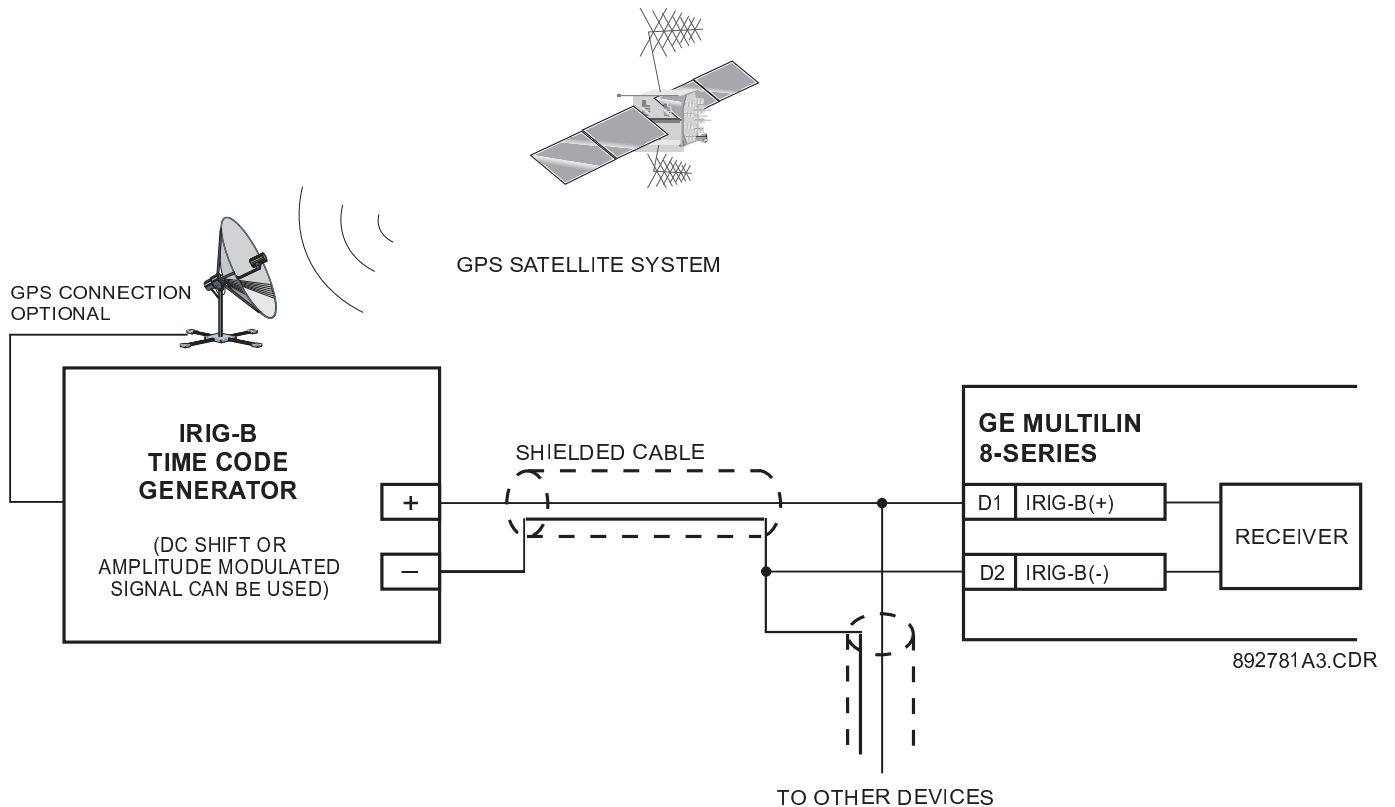
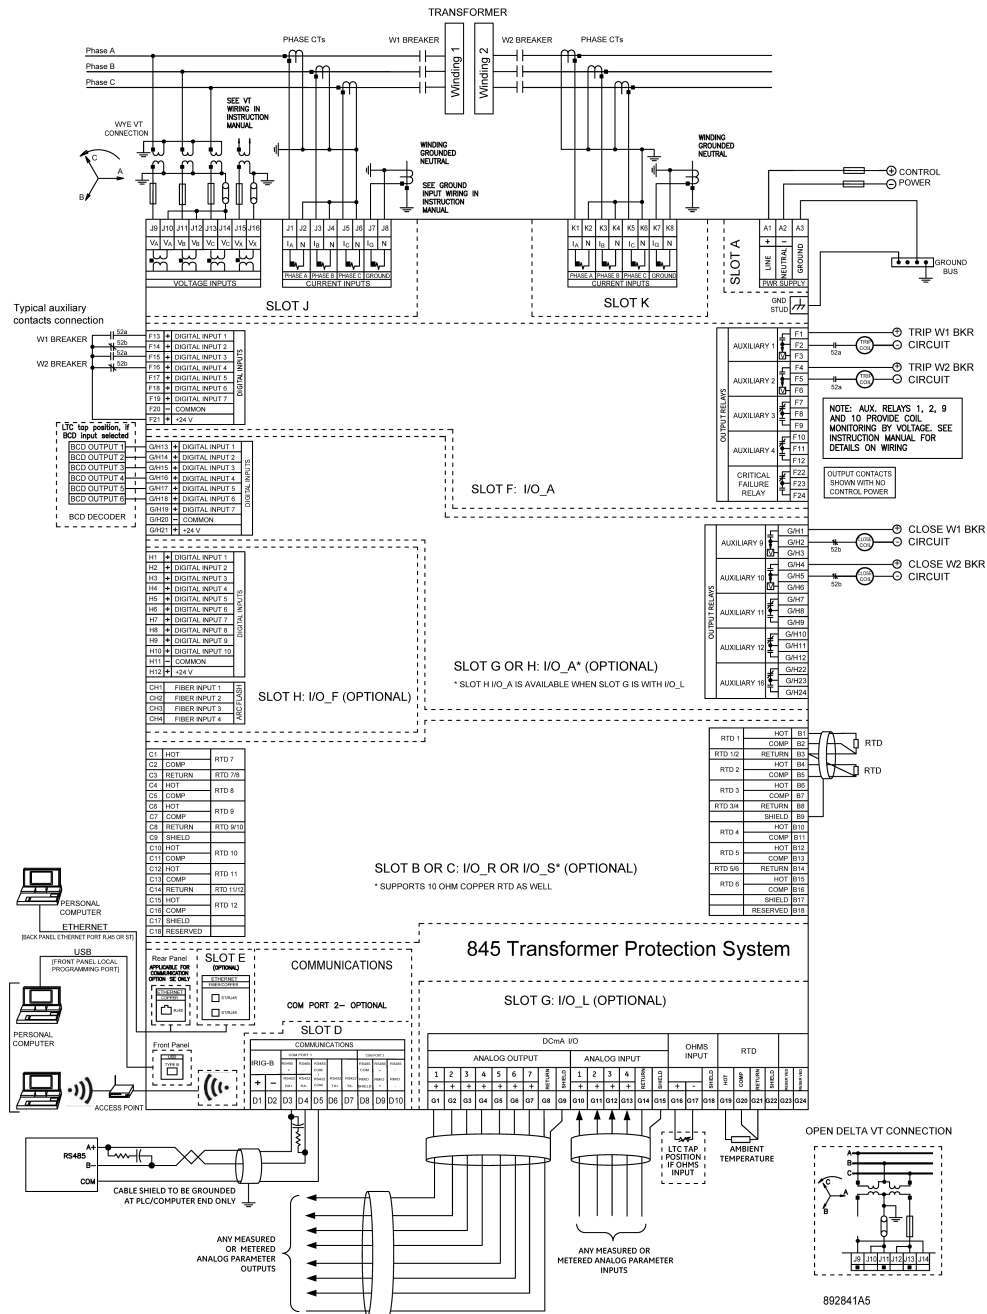


Figure 59: IRIG-B connection

2.26 TYPICAL WIRING DIAGRAMS

The following illustrates the electrical wiring of the Draw out unit.



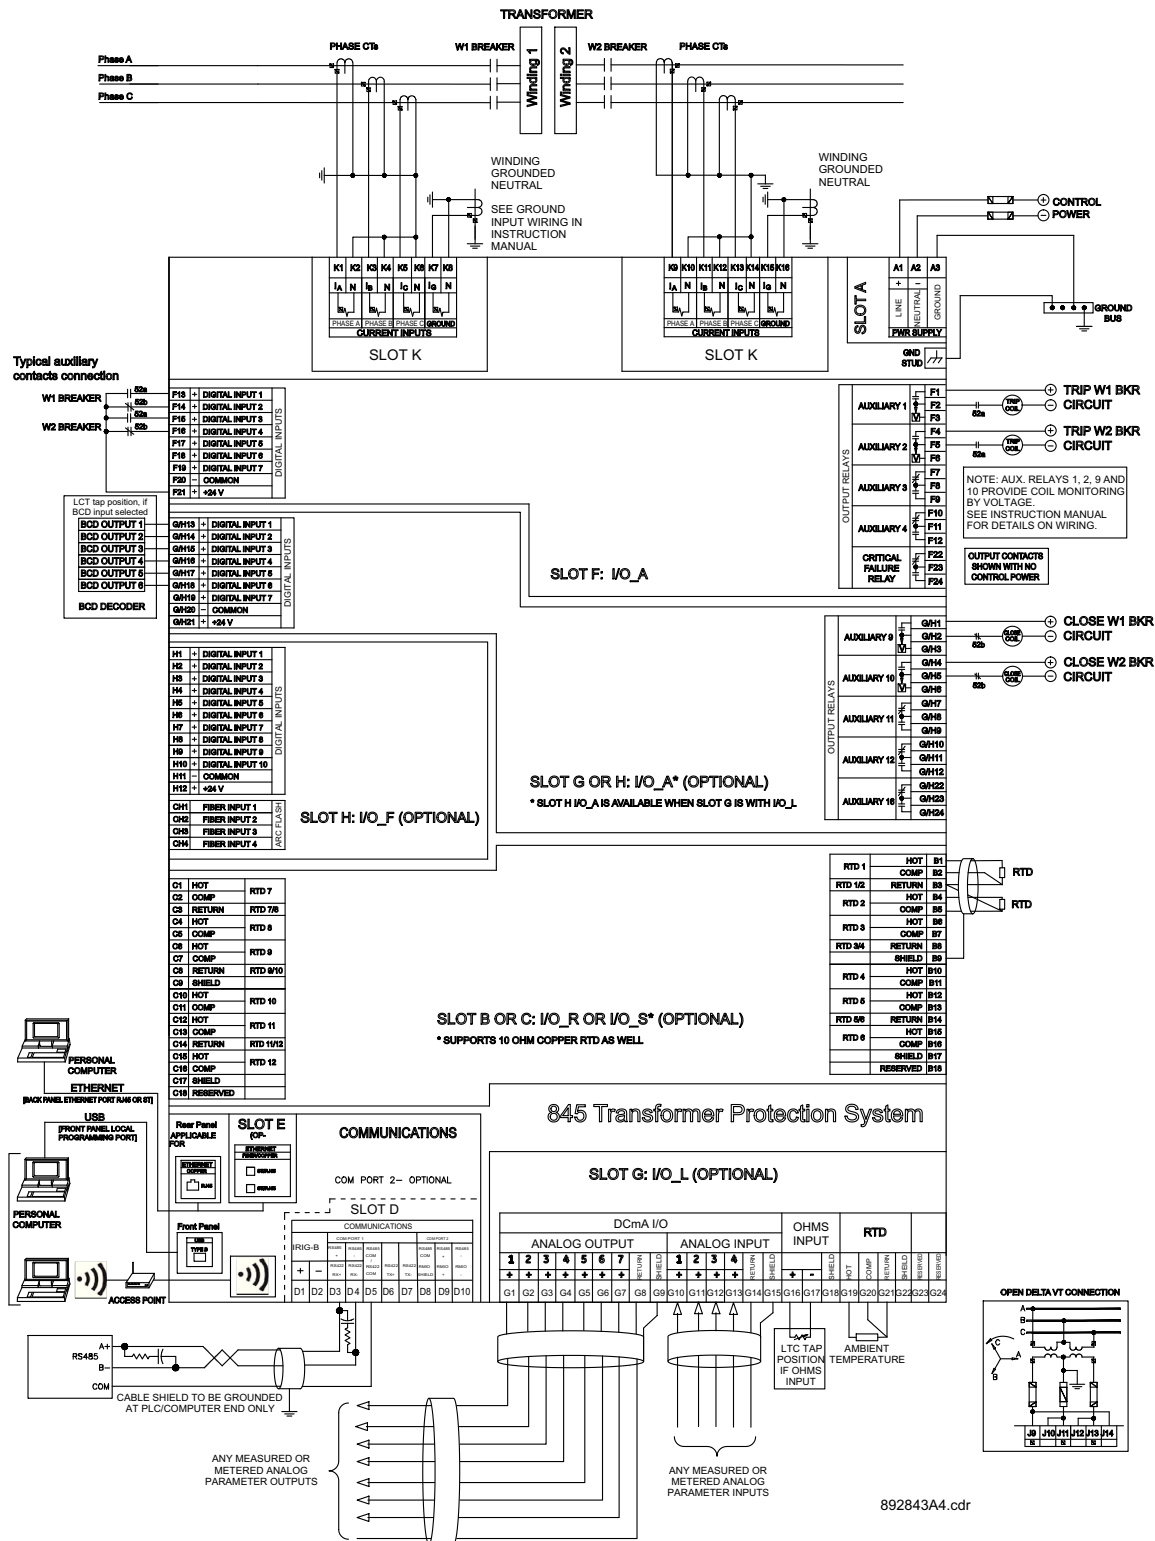


Figure 61: Typical Wiring for a 2-Winding Transformer without VTs (892843A4)

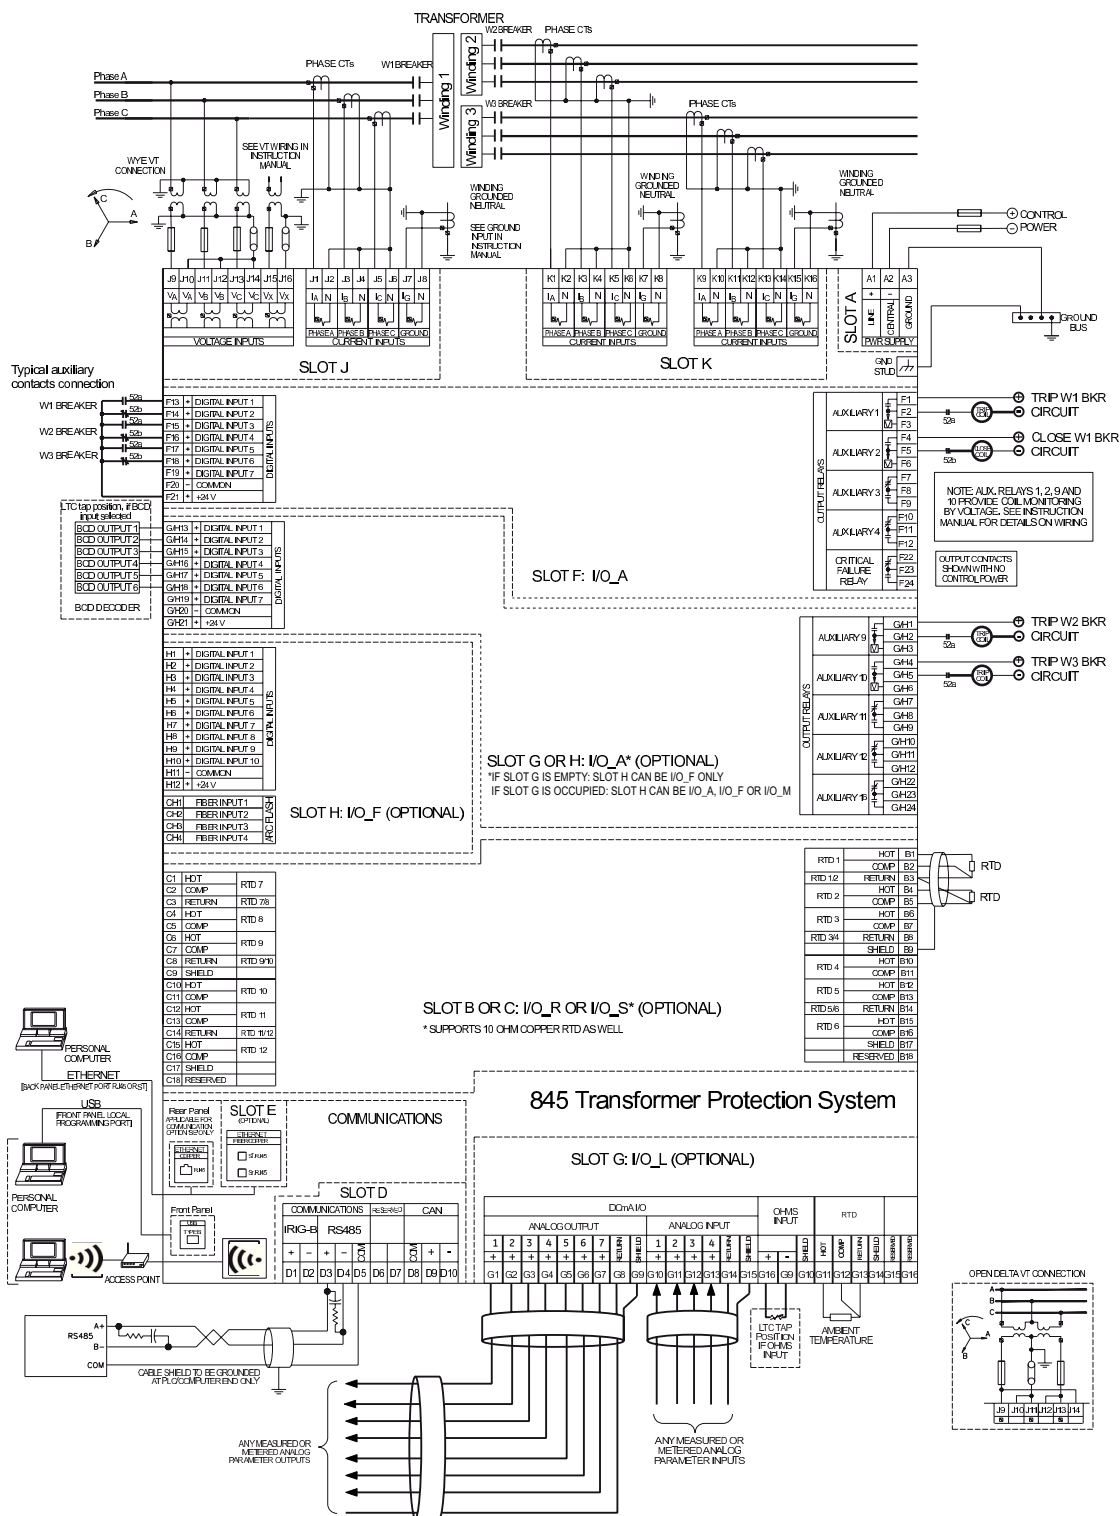


Figure 62: Typical Wiring for a 3-Winding Transformer (892789A4)

CHAPTER 3

INTERFACES

3.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	81
First access	82
Front panel options	83
Software Interface	102

3.2 FIRST ACCESS

There are two methods of interfacing with the relay.

- Using the relay keypad and display.
- Using the EnerVista D&I Setup software.

This section provides an overview of the interfacing methods using both of these methods.

When first accessing the relay, log in as Administrator either through the front panel or through EnerVista D&I Setup connected serially (so that no IP address is required). Use the default password (the default password is **0**).

Basic Security

If the relay is in the commissioning phase and you want to bypass authentication, switch the **SETPOINT ACCESS** setting on or assign it to a contact input. Once the setting is on, you have complete administrator access from the front panel. If a contact input is chosen, the access is also conditional on the activation of the respective contact input.

CyberSentry

If logging in through EnerVista D&I Setup, choose Device authentication and login as Administrator.

Note:

If the relay is in the commissioning phase, to bypass authentication use the setpoint access feature to gain administrative access to the front panel in the same way as with basic security.

3.3 FRONT PANEL OPTIONS

Relays from hardware version C (firmware version 4 onwards) can be delivered with following different front panels:

- The 10-pushbutton membrane faceplate
- The 3-pushbutton membrane faceplate

The front panels provide menu navigation through a selection of navigation pushbuttons and a high quality graphical display. The 3-button faceplate includes 3 programmable function pushbuttons and 17 programmable LEDs.

The 10-Pushbutton Membrane faceplate includes 10 programmable function pushbuttons for a total of 22 programmable LEDs.

The front panel provides menu navigation through a selection of navigation pushbuttons and a high quality graphical display. A USB type B port allows connection to a PC with EnerVista D&I Setup software.

The following figures show the different options.

Note:

These figures are representative only. They may not reflect the exact model that this manual describes.



Figure 63: 3-pushbutton membrane front panel



Figure 64: 10-pushbutton membrane front panel

3.3.1 GRAPHICAL DISPLAY PAGES

The front panel liquid crystal display (LCD) allows visibility under various lighting conditions. When the keypad and display are not being used and there are no active Targets, the Home screen with system information is displayed after a user-defined period of inactivity. Pressing the **Escape** key during the display of the default message, returns the display to the previous display screen. Any Trip, Alarm, or Pickup operation causing a new active Target is displayed immediately, automatically overriding the Home screen.

3.3.1.1 MENU HIERARCHY

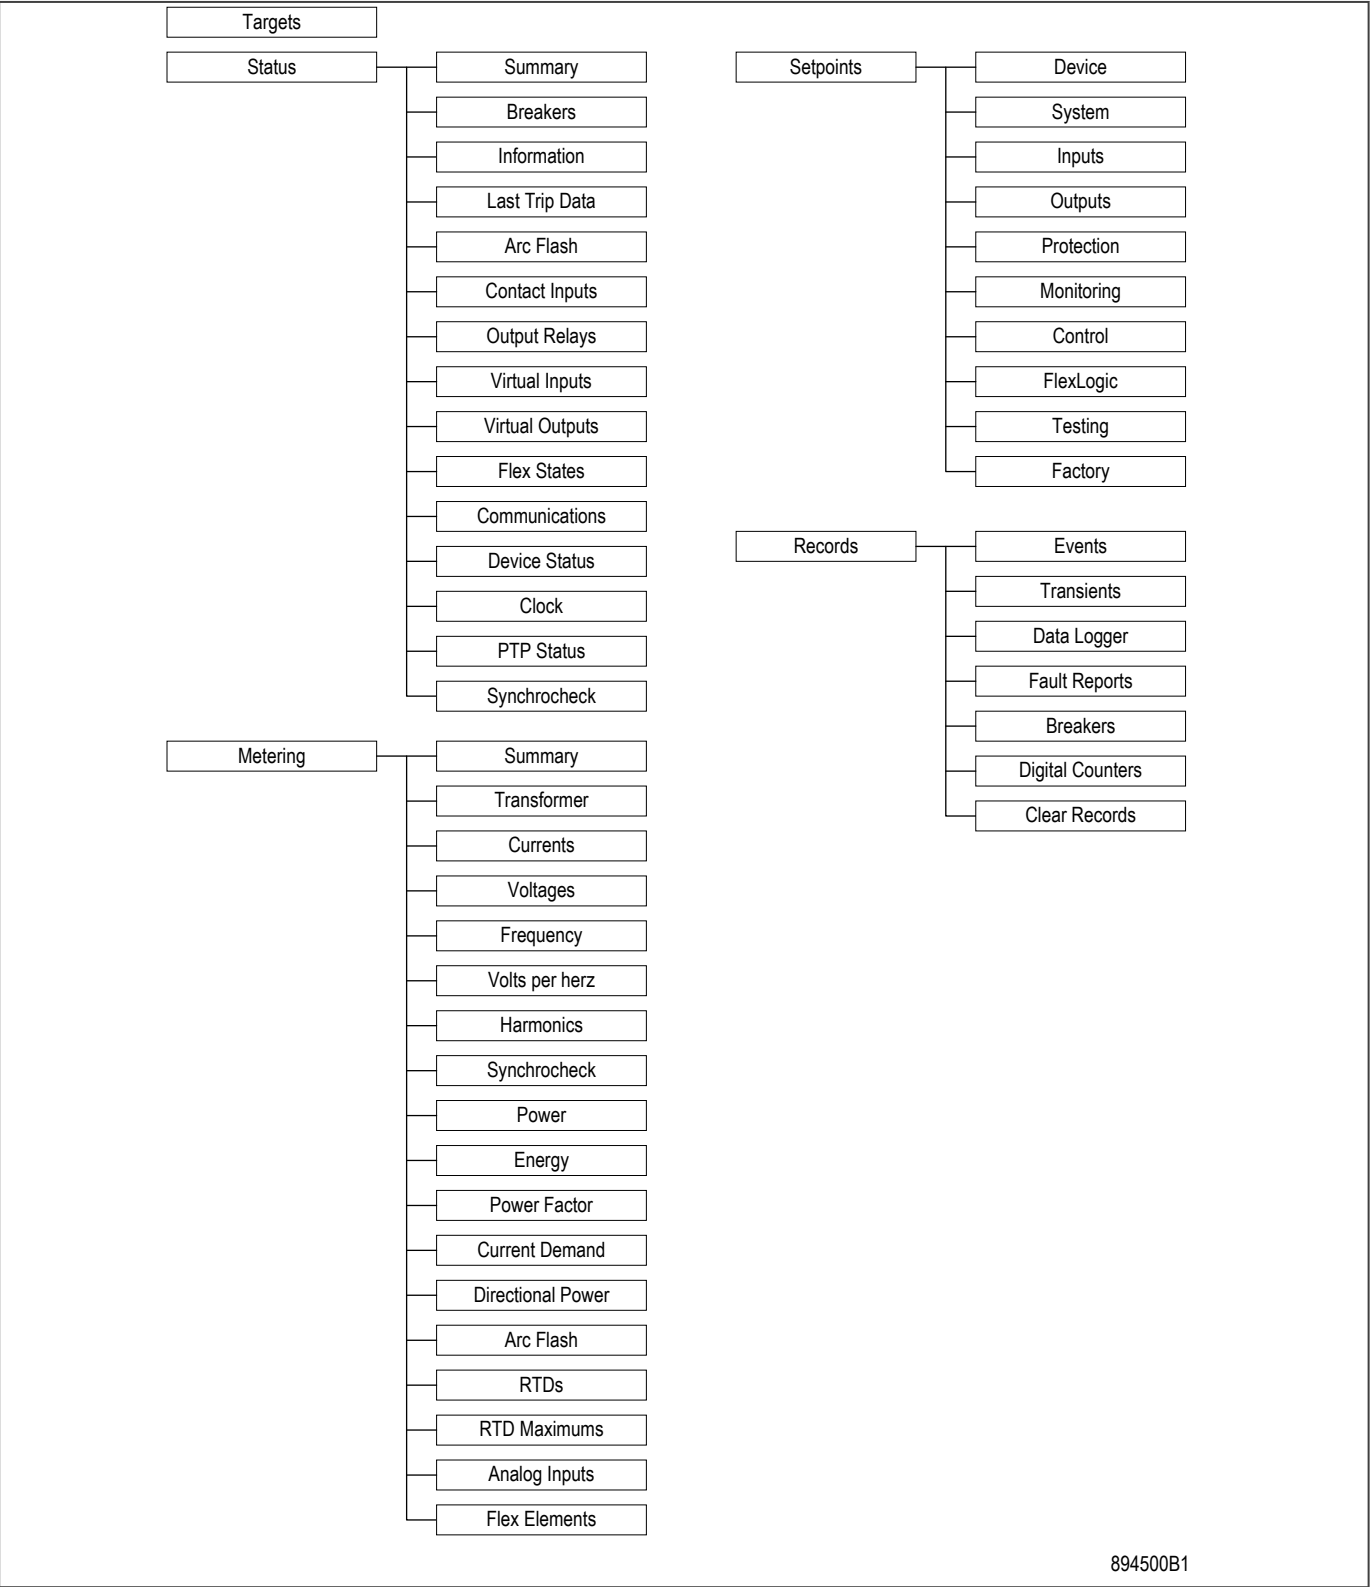


Figure 65: Menu hierarchy

3.3.1.2 WORKING WITH GRAPHICAL DISPLAY PAGES

The display contains five main menu items labeled Targets, Status, Metering, Setpoints, and Records located at the bottom of the screen. Choosing each main menu item displays the corresponding sub-menu.

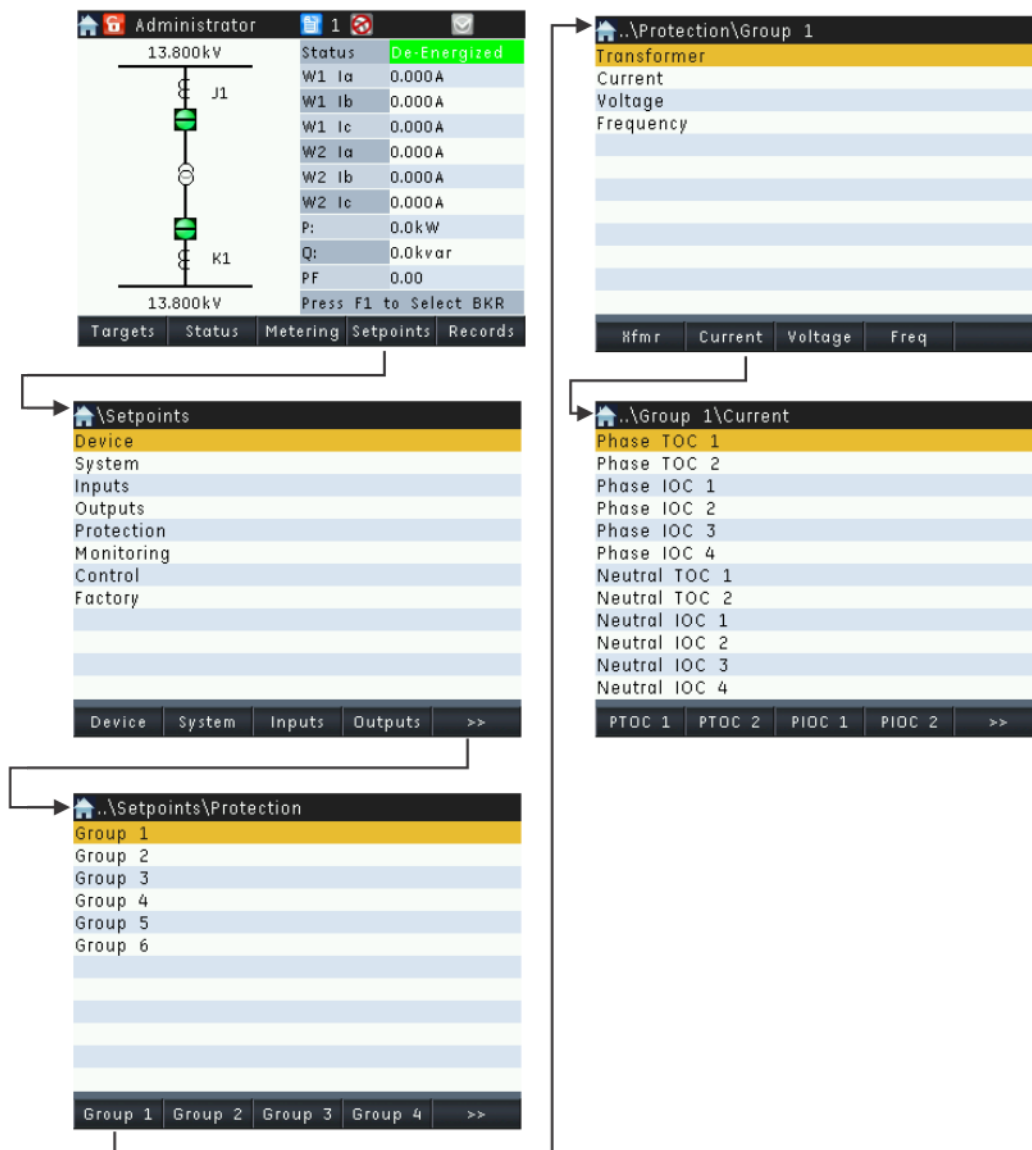


Figure 66: Typical paging

There are two ways of navigating through the menu:

- using the pushbuttons corresponding to the soft tabs from the screen
- by selecting the item from the list of items on the screen using the **Up** and **Down** pushbuttons to move the yellow highlighted line, and pressing the **Enter** pushbutton.


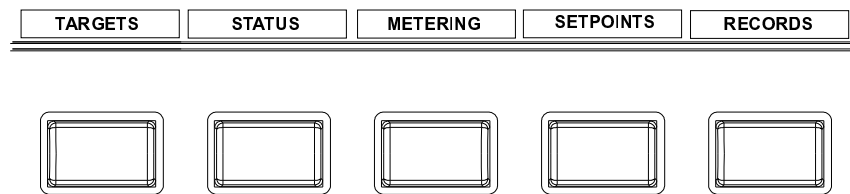


Figure 67: Tab Pushbuttons

The tab pushbuttons are used to enter the menu corresponding to the label on the tabs. If more than 5 tabs exist, the first and the last tab are labeled with arrows to allow you to scroll to the other tabs.

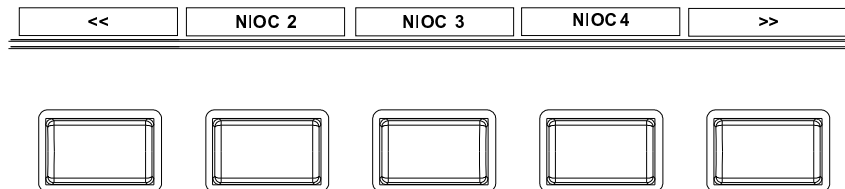

Membrane Faceplate



Figure 68: Keypad Pushbuttons

Each Keypad pushbutton serves the following function:

- The **Home** pushbutton is used to display the home screen, and all screens defined under the Front Panel/ Screens menu as default screens.
- The **Help** pushbutton is used to provide the Modbus address corresponding to the present location when in the Actual Values menu.
- The **Enter** pushbutton has a dual function. It is used to display a sub-menu when an item is highlighted. It is also used to save the desired value for any selected setpoint.

- The **Up**, and **Down** pushbuttons are used to select/highlight an item from a menu, as well as select a value from the list of values for a chosen item.
- The **Up**, **Down**, **Left** and **Right** pushbuttons on the membrane faceplate are used to move the yellow highlight. These pushbuttons are also used on special screens to navigate to multiple objects.
- The **Escape** pushbutton is used to display the previous menu. This pushbutton can also be used to cancel a setpoint change.
- The **Reset** pushbutton clears all latched LED indications, target messages, and latched output relays, providing the conditions causing these events are not present.

To change (or view) an item on (or from) the menus:

- Use the pushbuttons that correspond to the tabs (Targets, Status, Metering, Setpoints, Records) on the screen to select a menu.
- Use the **Up** and **Down** pushbuttons to highlight an item.
- Press **Enter** to view a list of values for the chosen item. (Some items are view-only.)
- Use the **Up** and **Down** pushbuttons to highlight a value.
- Press **Enter** to assign the highlighted value to the item.

3.3.1.3 SINGLE LINE DIAGRAM

BKR1 LED setting for Breaker symbol color configuration

In all devices the Breaker symbol color is configurable as per the color scheme setting in **Setpoints > Device > Front Panel > Display Properties > Color Scheme**.

Single Line Diagram for 845 and Breaker/Transformer status color

The relay has a single line diagram (SLD) that represents the power system. The single line diagram provided is pre-configured to show:

- Breaker status
- AC input connection
- Rated Winding voltage

Accompanying the single line diagram are typical metered values associated with the power system.

The single line diagram is configured as the default menu but this can be changed under **Setpoints > Device > Front Panel > Default Screen**.

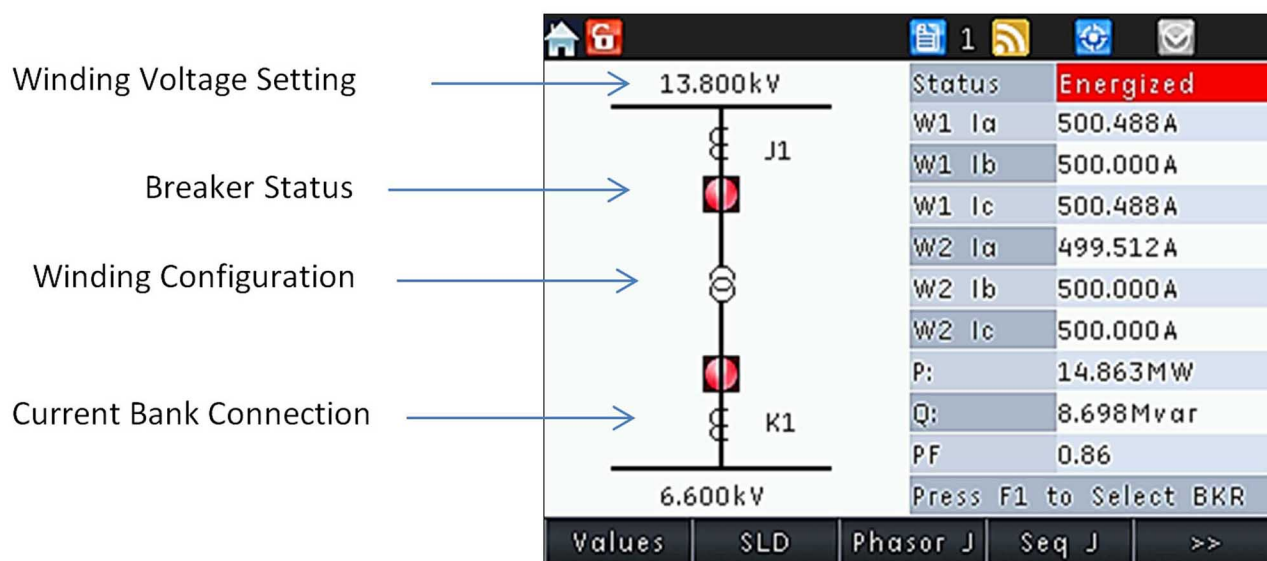


Figure 69: SLD and typical metered values screen

The breaker status icon changes state according to the breaker status input and the color scheme setting (**Setpoints > Device > Front Panel > Display Properties > Color Scheme**) to show Breaker status.

The winding voltage setting for each breaker is displayed on the associated branch. The winding configuration icon will display either a 2-winding or 3-winding transformer based on the order code.

The transformer status is indicated in the top right of the display.

Color Scheme	SLD Breaker Symbol Color				Transformer Status		
	Open Color	Close Color	Not Configured	Unknown	De-Energized	Energized	Not Configured
Red (Open)					Red	Green	Orange
Green (Open)					Green	Red	Orange

When breaker detection Connected/Disconnected (Racked-In/Racked-Out) is configured, the symbols change with respect to the Connected/Disconnected state of the breaker. The following table further illustrates this with an example of the switching device Close state when the color scheme is set to *Green (Open)*.

Connected/Disconnected Detection	Breaker State	Symbol
Not Configured*	Connected*	
Configured	Connected	
Configured	Disconnected	

*The relay considers the breaker state Connected when detection of the Connected/Disconnected state of the breaker is not configured. Connected/Disconnected detection is not configured when setpoint **Connected** (under **Setpoints > System > Breaker**) is set to *Off*.

The parameters displayed in the Front panel screen example are as follows for a 2-Winding Transformer with VT:

Parameter	Input for the value
W1 Ia	Metering\ CT Bank 1 -J1\ J1 Ia
W1 Ib	Metering\ CT Bank 1 -J1\ J1 Ib
W1 Ic	Metering\ CT Bank 1 -J1\ J1 Ic
W2 Ia	Metering\ CT Bank 2 -K1\ K1 Ia
W2 Ib	Metering\ CT Bank 2 -K1\ K1 Ib
W2 Ic	Metering\ CT Bank 2 -K1\ K1 Ic
P:	Metering\ Power 1\ Pwr1 Real
Q:	Metering\ Power 1\ Pwr1 Reactive
PF	Metering\ Power 1\ Pwr1 PF

The parameters displayed in the Front panel screen example are as follows for a 2-Winding Transformer without VT:

Parameter	Input for the value
W1 Ia	Metering\ CT Bank 2 -K1\ K1 Ia
W1 Ib	Metering\ CT Bank 2 -K1\ K1 Ib
W1 Ic	Metering\ CT Bank 2 -K1\ K1 Ic
W2 Ia	Metering\ CT Bank 3 -K2\ K2 Ia
W2 Ib	Metering\ CT Bank 3 -K2\ K2 Ib
W2 Ic	Metering\ CT Bank 3 -K2\ K2 Ic
P:	Metering\ Power 1\ Pwr1 Real
Q:	Metering\ Power 1\ Pwr1 Reactive
PF	Metering\ Power 1\ Pwr1 PF

The parameters displayed in the Front panel screen example are as follows for 3-Winding Transformer:

Parameter	Input for the value
W1 Ia	Metering\ CT Bank 1 -J1\ J1 Ia
W1 Ib	Metering\ CT Bank 1 -J1\ J1 Ib
W1 Ic	Metering\ CT Bank 1 -J1\ J1 Ic
W2 Ia	Metering\ CT Bank 2 -K1\ K1 Ia
W2 Ib	Metering\ CT Bank 2 -K1\ K1 Ib
W2 Ic	Metering\ CT Bank 2 -K1\ K1 Ic
W3 Ia	Metering\ CT Bank 3 -K2\ K2 Ia
W3 Ib	Metering\ CT Bank 3 -K2\ K2 Ib
W3 Ic	Metering\ CT Bank 3 -K2\ K2 Ic


3.3.2 THREE-PUSHBUTTON FRONT PANEL LEDS

Front panel LED details:

- Number of LEDs: 17
- Programmability: Any FlexLogic operand
- Reset mode: self-reset or latched

The front panel provides two columns of 7 LED indicators each, and 3 LED pushbutton indicators. The **IN-SERVICE** (LED 1) indicator from the first LED column is a non-programmable LED. LED 3 in the first LED column is programmable and defaulted to **PICKUP**. The bottom 3 LED indicators from the first column, and the 7 LED indicators from the second LED column are fully programmable. The indicators **TRIP** (LED 2), and **ALARM** (LED 3), are also programmable, and can be triggered by either a selection of FlexLogic operand assigned in their own menu, or by the operation of any protection, control or monitoring element with function selected as *Trip*, *Alarm*, or *Latched Alarm*.

The **RESET** key is used to reset any latched LED indicator or Target Message once the condition has been cleared (latched conditions can also be reset via the **RESETTING** menu).

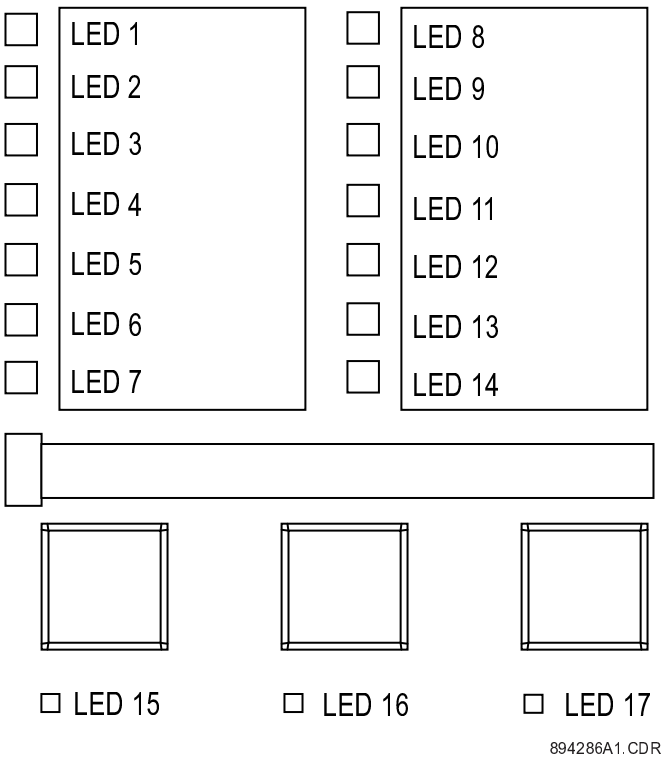

894286A1.CDR

Figure 70: LED numbering

Some status indicators are common while some are feature specific which depend on the availability in the order code. The common status indicators in the first column are described below.

Status Indicator	Description
IN SERVICE	Green color = Relay powered up, passed self-test has been programmed, and ready to serve. This LED indicates that control power is applied, all monitored inputs, outputs, and internal systems are OK, and that the device has been programmed. Red color = Relay failed self test, has not been programmed, or out of service.
TRIP	This LED indicates that the element selected to produce a trip has operated. This indicator always latches; as such, a Reset command must be initiated to allow the latch to be reset.

Status Indicator	Description
ALARM	This LED indicates that the FlexLogic™ operand serving as an Alarm switch has operated. Latching of the indicator depends on the selected protection function. A Reset command must be initiated to allow the latch to be reset.
PICKUP	This LED indicates that at least one element is picked up. This indicator is never latched.
TEST MODE	This LED indicates that the relay has been set into Test Mode.
MESSAGE	This LED indicates the presence of Target Messages detected by the relay.
LOCAL MODE	This LED indicates that the relay is operating in local mode.

Breaker status indication is based on the breaker's 52a and 52b contacts. With both contacts wired to the relay and configured, closed breaker status is determined by closed 52a contact and opened 52b contact. Vice-versa the open breaker status is determined by opened 52a contact and closed 52b contact. If both 52a and 52b contacts are open, due to a breaker being racked out from the switchgear, both the Breaker Open and Breaker Closed LED Indicators will be off.

The Event Cause indicators in the first column are described as follows:

Events Cause LEDs are turned *On* or *Off* by protection elements that have their respective target settings selected as either *Self-Reset* or *Latched*. If a protection element target setting has *Self-Reset* selected, then the corresponding Event Cause LEDs remain *On* as long as the operate operand associated with the element remains asserted. If a protection element target setting is *Latched*, then the corresponding Event Cause LEDs turn *On* when the operate operand associated with the element is asserted and will remain *On* until the **RESET** button on the front panel is pressed after the operand is reset.

Default labels are shipped in the package of every product, together with custom templates. A custom LED template is available for editing and printing from the GE Vernova website. The default labels can be replaced by user-printed labels. Customization of LED operation is of maximum benefit in installations where languages other than English are used to communicate with operators.

3.3.3 TEN-PUSHBUTTON FRONT PANEL LEDs

Front panel LED details:

- Number of LEDs: 22 (LEDs 13 and 14 are not available)
- Programmability: Any FlexLogic operand
- Reset mode: self-reset or latched

The 10 Pushbutton-Membrane front panel provides one column of 12 multi-color LED indicators and 10 single-color LED pushbutton indicators. The **IN-SERVICE** (LED 1) and the **PICKUP** (LED 4) indicators from the first LED column are non-programmable LEDs. The indicators **TRIP** (LED 2), and **ALARM** (LED 3) are programmable, and can be triggered by either a selection of FlexLogic operand assigned in their own menu, or by the operation of any protection, control or monitoring element with function selected as *Trip*, *Alarm*, or *Latched Alarm*.

The **RESET** key is used to reset any latched LED indicator or Target Message once the condition has been cleared (latched conditions can also be reset via the **RESETTING** menu).

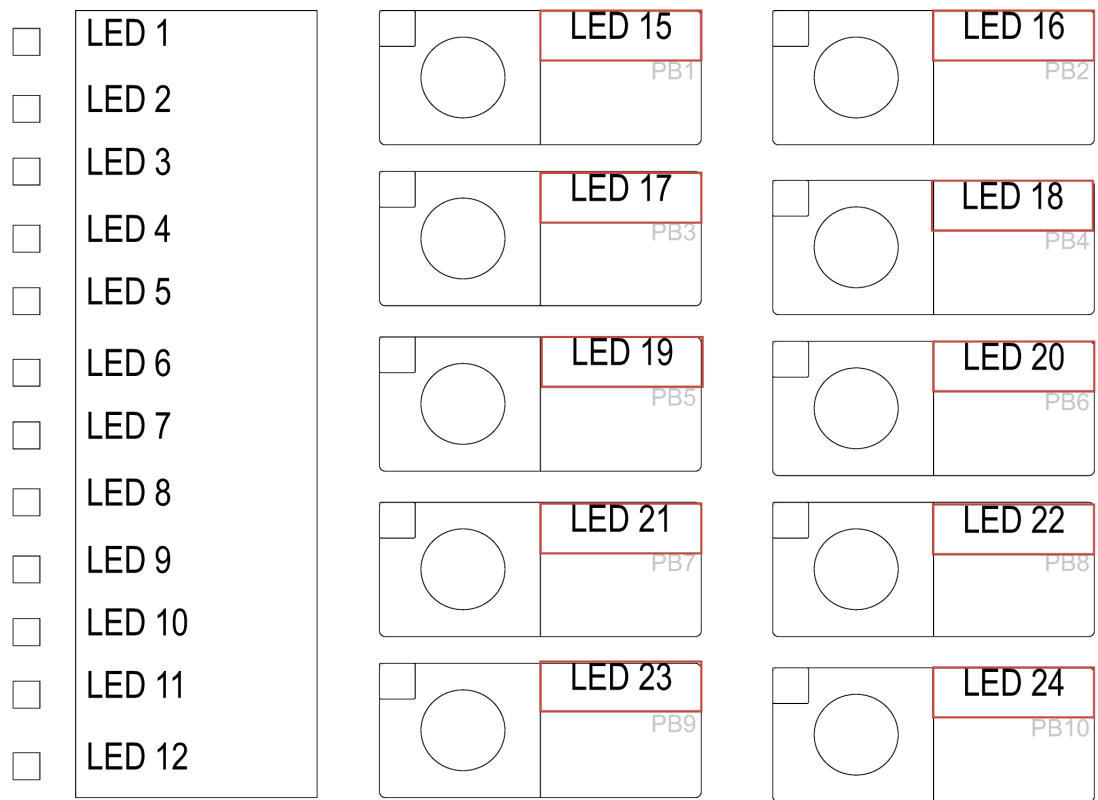


Figure 71: LED numbering

LED Labels without Autoreclose Function	LED Labels with Autoreclose Function
☐ IN SERVICE	☐ IN SERVICE
☐ TRIP	☐ TRIP
☐ ALARM	☐ ALARM
☐ PICKUP	☐ PICKUP
☐ TEST MODE	☐ TEST MODE
☐ MESSAGE	☐ MESSAGE
☐ PHASE A FAULT	☐ PHASE A FAULT
☐ PHASE B FAULT	☐ PHASE B FAULT
☐ PHASE C FAULT	☐ PHASE C FAULT
☐ GROUND FAULT	☐ GROUND FAULT
☐ 50P INST OC	☐ 50P INST OC
☐ 27 PHASE UV	☐ LOCKOUT

Figure 72: Typical LED Indicator Panel

Some status indicators are common while some are feature specific which is dependent upon the order code. The common status indicators in the first column are described below.

Status Indicator	Description
IN SERVICE	This LED indicates that control power is present, all monitored inputs, outputs, and internal systems are OK, and that the device is programmed.
TRIP	This LED indicates that the FlexLogic operand serving as a trip switch has operated. This indicator always latches so a reset command must be initiated to allow the latch to be reset.
ALARM	This LED indicates that the FlexLogic operand serving as an alarm switch has operated. Latching of the indicator depends on the selected protection function. The Reset command must be initiated to allow the latch to be reset.
PICKUP	This LED indicates that at least one element is picked up. This indicator is never latched.
TEST MODE	This LED indicates that the relay has been set into Test Mode.
MESSAGE	This LED indicates the presence of Target Messages detected by the relay.
PHASE A FAULT	This LED indicates that phase A of the Phase Time Overcurrent 1 function has operated.
PHASE B FAULT	This LED indicates that phase B of the Phase Time Overcurrent 1 function has operated.
PHASE C FAULT	This LED indicates that phase C of the Phase Time Overcurrent 1 function has operated.
GROUND FAULT	This LED indicates that the Ground Time Overcurrent 1 function has operated.
50P INST OC	This LED indicates that the Phase Instantaneous Overcurrent 1 function has operated.
27 PHASE UV (Order Code without Autoreclose)	This LED indicates that the Phase Undervoltage 1 function has operated.
LOCKOUT (Order Code with Autoreclose)	This LED indicates that the Autoreclose function has reached the lockout stage.

3.3.4 HOME SCREEN ICONS

The next figure shows the icons available on the front screen. For descriptions of these screen icons see the following table.

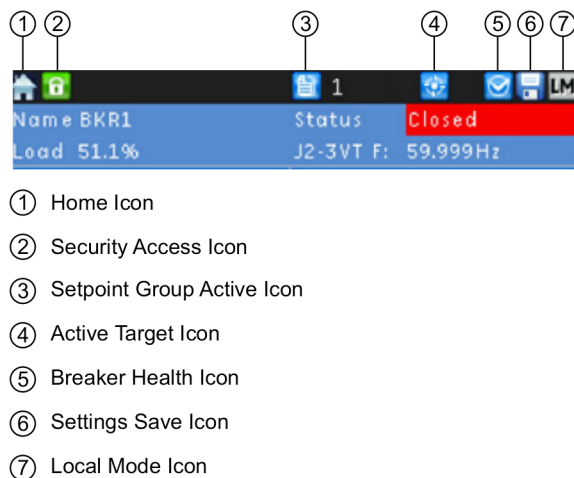


Figure 73: Home Screen Icons

Icon Type	Description of Icon
Security Access	User not logged in - green and locked User logged in - Icon is red and unlocked
Setpoint Group	Identifies the active setpoint group

Icon Type	Description of Icon
Active Target	When the target auto navigation setting is disabled, the message LED and the Active Target icon are the only indication of active target messages.
Breaker Health	The Breaker Health icon is blue when the setting for the breaker health function is not disabled. When the setting is disabled the icon is gray.
Settings Save	Indicates that a setting is being saved on the relay (i.e., when changing one of relay settings). Icon is ON (relay is saving to flash memory) Icon is OFF (relay is not saving to flash memory)
Local Mode	Indicates that Local Mode is active. During Local Mode, the control for the breakers and disconnect switches can be performed only by the relay front panel.

Note:

The security icon only represents the security access level through the front panel.

Do not remove power from the relay whenever the Settings Save icon is ON. When power is removed the data being saved can also be lost.

3.3.5 RELAY MESSAGES

3.3.5.1 TARGET MESSAGES

Targets are messages displayed on the screen when any change of state of protection, control, monitoring, or digital signal takes place. Depending on the model, targets for each element are enabled, or latched by default. You can disable targets for any particular element if desired.

Target Messages are displayed in order of their activation, whereas in cases of simultaneous activation, they are displayed in the order outlined below (from highest to lowest priority):

1. Targets generated by pressing programmable pushbutton
2. Targets generated by Contact inputs
3. Targets generated by Protection, Control and Monitoring elements
4. Targets generated by communications.

In cases where the Pickup and Operate flags from an element are detected at the same time, the Pickup flag is not displayed. The Operate flag is displayed instead.

LED #6, from the first column of LEDs, is factory configured to be triggered by the FlexLogic operand ANY TARGET, to indicate the presence of at least one target message. This LED is labeled as **MESSAGE**. The LED can be programmed to any other FlexLogic operand by choice.

MESSAGE TIMEOUT

The timeout applies to every screen apart from the default screen. Examples include viewing, metering, or navigating to a screen with setting, etc. If no further navigation is performed, no pushbutton is touched, and/or no target is initiated for the time specified in the message timeout setpoint, the display goes back to the default screen (the metering summary screen).

The target message overrides the message timeout. The message timeout starts timing after each target message, and if no more activity is recorded for the specified time, the display goes back to the default screen.

Pressing a programmable pushbutton activates a new screen with a Target Message corresponding to the programmed pushbutton action. The pushbutton Target Message is displayed for 10 seconds then defaults to the screen that was displayed before pressing the pushbutton. The pushbutton Target Message is recorded in the list with other generated Target Messages.

Target Messages can be cleared either by pressing the pushbutton corresponding to the **CLEAR** tab, or by initiating a **RESET** command. The **CLEAR** command clears only the Target Messages, while initiating a **RESET** clears not only the Target Messages, but also any latched LEDs and output relays.

3.3.5.2 SELF-TEST ERRORS

The relay performs self-diagnostics at initialization (after power up), and continuously as a background task to ensure that the hardware and software are functioning correctly. There are two types of self-test warnings indicating either a minor or major problem. Minor errors indicate a problem with the relay that does not compromise protection and control functionality of the relay. Major errors indicate a problem with the relay which takes it out of service.



Caution:
Self-Test Warnings may indicate a serious problem with the relay hardware!

Upon detection of a minor problem, the relay does the following:

- Displays a detailed description of the error on the relay display as a target message
- Records the minor self-test error in the Event Recorder
- Flashes the **ALARM** LED

Upon detection of a major problem, the relay does the following:

- De-energizes critical failure relay
- De-energizes all output relays
- Blocks protection and control elements
- Turns the **IN SERVICE** LED to red
- Flashes the **ALARM** LED
- Displays **Major Self-test error** with the error code as a target message
- Records the major self-test failure in the Event Recorder

Note:

The Critical Failure Relay (Output Relay 8) is energized when the relay is in-service, and no major error is present

Under both conditions, the targets cannot be cleared if the error is still active.

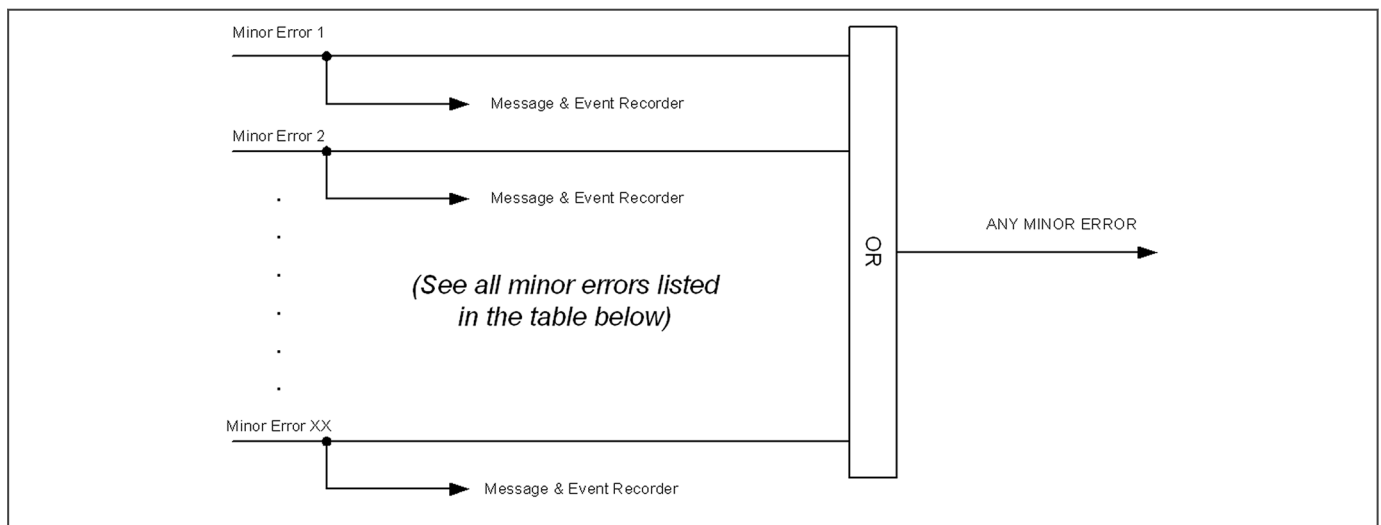


Figure 74: Minor Errors

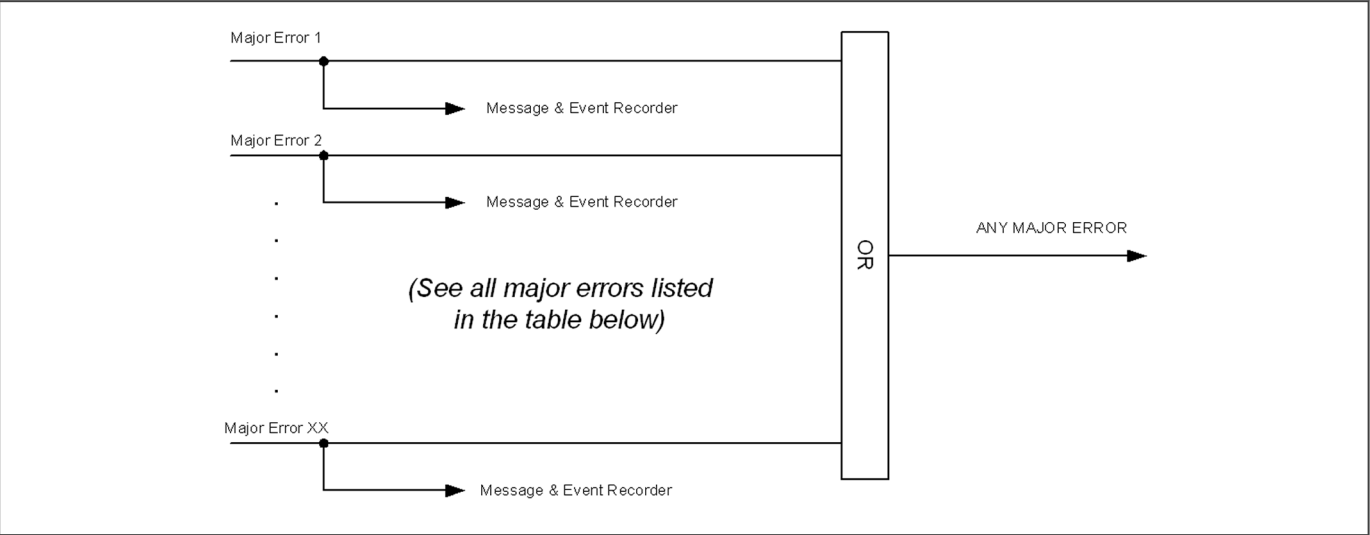


Figure 75: Major Errors

Minor self-test errors

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Order Code Error	Hardware doesn't match order code	Every 1 second	If alert doesn't self-reset then contact factory. Otherwise monitor re-occurrences as errors are detected and self-reset
CPU S/N Invalid	CPU card doesn't have valid data to match the order code.	Every 1 second	
Slot "\$" IO S/N Invalid ²	IO card located in slot \$ doesn't have valid data to match the order code.	Every 1 second	
Comms S/N Invalid	Comms card doesn't have valid data to match the order code.	Every 1 second	
CPanel S/N Invalid	Control Panel doesn't have valid data to match the order code.	Every 1 second	
PSU S/N Invalid	Power Supply Unit doesn't have valid data to match the order code.	Every 1 second	
RTC Error	The CPU cannot read the time from the real time clock	Every 1 second	
Product Serial Invalid	The product serial number doesn't match the product type	Every 1 second	
Comm Alert #1	Communication error between CPU and Comms board	Every 1 second	
Comm Alert #2		Every 1 second	
Comm Alert #3		Every 1 second	
FLASH Error	The permanent storage memory has been corrupted	Every 1 second	
SPI Error	Communication error between CPU and LEDs, Keypad or peripheral memory devices	Every 1 second	
Invalid MAC Address	MAC address is not in the product range	Every 1 second	
Calibration Error	Unit has default calibration values	Boot-up and every 1 second	
Clock Not Set	Clock has the default time	Every 1 second	Set clock to current time
IRIG-B Failure	A bad IRIG-B input signal has been detected	Every 1 second	Ensure IRIG-B cable is connected, check cable functionality (i.e. physical damage or perform continuity test), ensure IRIG-B receiver is functioning, and check input signal level (it may be less than specification). If none of these apply, contact the factory.
WiFi Default Settings	SSID and Passphrase is the factory default	Every 1 second	Set SSID and Passphrase

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Link Error Primary ³	Port 1 or Port 4 (depending on order code) is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Link Error Secondary	Port 5 is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Traffic Error Primary	Abnormally high amount of Broadcast and Uni-cast traffic on port 1 or port 4	Every 1 second	Contact site IT department to check network for malfunctioning devices
Traffic Error Secondary	Abnormally high amount of Broadcast and Uni-cast traffic on port 5	Every 1 second	Contact site IT department to check network for malfunctioning devices
Ambient Temperature >80C	The ambient temperature surrounding the product has exceeded 80C	Every 1 second	Inspect mounting enclosure for unexpected heat sources (i.e loose primary cables) and remove accordingly
High Rate Event	Abnormally high amounts of events have been generated so the relay has stopped logging to prevent further issues	Every 1 second	Ensure settings are not set close to nominal ratings. Ensure FlexLogic equations do not have impractical timing for status events
CAN_1 Error		Every 1 second	
CAN_2 Error		Every 1 second	
Version Mismatch	CPU and Comms do not have the same revision on firmware	Boot-up and Every 1 second	Ensure that both the CPU and Comms FW was uploaded during the upgrade process
SelfTestFWUpdate	The updating of the firmware failed	Every 1 second	Re-try uploading firmware. If the upload doesn't work a second time contact factory
Remote CAN IO Mismatch	RMIO card detection mismatch	Every 1 second	Check RRTD connections, check if the RRTD configuration is still valid, Validate CANBUS IO.

¹ Failure is logged after the detection of 5 consecutive failures

² \$ is the slot ID (i.e. F, G, H etc.)

^{3a} Link Error Primary can take up to 12 seconds to appear

^{3b} To disable Link Error Primary target when not in use with SE order code, change IP address to 127.0.0.1

Major self-test errors

Major Self-test Error Message	Latched Target Message	Description of Problem	Frequency of Test	What to do
Relay Not Ready	No	PRODUCT SETUP INSTALLATION setting indicates relay is not in a programmed state.	On power up and whenever the PRODUCT SETUP INSTALLATION setting is altered.	Program all required settings and then set the PRODUCT SETUP INSTALLATION setting to <i>Ready</i> .
Major Self-Test (error code)	Yes	Unit hardware failure detected	Every 1 second	Contact the factory and supply the failure code as noted on the display.

Note:

When a total loss of power is present, the Critical Failure Relay (Output Relay 8) is de-energized.

3.3.5.3 OUT OF SERVICE

When the relay is shipped from the factory, **DEVICE IN SERVICE** is set to *Not Ready*. The **IN SERVICE** LED will be orange and the critical fail relay will be de-energized but this will not be classified as a major self-test. An out of service event will be generated in the event recorder.

3.3.5.4 FLASH MESSAGES

Flash messages are warning, error, or general information messages displayed in response to pressing certain keys. The factory default flash message time is 2 seconds.

3.3.6 LABEL REMOVAL

For versions up to 3.xx, the front panels are supplied with a label removal tool for removing the LED label and user-programmable pushbutton label.

The following procedures describes how to use the label removal tool.

1. Bend the tabs of the tool upwards as shown in the image.



2. Slide the label removal tool under the LED label as shown in the next image. Make sure the bent tabs are pointing away from the relay. Move the tool inside until the tabs enter the pocket.




3. Remove the tool with the LED label.

The following describes how to remove the user-programmable pushbutton label from the front panel.

1. Slide the label tool under the user-programmable pushbutton label as shown in the next image. Make sure the bent tab is pointing away from the relay.

Remove the tool and user-programmable pushbutton label as shown in image.

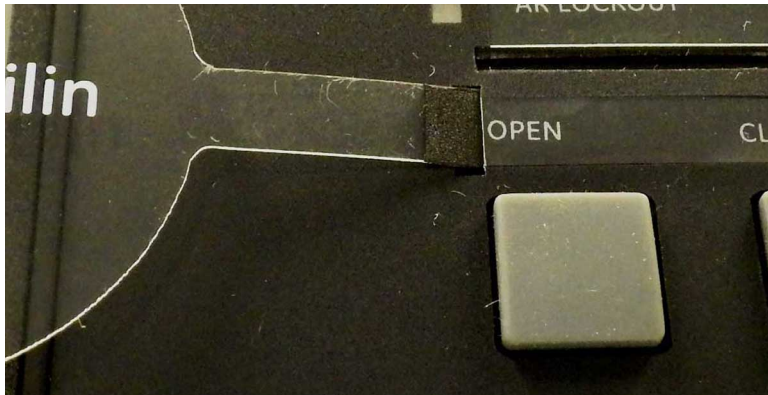

3.4 SOFTWARE INTERFACE

3.4.1 ENERVISTA D&I SETUP

Although you can enter settings manually using the control panel keys, you can also use a PC to download setpoints through the communications port. EnerVista D&I Setup is used to make this as convenient as possible. With EnerVista D&I Setup, it is possible to:

- Program and modify settings
- Load setting files from a computer
- Save setting files to a computer
- Read actual values
- Monitor status
- Read pre-trip data and event records
- Get help on any topic
- Upgrade the firmware

The software allows immediate access to all features with easy to use pull down menus in the familiar Windows environment. This section provides the necessary information to install the software, upgrade the relay firmware, and write and edit setting files.

The software can run without a relay connected to the computer. In this case, settings may be saved to a file for future use. If a relay is connected to a PC and communications are enabled, you can configure the relay from the setting screens. In addition, measured values, status and trip messages can be displayed with the actual value screens.

3.4.1.1 HARDWARE & SOFTWARE REQUIREMENTS

EnerVista D&I Setup has the following system requirements:

- Dual-core processor
- Microsoft Windows 10 or higher; 32-bit or 64-bit.
- At least 1 GB of free hard disk space is available.
- At least 2 GB of RAM is installed.
- 1280 x 800 display screen

The EnerVista D&I Setup can be installed from the GE Multilin website.

3.4.1.2 INSTALLING ENERVISTA D&I SETUP

Use the following procedure to install EnerVista D&I Setup using the EnerVista D&I Setup Launchpad application (found on the GE Multilin website).

1. Double-click the installation package and follow the instructions to install the software on the local PC.
2. When the installation is complete, start the EnerVista D&I Setup Launchpad application.
3. Click the **IED Setup** section of the LaunchPad toolbar.
4. In the EnerVista D&I Setup Launchpad window, click the **Add Product** button and select the required Protection System. Select the Web option to ensure the most recent software release.
5. Click the **Add Now** button to list software items. EnerVista D&I Setup Launchpad obtains the latest installation software from the Web and automatically starts the installation process. A status window with a progress bar is shown during the downloading process.

6. Select the complete path, including the new directory name, where the software is to be installed.
7. Click on **Next** to begin the installation. The files are installed in the directory indicated, the USB driver is loaded into the computer, and the installation program automatically creates icons and adds the EnerVista D&I Setup to the Windows start menu.
8. The required device is added to the list of installed IEDs in the EnerVista D&I Setup Launchpad IED Setup window.

If you are going to communicate from your computer to the relay using the USB port:

1. Connect the USB cable from your computer to the relay's USB port.
2. Launch EnerVista D&I Setup from the LaunchPad. Then in **EnerVista D&I Setup 8 Series setup software > Device Setup**, select **USB** as the Interface type.
3. Select the **Read Order Code** button.

3.4.1.3 UPGRADING ENERVISTA D&I SETUP

The latest software can be downloaded from the GE website.

After upgrading, check the version number under **Help > About**. If the new version does not display, try uninstalling the software and reinstalling the new version.

3.4.2 CONNECTING ENERVISTA D&I SETUP TO THE RELAY

3.4.2.1 USING THE QUICK CONNECT FEATURE

The **Quick Connect** button can be used to establish a fast connection through the front panel USB port of a relay.

Select **USB** and press the **Connect** button. Alternatively, Ethernet or WiFi (not all models) can be used as the interface.

When connected, a new site called **Quick Connect** appears in the **Site List** window.

The Site Device has now been configured via the Quick Connect feature for communications through whichever interface has been chosen.

3.4.2.2 CONFIGURING ETHERNET COMMUNICATIONS

Before starting, verify that the Ethernet cable is properly connected to the relevant Ethernet port.

Note:

The relay supports a maximum of 3 TCP/IP sessions.

1. Install and start the latest version of the software (available from the GE Multilin Website). See the previous section for the installation procedure.
2. Click on the **Device Setup** button to open the Device Setup window and click the **Add Site** button to define a new site.
3. Enter the desired site name in the Site Name field. If desired, a short description of the site can also be entered. In this example, we will use Substation 1 as the site name.
4. The new site appears in the upper-left list.
5. Click the **Add Device** button to define the new device.
6. Enter the desired name in the Device Name field, and a description (optional).
7. Select Ethernet from the Interface drop-down list. This displays a number of interface parameters that must be entered for proper Ethernet functionality.

8. Enter the IP address, slave address, and Modbus port values assigned to the relay (from the **Setpoints > Device > Communications** menu).
9. Click the **Read Order Code** button to connect to the relay and upload the order code. If a communications error occurs, ensure that the Ethernet communication values correspond to the relay setting values.
10. Click **OK** when the relay order code has been received. The new device will be added to the Site List window (or Online window) located in the top left corner of the main EnerVista D&I Setup window.

The Site Device has now been configured for Ethernet communications.

3.4.2.3 CONNECTING TO THE RELAY

Now that the communications parameters have been properly configured, communications with the relay can be initiated.


1. Expand the Site list by double clicking on the site name or clicking on the **+** box to list the available devices for the given site.
2. The required device trees can be expanded by clicking the **+** box. The following list of headers is shown for each device:
 - Device Definition
 - Status
 - Metering
 - Quick Setup
 - Setpoints
 - Records
 - Maintenance
3. Expand the **Setpoints > Device > Front Panel** list item and double click on **Display Properties** or **Default Screens** to open the settings window.
4. The settings window opens with a corresponding status indicator on the lower left of the EnerVista D&I Setup window.
5. If the status indicator is red, verify that the serial, USB, or Ethernet cable is properly connected to the relay, and that the relay has been properly configured for communications (steps described earlier).

The settings can now be edited, printed, or changed. Other setpoint and command windows can be displayed and edited in a similar manner. **Actual Values** windows are also available for display. These windows can be arranged and resized, if necessary.


3.4.2.4 CONFIGURING USB ADDRESS

By default, the relay USB port uses the network address 172.16.0.2. In some cases this IP is part of the corporate network for the computer and conflicts with existing computers or other devices on that network. To resolve this conflict, change the USB address to be in a different network. This change must be made to the computer settings, the relay settings, and the EnerVista D&I Setup settings in order to connect to the relay through the USB port.


1. Open the Windows Control Panel and select **Network and Internet > Network Sharing**. The exact path may vary depending on the version of Windows.

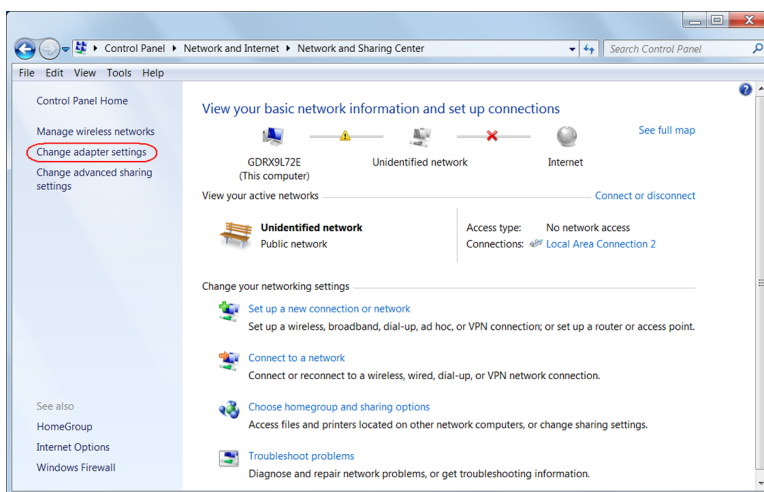


2. Click **Change adapter settings**.

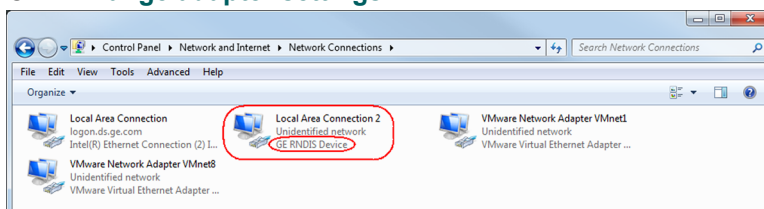

3. Find the **GE RNDIS Device** (or **GE RNDIS Device #2**) and right-click the network it is on to open the **Properties** window.
4. Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.

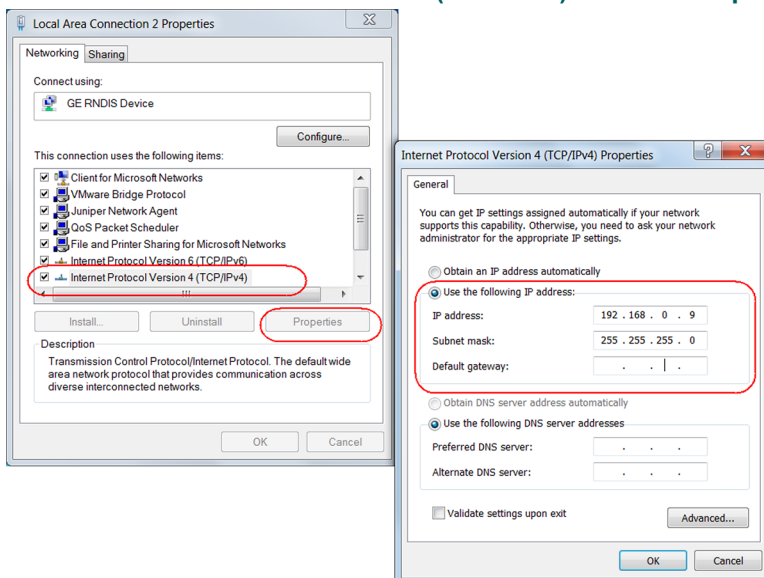

5. In the Internet Protocol Version 4 (TCP/IPv4) Properties window, ensure that **Use the following IP Address** is selected, and enter an appropriate IP address.
6. Click **OK** to save the new settings.
7. In the EnerVista D&I Setup, navigate to **File > Preferences > USB** and change the IP address to match. This address will now be used by EnerVista D&I Setup when the interface selected is USB.

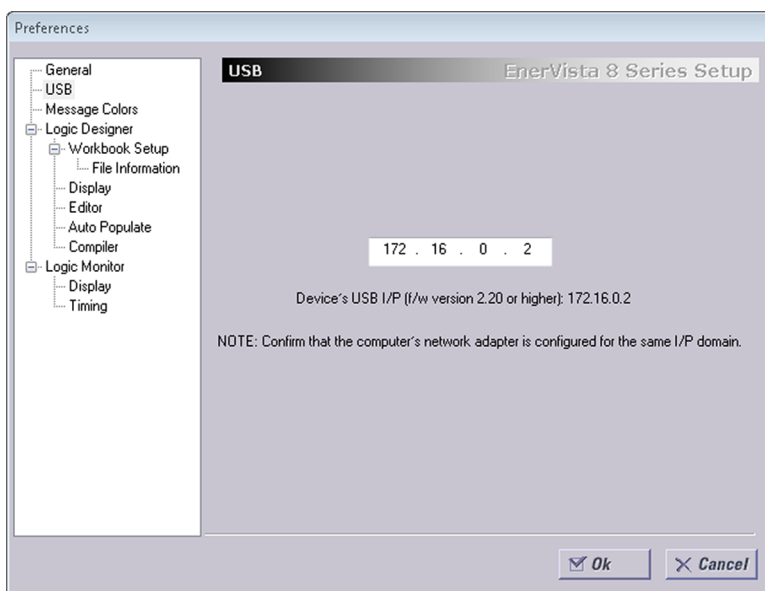

8. Click **OK** to save the new settings.
9. On the front panel of the relay, navigate to **Setpoint > Device > Communications > USB**.
10. Change both the **USB IP Address** and **USB GWY IP Address** setpoints to match the IP address the computer is now using.

The relay should now communicate with the computer through the USB port.

3.4.3 WORKING WITH SETPOINTS

When a settings file is being uploaded to a device, the **DEVICE IN SERVICE** setting switches to *Not Ready* for the duration of the upload. This ensures that all new settings are applied before the device is operational. A settings file uploads operations including the following:

- EnerVista D&I Setup menu option **Write Settings File to Device**
- Logic Designer changes saved online
- SLD configuration saved online
- IEC 61850 configuration saved online
- FlexLogic configuration saved online
- CID file uploaded to device

Individual setting changes from the device front panel or the EnerVista D&I Setup Online Window do not change the state of the **DEVICE IN SERVICE** setting.


3.4.3.1 ENGAGING A DEVICE

EnerVista D&I Setup may be used in on-line mode (relay connected) to directly communicate with a relay. Communicating relays are organized and grouped by communication interfaces and into sites. Sites may contain any number of relays selected from the product series.


3.4.3.2 ENTERING SETPOINTS

The following **System Setup** page is used as an example to illustrate entering setpoints. In this example, we will be changing the voltage sensing setpoints.


1. Establish communications with the relay.
2. Select the **Setpoint > System > Voltage Sensing** menu item.
3. Select the Aux. VT Secondary setpoint by clicking anywhere in the parameter box. This displays three arrows: two to increment/decrement the value and another to launch the numerical keypad.

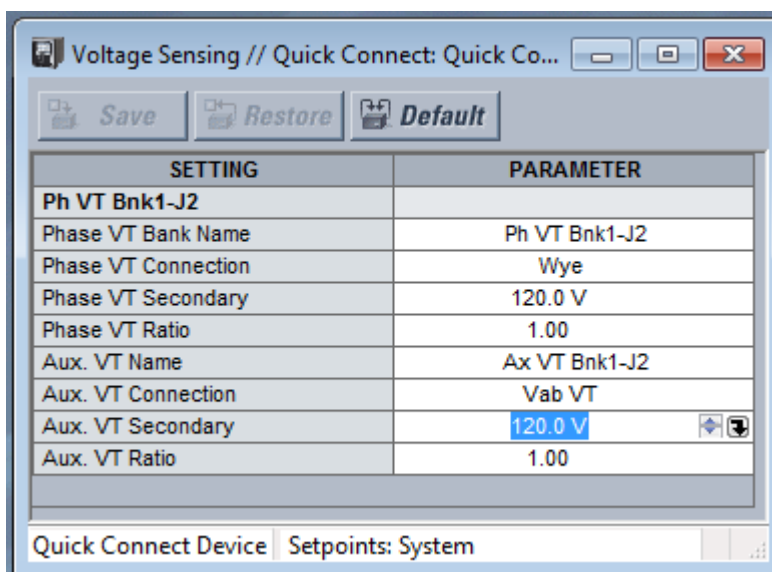

4. Clicking the arrow at the end of the box displays a numerical keypad interface used to enter values within the setpoint range displayed near the top of the keypad: Click **=** to exit from the keypad and keep the new value. Click on **X** to exit from the keypad and retain the old value.

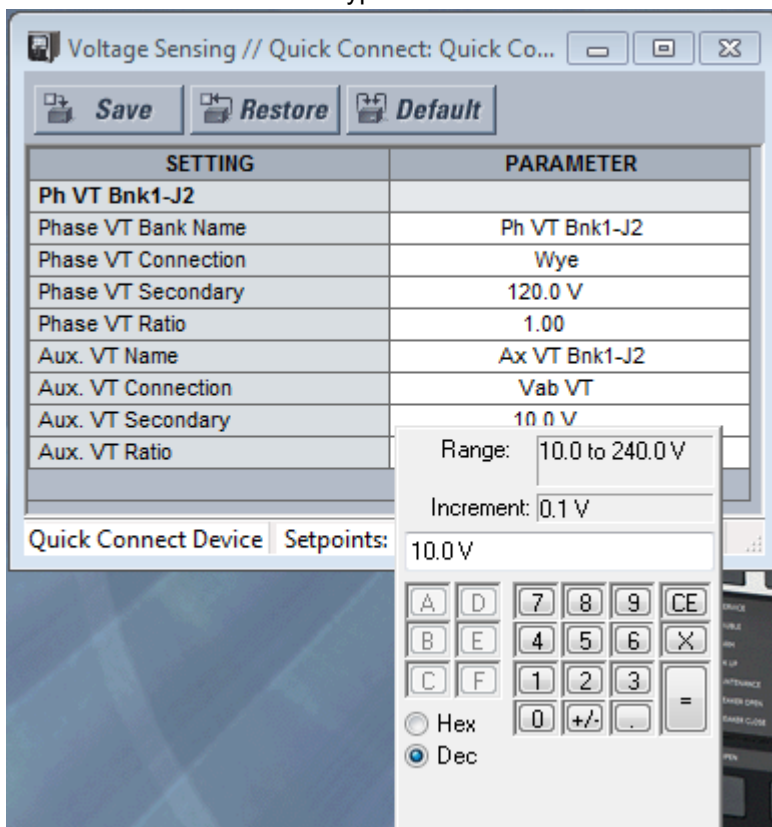

5. For setpoints requiring non-numerical pre-set values (e.g. **Phase VT Connection** below), clicking anywhere within the setpoint value box displays a drop-down selection menu arrow. Select the desired value from this list.

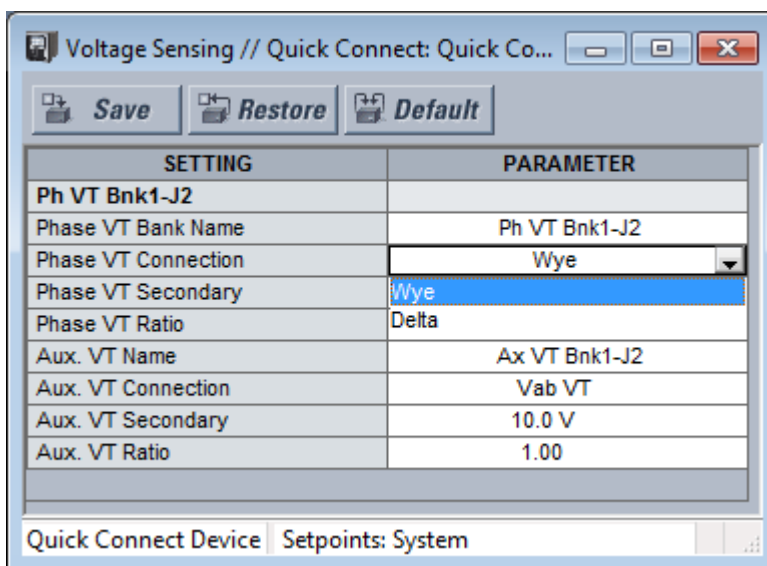

6. In the **Setpoints > System Setup > Voltage Sensing** dialog box, click on **Save** to save the values into the relay. Click **YES** to accept any changes and exit the window. Click **Restore** to retain previous values. Click **Default** to restore Default values.
7. For setpoints requiring an alphanumeric text string (e.g. relay name), the value may be entered directly within the setpoint value box.

Note:

When using Setpoint Groups, an element from one group can be dragged and dropped on the same element in another group, copying all settings.

3.4.3.3 USING SETPOINT FILES

The EnerVista D&I Setup interface supports three ways of handling changes to relay settings:

1. In off-line mode (relay disconnected) to create or edit relay settings files for later download to communicating relays.
2. Directly modifying relay settings while connected to a communicating relay, then saving the settings when complete.
3. Creating/editing settings files while connected to a communicating relay, then saving them to the relay when complete.

Setting files are organized on the basis of file names assigned by the user. A setting file contains data pertaining to the following types of relay settings:

- Device Definition
- Relay Setup
- System Setup
- Protection
- Control
- Inputs/Outputs
- Monitoring
- FlexLogic
- Quick setup

- Protection summary
- IEC 61850 configurator
- Modbus user map

Factory default values are supplied and can be restored after any changes.

The relay displays relay setpoints with the same hierarchy as the front panel display.

3.4.3.4 DOWNLOADING AND SAVING SETPOINT FILES

You should make a backup of the in-service settings before any changes are made or any work undertaken on commissioned devices. This section describes how to backup settings to a file and how to use that file to restore settings to the original relay or to a replacement relay.

Setpoints must be saved to a file on the local PC before performing any firmware upgrades. Saving setpoints is also highly recommended before making any setpoint changes or creating new setpoint files.

The setpoint files in the EnerVista D&I Setup window are accessed in the **Files** Window. Use the following procedure to download and save setpoint files to a local PC.

1. Ensure that the site and corresponding device(s) have been properly defined and configured.
2. Select the desired device from the site list.
3. Select **Read Device Settings** from the online menu item, or right-click on the device and select **Read Device Settings** to obtain settings information from the device.
4. After a few seconds, the software requests the name and destination path of the setpoint file. The corresponding file extension is automatically assigned. Press **Receive** to complete the process. A new entry is added to the tree, in the **File** pane, showing path and file name for the setpoint file.

3.4.3.5 ADDING SETPOINT FILES TO THE ENVIRONMENT

EnerVista D&I Setup allows you to review and manage a large group of setpoint files. Use the following procedure to add an existing file to the list.

1. In the offline pane, right-click on **Files** and select the **Add Existing Settings File** item.
2. The **Open** dialog box is displayed, prompting to select a previously saved setpoint file.
3. Browse for the file to be added then click **Open**. The new file and complete path will be added to the file list.

3.4.3.6 CREATING A NEW SETPOINTS FILE

Eenrvista allows you to create a new setpoint files independent of a connected device. These can be uploaded to a relay at a later date. The following procedure illustrates how to create new setpoint files.

1. In the Offline pane, right click and select the **New Settings File** item. The **Create New Settings File** box appears, allowing for the configuration of the setpoint file for the correct firmware version. It is important to define the correct firmware version to ensure that setpoints not available in a particular version are not downloaded into the relay.
2. Select the Firmware Version, and Order Code options for the new setpoint file.
3. For future reference, enter some useful information in the **Description** box to facilitate the identification of the device and the purpose of the file.
4. To select a file name and path for the new file, click the button beside the **File Name** box.
5. Select the file name and path to store the file, or select any displayed file name to replace an existing file. All setpoint files should have the extension **.CID**.
6. Click **OK** to complete the process. Once this step is completed, the new file, with a complete path, is added to the software environment.

Note:

Offline settings files can be created for invalid order codes in order to support file conversion from different products, upgrades, and special orders. To validate an order code, visit the GE Multilin online store. Filenames for setting files cannot have a period character (.) other than the one that is added in front of CID.

3.4.3.7 UPGRADING SETPOINT FILES TO A NEW REVISION

It is often necessary to upgrade the revision for a previously saved setpoint file after the firmware has been upgraded. This is illustrated in the following procedure:

1. Establish communications with the relay.
2. Select the **Status > Information > Main CPU** menu item and record the Firmware Version.
3. Load the setpoint file to be upgraded into the EnerVista D&I Setup 8 Series setup software environment.
4. In the File pane, select the saved setpoint file.
5. From the main window menu bar, select the **Offline > Edit Settings File Properties** menu item and note the File Version of the setpoint file. If this version is different from the Firmware Revision noted in step 2, select a New File Version that matches the Firmware Revision from the pull-down menu. For example, if the firmware revision is J0J08AA150.SFD (Firmware Revision 1.50) and the current setpoint file revision is 1.10, change the New File Version to 1.5x.
6. Enter any special comments about the setpoint file in the **Description** field.
7. Select the desired firmware version from the **New File Version** field.
8. When complete, click **OK** to convert the setpoint file to the desired revision.

3.4.3.8 PRINTING SETPOINTS

EnerVista D&I Setup allows you to print partial or complete lists of setpoints. Use the following procedure to print a list of setpoints:

1. Select a previously saved setpoints file in the File pane or establish communications with a relay.
2. If printing from an online device, select the **Online > Print Device Information** menu item. If printing from a previously saved setpoints file, select the **Offline > Print Settings File** menu item.
3. The Print/Export Options dialog box appears. Select **Setpoints** in the upper section and select either **Include All Features** (for a complete list) or **Include Only Enabled Features** (for a list of only those features which are currently used) in the filtering section and click **OK**.
4. Setpoint lists can be printed in the same manner by right clicking on the desired file (in the file list) or device (in the device list) and selecting the **Print Device Information** or **Print Settings File** options.

3.4.3.9 PRINTING VALUES FROM A CONNECTED DEVICE

A complete list of actual values can also be printed from a connected device with the following procedure:

1. Establish communications with the desired relay.
2. From the main window, select the **Online > Print Device Information** menu item
3. The Print/Export Options dialog box will appear. Select **Actual Values** in the upper section and select either **Include All Features** (for a complete list) or **Include Only Enabled Features** (for a list of only those features which are currently used) in the filtering section and click **OK**.

Actual values lists can be printed in the same manner by right clicking on the desired device (in the device list) and selecting the **Print Device Information** option.

3.4.3.10 LOADING SETPOINTS FROM A FILE

Note:

An error message occurs when attempting to upload a setpoint file with a revision number that does not match the relay firmware.

The following procedure illustrates how to load setpoints from a file. Before loading a setpoints file, it must first be added to the software environment.

1. Select the previously saved setpoints file from the File pane of the main window.
2. Select the **Offline > Edit Settings File Properties** menu item and verify that the corresponding file is fully compatible with the hardware and firmware version of the target relay.
3. Right-click on the selected file and select the **Write Settings File to Device** item.
4. Select the target relay from the list of devices shown and click **Send**. If there is an incompatibility, an Incompatible device order codes, versions or Serial Locks error will occur.

If there are no incompatibilities between the target device and the settings file, the data is transferred to the relay. An indication of the percentage completed is shown in the bottom of the main window.

3.4.3.11 UNINSTALLING FILES AND CLEARING DATA

The relay can be decommissioned by turning off the power to the unit and disconnecting the wires to it. Files can be cleared after uninstalling Emervista or the relay, for example to comply with data security regulations. On the computer, settings files can be identified by the `.CID` extension.

To clear the current settings file do the following:

1. Create a default settings file.
2. Write the default settings file to the relay.
3. Delete all other files with the `.CID` extension.
4. Delete any other data files, which can be in standard formats, such as `COMTRADE` or `.csv`.

You cannot directly erase the flash memory, but all records and settings in that memory can be deleted. Do this from the front panel or EnerVista D&I Setup using: **Command > Clear All Records**

3.4.4 QUICK SETUP

The **Quick Setup** item can be accessed online or offline in EnerVista D&I Setup. Settings changes can be made from both of these screens.

Quick Setup is designed for quick and easy user programming. Power system parameters, and settings for some simple overcurrent elements are easily set. The **Quick Setup** screen works as follows:

- Settings names and units can be viewed at this screen. To view the range of the settings, hover the cursor over the setpoint value field.
- Configure and save the settings as required.
- The **Save**, **Restore** and **Default** buttons function the same as in the individual setting setup screens.
- If you enter a setting value which exceeds the range, when you attempt to save it a warning dialog box will appear. You must correct the setting value to ensure that it is within the permissible range and save it to proceed.

3.4.5 UPGRADING RELAY FIRMWARE

To upgrade the firmware, follow the procedures listed in this section. Upon successful completion of this procedure, the relay will have new firmware installed with the factory default setpoints. The latest firmware files are available from the GE website.

Note:

EnerVista D&I Setup prevents incompatible firmware from being loaded into a relay.

Uploading firmware on a WiFi interface is not allowed.


Before upgrading firmware, it is very important to save the current settings to a file on your PC. After the firmware has been upgraded, it will be necessary to load this file back into the relay.

3.4.5.1 LOADING NEW RELAY FIRMWARE

Do the following to load new firmware into the relay's flash memory.

1. Connect the relay to the local PC and save the setpoints to a file.
2. Select the **Maintenance > Update Firmware** menu item. A screen appears with information on how long the upload will take. Select **OK** to proceed.
3. EnerVista D&I Setup requests the new firmware file. Locate the folder that contains the firmware file to load into the relay. The firmware filename has the following format.

J2 J08 A A 150 . SFD

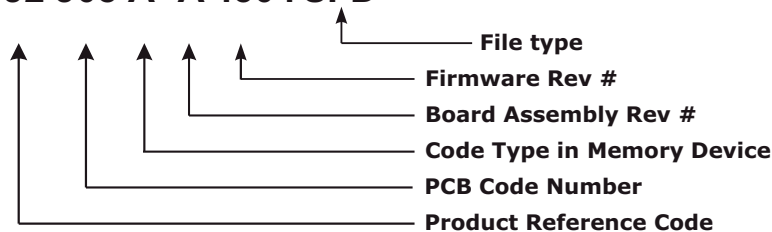

A screen appears advising that a backup of the settings file should be made before proceeding with the firmware upgrade. Select **YES** to proceed.

4. EnerVista D&I Setup now prepares the relay to receive the new firmware file. The front panel momentarily displays `Upload Mode`.
5. A screen appears confirming the firmware versions of the target device and the selected `.SFD`. Click **YES** to proceed with the firmware loading process.
6. EnerVista D&I Setup will prompt the user to reboot the relay after both the Boot 1 and Boot 2 uploads.

Note:

*The relay should be rebooted BEFORE pressing **OK**.*

7. Wait for the Comms upload process to complete.
8. Wait for the Mains upload process to complete.
9. EnerVista D&I Setup notifies you when the relay is successfully updated.

Note:

Wait for the relay to boot up, then cycle power to the relay to complete the firmware update process.

After successfully updating the firmware, the relay is not in service and requires setpoint programming. To communicate with the relay, the communication settings may have to be manually reprogrammed.

When communication is established, you must reload the saved setpoints back into the relay.

Modbus addresses assigned to features, settings, and corresponding data items (i.e. default values, min/max values, data type, and item size) may change slightly from version to version of firmware. The addresses are rearranged when new features are added or existing features are enhanced or modified.

3.4.6 SLD CONFIGURATOR

The SLD Configurator allows users to create customized single line diagrams (SLD) for the front panel display. The SLDs must be configured from the SLD Configurator in the EnerVista D&I Setup, located under **Setpoints > SLD Configurator**. The SLD Configurator allows breakers, switches, metering, and status items on the SLD.

SLDs are viewed from the relay front panel and individual SLD pages can be selected for the default home screen pages. The relay provides several SLD pages. Each page can have a combination of active and passive objects. Status, metering, and control objects are active while the static images for bus, generator, motor, transformer, ground, etc. are passive objects.

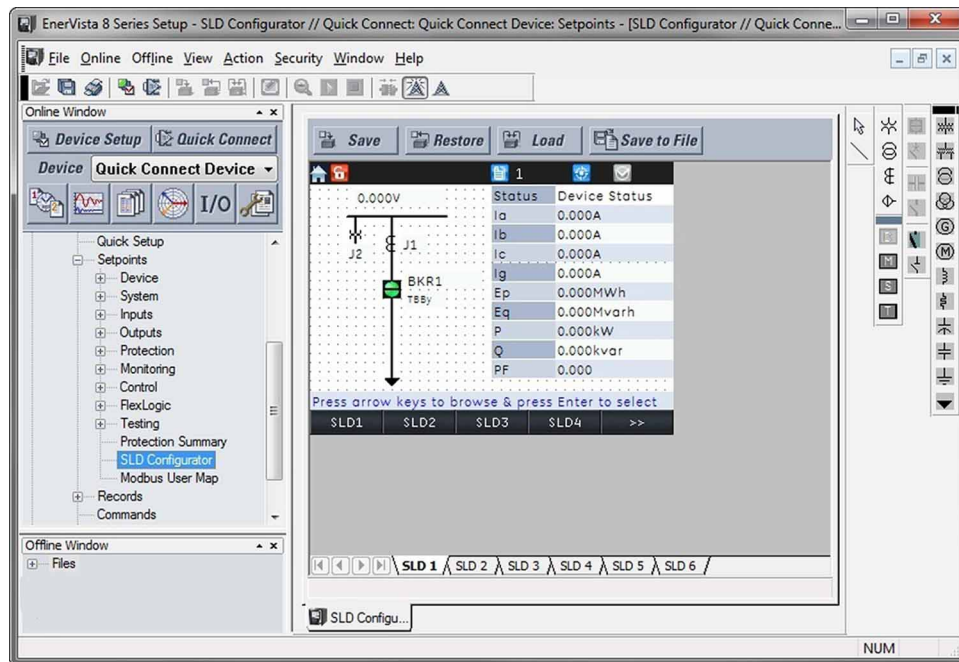


Figure 76: SLD Page

For optimum use, the first SLD page can be used for the overall SLD and the subsequent pages can be used for breaker/switch specific CT/VT placement, metering and status. Once the configurable SLDs are programmed, they are saved within the relay settings file. The SLD pages can also be saved individually as local XML files. The locally stored XML files can then be reloaded to generate another diagram. SLDs represent objects using GE symbols (similar to ANSI).

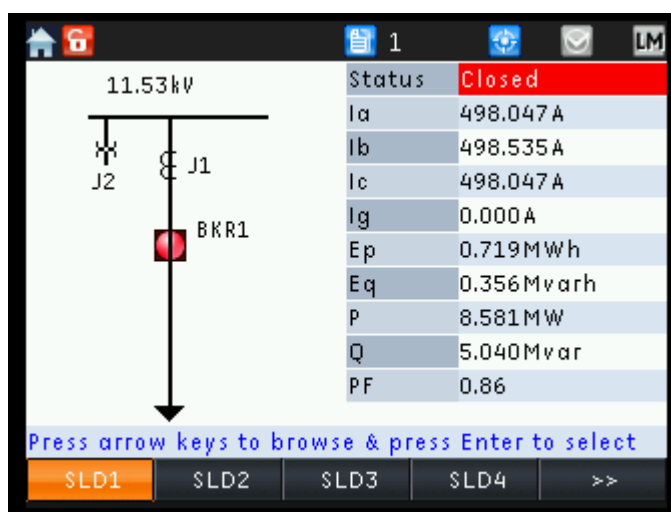


Figure 77: Template SLD

The following figure shows the objects that are available for design in the SLD Configurator and their maximum usage limits [X]. The maximum limit reflects the maximum possible order code.

Column1	Column2	Column3	Column4
Select	VT (GE) [12]	Breaker (GE) [1]	Transformer 2W (GE) [2]
Line [50]	VT (IEC) [12]	Breaker (IEC) [1]	Transformer 3W (GE) [2]
Separator	CT (GE) [12]	Separator	Transformer 2W (IEC) [2]
	CT (IEC) [12]		Transformer 3W (IEC) [2]
	Separator		Generator [2]
	Device Status [1]	Separator	Motor [2]
	Metering Object [15]	Disconnect Switch (GE) [9]	Reactor (for grounding) [5]
	Status Object [15]	Disconnect Switch (IEC) [9]	Resistor (for grounding) [5]
	Text Object [20]	Separator	Capacitor (polarity) [5]
	Remote Breaker (GE) [3] Remote Breaker (IEC) [3]		Capacitor (non-polarity) [5]
	Separator		Ground [10]
			Load [5]
			Separator

Figure 78: SLD Configurator Component Library

3.4.6.1 CONTROL OBJECTS

The control objects consist of selectable breakers and disconnect switches. The following figure shows the different symbols in the GE Standard style and IEC style. If the switching element is tagged, blocked, or bypassed, indicators with the letters **T**, **B**, and **By** appear on the lower right corner of the element. The breaker/switch name is displayed at the top of the object.

Note:

The displayed breaker name is configured in the setpoint **Setpoints > System > Breakers > Breaker[X] > Name**. This setpoint has a 13-character limit. The name should be kept to a minimum so that it appears properly on the SLD.

Component		Symbols	
		GE	IEC
Breaker	BKR Open		
	BKR Closed		
	BKR Bad Status		
	BKR Tagged (T) /Blocked (B) /Bypassed (By)		
Breaker (Truck)	BKR Racked Out & Open		
	BKR Racked Out & Closed		
	BKR Racked Out & Bad Status		
	BKR Racked In & Open		
	BKR Racked In & Closed		
	BKR Racked In & Bad Status		
Contactor	Contactor Open		
	Contactor Closed		
	Contactor Unknown Status		
Disconnect Switch	SW Open		
	SW Closed		
	SW Unknown Status		
	SW Intermediate		
	SW Tagged (T) /Blocked (B) /Bypassed (By)		

Figure 79: Control Object Symbols

Note:
GE symbols are color-coded ANSI symbols.

The control objects status follows the color scheme from the **Setpoints > Device > Front Panel > Display Properties > Color Scheme** setting. By default, this setting is set to *Green (open)*. If set to *Red (open)*, the status colors are reversed.

If the setting is used, the breaker symbols automatically change to the Truck CB symbols. The SLD assumes that if the Breaker Racked-In/Racked-Out input is used (anything other than *Off*), the appropriate Truck CB symbol will be used.

The following figure shows the orientation available for the control objects. The default position for the control objects is 0 degrees. Orientation in multiple directions allows for configuration of the single line diagram according to the existing drawings and ensure the correct side for the fixed/moving contacts.

Orientation	Breaker (IEC)	Breaker (GE)	Contactor (IEC)	Contactor (GE)	Switch (IEC)	Switch (GE)
0 degrees						
90 degrees						
180 degrees				0 Degrees		
270 degrees				90 Degrees		

Figure 80: Orientation for Breakers and Switches

3.4.6.2 STATUS OBJECTS

The status objects consist of digital operands. Up to 15 digital status elements can be configured per SLD page. The status object acts as an LED on the screen. If the diagram shows a gray circle, it means the assigned input is low. If it shows a red circle, the assigned input is high. The following figure shows an example of the Reclose Blocked signal in both On and Off state.

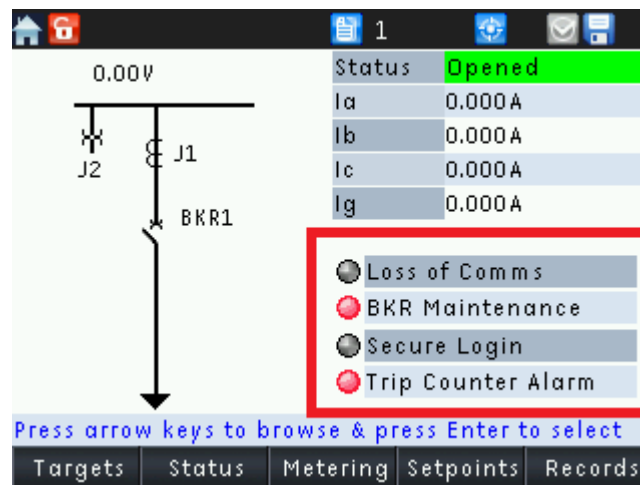


Figure 81: Reclose Blocked signal

In addition, Remote Breaker status objects are added for GE and IEC style. Remote breaker status allows monitoring of three distant breakers. These objects are not controllable and hence cannot be used for selection and operation.



3.4.6.3 METERING OBJECTS

The metering objects consist of metering elements. Up to 15 metering elements can be configured per SLD page. The metering object has an input for all the available FlexAnalog values. The units for these values are dynamically scaled as per the defaults. The following figure shows the metering element on a configured SLD.

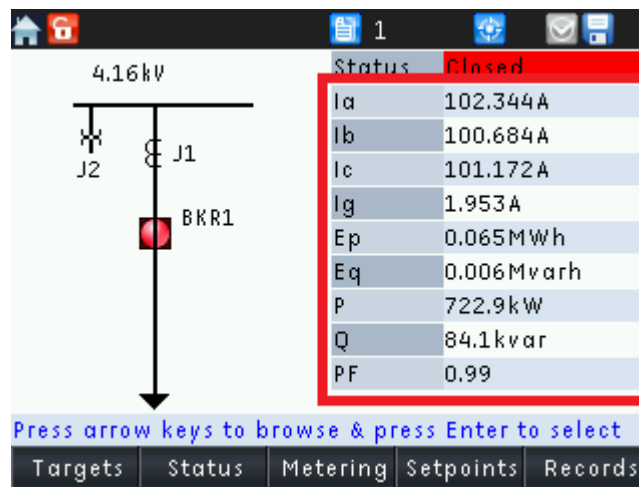


Figure 82: Metering Element on configured SLD

3.4.6.4 DEVICE STATUS OBJECT

The configurable SLD feature in the relay allows only one device status object per SLD page. The device status does not have any properties. It is simply shown as **Status: [device status]**.

3.4.6.5 STATIC OBJECTS

Static objects are used as simple bitmap images or text/drawing blocks to complete the single line diagram. There is no control associated with these static objects. The static objects consist of drawing tools, text object, and power system components.

3.4.6.6 FRONT PANEL INTERACTION

8 Series relays use the Select-Before-Operate (SBO) mechanism for local control of breakers and switches [IEC 61850-7-2]. Initially, the diagram can be browsed through all available breakers and switches by using the navigation keys. After navigation, selection must be made for the breaker or switch object by pressing the **Enter** key. After selecting the desired switch or breaker, control operations can then be carried out on the selected switch or breaker. The relay allows local opening, closing, tagging, blocking, and bypassing. Front panel control is only allowed when the relay is in Local Mode.

3.4.6.6.1 NAVIGATION

The SLD can be accessed in two ways from the front panel of the relay. The original location for the SLD pages is under **Status > Summary > SLD (Single Line Diagram) [x]**. However, a more convenient way to access an SLD page is by setting it as a default home screen at **Setpoints > Device > Front Panel > Home Screens > Home Screen1**. Pressing the home button more than once rotates through the configured home screens. If the desired SLD is set to **Home Screen 2** through **Home Screen 10**, it can be activated by pressing home button until it appears on the screen. If no home screen is configured, the default screens become active. If the default screens are disabled, **Status > Summary > Values** screen is shown.

3.4.6.6.2 BREAKER/SWITCH BROWSING AND SELECTION

While in the SLD screen, only one page is active at any point of time. If SLD1 is active, only breakers and switches on SLD1 can be operated and controlled. By default, when entering the SLD menu, the screen displays SLD1. SLD2 through SLD6 can be accessed through the navigation pushbuttons as shown in the **Active element selection with flash message** figure, found later in this section.

To browse through the control elements on the SLD page, the navigation keys can be used. On the rugged front panel, the up and down keys can be pressed for navigation and on the membrane front panel, up, down, left, and right keys can be pressed. With the rugged front panel navigation, pressing down sequentially rotates through all

the available breakers and switches on the screen. Pressing the up key rotates through in a reverse order. With the membrane front panel, the up, down, left, and right keys can navigate to the closest breaker/switch depending on the key press direction.

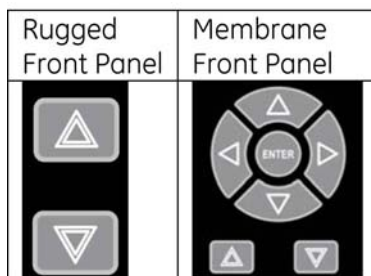


Figure 83: Navigation keys

While browsing through switches/breakers the active element is shown with a blue colored border around it. To select a breaker/switch, the browsing indicator border must be around the desired breaker or switch. The breaker or switch can then be selected by pressing the **Enter** key. As the breaker or switch is being selected, a flash message appears indicating that the breaker or switch has been selected as shown in the following figure. Once the element is selected for operation, the SLD control pushbuttons appear and the color of the highlighter will change to maroon indicating that the breaker or switch is selected. By default, the control pushbuttons are programmed for **Tag**, **Block**, and **Bypass**. For each control action, a flash message is displayed.

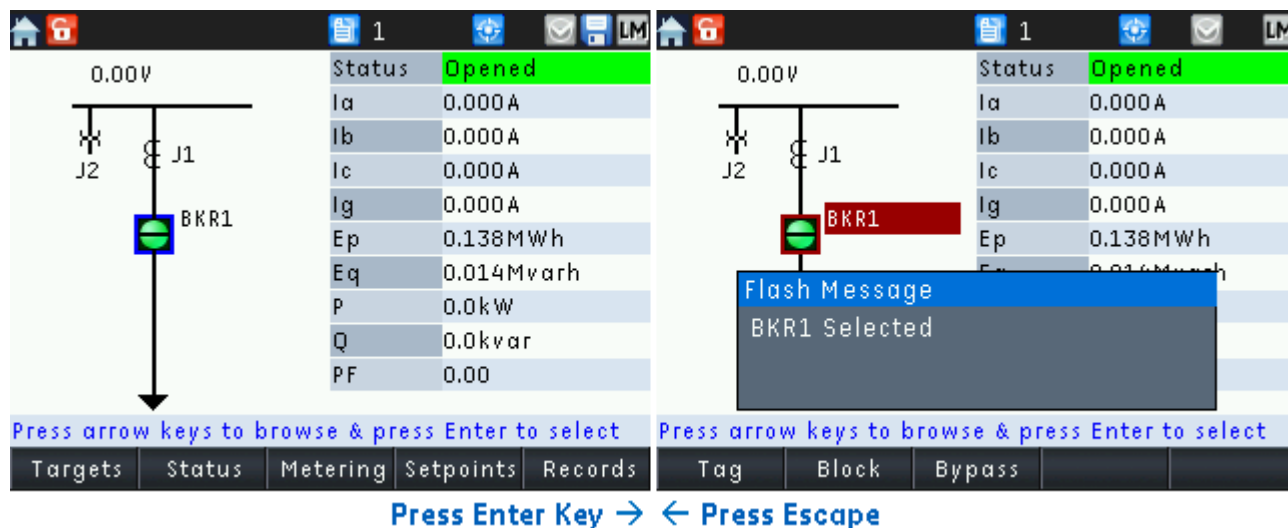


Figure 84: Active element selection with flash message

Browsing and selection is allowed only when the relay is in Local Mode and the user has security access of at least operator level. To check if the relay is in local mode, look for an **LM** symbol on the task pane at the top of the screen. Pressing navigation keys on SLD pages while in remote mode does nothing.

Control pushbuttons appearing on the SLD page are only active while a control object is selected.

The control object is deselected if you navigate to any screen other than the SLD or by pressing the **Escape** key. If no action is taken after selection, the object is automatically deselected after the Bkr/Sw Select timeout setting (**Setpoints > Control > Control Mode > Bkr/Sw Select Timeout**). Once deselected, the control pushbutton labels return to the SLD page navigation labels and the color of the box around the object changes back to blue for browsing. Pressing **Escape** once more removes the browsing highlight around the objects. If inactive during browsing for the timeout setting (**Setpoints > Device > Front Panel > Message Timeout**), the browsing highlight around the object disappears. If an object is selected, **Home** button operation is prohibited. The object must be deselected by pressing **Escape** in order for the **Home** button to function.

After upgrading from firmware versions 1.3x to 1.7x, the breaker/contactor starting/stopping operations from the front panel now follow a select-before-operate mechanism. The breaker/contactor must be first selected by browsing and pressing the **Enter** key for selection. Once selected, the function can be started or stopped with the front panel's pushbuttons.

3.4.6.6.3 CONTROL OPERATIONS

The control operations carried out through the front panel of the relay are done only in Local Mode (**Setpoints > Control > Local Control Mode > Local Mode**). Opening and closing operations can be carried out by pressing the **Open** and **Close** pushbuttons on the relay front panel. Other operations such as tagging, blocking and bypassing can be carried out by pressing the control pushbuttons that appear after the control object selection.

Note:

Remote operations are allowed for opening, closing, blocking, and bypassing. Tagging must be done locally.

It is recommended that tagging is only used for maintenance purposes. When a breaker or a switch is tagged, it cannot be bypassed although the letters **By** may appear below the element on SLD.

If breaker is selected and relay status is changed to Out-of-Service, the breaker control actions, such as tag, blocked, bypass and open/close are blocked. The breaker may remain in the selected state, but no action can be executed.

Once the selected breaker or switch is tagged, a letter **T** appears below the associated element. Similarly, for blocking, letter **B** appears and for bypassing, letters **By** appear below the associated breaker or switch as shown in the last column of the following figure. The blocking and bypassing letters also appear if the breakers/switches are blocked or bypassed remotely. These are linked to their respective breaker/switch in the SLD Configurator window so that when that breaker/switch is deleted, the letters also get deleted.

Permitted breaker/switch operations are described in the following figure when various letter indications are present under the control element.

Breaker/Switch Position	Letter Indication	Operation	Sample Indication
Open	B	Closing is blocked.	
Closed	B	Opening is blocked.	
Open	B By	Closing is blocked but bypassing is allowed. Closing is permitted.	
Closed	B By	Opening is blocked but bypassing is allowed. Opening is permitted.	
Open or Closed	T	Tagged by operator. No operation allowed.	
Open or Closed	T By	Tagged by operator. No operation allowed.	
Open or Closed	T B By	Tagged by operator. No operation allowed.	

Figure 85: Permitted operations

3.4.7 FLEXCURVE EDITOR

The FlexCurve Editor is designed to graphically view and edit the FlexCurve. The FlexCurve Editor screen is shown as follows for FlexCurves A, B, C, and D:

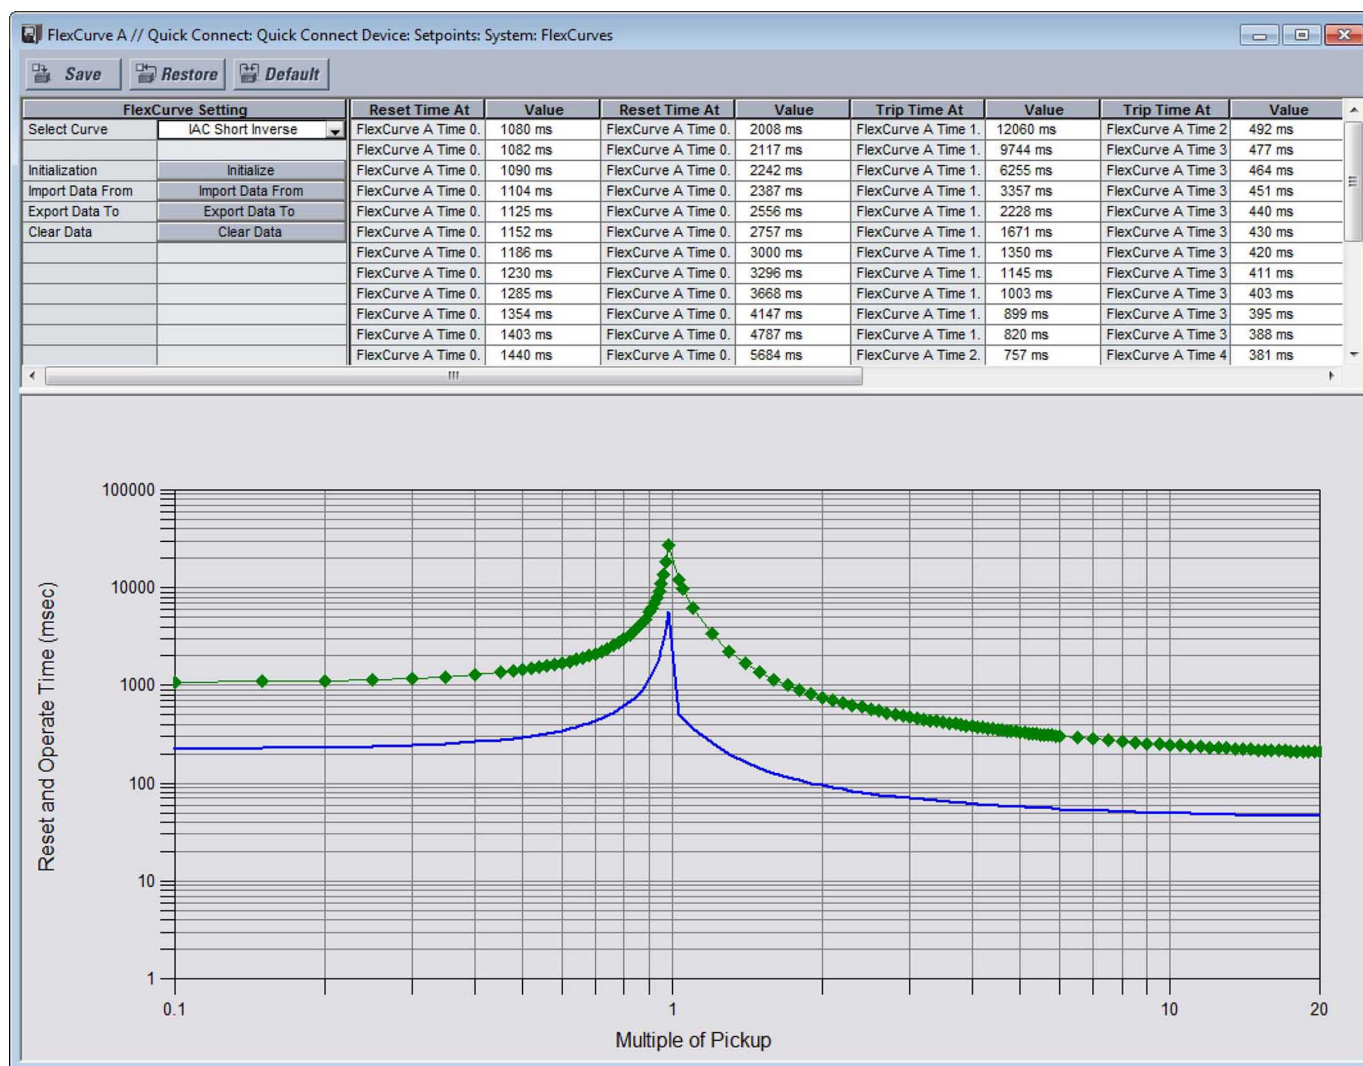


Figure 86: FlexCurve editor

- The Operate Curves are displayed, which can be edited by dragging the tips of the curves
- A Base curve can be plotted for reference, to customize the operating curve. The blue colored curve in the picture is a reference curve. It can be Extremely Inverse, Definite Time, etc.
- The Trip (Reset and Operate) Times in the tables and curves work interactively i.e., changing the table value affects the curve shape and vice versa.
- Save Configured Trip Times.
- Export Configured Trip Times to a CSV file
- Load Trip Times from a CSV File
- The screen above shows the model for viewing FlexCurves. Select **Initialize** to copy the trip times from the selected curve to the FlexCurve.

3.4.8 TRANSIENT RECORDER (WAVEFORM CAPTURE)

EnerVista D&I Setup can be used to capture waveforms (or view trace memory) from the relay at the instance of a pickup, trip, alarm, or other condition.

Note:

The COMTRADE Version used on 8 Series relays is C37.111-1999.

- With EnerVista D&I Setup running and communications established, select the **Records > Transients > Transient Records** menu item to open the Transient Recorder Viewer window.
- Click on **Trigger** to trigger a waveform capture.
- To view the captured waveforms, click on the **Launch Viewer** button. A detailed Waveform Capture window appears as shown below.
- Click on the **Save** button to save the selected waveform to the local PC. A new window appears, requesting the file name and path. One file is saved as a COMTRADE file, with the extension CFG. The other file is a DAT file, required by the COMTRADE file for proper display of waveforms.
- To view a previously saved COMTRADE file, click the **Open** button and select the corresponding COMTRADE file.

TRIGGER TIME & DATE

Displays the time and date of the Trigger.

VECTOR DISPLAY SELECT


Click here to open a new graph to display vectors.

CURSOR LINE POSITION

Indicates the cursor line position in time with respect to the beginning of the buffer.

DELTA

Indicates time difference between the two cursor lines.

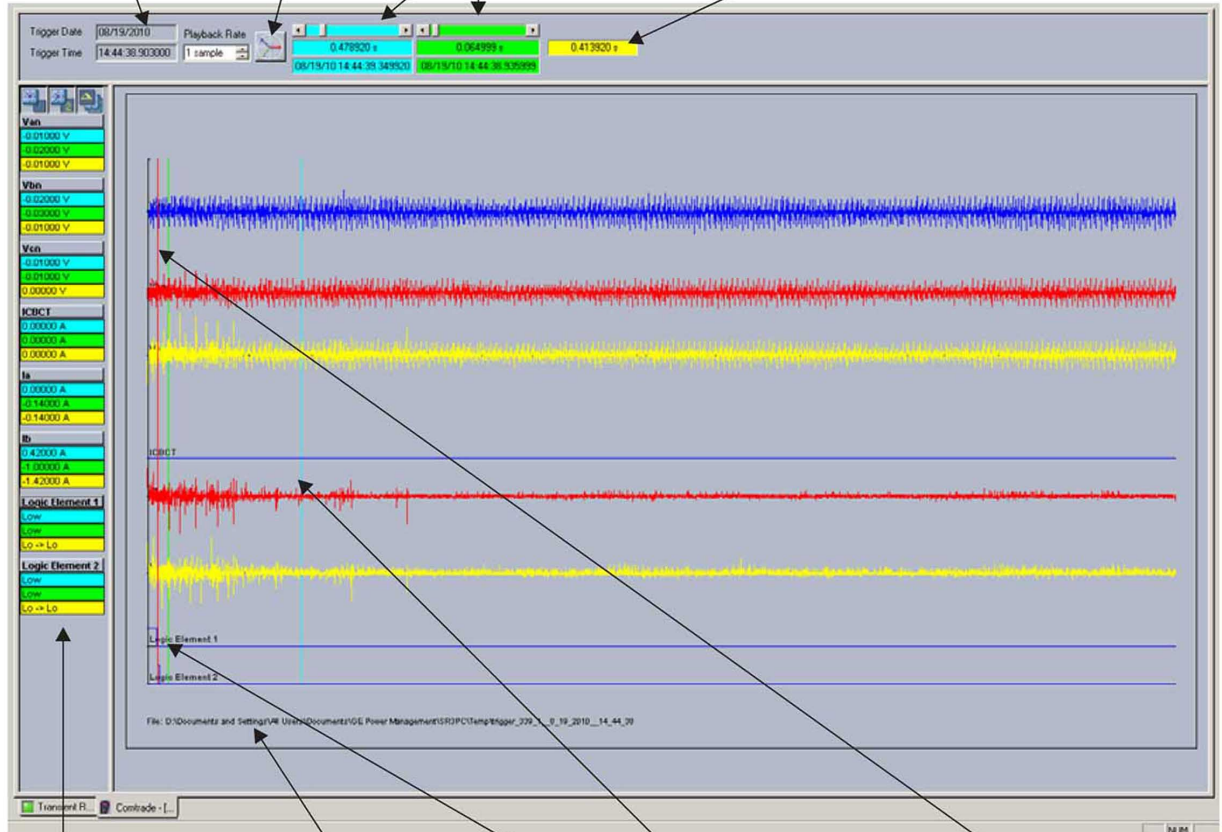

Display graph values at the corresponding cursor line. Cursor lines are identified by their colors.

FILE NAME
Indicates the file name and complete path (if saved).

CURSOR LINES
To move lines, locate the mouse pointer over the cursor line, then click and drag the cursor to the new position.


TRIGGER LINE
Indicates the point in time for the trigger.

Figure 87: Oscillography

- The red vertical line indicates the trigger point.
- The date and time of the trigger are displayed at the top left corner of the window. To match the captured waveform with the event that triggered it, make note of the time and date shown in the graph, then find the

event that matches the same time in the event recorder. The event record provides additional information on the cause and system conditions at the time of the event.

- From the window main menu bar, press the **Preference** button



Preference Button

to open the COMTRADE Setup page, in order to change the graph attributes. Change the color of each graph as desired and select other options as required by checking the appropriate boxes. Click **OK** to store these graph attributes and to close the window. The Waveform Capture window reappears based on the selected graph attributes.

- To view a vector graph of the quantities contained in the waveform capture, press the **View Phasors** button to display the following window:

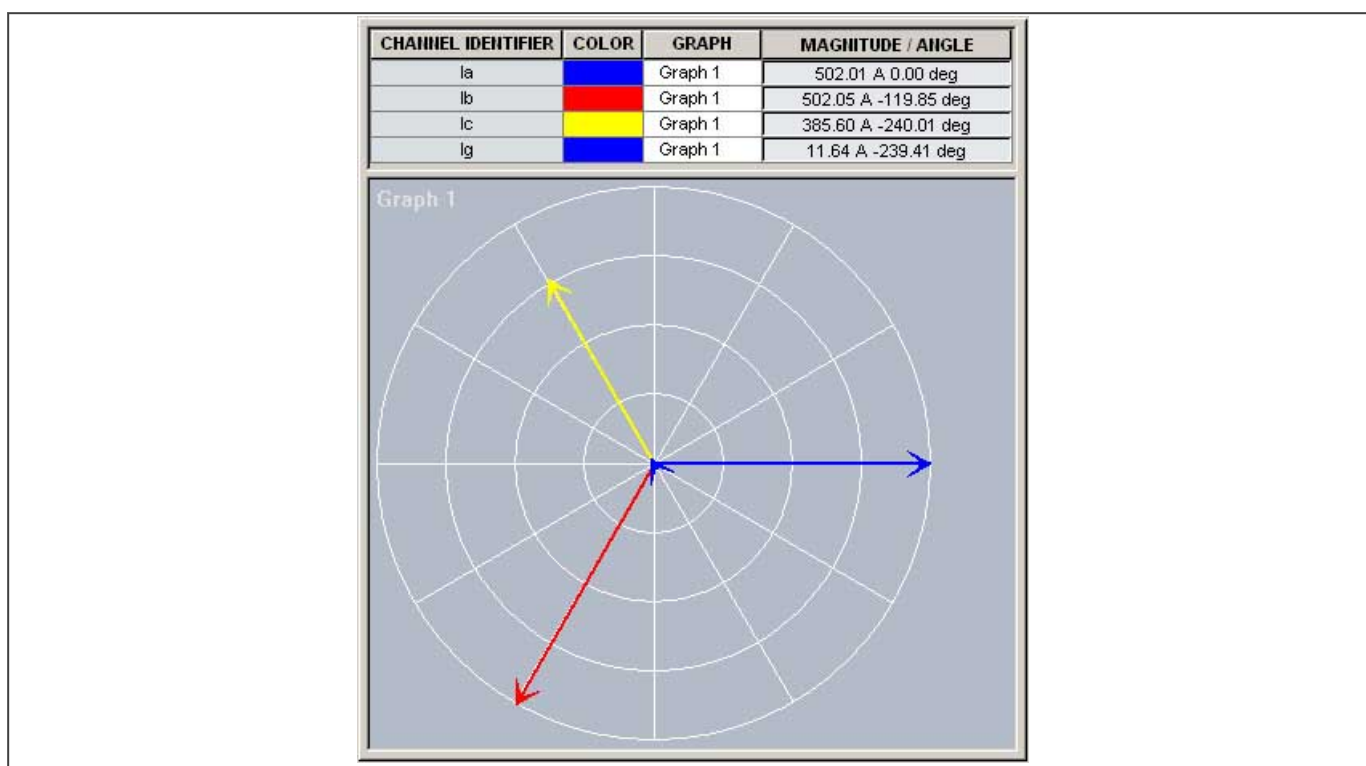


Figure 88: Vector graph

3.4.9 PROTECTION SUMMARY

Protection Summary is a single screen which holds the summarized information of different settings from Grouped Elements and Monitoring Elements.

The Protection Summary Screen allows the user to:

- view the output relay assignments for the elements
- modify the output relay assignments for the elements
- view the Function status for the elements
- navigate to the respective element screen on a button click.

With EnerVista D&I Setup running and communications established, select the **Setpoints > Protection Summary** menu item to open the Protection Summary window.

3.4.10 FLEXLOGIC FAVOURITES

With EnerVista D&I Setup version 2.70 and above, use the FlexLogic Favourites to create a customized list of FlexLogic operands that use Format Code FC142.

Select **Edit FlexLogic Favourites** from either the offline menu or the popup menu from an offline CID file to access a screen where the FlexLogic Favourite list can be modified. The FlexLogic Favourites screen includes a left tree that shows all the FlexLogic Operands available for the CID file. The right tree shows all the FlexLogic operands included in the Favourites list.

In the FlexLogic Favourites screen, press the **Smart Update** button to examine the CID file. Any FlexLogic operands associated with an enabled feature/element will be added to the FlexLogic Favourites list. Operands will never be automatically removed from the Favourites list, but can be removed manually by selecting the operand and pressing the << button. Operands can also be added to the Favourites list by selecting the operands in the left tree and pressing the >> button.

Select the check-box to use FlexLogic Favourites in any screen with a setting that is configured using the FlexLogic operand (FC142).

FlexLogic Favourites is enabled when the settings are shown in **BOLD** and the background color of the setting is brighter.

3.4.11 OFFLINE SETTINGS FILE CONVERSION

EnerVista D&I Setup supports conversion of offline settings files created in the SR Series platform. This feature allows the conversion of existing offline setting files to 8 Series files.

EnerVista D&I Setup reduces the manual effort required when moving from an older product to a newer product. The settings file conversion feature takes an existing settings file and generates a new settings file compatible with the relay specified with the order code. After the import is complete, the results are displayed in an interactive results window.

3.4.11.1 CONVERTING LEGACY FILES

Enervista version 1.4x and above supports conversion of SR 745 files to 8-series settings files.

The conversion can only be initialized from the Offline/New Settings File commands located in the taskbar, as follows:

1. In the menu taskbar, click on **Offline** and select the **New Settings File** item. The Create New Settings File dialog box appears, which allows for the setpoint file conversion.
2. Select the Firmware Version and Order Code option for the new setpoint file.
3. For future reference, enter some useful information in the Description box to facilitate the identification of the device and purpose for the file.
4. To select the file name and path for the new file, click the button beside the File Name box.
5. To select the SR settings file used for initialization, check the box to the left of Initialize Settings from SR Settings File.
6. To locate and select the file to convert, click the ellipsis button beside the Initialize Settings from SR Settings File box.
7. Click **OK** to begin the conversion and complete the process. Once this step is completed, the new file, with a complete path, is added to the software environment.

Note:

EnerVista 8 Series Setup version 1.4x and above supports conversion of 5.0, 5.1 and 5.2 files. If the file version is less than 5.0 it must be converted to 5.2 using the latest 745 EnerVista Setup before doing the 845 conversion.

Note:

If there are settings that are not applicable to the later model, they are ignored and will not appear in the settings list.

3.4.11.2 CONVERSION SUMMARY REPORT

At the end of the conversion process, the results are summarized in a Settings Conversion Report.

The report is found under Device Definition in the offline file window.

Note:

Print the Settings Conversion Report immediately following conversion for future reference in case the report is removed or the settings are modified from the EnerVista D&I Setup.

3.4.11.3 RESULTS WINDOW

The conversion summary results window has the following columns:

- **SettingName:** the same tree structure as in the offline window, but with status icons
- **SettingValue:** the converted value for the settings file
- **Original SettingName:** setting name of the input file
- **Original SettingValue:** setting value of the input file

Note:

All other settings available (not shown in the conversion report) in the file are set to default and must be verified before putting the relay into service.

Settings in the results window are linked to setting screens. Click in the results window to navigate to the corresponding settings window.

Status Icons

The status icons show the conversion results:

-  Manual configuration required
-  Successful conversion
-  Value is not supported

Print Report

If desired, the conversion summary report can be printed using the File/Print command in the taskbar or it can be printed from the **GUI** print button.

Note:

Even if the report shows that a conversion has been successful (green checkbox icon), all settings must still be verified before putting the relay in service.

3.4.11.4 SELF-TEST ERRORS

The relay performs self-diagnostics at initialization (after power up), and continuously as a background task to ensure that the hardware and software are functioning correctly. There are two types of self-test warnings indicating either a minor or major problem. Minor errors indicate a problem with the relay that does not compromise protection and control functionality of the relay. Major errors indicate a problem with the relay which takes it out of service.



Caution:
Self-Test Warnings may indicate a serious problem with the relay hardware!

Upon detection of a minor problem, the relay does the following:

- Displays a detailed description of the error on the relay display as a target message
- Records the minor self-test error in the Event Recorder
- Flashes the **ALARM** LED

Upon detection of a major problem, the relay will:

- De-energize the relay assigned under setting Major Self-Test Relay if the relay is programmed for failsafe operation or energized if configured for non-failsafe operation.
- De-energize all output relays
- Turn off the **IN SERVICE** LED
- Flash the **TRIP** LED
- Assert the Self-Test Trip OP FlexLogic operand
- Display `Major Self-test error` with the error code as a target message
- Record the major self-test failure in the Event Recorder

When Alarm is selected as a function, upon detection of a major problem, the relay will:

- Flash the **ALARM** LED.
- Assert Self-Test Alarm OP FlexLogic operand.
- Display `Major Self-test error` with the error code as a target message
- Display `Major Self-test error` as a target message
- Record the major self-test failure in the Event Recorder.

Under both conditions, the targets cannot be cleared if the error is still active.

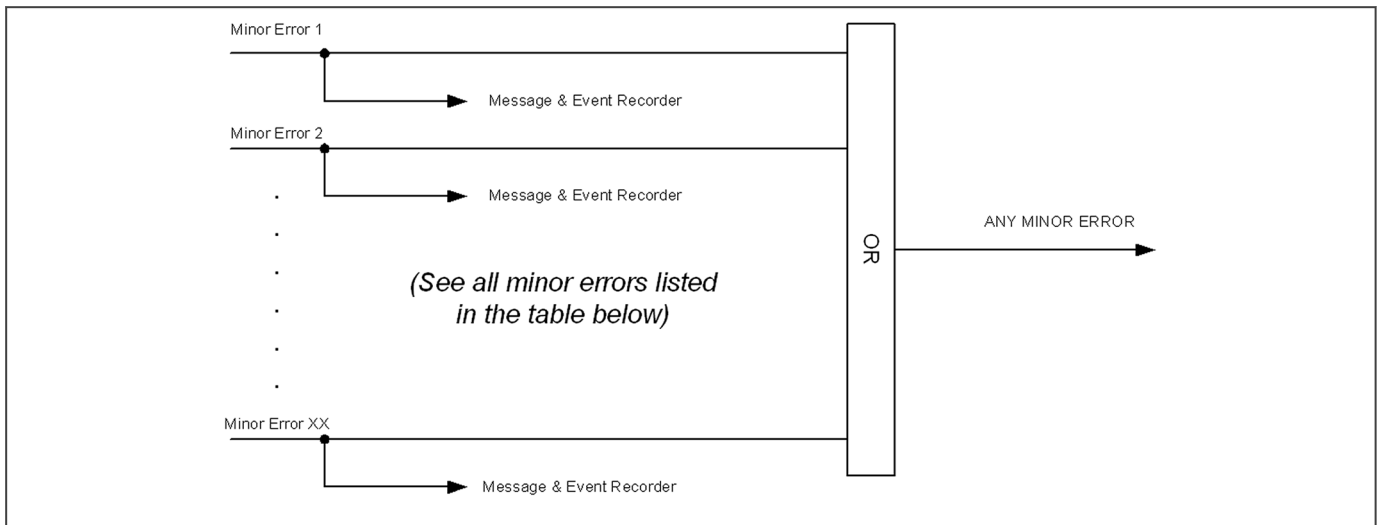


Figure 89: Minor Errors

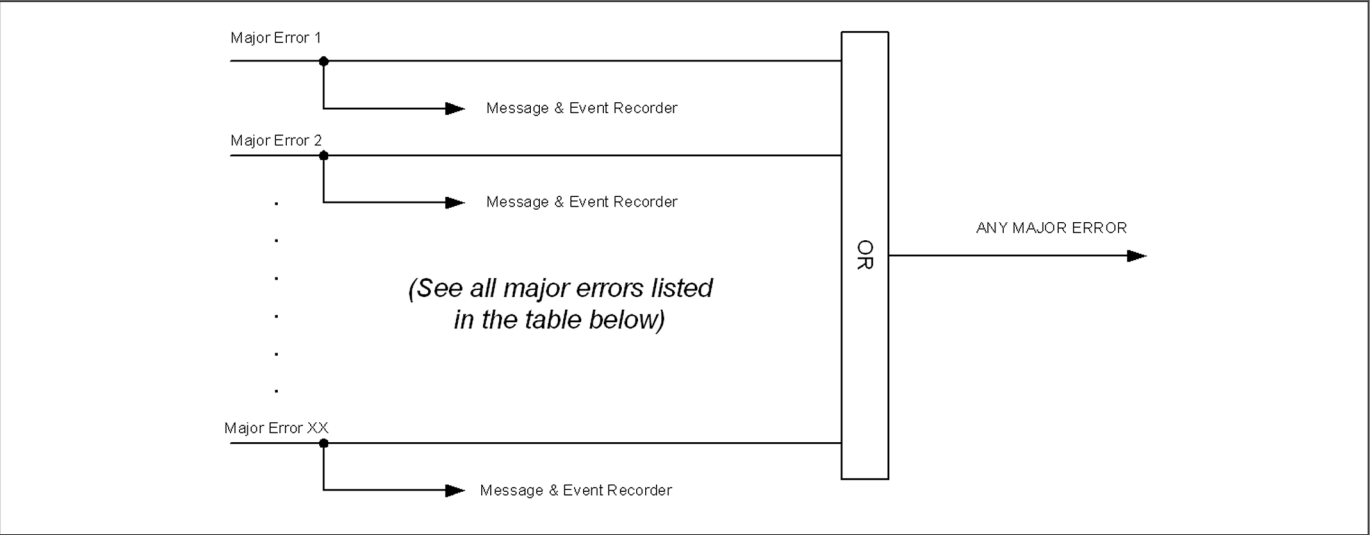


Figure 90: Major Errors

Minor self-test errors

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Order Code Error	Hardware doesn't match order code	Every 1 second	If alert doesn't self-reset then contact factory. Otherwise monitor re-occurrences as errors are detected and self-reset
CPU S/N Invalid	CPU card doesn't have valid data to match the order code.	Every 1 second	
Slot "\$" IO S/N Invalid ²	IO card located in slot \$ doesn't have valid data to match the order code.	Every 1 second	
Comms S/N Invalid	Comms card doesn't have valid data to match the order code.	Every 1 second	
CPanel S/N Invalid	Control Panel doesn't have valid data to match the order code.	Every 1 second	
PSU S/N Invalid	Power Supply Unit doesn't have valid data to match the order code.	Every 1 second	
RTC Error	The CPU cannot read the time from the real time clock	Every 1 second	
Product Serial Invalid	The product serial number doesn't match the product type	Every 1 second	
Comm Alert #1	Communication error between CPU and Comms board	Every 1 second	
Comm Alert #2		Every 1 second	
Comm Alert #3		Every 1 second	
FLASH Error	The permanent storage memory has been corrupted	Every 1 second	
SPI Error	Communication error between CPU and LEDs, Keypad or peripheral memory devices	Every 1 second	
Invalid MAC Address	MAC address is not in the product range	Every 1 second	
Calibration Error	Unit has default calibration values	Boot-up and every 1 second	
Clock Not Set	Clock has the default time	Every 1 second	Set clock to current time
WiFi Default Settings	SSID and Passphrase is the factory default	Every 1 second	Set SSID and Passphrase
Link Error Primary ³	Port 1 or Port 4 (depending on order code) is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Link Error Secondary	Port 5 is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Traffic Error Primary	Abnormally high amount of Broadcast and Uni-cast traffic on port 1 or port 4	Every 1 second	Contact site IT department to check network for malfunctioning devices
Traffic Error Secondary	Abnormally high amount of Broadcast and Uni-cast traffic on port 5	Every 1 second	Contact site IT department to check network for malfunctioning devices
Ambient Temperature >80C	The ambient temperature surrounding the product has exceeded 80C	Every 1 second	Inspect mounting enclosure for unexpected heat sources (i.e loose primary cables) and remove accordingly
High Rate Event	Abnormally high amounts of events have been generated so the relay has stopped logging to prevent further issues	Every 1 second	Ensure settings are not set close to nominal ratings. Ensure FlexLogic equations do not have impractical timing for status events
IRIG-B Failure	A bad IRIG-B input signal has been detected	Every 1 second	Ensure IRIG-B cable is connected, check cable functionality (i.e. physical damage or perform continuity test), ensure IRIG-B receiver is functioning, and check input signal level (it may be less than specification). If none of these apply, contact the factory.
<i>Note: IRIG-B is not available for the 859</i>			
CAN_1 Error		Every 1 second	
CAN_2 Error		Every 1 second	
Version Mismatch	CPU and Comms do not have the same revision on firmware	Boot-up and Every 1 second	Ensure that both the CPU and Comms FW was uploaded during the upgrade process
SelfTestFWUpdate	The updating of the firmware failed	Every 1 second	Re-try uploading firmware. If the upload doesn't work a second time contact factory
Remote CAN IO Mismatch	RMIO card detection mismatch	Every 1 second	Check RRTD connections, check if the RRTD configuration is still valid, Validate CANBUS IO.

¹ Failure is logged after the detection of 5 consecutive failures

² \$ is the slot ID (i.e. F, G, H etc.)

^{3a} Link Error Primary can take up to 12 seconds to appear

^{3b} To disable Link Error Primary target when not in use with SE order code, change IP address to 127.0.0.1

Major self-test errors

Major Self-test Error Message	Latched Target Message	Description of Problem	Frequency of Test	What to do
Relay Not Ready	No	PRODUCT SETUP INSTALLATION setting indicates relay is not in a programmed state.	On power up and whenever the PRODUCT SETUP INSTALLATION setting is altered.	Program all required settings and then set the PRODUCT SETUP INSTALLATION setting to <i>Ready</i> .
Major Self-Test (error code)	Yes	Unit hardware failure detected	Every 1 second	Contact the factory and supply the failure code as noted on the display.

The following note is applicable to all 8S products apart from the 859

Note:

When a total loss of power is present, the Critical Failure Relay (Output Relay 8) is de-energized.

3.4.11.5 SELF-TEST ERRORS

The relay performs self-diagnostics at initialization (after power up), and continuously as a background task to ensure that the hardware and software are functioning correctly. There are two types of self-test warnings indicating either a minor or major problem. Minor errors indicate a problem with the relay that does not compromise protection and control functionality of the relay. Major errors indicate a problem with the relay which takes it out of service.



Caution:
Self-Test Warnings may indicate a serious problem with the relay hardware!

Upon detection of a minor problem, the relay does the following:

- Displays a detailed description of the error on the relay display as a target message
- Records the minor self-test error in the Event Recorder
- Flashes the **ALARM** LED

Upon detection of a major problem, the relay does the following:

- De-energizes critical failure relay
- De-energizes all output relays
- Blocks protection and control elements
- Turns the **IN SERVICE** LED to red
- Flashes the **ALARM** LED
- Displays **Major Self-test error** with the error code as a target message
- Records the major self-test failure in the Event Recorder

Note:

The Critical Failure Relay (Output Relay 8) is energized when the relay is in-service, and no major error is present

Under both conditions, the targets cannot be cleared if the error is still active.

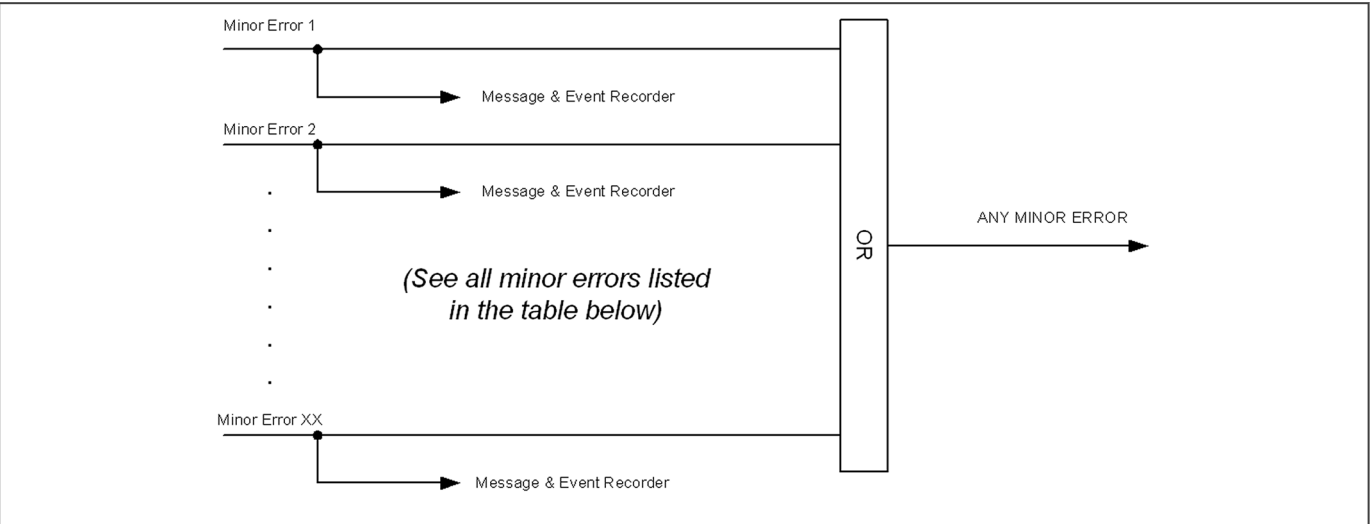


Figure 91: Minor Errors

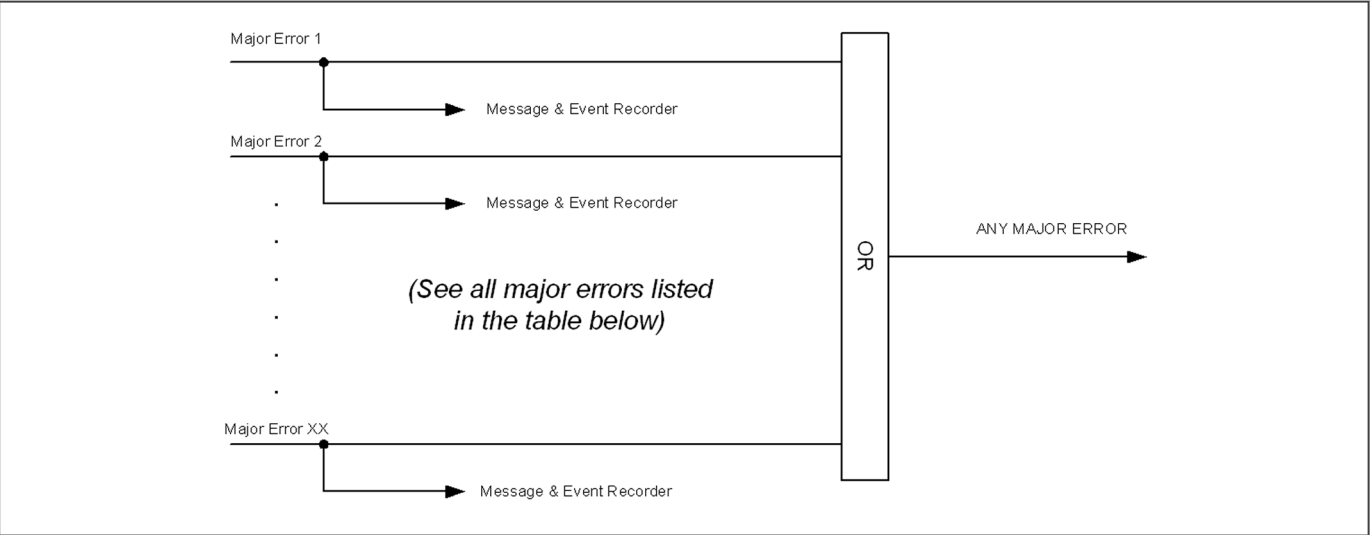


Figure 92: Major Errors

Minor self-test errors

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Order Code Error	Hardware doesn't match order code	Every 1 second	If alert doesn't self-reset then contact factory. Otherwise monitor re-occurrences as errors are detected and self-reset
CPU S/N Invalid	CPU card doesn't have valid data to match the order code.	Every 1 second	
Slot "\$" IO S/N Invalid ²	IO card located in slot \$ doesn't have valid data to match the order code.	Every 1 second	
Comms S/N Invalid	Comms card doesn't have valid data to match the order code.	Every 1 second	
CPanel S/N Invalid	Control Panel doesn't have valid data to match the order code.	Every 1 second	
PSU S/N Invalid	Power Supply Unit doesn't have valid data to match the order code.	Every 1 second	
RTC Error	The CPU cannot read the time from the real time clock	Every 1 second	
Product Serial Invalid	The product serial number doesn't match the product type	Every 1 second	
Comm Alert #1	Communication error between CPU and Comms board	Every 1 second	
Comm Alert #2		Every 1 second	
Comm Alert #3		Every 1 second	
FLASH Error	The permanent storage memory has been corrupted	Every 1 second	
SPI Error	Communication error between CPU and LEDs, Keypad or peripheral memory devices	Every 1 second	
Invalid MAC Address	MAC address is not in the product range	Every 1 second	
Calibration Error	Unit has default calibration values	Boot-up and every 1 second	
Clock Not Set	Clock has the default time	Every 1 second	Set clock to current time
IRIG-B Failure	A bad IRIG-B input signal has been detected	Every 1 second	Ensure IRIG-B cable is connected, check cable functionality (i.e. physical damage or perform continuity test), ensure IRIG-B receiver is functioning, and check input signal level (it may be less than specification). If none of these apply, contact the factory.
WiFi Default Settings	SSID and Passphrase is the factory default	Every 1 second	Set SSID and Passphrase

Minor Self-test Error Message ¹	Description of Problem	Frequency of Test	What to Do
Link Error Primary ³	Port 1 or Port 4 (depending on order code) is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Link Error Secondary	Port 5 is not connected	Every 1 second	Ensure Ethernet cable is connected, check cable functionality (i.e. physical damage or perform continuity test), and ensure master or peer device is functioning. If none of these apply, contact the factory.
Traffic Error Primary	Abnormally high amount of Broadcast and Uni-cast traffic on port 1 or port 4	Every 1 second	Contact site IT department to check network for malfunctioning devices
Traffic Error Secondary	Abnormally high amount of Broadcast and Uni-cast traffic on port 5	Every 1 second	Contact site IT department to check network for malfunctioning devices
Ambient Temperature >80C	The ambient temperature surrounding the product has exceeded 80C	Every 1 second	Inspect mounting enclosure for unexpected heat sources (i.e loose primary cables) and remove accordingly
High Rate Event	Abnormally high amounts of events have been generated so the relay has stopped logging to prevent further issues	Every 1 second	Ensure settings are not set close to nominal ratings. Ensure FlexLogic equations do not have impractical timing for status events
CAN_1 Error		Every 1 second	
CAN_2 Error		Every 1 second	
Version Mismatch	CPU and Comms do not have the same revision on firmware	Boot-up and Every 1 second	Ensure that both the CPU and Comms FW was uploaded during the upgrade process
SelfTestFWUpdate	The updating of the firmware failed	Every 1 second	Re-try uploading firmware. If the upload doesn't work a second time contact factory
Remote CAN IO Mismatch	RMIO card detection mismatch	Every 1 second	Check RRTD connections, check if the RRTD configuration is still valid, Validate CANBUS IO.

¹ Failure is logged after the detection of 5 consecutive failures

² \$ is the slot ID (i.e. F, G, H etc.)

^{3a} Link Error Primary can take up to 12 seconds to appear

^{3b} To disable Link Error Primary target when not in use with SE order code, change IP address to 127.0.0.1

Major self-test errors

Major Self-test Error Message	Latched Target Message	Description of Problem	Frequency of Test	What to do
Relay Not Ready	No	PRODUCT SETUP INSTALLATION setting indicates relay is not in a programmed state.	On power up and whenever the PRODUCT SETUP INSTALLATION setting is altered.	Program all required settings and then set the PRODUCT SETUP INSTALLATION setting to <i>Ready</i> .
Major Self-Test (error code)	Yes	Unit hardware failure detected	Every 1 second	Contact the factory and supply the failure code as noted on the display.

Note:

When a total loss of power is present, the Critical Failure Relay (Output Relay 8) is de-energized.

CHAPTER 4

CYBER-SECURITY

4.1 OVERVIEW

In the past, substation networks were traditionally isolated and the protocols and data formats used to transfer information between devices were often proprietary.

For these reasons, the substation environment was very secure against cyber-attacks. The terms used for this inherent type of security are:

- Security by isolation (if the substation network is not connected to the outside world, it cannot be accessed from the outside world).
- Security by obscurity (if the formats and protocols are proprietary, it is very difficult to interpret them).

The increasing sophistication of protection schemes, coupled with the advancement of technology and the desire for vendor interoperability, has resulted in standardization of networks and data interchange within substations. Today, devices within substations use standardized protocols for communication. Furthermore, substations can be interconnected with open networks, such as the internet or corporate-wide networks, which use standardized protocols for communication. This introduces a major security risk making the grid vulnerable to cyber-attacks, which could in turn lead to major electrical outages.

Clearly, there is now a need to secure communication and equipment within substation environments. This chapter describes the security measures that have been put in place for our range of Intelligent Electronic Devices (IEDs).

Note:

Cyber-security compatible devices do not enforce NERC compliance, they merely facilitate it. It is the responsibility of the user to ensure that compliance is adhered to as and when necessary.

This chapter contains the following sections:

Overview	136
The Need for Cyber-Security	137
Standards	138
Cybersecurity Implementation	146
RBAC User Management Cybersecurity Configuration Tool	160

4.2 THE NEED FOR CYBER-SECURITY

Cyber-security provides protection against unauthorized disclosure, transfer, modification, or destruction of information or information systems, whether accidental or intentional. To achieve this, there are several security requirements:

- Confidentiality (preventing unauthorized access to information)
- Integrity (preventing unauthorized modification)
- Availability/Authentication (preventing the denial of service and assuring authorized access to information)
- Non-repudiation (preventing the denial of an action that took place)
- Traceability/Detection (monitoring and logging of activity to detect intrusion and analyse incidents)

The threats to cyber-security may be unintentional (e.g. natural disasters, human error), or intentional (e.g. cyber-attacks by hackers).

Good cyber-security can be achieved with a range of measures, such as closing down vulnerability loopholes, implementing adequate security processes and procedures and providing technology to help achieve this.

Examples of vulnerabilities are:

- Indiscretions by personnel (users keep passwords on their computer)
- Bad practice (users do not change default passwords, or everyone uses the same password to access all substation equipment)
- Bypassing of controls (users turn off security measures)
- Inadequate technology (substation is not firewalled)

Examples of availability issues are:

- Equipment overload, resulting in reduced or no performance
- Expiry of a certificate preventing access to equipment

To help tackle these issues, standards organizations have produced various standards. Compliance with these standards significantly reduces the threats associated with lack of cyber-security.

4.3 STANDARDS

There are several standards, which apply to substation cyber-security. The standards currently applicable to GE Vernova's IEDs are NERC and IEEE1686.

Standard	Country	Description
NERC CIP (North American Electric Reliability Corporation)	USA	Framework for the protection of the grid critical Cyber Assets
BDEW (German Association of Energy and Water Industries)	Germany	Requirements for Secure Control and Telecommunication Systems
ANSI ISA 99	USA	ICS oriented then Relevant for EPU completing existing standard and identifying new topics such as patch management
IEEE 1686	International	International Standard for substation IED cyber-security capabilities
IEC 62351	International	Power system data and Comm. protocol
ISO/IEC 27002	International	Framework for the protection of the grid critical Cyber Assets
NIST SP800-53 (National Institute of Standards and Technology)	USA	Complete framework for SCADA SP800-82and ICS cyber-security
CPNI Guidelines (Center for the Protection of National Infrastructure)	UK	Clear and valuable good practices for Process Control and SCADA security

4.3.1 NERC COMPLIANCE

The North American Electric Reliability Corporation (NERC) created a set of standards for the protection of critical infrastructure. These are known as the CIP standards (Critical Infrastructure Protection). These were introduced to ensure the protection of 'Critical Cyber Assets', which control or have an influence on the reliability of North America's electricity generation and distribution systems.

These standards have been compulsory in the USA for several years now. Compliance auditing started in June 2007, and utilities face extremely heavy fines for non-compliance.

NERC CIP standards

CIP Standard	Description
CIP-002-1 Critical Cyber Assets	Define and document the Critical Assets and the Critical Cyber Assets
CIP-003-1 Security Management Controls	Define and document the Security Management Controls required to protect the Critical Cyber Assets
CIP-004-1 Personnel and Training	Define and Document Personnel handling and training required protecting Critical Cyber Assets
CIP-005-1 Electronic Security	Define and document logical security perimeters where Critical Cyber Assets reside. Define and document measures to control access points and monitor electronic access
CIP-006-1 Physical Security	Define and document Physical Security Perimeters within which Critical Cyber Assets reside
CIP-007-1 Systems Security Management	Define and document system test procedures, account and password management, security patch management, system vulnerability, system logging, change control and configuration required for all Critical Cyber Assets
CIP-008-1 Incident Reporting and Response Planning	Define and document procedures necessary when Cyber-security Incidents relating to Critical Cyber Assets are identified

CIP Standard	Description
CIP-009-1 Recovery Plans	Define and document Recovery plans for Critical Cyber Assets

4.3.1.1 CIP 002

CIP 002 concerns itself with the identification of:

- Critical assets, such as overhead lines and transformers
- Critical cyber assets, such as IEDs that use routable protocols to communicate outside or inside the Electronic Security Perimeter; or are accessible by dial-up

Power Utility Responsibilities	GE Vernova's Contribution
Create the list of the assets	We can help the power utilities to create this asset register automatically. We can provide audits to list the Cyber assets

4.3.1.2 CIP 003

CIP 003 requires the implementation of a cyber-security policy, with associated documentation, which demonstrates the management's commitment and ability to secure its Critical Cyber Assets.

The standard also requires change control practices whereby all entity or vendor-related changes to hardware and software components are documented and maintained.

Power Utility Responsibilities	GE Vernova's Contribution
To create a cyber-security policy	We can help the power utilities to have access control to its critical assets by providing centralized Access control. We can help the customer with its change control by providing a section in the documentation where it describes changes affecting the hardware and software.

4.3.1.3 CIP 004

CIP 004 requires that personnel with authorized cyber access or authorized physical access to Critical Cyber Assets, (including contractors and service vendors), have an appropriate level of training.

Power Utility Responsibilities	GE Vernova's Contribution
To provide appropriate training of its personnel	We can provide cyber-security training

4.3.1.4 CIP 005

CIP 005 requires the establishment of an Electronic Security Perimeter (ESP), which provides:

- The disabling of ports and services that are not required
- Permanent monitoring and access to logs (24x7x365)
- Vulnerability Assessments (yearly at a minimum)
- Documentation of Network Changes

Power Utility Responsibilities	GE Vernova's Contribution
To monitor access to the ESP To perform the vulnerability assessments To document network changes	To disable all ports not used in the IED To monitor and record all access to the IED

4.3.1.5 CIP 006

CIP 006 states that Physical Security controls, providing perimeter monitoring and logging along with robust access controls, must be implemented and documented. All cyber assets used for Physical Security are considered critical and should be treated as such:

Power Utility Responsibilities	GE Vernova's Contribution
Provide physical security controls and perimeter monitoring Ensure that people who have access to critical cyber assets don't have criminal records	GE Vernova cannot provide additional help with this aspect

4.3.1.6 CIP 007

CIP 007 covers the following points:

- Test procedures
- Ports and services
- Security patch management
- Antivirus
- Account management
- Monitoring
- An annual vulnerability assessment should be performed

Power Utility Responsibilities	GE Vernova's Contribution
To provide an incident response team and have appropriate processes in place	Test procedures, we can provide advice and help on testing Ports and services, our devices can disable unused ports and services Security patch management, we can provide assistance Antivirus, we can provide advice and assistance Account management, we can provide advice and assistance Monitoring, our equipment monitors and logs access

4.3.1.7 CIP 008

CIP 008 requires that an incident response plan be developed, including the definition of an incident response team, their responsibilities and associated procedures.

Power Utility Responsibilities	GE Vernova's Contribution
To provide an incident response team and have appropriate processes in place.	GE Vernova cannot provide additional help with this aspect.

4.3.1.8 CIP 009

CIP 009 states that a disaster recovery plan should be created and tested with annual drills.

Power Utility Responsibilities	GE Vernova's Contribution
To implement a recovery plan	To provide guidelines on recovery plans and backup/restore documentation

4.3.2 IEEE 1686-2013

IEEE 1686-2013 is an IEEE Standard for substation IEDs' cyber-security capabilities. It proposes practical and achievable mechanisms to achieve secure operations.

The following features described in this standard apply:

- Passwords are 8 characters long and can contain upper-case, lower-case, numeric and special characters.
- Passwords are never displayed or transmitted to a user.
- IED functions and features are assigned to different password levels. The assignment is fixed.
- The audit trail is recorded, listing events in the order in which they occur, held in a circular buffer.
- Records contain all defined fields from the standard and record all defined function event types where the function is supported.
- No password defeat mechanism exists. Instead a secure recovery password scheme is implemented.
- Unused ports (physical and logical) may be disabled.

4.3.3 IEC 62351

IEC 62351 is a standard developed for handling the security of IEC TC 57 series of protocols including IEC 60870-5 series, IEC 60870-6 series, IEC 61850 series, IEC 61970 series & IEC 61968 series. The different security objectives include authentication of data transfer through digital signatures, ensuring only authenticated access, prevention of eavesdropping, prevention of playback and spoofing, and intrusion detection.

The Roles described in chapter 62351-8 apply. The table below shows predefined roles, IDs and permissions assignment according to it:

VALUE	ROLE NAME (REVISION =1)	PERMISSION									
		LISTOBJECTS	READVALUES (READ)	DATASET	REPORTING	FILEREAD	FILEMNGT	CONTROL	CONFIG	SETTINGGROUP	SECURITY
<0>	VIEWER	x	C	x	C ₁						
<1>	OPERATOR	x	x	x	C ₁			x		x	
<2>	ENGINEER	x	x	x	X ₁	X ₁	X ₁		x	x	
<3>	INSTALLER	x	x	x	X ₂	X ₂			x	x	
<4>	SECADM	x	x		X ₄	X ₄	X ₄		x		x
<5>	SECAUD	x	x	x	X ₁						
<6>	RBACMNT	x	x				X ₄		x		
<7> (*1)	ADMINISTRATOR	x	x	x	x	x	x	x	x	x	x
<7, ..., 32767>	RESERVED	For future use of IEC defined roles.									
<-32768, ..., -1>	PRIVATE	Defined by external agreement. Not guaranteed to be interoperable.									

VALUE	ROLE NAME (REVISION =1)	PERMISSION									
		LISTOBJECTS	READVALUES (READ)	DATASET	REPORTING	FILEREAD	FILEMNGT	CONTROL	CONFIG	SETTINGGROUP	SECURITY

C = Conditional read access, clarification of specific data objects might be necessary (e.g., VIEWER may not access security settings, but process values)

C₁ = Conditional read access to files or filetype data

X₁ = Access to files of type data and config

X₂ = Access to files of type config and firmware (updates)

X₃ = Access to files of type audit log

X₄ = Access to files of type security (config)

(*1) ADMINISTRATOR is a LEGACY predefined role containing full permissions assignation. The ADMINISTRATOR is a pre-configured role using the <7> first available IEC RESERVED role. The role ID value is configurable in EnerVista for all roles (but the first 6 currently fixed by the standard), so the user can change the ID to another value if needed (from 7 till 32767 and from -1 till -32768).

Permissions Definition

As there is not enough granularity in the permissions to accomplish all the filters and assignments to the different roles, some new permissions have been added to the ones predefined by the standard, e.g. to differentiate the FILEMNGM, the FW Upgrade, etc.

Below is the list of permissions implemented:

Permission ID	Name	Comment
1	LISTOBJECTS	View settings names/traverse settings (except security settings)
2	READVALUES	View non security settings values, view PSL, view 61850
3	DATASET	Configure and edit 61850
4	REPORTING	View status, metering
5	FILEREAD	Read configuration file, read events reports, read waveforms reports, read fault reports, read disturbance records
6	FILEWRITE	Write configuration file, create/edit configuration project, import SCL
7	FILEMNGT	Clear records, restore defaults, export SCL, delete configuration project
8	CONTROL	Command Breaker, Reset
9	CONFIG	View non security settings, edit/configure all non-security settings, configure and Edit 61850, save settings
10	SETTINGGROUP	View non security settings, modify group control settings
11	SECURITY	View and modify security settings view, configure security, modify users and rbac
12 (*)	FILEREAD_SEC	Read sec audit log
13 (*)	FILEMNGT_SEC	Access to files of type security (config)
14 (*)	FWUPGRADE	Firmware upgrade

Note:

(*) ID's 1 to 11 are the set of permissions predefined by the standard, available for all device firmware releases. ID's 12 to 14 are new customized permissions added, available from 08A release on.

With this permissions definition the roles are defined as follow:

Legacy Roles (Basic Security)

ID	Role	Permissions
0	VIEWER	1, 2, 4, 5
1	ADMINISTRATOR	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14
2	ENGINEER	1, 2, 3, 4, 5, 6, 7, 8, 9, 10
3	OPERATOR	1, 2, 4, 5, 8, 10

Standard Roles (Advanced Security):

ID	Role	Permissions
0 (*1)	VIEWER	1, 2, 4, 5
1 (*1)	OPERATOR	1, 2, 4, 5, 8, 10
2 (*1)	ENGINEER	1, 2, 3, 4, 5, 6, 7, 9, 10
3 (*1)	INSTALLER	1, 2, 4, 5, 6, 9, 10, 14
4 (*1)	SECADM	1, 2, 3, 5, 6, 9, 11, 13
5 (*1)	SECAUD	1, 2, 4, 12
6 (*1)	RBACMNT	1, 2, 9, 13
7 (*2)	ADMINISTRATOR	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14

Note:

(*1) Role defined by the standard.

Note:

(*2) ADMINISTRATOR is a predefined role containing full permissions assignment. The ADMINISTRATOR role is pre-configured using the <7> first available IEC RESERVED role.

There are two Cybersecurity options available in the Cortec.

Basic Security where there are 4 fixed roles/users: Administrator, Engineer, Operator and Viewer.

Administrator: Has all the permissions to perform a firmware upgrade, change of parameters, change of security settings, CID read/write, read data files, issue commands, and read all the values from the device.

Engineer: Change of parameters, CID read/write, read data files, issue commands, and read values from the device.

Operator: Issue commands and read values of the device.

Viewer: This user can only read values from the device.

In Advanced Security the device has up to 20 configurable users. Each user will have a configurable username and password, and it could select one role from the standard and new user defined roles. As stated in the standard, there is the possibility to redefine new roles, adjusting the name, ID and permissions for each new defined role. There is no possibility of role combination.

For more detailed information of users and rights/permission definition see the list below:

User/Role Definition:

VIEWER (*1): Can view what objects are present within a Logical-Device by presenting the type ID of those objects.

OPERATOR (*1): An operator can view what objects and values are present within a Logical Device by presenting the type ID of those objects as well as perform control actions.

ENGINEER (*1): An engineer can view what objects and values are present within a Logical Device by presenting the type ID of those objects. Moreover, an engineer has full access to DataSets and Files and can configure the server locally or remotely.

INSTALLER (*2): An installer can view what objects and values are present within a Logical Device by presenting the type ID of those objects. Moreover, an installer can write files and can configure the server locally or remotely.

SECADM (*2): Security administrator can change subject-to-role assignments (outside the device) and role-to-right assignment (inside the device) and validity periods; change security setting such as certificates for subject authentication and access token verification.

SECAUD (*2): Security auditor can view audit logs.

RBACMNT (*2): RBAC management can change role-to-right assignment.

ADMINISTRATOR (*1): Has All read/write access.

RESERVED (*2): This user/role can be defined by the user adjusting name, ID and permissions for each new defining role.

Note:

*(*1) Roles applying to both Basic and Advanced Cybersecurity.*

Note:

*(*2) Roles only applying to Advanced Cybersecurity.*

Rights/Permissions Definition:

- **VIEW/LISTOBJECTS (*1):** Allows the subject/role to discover what objects are present within a Logical Device by presenting the type ID of those objects.
- **READ/READVALUES (*1):** Allows the subject/role to obtain all or some of the values in addition to the type and ID of objects that are present within a Logical-Device.
- **DATASET (*1):** Allows the subject/role to have full management rights for both permanent and non-permanent DataSets.
- **REPORTING (*1):** Allows a subject/role to use buffered reporting as well as un-buffered reporting.
- **FILEREAD (*1):** Allows the subject/role to have read rights for file objects.
- **FILEWRITE (*1):** Allows the subject/role to have write rights for file objects. This right includes the FILEREAD right.
- **FILEMNGT (*1):** Allows the role to transfer files to the Logical-Device, as well as delete existing files on the Logical- Device.
- **CONTROL (*1):** Allows a subject to perform control operations.
- **CONFIG (*1):** Allows a subject to locally or remotely configure certain aspects of the server.
- **SETTINGGROUP (*1):** Allows a subject to remotely configure Settings Groups.

- **SECURITY (*1):** Allows a subject/role to perform security functions at both a Server/Service Access Point and Logical-Device basis.
- **FILEREAD_SEC (*2):** Allows a subject/role to read sec audit log.
- **FILEMNGT_SEC (*2):** Allows a subject/role to access to files of type security (config).
- **FWUPGRADE (*2):** Allows a subject/role to perform firmware upgrade.

Note:

*(*1) Standard defined permissions. Available for all device firmware releases.*

Note:

*(*2) New customized permissions added. Available from 08A release on.*

4.4 CYBERSECURITY IMPLEMENTATION

GE Vernova's products have always been and will continue to be equipped with state-of-the-art security measures. Due to the ever-evolving communication technology and new threats to security, this requirement is not static. Hardware and software security measures are continuously being developed and implemented to mitigate the associated threats and risks.

This section describes the current implementation of Cybersecurity. The bulk of the implementation consists of RBAC (Role Based Access Control) Cybersecurity mode, Centralised Authentication, Remote Logging and System Hardening. The features are compliant with NERC-CIPv6 and IEEE 1686. This is valid for the release of platform software to which this manual pertains.

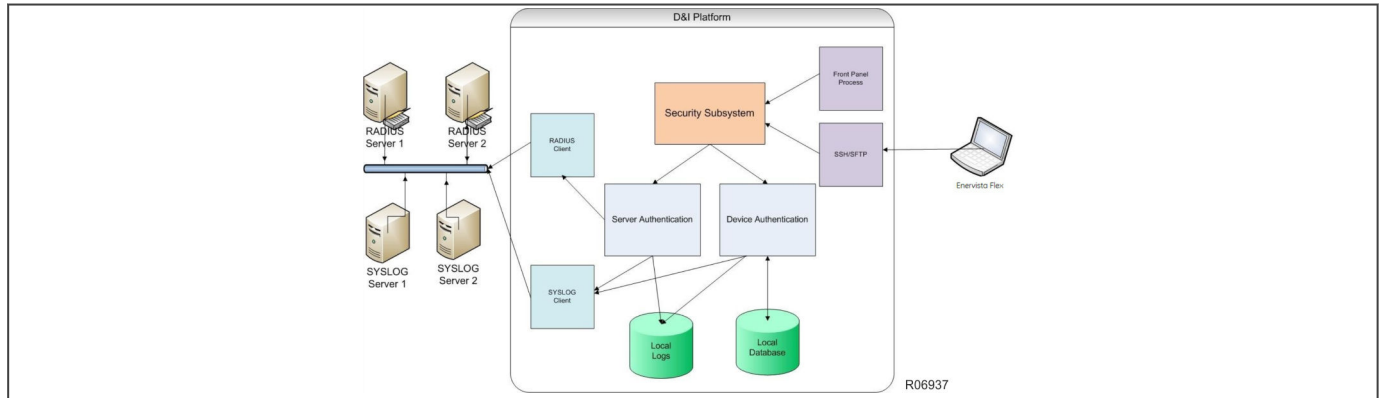


Figure 93: Cybersecurity implementation

Two levels of Cybersecurity are available:

- Basic Cybersecurity
- Advanced Cybersecurity

Basic Cybersecurity includes the following security features:

- Device/Local Authentication
- Four-level access: Fixed local users and roles (Administrator, Engineer, Operator, Viewer)
- ByPass Access
- Password complexity
- Disabling of unused physical and logical ports
- Flag for Failed authentication
- User lockout for configurable period
- Inactivity time out

Advanced security includes additional security features as follows:

- Remote/Server Authentication (supports RADIUS and Legacy LDAP)
- Local authentication with up to 20 configurable users, with configurable roles, username and passwords
- Secure encrypted communication (Modbus/SSH, SFTP)
- Syslog
- Increased product hardening

4.4.1 RBAC FUNCTIONALITY

Role based access control, RBAC, is the core of session management. Every login attempt will connect to the RBAC service and it will allow or deny the login of the user.

In Basic Security, default connection is done as Viewer, without password requirement.

In case of Advanced Security, a username and password will be required. If the login is successful, the access level will correspond to the role defined to this user.

The user cannot change its own role. So, in case of more rights needed, another different user with the corresponding role should be logged in.

The maximum number of concurrent sessions is only one for all roles, except of Viewer role, which has the limit of 5 sessions.

There is a session timeout adjustable by settings. This timeout means that open sessions are automatically closed if they remain inactive till the timer elapses. This inactivity timer defines the period that IED waits in idleness before a logged in user will be automatically logged out. This timeout is different for HMI interface and other interfaces (Serial, Ethernet, etc).

There is a lockout period adjustable by settings. For each account, when a maximum number of failed login attempts is reached, it is locked during the specified period. It doesn't matter the interface the login comes from. The account will be unlocked at the first successful login passed the lockout period.

If the Authentication Method setting is changed, the logged in user will be forced to logout.

4.4.2 BASIC SECURITY IMPLEMENTATION

4.4.2.1 DEVICE/LOCAL AUTHENTICATION

In Device Authentication mode, IED provide local RBAC Server security. The IED supports unique device usernames, and stores device passwords securely. For password encryption, PBKDF2 with SHA256 and a unique 64bits salt per user is used.

Only Administrator can change other user's passwords. All device users can change their own passwords. For password reset/recovery procedure the Administrator role will be required.

Viewer access level has no password associated and is the default connection to the device. Default password for Administrator, Engineer and Operator access levels is 0.

4.4.2.2 FOUR-LEVEL ACCESS

Basic IED Security supports 4 fixed roles: Administrator, Engineer, Operator and Viewer. The fixed local usernames match with these roles.

All the roles are password protected except the Viewer. A Viewer connection is directly logged in without entering a password using front panel or any communication port.

The different features of each role or access level are shown in the table below, for Basic Security (Legacy):

Feature		Administrator	Engineer	Operator	Viewer
Settings	Security settings	RW	R	R	R
	Change own PW	Yes	Yes	Yes	X
	Change own PW (Advanced security)	Yes	Yes	Yes	Yes
	Create New/Modify users, assign roles (advanced security OC)	RW	X	X	X
	Non-Security settings	RW	RW	R	R
	FlexLogic	RW	RW	R	R
	IEC 61850 settings	RW	RW	R	R
	Factory Settings	X	X	X	X
Commands	Date change	RW	RW	X	X
	BKR related	RW	RW	RW	X
	Clear records	RW	X	X	X
	Restore Defaults	RW	X	X	X
	RESET	W	W	W	X
File	Config File read	R	R	R	R
	Config File write	W	W	X	X
Firmware Upgrade		W	X	X	X
Upload FW		W	X	X	X
Actual Values	Status	R	R	R	R
	Metering	R	R	R	R
Reports	Events	R	R	R	R
	Waveforms	R	R	R	R
	Security Audit log	R	R	X	X

4.4.2.3 BYPASS ACCESS

This feature allows security authentication to be bypassed. Once this setting is anything other than *Disabled*, the user gets Administrator access rights on the configured interface for the period of time when the **SETPOINT ACCESS** setting is *On*. For example, if user configures **BYPASS ACCESS** as *Local*, then no user authentication is needed to access the device over USB or HMI when **SETPOINT ACCESS** is *On*. Another option is to configure **BYPASS ACCESS** as *HMI only* - enabling the user to view and modify all settings, view actual values or execute commands. The use of this feature should be restricted only in commissioning phase or when it is considered safe.

4.4.2.4 ENHANCED PASSWORD SECURITY

When Password complexity setpoint is set to 'Enabled', it allows user to configure password strings which adhere to complexity rules defined below. When the setting is configured as 'Disabled' then user can change the password to any string with max length of 20 characters.

Password complexity has the following features:

- Passwords cannot contain the user's account name or parts of the user's full name that exceed two consecutive characters.
- Must be at least 8 characters in length. Max length can be 20 ASCII char
- Passwords must contain characters from all four categories:
 - English uppercase characters (A through Z).
 - English lowercase characters (a through z).
 - Numeric: Base 10 digits (0 through 9).
 - Special non-alphanumeric (such as @,!,#,{, but not limited to only those, etc.)

The IED supports encryption for passwords. The encryption algorithm used is PBKDF2 with SHA256 and a unique 64bits salt per user, where this salt is generated randomly.

4.4.2.5 DISABLING PHYSICAL AND LOGICAL PORTS

To secure your system it is advised to harden the product (product hardening) by disabling the unused protocols and physical ports. This is the simplest method to ensure lesser security risk. The IED offers possibility to enable or disable protocols / ports based on the usage.

The IED supports the ability to turn off any of the following specific physical ports:

- front USB serial port
- rear port RS485
- Ethernet port

The IED supports the ability to turn off any of the following specific communication protocols:

- IEC 61850 (MMS and GOOSE)
- Modbus RTU
- Modbus TCP
- DNP3oE
- DNP3 Serial
- IEC 60870-5-103
- TFTP

Time synchronization protocols can be selectively enabled/disabled based on the configuration.

- IRIG-B
- SNTP

Services	Port Type	Port Numbers
Modbus TCP	TCP	502
DNP3oE	TCP	20000
	UDP	20000
IEC 61850 (MMS)	TCP	102
TFTP	UDP	69
SFTP (SSH)	TCP	22

Note:

For data protocols, service availability and detailed information, refer to the Communication Interfaces section in the Communications chapter.

4.4.2.6 NON-ENCRYPTED/CLEAR TEXT MODBUS

Due to customers' requests to use 'plain' or 'non-encrypted' Modbus communication with SCADA applications for certain scenarios, the Modbus TCP setting under the **DEVICE\COMMUNICATIONS\MODBUS** path supports the following options:

Disabled: when the **Modbus TCP** setting is set to Disabled, the port 502 will be closed.

Enabled: when the **Modbus TCP** setting is set to Enabled, the legitimate user can read or write over plain Modbus using port 502 on successful authentication.

Read-Only (*): when the **Modbus TCP** setting is set to Read-Only, the legitimate user can only read over plain Modbus using port 502.

By default, the **Modbus TCP** Setting is set to Enabled.

User with 'Administrator' role can configure this setting. Once the setting is configured to other than Disabled, the IED will allow communication with a 3rd party SCADA application in plain text Modbus over port 502. Also, for configuration change, the relay will register a security event to identify the user.

Note:

EnerVista Configuration software will always communicate with the IED over SSH using port 22.

Note:

(*) Read-Only option only available for Basic Cybersecurity Cortec options. Advanced Cybersecurity will have just Disabled and Enabled options.

4.4.2.7 SECURITY EVENTS

Security Events can be displayed in EnerVista Configuration software at RECORDS\SECURITY EVENTS path.

'securelog.csv' file stores security events information. A total of minimum 1024 events are stored in a circular buffer in non-volatile memory. Once the file reaches its max limit, oldest event Will get over-written by newest security event.

The security events information supported & stored in events file for each event contains: Priority, Version, Timestamp, Host, Process Name, Message Id, IEC@41912 ID, Text and UsrID.

The timestamp is the UTC time.

This file will be stored on the IED and will be accessible from EnerVista Configuration software for user with "Administrator" role. For Basic security, this is the only file to give security audit information to user. And this file will be useful for advanced security user if in case syslog is not configured or non-functional due to some issue.

Note:

For firmware release Multilin Agile 8A and 8-Series 4.20, the security events can be visualized at RECORDS\SECURITY EVENTS path. Security Events files (securelog) are available for download, in "csv" and "txt" format, from the Service Report zip file that can be downloaded from the Online Window of the EnerVista Configuration software, clicking on the last icon from the right, called "Service Report".

4.4.3 ADVANCED CYBERSECURITY IMPLEMENTATION

In advanced cybersecurity device authentication, all users: Viewer, Administrator, Engineer and Operator, need to enter username as well as password to get access privileges. Default advanced cybersecurity password is ChangeMe1#.

For firmware releases of Multilin Agile prior to 8A or 8 Series prior to 4.20: The Advanced Cybersecurity was built on top of Basic Cybersecurity, providing Basic Cybersecurity options plus extra properties for Advanced Cybersecurity that were not available in Basic Cybersecurity.

For firmware releases of Multilin Agile 8A or 8 Series 4.20 onwards: Basic Cybersecurity is a legacy implementation. Advanced Cybersecurity is a separate Cybersecurity implementation fully configurable following the IEC 62351-8 standard.

4.4.3.1 PERMISSIONS VS ACCESS MATRIX/PERMISSION ASSIGNMENT

In Basic (legacy) security the access is managed with a matrix table based on roles (see Four-level Access in Basic Security Implementation section).

In Advanced Security the access is managed through permission set. The following table shows the different features managed by EnerVista Configuration software, and the permissions that the user shall have in order to write or read values in the different screens:

Feature		Write Permissions ID	Read Permission ID
Settings	Security settings	11+13	11+13
	Change own PW	Current User	N.A.
	Change all PW	13	13
	Create new/modify users, assign roles (advanced security)	13	13
	Non-security settings	9	2
	Flexlogic	9	2
	IEC 61850 settings	3	2
	Settings group	10	2
Commands	Data change	9	N.A.
	BKR related	8	N.A.
	Clear records	7	N.A.
	Restore defaults	7	N.A.
	RESET	8	N.A.
File Operations	Config file	6	5
Firmware Upgrade	Firmware upgrade	14	N.A.
Actual Values	Status	N.A.	2
	Metering	N.A.	2
Reports	Events	N.A.	5
	Waveforms	N.A.	5
	Security audit logs	N.A.	12

Note:

For permissions definition see Permission Definition table in IEC 62351 section.

4.4.3.2 SERVER/REMOTE AUTHENTICATION

The Server/Remote Authentication implementation varies between earlier releases and later releases.

For firmware releases prior to Multilin Agile 8A and 8-Series 4.20: The Server Authentication Mode **uses only RADIUS**.

Where the following RADIUS servers can be set as customer's central authentication server:

- FreeRADIUS server
- Microsoft NPS server
- RSA Authentication Manager

And where the RADIUS implementation supports the following authentication protocols:

- PEAPv0 with inner authentication method MS-CHAPv2 (To support Microsoft NPS server)
- EAP-TTLS with inner authentication method PAP (To support RSA AM)
- EAP with inner authentication method GTC (To support RSA AM)
- PAP (unsecured, to support any RADIUS server)

For Multilin Agile 8A and 8-Series 4.20 firmware releases and later: The Server Authentication Mode can use either **RADIUS** or **LDAP** where:

RADIUS:

Servers used as a central authentication server can be:

- FreeRADIUS server
- RSA Authentication Manager

Implementation supports the authentication protocols:

- PEAPv0 with inner authentication method MS-CHAPv2
- EAP-TTLS with inner authentication method PAP (To support RSA AM)
- PAP (unsecured, to support any RADIUS server)

LDAP:

Servers used as a central authentication server can be:

- Microsoft Active Directory server
- OpenLDAP

Implementation supports the authentication protocols:

- TCP
- STARTTLS

4.4.3.3 SERVER/REMOTE AUTHENTICATION (RADIUS)

In Server Authentication mode, the IED authenticates the user using RADIUS server. RADIUS client resides in the product and connects to the RADIUS server.

Customer can use any of the following RADIUS servers as their central authentication server

- FreeRADIUS server
- RSA Authentication Manager

RADIUS users and passwords are created in the server (in the Active Directory). Each RADIUS user should have a password (that meets the password policy of the Active Directory) and specific role assigned to in the Active Directory.

The relay supports 2 servers in the configuration for redundancy. The IED will try each in sequence until one respond. When the first RADIUS server is unavailable, the next server in the list is tried for RADIUS Authentication.

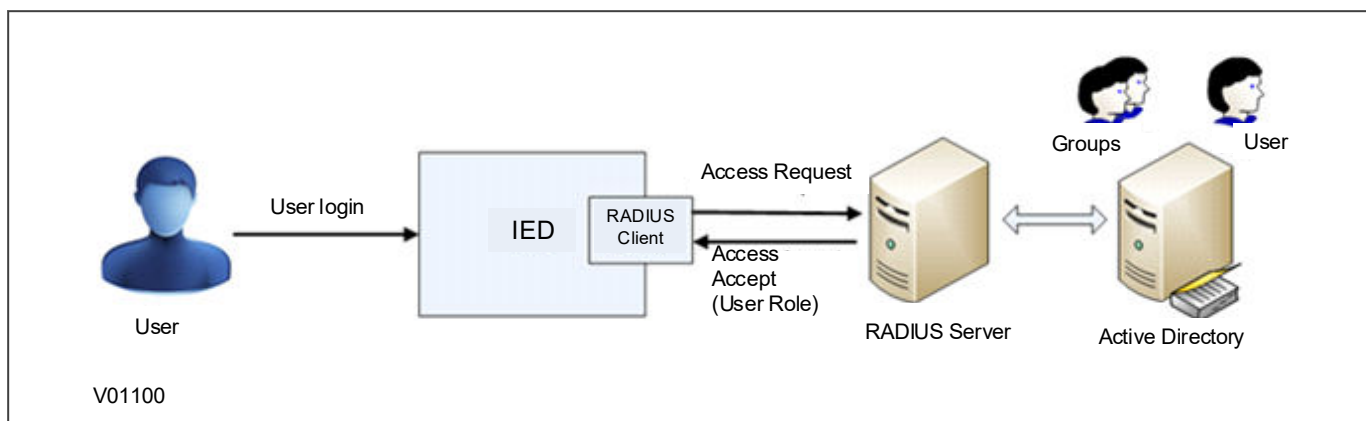


Figure 94: RADIUS server/client communication

The IED will first try the server 1 up to the configured number of retries leaving request timeout between each request. After this point, if it still does not have a valid answer from server 1, it switches to server 2 and repeats for up to the number of configured retries again. If it maxes out on retries on the second server, it gives up entirely on Server Authentication and fallback to device authentication (Only if Authentication Method Server and Device is selected). A "RADIUS Server unavailable" security event is also logged under this condition.

IED will authenticate and authorize RADIUS users using the following authentication stack:

- Primary Radius if enabled (stop on invalid credential failure, continue all other failures)
- Secondary Radius if enabled (stop on invalid credential failure, continue all other failures) The RADIUS implementation supports the following authentication protocols:
 - PEAPv0 with inner authentication method MS-CHAPv2 (To support Microsoft NPS server)
 - EAP-TTLS with inner authentication method PAP (To support RSA AM)
 - PAP (unsecured, to support any RADIUS server)

The RADIUS implementation will query the Role ID vendor attribute and establish the logged in user security context with that role.

In case of Server Authentication mode but if the RADIUS server is not operational, IED will try Device Authentication.

Note:

For releases Multilin Agile 8A and 8-Series 4.20 and later, the default security settings are different to releases Multilin Agile 6A and 8-Series 4.10 and earlier, (e.g., RADIUS Port Prim and Sec settings in Multilin Agile 8A and 8-Series 4.20 releases are 2083, whereas in Multilin Agile 6A and 8-Series 4.10 they are 1812). Check the Multilin Agile 8A and 8-Series 4.20 default values set in your device and update them to the value needed for your security configuration.

4.4.3.4 SERVER/REMOTE AUTHENTICATION (LEGACY LDAP PULL MODEL)

The relay supports Legacy LDAP Pull Model. The PULL model with LDAP is explained in the IEC 62351-8 section.

In legacy projects will an LDAP repository (e.g., Windows Active Directory), RBAC information is limited to roles, and they are returned in a simple LDAP response after successful authentication of the user. The relay implements this legacy usage of LDAP.

RBAC and Legacy LDAP

In the RBAC model, users are assigned to roles through which they acquire permissions. A mapping between these generic permissions and device-specific actions is used to determine if a user has the right to perform a given action on a resource (object).

The RBAC data that changes more frequently is stored outside the device in an identity provider repository which is the LDAP server in this case. This data includes user credentials, roles and associations between users and roles.

The table below explains the RBAC data versus LDAP data representation:

RBAC Data	LDAP Data
subject (user)	user
password	password
role	group
role-user association	membership (of a user in a group)

Communication Protocols

The implementation of LDAP supports two protocols: TCP and TCP over TLS, and For TCP over TLS supports STARTTLS.

TLSv 1.2 and above are supported. TLS versions below 1.2 are not supported.

LDAP Query and Access Token

For an already authenticated user, LDAP returns a token containing IEC 62351-8 groups that the user is a member of upon request (LDAP search request).

For better performance (faster queries) and to forge the correct LDAP query, the following input is required:

- **users OU:** The organizational unit where users reside. It is assumed that even in an existing LDAP server like Active Directory with a large number of users, users all reside in the same organizational unit.
- **roles OU:** The organizational unit where groups reside. Again, it is assumed that roles reside in one OU dedicated to this purpose.
- **base DN:** Ideally the nearest node to the above OUs that is also a direct or indirect parent of both. In fact, this value is used to limit the search area for user-group memberships. Consequently, both users and roles OU must be part of this domain.

The following figure shows an example LDAP tree:

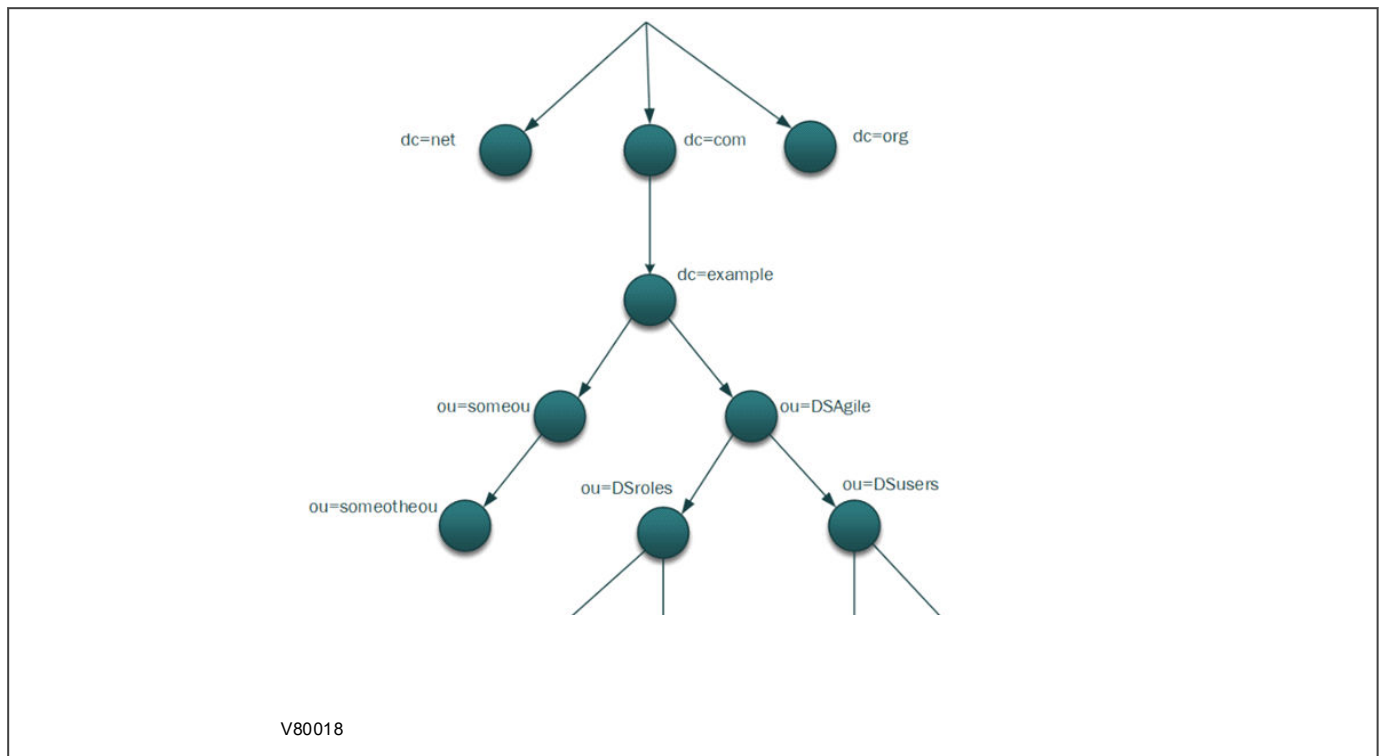


Figure 95: LDAP tree example

For the data structure shown above, the following shall be provided:

- **user OU:** ou=DSusers,ou=DSAgile,dc=example, dc=com
- **roles OU:** ou=DSroles,ou=DSAgile,dc=example, dc=com
- **based DN:** ou=DSAgile,dc=example,dc=com

Note:

For the base DN, we can also provide dc=example, dc=com but it will result in lower performance as the search area will be expanded unnecessarily.

Note:

In EnerVista configuration software user DN, roles DN and Based DN are to be provided for LDAP configuration. DN provided the full path, where OU provides the local path.

Configuration

The LDAP client in the device is configured using the "RBAC UserManagement" configuration tool embedded in the EnerVista configuration tool. For more information See LDAP configuration in the EnerVista configuration tool chapter.

Main and Backup Servers

Up to two LDAP servers can be defined. They will be called main and backup servers respectively. The main server is mandatory, and the backup server is optional.

At initialization, the main server is set as the working server.

If the main server becomes unavailable:

- The backup server is set as the working server.
- When the main server is up again, it will become the working server always taking precedence over the backup server.
- If the backup server also becomes inaccessible, the device will switch to local fallback mode.
- When the backup server is up again, it will become the working server and it will switch back to the remote mode, e.g. Legacy LDAP.

Summary:

- The main server always takes precedence over the backup server.
- Local fallback happens only when both servers are down.

An LDAP server can be considered down for a variety of reasons such as:

- It cannot be reached due to network issues or hardware issues.
- A secure TLS tunnel cannot be established due to a certificate issue, e.g., missing, invalid or revoked certificate, when communication protocol is set to StartTLS.

4.4.4 UNIQUE CONFIGURABLE USERNAMES

In 'Advanced Security', the user can configure up to 20 configurable user accounts. As part of this, user can configure a Username (length can be up to 20 ASCII char), Password for the username (in compliance with the Password complexity) and assign a supported user role (range: Administrator, Engineer, Operator, Viewer, any other role configured by the user).

The 'Administrator' is eligible to configure various accounts and modify passwords for all available accounts. Non-Admin users can only modify their own account password.

It is recommended to have more than one 'Administrator' account.

4.4.5 SECURE ENCRYPTED COMMUNICATION

4.4.5.1 MODBUS/SSH

Secure Shell (SSH) protocol provides a secure channel over an unsecured network by using a client-server architecture. The SSH server reside in the IED. It securely encrypts the Modbus commands and data between the Toolsuite and itself using port forwarding.

SSH architecture is described in RFC4251 and is composed of three components:

- The transport Layer protocol (SSH-TRANS) – RFC 4253
- The User Authentication Protocol (SSH-USERAUTH) – RFC 4252
- The Connection Protocol (SSH-CONNECT) – RFC 4254

The port forwarding feature is available only on TCP/IP frames. UDP is not supported. The SSH server on the product runs on port 22.

It supports the Encryption Ciphers: RSA 2048, AES-128-CBC or AES-128-GCM, HMAC-SHA-256.

The SSH server has a timeout for authentication and disconnect if the authentication has not been accepted within the timeout period.

4.4.5.2 SFTP

SFTP (SSH File Transfer Protocol) is the file transfer protocol used with SSHv2. Provides secure file access, file transfer, and file management.

The SFTP commands will be limited for a given period of time to avoid DOS attacks and also implement role-based access to the file.

4.4.6 SYSLOG

The IED supports security event reporting through the Syslog protocol for supporting Security Information Event Management (SIEM) systems for centralized cyber security Monitoring over UDP and TCP protocols.

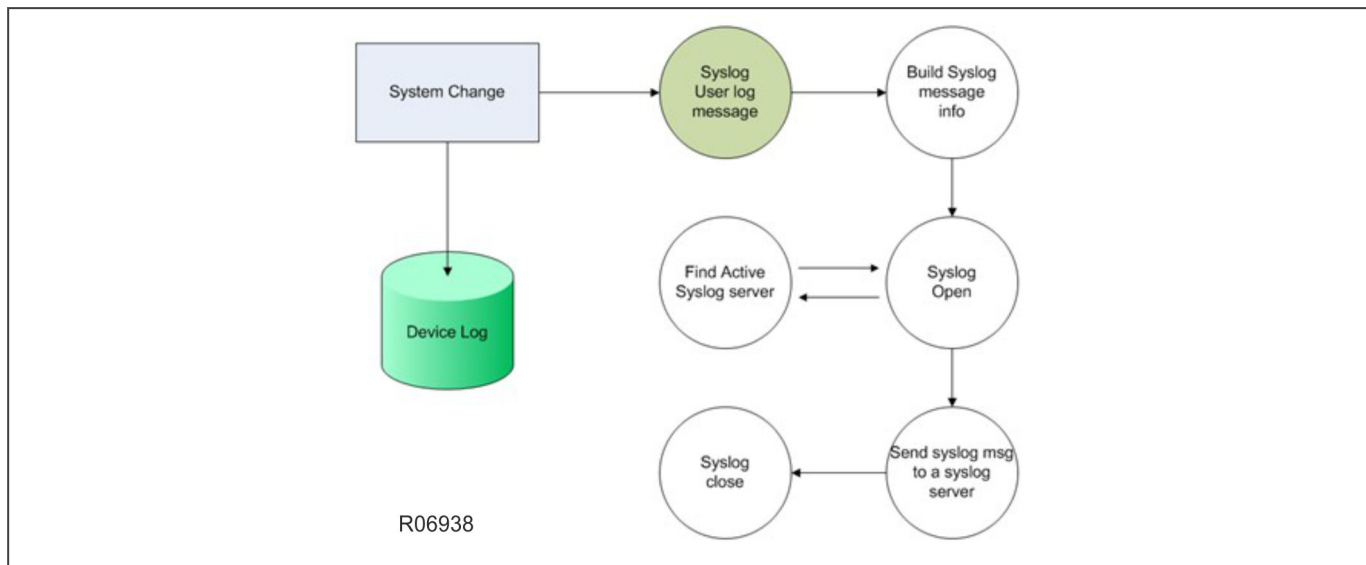


Figure 96: Syslog implementation

2 Syslog servers are supported in the configuration for redundancy. The IED will try each in sequence until one respond.

The IED logs to a remote syslog server:

- User log events, whether successful or unsuccessful
- Error log events
- Kernel error log events

Syslog Events

Mnemonic	LogType	IEC version	Severity	Cyber Security Event Numerical Event Identifier (ID)	Text (Single Space Between Each Consecutive Words)	Reference and Comments
LOGIN_OK	IEC 62351-14	1	notice	IEC 62351-14:1	Log-in successful	[IEEE 1686] specifies event logging for user successful login. In general, [IEC 62443-4-2] requires audit logs for access control.
LOGIN_OK_PW_EXPIRED	IEC 62351-14	1	notice	IEC 62351-14:2	Password expired, Log-in successful	[NERC-CIP-007-5] requires security policy. In case the entity local security policy allows a user to still login in, the course of its password expiry such as for handling a critical emergency situation, then this event would be useful. In general, [IEC 62443-4-2] requires audit logs for access control.
LOGIN_FAIL_WRONG_CR	IEC 62351-14	1	notice	IEC 62351-14:3	Log-in failed - wrong credentials	[NERC-CIP-007-5] requires cyber security respective logging for both successful and failed user logins. In general, [IEC 62443-4-2] requires audit logs for access control.
LOGIN_FAIL_3_TIMES	IEC 62351-14	1	alarm	IEC 62351-14:5	Log-in failed 3 times	[IEEE 1686] Although [IEEE 1686] mentions to log an event after 3 unsuccessful access attempts, the earlier this anomaly is logged the better cyber secured an entity can be.

Mnemonic	LogType	IEC version	Severity	Cyber Security Event Numerical Event Identifier (ID)	Text (Single Space Between Each Consecutive Words)	Reference and Comments
LOGIN_FAIL_SESSIONS_LIMIT	IEC 62351-14	1	alarm	IEC 62351-14:6	Log-in failed too many user sessions	[IEEE 1686] [NERC-CIP-007-5] requires cyber security respective logging for both successful and failed user logins. In general, [IEC 62443-4-2] requires audit logs for access control.
LOCK_USER_WRONG_CR	IEC 62351-14	1	alarm	IEC 62351-14:7	User locked - wrong credentials	[NERC-CIP-007-6] recommends limiting the number of unsuccessful access attempts and suggests measures for account lockout. In case the entity local security policy restricts its access to a user for a certain duration of time due to repeated certain failed number of logins attempts from that user, then it is necessary to generate a corresponding event. This type of event improves the security of an entity by reducing the brute force attack surface from an attacker.
LOGOUT_USER	IEC 62351-14	1	notice	IEC 62351-14:8	Log-out (user logged out)	[IEEE 1686] specifies event logging for user initiated log out.
LOGOUT_TIMEOUT	IEC 62351-14	1	notice	IEC 62351-14:9	Log-out by user inactivity (timeout)	[IEEE 1686] specifies event logging for user when the user is inactive after logging in for a certain duration of time.
SW_UPDATE_OK	IEC 62351-14	1	notice	IEC 62351-14:14	Software update was successful	[IEEE 1686] requires audit logging for firmware related aspects. A software is generic that also includes firmware.
SW_UPDATE_FAIL	IEC 62351-14	1	alarm	IEC 62351-14:15	Software update failed	
SYSLOG_EVENT_SETTING_CHANGE	IEC 62351-14	1	alarm	IEC 62351-14:1	Setting change	'Setting change'. An event to indicate setting change(s). Origin: Username and IP address.
SYSLOG_EVENT_CLEAR_EVENT_RECORDS	IEC 62351-14	1	notice	IEC62351-14:1	Clear events	'Clear events command'. Clear event records command was issued. Origin: Username and IP address.
SYSLOG_EVENT_CLEAR_TRANSIENT_RECORDS	IEC 62351-14	1	notice	IEC62351-14:1	Clear transient records	'Clear transient records command'. Clear transient records command was issued. Origin: Username and IP address.
SYSLOG_EVENT_MODBUSTCP_ENABLED	IEC 62351-14	1	alarm	IEC62351-14:1	Modbus TCP enabled	'ModbusTCP Enabled'. Port 502 has been opened for Read/ Write.
SYSLOG_EVENT_MODBUSTCP_DISABLED	IEC 62351-14	1	alarm	IEC62351-14:1	Modbus TCP disabled	'ModbusTCP Disabled'. Port 502 closed
SYSLOG_EVENT_MODBUSTCP_READONLY	IEC 62351-14	1	alarm	IEC62351-14:1	Modbus TCP read only	'ModbusTCP ReadOnly'. Port 502 has been opened for Read Only operations.
SYSLOG_EVENT_BYPASS_ACCESS_ENABLED	IEC 62351-14	1	alarm	IEC62351-14:1	ByPass access enabled	'Bypass Access activated'. Bypass access has been activated.
SYSLOG_EVENT_BYPASS_ACCESS_DISABLED	IEC 62351-14	1	alarm	IEC62351-14:1	ByPass access disabled	'Bypass Access deactivated'. Bypass access has been deactivated.
	IEC 62351-14	1	notice	IEC62351-14:1 [IEC@41912 ID="2910:6"]	Configuration update has failed	Couldn't update configuration from given file. INVALID_CONFIGURATION_XML" UsrID="Application
	IEC62351-14	1	notice	IEC62351-14:1 [IEC@41912 ID="2910:8"]	Application configuration is valid	

Note:

For release Multilin Agile 8A and 8-Series 4.20 and later, forward, clear events, clear transient records syslog events are available for the user. FlexLogic operands are not available.

For all firmware releases, bypass access disabled, and bypass access enabled syslog events are available for the user. FlexLogic operands are not available.

4.4.7 INCREASED PRODUCT HARDENING

In Advanced security, the IED supports the ability to turn off the added features in encrypted communication. SSH and SFTP protocols on port 22 can be disabled.

4.4.7.1 ADDITIONAL FEATURES

The Advanced security option provides the properties listed below.

4.4.8 LOST PASSWORD

The relays allow modification of all user account passwords by user with “Administrator” privileges. Also, non-Admin users can update their own passwords.

For 'Advanced Security', it is recommended to have more than one user with 'Administrator' role. This will help in case 'Administrator' password is lost. Other local 'Administrator' account or Remote authentication user 'Administrator' can modify the password for the 'Administrator' whose password is lost.

If Remote authentication server is not configured or is unreachable, and if there is a single 'Administrator' configured on IED for Local authentication, then the only way to reset 'Administrator' password is to execute 'Service command' **SETPPOINTS\DEVICE\INSTALLATION** path on HMI. This action will default passwords for all accounts.

To default passwords for all accounts, access IED from HMI as another role. Go to Settings -> Product setup -> Install: Screen will have option to enter 'Service command'. User can enter the command to reset passwords for all accounts.

Please, contact GE Vernova customer support to get the code to perform this action.

4.4.9 LOADING FACTORY CONFIGURATION

User needs to login as 'Administrator'. Go to Security screen and then 'Restore Defaults' can be set to 'Yes'.

4.4.10 ADDITIONAL FEATURES

In addition to all the Basic security features, the Advanced security option provides the properties listed below.

4.4.10.1 LOST PASSWORD

Multilin Agile IEDs allow modification of all user account passwords by user with “Administrator” privileges. Also, non-Admin users can update their own passwords.

For 'Advanced Security', it is recommended to have more than one user with 'Administrator' role. This will help in case 'Administrator' password is lost. Other local 'Administrator' account or Remote authentication user 'Administrator' can modify the password for the 'Administrator' whose password is lost.

If Remote authentication server is not configured or is unreachable, and if there is a single 'Administrator' configured on IED for Local authentication, then the only way to reset 'Administrator' password is to execute command from HMI. This action will default passwords for all accounts.

Access IED from HMI as another role. Go to Settings -> Product setup -> Install: Screen will have option to enter 'Service command'. User can enter the command to reset passwords for all accounts.

Please, contact GE customer support to get the code and perform this action.

4.4.10.2 LOADING FACTORY CONFIGURATION

User needs to login as 'Administrator'. Go to Security screen and then 'Restore Defaults' can be set to 'Yes'.

4.5 RBAC USER MANAGEMENT CYBERSECURITY CONFIGURATION TOOL

This section describes the "RBAC UserManagement" configuration tool used to configure Cybersecurity.

For Multilin Agile 8A release and later: The Cybersecurity configuration was done fully on Modbus settings placed at **SETPOINTS\DEVICE\SECURITY** path. See the figures below for more detail.

For firmware releases prior to Multilin Agile 8A: The Cybersecurity configuration is done partially using Modbus settings placed at **SETPOINTS\DEVICE\SECURITY** path, plus the use of the RBAC UserManagement Cybersecurity configuration tool through EnerVista software.

The "RBAC UserManagement" Cybersecurity configuration tool can be found at EnerVista configuration tool under Setpoints, this is at **SETPOINTS\RBAC USERMANAGEMENT** path. RBAC UserManagement is only accessible online when communicating with the device. The Modbus settings available at **SETPOINTS\DEVICE\SECURITY \SECURITY CONFIG** path, such as Bypass Access, Acc Timeout HMI, Pswd Complexity, Factory Service, Require PW for Reset Key, Require PW for D/T Change, Require PW for Control, are both available in the offline and online mode of EnerVista and can also be changed through the HMI menus.

Note:

The default security settings are different for later releases.

Note:

EnerVista Software configuration tool file conversion will not convert Cybersecurity settings from Multilin Agile 6A - 8A and 8-Series 4.10 - 4.20. The Cybersecurity settings for Multilin Agile 8A and 8-Series 4.20 should be entered directly on the device.

4.5.1 CYBERSECURITY MODBUS SETTINGS CONFIGURATION

For Multilin Agile 8A and 8-Series 4.20 the Modbus Cybersecurity settings are placed at **SETPOINTS\DEVICE \SECURITY\SECURITY CONFIG** path. All Modbus settings are the same for Basic and Advanced Cybersecurity, but the **Bypass PW for RC** setting is only available for Basic.

See the list of Modbus Cybersecurity settings below:

Setting Name	Default Value	Basic/Advanced
Factory Service	Disabled	Disabled
Restore Defaults	No	No
Acc Timeout HMI	5 min	5 min
Pswd Complexity	Enabled	Enabled
Bypass Access	Disabled	Disabled
Require PW for Reset Key	Enabled	Enabled
Require PW for D/T Change	Enabled	Enabled
Require PW for Control	Enabled	Enabled
Bypass PW For RC	Off	Off

4.5.1.1 CYBERSECURITY NON-MODBUS SETTINGS CONFIGURATION

For Multilin Agile 8A and 8-Series 4.20 the non-Modbus Cybersecurity settings can be configured when connecting online to the device through the EnerVista configuration software, using the **Rback UserManagement** configuration tool at **SETPOINTS\RBAC USERMANAGEMENT** path.

Below is an example of **RBAC UserManagement** screens for Cybersecurity configuration, for Users and Roles, Security Settings and Syslog Configuration.

4.5.1.2 USER MANAGEMENT CONFIGURATION

The **USER MANAGEMENT** screen initial screen is similar for Basic and Advanced security. The difference is that for Basic security the 4 fixed available users/roles can be used (Viewer, Administrator, Engineer and Operator) and for Advanced Cybersecurity up to 20 users can be created and managed.

Basic Security

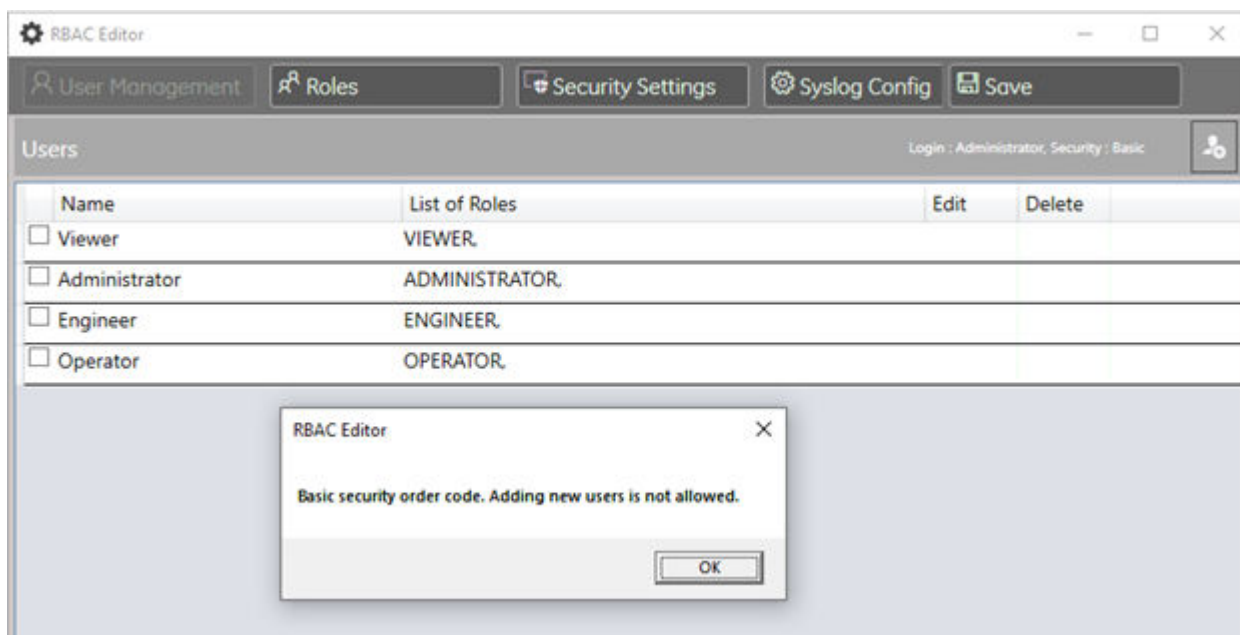


Figure 97: Basic security user management configuration (not configurable)

Advanced Security

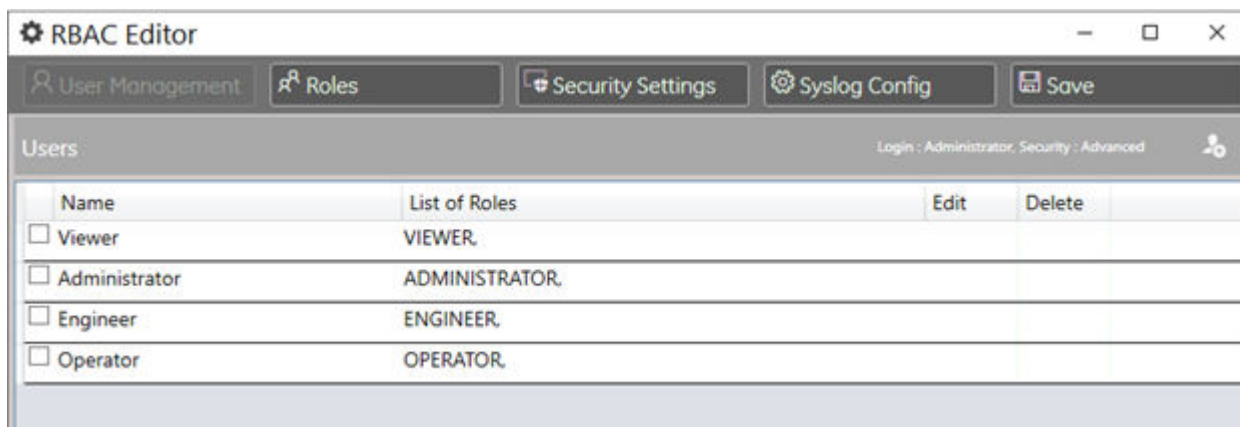


Figure 98: Advanced security user management configuration

In **Advanced Security** the device has up to 20 configurable users. Each user will have a configurable username and password, and can select one role from the standard and new user defined roles. As stated in the standard, there is the possibility to redefine new roles by adjusting the name, ID and permissions for each new defined role. It is not possible to combine roles.

The screens to configure new users in Advanced Security are as follows:

Click on the right side icon on the users screen:

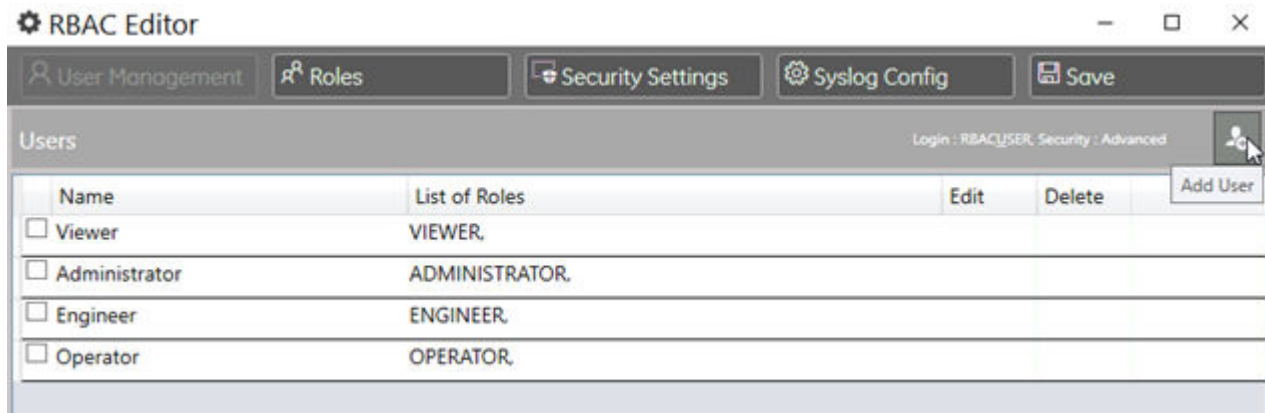


Figure 99: List of pre-configured users for advanced security

A **New User** window will open with a list of the already existing roles. In case a new role is needed it can be configured under the Roles window. See the list of pre-configured roles for Advanced Security.

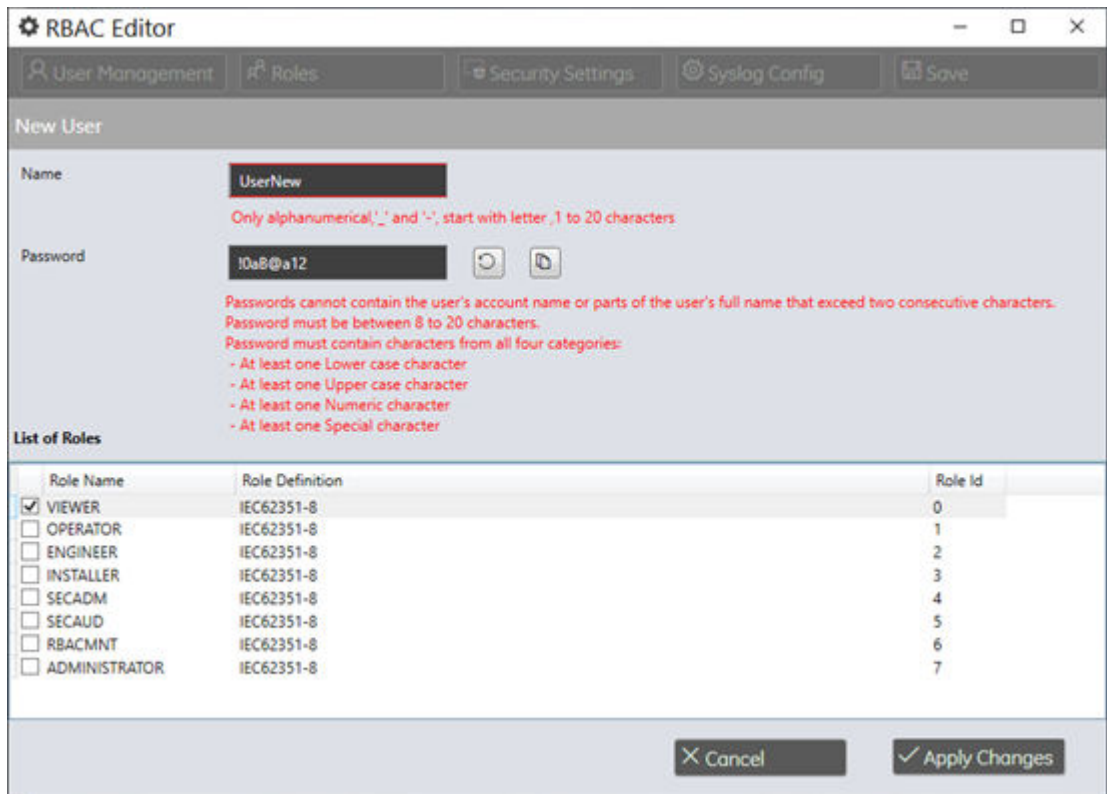


Figure 100: Entering new user name and password for advance security

Put a valid name following the rules for user's naming, select a valid password following the rules for passwords and click on the **Apply Changes** button that will be enabled when a valid name and password are entered. Once the changes are applied the new role will appear on the list of users available.

In this example a new user called "UserNew" has been created under the existing VIEWER role.

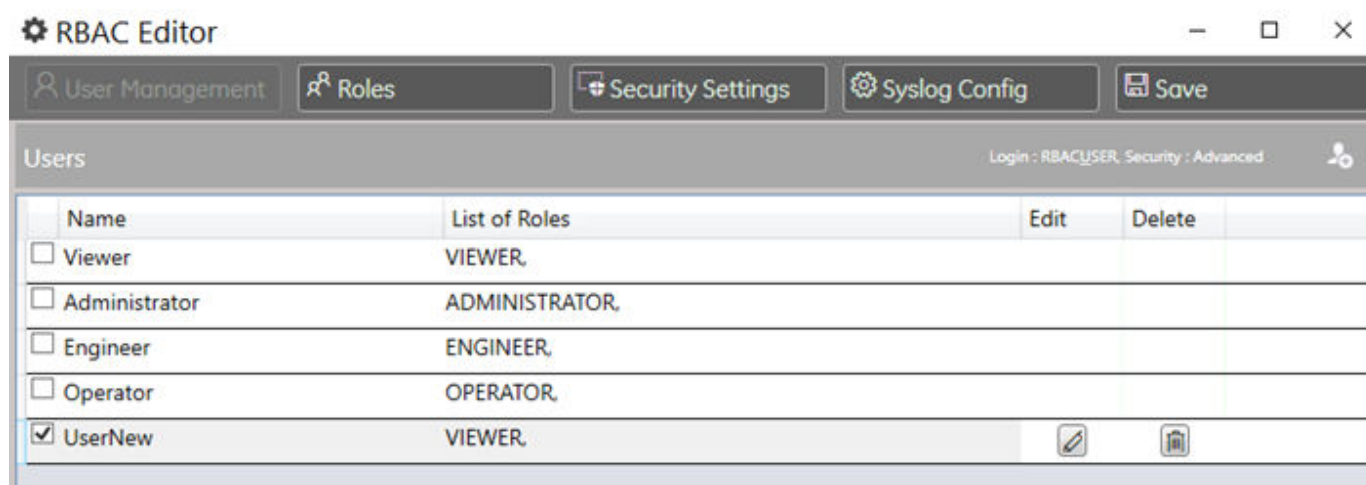


Figure 101: Example of new user creation for advanced security

For the configuration to be saved on the device, the **Save** button needs to be clicked, otherwise the configuration will not be saved. A warning message will appear if leaving the RBAC USERMANAGEMENT configurator without saving.

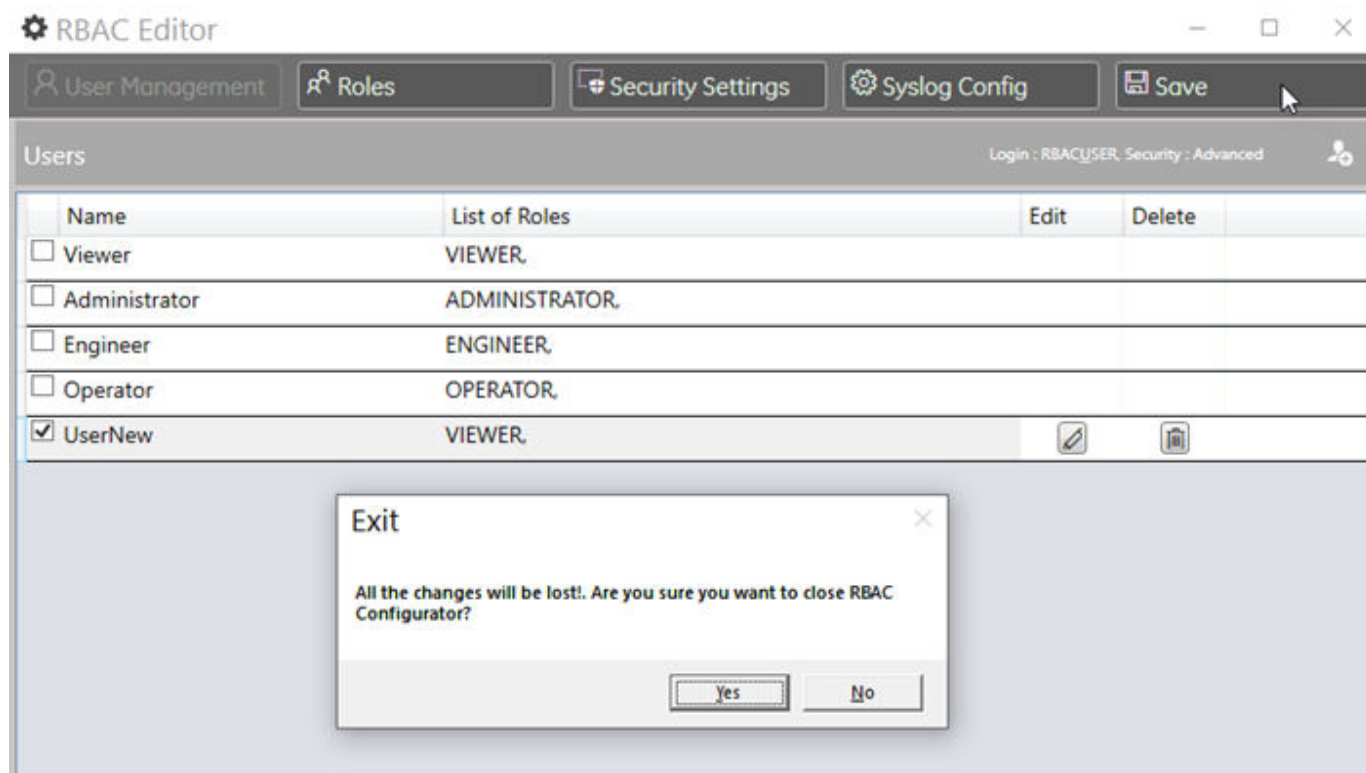


Figure 102: Save changes warning message before closing the RBAC USERMANAGEMENT configurator

4.5.1.3 ROLES CONFIGURATION

The **ROLES** initial screen is similar for Basic and Advanced security. The difference is that for Basic security the 4 fixed available roles can be used (VIEWER, ADMINISTRATOR, ENGINEER and OPERATOR) and they are not editable. For Advanced Cybersecurity 7 roles are pre-configured, the first 6 defined by the standard (VIEWER, OPERATOR, ENGINEER, INSTALLER, SECAUD, RBACMNT), and the 7th one (ADMINISTRATOR), predefined with Role ID 7 that can be changed to any of the available private values allowed by the standard (See the IEC 62351 table in the IEC 62351 section).

Basic Security

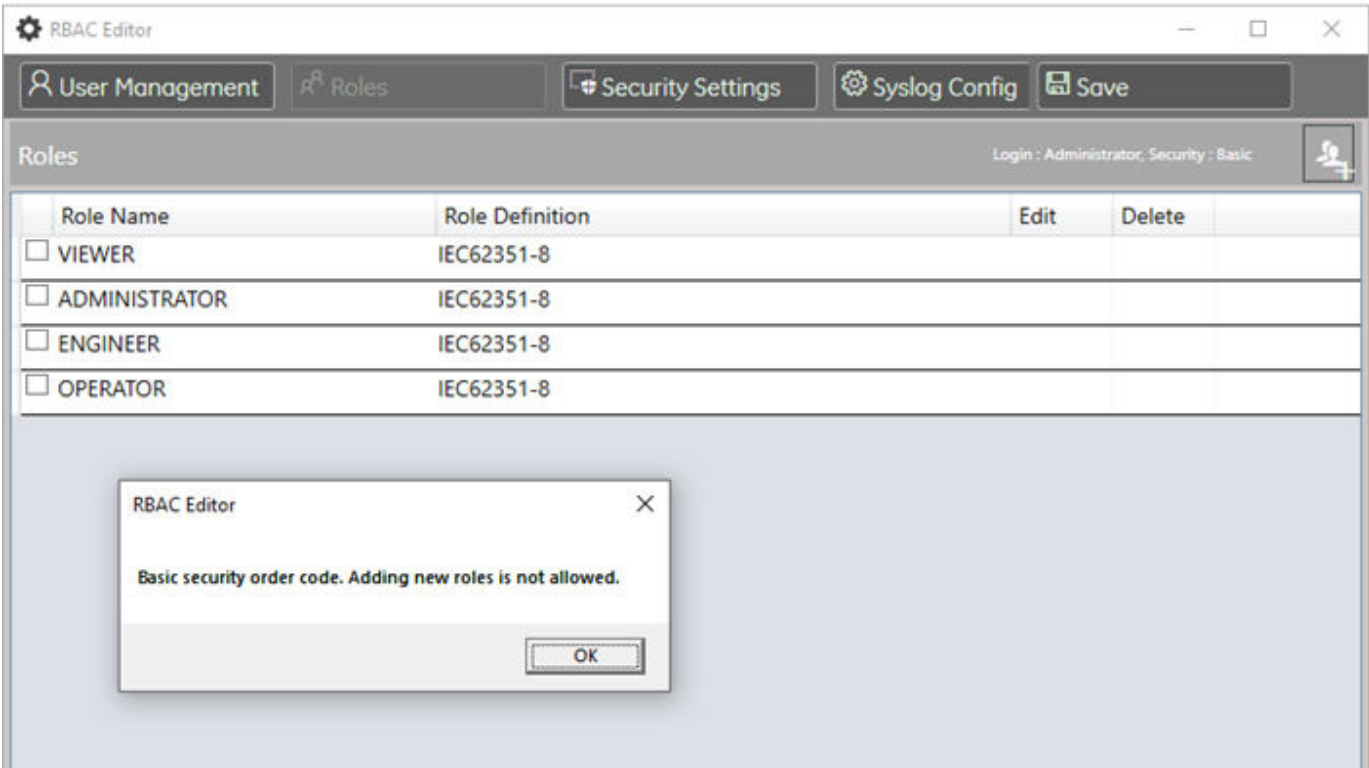


Figure 103: Basic security roles configuration (not configurable)

Advanced Security

The first 6 roles are defined by the standard and all their parameters are fixed. The 7th role, ADMINISTRATOR, is a pre-configured role to provide all of the set permissions together in a single role. The Role Name and Role Definition are not configurable, but the Role ID can be configured. The Role ID provided is set to 7, but it can be configured to -1 or any value from the Private Role ID's available.

To add a new role, click on the right side icon on the **Roles** window:

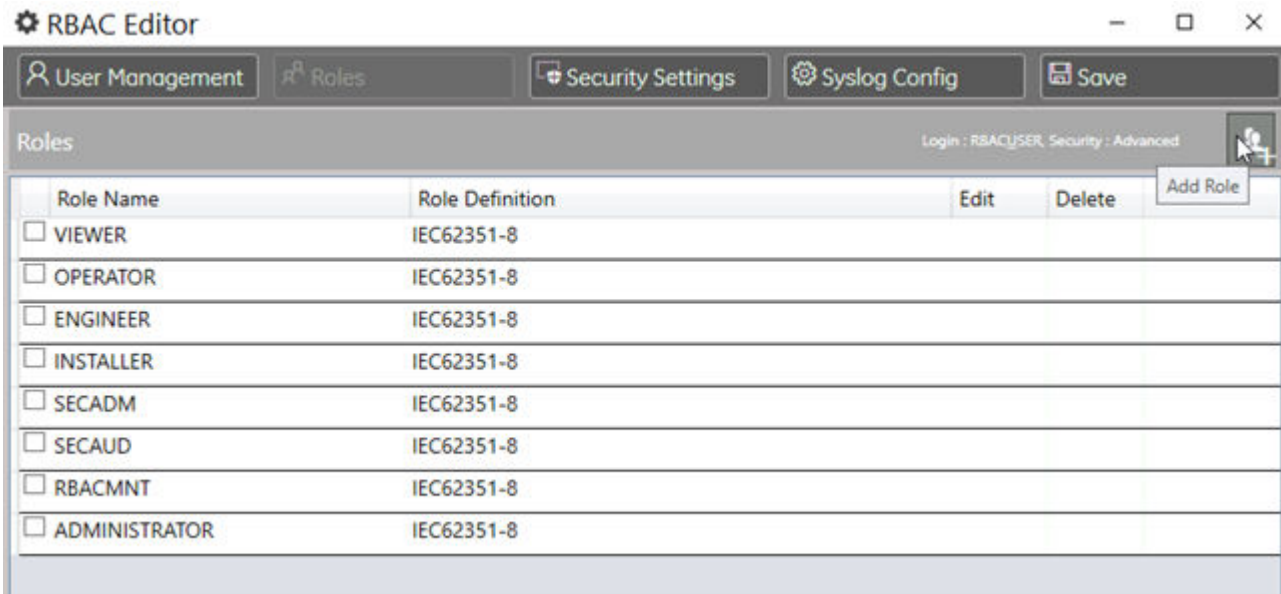


Figure 104: Advanced security roles configuration

A **New Role** window will open with a list of permissions that can be added to any role.

RBAC Editor

User Management Roles Security Settings Syslog Config Save

New Role

Role Name [Redacted]
Only alphanumeric, '_' and '-'; start with letter, 3 to 20 characters

Definition IEC62351-8 Role Id 0 [Redacted]
Forbidden role Id, reserved. Please change.

List of Permissions

Permission	Comment	ID
☒ LISTOBJECTS	View settings names / traverse settings (except security settings)	1
☒ READVALUES	View non security settings values, view PSL, view 61850	2
☐ DATASET	Configure and Edit 61850	3
☒ REPORTING	View Status, Metering	4
☒ FILEREAD	Read configuration file, Read Events Reports, Read Waveforms Reports, Read fault reports, Read secur	5
☐ FILEWRITE	Write configuration file, Upload firmware, create/edit configuration project, import SCL	6
☐ FILEMNGT	Clear records, Restore Defaults, export SCL, delete configuration project	7
☐ CONTROL	Command BKR, RESET	8
☐ CONFIG	View non security settings, edit/configure all non security settings, Configure and Edit 61850, save set	9
☐ SETTINGGROUP	View non security settings, modify group control settings	10
☐ SECURITY	View and modify security settings view, configure security, modify users and rbac, Read security audit	11
☐ FILEREAD_SEC	Read sec audit log	12
☐ FILEMNGT_SEC	Access to files of type security (cont	13
☐ FWUPGRADE	Firmware Upgrade	14

Use CTRL + Click to add a selection to existing set

Cancel Apply Changes

Figure 105: Advanced security new roles configuration

In order to select more than one of the available options, the CTRL+Click combination of keys must be selected. Only the Role Name and Role ID can be changed when a new role is created. The Role Definition is fixed to "IEC 62351-8" for all roles.

Follow the rules for Role Name and Role ID creation and press "Apply Changes". The new user will appear on the Roles' window:

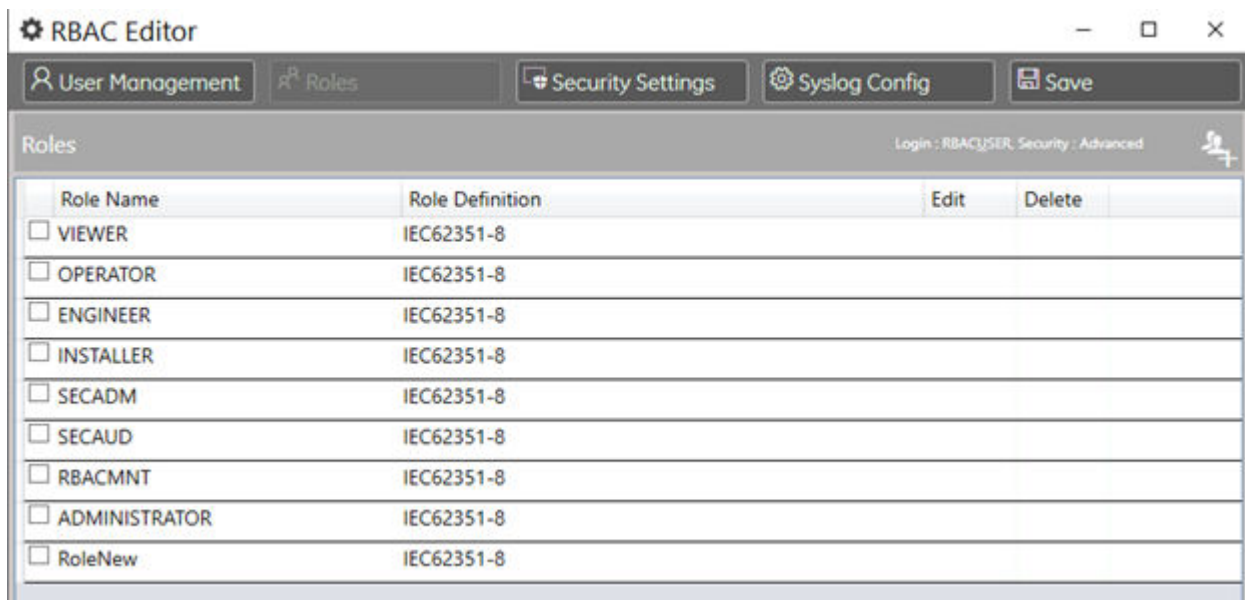


Figure 106: Example of new role creation for advance security

For the configuration to be saved on the device, the **Save** button needs to be clicked, otherwise the configuration will not be saved. A warning message will appear if leaving the RBAC USERMANAGEMENT configurator without saving.

4.5.1.4 SECURITY SETTINGS CONFIGURATION

Basic Security

For Basic Security **Access Lockout**, **Acc Lockout Time**, and **Acc Timeout**, other settings are available.

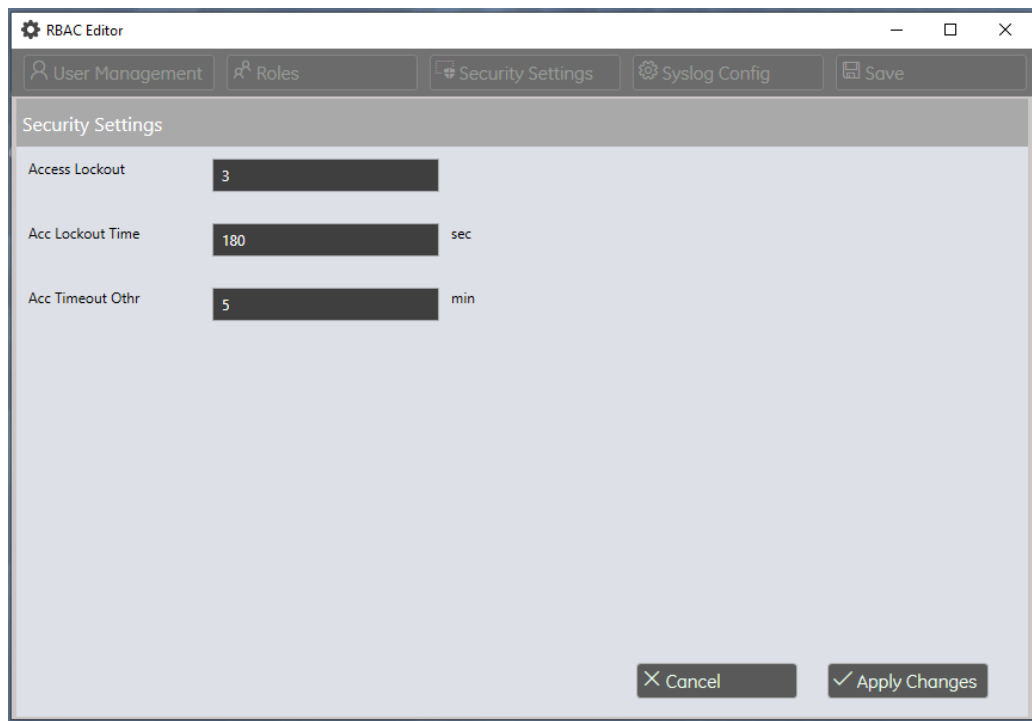


Figure 107: Basic Security Settings

Advanced Security

For Advance Cybersecurity, besides the **Access Lockout**, **Acc Lockout Time** and **Acc Timeout Othr**, an **Authentication Method** setting is provided. Depending on the **Authentication Method** setting selection (*LOCAL*, *RADIUS_LEGACY*, *LDAP_LEGACY*) different setting windows will be displayed.

Advanced Security Settings with Local Authentication Method

If the **Authen. Method** is set to *LOCAL*, **Access Lockout**, **Acc Lockout Time** and **Acc Timeout Othr** settings are displayed.

The screenshot shows the 'RBAC Editor' window with the 'Security Settings' tab selected. The settings are as follows:

Setting	Value	Unit
Access Lockout	3	
Acc Lockout Time	180	sec
Acc Timeout Othr	5	min
Authent. Method	LOCAL	

At the bottom right, there are 'Cancel' and 'Apply Changes' buttons.

Figure 108: Advanced security settings, authent. method set to local

Advance Security Settings with Radius Legacy Authentication Method

If the **Authen. Method** is set to *RADIUS_LEGACY*, the corresponding RADIUS setting will be displayed, number of retries, primary and secondary ports and IP addresses, path to certificate.

The Authentication Methods supported on *RADIUS_LEGACY* for the 8A release are as follows:

- PEAPv0 with inner authentication method MS-CHAPv2
- EAP-TTLS with inner authentication method PAP (To support RSA AM)
- PAP (unsecured, to support any RADIUS server)

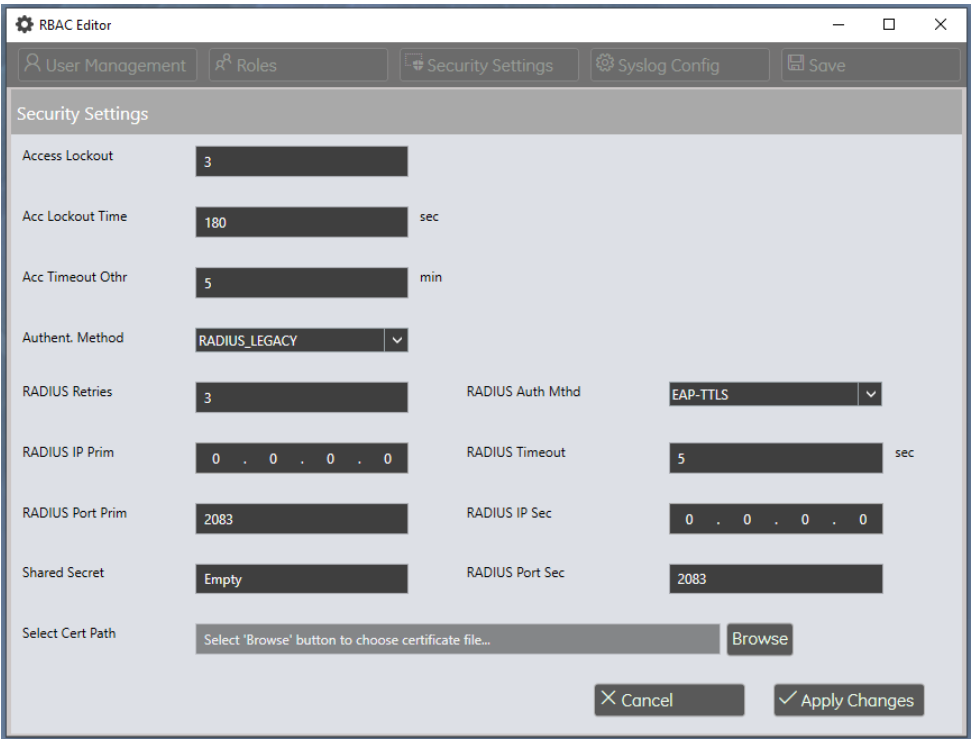


Figure 109: Advance security settings with radius legacy as authentication method

To select the certificate needed to communicate through RADIUS_LEGACY, click on the **Browse** button and select the path to a valid certificate. The certificate for RADIUS should have a *.der extension.


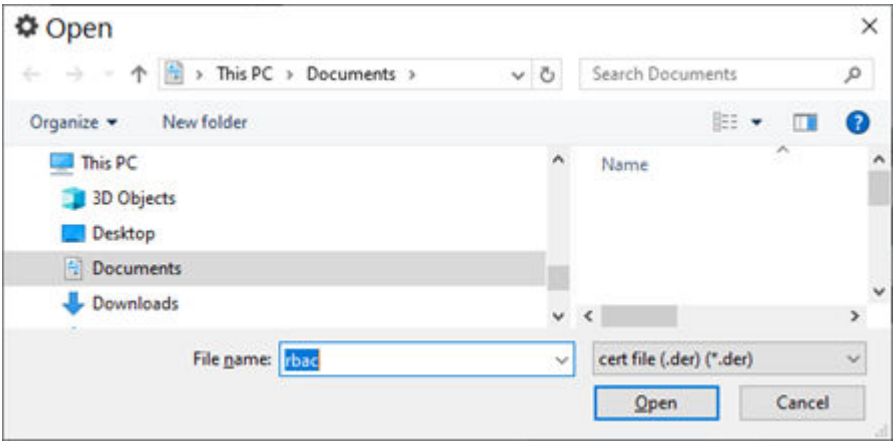


Figure 110: Advance security settings: radius legacy certificate

Advanced Security Settings with LDAP_LEGACY Authentication Method

If the **Authen. Method** is set to `LDAP_LEGACY`, the corresponding LDAP setting will be displayed, number of retries, primary and secondary ports and IP addresses, path to certificate, as well as the base DN, users DN, roles DN parameters. See the LDAP section for more details. The Certificate for LDAP should have a *.pem extension. The LDAP Authentication Methods available are "TCP" and "STARTTLS".

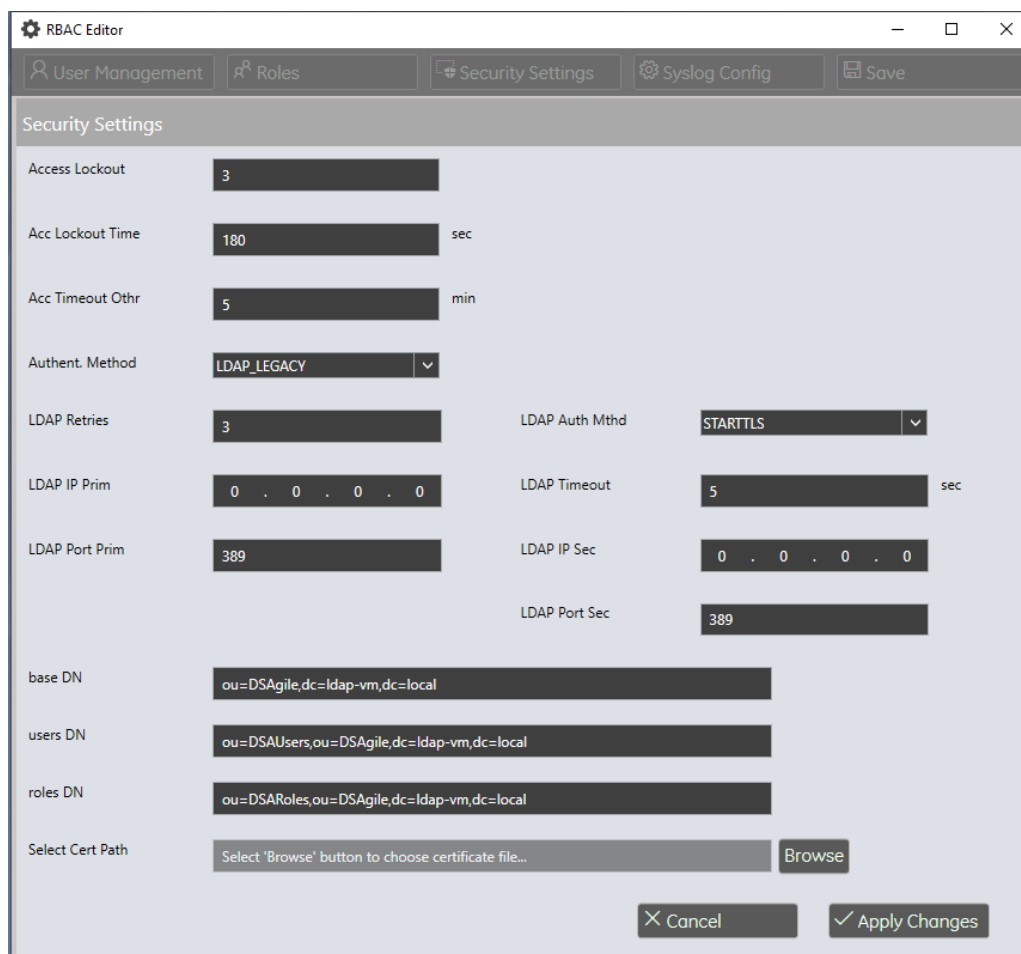

The RBAC Editor window displays the Security Settings tab. The settings are as follows:

Setting	Value	Unit
Access Lockout	3	
Acc Lockout Time	180	sec
Acc Timeout Othr	5	min
Authent. Method	LDAP_LEGACY	
LDAP Retries	3	
LDAP Auth Mthd	STARTTLS	
LDAP IP Prim	0 . 0 . 0 . 0	
LDAP Timeout	5	sec
LDAP Port Prim	389	
LDAP IP Sec	0 . 0 . 0 . 0	
LDAP Port Sec	389	
base DN	ou=DSAgile,dc=ldap-vm,dc=local	
users DN	ou=DSUsers,ou=DSAgile,dc=ldap-vm,dc=local	
roles DN	ou=DSARoles,ou=DSAgile,dc=ldap-vm,dc=local	
Select Cert Path	Select 'Browse' button to choose certificate file... Browse	

Buttons: Cancel Apply Changes

Figure 111: Advanced security settings, authen. method set to LDAP LEGACY

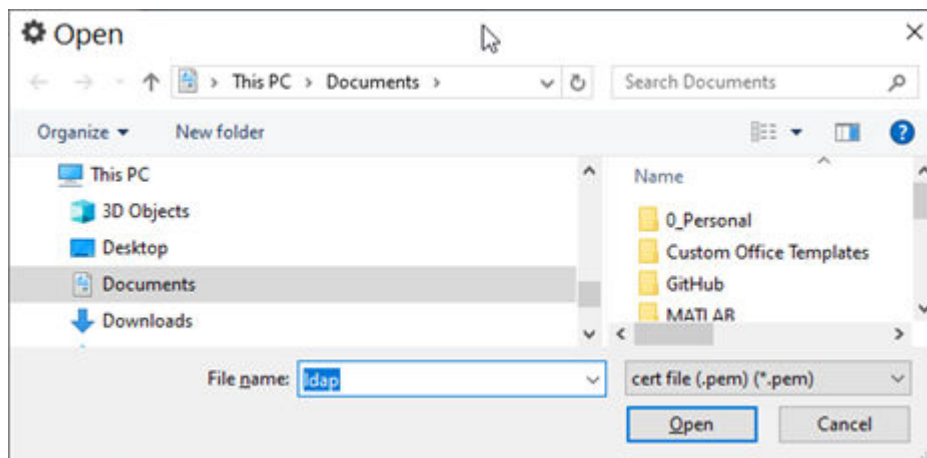


Figure 112: Advance security settings, LDAP LEGACY certificate

4.5.1.5 SYSLOG CONFIGURATION

The IED supports security event reporting through the Syslog protocol, supporting Security Information Event Management (SIEM) systems for centralized cyber security Monitoring over UDP and TCP protocols.

Note:

For Basic security for releases Multilin Agile 8A and 8-Series 4.20 and earlier, Syslog is not available. For releases Multilin Agile 8A and 8-Series 4.20 and later, Syslog is available for both Basic and Advanced Security.

Syslog configuration has the following settings:

- **Network Protocol:** Available protocols for syslog configuration, to be selected between UDP and TCP
- **Syslog IP Primary, Syslog IP Secondary:** IP Primary and secondary
- **Syslog Primary Port, Syslog Secondary Port:** Primary and secondary port for syslog

Note:

0.0.0.0 or 127.0.0.1 values are considered to be empty or unconfigured Ips. A valid IP value should be entered in each of the Syslog IP Primary and Syslog IP Secondary settings.

The screenshot shows the 'RBAC Editor' window with the 'Syslog Config' tab selected. The configuration fields are as follows:

Field	Value
Network Protocol	UDP
Syslog IP Primary	0 . 0 . 0 . 0
Syslog IP Secondary	0 . 0 . 0 . 0
Syslog Primary Port	514
Syslog Secondary Port	514

Buttons at the bottom: Cancel, Apply Changes.

Figure 113: Syslog configuration settings for both basic and advanced security

For any part of the Cybersecurity configuration to be saved on the device, the **Save** button needs to be clicked before leaving the **RBAC USERMANAGEMENT** configuration tool, otherwise the changes on the configuration will not be saved. A warning message will appear if the **RBAC USERMANAGEMENT** configurator is left without saving.

CHAPTER 5

ABOUT SETPOINTS

5.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	172
About Setpoints	173
Protection and Trip Breaker Selection	174
Setpoints Entry Methods	185
Common Setpoints	186
Logic Diagrams	188

5.2 ABOUT SETPOINTS

The relay has a considerable number of programmable setpoints, all of which make the relay extremely flexible. These setpoints have been grouped into a variety of menus which are available from the paths shown below. Each setpoints menu has sub-sections that describe in detail the setpoints found on that menu.

Note:
Use the path provided to access the menus from the front panel and from the EnerVista D&I Setup software.
Certain named settings allow custom names. Do not create 13-character long names using the largest width characters (i.e. WWWWWWWWWWWWW). Doing so can cause the last 3 characters to overlap the setting name when viewed from the HMI or the EnerVista D&I Setup software.

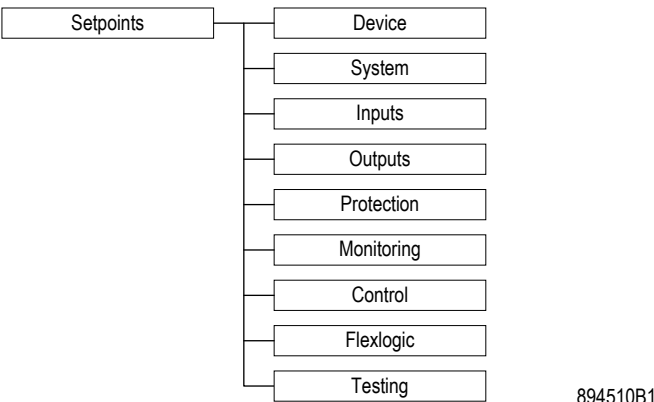


Figure 114: Main Setpoints Display Hierarchy

5.3 PROTECTION AND TRIP BREAKER SELECTION

Depending on order code, the relay provides protection for either two-winding, or three-winding transformers. Based on this, either two or three breakers can be configured for status monitoring, tripping and closing. Each breaker menu provides a selection of trip output and/or close output relay. Depending on the selected output relays, and the function setting for the protection, control and monitoring elements, some conditions apply.

- All outputs selected for **BKR # Trip Output Select** under Breaker setup menu are available for selection in the menus of all elements, except in the outputs selection for **BKR# Close Output Select**.
- For all elements, the default value for the trip selected outputs under Breaker setup shows *Do Not Operate*. The user can select these relays from the menu of the element.
- All outputs selected for **BKR# Close Output Select**, are automatically excluded from the list of outputs available under the menus of all elements including the list of output selection for **BKR# Trip Output Select** setpoint. The close output relays can be used for closing the breakers Remotely or Locally as part of the Breaker Control feature.
- By default the form-A circuit monitoring outputs Aux Relay 1 is selected for tripping Breaker 1, Aux Relay 2 is selected for tripping Breaker 2, and Aux Relay 9 for tripping Breaker 3. Outputs for closing of the breakers are not selected.

Note:

*If the output selected under **BKR # Close Breaker Select** is replaced by another output, the old output which is no longer used for closing, will automatically show up in the menu of the elements with the default value *Do Not Operate*. The newly selected output is automatically excluded from the list of outputs for selection under all element menus. When excluded from the list of outputs for element menus, the output is inactive for any element.*

Programming Output Relays for Breaker Tripping and Closing

The programming of the output relays for tripping individual breakers is performed once, when selected under setpoint **BKR 1(2,3) Trip Relay Select**, and **BKR 1(2,3) Close Relay Select** from the **Setpoints > System > Breakers > Breaker 1(2,3)** menu.

From these screens, **Relay 1**, **Relay 2**, and **Relay 9** are selected as default outputs for tripping Breaker 1, Breaker 2, and Breaker 3 respectively. Output relays for closing the breakers are not selected. The user can program any output relay from the list of output relays for breaker tripping, or closing.

Protection Element Trip Selections

Selective tripping of the transformer breakers from the protection element can be programmed from two places:

- From the Relay HMI: Protection Element Menu
- From the PC program: Element's Menu or Protection Summary

From the Relay HMI: Protection Element Menu

If *Trip* is selected as a **Function** for an element, and upon operation of that element, the LED TRIP will turn on. Similarly when *Alarm*, or *Latched Alarm* is selected, upon element operation, the LED ALARM will turn on. Selecting *Configurable* is not associated with an LED.

Example 1: Programming an IOC1 element as a Trip function

1. Select *Trip* from the list of selections available for the setpoint **Function**.

Home..\Current\Phase IOC 1		
Item Name	Value	Unit
Function	Disabled	
Signal Input	CT Bank 1 -J1	
Input	Phasor	
Pickup	10.00 x CT	
Direction	Disabled	
Pickup Delay	0.000 s	
Dropout Delay	0.000 s	
Block	Off	
Output Relay 1	Do Not Operate	
Output Relay 2	Do Not Operate	
...	...	
Output Relay 9	Do Not Operate	
Output Relay 11	Do Not Operate	
Events	Enabled	
Targets	Self-Reset	
PIOC 1		



Home..\Current\Phase IOC 1	
Item Name	Value
Function	Trip
Signal Input	CT Bank 1
Input	Phasor
Pickup	10.00 x C
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Output Relay 1	Do Not O
Output Relay 2	Do Not O
...	...
Output Relay 9	Do Not O
Output Relay 11	Do Not O
Events	Enabled
Targets	Self-Rese
PIOC 1	

2. Select the output relays for tripping the breakers, and any other aux relays if necessary.
3. Selecting *Trip* does not automatically change the values of the breaker trip selected output relays to *Operate* from the menus of the protection, control or monitoring elements. Regardless of the selected element function, the values for all output relays from the menu elements will show *Do Not Operate*. The user must select the desired output relays to be energized upon element operation.

Example 2: Programming an IOC1 element to Alarm

These same steps also apply if the element is programmed to *Latched Alarm* or *Configurable*.

1. Select *Alarm* from the list of selections available for the setpoint **Function**.

..\Current\Phase IOC 1		
Item Name	Value	Unit
Function	Disabled	
Signal Input	CT Bank 1 -J1	
Input	Phasor	
Pickup	10.00 x CT	
Direction	Disabled	
Pickup Delay	0.000 s	
Dropout Delay	0.000 s	
Block	Off	
Output Relay 1	Do Not Operate	
Output Relay 2	Do Not Operate	
...	...	
Output Relay 9	Do Not Operate	
Output Relay 11	Do Not Operate	
Events	Enabled	
Targets	Self-Reset	
PIOC 1		



..\Current\Phase IOC 1	
Item Name	Value
Function	Alarm
Signal Input	CT Bank 1
Input	Phasor
Pickup	10.00 x C
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Output Relay 1	Do Not O
Output Relay 2	Do Not O
...	...
Output Relay 9	Do Not O
Output Relay 11	Do Not O
Events	Enabled
Targets	Self-Rese
PIOC 1	

2. If necessary, select the output relays to operate as an Alarm upon IOC1 operation.
3. To distinguish the element functionality upon function selection, and to prevent the user from making programming mistakes, a mechanism affecting the output relays selected for breaker tripping is implemented and will activate upon changing the function from *Disabled* to *Alarm*, *Latched Alarm*, or *Configurable*.
 - o The output relays selected for tripping of the breakers will be de-activated in the IOC1 element menu. The rest of the outputs are fully programmable and operational.
 - o The setting for these trip selected output relays can be changed, i.e. from *Do Not Operate* to *Operate*, but the physical relay will not be energized. This is to prevent operation of the trip output relay by mistake, when the function used is *Alarm*, or *Configurable*.
4. Changing the function back to *Trip*, will enable the breaker trip selected output relays from the IOC1 menu to be programmable.

From PC Program: Element Menu or Protection Summary

Using the PC program, there are two places where the menu of each protection, control, or monitoring element can be accessed: The element's individual menu, and the Protection Summary menu.

Element Menu - The element function can be set as *Trip*, *Alarm*, *Latched Alarm*, or *Configurable*. Depending on the selected function, the relay applies the following rules:

Example 1: Programming an IOC1 element as a Trip function

1. Select Output Relays 1 and 2 to trip breaker 1 and 2 respectively.

Breakers // My Desk: 845 relay: Setpoints: System

Save Restore Default

SETTING	PARAMETER
Breaker 1	
Name	BKR1
Contact Input 52a	Contact Input 1
Contact Input 52b	Contact Input 2
Connected	Off
Trip Relay Select	Relay 1
Close Relay Select	Off
Breaker 2	
Name	BKR2
Contact Input 52a	Contact Input 3
Contact Input 52b	Contact Input 4
Connected	Off
Trip Relay Select	Relay 2
Close Relay Select	Off

Figure 115: Transformer Breakers setup

2. Select *Trip* for the setpoint **Function**. When *Trip* is selected, all output relays are accessible for *Operate/Do Not Operate* programming.

Phase IOC // My Desk: 845 relay: Setpoints: Protection: Group 1: Current

Save Restore Default

SETTING [GROUP 1]	PARAMETER
Phase IOC 1	
Function	Trip
Signal Input	J1
Input	Phasor
Pickup	1.000 x CT
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Relays	Relay : 1-2-3-4
Events	Enabled
Targets	Self-Reset
Phase IOC 2	
Function	Disabled

Figure 116: Function setpoint for Phase IOC 1 selected as Trip

Example 2: Programming an IOC1 element as an Alarm, Latched Alarm, or Configurable function

1. Select *Alarm*, *Latched Alarm*, or *Configurable* for the setpoint **Function**. When Alarm, Latched Alarm or Configurable is selected as a Function, the Output Relays 1 and 2, which have been assigned to trip Breaker 1 and 2 respectively, are de-activated for operation.

The screenshot shows a software window titled "Phase IOC // My Desk: 845 relay: Setpoints: Protection: Group 1: Current". At the top, there are three buttons: "Save", "Restore", and "Default". Below these buttons is a table with two columns: "SETTING [GROUP 1]" and "PARAMETER". The table contains the following data:

SETTING [GROUP 1]	PARAMETER
Phase IOC 1	
Function	Alarm
Signal Input	J1
Input	Phasor
Pickup	1.000 x CT
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Relays	Relay : 3-4
Events	Enabled
Targets	Self-Reset
Phase IOC 2	
Function	Disabled

Figure 117: Relays setpoint

Protection Summary- The selection of **Function**, and the selection of output relays for *Operate/Do Not Operate* for each element are reflected in the Protection Summary window as shown. Once the Protection Summary window is open, *Operate* or *Do Not Operate* can be selected for any output relay (except the ones selected for breaker close) by checking/unchecking the appropriate box. The user can also access the individual menu for any of the listed elements and make changes.

Groups: ☒ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6

I/O Cards: ☒ F ☒ G

☒ All
☐ Enabled

PROTECTION ELEMENTS	GROUP 1										FUNCTION
	BKR1 R1	BKR1 R2	R3	R4	R9	R10	R11	R12	R16		
Percent Differential 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Percent Differential 1 Inst Diff	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Transformer Overload	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase TOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase TOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 3	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 4	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral TOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral TOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 3	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 4	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground TOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground TOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 3	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 4	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Restricted Ground Fault 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Restricted Ground Fault 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence TOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence TOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence IOC 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence IOC 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence IOC 3	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase UV 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase UV 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Auxiliary UV 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Auxiliary UV 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase OV 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase OV 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Auxiliary OV 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral OV 1	☐	☒	☐	☐	☐	☐	☐	☐	☐	Disabled	

Figure 118: Protection Summary screen

Note:

Use the protection summary window for programming all of the elements and output relays needed for the application. Please note, that the output relays selected for breaker closing are excluded from the menus of all elements, and they are made inactive (cannot be selected) in the Protection Summary menu. The check boxes related to these outputs automatically become inactive, and they cannot be checked/unchecked by the user.

The check boxes for the relay outputs assigned for breaker tripping will automatically become inactive, if the function of an element is set to *Alarm*, *Latched Alarm*, or *Configurable*. In all other cases, the check boxes corresponding to those output relays will be active, and available for selection.

5.3.1 PROGRAMMING OUTPUT RELAYS FOR BREAKER TRIPPING AND CLOSING

The programming of the output relays for tripping individual breakers is performed once, when selected under setpoint **BKR 1(2,3) Trip Relay Select**, and **BKR 1(2,3) Close Relay Select** from the **Setpoints > System > Breakers > Breaker 1(2,3)** menu.

From these screens, **Relay 1**, **Relay 2**, and **Relay 9** are selected as default outputs for tripping Breaker 1, Breaker 2, and Breaker 3 respectively. Output relays for closing the breakers are not selected. The user can program any output relay from the list of output relays for breaker tripping, or closing.

Selective tripping of the transformer breakers from the protection element can be programmed from two places:

- From the Relay HMI: Protection Element Menu
- From the PC program: Element's Menu or Protection Summary

From the Relay HMI: Protection Element Menu

If *Trip* is selected as a **Function** for an element, and upon operation of that element, the **TRIP** LED will turn on. Similarly when *Alarm*, or *Latched Alarm* is selected, upon element operation, the **ALARM** LED will turn on. Selecting *Configurable* is not associated with an LED.

Example 1: Programming an IOC1 element as a Trip function

1. Select *Trip* from the list of selections available for the setpoint **Function**.

Home..\\Current\\Phase IOC 1		
Item Name	Value	Unit
Function	Disabled	
Signal Input	CT Bank 1 -J1	
Input	Phasor	
Pickup	10.00 x CT	
Direction	Disabled	
Pickup Delay	0.000 s	
Dropout Delay	0.000 s	
Block	Off	
Output Relay 1	Do Not Operate	
Output Relay 2	Do Not Operate	
...	...	
Output Relay 9	Do Not Operate	
Output Relay 11	Do Not Operate	
Events	Enabled	
Targets	Self-Reset	
PIOC 1		



Home..\\Current\\Phase IOC 1	
Item Name	Value
Function	Trip
Signal Input	CT Bank 1
Input	Phasor
Pickup	10.00 x C
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Output Relay 1	Do Not O
Output Relay 2	Do Not O
...	...
Output Relay 9	Do Not O
Output Relay 11	Do Not O
Events	Enabled
Targets	Self-Rese
PIOC 1	

2. Select the output relays for tripping the breakers, and any other aux relays if necessary.
3. Selecting *Trip* does not automatically change the values of the breaker trip selected output relays to *Operate* from the menus of the protection, control or monitoring elements. Regardless of the selected element function, the values for all output relays from the menu elements will show *Do Not Operate*. The user must select the desired output relays to be energized upon element operation.

Example 2: Programming an IOC1 element to Alarm

These same steps also apply if the element is programmed to *Latched Alarm* or *Configurable*.

1. Select *Alarm* from the list of selections available for the setpoint **Function**.

..\Current\Phase IOC 1		
Item Name	Value	Unit
Function	Disabled	
Signal Input	CT Bank 1 -J1	
Input	Phasor	
Pickup	10.00 x CT	
Direction	Disabled	
Pickup Delay	0.000 s	
Dropout Delay	0.000 s	
Block	Off	
Output Relay 1	Do Not Operate	
Output Relay 2	Do Not Operate	
...	...	
Output Relay 9	Do Not Operate	
Output Relay 11	Do Not Operate	
Events	Enabled	
Targets	Self-Reset	
PIOC 1		



..\Current\Phase IOC 1	
Item Name	Value
Function	Alarm
Signal Input	CT Bank 1
Input	Phasor
Pickup	10.00 x C
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Output Relay 1	Do Not O
Output Relay 2	Do Not O
...	...
Output Relay 9	Do Not O
Output Relay 11	Do Not O
Events	Enabled
Targets	Self-Rese
PIOC 1	

- If necessary, select the output relays to operate as an Alarm upon IOC1 operation.
- To distinguish the element functionality upon function selection, and to prevent the user from making programming mistakes, a mechanism affecting the output relays selected for breaker tripping is implemented and will activate upon changing the function from *Disabled* to *Alarm*, *Latched Alarm*, or *Configurable*.
 - The output relays selected for tripping of the breakers will be de-activated in the IOC1 element menu. The rest of the outputs are fully programmable and operational.
 - The setting for these trip selected output relays can be changed, i.e. from *Do Not Operate* to *Operate*, but the physical relay will not be energized. This is to prevent operation of the trip output relay by mistake, when the function used is *Alarm*, or *Configurable*.
- Changing the function back to *Trip*, will enable the breaker trip selected output relays from the IOC1 menu to be programmable.


From PC Program: Element Menu or Protection Summary

Using the PC program, there are two places where the menu of each protection, control, or monitoring element can be accessed: The element's individual menu, and the Protection Summary menu.

Element Menu - The element function can be set as *Trip*, *Alarm*, *Latched Alarm*, or *Configurable*. Depending on the selected function, the relay applies the following rules:

Example 1: Programming an IOC1 element as a Trip function

- Select Output Relays 1 and 2 to trip breaker 1 and 2 respectively.

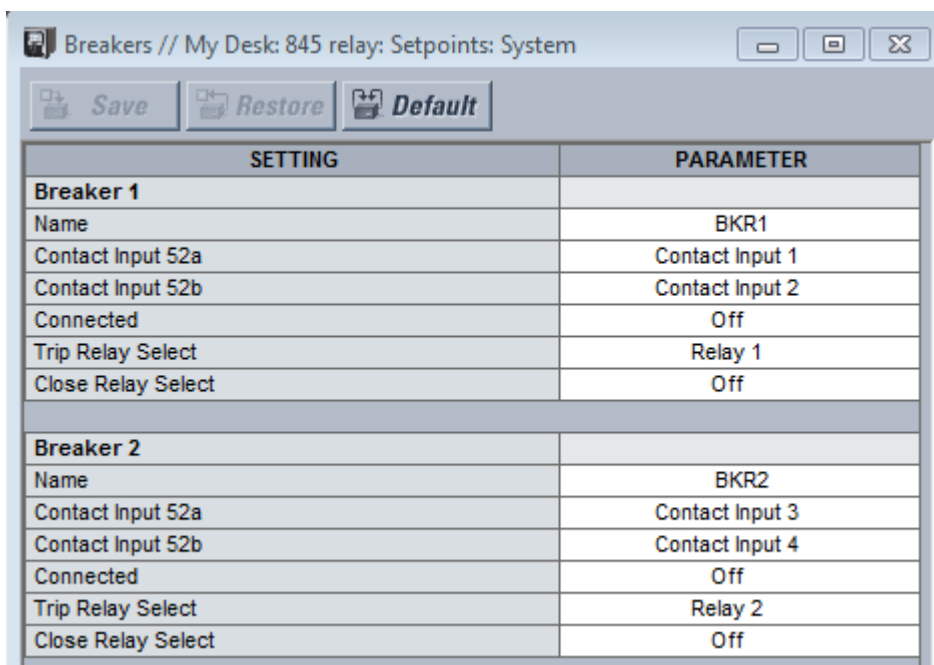


Breakers // My Desk: 845 relay: Setpoints: System

Save Restore Default

SETTING	PARAMETER
Breaker 1	
Name	BKR1
Contact Input 52a	Contact Input 1
Contact Input 52b	Contact Input 2
Connected	Off
Trip Relay Select	Relay 1
Close Relay Select	Off
Breaker 2	
Name	BKR2
Contact Input 52a	Contact Input 3
Contact Input 52b	Contact Input 4
Connected	Off
Trip Relay Select	Relay 2
Close Relay Select	Off

Figure 119: Transformer Breakers setup

2. Select *Trip* for the setpoint **Function**. When *Trip* is selected, all output relays are accessible for *Operate/Do Not Operate* programming.

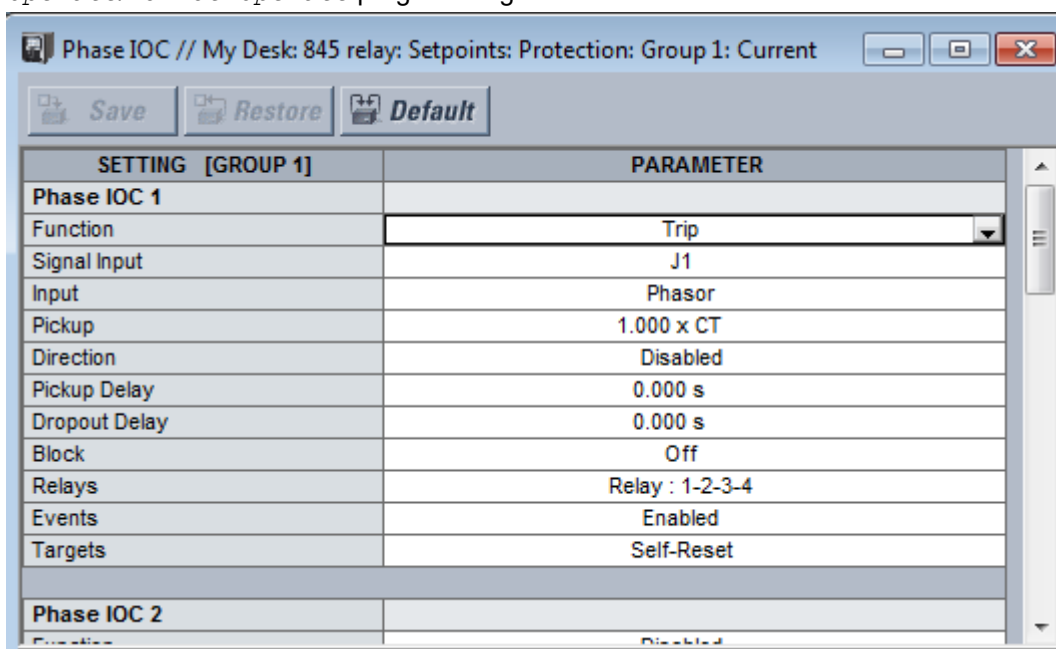

Phase IOC // My Desk: 845 relay: Setpoints: Protection: Group 1: Current

Save Restore Default

SETTING [GROUP 1]	PARAMETER
Phase IOC 1	
Function	Trip
Signal Input	J1
Input	Phasor
Pickup	1.000 x CT
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Relays	Relay : 1-2-3-4
Events	Enabled
Targets	Self-Reset
Phase IOC 2	
Function	Disabled

Figure 120: Function setpoint for Phase IOC 1 selected as Trip

Example 2: Programming an IOC1 element as an Alarm, Latched Alarm, or Configurable function

1. Select *Alarm*, *Latched Alarm*, or *Configurable* for the setpoint **Function**. When Alarm, Latched Alarm or Configurable is selected as a Function, the Output Relays 1 and 2, which have been assigned to trip Breaker 1 and 2 respectively, are de-activated for operation.

Phase IOC // My Desk: 845 relay: Setpoints: Protection: Group 1: Current

Save Restore Default

SETTING [GROUP 1]	PARAMETER
Phase IOC 1	
Function	Alarm
Signal Input	J1
Input	Phasor
Pickup	1.000 x CT
Direction	Disabled
Pickup Delay	0.000 s
Dropout Delay	0.000 s
Block	Off
Relays	Relay : 3-4
Events	Enabled
Targets	Self-Reset
Phase IOC 2	
Function	Disabled

Protection Summary- The selection of **Function**, and the selection of output relays for *Operate/Do Not Operate* for each element are reflected in the Protection Summary window as shown. Once the Protection Summary window is open, *Operate* or *Do Not Operate* can be selected for any output relay (except the ones selected for breaker close) by checking/unchecking the appropriate box. The user can also access the individual menu for any of the listed elements and make changes.

Groups: ☒ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6

I/O Cards: ☒ F ☒ G

☒ All
☐ Enabled

PROTECTION ELEMENTS	GROUP 1										FUNCTION
	BKR1 R1	BKR1 R2	R3	R4	R9	R10	R11	R12	R16		
Percent Differential 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Percent Differential 1 Inst Diff	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Transformer Overload	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase TOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase TOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 3	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase IOC 4	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral TOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral TOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 3	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral IOC 4	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground TOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground TOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 3	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Ground IOC 4	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Restricted Ground Fault 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Restricted Ground Fault 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence TOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence TOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence IOC 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence IOC 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Negative Sequence IOC 3	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase UV 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase UV 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Auxiliary UV 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Auxiliary UV 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase OV 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Phase OV 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Auxiliary OV 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	
Neutral OV 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	Disabled	

Figure 121: Protection Summary screen

Note:

Use the protection summary window for programming all of the elements and output relays needed for the application. Please note, that the output relays selected for breaker closing are excluded from the menus of all elements, and they are made inactive (cannot be selected) in the Protection Summary menu. The check boxes related to these outputs automatically become inactive, and they cannot be checked/unchecked by the user.

The check boxes for the relay outputs assigned for breaker tripping will automatically become inactive, if the function of an element is set to *Alarm*, *Latched Alarm*, or *Configurable*. In all other cases, the check boxes corresponding to those output relays will be active, and available for selection.

5.4 SETPOINTS ENTRY METHODS

Before placing the relay in operation, you must enter the setpoints, which define the system characteristics, inputs, relay outputs, and protection settings. You can use one of the following methods:

- Front panel, using the keypad and the display.
- Front USB port, connected to a portable computer running the EnerVista D&I Setup software.
- Rear Ethernet, copper or fiber port connected to portable computer running the EnerVista D&I Setup software.
- Rear RS485 port and a SCADA system running user-written software.
- If applicable for your model, using the Wi-Fi wireless connection to a portable computer running the EnerVista D&I Setup software.

Using a computer is the easiest method, as files can be stored and downloaded for fast, error free entry. To facilitate this process, the EnerVista D&I Setup software is available for download. The relay leaves the factory with setpoints programmed to default values, and it is these values that are shown in all the setpoint message illustrations.

At a minimum, you must set the **Setpoints > System** setpoints for the system to function correctly. To safeguard against the installation of a relay whose setpoints have not been entered, the **Out-Of-Service** self-test warning is displayed. In addition, the Critical Failure relay is de-energized. Once the relay has been programmed for the intended application, you should change the **Setpoints > Device > Installation > Device In Service** setpoint from *Not Ready* (the default) to *Ready*. Before putting the relay in the Ready state, you should work through each page of setpoint messages, entering values either by keypad or computer.

5.5 COMMON SETPOINTS

To make the application of this device as simple as possible, similar methods of operation and similar types of setpoints are incorporated in various features. Rather than repeat operation descriptions for this class of setpoint throughout the manual, a general description is presented in this overview. Details that are specific to a particular feature are included in the discussion of the feature. The form and nature of these setpoints is described below.

FUNCTION

The **<ELEMENT_NAME> FUNCTION** setpoint determines the operational characteristic of each feature. The range for this setpoint is: *Disabled*, *Trip*, *Latched Trip*, *Alarm*, *Latched Alarm* and *Configurable*.

If the **FUNCTION** setpoint is selected as *Disabled*, then the feature is not operational.

If **FUNCTION** is selected as *Trip* or *Latched Trip*, then the feature is operational. When the *Trip* or *Latched Trip* function is selected and the feature operates, the output relay #1 *Trip* operates (when selected as Trip Relay), and the **TRIP** LED is lit.

When the *Latched Trip* function is selected and the feature operates, the **TRIP** LED and trip output operands will remain latched. The *Latched Trip* can be reset by issuing the reset command.

If **FUNCTION** is selected as *Alarm* or *Latched Alarm*, then the feature is operational. When this function is selected and the feature operates, the **ALARM** LED is lit and any assigned auxiliary output relays operate. The Trip output relay does not operate, and the **TRIP** LED is not lit.

When **FUNCTION** is selected as *Latched Alarm*, operation of the Latched Alarm function depends on the selection of the setting **LATCH ALARM OPERATION**, configured under **Path: Setpoints > Device > Installation**. When the setting **LATCH ALARM OPERATION** is set to *Self-Reset* while an element is set to *Latched Alarm*, only the Alarm LED will remain latched. When setting **LATCH ALARM OPERATION** to *Latched*, both Alarm LED and element will remain latched.

When *Alarm* is selected and the feature operates, the **ALARM** LED flashes, and it self-resets when the operating conditions are cleared.

If **FUNCTION** is selected as *Configurable*, the feature is fully operational but outputs are not driving any action, such as output relay #1, **ALARM** LED or anything else. Operands from this element must be programmed to the required action which may be as simple as the auxiliary output relay from the list of available relays in the element itself; FlexLogic, Trip Bus etc.

Note:

The FlexLogic operands generated by the operation of each feature are active, and available to assign to outputs, or use in FlexLogic equations, regardless of the selected function, except when the function is set to *Disabled*.

PICKUP

The setpoint selects the threshold equal to or above (for over elements) or equal to or below (for under elements) which the measured parameter causes an output from the measuring element.

PICKUP DELAY

The setpoint selects a fixed time interval to delay an input signal from appearing as an output.

DROPOUT DELAY

The setpoint selects a fixed time interval to delay dropping out the output signal after being generated.

TDM

The setting provides a selection for Time Dial Multiplier which modifies the operating times per the selected inverse curve. For example, if an IEEE Extremely Inverse curve is selected with TDM=2, and the fault current is 5 times bigger than the pickup level, operation of the element can not occur until 2.59 s after pickup.

OUTPUT RELAYS

The **<ELEMENT_NAME> RELAYS** setpoint selects the relays required to operate when the feature generates an output. The range is *Operate* or *Do Not Operate*, and can be applied to any combination of the auxiliary output relays. The default setting is *Do Not Operate*.

The available auxiliary relays vary depending on the order code.

DIRECTION

The **<ELEMENT_NAME> DIRECTION** setpoint is available for overcurrent features which are subject to control from a directional element. The range is *Disabled*, *Forward*, and *Reverse*. If set to *Disabled*, the element is allowed to operate for current flow in any direction. There is no supervision from the directional element. If set to *Forward*, the OC element is allowed to operate when the fault is detected by the directional element in forward direction. In this mode, the OC element does not operate for fault in reverse direction. If set to *Reverse*, the OC element is allowed to operate when the fault is detected in reverse direction, and does not operate in forward direction.

RESET

Selection of an *Instantaneous* or a *Timed* reset is provided by this setting. If *Instantaneous* is selected, the element resets instantaneously providing the quantity drops below 97 to 98% of the pickup level before the time for operation is reached. If *Timed* is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

BLOCK

The **<ELEMENT_NAME> BLOCK** setpoint selects an operand from the list of FlexLogic operands, which when active, blocks the feature from running. When set to *On* the feature is always blocked; when set to *Off*, block is disabled.

EVENTS

The **<ELEMENT_NAME> EVENTS** setpoint can be set to *Enabled*, or *Disabled*. If set to *Enabled*, the events associated with the pickup, operation, or other conditions of the feature are recorded in the Event Recorder.

TARGETS

The **<ELEMENT_NAME> TARGETS** setpoint can be set to *Disabled*, *Self-Reset*, or *Latched*. If disabled, all the target messages are disabled and do not appear on screen. If set to *Self-Reset*, or *Latched*, the targets associated with the pickup, operation, or another condition of the feature are displayed on the screen of the relay. The targets disappear from the screen when *Self-Reset* is selected, and the conditions are cleared. The targets stay on the screen, when *Latched* is selected, and the conditions are cleared.

Note:

The targets of status, control and pickup conditions are always self-reset type, regardless of the *Self-Reset*, or *Latched* configuration of setpoint **<ELEMENT_NAME> TARGETS**.

To ensure the settings file inside the relay is updated, wait 30 seconds after a setpoint change before cycling power.

When IP addresses are changed and sent as a Settings file, the unit reboots twice.

5.6 LOGIC DIAGRAMS

Refer to the logic diagrams provided for a complete understanding of the operation of each feature. These sequential logic diagrams illustrate how each setpoint, input parameter, and internal logic is used in a feature to obtain an output. In addition to these logic diagrams, the Setpoints chapter provides written descriptions for each feature.

- **Setpoints:** Shown as a block with a heading labeled SETPOINT. The exact wording of the displayed setpoint message identifies the setpoint. Major functional setpoint selections are listed below the name and are incorporated in the logic.
- **Comparator Blocks:** Shown as a block with an inset box labeled RUN with the associated pickup/dropout setpoint shown directly above. Element operation of the detector is controlled by the signal entering the RUN inset. The measurement/comparison can only be performed if a logic 1 is provided at the RUN input. The relationship between a setpoint and input parameter is indicated by the following symbols: < (less than), > (greater than), etc.
- **Pickup and Dropout Time Delays:** Shown as a block with indication of two timers – the t_{PKP} (Pickup Delay), and t_{DPO} (Dropout Delay).
- **LED Indicators:** Shown as the following schematic symbol (X).
- **Logic:** Described with basic logic gates (AND, OR, XOR, NAND, NOR). The inverter (logical NOT), is shown as a circle: O
- **FlexLogic operands:** Shown as a block with a heading labeled FLEXLOGIC OPERANDS. Each feature produces output flags (operands) which can be used further for creating logic in the FlexLogic equation editor, or Trip Bus, or can be directly assigned to trigger an output. The operands from all relay features constitute the list of FlexLogic operands.

CHAPTER 6

DEVICE SETPOINTS

6.1 CHAPTER OVERVIEW

This chapter describes the Device setpoint menu settings in detail.

This chapter contains the following sections:

Chapter Overview	190
Device menu hierarchy	191
Custom Configuration	192
Real-time Clock	195
Communications	200
Transient Recorder	236
Data Logger	238
Fault Reports	241
Event Data	243
Flex states	244
Front Panel	245
Resetting	265
Installation	266
Self-Test Monitor	268
Clear Records	269

6.2 DEVICE MENU HIERARCHY

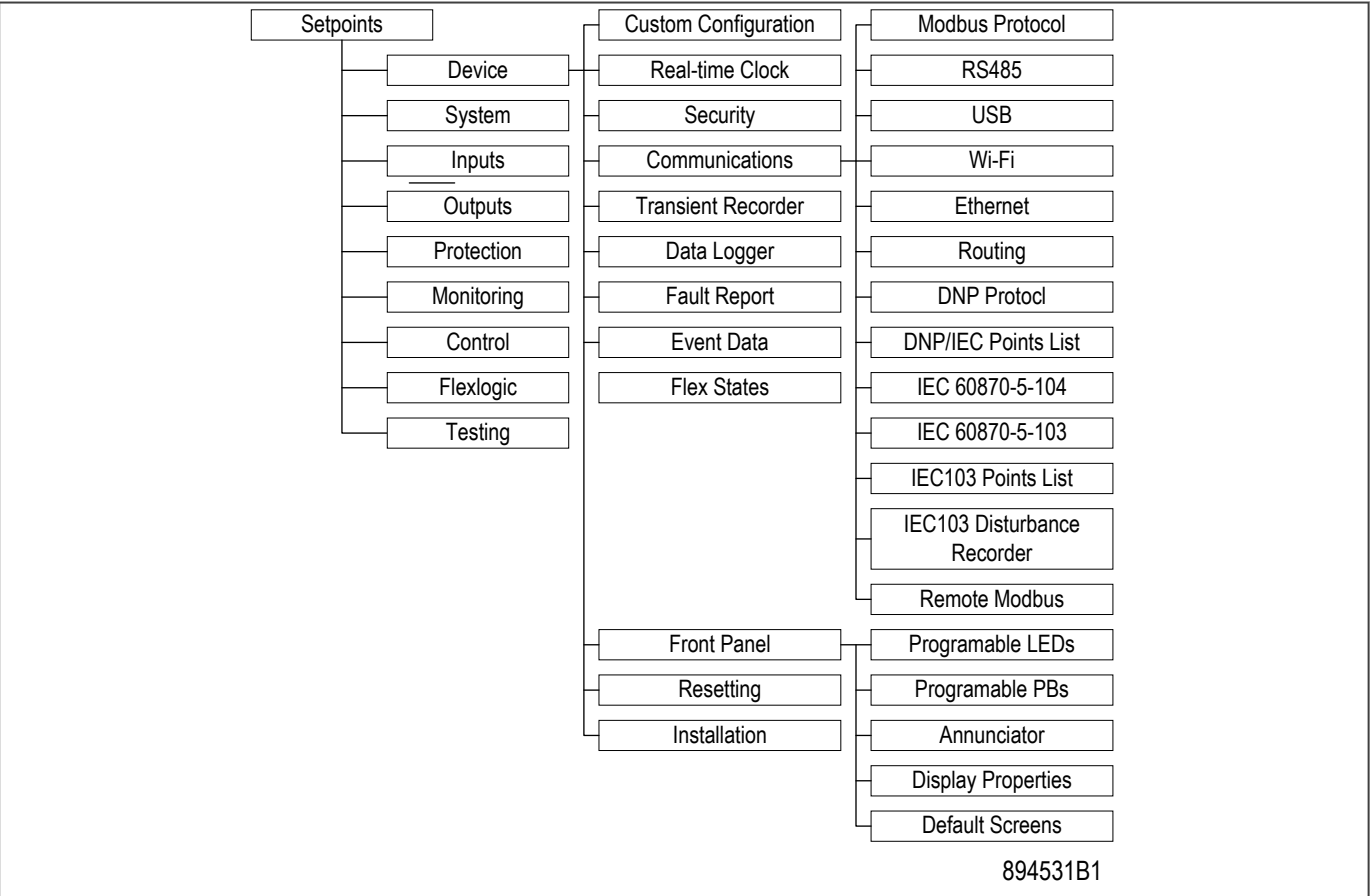


Figure 122: Device Display Hierarchy

6.3 CUSTOM CONFIGURATION

The custom configuration features allows you to customize the configurations as desired.

Configuration Mode

The 8-series platform, supports a multitude of functions and features including:

- Protection and Control (P&C)
- Asset Monitoring
- Flexible Logic Engine (FlexLogic)
- Records and Reporting
- Time Synchronization
- Testing/Simulation

Taking into consideration user experience, configuration mode controls how the Setpoints are presented by only displaying settings that are typically used, or settings that are important to configure.

Two configuration modes are supported:

- **Simplified** - In this mode, some of the functions, features and settings are hidden or made read-only (grayed out). All the settings made in Regular configuration mode are still applied during simplified mode (they are either hidden or read-only), so simplified configuration mode can also be seen as a way of locking advanced setpoints.
- **Regular** - In this mode, all function/features and setpoints of the device are editable and nothing is hidden or grayed out.

Configuration mode is applicable to the Setpoints items only and does not control view/presentation to other main menu items, such as Device Definition, Status, Metering, Records, Commands and Maintenance. The configuration mode setting is available to be changed by the Administrator role. The configuration mode control is applicable to device HMI and setup software, as well as online and offline setting files.

Note:

Configuration mode does not disable the device functionality or settings. It only controls the view or presentation on the HMI and setup software screens. Therefore, settings which are hidden or Read-only are preserved and applied within the device.

The home icon on the home page changes color according to the configuration mode. When in Simplified configuration mode, the home icon color is green. When in regular mode the home icon color is blue.

Example 1: Setting items view control

The **Phase TOC 1** function in Regular mode has 14 editable setpoints. In the Simplified mode this function has only 6 out of the 14 setpoints made available to edit. 5 setpoints are hidden, and 3 setpoints are read/view-only.

Note:

*All setpoints under Regular mode are still applied and used by the device. For example the **Input** is hidden but configured as **Phasor** during Regular mode, therefore **Phase TOC 1** still applies **Phasor** as an input. Similarly, **Reset** is read-only, and **Phase TOC 1** still applies **Instantaneous** for resetting. The read-only settings are greyed out.*

Regular			Simplified		
H:\Current\Phase TOC 1			H:\Current\Phase TOC 1		
Item Name	Value	Unit	Item Name	Value	Unit
Function	Disabled		Function	Disabled	
Signal Input	CT Bank 1 -J1		Signal Input	CT Bank 1 -J1	
Input	Phasor		Pickup	1.000	x CT
Pickup	1.000	x CT	Curve	IEEE Mod Inverse	
Curve	IEEE Mod Inverse		TDM	1.00	
TDM	1.00		Reset	Instantaneous	
Reset	Instantaneous		Direction	Disabled	
Direction	Disabled		Voltage Restraint	Disabled	
Voltage Restraint	Disabled		Relays	Do Not Operate	
Volt Lower Limit	0.1	p.u.	PTOC 1		
Block	Off				
Relays	Do Not Operate				
Events	Enabled				
Targets	Self-Reset				
PTOC 1					

Figure 123: Comparison of the setpoints for Regular and Simplified mode

Example 2: Function/Feature view control

The differences in the **Inputs** setpoint screens for Regular and Simplified mode are shown below. Under Simplified mode, the **Virtual Inputs** and **Remote Inputs** are hidden for any configuration change. However, the device will still accept and process virtual and remote inputs based on what is configured during Regular mode. This way, Simplified configuration mode does not change the behavior of the device.

Regular			
..\Setpoints\Inputs			
Item Name			
Contact Inputs			
Virtual Inputs			
Analog Inputs			
Remote Inputs			
Inputs	V Inputs	MA In	Rem In

Figure 124: Comparison of the Inputs screens for Regular and Simplified mode

CONFIG MODE

Path: *Setpoints > Device > Config Mode*

Range: Simplified, Regular

Default: Regular

This setting allows selection of the configuration mode while the device is accessed by the Administrator role. In *Regular* configuration mode, all values in settings/functions can be edited. In *Simplified* configuration mode, selected settings/functions are hidden or the values are read-only to enhance user experience with minimum setpoint changes.

6.4 REAL-TIME CLOCK

Path: *Setpoints > Device > Real Time Clock*

The relay is capable of receiving a time reference from several time sources in addition to its own internal clock for the purpose of time-stamping events, transient recorders and other occurrences within the relay. The accuracy of the time stamp is based on the time reference that is used. The relay supports an internal clock, SNTP, IRIG-B, and PTP IEEE 1588 (version 2) as potential time references.

If two or more time sources are available, the time source with the higher priority shown in Time Sources table is used where 1 is considered to be the highest priority. Please note that the time source priority of PTP and IRIG-B can be swapped. If both PTP and IRIG-B are available, by default the clock syncs to PTP over IRIG-B. If PTP is not available, the CPU syncs the internal clock to IRIG-B.

Time Sources

Time Source	Priority
PTP (IEEE1588)	1*
IRIG-B	2*
SNTP	3
Internal Clock	4

* The priority of IRIG-B and PTP can be swapped.

Note:

Synchronization by IEC103, DNP, Modbus and IEC104 is not going to be issued if there is a sync source from IRIG-B, SNTP or PTP.

6.4.1 PTP CONFIGURATION

Path: *Setpoints > Device > Real Time Clock > Precision Time*

PORT 4(5) PTP FUNCTION

Range: Disabled, Enabled

Default: Enabled

When the port setting is selected as *Disabled* PTP is disabled on the port. The relay does not generate, or listen to, PTP messages on the port.

PORT 4(5) PATH DELAY ADDER

Range: 0 to 60000 ns in steps of 1 ns

Default: 0 ns

The time delivered by PTP is advanced by the time value in the setting prior to the time being used to synchronize the relay's real time clock. This is to compensate for time delivery delays not compensated for in the network. In a fully compliant Power Profile (PP) network, the peer delay and the processing delay mechanisms compensate for all the delays between the grandmaster and the relay. In such networks, the setting is zero.

In networks containing one or more switches and/or clocks that do not implement both of these mechanisms, not all delays are compensated, so the time of message arrival at the relay is later than the time indicated in the message. The setting can be used to approximately compensate for the delay. Since the relay is not aware of network switching that dynamically changes the amount of uncompensated delay, there is no setting that always completely corrects for uncompensated delay. A setting can be chosen that reduces worst-case error to half of the range between minimum and maximum uncompensated delay if these values are known.

PORT 4(5) PATH DELAY ASYMMETRY

Range: -1000 to +1000 ns in steps of 1 ns

Default: 0 ns

The setting corresponds to Delay Asymmetry in PTP, which is used by the peer delay mechanism to compensate for any difference in the propagation delay between the two directions of a link. Except in unusual cases, the two fibers are of essentially identical length and composition, so the setting is set to zero.

In unusual cases where the length of link is different in different directions, the setting is to be set to the number of nanoseconds longer the Ethernet propagation delay is to the relay compared with the mean of path propagation delays to and from the relay. For instance, if it is known say from the physical length of the fibers and the propagation speed in the fibers that the delay from the relay to the Ethernet switch it is connected to is 9000 ns and that the delay from the switch to the relay is 11000 ns, then the mean delay is 10000 ns, and the path delay asymmetry is +1000 ns.

STRICT POWER PROFILE

Range: Enabled, Disabled

Default: Enabled

Power profile (IEEE Std C37.238™ 2011) requires that the grandmaster clock be power profile compliant, that the delivered time have a worst-case error of $\pm 1 \mu\text{s}$, and that the peer delay mechanism be implemented. With the strict power profile setting enabled, the relay selects as master only clocks displaying the IEEE_C37_238 identification codes. It uses a port only when the peer delay mechanism is operational. With the strict power profile setting disabled, the relay uses clocks without the power profile identification when no power profile clocks are present, and uses ports even if the peer delay mechanism is non-operational.

The setting applies to all of the relay's PTP-capable ports.

PTP DOMAIN NUMBER

Range: 0 to 255

Default: 0

The setting is set to the domain number of the grandmaster-capable clock(s) to which they can be synchronized. A network may support multiple time distribution domains, each distinguished with a unique domain number. More commonly, there is a single domain using the default domain number zero.

The setting applies to all of the relay's PTP-capable ports.

PTP VLAN PRIORITY

Range: 0 to 7

Default: 4

The setting selects the value of the priority field in the 802.1Q VLAN tag in request messages issued by the relay's peer delay mechanism. In compliance with PP (Power Profile) the default VLAN priority is 4, but it is recommended that in accordance with PTP it be set to 7.

Depending on the characteristics of the device to which the relay is directly linked, VLAN Priority may have no effect.

The setting applies to all of the relay's PTP-capable ports.

PTP VLAN ID

Range: 0 to 4095

Default: 0

The setting selects the value of the ID field in the 802.1Q VLAN tag in request messages issued by the relay's peer delay mechanism. It is provided in compliance with PP (Power Profile). As these messages have a destination address that indicates they are not to be bridged, their VLAN ID serves no function, and so may be left at its default value.

Depending on the characteristics of the device to which the relay is directly linked, VLAN ID may have no effect.

The setting applies to all of the relay's PTP-capable ports.

PTP PRIORITY

Range: 1, 2

Default: 1

The setting sets the priority of PTP time for the relay. If set to 1 and IRIG-B is available, the relay syncs the relay's time reference to the PTP time. If set to 2 and IRIG-B is available, the relay syncs its reference to IRIG-B time.

6.4.2 CLOCK

Path: *Setpoints > Device > Real Time Clock > Clock*

DATE

Format: Month/Day/Year

Range: Month: 1 to 12; Day: 1 to 31; Year: 2008 to 2094

Default: 01/01/2008

TIME

Range: 0 to 23: 0 to 59:0 to 59

Default: 00:00:00

LOCAL TIME OFFSET FROM UTC

Range: -24.00 to 24.00 hrs in steps of 0.5 hrs

Default: 0.00 hrs

REAL TIME CLOCK EVENTS

Range: Disabled, Enabled

Default: Enabled (FW 3.00), Disabled (FW4.10)

IRIG-B

Range: Disabled, Enabled

Default: Disabled

DAYLIGHT SAVINGS TIME

Range: Disabled, Enabled

Default: Disabled

DST START MONTH

Range: January to December (all months)

Default: Not Set

DST START DAY

Range: SUN to SAT (all days of the week)

Default: Not Set

DST START WEEK

Range: 1st, 2nd, 3rd, 4th, Last

Default: Not Set

DST START HOUR

Range: 0 to 23

Default: 2

DST END MONTH

Range: January to December (all months)

Default: Not Set

DST END WEEK

Range: 1st, 2nd, 3rd, 4th, Last

Default: Not Set

DST END DAY

Range: SUN to SAT (all days of the week)

Default: Not Set

DST END HOUR

Range: 0 to 23

Default: 2

Note:

IRIG-B is available in all relays apart from the 859. A failure on IRIG-B triggers an event and a target message. IRIG-B is auto-detected. The signal type is detected in the hardware, so there are no configurable options.

6.4.3 SNTP PROTOCOL

8 series relays accept time synchronization from up to two different SNTP servers. In order to define number of SNTP servers to be used, different settings for each SNTP server must be configured.

- If one SNTP server is used to synchronize the relay, the SNTP Server and UDP port settings must be configured with the corresponding settings.
- If two SNTP servers are used to synchronize the relay, the SNTP Server IP and UDP port for the main server must be configured, along with the SNTP Server 2 IP and UDP port for the back-up server.

Note:

8 Series relays only support SNTP unicast. It may take 2-3 minutes for the relay to synchronize with the SNTP server.

Path: Setpoints > Device > Real Time Clock > SNTP

SNTP FUNCTION

Range: Disabled, Enabled

Default: Disabled

SNTP SERVER IP ADDRESS

Range: Standard IP Address Format

Default: 0.0.0.0

SNTP UDP PORT NUMBER

Range: 0 to 65535 in steps of 1

Default: 123

SNTP SERVER 2 IP ADDRESS

Range: Standard IP Address Format

Default: 0.0.0.0

SNTP 2 UDP PORT NUMBER

Range: 0 to 65535 in steps of 1

Default: 123

<i>Note:</i> <i>The SNTP and PTP settings take effect after rebooting the relay.</i>

6.5 COMMUNICATIONS

8-series relays have a two-stage communications capability. The base CPU supports the Modbus protocol through the Ethernet, USB and serial ports. In addition, the base CPU also supports the IEC 103, DNP serial, DNP TCP/IP, Ethernet and TFTP protocol. Once the communications module option is added to the base, the communications module supports IEC 61850 Ed.2. The communications CPU also supports Modbus TCP, DNP TCP, TFTP, SFTP, and SNTP protocol.

6.5.1 GENERAL

In the device communication setpoints, there are general settings (for products with advance combination) which are related to the control authority and its indicator and power factor sign definition.

Path: Setpoints>Device>Communications>General

Multi Level Control

Range: Disabled, Enabled

Default: Disabled

When set to Enabled, control authority from multiple levels (Bay, Station and Remote) are allowed simultaneously based on Local/Remote status and status authority status. Otherwise only one level has the authority to control, based on Local/Remote status and status authority status.

IED Local Status

Range: Off, Any FlexLogic operand

Default: Off

Selects an operand, that indicates the IED is in Local or Remote mode. When the operand value is set, the IED is in Local mode and any commands from remote protocols (IEC61850, DNP3, IEC 104 or 103, Modbus) are rejected.

6.5.2 MODBUS PROTOCOL

All Ethernet ports and serial communication ports support the Modbus protocol. The only exception is if the serial port has been configured for DNP or IEC 60870-5-103 operation (see descriptions below). This allows the EnerVista D&I Setup (which is a Modbus master application) to communicate with the relay.

The relay implements a subset of the Modicon Modbus RTU serial communication standard. The Modbus protocol is hardware-independent. That is, the physical layer can be any of a variety of standard hardware configurations. This includes USB, RS485, fiber optics, etc. Modbus is a single master / multiple slave type of protocol suitable for a multi-drop configuration.

The relay is always a Modbus slave with a valid slave address range 1 to 254.

DATA FRAME FORMAT AND DATA RATE

One data frame of an asynchronous transmission to or from a relay typically consists of 1 start bit, 8 data bits, and 1 stop bit. This produces a 10-bit data frame. This is important for transmission through modems at high bit rates. Modbus protocol can be implemented at any standard communication speed. The relay supports operation at 9600, 19200, 38400, 57600, and 115200 bps baud rate. The USB interface supports Modbus TCP/IP.

FUNCTION CODE SUPPORTED

The following functions are supported:

- FUNCTION CODE 03H - Read Setpoints
- FUNCTION CODE 04H - Read Actual Values
- FUNCTION CODE 05H - Execute Operation

- FUNCTION CODE 06H - Store Single Setpoint
- FUNCTION CODE 07H - Read Device Status
- FUNCTION CODE 08H - Loopback Test
- FUNCTION CODE 10H - Store Multiple Setpoints
- FUNCTION CODE 42H - Group Settings Read
- FUNCTION CODE 43H - Group Settings Write

When a Modbus master such as the EnerVista D&I Setup communicates with the relay over Ethernet, the relay slave address, TCP port number and IP address for the associated port must be configured and are also configured within the Master for this device. The default Modbus TCP port number is 502.

6.5.3 MODBUS CONFIGURABLE PARAMETERS

The following Modbus parameters are configurable:

Path: *Setpoints > Device > Communications > Modbus Protocol*

MODBUS SLAVE ADDRESS

Range: 1 to 254 in steps of 1

Default: 254

For the RS485 ports each 8 Series must have a unique address from 1 to 254. Address 0 is the broadcast address to which all Modbus slave devices listen. Addresses do not have to be sequential, but no two devices can have the same address, otherwise conflicts resulting in errors occur. Generally, each device added to the link uses the next higher address starting at 1.

MODBUS TCP PORT NUMBER

Range: 1 to 65535 in steps of 1

Default: 502

The TCP port number used with Modbus over Ethernet. Note that the maximum number of simultaneous Modbus connections supported over Ethernet is three for an 8 Series without the communications card and five for an 8 Series with the communications card.

COMPATIBILITY

Range: Disabled, FlexMap

Default: Disabled

Compatibility mode changes the Modbus actual value registers to emulate the SR relay. The emulation supports typical actual value data for common data items.

See the *8 Series Protective Relay Communications guide* for the list.

FLEXMAP FILE

Range: Up to 13 alphanumeric characters

Default: Depends on the type of the relay and order code options:

SR735XAFlexMap.000 for Current protection option "S"

SR750XAFlexMap.000 for Current Protection option "M", "D" or "A"

SR469XAFlexMap.000

SR745XAFlexMap.000

SR489XAFlexMap.000

369XAFlexMap.000

The **Flexmap File** describes the translation from the Modbus memory map to the target Modbus memory map.

The default Flexmap File can be changed by entering the filename. In the case where the default SR735XAFlexMap.000 file requires to be changed to SR750 then enter SR750XAFlexMap.000 file.

RS485 Port1

Range: Off, On

Default: Off

RS485 Port2

Range: Off, On

Default: Off

RS485 Port3 (only 859)

Range: Off, On

Default: Off

Ethernet Port1

Range: Off, On

Default: Off

Ethernet Port2

Range: Off, On

Default: Off

Ethernet Port4 (not 859)

Range: Off, On

Default: Off

Ethernet Port5 (not 859)

Range: Off, On

Default: Off

MODBUS ACTIVITY TIMEOUT

Range: 0 to 3600 s in steps of 1 s

Default: 0 s

The **Modbus Activity Timeout** specifies the minimum time without Modbus communication. This timeout is used to declare the Modbus **Loss of Communication** state.

The Modbus state is always Active if the **Modbus Activity Timeout** is 0 s.

MODBUS 485 READ ACTUALS

Range: Function Code 03h, Function Code 04h

Default: Function Code 04h

The **Modbus 485 Read Actuals** setting configures the Function Code that the relay responds to from a Modbus Master when Actual Values are requested. Use this setting in scenarios where the Modbus Master can only communicate using Function Code 03h for requesting Actual Values.

Note:

This setting applies only to the RS485 connection.

When this setting is changed to Function Code 03h, retrieving configuration settings through the RS485 port is not possible.

MODBUS ERROR RESPONSES

The following exception response codes are implemented.

Error ID	Exception	Description
01	ILLEGAL FUNCTION	The function code transmitted is not one of the functions supported by the 8 Series.
02	ILLEGAL DATA ADDRESS	The address referenced in the data field transmitted by the master is not an allowable address for the 8 Series.
03	ILLEGAL DATA VALUE	The value referenced in the data field transmitted by the master is not within range for the selected data address.

6.5.4 RS485

On the rear, the relay is equipped with two RS485 serial communication ports. The RS485 port has settings for baud rate and parity. It is important that these parameters agree with the settings used on the computer or other equipment connected to this port. A maximum of 32 relays can be daisy-chained and connected to a DCS, PLC or a PC using the RS485 port.

Path: *Setpoints > Device > Communications > RS485*

BAUD RATE

Range: 2400, 4800, 9600, 1200, 19200, 38400, 57600, 115200

Default: 115200

PARITY

Range: None, Odd, Even

Default: None

PORT PROTOCOL

Range: Modbus, DNP 3.0, IEC 60870-5-103

Default: Modbus

6.5.5 WI-FI

Wi-Fi refers to Wireless Local Area Networks (WLANs) that are based on the 802.11 set of standards. WLANs provide Local Area Network (LAN) type of connectivity but without the need of cables, which makes them more convenient for use in limited spaces. The signal strength and its range is determined by the wireless device's antenna technology and standard, the best being IEEE 802.11n.

Wi-Fi defines two modes of operation, namely ad-hoc, used for small deployments, and infrastructure mode, which supports more robust types of security and better capabilities for centralized management. The infrastructure mode requires an Access Point (AP). Devices operating in this mode pass all data through the AP.

The integrated Wi-Fi module conforms to IEEE 802.11b/g/n standards. The devices operate in infrastructure mode. Security is optional, but enabled by default. We advise you to leave this switched on, as wireless traffic is very susceptible to cyber-attacks.

The security technology used is WPA2 (Wireless Protected Access version 2), based on the IEEE 802.11i standard for data encryption. WPA2 is a second version of WPA technology, designed to solve known security limitations found in one of the encryption algorithms used by WPA, namely TKIP (Temporal Key Integrity Protocol). WPA2 uses CCMP (Counter Mode with Cipher Block Chaining Message Authentication Code Protocol), which provides an enhanced data cryptographic encapsulation mechanism based on AES (Advanced Encryption Standard). CCMP makes WPA2 much stronger and secure than its predecessors, WPA and WEP.

Several forms of WPA2 security keys exist. The relay supports WPA2 PSK (Pre-Shared Key), which utilizes 64 hexadecimal digits. The key may actually be entered as a string of 64 hexadecimal digits or as a passphrase of 8 to 32 printable ASCII characters. For user convenience, the settings accept the key in the form of a passphrase. Internally the ASCII passphrase is used for deriving a 256-bit key.

The following are the Wi-Fi network settings. Only an Administrator has the rights to change them.

Path: Setpoints > Device > Communications > Wi-Fi

WiFi Access

This setting switches WiFi functionality on/off using a Flexlogic operand. By default WiFi is off.

WiFi IP Address / Subnet Mask

The default IP address is 192.168.0.x, where x is calculated as:

$X = (\text{modulo } 242 \text{ of the last 3 digits of the serial number}) + 12$ Example: A unit has a serial number of MJ3A16000405, the default IP address would be 192.168.0.175 (where $405 \bmod 242 = 163 + 12 = 175$).

This is to ensure uniqueness of the default IP address for all 8 Series devices present on one wireless network and it creates a usable address space from 192.168.0.12 to 192.168.0.253 for the devices.

Note:

From the remaining range of unicast addresses 192.168.0.1 to 192.168.0.253, at least two are going to be used for the AP and a laptop installed with the relevant software version, which will be used to configure the devices. The AP should be configured with the address 192.168.0.1 and mask 255.255.255.0 and have DHCP enabled with a DHCP range from 192.168.0.2 to 192.168.0.253. This allows laptops, iPads and any other devices to connect to the local network without the need to statically configure their own IP address and mask.

WiFi Security

The setting enables Wi-Fi security. If set to "None", there is no security and all traffic is open. By default WiFi Security is set to WPA2-PSK.

WiFi SSID

The SSID is the public name of a wireless network. All of the wireless devices on a WLAN must use the same SSID in order to communicate with each other. The default for the SSID is provided by the vendor with the shipment of any new device. We recommend that you modify this name as needed after initial startup, to ensure unique SSIDs if several WLANs are configured.

Note:

SSID broadcast should be disabled on AP. This provides some extra protection by requiring an SSID before connecting to the device and making it harder for casual outsiders looking for wireless networks to find the device and attempt to connect.

WiFi WPA2 Passphrase

The WPA2 Passphrase is used for generating the encryption key. The same passphrase must be set on AP and on all devices communicating on the same WLAN. The device supports a string of up to 14 printable ASCII characters. Internally a 256-bit key is calculated by applying the PBKDF2 key derivation function to this passphrase, using the SSID as the salt and 4096 iterations of HMAC-SHA1.

The devices are configured with a default passphrase, which is provided by the vendor with the shipment of any new device.

When choosing a new passphrase, the password complexity rules of CyberSentry must be used (see CyberSentry details in the relay Instruction manual).

This field is visible only if the security is set to WPA2-PSK.

Note:

Ideally the passphrase should be set through the software and not directly from the Keypad, where there are limitations in terms of space and types of characters supported. However, for convenience, the passcode setting is available from the Keypad as well.

WiFi Status

A Wi-Fi symbol is displayed in the caption area of the product front panel. The following table lists all possibilities for this icon:

Wi-Fi State	Wi-Fi Icon Color
Disabled	Icon is gray and crossed by a red line
Disconnected	Gray
Connecting	Yellow
Connected	Green

Wi-Fi Events

Event	Description
Wi-Fi Connected	This event is recorded to indicate a network connect.
Wi-Fi Disconnected	This event is recorded to indicate a network disconnect.

Note:

If the relay is in service mode and the settings are default a minor error is triggered.

6.5.6 WI-FI QUICK START PROCEDURE

The following provides the settings information and instructions to quickly setup Wi-Fi.

Required Equipment

- Relay with Wi-Fi functionality
- PC with Wi-Fi
- Access Point

Quick Start Procedure

1. The PC Wi-Fi Network Passphrase is provided with the relay
2. The Access Point settings are given in the table below.
3. Any relays in range are automatically connect to the configured Access Point.
4. Start EnerVista D&I Setup on a PC and use the Discover function, all relays within range appear and are populated for initial configuration and commissioning.
5. Once the relay is configured, change the relay default Wi-Fi SSID and Passphrase settings before the relay goes into service.

Access Point Settings	
IP address:	192.168.0.1
Subnet Mask:	255.255.255.0
SSID:	same as entered on the PC (SSID provided with the relay)
Broadcast:	disabled
Security type:	WPA2-PSK (WPA2-Personal)
Encryption:	AES
Passphrase:	same as entered on the PC (Passphrase provided with the relay)
DHCP enabled:	range of 192.168.0.12 to 192.168.0.253

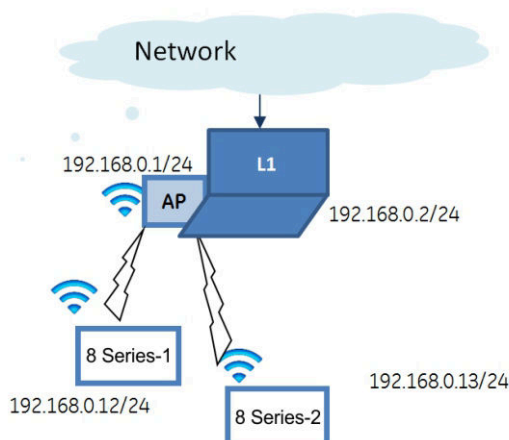


Figure 125: Example of Wi-Fi Deployment

6.5.7 USB

The USB parameters are as follows:

IP Address: 172.16.0.2

IP Subnet Mask: 255.255.255.0

IP GWY IP Address: 172.16.0.1

Note:

Whenever the device is rebooted, the USB cable needs to be unplugged and plugged in again for proper communication to be established over USB.

Connecting multiple relays over USB to a single PC is not possible because in the case of USB, the IP address of the device 172.16.0.2 is constant.

6.5.8 ETHERNET PORTS

The following communication offerings are available.

Base Offering

- 2x Copper (RJ45) Ports
- Modes: 10/100 Mbps
- Protocols: Modbus TCP, DNP 3.0, IEC 61850 GOOSE, SNTP, IEC 62439-3 clause 4 (PRP)

Advanced Offering

- 4x Copper (RJ45) Ports or 2x Fiber
- Modes: 10/100 Mbps (copper)
- 100Mbps (Fiber)
- Protocols: Modbus TCP, DNP 3.0, IEC 61850 GOOSE, SNTP, IEC 62439-3 clause 4 (PRP), HSR

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

6.5.8.1 NETWORK SETTINGS MENU

This section describes the network settings menu. If the communications card is installed network port 1 is no longer available. When using more than one Ethernet port, configure each to belong to a different network or subnet using the IP addresses and mask, else communication becomes unpredictable when more than one port is configured to the same subnet.

Note:

*Use the softkeys and **Down/Up** key to enter an IP address. When entering an IP address you must press the **BACK** key first to switch between softkey mode and the **Down/Up** key mode.*

NETWORK 1, 2, 4, 5

Range: Standard IPV4 Address format

Default: 192.168.11.11 (Port 1)

Default: 192.168.11.12 (Port 2)

Default: 192.168.11.13 (Port 4)

Default: 192.168.11.14 (Port 5)

The setting sets the port's IPV4 address in standard IPV4 format.

Note:

The setting is valid on Port 2(5) if *Prt1(4)* is set to *Independent*

Note:

The setting is valid on Port 2 if **Prt1 Operation** is set to *Independent*.

Note:

172.17.X.X/16 and 172.18.X.X/16 are reserved IPs.

PRT1<n> SUBNET IP MASK

Range: Standard IPV4 mask format

Default: 255.255.255.0 (Port 1, 2, 4, 5)

This setting specifies the IPv4 mask associated with the corresponding port IP address.

PRT<n> OPERATION

Range: Independent, LLA, PRP, HSR, RSTP

Default: Independent

This setting determines the mode of operation for ports 1 and 2: *Independent, LLA, PRP, HSR, RSTP*

Independent operation: Ports 1, 2, 4 and 5 operate independently with their own MAC and IP address.

LLA operation: Ports 1, 2, 4 and 5 use port 1's MAC and IP address settings while port 2 is in standby mode in that it does not actively communicate on the Ethernet network but monitors its link. If port 1 is active and the link loss problem is detected, communications is switched to port 2 immediately. Port 2 is, in effect, acting as a redundant or backup link to the network for port 1.

LLA (Link Loss Alert): is a proprietary feature supported by the fiber optic ports. When enabled, this feature is able to detect a failure of the fiber link. If **Prt1 Operation** is set to *LLA*, the detection of a link failure by this feature triggers the transfer of communications. If LLA is enabled on a port with a non-fiber SFP, the target message *LLA not supported by Prt (1 or 2)* is displayed on the keypad and an event is logged.

Note:

LLA is not available on port 4,5 copper (RJ45). When the port operation is selected, the relay requires a reboot for the setting to be applied.

Parallel Redundancy Protocol (PRP) operation: Ports 1 and 2 use the same MAC address and combine information at the link layer. It is intended to only be used if the two ports are connected to separate parallel LAN's. In this mode of operation, both ports cannot be connected to the same LAN. The receiving devices (8 Series) process the first frame received and discard the duplicate through a link redundancy entity (LRE) or similar service that operates below layer 2. Aside from LRE, PRP uses conventional Ethernet hardware but both ports must know they are in PRP. Ports of PRP devices operating with the same Internet Protocol (IP) addresses for traffic that uses IP Management protocols such as Address Resolution Protocol (ARP) must operate correctly.

Duplicate Discard mode: This is the normal setting for PRP operation and once set it allows the sender LRE to append a six-octet field that contains a sequence number, the Redundancy Control Trailer (RCT) to both frames it sends. The receiver LRE uses the sequence number of the RCT and the source MAC address to detect duplicates. It forwards only the first frame of a pair to its upper layers.

HSR operation: When set to HSR (High-availability Seamless Redundancy Protocol), PRT1 is paired with PRT2, or PRT4 is paired with PRT5. Each pair of ports use the same MAC address. In this mode, all the participating

devices are connected in ring topology. In normal condition (fault-free state), both identical frames will reach the destination device within a certain interval. The first frame will be sent up the OSI stack to the destination application, while the second one will be discarded.

For more information, see the Communications Guide.

Note:

NOTE: redundancy operations work in pairs Port1/2 and Port4/5 only. It is not interchangeable between all ports.

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

BRIDGE PRIORITY

Range: 0 to 61440 in steps of 4096

Default: 32768

This setting specifies the switch (bridge) priority value. The bridge priority value is used to along with the port MAC address to determine the root device in the network. Lower values mean the higher priority.

Note:

When assigning the bridge priority, it is recommended to configure the Ethernet switch as the root device of the network. This reduces the number of hops to reach all devices in the network.

RSTP PORT 1 PRIORITY

Range: 0 to 240 in steps of 16

Default: 128

This setting specifies the Network Port 1 RSTP priority to select as root port. Lower the number means higher priority.

RSTP PORT 1 PATHCOST

Range: 0 to 2000000 in steps of 1

Default: 200000

This setting specifies the port cost value used for the switch to determine the forwarding path. The lower the value, the lower the cost and hence the preferred route.

RSTP PORT 2 PRIORITY

Range: 0 to 240 in steps of 16

Default: 128

This setting specifies the Network Port 1 RSTP priority to select as root port. Lower the number means higher priority.

RSTP PORT 2 PATHCOST

Range: 0 to 2000000 in steps of 1

Default: 200000

This setting specifies the port cost value used for the switch to determine the forwarding path. The lower the value, the lower the cost and hence the preferred route.

Note:

Please note that the PTP feature is not functional on Network Ports with RSTP enabled.

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

6.5.9 ROUTING

When the configuration card is present, a default route and a maximum number of 6 static routes can be configured. The default route is used as the last choice, if no other route towards a given destination is found.

Path: **Setpoints** > **Device** > **Communications** > **Routing** > **Default Route**

GATEWAY ADDRESS

Range: Standard IPV4 unicast address format (0.0.0.1 to 223.255.255.254)

Default: 127.0.0.1

This setting sets the gateway of the default route to be used by IP traffic sent from the relay, if no other route towards a given IP destination is found.

This setting is available only if the communications card is present.

Path: **Setpoints** > **Device** > **Communications** > **Routing** > **Static RT1 (2 to 6)**

RT1 (2,3,4,5,6) DESTINATION

Range: Standard IPV4 network address format (0.0.0.1 to 223.255.255.254)

Default: 127.0.0.1

This setting sets the destination IPv4 route. This setting is available only if the communications card is present.

RT1 (2,3,4,5,6) MASK

Range: Standard IPV4 network mask format

Default: 255.0.0.0

This setting sets the IP mask associated with the route. This setting is available only if the communications card is present.

RT1 (2,3,4,5,6) GATEWAY

Range: Standard IPV4 unicast address format (0.0.0.1 to 223.255.255.254)

Default: 127.0.0.1

This setting sets the destination IP route. This setting is available only if the communications card is present.

RULES FOR ADDING AND DELETING STATIC ROUTES

1. By default, the value of the destination field is 127.0.0.1 for all static routes (1 to 6). This is equivalent to saying that the static routes are not configured. When the destination address is 127.0.0.1, the mask and gateway must also be kept as default values.
2. By default, the value of the default route gateway address is 127.0.0.1. This means the default route is not configured.

3. Use any of the static network route entries numbered 1 to 6 to configure a static network route. Once a route destination is configured for any of the entries 1 to 6, that entry becomes a static route and it must meet all the rules listed in *Important Notes* below.
4. To configure the default route, enter a default gateway address. A default gateway address configured must be validated against Rule #5, the next rule.
5. Routes are deleted by replacing the route destination with the default address (127.0.0.1). When deleting a route, the mask and gateway must also be put back to their default values.
6. The default route is deleted by replacing the default gateway with the default value 127.0.0.1.

Note:

Host routes are not supported at present.

The route mask has IPv4 mask format. In binary this is a set of contiguous bits of 1 from left to right, followed by one or more contiguous bits of 0.

The route destination and mask must match. This can be verified by checking that $RtDestination \& RtMask == RtDestination$

This is an example of a good configuration: $RtDestination = 10.1.1.0$; $RtMask = 255.255.255.0$

This is an example of a bad configuration: $RtDestination = 10.1.1.1$; $RtMask = 255.255.255.0$

The route destination must not be a connected network.

The route gateway must be on a connected network. This rule applies to the gateway address of the default route as well.

This can be verified by checking that: $RtGwy \& P4Mask == (P4IP \& P4Mask) \vee (RtGwy \& P5Mask) == (P5IP \& P5Mask)$

TARGETS**Wrong Route Config**

Description: A route with mismatched destination and mask has been configured.

Message: Wrong route configuration.

Solution: Rectify the IP address and mask of the mis-configured route.

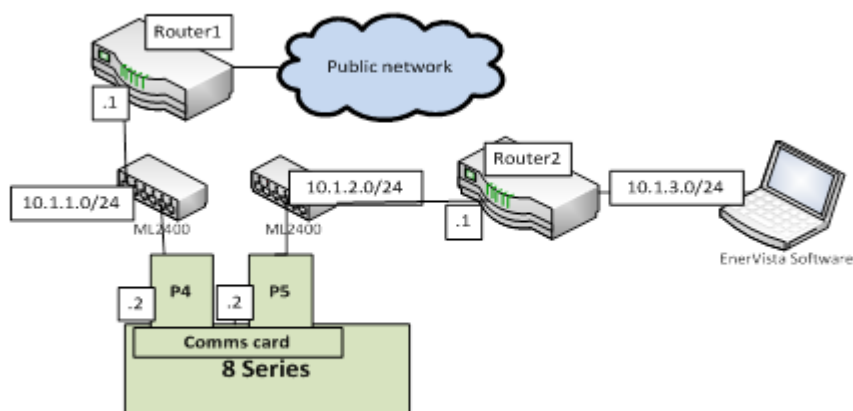
TOPOLOGY

Figure 126: Topology Example

In the topology example above, the device is connected through the two Ethernet ports available on the communications card.

Note:

Always use Shielded Twisted Pair (STP) cable when connecting to RJ45 Ethernet ports

Port 4 (IP address 10.1.1.2) connects to LAN 10.1.1.0/24 and to the Internet through Router1. Router 1 has an interface on 10.1.1.0/24 and the IP address of this interface is 10.1.1.1.

Port 5 (IP address 10.1.2.2) connects to LAN 10.1.2.0/24 and to EnerVista D&I Setup through Router 2. Router 2 has an interface on 10.1.2.0/24 and the IP address of this interface is 10.1.2.1.

Network addresses:

- PRT4 IP ADDRESS = 10.1.1.2
- PRT4 SUBNET IP MASK = 255.255.255.0
- PRT5 IP ADDRESS = 10.1.2.2
- PRT5 SUBNET IP MASK = 255.255.255.0

Routing Settings:

IPV4 DEFAULT ROUTE: GATEWAY ADDRESS = 10.1.1.1

STATIC NETWORK ROUTE 1: RT1 DESTINATION = 10.1.3.0/24 RT1 NET MASK = 255.255.255.0 RT1 GATEWAY = 10.1.2.1

Behavior:

One static network route was added to the destination 10.1.3.0/24, where a laptop running EnerVista D&I Setup is located. This static route uses a different gateway (10.1.2.1) than the default route. This gateway is the address of Router 2, which is aware of destination 10.1.3.0 and is able to route packets coming from the device and destined to EnerVista D&I Setup.

6.5.10 DNP PROTOCOL SETTINGS

Path: *Setpoints > Device > Communications > DNP protocol*

DNP CHANNEL 1(2) PORT

Range: None, Network - TCP, Network - UDP

Default: None

The **DNP Channel 1 Port** and **DNP Channel 2 Port** settings select the communications port assigned to the DNP protocol for each channel. When set to *Network - TCP*, the DNP protocol can be used over TCP/IP on channels 1 or 2. When set to *Network - UDP*, the DNP protocol can be used over UDP/IP.

DNP ADDRESS

Range: 0 to 65519 in steps of 1

Default: 65519

The DNP address sets the DNP slave address. This number identifies the device on a DNP communications link. Each DNP slave must be assigned a unique address.

DNP CLIENT ADDRESS 1(2)

Range: standard IP address

Default: 0.0.0.0

The DNP Client Address settings can force the device to respond to a maximum of two specific DNP masters.

DNP TCP/UDP PORT 1(2)

Range: 1 to 65535 in steps of 1

Default: 2000

Note:

DNP Channel 1 Port will take the **DNP TCP/UDP Port 1** and **DNP Client Address 1** to allow/reject connections. The same relation is used by channel 2.

DNP UNSOL RESP FUNCTION

Range: Enabled, Disabled

Default: Disabled

This setting will take effect for Ethernet communication only if the main card is present or a comms card is available in the device. This setting enables/disables the unsolicited response functionality. It is disabled for RS485 applications since there is no collision avoidance mechanism.

DNP UNSOL RESP TIMEOUT

Range: 0 to 60 s in steps of 1

Default: 5 s

Sets the time the relay waits for a DNP master to confirm an unsolicited response.

UNSOL RESP MAX RETRIES

Range: 1 to 255 in steps of 1

Default: 10

Sets the number of times the device retransmits an unsolicited response without receiving confirmation from the master; a value of 255 allows infinite re-tries.

UNSOL RESP AT STARTUP

Range: Enabled, Disabled

Default: Disabled

When relay is rebooting, unsolicited responses work without an Enable message needed, but this is only possible once the Master resets the communications with the relay. This happens with both Reset Link or Class 1 request messages.

DNP UNSOL RESP DEST ADDRESS

Range: 1 to 65519 in steps of 1

Default: 1

Sets the DNP address to which all unsolicited responses are sent. The IP address to which unsolicited responses are sent is determined by the device from the current TCP connection or the most recent UDP message.

DNP TIME SYNC IIN PERIOD

Range: 1 to 10080 min. in steps of 1

Default: 1440 min

This setting determines how often the Need Time Internal Indication (IIN) bit is set by the device. Changing this time allows the DNP master to send time synchronization commands more or less often, as required.

Note:

If the requirement for synchronization is more than a couple of seconds, consider synchronization via other means such as IRIG-B or 1588. Given network asymmetry, the consistency of the network latency, clock drift, and additional delays due to routers located between the client and the device all contribute error.

DNP MESSAGE FRAGMENT SIZE

Range: 30 to 2048 in steps of 1

Default: 240

This setting determines the size, in bytes, at which message fragmentation occurs. Large fragment sizes allow for more efficient throughput; smaller fragment sizes cause more application layer confirmations to be necessary which can provide for more robust data transfer over noisy communication channels.

DNP OBJECT DEFAULT VARIATION SETTINGS

These settings allow selection of the DNP default variation number for object types 1, 2, 20, 21, 22, 23, 30, and 32. The default variation refers to the variation response when variation 0 is requested and/or in class 0, 1, 2, or 3 scans. The DNP binary outputs typically map one-to-one to IED data points. That is, each DNP binary output controls a single physical or virtual control point in an IED. In the 8 Series relay, DNP binary outputs are mapped to virtual inputs. See below for details

DNP OBJECT 1(2) DEFAULT VARIATION

Range: 1, 2

Default: 2

DNP OBJECT 20(22) DEFAULT VARIATION

Range: 1, 2, 5, 6

Default: 1

DNP OBJECT 21 DEFAULT VARIATION

Range: 1, 2, 9, 10

Default: 1

DNP OBJECT 23 DEFAULT VARIATION

Range: 1, 2, 5, 6

Default: 2

DNP OBJECT 30 DEFAULT VARIATION

Range: 1, 2, 3, 4, 5

Default: 1

TCP CONNECTION TIMEOUT

Range: 10 to 300 s in steps of 1

Default: 120 s

This setting specifies a time delay for the detection of dead network TCP connections. If there is no data traffic on a DNP TCP connection for greater than the time specified by this setting, the connection will be aborted.. This frees up the connection to be re-used by a client.

6.5.11 DNP AND IEC104 POINT LISTS

The menu path for the DNP/IEC104 point lists is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists

Binary Input/MSP Points

Analog Input/MME Points

Binary Outp/CSC/CDC Pnts

Binary input points (DNP) or MSP points (IEC 60870-5-104)

You can configure the binary inputs points for the DNP protocol, or the MSP points for IEC 60870-5-104 protocol to a maximum of 96 points. The data source for each point is user-programmable and can be configured by assigning FlexLogic operands. For a complete list, see Format Code FC142.

The menu path for the binary input points (DNP) or MSP points (IEC 60870-5-104) is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists > Binary Input/MSP Points

Point 0 Entry

...

Point 255 Entry

Analog input points (DNP) or MME points (IEC 60870-5-104)

You can configure up to 255 analog input points for the DNP or IEC 60870-5-104 protocols. The menu path for the analog input point (DNP) or MME points (IEC 60870-5-104) is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists > Analog Input / MME Points

Analog IP Point 0 Entry

Point 0 Scale Factor

Point 0 Deadband

DNP ANALOG INPUT POINT 0(255) SCALE FACTOR

Range: / 0.001, / 0.01, / 0.1, / 1, / 10, / 100, / 1000, / 10000, / 100000

Default: /1

These are numbers used to scale analog input point values. Each setting represents the scale factor for the analog input point. For example, if the **DNP PHASE A VOLTAGE SCALE FACTOR** setting is set to / 1000, and the Phase A voltage is 72000 V, the Phase A voltage sent on to the relay is 72 V. The settings are useful when analog input values must be adjusted to fit within certain ranges in DNP masters.

Note:

A scale factor of / 0.1 is equivalent to a multiplier of 10.

DNP ANALOG INPUT POINT 0(255) DEADBAND

Range: 1 to 100000000 in steps of 1

Default: 30000

The setting is the threshold value to define the condition to trigger unsolicited responses containing analog input data. Each setting represents the default deadband value for the associated analog input. For example, to trigger unsolicited responses from the relay when phase A current changes by 15 A, the DNP Current Deadband for Phase A current should be set to 15. Note that these settings are the deadband default values. DNP object

34 points can be used to change deadband values from the default for each individual DNP analog input point. Whenever power is removed and re-applied, the new deadbands are in effect.

Binary output points (DNP) or CSC/CDC points (IEC 60870-5-104)

You can configure the binary output points for the DNP protocol, or the CSC/CDC points for IEC 60870-5-104 protocol to a maximum of 16 points. The data source for each point is user-programmable and can be configured by assigning FlexLogic operands. The menu path for the binary output points (DNP) or CSC/CDC points (IEC 60870-5-104) is shown below.

Path: Setpoints > Device > Communications > DNP/IEC104 Point Lists > Binary Output / CSC/CDC Points

Binary Output Point 0 ON

Binary Output Point 0 OFF

...

Binary Output Point 31 ON

Binary Output Point 31 OFF

Note:

The DNP/IEC 60870-5-104 point lists always begin with point 0 and end at the first *OFF* value. Since DNP / IEC 60870-5-104 point lists must be in one continuous block, any points assigned after the first *OFF* point are ignored.

BINARY INPUT POINTS

The DNP binary input data points are configured through the **DNP/IEC104 POINT LISTS BINARY INPUT/MSP POINTS** menu. When a freeze function is performed on a binary counter point, the frozen value is available in the corresponding frozen counter point.

- Static (Steady-State) Object Number: **1**
- Change Event Object Number: **2**
- Request Function Codes supported: **1 (read), 22 (assign class)**
- Static Variation reported when variation 0 requested: **2 (Binary Input with status), Configurable**
- Change Event Variation reported when variation 0 requested: **2 (Binary Input Change with Time), Configurable**
- Change Event Scan Rate: **8 times per power system cycle**
- Change Event Buffer Size: **1024**
- Default Class for All Points: **1**

POINT NAME/DESCRIPTION COUNTERS

The following details lists both Binary Counters (Object 20) and Frozen Counters (Object 21). When a freeze function is performed on a Binary Counter point, the frozen value is available in the corresponding Frozen Counter point. Digital Counter values are represented as 16 or 32-bit integers. The DNP 3.0 protocol defines counters to be unsigned integers. Care should be taken when interpreting negative counter values.

BINARY COUNTERS

- Static (Steady-State) Object Number: **20**
- Change Event Object Number: **22**
- Request Function Codes supported: **1 (read), 7 (freeze), 8 (freeze noack), 9 (freeze and clear), 10 (freeze and clear, noack), 22 (assign class)**
- Static Variation reported when variation 0 requested: **1 (32-Bit Binary Counter with Flag)**

- Change Event Variation reported when variation 0 requested: **1 (32-Bit Counter Change Event without time)**
- Change Event Buffer Size: **10**
- Default Class for all points: **3**

FROZEN COUNTERS

- Static (Steady-State) Object Number: **21**
- Change Event Object Number: **23**
- Request Function Codes supported: **1 (read)**
- Static Variation reported when variation 0 requested: **1 (32-Bit Frozen Counter with Flag)**
- Change Event Variation reported when variation 0 requested: **1 (32-Bit Counter Change Event without time)**
- Change Event Buffer Size: **10**
- Default Class for all points: **3**

BINARY AND FROZEN COUNTERS POINT INDEX NAME/DESCRIPTION

- 0 Digital Counter 1
- 1 Digital Counter 2
- 2 Digital Counter 3
- 3 Digital Counter 4
- 4 Digital Counter 5
- 5 Digital Counter 6
- 6 Digital Counter 7
- 7 Digital Counter 8
- 8 Digital Counter 9
- 9 Digital Counter 10
- 10 Digital Counter 11
- 11 Digital Counter 12
- 12 Digital Counter 13
- 13 Digital Counter 14
- 14 Digital Counter 15
- 15 Digital Counter 16

ANALOG INPUTS

It is important to note that 16-bit and 32-bit variations of analog inputs are transmitted through DNP as signed numbers. Even for analog input points that are not valid as negative values, the maximum positive representation is 32767 for 16-bit values and 2147483647 for 32-bit values. This is a DNP requirement. The deadbands for all Analog Input points are in the same units as the Analog Input quantity. For example, an Analog Input quantity measured in volts has a corresponding deadband in units of volts. Relay settings are available to set default deadband values according to data type. Deadbands for individual Analog Input Points can be set using DNP Object 34.

A default variation refers to the variation response when variation 0 is requested and/or in class 0, 1, 2, or 3 scans. The default variations for object types 1, 2, 20, 21, 22, 23, 30, and 32 are selected via relay settings. This optimizes the class 0 poll data size.

For static (non-change-event) objects, qualifiers 17 or 28 are only responded when a request is sent with qualifiers 17 or 28, respectively. Otherwise, static object requests sent with qualifiers 00, 01, 06, 07, or 08, are responded with qualifiers 00 or 01. For change event objects, qualifiers 17 or 28 are always responded.

Cold restarts are implemented the same as warm restarts – the relay is not restarted, but the DNP process is restarted.

6.5.12 IEC60870-5-104

The IEC 60870-5-104 communications protocol is supported on Ethernet ports 4 and 5 only. Setting changes become active after rebooting.

Note:

Both DNP and IEC104 protocol can work at the same time, but consider that there is only one point map. So, the two protocols use the same data mapping, i.e., same point index and same point source.

The relay supports up to two IEC104 client connections simultaneously.

Path: Setpoints > Device > Communications > IEC 60870-5-104

Channel 1 Port

Channel 2 Port

Common Address of ASDU

Client Address 1

Client Address 2

TCP Port Number 1

TCP Port Number 2

Cyclic Data Period

Object Info Addrs Bnry

Object Info Addrs Analog

Object Info Addrs Countrs

Object Info Addrs Cmnd

Object Info Analog Param

By default the Object Information Address for the different data is as follows:

M_SP (Single Points) = 1000

M_ME (Measured value) = 2000

M_IT (Integrated Totals) = 3000

C_SC or C_DC (Single or Double Command) = 4000

P_ME_NB (Parameter of measured value) = 5000

Each Measured value has a Parameter of measured value (P_ME_NB) associated to its threshold.

The IEC 60870-5-104 Deadbands settings are used to determine when to trigger spontaneous responses containing M_ME_NB_1 analog data. Each setting represents the threshold value for each M_ME_NB_1 analog point.

For example, to trigger spontaneous responses when a current value changes by 15 A, the **Analog Point xx Deadband** setting should be set to 15. Note that these settings are the default values of the deadbands.

P_ME_NB_1 (parameter of measured value, scaled value) points can be used to change threshold values, from the default, for each individual M_ME_NB_1 analog point. There are three ways to send the measurands to the Master station. The measurands are part of the General Group and Group 2, so when a general interrogation or group 2 interrogation takes place all the measurands are included in the response. Also, there is a cyclic data period setting where it is configured in the scan period to send the measurands to the Master. And the last way, is by sending

spontaneously when a deadband overflow takes place. The IEC104 Channels sub-menu information is shown below.

Commands are executed over the Binary Outputs. The first 8 Binary Outputs are configured to receive Select/Operate Commands and the next 8 Binary Outputs are configured to receive Direct Execute Commands.

The **IEC104 CHANNEL 1 PORT** and **IEC104 CHANNEL 2 PORT** settings select the communications port assigned to the IEC104 protocol for each channel. When this setting is set to *Network - TCP*, the IEC104 protocol can be used over TCP/IP on channels 1 or 2. The **IEC104 NETWORK CLIENT ADDRESS** settings can force the relay to respond to a maximum of two specific IEC104 masters which own the configured IP Addresses. The settings in this sub-menu are shown below.

Note:

IEC104 CHANNEL 1 PORT takes the **Port Number 1** and **Client Address 1** to allow or reject connections. The same method is used by channel 2.

GROUPS OF DATA

The data is organized into groups in order to provide values when the controlling station requests them by a general or group interrogation.

Group 1 is set by the 96 Single Points (M_SP).

Group 2 is set by the 32 Measured values (M_ME).

Group 3 is set by the 32 Measured thresholds (P_ME).

These 96 Single Points and 32 Measured Values are also sent as a response to a General Interrogation.

The Integrated Totals (M_IT) has its own Counter Group 1, and it is sent as a response to a General Request Counter.

6.5.13 IEC60870-5-103

The point map for the 103 is different from the one shared by the IEC104 and DNP protocols. IEC 60870-5-103 serial communications protocol is supported on the rear RS485 port only.

The DNP, IEC 103 and Modbus cannot be enabled simultaneously. Only one instance of DNP 3.0, IEC 103 or Modbus can run on the RS485 serial port.

Path: SETPOINTS > DEVICE > COMMUNICATIONS > IEC 60870-5-103 PROTOCOL

IEC103 Common ASDU Addr

Range: 0 to 254 in steps of 1

Default: 0

IEC103 Sync Timeout

Range: 0 to 1440 minutes in steps of 1 min

Default: 0 min

All binary inputs are configured from FlexLogic operands. For a complete list, see Format Code FC142.

Note:

Pay attention when configuring the function type and information number of the different points, because they must be unique. There is no mechanism in the EnerVista D&I Setup or the front panel HMI to detect duplication of the information index. The IEC 60870-5-103 point lists always begin with point 0 and end at the first 0xFF value. Since IEC 60870-5-103 point lists must be in one continuous block, any points assigned after the first 0xFF point are ignored.

6.5.14 IEC 103 POINT LISTS

6.5.14.1 BINARY INPUT POINTS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC 103 POINTS LISTS > BINARY INPUTS

Point [x] Func Type

Range: 0 to 255

Default: 0

Point [x] Info Num

Range: 0 to 255

Default: 0

Point [x]

Range: Off, On, No, Yes, Cl 1 on, Cl 2 on, Cl 3 on, Cl 4 on,

Default: Off

Present in Gen Interrogation

Range: No, Yes

Default: No

6.5.14.2 MEASURANDS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC 103 POINTS LISTS > IEC 103 MEASURANDS

There are five ASDUs: First ASDU, Second ASDU, Third ASDU, fourth ASDU and Fifth ASDU. Each ASDU has the following settings for up to nine instances for each ASDU each of the following settings are applicable only to the selected ASDU:

nth ASDU Ident type

Range: 3, 9

Default: 3

nth ASDU Func Type

Range: 0 to 255

Default: 0

nth ASDU Info Num

Range: 0 to 255

Default: 0

nth ASDU Scan Timeout

Range: 0 to 100 seconds

Default: 0 s

Each of the following settings are common to all instances

nth Analog Entry

Range: Off, [Protection function]

Default: off

nth Analog Factor

Range: 0.000 to 65.535

Default: 0.000

nth Analog Offset

Range: -32768 to 32767

Default: 0

6.5.14.3 COMMANDS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC 103 POINTS LISTS > COMMANDS

There are 32 instances of commands: Commands 0 to Commands 31

Command [x] Func Type

Range: 0 to 255

Default: 0

Command [x] Info Num

Range: 0 to 255

Default: 0

Command [x] ON

Range: OFF, [options]

Default: OFF

Command [x] OFF

Range: OFF, [Breaker and Switch open close options, Virtual input options]

Default: OFF

6.5.15 IEC 103 DISTURBANCE RECORDER

SETPOINTS > DEVICE > COMMUNICATIONS > IEC103 DISTURBANCE RECORDER > DIGITAL CHANNEL 1(64)

There are 64 digital channels, each with the following settings:

FUNC TYPE

Range: 0 to 255

Default: 0

INFO NUM

Range: 0 to 255

Default: 0

6.5.16 GOOSE SUBSCRIBE

6.5.16.1 REMOTE INPUTS

SETPOINTS > DEVICE > COMMUNICATIONS > GOOSE SUBSCRIBE > REMOTE INPUTS

There are 256 remote inputs, each with the following settings:

NAME

Range: Up to 13 alphanumeric characters

Default RI [x]

DEFAULT STATE

Range: Off, On, Latest/Off, Latest/On

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled

6.5.16.2 REMOTE INPUTS DPS

SETPOINTS > DEVICE > COMMUNICATIONS > GOOSE SUBSCRIBE > REMOTE INPUTS DPS

There are 16 remote inputs, each with the following settings:

NAME

Range: Up to 13 alphanumeric characters

Default RI DPS [x]

DEFAULT STATE

Range: Intermediate, Off, On, Bad State, Latest

Default: Latest

6.5.16.3 GOOSE ANALOG

Range: Up to 13 alphanumeric characters

*Default: Blank***SETPOINTS > DEVICE > COMMUNICATIONS > GOOSE SUBSCRIBE > GOOSE ANALOG**

Float settings (1 to 24)

FLOAT NAME

Range: Up to 13 alphanumeric characters

Default GOOSE Float[x]

FLOAT ID

Range: Up to 13 alphanumeric characters

Default: Blank

DEFAULT MODE

Range: Default value, Last known

Default: Default Value

DEFAULT VALUE

Range: -10000000.000 to 10000000.000

Default: 1000.000

UNITS

Range: Up to 13 alphanumeric characters

Default: Blank

PU BASE

Range: 0.001 to 10000000.000

Default: 1.000

SINT32 settings (1 to 8)

SINT32 NAME

Range: Up to 13 alphanumeric characters

Default: GOOSE Sint [x]

SINT32 ID

Range: Up to 13 alphanumeric characters

Default: Blank

DEFAULT MODE

Range: Default value, Last known

Default: Default Value

DEFAULT VALUE

Range: -10000000.000 to 10000000.000

Default: 1000

UNITS

Range: Up to 13 alphanumeric characters

Default: Blank

PU BASE

Range: 0.001 to 10000000.000

Default: 1.000

6.5.17 REMOTE MODBUS DEVICE

The Remote Modbus Device describes a device within the same network as the relay and the poll mode of operation for retrieving the data. The relay acts as a Modbus Master and initiates Modbus requests to the Modbus slave at a defined poll interval or per trigger.

Path: *Device > Communications > Remote Modbus Device > Device 1*

DEVICE NAME

Range: 13 Alphanumeric Characters

Default: BSG3

The Remote Modbus Device Name defaults to the Powell BriteSpot Thermal Monitoring device (BSG3).

DEVICE PROFILE

Range: 13 Alphanumeric Characters

Default: BSG3

The Remote Modbus Device default profile is for the Powell BriteSpot Thermal Monitoring device (BSG3). The 27 analog and 27 digital operands that are available in the device are supported and are pre-configured in the default settings file. The data defined for BSG3 are described in the *8 Series Protection Relay Platform Communications Guide*.

Other device profiles can be configured as described in the following section.

IP ADDRESS

Range: Standard IPV4 network address format

Default: 0.0.0.0

SLAVE ADDRESS

Range: 1 to 254 in steps of 1

Default: 254

MODBUS PORT

Range: 0 to 10000 in steps of 1

Default: 502

POLL RATE

Range: Off, 3 to 120 minutes in steps of 1

Default: 3 minutes

TRIGGER

Range: Any FlexLogic operand

Default: Off

6.5.17.1 REMOTE MODBUS DEVICE EDITOR

The Remote Modbus Device Editor allows customization of the generic Modbus device. Using this feature, data can be read from another device on the network. The data retrieved is mapped from Digital Points to FlexLogic operands, and from Analog Points to FlexAnalog values for use in relay logic operations.

To use the Remote Modbus Device Editor, follow these steps:

1. In the EnerVista D&I Setup, navigate to **Device > Communications > Remote Modbus Device > Device 1**.
2. To edit or replace the default BSG3 profile, click the **Profile Editor** button.
3. If required, create a new profile and add it to the profile list by clicking **New** and entering a name for the new profile when prompted.
Click **OK** to create the new profile.

- Profiles are stored in the directory C:\Users\Public\Documents\GE Power Management\8SeriesPC\RMD_Profiles for a default installation, or in a similar path corresponding to the EnerVista D&I Setup installation path.
- Profile files have the extension .8gmd, and are XML files.

4. Select an existing profile and click **Edit**.
The profile opens in the Remote Modbus Device Profile Editor window, with all configured points listed.
5. To add a Digital Point enter a name in the Label column and an address in the Modbus Address column. The remaining columns fill with default values that can be edited as needed. Use the **Delete Row** button to delete entries.

The following fields are available for each Digital Point:

- **Label**: The name for the point, to a maximum of 13 characters
- **Modbus Address (Hex)**: The Modbus Address for the point, in hexadecimal
- **Read Function**: The Modbus function to be used for reading the point (function 3 or function 4).
- **Enumeration Reference**: Selects the enumeration to apply to this point.
- **Source Mask**: The bit from the source to use as a source for the point. For example, if the Source Mask is 16, bit 4 will be used. (Bits are numbered 0 to 15.)
- **Mask**: The specific position in a 32 bit value to pack the bit read from the source. For example, if Mask is 8198, the source bit is placed in the 13th position. (Bits are numbered from 0 to 31.)

6. To manage the enumerations used by Digital Points, click the **Edit Enumeration** button. Enumerations are used to display user-friendly text for the true/false settings of each point. A maximum of 10 enumerations are permitted.

Click each field to enter (or edit) the Name of the enumeration as shown in the list of Digital Points, along with the text to display for a False Value or a True Value. Use the **Delete Row** button to delete entries. All fields have a 13 character maximum.

When done, click **OK** to save changes.

7. To add an Analog Point enter a name in the Label column and an address in the Modbus Address column. The remaining columns fill with default values that can be edited as needed. Use the **Delete Row** button to delete entries.

When checked, the **Check for unique Modbus Addresses** checkbox does not allow duplicate addresses.

The following fields are available for each Digital Point:

- **Label**: The name for the point, to a maximum of 13 characters
- **Modbus Address (Hex)**: The Modbus Address for the point, in hexadecimal
- **Read Function**: The Modbus function to be used for reading the point (function 3 or function 4).
- **Data Type**: SINT16 - Signed Integer (16-bit), UINT16 - Unsigned Integer (16-bit), SINT32 - Signed Long (32-bit), UINT32 - Unsigned Long (32-bit), FLOAT - IEEE Floating Point Number (32-bit).
- **Multiplier**: The multiplier to apply to the read data.
- **Decimals**: The number of decimal places to add to the read data. For example, a Decimal entry of 2 results in dividing the read data by 10*10=100.
- **Unit**: The units associated with this value, to a maximum of 6 characters.

8. To select a profile, navigate to **Device > Communications > Remote Modbus Device > Device 1**. Under **Device Profile**, a profile can be selected from the drop-down list.
Click **Save** to save your changes. If you are working online, a new CID file will be created and sent to the relay.

Note:

When a new CID file is uploaded, the **DEVICE IN SERVICE** state (**Setpoints > Device > Installation**) switches to *Not Ready* for the duration of the upload.

6.5.18 IEC 61850 MMS

SETPOINTS > DEVICE > COMMUNICATIONS > IEC61850 MMS

MMS PROTOCOL

Range: Disabled, Enabled

Default: Enabled

6.5.19 TFTP

SETPOINTS > DEVICE > COMMUNICATIONS > TFTP

TFTP Protocol

Range: Disabled, Enabled

Default: Enabled

6.5.20 SFTP/SSH

SETPOINTS > DEVICE > COMMUNICATIONS > SFTP/SSH

SFTP/SSH

Range: Disabled, Enabled

Default: Enabled

6.5.21 SNMP

The Simple Network Management Protocol (SNMP) is a network protocol designed to manage devices in an IP network. The SNMP system consists of an agent, a manager and the communication protocol between agent and manager. 8-series relays implement the SNMP agent functionality to provide SNMP services to the SNMP manager. The SNMP manager is the client and is not in the scope of this specification.

SNMP implementation uses UDP as the transport protocol. The SNMP agent running in the device, uses port 161 to process SNMP manager's request. For the SNMP agent to report the trap messages, SNMP manager uses port 162. SNMPv2c and SNMPv3 both use UDP and the same port. SNMPv2c provides a security mechanism via the use of a community name in plain text. An SNMP Read-Only Community String is implemented in the device, which is like a user id or password that is sent along with each SNMP Get-Request. SNMPv3 uses User-based Security Model (USM) and provides security via authentication and privacy. SNMPv3 uses HMAC-MD5-96 and HMAC-SHA-96 as the authentication protocols and uses Cipher Block Chaining Data Encryption Standard (CBC-DES) symmetric encryption protocol as the privacy protocol.

SNMP Protocol Operations	Supported by product?
GET REQUEST	YES
GET NEXT REQUEST	YES
GET RESPONSE	YES
SET REQUEST	NO
TRAP	YES
GETBULK REQUEST	YES

SNMP Protocol Operations	Supported by product?
INFORM	NO

Note:

A full list of supported SNMP services are listed in RFC3416 for SNMPv3.

Path: *Device > Communications > SNMP*

SNMP FUNCTION

Range: Disabled, Enabled

Default: Disabled

This setting enables and disables the SNMP functionality. When set to Disabled, SNMP services are disabled. When set to enabled, SNMP services are enabled and MIBs are reported to SNMP client.

SNMP VERSION

Range: V3, V2C

Default: V3

This setting specifies the SNMP version to be used.

TRAP DEST. IP1

Range: 0.0.0.0 to 223.255.255.254 in steps of 1

Default: 0.0.0.0

This is the Trap destination IP for the SNMP interface, which needs to be set to the SNMP manager IP address. Setting this cell to 0.0.0.0 disables the Trap interface.

TRAP DEST. IP2

Range: 0.0.0.0 to 223.255.255.254 in steps of 1

Default: 0.0.0.0

This is the Trap destination IP for the SNMP interface, which needs to be set to the SNMP manager IP address. Setting this cell to 0.0.0.0 disables the Trap interface.

COMMUNITY NAME

Range: 8 ACSII characters

Default: AAAAAAAA

This is the SNMP v2c community name setting, used for authentication between the SNMP manager and the relay. The community name must be the same in both the SNMP Manager and the IED.

USER NAME

Range: 16 ACSII characters

Default: ReadOnlyUserName

This setting is the SNMP v3 user name.

SECURITY LEVEL

Range: NoAuthNoPriv, AuthNoPriv, AuthPriv

Default: AuthNoPriv

This represents the SNMP v3 security level. The levels of security are defined by the SNMP standard: 0 - Without authentication and without privacy (NoAuthNoPriv) 1 - With authentication but without privacy (AuthNoPriv) 2 - With authentication and with privacy (AuthPriv) Authentication is used to check the identity of users. Privacy allows for encryption of SNMP messages.

AUTH PROTOCOL

Range: HMAC-MD5-96, HMAC-SHA-96

Default: HMAC-MD5-96

This is the SNMP v3 Authentication Protocol, which sets the hash-based message authentication code function used for the authentication of messages. MD5 - Message Digest implementation SHA - Secure Hash Algorithm implementation SHA is considered cryptographically stronger than MD5 but takes a longer time to compute. Both implementations are considered secure. The SNMP Manager and the IED must use the same Authentication Protocol.

AUTH PASSWORD

Range: 8 ACSII characters

Default: AAAAAAAA

The setting used for the SNMP v3 Authentication Password.

ENCRYPT PROTOCOL

Range: CBC-DES

Default: CBC-DES

This is the SNMP v3 encryption protocol, which is a read-only setting.

ENCRYPT PASSWORD

Range: 8 ACSII characters

Default: BBBBBBBB

This is the SNMP v3 encryption protocol, which is a read-only setting.

6.5.21.1 SNMP MIB

SNMP uses a Management Information Base (MIB), which contains information about parameters to supervise. The MIB format is a tree structure, with each node in the tree identified by a numerical Object Identifier (OID). Each OID identifies a variable that can be read using SNMP with the appropriate software. The information in the MIB is standardized. Each device in a network (workstation, server, router, bridge, etc.) maintains a MIB that reflects the status of the managed resources on that system, such as the version of the software running on the device, the IP address assigned to a port or interface, the amount of free hard drive space, or the number of open files. The MIB does not contain static data, but is instead an object-oriented, dynamic database that provides a logical collection of managed object definitions. The MIB defines the data type of each managed object and describes the object. The following table lists all the MIB points and the data sources mapping. The data source mapping may differ between products.

Address				Name	Trigger Map
1.3.6.1.4.1.13248.				OID Prefix	
	1			8 Series	
		1		System Data	
			1	Model Number	No

Address				Name	Trigger Map
			2	Serial Number	No
			3	Software Revision	No
			4	Frequency	No
		2		Date and Time	
			1	Date Time	No
			2	IRIG-B Status (not for 859)	Yes
			3	Active Sync Source	Yes
			5	SNTP Server 1	No
			6	SNTP Server 2	No
			7	SNTP Status	Yes
			8	PTP Status	Yes
		3		System Alarms	
			1	Settings File Rejected	Yes
			2	Major Error	Yes
			3	Minor Error	Yes
			4	Port 4 Fails	Yes
			5	Port 5 Fails	Yes
			6	SNTP Failure	Yes
			7	PTP Failure	Yes
			8	IRIG-B Failure (not for 859)	Yes
			9	Device Out Of Service	Yes
		4		Device Mode	
			1	IED Mod/Beh	Yes
			2	Simulation Mode of Subscription	Yes

SNMPv3 SNMP-USER-BASED-SM-MIB

When the SNMP version is set to **V3**, SNMP client can access **MIB SNMP-USER-BASED-SM-MIB** as defined in RFC3414. When the version is set to **V2C**, this MIB is not accessible. SNMPv3 must implement this MIB to satisfy USM conformance statement if SNMPv3 adopts USM as its security model. The following table shows the SNMP user-based security model MIB.

Address				Name	Trigger Map
1.3.6.1.6.3.15				snmpUsmMIB	
	1			usmMIBObjects	
		1		usmStats	
			1	usmStatsUnsupportedSecLevels	No
			2	usmStatsNotInTimeWindows	No
			3	usmStatsUnknownUserNames	No

Address					Name	Trigger Map
			4		usmStatsUnknownEngineIDs	No
			5		usmStatsWrongDigests	No
			6		usmStatsDecryptionErrors	No
	2				usmUser	
			1		usmUserSpinLock	No
			2		usmUserTable	
				1	usmUserEntry	
				1	usmUserEngineID	No
				2	usmUserName	No
				3	usmUserSecurityName	No
				4	usmUserCloneFrom	No
				5	usmUserAuthProtocol	No
				6	usmUserAuthKeyChange	No
				7	usmUserOwnAuthKeyChange	No
				8	usmUserPrivProtocol	No
				9	usmUserPrivKeyChange	No
				10	usmUserOwnPrivKeyChange	No
				11	usmUserPublic	No
				12	usmUserStorageType	No
				13	usmUserStatus	No

The below table shows the SNMP MIB for PRP:

Address											Name
0											ITU
	1										ISO
		0									Standard
			62439								IECHighavailability
				3							PRP
					1						linkRedundancyEntityObjects
						0					IreConfiguration
							0				IreConfigurationGeneralGroup
								1			IreManufacturerName
								2			IreInterfaceCount
							1				IreConfigurationInterfaceGroup
								0			IreConfigurationInterfaces
									1		IreInterfaceConfigTable
										1	IreInterfaceConfigEntry

Address											Name
										1	IreInterfaceConfigIndex
										2	IreRowStatus
										3	IreNodeType
										4	IreNodeName
										5	IreVersionName
										6	IreMacAddressA
										7	IreMacAddressB
										8	IreAdapterAdminStateA
										9	IreAdapterAdminStateB
										10	IreLinkStatusA
										11	IreLinkStatusB
										12	IreDuplicateDiscard
										13	IreTransparentReception
										14	IreHsrLREMode
										15	IreSwitchingEndNode
										16	IreRedBoxIdentity
										17	IreSanA
										18	IreSanB
										19	IreEvaluateSupervision
										20	IreNodesTableClear
										21	IreProxyNodeTableClear
					1						IreStatistics
						1					IreStatisticsInterfaceGroup
							0				IreStatisticsInterfaces
								1			IreInterfaceStatsTable
										1	IreInterfaceStatsIndex
										2	IreCntTotalSentA
										3	IreCntTotalSentB
										4	IreCntErrWrongLANA
										5	IreCntErrWrongLANB
										6	IreCntReceivedA
										7	IreCntReceivedB
										8	IreCntErrorsA
										9	IreCntErrorsB
										10	IreCntNodes
										11	IreOwnRxCntA

Address											Name
										12	IreOwnRxCntB
									3		IreProxyNodeTable
										1	IreProxyNodeEntry
										1	reProxyNodeIndex
										2	reProxyNodeMacAddress

6.5.22 OPC-UA

Path: **Setpoints > Device > Communications > OPC-UA**

FUNCTION

Range: *Disabled, Enabled*

Default: *Disabled*

OPC UA setting is available on all Ethernet port of 8 Series with advanced communication order code, it is not available for the order code of SE.

6.5.23 ETHRNETIP

Path: **Setpoints > Device > Communications > EthernetIP**

PORT

Range: *Disabled, Network Port 1, Network Port 2, Network Port 4, Network Port 5*

Default: *Disabled*

8 Series relays support only one port for Ethernet/IP.

6.5.24 IEC 61850

The optional communications processor supports both the IEC 61850 GOOSE and IEC 61850 MMS Server service as per IEC 61850 standard Ed. 2. The GOOSE messaging service provides the ability for the relay to Publish/Subscribe Digital Input and other element statuses and its Quality and Timestamp to/from other IEDs with supporting GOOSE messaging service. Server support allows remote control center, RTU/Gateway, local HMI or other client role devices access to the relay for monitoring and control. The configuration of IEC 61850 services is accomplished using the EnerVista D&I Setup.

The IEC 61850 Server (i.e. the relay) reports information to the IEC 61850 Client, such as the Local HMI, RTU and Gateway. This information consists of logical device data, data sets, data control block, logical nodes and their data attributes.

Appendix B lists the implementation details of IEC 61850, including the logical nodes and number of instances for each that are supported..

Data Obj	data attribute	Type	FC	Name	Description
PhyHealth		ENS			This physical device's health
	stVal	ENUMERATED	ST		3 when ANY MAJOR ERROR ==On; 2 when ANY MINOR ERROR==On; 1 otherwise

6.5.24.1 IEC61850 CONFIGURATOR

The relay supports the IEC 61850 protocol, which is an order code option.


The IEC 61850 configurator is found in both the online and offline section of the EnerVista D&I Setup for configuring the online and offline settings file respectively.

ONLINE SETTINGS FILE

Two options are available to configure the relay's online settings file.

1. Configuration

- Configure the device through the Device Setup or Quick connect screen.
- The IEC 61850 Configurator item is displayed after Maintenance.

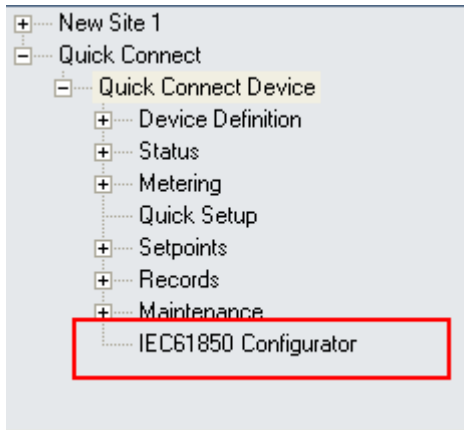


- Launch the online IEC 61850 configurator screen, by double-clicking on **IEC61850 Configurator**.
- Select the required settings from the different tab displays (in the configurator screen) to complete the IEC 61850 configuration.

2. Online right-click option

- Select any online relay and right click on the selected item. More options become available for selection, as described below.

ADDITIONAL OPTIONS

Generate ICD file: The menu option generates a default ICD file with the respective order code option and saves the file to the path selected previously.

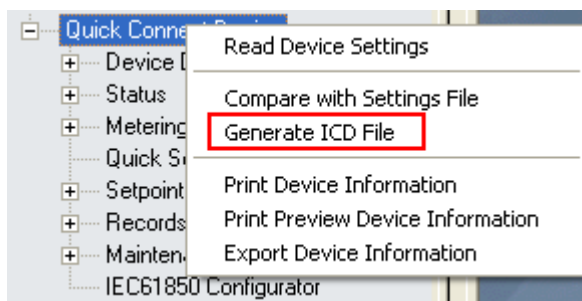


Read Device Settings: The menu option reads all the settings from the relay by TFTP and creates a file with extension *.CID. The created *.CID file consists of two sections. A private section where all non IEC 61850 settings are available, and a public section in which IEC 61850 related settings are implemented.

When creating a CID file using a 3rd party ICT/SCL tool, ensure the following:

- The order code in the CID file must match the device order code if writing the CID file directly into the relay. The **Desc** value in communication settings of the CID file must match the relay's order code.
- The maximum allowed services must be equal or below the specified limits as in ICD/CID.
- Configure Datasets only in LLN0 logical node.
- Creating new LD, LN, and communication-AP settings is not recommended.

OFFLINE SETTINGS FILE

The **Generate ICD File** menu option generates a default ICD file with the respective order code option and saves the file to the path selected previously.

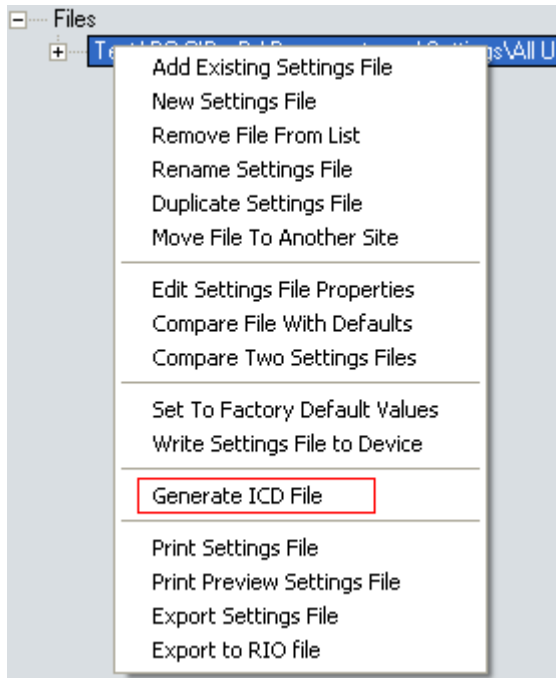

IEC 61850 CONFIGURATOR DETAILS

The IEC61850 Configurator allows editing of all sections of the IEC 61850 CID and ICD file. No other operations can be performed in the EnerVista D&I Setup if the IEC61850 Configurator is open. Close the IEC 61850 session to perform other operations.


Note:

When the IEC 61850 configuration is saved while online, the **DEVICE IN SERVICE** state (**Setpoints > Device > Installation**) switches to *Not Ready* for the duration of the upload. This ensures that all new settings are applied before the device is operational.

The IEC61850 Configurator for firmware V4.1 and later consists of these items in the hierarchy menu.

- Access Point Addressing
- Settings
- DataSets
- Reports
- GOOSE

:

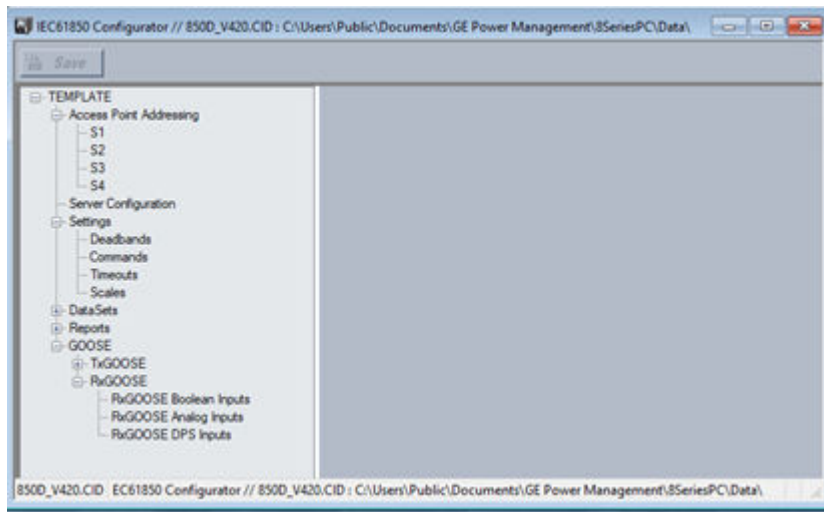

6.6 TRANSIENT RECORDER

The Transient Recorder contains waveforms captured at the same sampling rate as the other relay data at the point of trigger. By default, data is captured for all AC current and voltage inputs available on the relay as ordered. Transient record is generated upon change of state of at least one of the assigned triggers: **Trigger Source**, **Trigger on Any Pickup**, **Trigger on Any Operate**, **Trigger on Alarm**, or **Trigger on Trip**.

The number of cycles captured in a single transient record varies based on the number of records, sample rate, and the number of selected channels. There is a fixed amount of data storage for the Transient Recorder: the more data captured, the less the number of cycles captured per record.

Path: *Setpoints > Device > Transient Recorder*

NUMBER OF RECORDS

Range: 1 to 16 in steps of 1

Default: 5

The selection from the range defines the desired number of records.

SAMPLES PER CYCLE

Range: 8/c, 16/c, 32/c, 64/c, 128/c

Default: 32/c

This setpoint provides a selection of samples-per-cycle for representing the waveform. The waveform records can be viewed using the EnerVista D&I Setup software.

TRIGGER MODE

Range: Overwrite, Protected

Default: Overwrite

When *Overwrite* setting is selected, the new records overwrite the old ones, meaning the relay will always keep the newest records as per the selected number of records. In *Protected* mode, the relay will keep the number of records corresponding to the selected number of records, without saving further records that are beyond the selected number of records.

TRIGGER POSITION

Range: 0 to 100% in steps of 1%

Default: 20%

This setting indicates the location of the trigger with respect to the selected length of record. For example at 20% selected trigger position, the length of each record will be split on 20% pre-trigger data, and 80% post-trigger data.

TRIGGER SOURCE:

Range: Off, Any FlexLogic operand

Default: Off

The trigger source can be any digital input: an operand from the list of FlexLogic operands, a contact input, a contact output, a virtual input or output, or a remote input or output.

TRIGGER ON ANY PICKUP

Range: On, Off

Default: Off

Selection of *On* enables triggering of the recorder upon pickup condition detected by any of the protection or control elements.

TRIGGER ON ANY OPERATE

Range: On, Off

Default: Off

Selection of *On* enables triggering of the recorder upon operate state of any of the enabled protection or control elements.

TRIGGER ON TRIP

Range: On, Off

Default: Off

Selecting the *On* setting enables triggering of the recorder when any of the protection elements configured as a *Trip* function operates, or the state of the operand assigned to operate the #1 Trip output relay changes to High.

TRIGGER ON ALARM

Range: On, Off

Default: Off

Selecting *On* setting enables triggering of the recorder when any of the protection elements configured as *Alarm*, or *Latched Alarm* function operates, or the state of the operand assigned to trigger the Alarm LED changes to High.

DIGITAL INPUT 1 to 64

Range: Off, Any FlexLogic operand

Default: Off

ANALOG INPUT 1 to 16

Range: Off, Any FlexLogic analog parameter

Default: Off

Note:

A consecutive transient record cannot be triggered until the first record has been completed.

6.7 DATA LOGGER

The data logger samples and records up to 16 analog parameters at a configured rate. All data is stored in non-volatile memory, where the information is retained upon a relay control power loss.

The data logger can be configured with a few channels over a long period of time, or with larger number of channels for a shorter period of time. The relay automatically partitions the available memory between the channels in use.

The selection of the rate for logging data also affects the duration of recorded data. The data logger has longer duration for sampling rates at longer periods of time (i.e. 1 minute, 30 minutes, 1 hour), as compared to sampling rates at short periods (i.e. per cycle, or per second).

The recorded data can be downloaded to EnerVista D&I Setup and displayed with parameters on the vertical axis and time on the horizontal axis.

Note:

If data is not available for the entire duration of pre-trigger, the trigger position will be based on available pre-trigger.

Path: *Setpoints > Device > Data Logger*

FUNCTION

Range: Disabled, Continuous, Triggered

Default: Continuous

This setting configures the mode in which the data logger operates. When set to *Continuous*, the data logger actively records any configured channels at the rate defined in the Data Logger Rate setting. The data logger is idle in this mode if no channels are configured. When set to *Triggered*, the data logger begins to record any configured channels at the instance of the rising edge of the trigger (FlexLogic operand). The data logger ignores all subsequent triggers and continues to record data until the active record is full. Once the data logger is full, capturing of data stops until it is cleared.

Clear Data Logger

Once the data logger is full, a Clear Data Logger command is required to clear the data logger record, before a new record can be started. Performing the Clear Data Logger command also stops the current record and resets the data logger to be ready for the next trigger. The Clear Data Logger command is located at **Setpoints > Records > Clear Records**. The Data Logger Storage Capacity table below shows an example of the dependency of the data logger storage capacity with respect to the selected number of channels, and the selected rate (time interval) at which the logged values are taken. The Data Logger buffer space can be monitored to produce an alarm when the logged data occupies 80% of the data logger storage space. Target message, and operand Data Logger ALRM is generated at this time.

TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setting selects the signal used to trigger the start of a new data logger record. Any FlexLogic operand can be used as a trigger source. The Triggered setting only applies when the Data Logger Function is set to "Triggered".

TRIGGER POSITION

Range: 0 to 50% steps of 1%

Default: 20%

This setpoint defines the percentage of buffer space that is used for recording pre-trigger samples.

DATA LOG FULL ALARM (4.10 onwards)

Range: Disabled, Enabled

Default: Enabled

This setpoint disables/enables the *Data Logger Full* event and target message.

RATE

Range: 1 cycle, 1 second, 30 seconds, 1 minute, 15 minutes, 30 minutes, 1 hour, 6 hours, 8 hours, 12 hours, 24 hours

Default: 1 minute

This setting selects the time interval at which the actual value is recorded.

CHANNEL 1(16) SOURCE

Range: Off, Any FlexAnalog parameter

Default: Off

This setpoint selects the metering analog value that is to be recorded in Channel 1(16) of the data log. The parameters available in a given relay are dependent on: the type of relay, the type and number of CT/VT hardware installed, and the type and number of Analog Inputs hardware installed. Upon startup, the relay automatically prepares the parameter list.

CHANNEL 1(16) MODE

Default: Sample

Range: Sample, Min, Max, Mean

This setpoint defines the type of sample to be logged in the data logger record with respect to the selected rate, i.e the time interval selected under the setpoint **Rate**.

While enabled the Data Logger executes every protection pass and each of the four modes —*Sample*, *Max*, *Min* or *Mean*. The FlexAnalog values are updated at protection pass rate:

In *Sample* mode the data logger records the FlexAnalog value updated in the first protection pass from the time interval selected under setpoint **Rate**.

In *Max* mode the data logger records the maximum protection pass value of the selected FlexAnalog parameter from all protection pass values from the time interval selected under setpoint **Rate**.

In *Min* mode the data logger records the minimum protection pass value of the selected FlexAnalog parameter from all protection pass values from the time interval selected under setpoint **Rate**.

In *Mean* mode, the data logger records the average value among all the values at protection pass rate, from the time interval selected under setpoint **Rate**.

The mean (average) is calculated simply using the well known ratio between the sum of all the values and their number over the time interval.

Sampling Rate [sec]		Number of Channels	Time-Window covered			
			[sec]	[min]	[hour]	[day]
1 cycle	50Hz	1	1310.7	21.8	0.4	0.0
		8	546.1	9.1	0.2	0.0
		16	327.7	5.5	0.1	0.0
	60Hz	1	1092.3	18.2	0.3	0.0
		8	455.1	7.6	0.1	0.0
		16	273.1	4.6	0.1	0.0
1		1	65536.0	1092.3	18.2	0.8
		8	27306.0	455.1	7.6	0.3
		16	16384.0	273.1	4.6	0.2
30		1	1966080.0	32768.0	546.1	22.8
		8	819180.0	13653.0	227.6	9.5
		16	491520.0	8192.0	136.5	5.7
60		1	3932160.0	65536.0	1092.3	45.5
		8	1638360.0	27306.0	455.1	19.0
		16	983040.0	16384.0	273.1	11.4
900		1	58982400.0	983040.0	16384.0	682.7
		8	24575400.0	409590.0	6826.5	284.4
		16	14745600.0	245760.0	4096.0	170.7
1800		1	117964800.0	1966080.0	32768.0	1365.3
		8	49150800.0	819180.0	13653.0	568.9
		16	29491200.0	491520.0	8192.0	341.3
3600		1	235929600.0	3932160.0	65536.0	2730.7
		8	98301600.0	1638360.0	27306.0	1137.8
		16	58982400.0	983040.0	16384.0	682.7

Figure 127: Data Logger Storage Capacity

6.8 FAULT REPORTS

The relay supports up to 15 fault reports. The trigger conditions and the analog quantities to be stored are entered in this menu.

When enabled, this function monitors the pre-fault trigger. The pre-fault data are stored in the memory for prospective creation of the fault report on the rising edge of the pre-fault trigger. The element waits for the fault trigger as long as the pre-fault trigger is asserted, but not shorter than 1 second. When the fault trigger occurs, the fault data is stored and the complete report is created. If the fault trigger does not occur within 1 second after the pre-fault trigger drops out, the element resets and no record is created.

The user-programmable fault report contains a header with the following information:

- Relay model
- Device name
- Firmware revision
- Date and time of trigger
- Name of pre-fault trigger (FlexLogic operand)
- Name of Fault trigger (FlexLogic operand)
- Active setting group at the time of pre-fault trigger
- Active setting group at the time of fault trigger.

The fault report continues with the following information:

- All current and voltage phasors (one cycle after the fault trigger)
- Pre-fault values for all programmed analog channels (one cycle before pre-fault trigger)
- Fault values of all programmed analog channels (one cycle after the fault trigger)

Each Fault Report created can be saved as a text file using the Enervista software. The file names are numbered sequentially to show which file is older than the other.

The trigger can be any FlexLogic operand, but in most applications it is expected to be the same operand, usually a virtual output, that is used to drive an output relay to trip a breaker. A **Fault Rpt Trig** event is automatically created when the report is triggered.

If a number of protection elements, such as overcurrent elements, are ORed to create a fault report trigger, the first operation of any element causing the OR gate output to become high triggers the fault report. However, If other elements operate during the fault and the first operated element has not been reset (the OR gate output is still high), the fault report is not triggered again. Considering the reset time of protection elements, there is very little chance that fault report can be triggered twice in this manner. As the fault report must capture a usable amount of pre and post-fault data, it cannot be triggered faster than every 20 ms.

The fault report stores data, in non-volatile memory, pertinent to an event when triggered. Each fault report is stored as a file to a maximum capacity of fifteen files. A sixteenth trigger overwrites the oldest file.

The Enervista software is required to view all captured data. The relay faceplate display can be used to view the date and time of trigger, the fault type and the distance location of the fault.

Path: Setpoints > Device > Fault Report

FUNCTION

Range: Disabled, Enabled

Default: Disabled

PRE-FAULT TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setpoint specifies the FlexLogic operand to capture the pre-fault data. The rising edge of this operand stores one cycle-old data for subsequent reporting. The element waits for the fault trigger to actually create a record as long as the operand selected as Pre-Fault Trigger is On. If the operand remains Off for 1 second, the element resets and no record is created.

FAULT TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setpoint specifies the FlexLogic operand to capture the fault data. The rising edge of this operand stores the data as fault data and results in a new report. The trigger (not the pre-fault trigger) controls the date and time of the report. The distance to fault calculations are initiated by this signal.

ANALOG CHANNELS 1 to 32

These settings specify an actual value such as voltage or current magnitude, true RMS, phase angle, frequency, temperature, etc., to be stored should the report be created. Up to 32 analog channels can be configured.

6.9 EVENT DATA

The Event Data feature stores 64 FlexAnalog quantities each time an event occurs. The relay is able to capture a maximum of 1024 records. The Event Data behavior matches that of the Event Recorder. This is a Platform feature and a Basic option so it has no dependencies.

There is no enabling or disabling of the feature. It is always on.

When changes are made to the Event Data settings, the Event data is cleared and the Snapshot.txt file is deleted. The Event Record remains as is and is not cleared.

Path: *Setpoints > Device > Event Data*

PARAMETER 1 to 64

Range: Off, any FlexAnalog Parameter

Default: Off

6.10 FLEX STATES

The Flex State feature provides a mechanism where any of 256 selected FlexLogic operand states or any inputs can be used for efficient monitoring.

The feature allows user-customized access to the FlexLogic operand states in the relay. The state bits are packed so that 16 states may be read out in a single Modbus register. The state bits can be configured so that all of the states which are of interest are available in a minimum number of Modbus registers.

Path: *Setpoints > Device > Flex States*

PARAMETER 1 (to 256)

Range: Off, Any FlexLogic operand

Default: Off

6.11 FRONT PANEL

The relay provides an easy to use faceplate for menu navigation through five navigation pushbuttons and high quality graphical display. Conveniently located on the panel is a group of seven pushbuttons for **Up/Down** value selection, **Enter**, **Home**, **Escape**, **Help**, and **Reset** functions. The faceplate includes three programmable function pushbuttons with LEDs.

The ten pushbutton membrane faceplate (available for 850 only for hardware versions A and B, and all models for hardware version C) includes ten programmable function pushbuttons and twelve programmable LEDs.

Note:

The USB port on the Front Panel is intended for connection to a portable PC.

6.11.1 PROGRAMMABLE LEDs

Path: *Setpoints > Device > Front panel > Programmable LEDs*

LED “IN SERVICE”

Range: Off, Any FlexLogic operand

Default: In-Service

This setpoint requires assigning of FlexLogic operand to turn on the LED “In Service” This LED indicates that control power is applied, all monitored inputs, outputs, and internal systems are OK, and that the device has been programmed.

LED “TRIP”

Range: Off, Any FlexLogic operand

Default: Any Trip

The setpoint requires a FlexLogic operand to be assigned in order to turn on the **TRIP** LED, when triggered. This indicator always latches, and a reset command must be initiated to allow the latch to be reset.

The LED can be also triggered by the operation of a protection, control, or monitoring element with its function selected as *Trip*.

LED “ALARM”

Range: Off, Any FlexLogic operand

Default: Any Alarm

The setpoint requires a FlexLogic operand to be assigned in order to turn on the **ALARM** LED, when triggered. The indicator is a self-reset indicator, unless it is initiated from a protection, control, or monitoring element whose function is selected as *Latched Alarm*. Resetting the Latched Alarm LED is performed by initiating a Reset command.

LED “PICKUP”

Range: Off, Any FlexLogic operand

Default: Any Pickup

The setpoint requires a FlexLogic operand to be assigned in order to turn on the **PICKUP** LED, when triggered. The indicator is a self-rest indicator and will turn off if the condition evolves into a fault or the measured parameter drops below the pickup level.

LED x NAME

Range: Up to 13 alphanumeric characters

Default: LED 5

The setpoint is used to select the LED name by choosing up to 13 alphanumeric characters.

LED x COLOR

Range: Off, Red, Green, Orange

Default: Orange

The setpoint selects the color of the LED. Three colors are available for selection: *Red*, *Green*, and *Orange*.

Note:

This setting is not available for LEDs 18 to 24.

LED x TRIGGER

Range: Off, Any FlexLogic operands

Default: Testing On

This setpoint requires the assigning of a FlexLogic operand to trigger the selected LED upon operation.

LED x TYPE

Range: Self-reset, Latched

Default: Testing On

The setpoint defines the type of LED indication as either *Self-Reset* (the LED resets after the FlexLogic operand drops out), or *Latched* (the LED stays latched upon dropping out of the FlexLogic operand).

6.11.1.1 LED ALLOCATION TABLES**Default LED setpoints for 3 Pushbutton Front Panels**

	Name	Color	Trigger	Type
LED1	In Service	Green	In-Service	Self-Reset
LED2	Trip	Red	Any Trip	Latched
LED3	Alarm	Orange	Any Alarm	Self-Reset
LED4	Pickup	Green	Any Pickup	Self-Reset
LED5	TEST MODE	Orange	Testing ON	Self-Reset
LED6	MESSAGE	Orange	Active Target	Self-Reset
LED7	LOCAL MODE	Orange	Local Mode ON	Self-Reset
LED8	W1 BKR OPEN	Green	BKR1 Opened (BKR1)	Self-Reset
LED9	W2 BKR OPEN	Green	BKR2 Opened (BKR2)	Self-Reset
LED10 845 for 3 Winding XFMR	W3 BKR OPEN	Green	BKR2 Opened (BKR2)	Self-Reset
LED10	LED 10	Orange	Off	Self-Reset
LED11	DIFFERENTIAL BLOCKED	Red	Pcnt Diff Blocked	Self-Reset
LED12	XFMR OVERLOAD	Orange	Overload OP	Self-Reset
LED12	LOAD-LIMIT REDUCED	Orange	Load Limit Reduced	Self-Reset

	Name	Color	Trigger	Type
LED14	XFMR DE-ENERGIZED	Orange	Xfmr De-Energized	Self-Reset

Default LED setpoints for 10 Pushbutton Membrane Front Panel

	Name	Color	Trigger	Type
LED1	In Service	Green	In-Service	Self-Reset
LED2	Trip	Red	Any Trip	Latched
LED3	Alarm	Orange	Any Alarm	Self-Reset
LED4	Pickup	Green	Any Pickup	Self-Reset
LED5	TEST MODE	Orange	Testing ON	Self-Reset
LED6	MESSAGE	Orange	Active Target	Self-Reset
LED7	PHASE A FAULT	Orange	Ph TOC 1 OP A	Self-Reset
LED8	PHASE B FAULT	Green	Ph TOC 1 OP B	Self-Reset
LED9	PHASE C FAULT	Red	Ph TOC 1 OP C	Self-Reset
LED10	GROUND FAULT	Green	GND TOC 1 OP	Self-Reset
LED11	50P INST OC	Green	Ph IOC 1 OP	Self-Reset
LED12 850 with AR Function	AR Lockout	Orange	AR1 LOCKOUT	Self-Reset
LED12 850 without AR Function	27 Phase UV	Orange	AR1 LOCKOUT	Self-Reset
LED 13	Not available	Not available	Not available	Not available
LED 14	Not available	Not available	Not available	Not available
LED15	PB 1	Orange	PB 1 On (Open)	Self-Reset
LED16	PB 2	Orange	PB 2 On (Close)	Self-Reset
LED17	PB 3	Orange	PB 3 On (Reclose Enbld)	Self-Reset
LED18	PB 4	Orange	PB 4 On (GndTrip Enbld)	Self-Reset
LED19	PB 5	Orange	PB 5 On (Remote Enbld)	Self-Reset
LED20	PB 6	Orange	PB 6 On (Hot Line Tag)	Self-Reset
LED21	PB 7	Orange	PB 7 On (Demand Reset)	Self-Reset
LED22	PB 8	Orange	PB 8 On (Alt Settings)	Self-Reset
LED23	PB 9	Orange	PB 9 On (Trig Osc)	Self-Reset
LED24	PB 10	Orange	PB 10 On (PB Block)	Self-Reset

6.11.2 PROGRAMMABLE PUSHBUTTONS

Note:

The 10 pushbutton panel is available only for the 850 for hardware versions A and B, and for all models from hardware version C.

The user-programmable pushbuttons provide an easy and error-free method of entering digital state (on, off) information. Depending on the faceplate three to ten pushbuttons are available for programming.

The digital state of the pushbuttons can be entered only locally (by directly pressing the front panel pushbutton). Typical applications include breaker control, autorecloser blocking and settings groups changes. The user-programmable pushbuttons are under the control level of password protection.

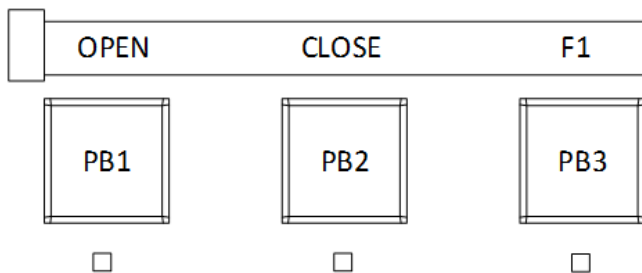


Figure 128: 3 Pushbutton Front Panel

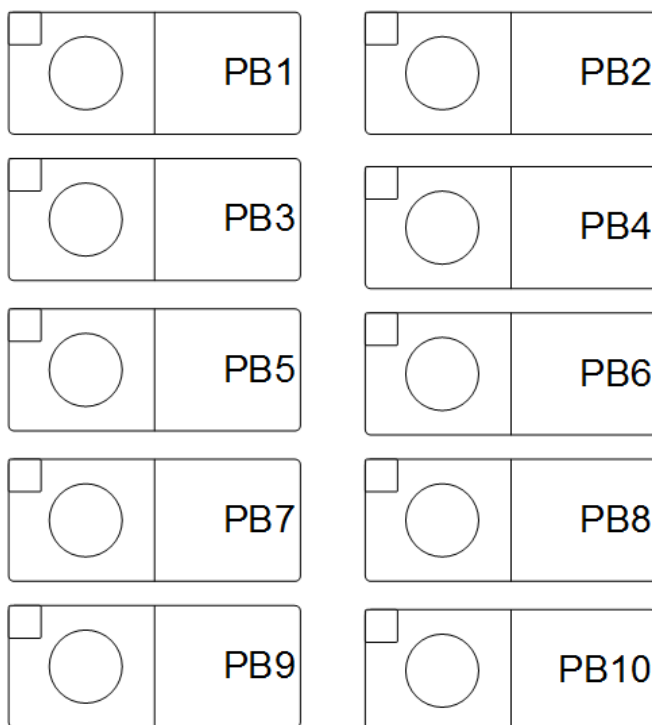


Figure 129: 10 Pushbutton Front Panel

Each pushbutton asserts its own on and off FlexLogic operands (for example, PUSHBUTTON 1 ON and PUSHBUTTON 1 OFF). These operands are available for each pushbutton and are used to program specific actions. Each pushbutton has an associated LED indicator. By default, this indicator displays the present status of the corresponding pushbutton; ON or OFF. This can be changed by programming the **LED Trigger** setting in the Programmable LED settings menu.

The activation and deactivation of user-programmable pushbuttons is dependent on whether latched or self-reset mode is programmed.

LATCHED MODE

In Latched Mode, a pushbutton can be set (activated) by directly pressing the associated front panel pushbutton. The pushbutton maintains the set state until deactivated by a **Reset** command or after a user-specified time delay. The state of each pushbutton is stored in non-volatile memory and maintained through loss of control power.

The pushbutton is Reset (deactivated) in Latched Mode by directly pressing the associated active front panel pushbutton. It can also be programmed to Reset automatically through the **PB 1 AUTORESET** and **PB 1 AUTORESET DELAY** settings. These settings enable the auto-reset timer and specify the associated time delay. The auto-reset timer can be used in select-before-operate (SBO) switching device control applications, where the command type (CLOSE/OPEN) must be selected prior to command execution. The selection must Reset automatically if control is not executed within a specified time period.

SELF-RESET MODE

In Self-reset mode, a pushbutton remains active for the time it is pressed (the pulse duration) plus the Dropout time specified in the **PUSHBTN 1 DROPOUT TIME** setting. The pushbutton is Reset (deactivated) in Self-reset mode when the dropout delay specified in the **PUSHBTN 1 DROPOUT TIME** setting expires. The pulse duration of the pushbutton must be at least 50 ms to operate the pushbutton. This allows the user-programmable pushbuttons to properly operate during power cycling events and various system disturbances that may cause transient assertion of the operating signals.

The operation of each user-programmable pushbutton can be inhibited through the **PUSHBTN 1 LOCK** setting. If locking is applied, the pushbutton ignores the commands executed through the front panel pushbuttons. The locking functions are not applied to the auto-reset feature. In this case, the inhibit function can be used in SBO control operations to prevent the pushbutton function from being activated and ensuring “one-at-a-time” select operation.

The locking functions can also be used to prevent accidental pressing of the front panel pushbuttons.

Pushbutton states can be logged by the Event Recorder and displayed as Target Messages. In latched mode, user-defined messages can also be associated with each pushbutton and displayed when the pushbutton is ON or changing to OFF.

Path: *Setpoints > Device > Programmable PBs > Pushbutton 1(X)*

FUNCTION

Range: Self-reset, Latched, Disabled

Default: Self-reset

This setting selects the characteristic of the pushbutton. If set to *Disabled* the pushbutton is not active and the corresponding FlexLogic operands (both ON and OFF) are de-asserted. If set to **Self-reset** the control logic is activated by the pulse (longer than 100 ms) issued when the pushbutton is being physically pressed.

When in *Self-reset* mode and activated locally, the pushbutton control logic asserts the ON corresponding FlexLogic operand as long as the pushbutton is being physically pressed, and after being released the deactivation of the operand is delayed by the **PUSHBTN 1 DROPOUT TIME** setting. The OFF operand is asserted when the pushbutton element is deactivated.

If set to *Latched*, the control logic alternates the state of the corresponding FlexLogic operand between ON and OFF on each button press or by virtually activating the pushbutton (assigning Set and Reset operands). When in *Latched* mode, the states of the FlexLogic operands are stored in a non-volatile memory. Should the power supply be lost, the correct state of the pushbutton is retained upon subsequent power-up of the relay.

ID TEXT

Range: Up to 13 alphanumeric characters

Default: Open (PB1), Close (PB2), F1 (PB3), Gnd Trip Enabled (PB4), SCADA Enabled (PB5), Hot Line Tag (PB6), Demand Reset (PB7), Alt Settings (PB8), Target Reset (PB9), PB Block (PB10)

Default: Start (PB1), Stop (PB2), F1 (PB3), Gnd Trip Enabled (PB4), SCADA Enabled (PB5), Hot Line Tag (PB6), Demand Reset (PB7), Alt Settings (PB8), Target Reset (PB9), PB Block (PB10)

This setting specifies the 13-character line of the user-programmable message and is intended to provide the ID information of the pushbutton.

ON TEXT

Range: Up to 13 alphanumeric characters

Default: PB1 On (or PB[X] On)

This setting specifies the 13-character line of the user-programmable message and is displayed when the pushbutton is in the ON position.

OFF TEXT

Range: Up to 13 alphanumeric characters

Default: PB1 Off (or PB[X] On)

This setting specifies the 13-character line of the user-programmable message and is displayed when the pushbutton is activated from the ON to the OFF position and the **PUSHBUTTON 1 FUNCTION** is *Latched*. This message is not displayed when the **PUSHBUTTON 1 FUNCTION** is *Self-reset* as the pushbutton operand status is implied to be “OFF” upon its release. The length of the “OFF” message is configured with the **PRODUCT SETUP/DISPLAY PROPERTIES/FLASH MESSAGE TIME** setting.

The message programmed in the **PUSHBTN 1 ID** and **PUSHBTN 1 ON TEXT** settings will be displayed as long as Pushbutton 1 On operand is asserted, but not longer than the time period specified by the **FLASH MESSAGE TIME** setting. After the flash time has expired, the default message or other active target message is displayed. The instantaneous Reset of the flash message will be executed if any relay front panel button is pressed or if any new target or message becomes active.

The **PUSHBTN 1 OFF TEXT** setting is linked to Pushbutton 1 Off operand and will be displayed in conjunction with **PUSHBTN 1 ID** only if the pushbutton element is in *Latched* mode.

HOLD PRESSED

Range: 0.0 to 10.0 s in steps of 0.1 s

Default: 0.1 s

This setting specifies the time required for a pushbutton to be pressed before it is deemed active.

The timer is Reset upon release of the pushbutton. Note that any pushbutton operation will require the pushbutton to be pressed a minimum of 60 ms. This minimum time is required prior to activating the pushbutton hold timer.

AUTORESET

Range: Disabled, Enabled

Default: Disabled

This setting enables the user-programmable pushbutton Autoreset feature. The setting is applicable only if the pushbutton is in *Latched* mode.

AUTORESET DELAY

Range: 0.2 to 600.0 s in steps of 0.1 s

Default: 1.0 s

This setting specifies the time delay for automatic Reset of the pushbutton when in the *Latched* mode.

LOCK

Range: Off, Any FlexLogic operand

Default: Off

This setting assigns a FlexLogic operand serving to inhibit pushbutton operation from the front panel pushbuttons. This locking functionality is not applicable to pushbutton autoreset.

DROPOUT TIME

Range: 0.0 to 600.0 s in steps of 0.1 s

Default: 0.0 s

This setting applies only to *Self-reset* mode and specifies the duration of the pushbutton “active” status after the pushbutton has been released. The length of time the operand remains on has no effect on the pulse duration.

The setting is required to set the duration of the pushbutton operating pulse.

EVENTS

Range: Disabled, Enabled

Default: Enabled

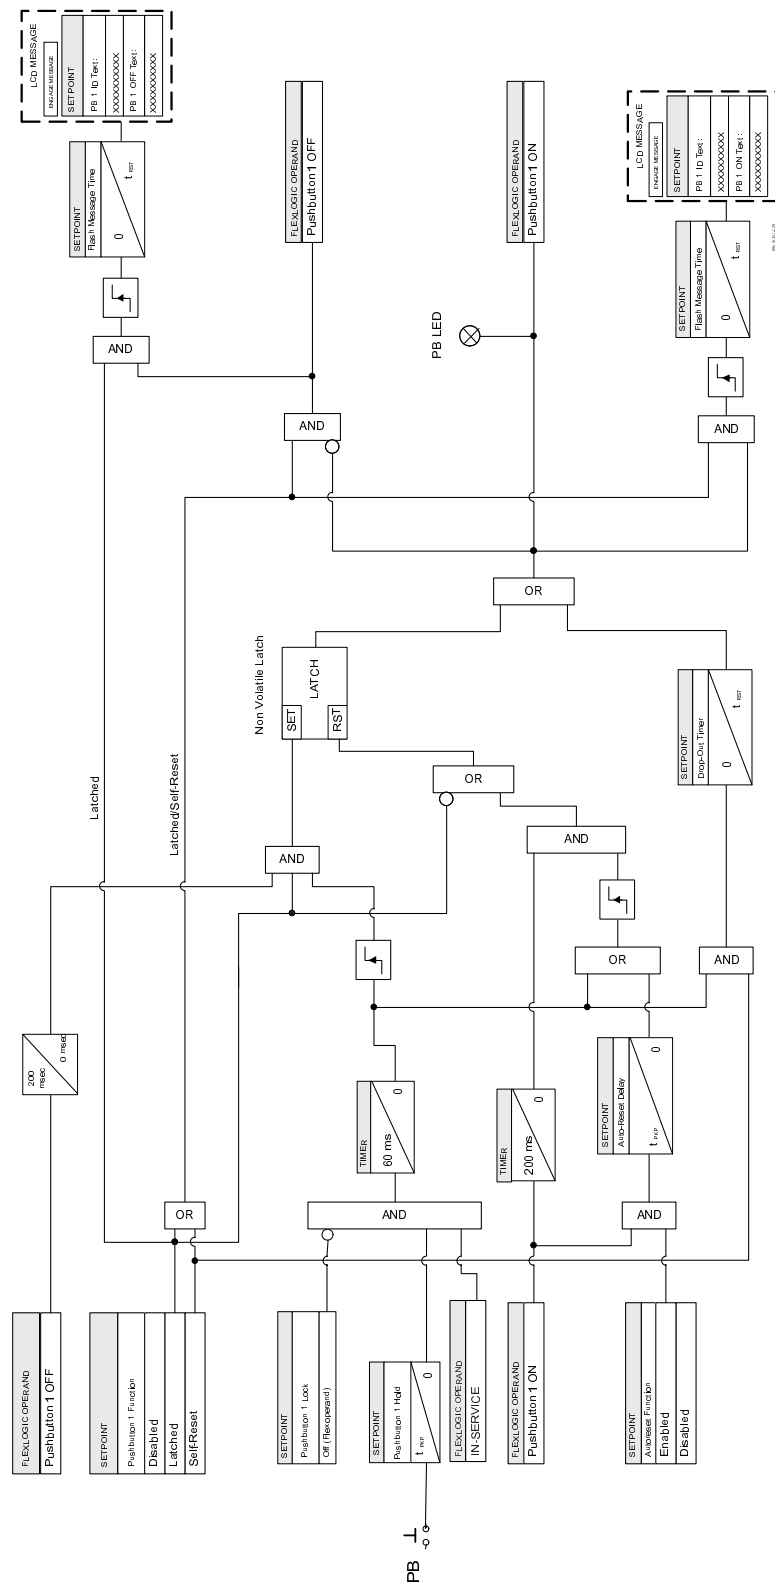


Figure 130: Pushbuttons Logic Diagram

6.11.2.1 TEN PUSHBUTTON ALLOCATION TABLES

PB1 to PB3 Default Values (3 pushbutton Front Panels)

	PB1	PB2	PB3
Function	Self-Reset	Self-Reset	Self-Reset
ID Text	Open	Close	F1
ON Text	PB1 ON	PB2 ON	PB3 ON
OFF Text	PB1 OFF	PB2 OFF	PB3 OFF
LED Trigger	PB1 ON	PB2 ON	PB3 ON
Hold Pressed	0.1s	0.1s	0.1s
Autoreset	Disabled	Disabled	Disabled
Autoreset Delay	1.0s	1.0s	1.0s
Lock	Off	Off	Off
Dropout Time	0.0s	0.0s	0.0s
Events	Enabled	Enabled	Enabled

PB1 to PB10 Default Values (10 Pushbutton Membrane Front Panel)

	PB1	PB2	PB3	PB4	PB5	PB6	PB7	PB8	PB9	PB10
Function	Self-Reset	Self-Reset	Latched	Latched	Latched	Latched	Self-Reset	Latched	Self-Reset	Latched
ID Text	Open	Close	Reclose Enabled	Ground Trip Enabled	Remote Enabled	Hot Line Tag	Demand Reset	Alternate Settings	Trigger Transient Recorder	PB Lock
ON Text	PB1 ON	PB2 ON	PB3 ON	PB4 ON	PB5 ON	PB6 ON	PB7 ON	PB8 ON	PB9 ON	PB10 ON
OFF Text	PB1 OFF	PB2 OFF	PB3 OFF	PB4 OFF	PB5 OFF	PB6 OFF	PB7 OFF	PB8 OFF	PB9 OFF	PB10 OFF
LED Trigger	PB1 ON	PB2 ON	PB3 ON	PB4 ON	Local Mode OFF	PB6 ON	PB7 ON	PB8 ON	PB9 ON	PB10 ON
Hold Pressed	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	0.1s	3.0s
Autoreset	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled
Autoreset Delay	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s	1.0s
Lock	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	PB10 ON	Off
Dropout Time	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s	0.0s
Events	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled

6.11.3 TAB PUSHBUTTONS

The Tab Pushbuttons provide an easy and error-free method of entering digital state (on, off) information. Twenty (20) Tab Pushbuttons are available for programming.

The digital state of the Tab Pushbuttons can be entered locally (by directly pressing the front panel pushbutton) or through Modbus by specifying the correct COMMAND sequence. Typical applications include breaker control, autorecloser blocking, and settings groups changes. The Tab Pushbuttons are under the control level of password protection. Only one pushbutton can be pressed at a time. If multiple pushbuttons are pressed simultaneously, the button pressed first takes the priority.

The Tab Pushbutton settings can be accessed from **Setpoints > Device > Front Panel > Tab Pushbuttons > Tab PB1**. The Tab Pushbutton control can be executed by navigating to **Status > Summary > Tab Pushbuttons**. By default, the summary page is shown to quickly glance at the active tab pushbuttons. The individual pages can then be accessed from the summary page. Each Tab Pushbutton asserts its own OFF and ON FlexLogic operands (for example, TAB PB 1 ON and TAB PB 1 OFF). These operands are available for each pushbutton and can be used to program specific actions. Each pushbutton has an associated “LED” indicator. By default, this indicator displays the present status of the corresponding pushbutton ON state.

The activation and deactivation of Tab Pushbuttons is dependent on whether latched or self-reset mode is programmed.

SELF-RESET MODE: In Self-reset mode, a Tab Pushbutton remains active for the time it is pressed (the pulse duration) plus the Dropout time specified in the settings. The pushbutton is deactivated in Self-reset mode when the dropout delay specified in the Dropout Time setting expires. The pulse duration of the pushbutton must be at least 100ms to operate the pushbutton.

LATCHED MODE: In Latched Mode, a pushbutton can be set (activated) by directly pressing the associated tab pushbutton. The pushbutton maintains the set state until deactivated by another press of the same button. The state of each pushbutton is stored in non-volatile memory and maintained through the loss of control power.

Path: **Setpoints > Device > Front Panel > Tab PBs > Tab PB1(X)**

FUNCTION

Range: Self-reset, Latched, Disabled

Default: Self-reset (up to 3.xx)

Default: Disabled (from 4.10)

This setting selects the characteristic of the pushbutton. If disabled, the pushbutton is not active and the corresponding FlexLogic operands (both ON and OFF) are de-asserted. If set to Self-reset the control logic is activated by the pulse issued when the pushbutton is being physically pressed.

When in Self-Reset mode and activated locally, the pushbutton control logic asserts the Tab PB [X] ON FlexLogic operand as long as the pushbutton is being physically pressed, and after being released the deactivation of the operand is delayed by the Dropout Time setting. The OFF operand is asserted when the pushbutton element is deactivated.

If set to Latched, the control logic alternates the state of the corresponding FlexLogic operand between ON and OFF on each button press. When in Latched mode, the states of the FlexLogic operands are stored in a non-volatile memory. Should the power supply be lost, the correct state of the pushbutton is retained upon subsequent power-up of the relay. When the pushbutton operand is in the ON state, the operand appears on the target message until the pushbutton is pressed again to change it to the OFF state.

ID TEXT

Range: Up to 13 alphanumeric characters

Default: Tab PB 1 (or Tab PB[X])

This setting specifies the 13-character line of the user-programmable message and is intended to provide the ID information of the pushbutton. This text is used to describe the pushbutton in the FlexLogic operands.

LINE 1 TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 1 of the button when in the normal view.

LINE 2 TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 2 of the button when in the normal view.

LINE 1 SHORT TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 1 of the button when in the summary view. This is also the text that appears on the tabs when operating the pushbuttons from the Single Line Diagram view.

LINE 2 SHORT TEXT

Range: 2 lines of alphanumeric characters

Default: [blank]

This setting specifies the text that is displayed on Line 2 of the button when in the summary view.

BUTTON COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: Black

This setting specifies the background color of the Tab Pushbutton. If the button is disabled, the button color by default is shown as gray.

TEXT COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: White

This setting specifies the text color of the Tab Pushbutton.

INDICATOR COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: Yellow

This setting specifies the color of the “LED” indicator for the Tab Pushbutton.

INDICATOR TRIGGER

Range: TAB PB 1 ON, Any FlexLogic operand

Default: TAB PB 1 ON

This setting assigns a FlexLogic operand to trigger the Indicator to change color from the default color (white) to the selected color.

HOLD PRESSED

Range: 0.1 to 10.0 s in steps of 0.1 s

Default: 0.1 s

This setting specifies the time required for a pushbutton to be pressed before it is deemed active.

The timer is Reset upon release of the pushbutton. Note that any pushbutton operation will require the pushbutton to be pressed a minimum of 100ms.

AUTORESET

Range: Disabled, Enabled

Default: Disabled

This setting enables the Tab Pushbutton Autoreset feature. The setting is applicable only if the pushbutton is in “Latched” mode.

AUTORESET DELAY

Range: 0.2 to 600.0 s in steps of 0.1 s

Default: 1.0 s

This setting specifies the time delay for automatic Reset of the pushbutton when in the “Latched” mode.

LOCK

Range: Any FlexLogic operand

Default: Off

This setting assigns a FlexLogic operand to inhibit pushbutton operation from the front panel pushbuttons. This locking functionality is not applicable to pushbutton autoreset.

DROPOUT TIME

Range: 0.0 s to 600.0 s in steps of 0.1 s

Default: 0.0 s

This setting applies only to “Self-reset” mode and specifies the duration of the pushbutton “active” status after the pushbutton has been released. The length of time the operand remains on has no effect on the pulse duration.

The setting is required to set the duration of the pushbutton operating pulse.

EVENTS

Range: Disabled, Enabled

Default: Enabled

6.11.4 ANNUNCIATOR

The graphical annunciator panel provides an emulation of a conventional physical annunciator panel with backlit indicators each inscribed with a description of the alarm condition that lights the indicator. The annunciator has 36 user-configurable (programmable) indicators. The indicators can be arranged in pages of 3x3 or 2x2 grids. Each indicator can have up to 3 lines of configurable text. When the indicators are not active (i.e. a configured FlexOperand for the annunciator is not triggered), the background is black and the foreground text color is gray. When the associated FlexOperand becomes active, the background and the foreground turns brighter in color per the color configuration. When disabled, the indicators are grayed out with no text.

Layout

If the grid layout is selected to be 3x3, the annunciator has 4 pages. If the grid layout is 2x2, the annunciator has 9 pages. The numbering of the indicators is shown as follows.

Grid Layout 3x3 – Indicator Numbering											
Page 1			Page 2			Page 3			Page 4		
1	4	7	10	13	16	19	22	25	28	31	34
2	5	8	11	14	17	20	23	26	29	32	35
3	6	9	12	15	18	21	24	27	30	33	36

Grid Layout 2x2 – Indicator Numbering							
Page 1		Page 2		Page #		Page 9	
1	3	5	7	...	...	33	35
2	4	6	8	...	...	34	36

Figure 131: Annunciator grid layout

Navigation

The annunciator panel can be displayed in two ways. By default, the annunciator panel is programmed as one of the homescreens. This means that when on the home page, pressing the home button multiple times rotates through all the homescreens. Alternatively, the annunciator can be accessed by navigating to **Status\Summary \Annunciator\Page1**. Individual annunciator pages can also be assigned as a homepage. If the auto navigation setting is enabled in the setup, the screen automatically jumps from home to the annunciator page with the first active alarm. Pages with active alarms will have a maroon flashing tab pushbutton label. If other pages have active alarms, the >> button will show a flashing label.

Path: **Setpoints > Device > Front Panel > Annunciator > Annunciator Setup**

RESET ANNUNCIATOR

Range: Off, any FlexLogic operand

Default: Off

This setting designates a FlexLogic operand that, when activated, acknowledges/resets all annunciator windows in the graphical front panel. This setting is the same as that defined under **Setpoints > Device > Resetting > Reset Annunciator**.

The Reset Annunctr OP (OPRD) FlexLogic operand is activated by the two sources of **RESET** command, operand source and manual source. Each individual source of a **RESET ANNUNCIATOR** command also activates its individual operand Reset Annunctr OP (OPRD) or Reset Annunctr OP (MNUL) to identify the source of the command. Both of these operands generate an event in the event record when activated. The Reset Annunciator setting selects the operand that activates the Reset Annunctr OP (OPRD) operand. The **RESET** pushbutton in the front panel or the reset command from the EnerVista D&I Setup 8 Series Setup software activates the Reset Annunctr OP (MNUL) operand.

PAGE LAYOUT

Range: 3x3, 2x2

Default: 3x3

This setting selects the grid layout of the annunciator pages. The default 3x3 grid layout provides 4 annunciator pages and 2x2 provides 9 pages.

AUTO NAVIGATION

Range: Disabled, Enabled

Default: Enabled

This setting when enabled, automatically navigates to the annunciator panel page from where the indication was triggered. While in the annunciator panel, if no action is taken, the screen returns back to the home page after the timeout setting.

FOCUSED NAVIGATION

Range: Disabled, Enabled

Default: Disabled

When this setting is enabled at the same time as the **AUTO NAVIGATION** setting, the page that has the active indicator will come into focus. The focus will change to the newest indicator as soon as that becomes active. Target Messages and Default Screens both have a lower priority than the **FOCUSED NAVIGATION** setting of the Annunciator Panel.

Path: *Setpoints > Device > Front Panel > Annunciator > Indicator 1(36)*

ALARM INPUT

Range: Off, any FlexLogic Operand

Default: Off

This setting specifies the input operand used to activate the corresponding indicator.

ALARM TYPE

Range: Off, Self-Reset, Latched

Default: Off

This setting specifies the alarm type. Self-Reset alarms track the state of the corresponding input operand. Latched alarms can be reset using Reset pushbutton or through Acknowledgment via graphical front panel.

The alarm type of each annunciator indicator may be configured as *Off*, *Self-Reset*, or *Latched*. The default mode is Off. In this mode, the indicator is grayed out without any text. In self-reset mode, the indicator's inactive state is by default in black background with dark gray color text. When the associated operand becomes active (i.e. the assigned FlexOperand is triggered), the configured background color and foreground text color appears. In latched mode, the configured operand causes the background to flash when it becomes active. If the alarm is then acknowledged or reset, the background stops flashing. If the operand becomes inactive, the indicator returns to its default colors. The behavior of these modes conforms to ISA-18.1-1979 (R2004) standard - A-4-5-6 (self-reset), and M-6 (latched).

Note:

If the Annunciator Alarm was initiated by another element that is of a Latched type (e.g. Trip Bus), you must navigate out of the Annunciator and then reset the latched element. This action will reset the latched element, the Annunciator Alarm and also the Trip LED if applicable.

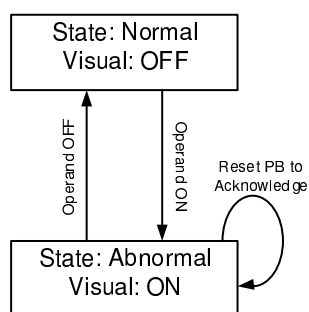


Figure 132: Self-Reset Mode

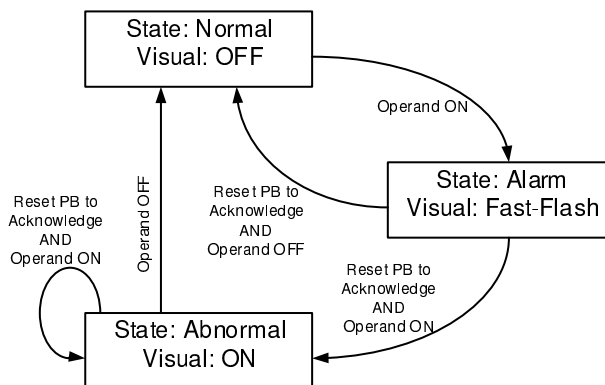


Figure 133: Latched Mode

When any annunciator page is displayed with an alarm condition, the navigation keys can be used to select an indicator. Once selected, the alarm condition can be acknowledged by pressing the reset pushbutton or by pressing the enter key. A confirmation message is displayed for acknowledging the alarm. Pressing the **Reset** or **Enter** key again acknowledges the alarm and pressing the Escape button discards the message. When the alarms are active under latched mode, a power loss retains the previous state of the alarm as the alarm states are stored in non-volatile memory.

TEXT LINE 1 (2,3)

Range: 15 Alphanumeric Characters

Default: [blank]

These settings specify the displayed text on the corresponding line in the alarm indicator. Three lines can be displayed with each line allowing up to 15 alphanumeric characters.

TEXT COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: White

This setting specifies the color of the alarm indicator text.

BACK COLOR

Range: Black, Red, Yellow, Blue, Green, Teal, Purple, White

Default: Red

This setting specifies the color of the alarm indicator background. When the indicator becomes active, the background changes color from the default Black to the programmed alarm back color.

6.11.5 DISPLAY PROPERTIES

Some relay messaging characteristics can be modified to suit different situations using the Front Panel Display Properties setting.

Path: *Setpoints > Device > Front Panel > Display Properties*

COLOR SCHEME

Range: Green (open), Red (open)

Default: Green (open)

This setting defines the color scheme for the breaker status. If it is programmed Green (open), the breaker open status is shown in the color green on the single line diagram and on the device status.

FLASH MESSAGE TIME

Range: 1 to 10 s in steps of 1 s

Default: 5 s

Flash messages are status, warning, error, or information messages displayed for several seconds in response to certain key presses during programming. These messages override any normal messages. The duration of a flash message on the display can be changed to accommodate different reading rates.

SCREEN TIMEOUT

Range: 10 to 900 s in steps of 1 s

Default: 120 s

If no pushbutton has been pressed for certain period of time, the relay automatically reverts to its default screen.

If the Default Screens are Enabled, Default Screens will become active after the Screen Timeout expires. If the Default Screens are Disabled, The Actuals\Summary page is displayed after the Screen Timeout expires.

DISPLAY INTENSITY

Range: 10%-100%

Default: 100%

The backlight can be reduced to make the screen easier to view under higher atmosphere lighting.

Note:

Only available on Membrane and 10 Pushbutton front panel

INACTIVITY TIMEOUT

Range: 10 to 900 s in steps of 1 s

Default: 300 s

When the Inactivity Timeout expires, the screen will dim to Inactivity Intensity.

If the Default Screens are Disabled, the Screen Saver images will become active when the Inactivity Timeout expires. If the Default Screens are Enabled, the Default Screens will be displayed at the Inactivity Intensity when the Inactivity Timeout expires.

If a new Target occurs and the Target Auto Navigation is enabled, the Target Screen will become active. If the system is in an inactive state, the system will switch to an active state. The intensity will return to Display Intensity. If targets are present, the Default Screens will still become operational after the Inactivity Timeout.

INACTIVITY INTENSITY

Range: 10% - 100%

Default: 50%

The inactivity intensity can be varied so that backlight is on at a low intensity instead of being fully shut off.

TARGET AUTO NAVIGATION

Range: Disabled, Enabled

Default: Disabled

When the target auto navigation is set to Enabled, it will override the current menu page and go to the target message page when a target is active. 

The Active target Icon shown above, will be the only indication of active target messages.

LANGUAGE

Range: English, French, German, Polish, Russian, Ukrainian,

Default: English

This setting selects the language used to display the settings, metering, status, and targets. The range is dependent on the order code of the relay.

6.11.5.1 SUPPORT FOR CYRILLIC LANGUAGES

The 8 Series of relays support the Russian and Ukrainian languages, but for this to work you also need to configure your Windows system accordingly. You can do this by selecting the required language. Modify the settings in the following locations:

- **Control panel > Region > Administrative tab > Change System Locale > Language for non-Unicode programs**
- **Control panel > Region > Language Preferences**

For more information, refer to your Microsoft documentation.

6.11.6 DEFAULT SCREENS

The relay provides the convenience of configuring and displaying up to three default screens from a predefined list. Each type of screen to display can be selected, and the display time programmed. The sequence of displaying the screens starts after the time of inactivity programmed in the **MESSAGE TIMEOUT** setpoint, when no PB has been pressed, and no target message is present. Pressing a pushbutton, or the presence of a target message inhibits the sequential display of default screens. The screen displays resume only after the target messages are cleared, and no PB pressing is recorded for 30 seconds. When configured the home screen is changed to the first screen defined by this feature. Display timeouts also return to this first screen (i.e. default screen 1).

If the default screens feature is disabled and there are no home screens programmed, the home page will show the **Metering > Summary > Values** screen after the message timeout inactivity period.

Path: Setpoints > Device > Front Panel > Default Screen

FUNCTION

Range: Disabled, Enabled

Default: Enabled

This setpoint enables the feature. Displaying of the screen starts 30 s after setting the feature to "Enabled", providing no targets have been issued, nor a PB has been pressed.

DISPLAY TIME

Range: 5 to 900 s in steps of 1 s

Default: 10 s

The display time is the amount of time that each of the three screens are displayed within the display sequence.

DEFAULT SCREEN X

Range: varieties of screens for selection

Default: SLD (for Default Screen 1 only), Off (for others)

This setpoint enables the user to input the default screens.

DEFAULT SCREEN INTENSITY (not available for all FW versions)

Range: 0 to 100% in steps of 10%

Default: 100%

The default screen intensity can be varied so that the backlight is at a low intensity instead of being fully shut off.

6.11.7 HOME SCREENS

The home screens allow the selection of a set of pages as home pages (max. 10). Multiple home pages are configured and navigated to by pressing the home button repeatedly. Navigate through all available home screens by repeatedly pressing the home button.

When returning to the home screen (either by pressing escape or directly pressing the Home button) through the different menus, the last accessed home screen is shown. Subsequent presses of the Home button navigates to the next programmed home screen on the list.

While accessing the home screens, the tab pushbutton navigation labels show the root menu – i.e. Targets, Status, Metering, Setpoints, and Records. The exceptions are the Tab Pushbuttons screens which instead show pushbuttons in the navigation labels.

If the default screens are enabled, the first default screen is shown after 30 seconds plus the inactivity period defined in **Setpoints > Device > Front Panel > Display Properties > Message Timeout**. If the default screens feature and screen saver are disabled, the screen defaults to the Values screen after the inactivity period.

When the home screens are programmed and the default screens feature is enabled but the screens are set to Off, the last accessed home screen is shown as the home page.

By Default, the first home screen is configured to show the first single line diagram.

Note:

When on any single line diagram page, if an object is selected, the home button will not function. The selected object must first be de-selected by pressing the escape button to be able to use the home button functionality again.

Path: Setpoints > Device > Front Panel > Home Screens

HOME SCREEN 1

Range: All available pages

Default: SLD1

HOME SCREEN 2

Range: All available pages

Default: Tab PB Summary

HOME SCREEN 3

Range: All available pages

Default: Annunciator Pg 1

HOME SCREEN 4

Range: All available pages

Default: Values

HOME SCREEN 5 to 10

Range: All available pages

Default: Off

6.11.8 FLEXSCREENS

The FlexScreens allow you to select a page to appear on the display based on the results of an **OPERATE** setting. Up to five FlexScreens can be configured. When the **OPERATE** setting evaluates to a *TRUE*, the FlexScreen configured will be displayed.

Note:

A pulse of 500 ms (or greater) is required to activate a FlexScreen condition.

Path: Setpoints > Device > Front Panel > FlexScreens

FLEXSCREEN 1

Range: All available pages

Default: Off

FLEXSCREEN 1 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 1.

FLEXSCREEN 2

Range: All available pages

Default: Off

FLEXSCREEN 2 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 2.

FLEXSCREEN 3

Range: All available pages

Default: Off

FLEXSCREEN 3 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 3.

FLEXSCREEN 4

Range: All available pages

Default: Off

FLEXSCREEN 4 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 4.

FLEXSCREEN 5

Range: All available pages

Default: Off

FLEXSCREEN 5 OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint requires the assignment of a FlexLogic operand to turn on FlexScreen 5.

6.12 RESETTING

Some events can be programmed to latch the faceplate LED event indicators and target message on the display. Depending on the application some auxiliary output relays can be programmed to latch after the triggering event is cleared. Once set, the latching mechanism holds all the latched indicators, messages, and auxiliary output relays in the set state, after the initiating condition has cleared, until a **RESET** command is received to return these latches (except the FlexLogic latches) to the reset state.

The **RESET** command can be sent from the faceplate **Reset** pushbutton, a remote device via a communication channel, or any programmed FlexLogic operand. Executing the **RESET** command from either source creates a general FlexLogic operand RESET OP. Each individual source of a **RESET** command also creates its individual operand RESET OP (PB), RESET (COMMS), and RESET OP (OPERAND) to identify the source of the command.

RESET INPUT 1(2,3):

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects an operand from the list of FlexLogic operands. The targets, LEDs, and latched output relays reset upon assertion from any of the operands selected as Reset Inputs.

RESET ANNUNCIATOR

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects an operand from the list of FlexLogic operands. When activated it resets all annunciator windows on the graphical front panel.

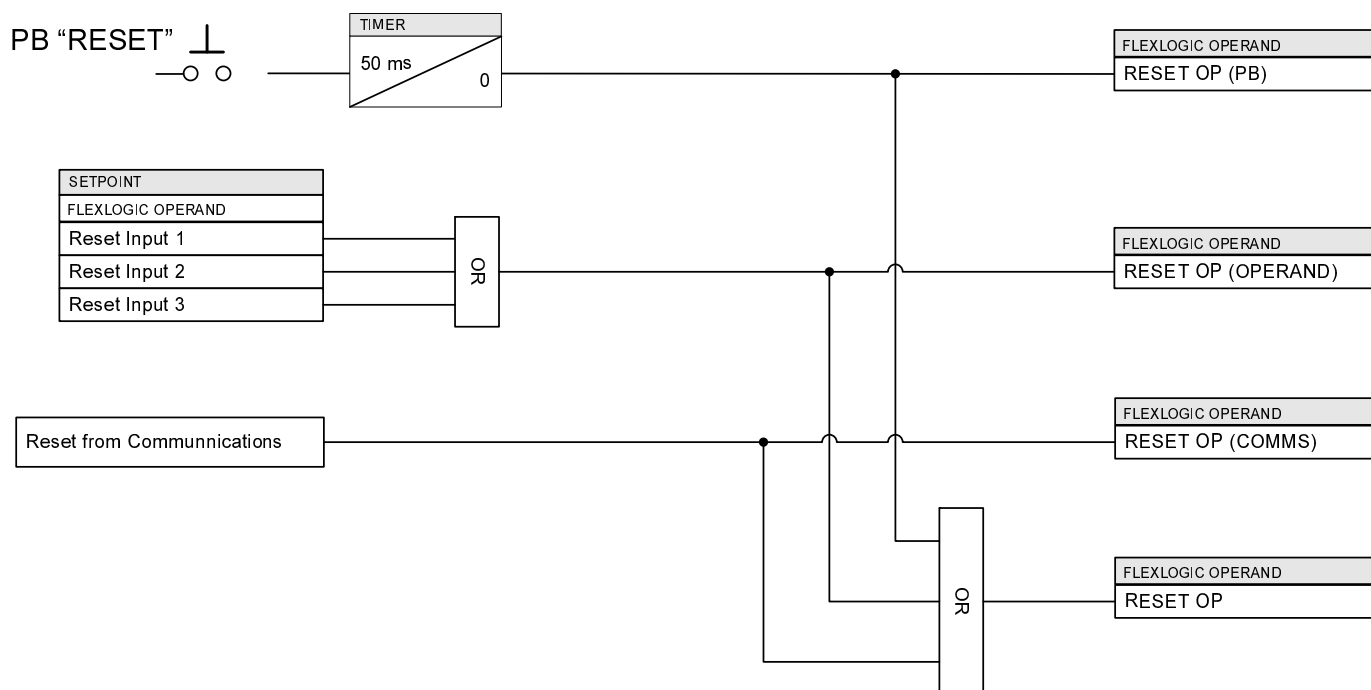


Figure 134: Reset logic

6.13 INSTALLATION

Path: *Setpoints > Device > Installation*

DEVICE NAME

Range: Up to 13 alphanumeric characters

An alphanumeric name may be assigned to the device.

DEVICE IN SERVICE

Default: Not Ready

Range: Not Ready, Ready

The relay is defaulted to the “Not Ready” state when it leaves the factory. This safeguards against the installation of a relay whose settings have not been entered. When powered up successfully, the “IN SERVICE” LED becomes red. The relay in the “Not Ready” state blocks signaling of any output relay. These conditions remain until the relay is explicitly put in the “Ready” state.

SERVICE COMMAND

Range: 0 to 65535

Default: 0

TEMPERATURE DISPLAY

Range: Celsius, Fahrenheit

Default: Celsius

Selects engineering unit of temperature display.

LATCHED ALARM OPERATION

Range: Self-Reset, Latched

Default: Latched

This setting applies to all the elements programmed to *Latched Alarm* function. It does not apply to the elements that are programmed to Alarm function.

When this setting is programmed to *Latched*, all the elements programmed to *Latched Alarm* will keep the Alarm LED and outputs (OP signal and assigned Output Relay) latched until the operating condition clears and a Reset command is issued.

When this setting is programmed to *Self-Reset*, all the elements programmed to *Latched Alarm* will keep the Alarm LED latched but resets outputs (OP signal and assigned Output Relay) automatically once the operating condition clears.

REMOTE IO DETECT VALUE

Range: Up to 6 alphanumeric characters

Shows the letter type of the Remote RTD card Board ID installed (e.g. GGGG).

CURRENT CUTOFF

Range: 0.000 to 1.000 p.u. in steps of 0.001 p.u.

Default: 0.020 p.u.

VOLTAGE CUTOFF

Range: 0.0 to 300.0 in steps of 0.1 V

Default: 1.0 V

Note:

Lower the Voltage Cutoff and Current Cutoff levels with care as the relay accepts lower signals as valid measurements. Unless dictated otherwise by a specific application, the default settings of “0.020 pu” for current and “1.0 V” for voltage are recommended.

OV/UV DPO RANGE

Range: 2% , 4%

Default: 2%

This setpoint determines the threshold of the drop-out level. There are two possible ranges, 2% or 4%. This setting affects to all voltage protection functions located under the menu Protection\Voltage Prot.

For overvoltage elements:

The enumerate value of 2% specifies that the dropout voltage level is achieved when the voltage level drops below 2% of the pickup value.

For 4%, the drop-out voltage level is specified when the voltage level drops below 4% of the pickup voltage level.

For Undervoltage elements:

The 2% value determines than the drop-out condition of the pickup flag is given when the voltage level is higher than 2% of the pickup voltage level.

On the other hand, the 4% value establishes that the drop-out level of the pickup flag is given when the voltage is higher than the 4% of the pickup voltage level.

The next table summarizes both conditions:

OV/UV DPO Range	OV Functions (Dpo Level)	UV Functions (Dpo Level)
2%	98%	102%
4%	96%	104%

BKR 1 STATUS

Range: Enabled, Disabled

Default: Enabled

Target Message for the breaker status is shown when the set to 'Enabled'. When 'Disabled', all target messages related to breaker status will be blocked.

BKR 2 STATUS

Range: Enabled, Disabled

Default: Enabled

BKR 3 STATUS

Range: Enabled, Disabled

Default: Enabled

6.14 SELF-TEST MONITOR

6.15 CLEAR RECORDS

The Clear Records command is accessible from the front panel and from the EnerVista D&I Setup.

Path: *Device > Clear Records*

Records can be cleared by assigning *On* to the appropriate setting.

Note:

*The Clear Records command is also available from **Records> Clear Records**, where the allowable settings also include FlexLogic operands.*

CHAPTER 7

SYSTEM SETPOINTS


7.1 **CHAPTER OVERVIEW**

This chapter describes the Device setpoint menu settings in detail.

This chapter contains the following sections:

Chapter Overview	271
System menu hierarchy	272
Current Sensing	273
Voltage sensing	274
Power Sensing	276
Power System	277
Transformer	278
Breakers	316
Switches	319
FlexCurves	323

7.2 SYSTEM MENU HIERARCHY

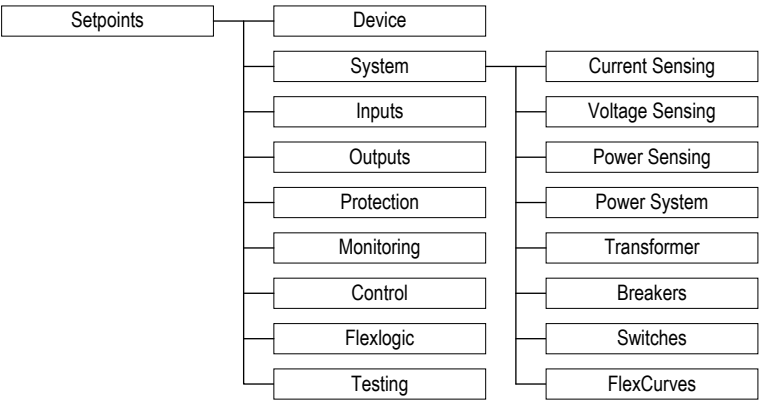

894511B1

Figure 135: Device Display Hierarchy

7.3 CURRENT SENSING

The names and the configuration of the current banks below apply only to the protection of either two-winding transformers with voltage, or three-winding transformers.

Path: *Setpoints > System > Current Sensing > CT Bank 1-J1*

CT BANK NAME

Range: Any combination of 13 alphanumeric characters

Default: CT Bank 1-J1

PHASE CT PRIMARY

Range: 1 A to 12000 A in steps of 1A (up to FW 3.xx)

Range: 1 A to 50000 A in steps of 1A (from FW 4.10)

Default : 500 A

Enter the phase CT primary current for current sensing bank J1.

GROUND CT PRIMARY

Range: 1 A to 12000 A

Range: 1 A to 50000 A in steps of 1A (from FW 4.10)

Default: 500 A

Enter the rated Ground CT primary current for the ground current input for the selected Current 1 bank.

Path: *Setpoints > System > Current Sensing > Current Bank 2-K1*

Path: *Setpoints > System > Current Sensing > Current Bank 3-K2*

The names and the configuration of the current banks below, apply only to orders for two-winding transformers without voltage.

Path: *Setpoints > System > Current Sensing > CT Bank 1-K1*

Path: *Setpoints > System > Current Sensing > Current Bank 2-K2*

7.4 VOLTAGE SENSING

The Voltage Sensing menu provides the setup for all VTs (PTs) connected to the relay voltage terminals.

Path: *Setpoints > System > Voltage Sensing > Ph VT Bnk1-J2*

PHASE VT BANK NAME

Range: Any combination of 13 alphanumeric characters

Default: Ph VT Bnk 1-J2

Enter the name of the phase voltage from bank J2.

PHASE VT CONNECTION

Range: Wye, Delta, Single

Default: Wye

Select the type of phase VT connection to match the VTs (PTs) connected to the relay.

In cases when the distribution feeder has only one VT source (to measure single phase to neutral voltage or phase-to-phase voltage), the relay facilitates 3-phase power and energy measurements derived from pseudo 3-phase voltages. The pseudo 3-phase voltages are derived from any one VT source connected by considering a balanced 3-phase system (i.e. all three phase voltages and currents same in magnitude and placed 120 degrees apart with individual phases). Since the pseudo 3-phase voltage calculation relies on a balanced power system, the calculation accuracies are influenced by system unbalance conditions. In case of a perfectly balanced system, the calculated pseudo voltages are the same as the actual system voltages. However, the errors in the 3-phase power and from a single-phase reference input are only used for calculating the 3-phase metering quantities.

PSEUDO VOLTAGE REFERENCE

Range: Van, Vbn, Vcn, Vab, Vbc, Vca

Default: Van

This setting is only applicable when **PHASE VT CONNECTION** is set to *Single*. This means there is only one VT source available for metering. The relay allows any type of connection (A to neutral, B to neutral, C to neutral, A to B phase, B to C phase, and C to A phase) with a single VT reference input. It derives all 3-phase voltages from the provided single voltage reference input by considering a 3-phase balanced system.

When the setpoint **PSEUDO VOLTAGE REFERENCE** is configured to Van or Vab, single-phase VT inputs are connected to VT Channel 1. Similarly, when **PSEUDO VOLTAGE REFERENCE** is configured to Vbn(Vbc) and Vcn(Vca), the VT inputs are connected to VT Channel 2 and Channel 3, respectively.

Note:

When Pseudo Voltage is used, sequence components (positive, negative and zero sequence voltage) displayed in the metering value are not a measured quantity, so sequence components should be ignored when **PHASE VT CONNECTION** is set to *Single*.

PHASE VT SECONDARY

Range: 10.0 to 240.0 V in steps of 0.1 V

Default: 120.0 V

Select the output secondary voltage for phase VTs connected to the J2 bank.

PHASE VT RATIO

Range: 1.00 to 5000.00 in steps of 0.01

Default: 1.00

Select the phase VT ratio to match the ratio of the VTs connected to the J2 bank.

AUX. VT NAME

Range: Any combination of 13 alphanumeric characters

Default: Ax VT Bnk1-J2

Enter the name of the auxiliary voltage from bank J2.

AUX. VT CONNECTION

Range: Van, Vbn, Vcn, Vab, Vbc, Vca, Vn

Default: Van

Select the voltage type corresponding to the one applied to the Aux VT relay terminals from bank J2. Select Vn (neutral voltage), if the neutral voltage is applied to the relay auxiliary VT.

AUX. VT SECONDARY

Range: 10.0 to 240.0 V in steps of 0.1 V

Default: 120.0 V

Select the output secondary voltage of the aux. VT connected to the aux. VT input from bank J2.

AUX. VT RATIO

Range: 1.00 to 5000.00 in steps of 0.01

Default: 1.00

Select the aux. VT ratio to match the ratio of the VT connected to the aux. VT input from bank J2.

Note:

The nominal **PHASE VT SECONDARY** and the **AUX VT SECONDARY** voltage settings are the voltages across the phase VT terminals and the auxiliary VT terminals correspondingly when nominal voltage is applied.

Note:

For example, on a system of 13.8kV nominal primary voltage, and a 14400:120 volt VT in a Delta connection, the secondary voltage would be 115V, i.e. $(13800/14400)*120$. For a Wye connection, the voltage value entered must be the phase to neutral voltage which would be $115/\sqrt{3} = 66.4$ V.

Note:

On a 14.4 kV system with a Delta connection and a VT primary to secondary turns ratio of 14400:120, the voltage value entered would be 120 V, i.e. $14400/120$.

7.5 POWER SENSING

The power computation is performed using the voltage and current inputs from the card inserted in slot J. In cases when the connected VTs and CTs have opposite polarity, the power sensing menu provides for inverting the power measurement.

Path: *Setpoints > System > Power Sensing*

3PH VT BANK INPUT

Range: Dependent upon the order code

Default: J2-3VT

This setpoint selects the 3-phase VT inputs used for Power (X) computation.

3PH CT BANK INPUT

Range: Dependent upon the order code

Default: J1-3CT

This setpoint selects the 3-phase CT inputs for Power (X) computation.

PHASE CT&VT POLARITY

Range: Same, Inverse

Default: Same

When *Inverse* is selected, this setpoint inverts (multiplies phase currents by -1) the CT polarity for the phase currents from CT bank J1, with respect to the phase voltages from the VT bank J2.

Note:

The setpoint for inversion of the power metering will be useful to avoid the physical inversion of the CT connections on the relay. As the power metering will affect the power directional elements, the user must determine the correct forward and reverse direction of the power, before setup.

RESET EVENT ENERGY

Range: Off, Any FlexLogic operand

Default: Off

At the rising edge of the FlexLogic operand selected under this setpoint, all energy metering values (under **Metering > Energy 1(X) > Energy**) are logged and reset to zero, and Reset Energy D/T is recorded and displayed.

The logged values are displayed as the Last Event Pos(Neg) WattHours and Last Event Pos(Neg) VarHours under **Metering > Energy 1(X) > Energy Log**.

An application example could be monitoring of the total energy accumulated at the end of an event or a shift interval. An event/shift interval can be defined by the breaker status operand (open or closed) or, if applicable, by the operand derived by the Time of Day Timer element. If applicable, time-based shift schedules can be set in the Time of Day Timer element.

7.6 POWER SYSTEM

Path: **Setpoints** > **System** > **Power System**

NOMINAL FREQUENCY

Range: 60 Hz, 50 Hz

Default: 60 Hz

The power system **NOMINAL FREQUENCY** is used as a default to set the digital sampling rate if the system frequency cannot be measured from available AC signals. This may happen if the signals selected for frequency tracking are not present, or a valid frequency is not detected. Before reverting to the nominal frequency, the frequency tracking algorithm holds the last valid frequency measurement for a safe period of time while waiting for the signals to reappear or for the distortions to decay.

PHASE ROTATION

Range: ABC, ACB

Default: ABC

The selection of the **PHASE ROTATION** setting must match the power system phase rotation. The phase sequence setting is required to properly calculate sequence components and power parameters. Note that this setting informs the relay of the actual system phase sequence, either ABC or ACB. CT and VT inputs on the relay labeled as a, b, and c, must be connected to system phases A, B, and C for correct operation.

FREQUENCY TRACKING

Range: Disabled, Enabled

Default: Enabled

Frequency measurement is accomplished by measuring the time between zero crossings of the composite signal of three-phase bus voltages, line voltage or three-phase currents. The signals are passed through a low pass filter to prevent false zero crossings. Frequency tracking utilizes the measured frequency to set the sampling rate for current and voltage which results in better accuracy for the Discrete Fourier Transform (DFT) algorithm for off-nominal frequencies.

The main frequency tracking source uses three-phase voltages. The frequency tracking is switched automatically to the alternative reference source, i.e., three-phase currents signal, if the frequency detected from the three-phase voltage inputs is declared invalid. The switching will not be performed if the frequency from the alternative reference signal is detected invalid. Upon detecting valid frequency on the main source, the tracking will be switched back to the main source. If a stable frequency signal is not available from any source, then the tracking frequency defaults to the nominal system frequency.

Note:

In cases when the relay is ordered with phase voltage inputs, but voltages are not available on the relay (no PTs, or voltage reads zero), the source for frequency tracking is the CT bank from the same card, as the voltage bank. For 845 relay orders without VT inputs, the source for frequency tracking is K1 - the first CT bank from the card residing in K-slot. In this case automatic changing of the frequency source is not permitted

VOLTAGE FREQ TRACKING SOURCE

Range: Ph VT Bnk1-J2, Ax VT Bnk1-J2

Default: Ph VT Bnk1-J2

7.7 TRANSFORMER

Percent differential protection is the main protection for power transformers with regards to detecting all types of transformer internal fault. This protection is based on Kirchoff's law, where the sum of all currents flowing in and out of the protected equipment equals zero. However, when applying this law to the overall differential protection, one must keep in mind that the direct summation of the measured currents per-phase, does not automatically result into zero differential current. This is because:

1. The transformer voltage ratio defines different winding nominal currents
2. The winding CTs are not rated to the exact match of the winding nominal currents
3. Physically, the transformer windings are connected in Delta, Wye or Zig-Zag configuration, and they introduce a phase shift.
4. The transformer voltage ratio defines different winding nominal currents
5. The winding CTs are not rated to the exact match of the winding nominal currents
6. Physically, the transformer windings are connected in Delta or Wye configuration, and they introduce a phase shift.

For the correct performance of the overall percent differential protection, it is necessary to correct the magnitude and phase relationships of the CT secondary currents for each winding, in order to obtain near zero differential currents under normal transformer operating conditions. Traditionally, the phase shift between the currents from the transformer windings has been corrected by connecting the CTs from the Wye winding in Delta connection, and the CTs from the Delta winding in Wye connection. In the past, the magnitude correction has been accomplished using interposing CTs, or tapped relay windings. This however is not required any more when installing the relay.

The relay simplifies the process by performing the magnitude and phase shift compensations automatically (internally). Upon entering settings for the protected transformer and winding CT ratings, the relay automatically calculates and applies the correct magnitude scaling to the winding currents as well as applying the correct phase shift in order to prepare the currents for summation. To perform the correct currents compensation, all winding CTs need to be connected in Wye (polarity markings pointing away from the transformer).

Note:

When the Tap Changer detection feature is enabled on the relay, the algorithm automatically compensates the currents for the differential computation based on the new voltage ratio corresponding to the detected tap.

7.7.1 GENERAL SETUP

Most of the setpoints from the transformer general setup are used for computation of the hottest-spot winding temperature, aging factor, and accumulated loss of life.

Path: *Setpoints > System > Transformer > Transformer Setup*

REFERENCE WINDING

Range: Winding 1, Winding 2, Winding 3

Default: Winding 1

The reference winding (Wref) is the winding to which all other winding currents are scaled. That is, the per-unit values of the differential current and the restraint current are based on the nominal of the CT of the reference winding.

PHASE COMPENSATION

Range: Internal (software), External (with CTs)

Default: Internal (software)

Select the type of phase compensation to be performed by the relay. If set to Internal (software), the transformer magnitude and phase shift compensations are performed internally by the relay algorithm. If set to External (with CTs), the transformer phase shift is externally compensated by the CT connections. The relay still performs magnitude compensation when “External (with CTs)” option is selected.

Note:

When the phase compensation type External (with CTs) is selected, the relay does not apply phase compensation internally as per the entered winding angles from the transformer type selection. In this mode, the relay expects to measure already phase compensated currents on its terminals. In this mode, the relay only performs magnitude compensation.

LOAD LOSS AT RATED LOAD

Range: 0.001 to 20000.000 kW in steps of 0.001 kW

Default: 100.000 kW

This setting is taken from the transformer nameplate. If it is not available from the nameplate, the setting value can be computed as $P_R = I_{n(W)}^2 \cdot R$, where $I_{n(W)}$ is the winding rated current and R is the three-phase series resistance. The setting is used as input for the calculation of the hottest-spot winding temperature.

RATED WNDG TEMP RISE

Range: 55° C (oil), 65° C (oil), 80° C (dry), 115° C (dry), 150° C (dry)

Default: 65° C (oil)

This setting defines the winding temperature rise over 30°C ambient temperature. The setting is automatically selected for the transformer type as shown in the following figure. The data reflects the data outlined in ANSI/IEEE 57.91, ANSI/IEEE 57.92, and ANSI/IEEE 57.94 standards.

Rated winding temperature rise	Power capacity	Normal life expectancy	at θ_{H_R}
Oil, 55° C	≤ 500 kVA	180,000 hours	95° C
Oil, 55° C	≤ 100 kVA	6.5x10 ⁴ hours	95° C
Oil, 65° C	≤ 500 kVA	20 years	110° C
Oil, 65° C	≤ 100 kVA	6.5x10 ⁴ hours	110° C
Oil, 65° C	> 100MVA	6.5x10 ⁴ hours	110° C
Dry, 80° C	Any	20 years	140° C
Dry, 115° C	Any	20 years	175°
Dry, 150° C	Any	20 years	210° C

NO LOAD LOSS

Range: 0.001 to 20000.000 kW in steps of 0.001

Default: 125.000 kW

This setting is obtained from the transformer data and is used to calculate the aging acceleration factor.

TYPE OF COOLING

Range: OA, FA, Non-Directed FOA/FOW, Directed FOA/FOW, Sealed Self Cooled, Vented Self Cooled, Forced Cooled

Default: OA

The setting defines the type of transformer cooling and is used to calculate the aging acceleration factor. The values and their description for this setting are as follows:

OA: oil-air

FA: forced air

Non-directed FOA/FOW: non-directed forced-oil-air/forced-oil-water

Directed FOA/FOW: directed forced-oil-air/forced-oil-water

Sealed Self Cooled: as named

Vented Self Cooled: as named

Forced Cooled: as named

TOP OIL RISE OVER AMBIENT

Range: 1 to 200°C in steps of 1

Default: 35°C

This setting is available from the transformer nameplate data.

XFMR THERMAL CAPACITY

Range: 0.00 to 200.00 kWh/°C in steps of 0.01

Default: 1.00 kWh/°C

The setting is available from the transformer nameplate data. If not, refer to the following calculations.

For the OA and FA cooling types:

- $C = 0.06$ (core and coil assembly in lbs) + 0.04 (tank and fittings in lbs) + 1.33 (gallons of oil), Wh/°C; or
- $C = 0.0272$ (core and coil assembly in kg) + 0.01814 (tank and fittings in kg) + 5.034 (L of oil), Wh/°C

For the Non-directed FOA/FOW or Directed FOA/FOW cooling types, the thermal capacity is given by:

- $C = 0.06$ (core and coil assembly in lbs.) + 0.06 (tank and fittings in lbs.) + 1.93 (gallons of oil), Wh/°C; or
- $C = 0.0272$ (weight of core and coil assembly in kg) + 0.0272 (weight of tank and fittings in kg) + 7.305 (L of oil), Wh/°C

For dry-type power transformers:

- $C = 0.048 \times$ (weight of copper winding); or
- $C = 0.015 \times$ (weight of core and copper windings from the nameplate); or
- $C = 0.12 \times$ (weight of aluminum windings); or
- $C = 0.02 \times$ (weight of core and aluminum coils from the nameplate)

WNDG THERMAL TIME CONSTANT

Range: 0.25 to 15.00 min in steps of 0.01

Default: 2.00 min

This setting is required for the insulation aging calculation. If this value is not available from the transformer data, select "2 min."

ENERGIZATION WINDING SOURCE

Range: None, CT Bank 1-J1, CT Bank 2-K1, CT Bank 2-K2

Default: None

Required for generating transient record or oscillography during an energization event of the transformer. This setting enables you to capture current waveform through corresponding CT on the winding side where energization happens on the transformer and compute/pick various parameters during an energization event. Voltage bank J2 will be taken into consideration for generating voltage waveform based on the 845 order code.

YEAR OF MANUFACTURE

Range: 1950 to 2100

Default: 1950

This setting captures the manufacturing year of the transformer as present in the transformer nameplate data or manufacturing records.

7.7.2 PHASE RELATIONSHIPS

Power transformers that are built in accordance with ANSI and IEC standards are required to identify winding terminals and phase relationships among the windings of the transformer.

ANSI standard C.37.12.70 requires that the terminal labels include the characters 1, 2, 3 to represent the names of the individual phases. The phase relationship among the windings must be shown as a phasor diagram on the nameplate, with the winding terminals clearly labeled. This standard specifically states that the phase relationships are established for a condition where the source phase sequence of 1-2-3 is connected to transformer windings labeled 1, 2, and 3 respectively.

IEC standard 60076-1 (1993) states that the terminal markings of the three phases follow national practice. The phase relationship among the windings is shown as a specified notation on the nameplate, and there may be a phasor diagram. In this standard the arbitrary labeling of the windings is shown as I, II and III. This standard specifically states that the phase relationships are established for a condition where a source phase sequence of I-II-III is connected to transformer windings labeled I, II and III respectively.

7.7.3 MAGNITUDE COMPENSATION

The percent differential protection uses the phase-phase voltage and the CT primary setting of the Reference Winding (wref) (selected by the setpoint Reference Winding under Transformer\General Setup), to perform magnitude compensation for (bring to common base) the currents measured from the other windings.

To compute differential and restraint currents, the relay uses Winding 1 phase-phase voltage and the primary CT rating from the Signal input used for Winding 1. The relay computes magnitude compensation factors for Winding 2 and Winding 3 currents as shown below:

- **VW1, VW2, VW3:** Phase-to-phase voltages (Setpoint) programmed for Winding 1, Winding 2, and Winding 3
- **CTW1, CTW2, CTW3:** Current transformer rated primary current (Setpoint) programmed in Current Sensing menu and used as Signal Inputs to represent the currents from Winding 1, Winding 2, and Winding 3.
- **Vmin:** Minimum winding voltage
- **ΔVTLC:** Voltage difference between winding voltage at actual tap, and minimum voltage (Setpoint)

Case 1. The setpoint Tap Position Detection from the Tap Changer setup is set to *Disabled*, or the setpoint TC Winding Currents are set to *None*

The setpoint **Reference Winding** allows you to select the winding reference. For example, for three winding transformers, you can select as a reference Winding 1, Winding 2, or Winding 3. If you select a winding to be the magnitude reference, the relay will directly calculate magnitude compensation factors for the other non-reference windings based on the following formula:

$$M[w] = \frac{CT[w].V[w]}{CT[w_{ref}].V[w_{ref}]} , \text{ where } w = 1, 2, 3$$

Where $CT[w_{ref}]$, $V[w_{ref}]$ are the reference winding Phase-Phase Voltage (setpoint) and Phase CT Primary (setpoint).

Note:

The equations above are used when the Tap Charger is not enabled (or the relay is ordered without a Tap Charger).

Note:

The magnitude compensation factor for the reference winding currents is equal to 1.

Case 2. The setpoint Tap Position Detection from the Tap Changer setup is set to *Enabled*, and CT bank is selected for TC Winding Currents

The purpose of the tap changer, installed on one of the transformer windings, is to maintain transformer output voltage to within a certain bandwidth. To do this, the tap changer either increases or decreases the turns of that winding i.e., changes its phase-phase voltage, which in return leads to a different transformation ratio. When the transformation ratio is changed, the nominal currents of the windings change as well, meaning that the computation for CT mismatch based on the initially entered CT and ph-ph voltage per winding, will be different, than the actual CT mismatch. This mismatch will appear as differential current.

To compensate for this differential current, the relay provides dynamic CT mismatch compensation based on detection of the tap position.

The algorithm checks whether the Tap Changer function is enabled, and on which winding it is installed. To determine the winding, the algorithm checks to see which winding has the same selection of Signal input as the one selected for the tap changer.

If the Signal input selected for the OLTC (Onload Tap Changer) is the same as the one for the reference winding, the magnitude compensation factors for each non-reference winding will be computed using the following equation.

$$M(W) = \frac{CT[w].V[w]}{CT[w_{ref}].[V_{min}[w_{ref}]+\Delta V_{TLC}[w_{ref}]]} \quad \text{where } w = 1, 2, 3$$

If the CT bank input is not the same as the one of the reference winding (TC installed on non-reference winding), the computation of the compensation factor for that non-reference winding is performed using the equation below.

$$M(W) = \frac{CT[w].[V_{min}[w]+\Delta V_{TLC}[w]]}{CT[w_{ref}].V[w_{ref}]} \quad \text{where } w = 1, 2, 3$$

For the other non-reference winding without the tap changer, such as in case of a 3 winding transformer, the magnitude compensation factor is computed using the following equation.

$$M(W) = \frac{CT[w].V[w]}{CT[w_{ref}].V[w_{ref}]} \quad \text{where } w = 1, 2, 3$$

Reference Winding OLTC installed on	Winding 1	Winding 2	Winding 3
No OLTC Installed	$M_{W1} = 1$ $M_{W2} = \frac{CT_{W2} \cdot V_{W2}}{CT_{W1} \cdot V_{W1}}$ $M_{W3} = \frac{CT_{W3} \cdot V_{W3}}{CT_{W1} \cdot V_{W1}}$	$M_{W1} = \frac{CT_{W1} \cdot V_{W1}}{CT_{W2} \cdot V_{W2}}$ $M_{W2} = 1$ $M_{W3} = \frac{CT_{W3} \cdot V_{W3}}{CT_{W2} \cdot V_{W2}}$	$M_{W1} = \frac{CT_{W1} \cdot V_{W1}}{CT_{W3} \cdot V_{W3}}$ $M_{W2} = \frac{CT_{W2} \cdot V_{W2}}{CT_{W3} \cdot V_{W3}}$ $M_{W3} = 1$
Winding 1	$M_{W1} = 1$ $M_{W2} = \frac{CT_{W2} \cdot V_{W2}}{CT_{W1} \cdot (V_{\min} + \Delta V_{TLC})}$ $M_{W3} = \frac{CT_{W3} \cdot V_{W3}}{CT_{W1} \cdot (V_{\min} + \Delta V_{TLC})}$	$M_{W1} = \frac{CT_{W1} \cdot (V_{\min} + \Delta V_{TLC})}{CT_{W2} \cdot V_{W2}}$ $M_{W2} = 1$ $M_{W3} = \frac{CT_{W3} \cdot V_{W3}}{CT_{W2} \cdot V_{W2}}$	$M_{W1} = \frac{CT_{W1} \cdot (V_{\min} + \Delta V_{TLC})}{CT_{W3} \cdot V_{W3}}$ $M_{W2} = \frac{CT_{W2} \cdot V_{W2}}{CT_{W3} \cdot V_{W3}}$ $M_{W3} = 1$
Winding 2	$M_{W1} = 1$ $M_{W2} = \frac{CT_{W2} \cdot (V_{\min} + \Delta V_{TLC})}{CT_{W1} \cdot V_{W1}}$ $M_{W3} = \frac{CT_{W3} \cdot V_{W3}}{CT_{W1} \cdot V_{W1}}$	$M_{W1} = \frac{CT_{W1} \cdot V_{W1}}{CT_{W2} \cdot (V_{\min} + \Delta V_{TLC})}$ $M_{W2} = 1$ $M_{W3} = \frac{CT_{W3} \cdot V_{W3}}{CT_{W2} \cdot (V_{\min} + \Delta V_{TLC})}$	$M_{W1} = \frac{CT_{W1} \cdot V_{W1}}{CT_{W3} \cdot V_{W3}}$ $M_{W2} = \frac{CT_{W2} \cdot (V_{\min} + \Delta V_{TLC})}{CT_{W3} \cdot V_{W3}}$ $M_{W3} = 1$
Winding 3	$M_{W1} = 1$ $M_{W2} = \frac{CT_{W2} \cdot V_{W2}}{CT_{W1} \cdot V_{W1}}$ $M_{W3} = \frac{CT_{W3} \cdot (V_{\min} + \Delta V_{TLC})}{CT_{W1} \cdot V_{W1}}$	$M_{W1} = \frac{CT_{W1} \cdot V_{W1}}{CT_{W2} \cdot V_{W2}}$ $M_{W2} = 1$ $M_{W3} = \frac{CT_{W3} \cdot (V_{\min} + \Delta V_{TLC})}{CT_{W2} \cdot V_{W2}}$	$M_{W1} = \frac{CT_{W1} \cdot V_{W1}}{CT_{W3} \cdot (V_{\min} + \Delta V_{TLC})}$ $M_{W2} = \frac{CT_{W2} \cdot V_{W1}}{CT_{W3} \cdot (V_{\min} + \Delta V_{TLC})}$ $M_{W3} = 1$

Note:

The maximum allowed magnitude compensation factor (and hence the maximum allowed CT ratio mismatch) is 20.

7.7.4 PHASE COMPENSATION

Phase Compensation Reference: The overall percent differential protection from the relay uses either the Delta, or the Zig-Zag winding (depending on the transformer setup) as a reference to perform phase shift compensation. If the transformer has only Wye connected windings, the phase currents from the first Wye winding in the setup are used as a reference.

The power system phase sequence must be set when describing the winding phase relationships, since these relationships change, when the phase sequence changes. The example below shows why this happens, using a transformer described in IEC nomenclature as Yd1.

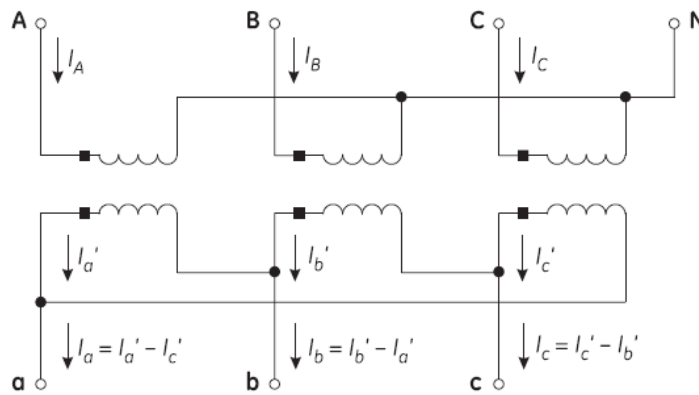


Figure 136: Example Transformer

The Example Transformer figure shows the physical connections within the transformer that produce a phase angle in the delta winding lagging the respective wye winding by 30° . The winding currents are also identified. Note that the total current out of the delta winding is described by an equation. Now assume that a source, with a sequence of ABC, is connected to transformer terminals ABC, respectively. The currents that would be present for a balanced load are shown below.

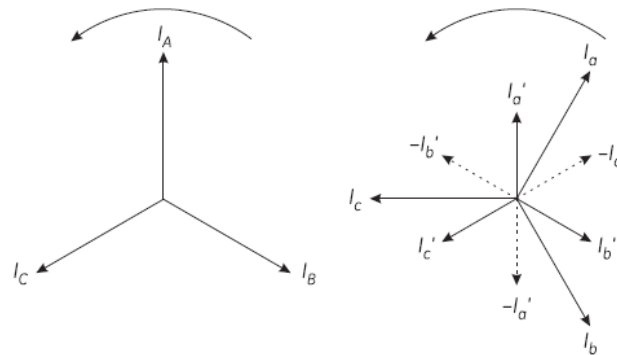


Figure 137: Phasors for ABC Sequence

Note that the delta winding currents lag the wye winding currents by 30° , which is in agreement with the transformer nameplate.

Now assume that a source, with a sequence of ACB is connected to transformer terminals A, C, B respectively. The currents that would be present for a balanced load are shown in the next figure: Phasors for ACB Sequence.

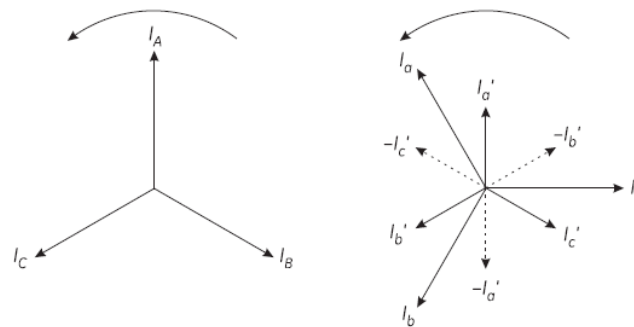


Figure 138: Phasors for ACB Sequence

Note that the delta winding currents lead the wye winding currents by 30° , (which is a type Yd11 in IEC nomenclature), which is in disagreement with the transformer nameplate. This is because the physical connections and hence the equations used to calculate current for the delta winding have not changed. The transformer nameplate phase relationship information is only correct for a stated phase sequence.

It is suggested that for the ACB sequence the phase relationship can be returned to that shown on the transformer nameplate by connecting source phases A, B and C to transformer terminals A, C, and B respectively. This will restore the nameplate phase shifts but will cause incorrect identification of phases B and C within the relay, and is therefore not recommended.

All information presented in this manual is based on connecting the relay phase A, B and C terminals to the power system phases A, B and C respectively. The transformer types and phase relationships presented are for a system phase sequence of ABC, in accordance with the standards for power transformers. Users with a system phase sequence of ACB must determine the transformer type for this sequence.

The following diagram shows the internal connections of the Y/d30 transformer from our example.

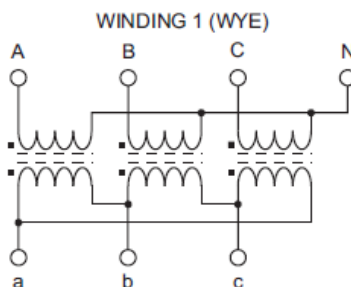


Figure 139: Wye/Delta (30° lag) Transformer

Under balanced conditions, the winding 2 phase currents lag the corresponding phase currents of winding 1 by 30° . With CTs connected in a wye arrangement (polarity markings pointing away from the transformer), even after magnitude compensation, the summation of the currents from both transformer windings will not result in zero differential current, because they will NOT be 180° out-of-phase.

Traditionally, this problem was solved by connecting the CTs from the wye side of the transformer (winding 1) in a delta. This compensates for the phase angle lag introduced in the delta side (winding 2).

The relay performs the phase angle correction internally based on the setpoint “**Angle With Respect to W1**” from the menu **System > Transformer > Transformer Setup > see “Winding 2”**, and the same setpoint from the menu **System > Transformer > Transformer Setup > see “Winding 3”** for three-winding transformer protection.

Note:

The angle of Winding 1 is always 0° , and this setpoint is omitted from the Winding 1 setup menu.

The supports all standard two-, and three-winding transformer types, and a variety of non-standard applications, where the selection of winding connection type and selected lagging angle with respect to Winding 1 are not described in the table of standard transformer types.

Transformer\Winding 2		
Item Name	Value	Unit
Signal Input	CT Bank 1 -J1	
Rated MVA	5.000	MVA
Nominal Ph-Ph Voltage	13.800	kV
Connection	Wye	
Angle With Respect To W1	0 °	
Grounding	Not Within Zone	
Wndg Resistance (3-ph)	10.0000	ohms
W 2		

Figure 140: Menu for transformer windings setup

As shown in the menu for transformer windings setup, the 30° lag of the Delta winding currents, will result in a 0° phase shift applied to Delta currents (Delta –phase reference), and a 30° phase angle correction (phase shift) applied to the winding 1 currents (Wye winding). These angle corrections are described in the table as Phase shift.

In general, zero sequence removal is necessary if zero sequence can flow into and out of one transformer winding but not the other windings. Transformer windings that are grounded **inside the zone** of protection allow zero sequence current flow in that winding, and therefore it is from these windings that zero sequence removal is necessary.

The relay performs this phase angle compensation and zero sequence removal automatically, based on the settings entered for the transformer. All CTs are connected Wye (polarity markings pointing away from the transformer). All currents are phase and zero sequence compensated internally before the calculation of differential and restraint quantities.

The phase reference winding (w_f) is the winding which will have a phase shift of 0° applied to it. The phase reference winding is chosen to be the delta or zigzag (non-wye) winding with the lowest winding index, if one exists. For a transformer that has no delta or zigzag windings, the first Wye winding is chosen.

The phase compensation angle ϕ_{comp} is the angle by which a winding current is shifted with reference to the angle of the reference winding, and is for each winding as follows

$$\phi_{comp}[w] = | \phi[w_f] - \phi[w] | \text{ where Rotation} = \text{“ABC”}$$

$$\phi_{comp}[w] = | \phi[w] - \phi[w_f] | \text{ where Rotation} = \text{“ACB”}$$

The following figure: Phase and Zero Sequence Compensation for Typical Values of ϕ_{comp} , shows the phase shift compensation equations of transformer winding currents, based on typical phase compensation angles ϕ_{comp} , and whether or not the zero sequence current is removed:

where:

$I_A[w]$ = uncompensated winding 'w' phase A current

$I_A^P[w]$ = phase and zero sequence compensated winding 'w' phase A current

$\Phi_{COMP}[W]$	GROUNDING[W] = “NOT WITHIN ZONE”	GROUNDING[W] = “WITHIN ZONE”
0°	$I_A^P[w] = I_A[w]$ $I_B^P[w] = I_B[w]$ $I_C^P[w] = I_C[w]$	$I_A^P[w] = \frac{2}{3}I_A[w] - \frac{1}{3}I_B[w] - \frac{1}{3}I_C[w]$ $I_B^P[w] = \frac{2}{3}I_B[w] - \frac{1}{3}I_A[w] - \frac{1}{3}I_C[w]$ $I_C^P[w] = \frac{2}{3}I_C[w] - \frac{1}{3}I_A[w] - \frac{1}{3}I_B[w]$
30° lag	$I_A^P[w] = \frac{1}{\sqrt{3}}I_A[w] - \frac{1}{\sqrt{3}}I_C[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}}I_B[w] - \frac{1}{\sqrt{3}}I_A[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}}I_C[w] - \frac{1}{\sqrt{3}}I_B[w]$	$I_A^P[w] = \frac{1}{\sqrt{3}}I_A[w] - \frac{1}{\sqrt{3}}I_C[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}}I_B[w] - \frac{1}{\sqrt{3}}I_A[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}}I_C[w] - \frac{1}{\sqrt{3}}I_B[w]$
60° lag	$I_A^P[w] = -I_C[w]$ $I_B^P[w] = -I_A[w]$ $I_C^P[w] = -I_B[w]$	$I_A^P[w] = -\frac{2}{3}I_C[w] + \frac{1}{3}I_A[w] + \frac{1}{3}I_B[w]$ $I_B^P[w] = -\frac{2}{3}I_A[w] + \frac{1}{3}I_B[w] + \frac{1}{3}I_C[w]$ $I_C^P[w] = -\frac{2}{3}I_B[w] + \frac{1}{3}I_A[w] + \frac{1}{3}I_C[w]$
90° lag	$I_A^P[w] = \frac{1}{\sqrt{3}}I_B[w] - \frac{1}{\sqrt{3}}I_C[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}}I_C[w] - \frac{1}{\sqrt{3}}I_A[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}}I_A[w] - \frac{1}{\sqrt{3}}I_B[w]$	$I_A^P[w] = \frac{1}{\sqrt{3}}I_B[w] - \frac{1}{\sqrt{3}}I_C[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}}I_C[w] - \frac{1}{\sqrt{3}}I_A[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}}I_A[w] - \frac{1}{\sqrt{3}}I_B[w]$
120° lag	$I_A^P[w] = I_B[w]$ $I_B^P[w] = I_C[w]$ $I_C^P[w] = I_A[w]$	$I_A^P[w] = \frac{2}{3}I_B[w] - \frac{1}{3}I_A[w] - \frac{1}{3}I_C[w]$ $I_B^P[w] = \frac{2}{3}I_C[w] - \frac{1}{3}I_A[w] - \frac{1}{3}I_B[w]$ $I_C^P[w] = \frac{2}{3}I_A[w] - \frac{1}{3}I_B[w] - \frac{1}{3}I_C[w]$
150° lag	$I_A^P[w] = \frac{1}{\sqrt{3}}I_B[w] - \frac{1}{\sqrt{3}}I_A[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}}I_C[w] - \frac{1}{\sqrt{3}}I_B[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}}I_A[w] - \frac{1}{\sqrt{3}}I_C[w]$	$I_A^P[w] = \frac{1}{\sqrt{3}}I_B[w] - \frac{1}{\sqrt{3}}I_A[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}}I_C[w] - \frac{1}{\sqrt{3}}I_B[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}}I_A[w] - \frac{1}{\sqrt{3}}I_C[w]$
180° lag	$I_A^P[w] = -I_A[w]$ $I_B^P[w] = -I_B[w]$ $I_C^P[w] = -I_C[w]$	$I_A^P[w] = -\frac{2}{3}I_A[w] + \frac{1}{3}I_B[w] + \frac{1}{3}I_C[w]$ $I_B^P[w] = -\frac{2}{3}I_B[w] + \frac{1}{3}I_A[w] + \frac{1}{3}I_C[w]$ $I_C^P[w] = -\frac{2}{3}I_C[w] + \frac{1}{3}I_A[w] + \frac{1}{3}I_B[w]$

Figure 141: Phase and Zero Sequence Compensation for Typical Values of ϕ_{comp}

210° lag	$I_A^P[w] = \frac{1}{\sqrt{3}} I_C[w] - \frac{1}{\sqrt{3}} I_A[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}} I_A[w] - \frac{1}{\sqrt{3}} I_B[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}} I_B[w] - \frac{1}{\sqrt{3}} I_C[w]$	$I_A^P[w] = \frac{1}{\sqrt{3}} I_C[w] - \frac{1}{\sqrt{3}} I_A[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}} I_A[w] - \frac{1}{\sqrt{3}} I_B[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}} I_B[w] - \frac{1}{\sqrt{3}} I_C[w]$
240° lag	$I_A^P[w] = I_C[w]$ $I_B^P[w] = I_A[w]$ $I_C^P[w] = I_B[w]$	$I_A^P[w] = \frac{2}{3} I_C[w] - \frac{1}{3} I_A[w] - \frac{1}{3} I_B[w]$ $I_B^P[w] = \frac{2}{3} I_A[w] - \frac{1}{3} I_B[w] - \frac{1}{3} I_C[w]$ $I_C^P[w] = \frac{2}{3} I_B[w] - \frac{1}{3} I_A[w] - \frac{1}{3} I_C[w]$
270° lag	$I_A^P[w] = \frac{1}{\sqrt{3}} I_C[w] - \frac{1}{\sqrt{3}} I_B[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}} I_A[w] - \frac{1}{\sqrt{3}} I_C[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}} I_B[w] - \frac{1}{\sqrt{3}} I_A[w]$	$I_A^P[w] = \frac{1}{\sqrt{3}} I_C[w] - \frac{1}{\sqrt{3}} I_B[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}} I_A[w] - \frac{1}{\sqrt{3}} I_C[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}} I_B[w] - \frac{1}{\sqrt{3}} I_A[w]$
300° lag	$I_A^P[w] = -I_B[w]$ $I_B^P[w] = -I_C[w]$ $I_C^P[w] = -I_A[w]$	$I_A^P[w] = -\frac{2}{3} I_B[w] + \frac{1}{3} I_A[w] + \frac{1}{3} I_C[w]$ $I_B^P[w] = -\frac{2}{3} I_C[w] + \frac{1}{3} I_A[w] + \frac{1}{3} I_B[w]$ $I_C^P[w] = -\frac{2}{3} I_A[w] + \frac{1}{3} I_B[w] + \frac{1}{3} I_C[w]$
330° lag	$I_A^P[w] = \frac{1}{\sqrt{3}} I_A[w] - \frac{1}{\sqrt{3}} I_B[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}} I_B[w] - \frac{1}{\sqrt{3}} I_C[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}} I_C[w] - \frac{1}{\sqrt{3}} I_A[w]$	$I_A^P[w] = \frac{1}{\sqrt{3}} I_A[w] - \frac{1}{\sqrt{3}} I_B[w]$ $I_B^P[w] = \frac{1}{\sqrt{3}} I_B[w] - \frac{1}{\sqrt{3}} I_C[w]$ $I_C^P[w] = \frac{1}{\sqrt{3}} I_C[w] - \frac{1}{\sqrt{3}} I_A[w]$

Differential and Restraint Current Calculations

Two Winding Transformer

Differential currents are calculated as follows:

$$Id_A = I_A^C[w1] + I_A^C[w2]$$

$$Id_B = I_B^C[w1] + I_B^C[w2]$$

$$Id_C = I_C^C[w1] + I_C^C[w2]$$

Restraint currents are calculated as follows:

$$Ir_A = \max \{ |I_A^C[w1]|, |I_A^C[w2]| \}$$

$$Ir_B = \max \{ |I_B^C[w1]|, |I_B^C[w2]| \}$$

$$Ir_C = \max \{ |I_C^C[w1]|, |I_C^C[w2]| \}$$

where Id_A , Id_B and Id_C are the phase differential currents, and Ir_A , Ir_B , and Ir_C are the phase restraint currents.

Three-Winding Transformer

Differential currents are calculated as follows:

$$Id_A = I_A^C[w1] + I_A^C[w2] + I_A^C[w3]$$

$$I_{dB} = I_B^C[w1] + I_B^C[w2] + I_B^C[w3]$$

$$I_{dC} = I_C^C[w1] + I_C^C[w2] + I_C^C[w3]$$

Restraint currents are calculated as follows:

$$I_{rA} = \max \{ |I_A^C[w1]|, |I_A^C[w2]|, |I_A^C[w3]| \}$$

$$I_{rB} = \max \{ |I_B^C[w1]|, |I_B^C[w2]|, |I_B^C[w3]| \}$$

$$I_{rC} = \max \{ |I_C^C[w1]|, |I_C^C[w2]|, |I_C^C[w3]| \}$$

EXAMPLE

Consider a typical Wye/Delta power transformer with the following data:

..\Transformer\Winding 1			..\Transformer\Winding 2		
Item Name	Value	Unit	Item Name	Value	Unit
Signal Input	CT Bank 1 -J1		Signal Input	CT Bank 2 -K1	
Rated MVA	5.000	MVA	Rated MVA	5.000	MVA
Nominal Ph-Ph Voltage	13.800	kV	Nominal Ph-Ph Voltage	4.16	kV
Connection	Wye		Connection	Delta	
Grounding	Not Within Zone		Angle With Respect To W1	30° Lag	
Wndg Resistance (3-ph)	10.0001	ohms	Grounding	Not Within Zone	
			Wndg Resistance (3-ph)	10.0000	ohms
W 1			W 2		

- Winding 1: CT Bank 1 – J1 = 500/5 CT ratio
- Winding 2: CT Bank 2 – K1 = 1500/5 CT ratio
- Transformer is 50% loaded

Magnitude Compensation

Based on 50% loading the winding currents are calculated as follows:

$$\text{Winding 1 load current: } I_{\text{load}}(W1) = 2.5\text{MVA}/(\sqrt{3} * 13.8\text{kV}) = 104.5 \text{ Amps}$$

$$\text{Winding 2 load current: } I_{\text{load}}(W2) = 2.5\text{MVA}/(\sqrt{3} * 4.16\text{kV}) = 347 \text{ Amps}$$

Since Winding 1 is always magnitude compensation reference, the currents from winding 1, are scaled only to be presented in times Winding 1 CT.

$$M_{W1} = 1, \text{ - magnitude compensation factor for winding 1 - REFERENCE}$$

$$\text{Winding 1 currents} = (M_{W1} * I_{\text{load}}(W1))/CT_{W1} = 104.5/500 = 0.209 \times CT_{W1}$$

Magnitude compensation for winding 2 currents:

$$M_{W2} = (CT_{W2} * V_{W2}) / (CT_{W1} * V_{W1}) = (1500 * 4.16) / (500 * 13.8) = 0.9043, \text{ -magnitude comp. factor for Winding 2 currents}$$

$$\text{Winding 2 currents} = (M_{W2} * I_{\text{load}}(W2))/CT_{W2} = (0.9043 * 347) / 1500 = 0.209 \times CT_{W2}$$

To check that the measured currents from both windings will sum-up to zero after applying magnitude compensation, one can perform the following simple calculations:

Phase Shift Compensation

From the transformer example, the phase reference winding is winding 2 (i.e., $w_f = 2$). The phase compensation angle for each winding is then calculated as follows (Rotation = “ABC”):

$$\varphi_{\text{comp}}[1] = -30^\circ - 0^\circ = -30^\circ = 30^\circ \text{ lag}$$

$$\varphi_{\text{comp}}[2] = -30^\circ - (-30^\circ) = 0^\circ$$

The non-reference Wye winding will be rotated by -30° degrees to be in-phase and match the currents from the Delta winding.

Per *figure: Two-winding transformer connections* for phase compensation angle of 30 lag, the relay will use the following phase and zero-sequence compensation equations:

Winding 1 (Wye – grounded neutral):

$$I_A^P[w] = (1/\sqrt{3})I_A[w] - (1/\sqrt{3})I_C[w]$$

$$I_B^P[w] = (1/\sqrt{3})I_B[w] - (1/\sqrt{3})I_A[w]$$

$$I_C^P[w] = (1/\sqrt{3})I_C[w] - (1/\sqrt{3})I_B[w]$$

Winding 2 (Delta):

$$I_A^P[w] = I_A[w]$$

$$I_B^P[w] = I_B[w]$$

$$I_C^P[w] = I_C[w]$$

The complete compensated winding 1 and winding 2 currents would be as follows:

Winding 1

$$I_A^C[w1] = 0.209xCT\angle 0^\circ$$

$$I_B^C[w1] = 0.209xCT\angle 120^\circ \text{ lag}$$

$$I_C^C[w1] = 0.209xCT\angle 240^\circ \text{ lag}$$

Winding 2

$$I_A^C[w2] = 0.209xCT\angle 180^\circ \text{ lag}$$

$$I_B^C[w2] = 0.209xCT\angle 300^\circ \text{ lag}$$

$$I_C^C[w2] = 0.209xCT\angle 60^\circ \text{ lag}$$

The differential and restraint currents would be as follows:

Differential currents:

$$Id_A = 0 \times CT$$

$$Id_B = 0 \times CT$$

$$Id_C = 0 \times CT$$

Restraint currents:

$$Ir_A = 0.209 \times CT$$

$$Ir_B = 0.209 \times CT$$

$$Ir_C = 0.209 \times CT$$

7.7.5 MAGNITUDE, PHASE ANGLE, AND ZERO SEQUENCE COMPENSATION

The complete magnitude, phase angle, and zero sequence compensation is as follows:

Winding 1 compensated currents:

$$I_A^C[w1] = M[w1] * I_A^P[w1]$$

$$I_B^C[w1] = M[w1] * I_B^P[w1]$$

$$I_C^C[w1] = M[w1] * I_C^P[w1]$$

Winding 2 compensated currents:

$$I_A^C[w2] = M[w2] * I_A^P[w2]$$

$$I_B^C[w2] = M[w2] * I_B^P[w2]$$

$$I_C^C[w2] = M[w2] * I_C^P[w2]$$

Winding 3 compensated currents:

$$I_A^C[w3] = M[w3] * I_A^P[w3]$$

$$I_B^C[w3] = M[w3] * I_B^P[w3]$$

$$I_C^C[w3] = M[w3] * I_C^P[w3]$$

where:

- $I_A^C[w]$, $I_B^C[w]$, and $I_C^C[w]$ = magnitude, phase and zero sequence compensated winding phase currents
- $M[w1]$ = magnitude compensation factor for winding 1 (see previous sections)
- $M[w2]$ = magnitude compensation factor for winding 2 (see previous sections)
- $M[w3]$ = magnitude compensation factor for winding 3 (see previous sections)
- $I_A^P[w]$, $I_B^P[w]$, and $I_C^P[w]$ = phase and zero sequence compensated winding phase currents (see earlier)
- The magnitude compensation factor for the reference winding is 1.

7.7.6 DIFFERENTIAL AND RESTRAINT CURRENT CALCULATIONS

Two Winding Transformer

Differential currents are calculated as follows:

$$Id_A = I_A^C[w1] + I_A^C[w2]$$

$$Id_B = I_B^C[w1] + I_B^C[w2]$$

$$Id_C = I_C^C[w1] + I_C^C[w2]$$

Restraint currents are calculated as follows:

$$Ir_A = \max \{ |I_A^C[w1]|, |I_A^C[w2]| \}$$

$$Ir_B = \max \{ |I_B^C[w1]|, |I_B^C[w2]| \}$$

$$Ir_C = \max \{ |I_C^C[w1]|, |I_C^C[w2]| \}$$

where Id_A , Id_B and Id_C are the phase differential currents, and Ir_A , Ir_B , and Ir_C are the phase restraint currents.

Three-Winding Transformer

Differential currents are calculated as follows:

$$Id_A = I_A^C[w1] + I_A^C[w2] + I_A^C[w3]$$

$$Id_B = I_B^C[w1] + I_B^C[w2] + I_B^C[w3]$$

$$I_{dC} = I_C^C[w1] + I_C^C[w2] + I_C^C[w3]$$

Restraint currents are calculated as follows:

$$I_{rA} = \max \{ |I_A^C[w1]|, |I_A^C[w2]|, |I_A^C[w3]| \}$$

$$I_{rB} = \max \{ |I_B^C[w1]|, |I_B^C[w2]|, |I_B^C[w3]| \}$$

$$I_{rC} = \max \{ |I_C^C[w1]|, |I_C^C[w2]|, |I_C^C[w3]| \}$$

EXAMPLE

Consider a typical Wye/Delta power transformer with the following data:

Transformer\Winding 1			Transformer\Winding 2		
Item Name	Value	Unit	Item Name	Value	Unit
Signal Input	CT Bank 1 -J1		Signal Input	CT Bank 2 -K1	
Rated MVA	5.000	MVA	Rated MVA	5.000	MVA
Nominal Ph-Ph Voltage	13.800	kV	Nominal Ph-Ph Voltage	4.16	kV
Connection	Wye		Connection	Delta	
Grounding	Not Within Zone		Angle With Respect To W1	30° Lag	
Wndg Resistance (3-ph)	10.0001	ohms	Grounding	Not Within Zone	
			Wndg Resistance (3-ph)	10.0000	ohms
W 1			W 2		

- Winding 1: CT Bank 1 – J1 = 500/5 CT ratio
- Winding 2: CT Bank 2 – K1 = 1500/5 CT ratio
- Transformer is 50% loaded

Magnitude Compensation

Based on 50% loading the winding currents are calculated as follows:

$$\text{Winding 1 load current: } I_{load}(W1) = 2.5\text{MVA}/(\sqrt{3} * 13.8\text{kV}) = 104.5 \text{ Amps}$$

$$\text{Winding 2 load current: } I_{load}(W2) = 2.5\text{MVA}/(\sqrt{3} * 4.16\text{kV}) = 347 \text{ Amps}$$

Since Winding 1 is always magnitude compensation reference, the currents from winding 1, are scaled only to be presented in times Winding 1 CT.

$$M_{W1} = 1, \text{ - magnitude compensation factor for winding 1 - REFERENCE}$$

$$\text{Winding 1 currents} = (M_{W1} * I_{load}(W1))/CT_{W1} = 104.5/500 = 0.209 \times CT_{W1}$$

Magnitude compensation for winding 2 currents:

$$M_{W2} = (CT_{W2} * V_{W2}) / (CT_{W1} * V_{W1}) = (1500 * 4.16) / (500 * 13.8) = 0.9043, \text{ -magnitude comp. factor for Winding 2 currents}$$

$$\text{Winding 2 currents} = (M_{W2} * I_{load}(W2))/CT_{W2} = (0.9043 * 347) / 1500 = 0.209 \times CT_{W2}$$

To check that the measured currents from both windings will sum-up to zero after applying magnitude compensation, one can perform the following simple calculations:

Phase Shift Compensation

From the transformer example, the phase reference winding is winding 2 (i.e., $w_f = 2$). The phase compensation angle for each winding is then calculated as follows (Rotation = “ABC”):

$$\varphi_{\text{comp}}[1] = -30^\circ - 0^\circ = -30^\circ = 30^\circ \text{ lag}$$

$$\varphi_{\text{comp}}[2] = -30^\circ - (-30^\circ) = 0^\circ$$

The non-reference Wye winding will be rotated by -30° degrees to be in-phase and match the currents from the Delta winding.

Per *figure: Two-winding transformer connections* for phase compensation angle of 30 lag, the relay will use the following phase and zero-sequence compensation equations:

Winding 1 (Wye – grounded neutral):

$$I_A^P[w] = (1/\sqrt{3})I_A[w] - (1/\sqrt{3})I_C[w]$$

$$I_B^P[w] = (1/\sqrt{3})I_B[w] - (1/\sqrt{3})I_A[w]$$

$$I_C^P[w] = (1/\sqrt{3})I_C[w] - (1/\sqrt{3})I_B[w]$$

Winding 2 (Delta):

$$I_A^P[w] = I_A[w]$$

$$I_B^P[w] = I_B[w]$$

$$I_C^P[w] = I_C[w]$$

The complete compensated winding 1 and winding 2 currents would be as follows:

Winding 1

$$I_A^C[w1] = 0.209xCT\angle 0^\circ$$

$$I_B^C[w1] = 0.209xCT\angle 120^\circ \text{ lag}$$

$$I_C^C[w1] = 0.209xCT\angle 240^\circ \text{ lag}$$

Winding 2

$$I_A^C[w2] = 0.209xCT\angle 180^\circ \text{ lag}$$

$$I_B^C[w2] = 0.209xCT\angle 300^\circ \text{ lag}$$

$$I_C^C[w2] = 0.209xCT\angle 60^\circ \text{ lag}$$

The differential and restraint currents would be as follows:

Differential currents:

$$Id_A = 0 \times CT$$

$$Id_B = 0 \times CT$$

$$Id_C = 0 \times CT$$

Restraint currents:

$$Ir_A = 0.209 \times CT$$

$$Ir_B = 0.209 \times CT$$

$$Ir_C = 0.209 \times CT$$

7.7.7 TRANSFORMER TYPES AND PHASE SHIFT COMPENSATION ANGLES

The figures below show standard two-winding and three-winding transformer types, and the phase compensation angles which reference the phase reference winding used by the relay.

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
2W External Correction	1	WYE (gnd 1/2)		0°	Y/y0°	1	WYE (gnd 1/2)		0°
	2	WYE (gnd 2/3) 0°		0°		2	WYE (gnd 2/3) 0°		0°
Y/y180°	1	WYE (gnd 1/2)		180° lag	Y/d30°	1	WYE (gnd 1/2)		30° lag
	2	WYE (gnd 2/3) 180° lag		0°		2	DELTA (gnd 2/3) 30° lag		0°
Y/d150°	1	WYE (gnd 1/2)		150° lag	Y/d210°	1	WYE (gnd 1/2)		210° lag
	2	DELTA (gnd 2/3) 150° lag		0°		2	DELTA (gnd 2/3) 210° lag		0°
Y/d330°	1	WYE (gnd 1/2)		330° lag	D/d0°	1	DELTA (gnd 1/2)		0°
	2	DELTA (gnd 2/3) 330° lag		0°		2	DELTA (gnd 2/3) 0°		0°
D/d60°	1	DELTA (gnd 1/2)		60° lag	D/d120°	1	DELTA (gnd 1/2)		120° lag
	2	DELTA (gnd 2/3) 60° lag		0°		2	DELTA (gnd 2/3) 120° lag		0°
D/d180°	1	DELTA (gnd 1/2)		180° lag	D/d240°	1	DELTA (gnd 1/2)		240° lag
	2	DELTA (gnd 2/3) 180° lag		0°		2	DELTA (gnd 2/3) 240° lag		0°
D/d300°	1	DELTA (gnd 1/2)		300° lag	D/y30°	1	DELTA (gnd 1/2)		0°
	2	DELTA (gnd 2/3) 300° lag		0°		2	WYE (gnd 2/3) 30° lag		330° lag

Figure 142: Two-winding transformer connections

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
D/y150°	1	DELTA (gnd 1/2)		0°	D/y210°	1	DELTA (gnd 1/2)		0°
	2	WYE (gnd 2/3) 150° lag		210° lag		2	WYE (gnd 2/3) 210° lag		150° lag
D/y330°	1	DELTA (gnd 1/2)		0°	Y/z30°	1	WYE (gnd 1/2)		30° lag
	2	WYE (gnd 2/3) 330° lag		30° lag		2	ZIG-ZAG (gnd 2/3) 30° lag		0°
Y/z150°	1	WYE (gnd 1/2)		150° lag	Y/z210°	1	WYE (gnd 1/2)		210° lag
	2	ZIG-ZAG (gnd 2/3) 150° lag		0°		2	ZIG-ZAG (gnd 2/3) 210° lag		0°
Y/z330°	1	WYE (gnd 1/2)		330° lag	D/z0°	1	DELTA (gnd 1/2)		0°
	2	ZIG-ZAG (gnd 2/3) 330° lag		0°		2	ZIG-ZAG (gnd 2/3) 0° lag		0°
D/z60°	1	DELTA (gnd 1/2)		60° lag	D/z120°	1	DELTA (gnd 1/2)		120° lag
	2	ZIG-ZAG (gnd 2/3) 60° lag		0°		2	ZIG-ZAG (gnd 2/3) 120° lag		0°
D/z180°	1	DELTA (gnd 1/2)		180° lag	D/z240°	1	DELTA (gnd 1/2)		240° lag
	2	ZIG-ZAG (gnd 2/3) 180° lag		0°		2	ZIG-ZAG (gnd 2/3) 240° lag		0°
D/z300°	1	DELTA (gnd 1/2)		300° lag					
	2	ZIG-ZAG (gnd 2/3) 300° lag		0°					

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
3W External Correction	1	WYE		0°
	2	WYE 0°		0°
	3	WYE 0°		0°
Y/y0°/d30°	1	WYE		30° lag
	2	WYE 0°		30° lag
	3	DELTA 30° lag		0°
Y/y0°/d210°	1	WYE		210° lag
	2	WYE 0°		210° lag
	3	DELTA 210° lag		0°
Y/y180°/d30°	1	WYE		30° lag
	2	WYE 180° lag		210° lag
	3	DELTA 30° lag		0°
Y/y180°/d210°	1	WYE		210° lag
	2	WYE 180° lag		30° lag
	3	DELTA 210° lag		0°
Y/d30°/y0°	1	WYE		30° lag
	2	DELTA 30° lag		0°
	3	WYE 0°		30° lag
Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
Y/y0°/d150°	1	WYE		150° lag
	2	WYE 0°		150° lag
	3	DELTA 150° lag		0°
Y/y0°/d330°	1	WYE		330° lag
	2	WYE 0°		330° lag
	3	DELTA 330° lag		0°
Y/y180°/d150°	1	WYE		150° lag
	2	WYE 180° lag		330° lag
	3	DELTA 150° lag		0°
Y/y180°/d330°	1	WYE		330° lag
	2	WYE 180° lag		150° lag
	3	DELTA 330° lag		0°
Y/d30°/y180°	1	WYE		30° lag
	2	DELTA 30° lag		0°
	3	WYE 180° lag		210° lag

Figure 143: Three-winding transformer connections

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
Y/d30°/d30°	1	WYE		30° lag	Y/d30°/d150°	1	WYE		30° lag
	2	DELTA 30° lag		0°		2	DELTA 30° lag		0°
	3	DELTA 30° lag		0°		3	DELTA 150° lag		240° lag
Y/d30°/d210°	1	WYE		30° lag	Y/d30°/d330°	1	WYE		30° lag
	2	DELTA 30° lag		0°		2	DELTA 30° lag		0°
	3	DELTA 210° lag		180° lag		3	DELTA 330° lag		60° lag
Y/d150°/y0°	1	WYE		150° lag	Y/d150°/y180°	1	WYE		150° lag
	2	DELTA 150° lag		0°		2	DELTA 150° lag		0°
	3	WYE 0°		150° lag		3	WYE 180° lag		330° lag
Y/d150°/d30°	1	WYE		150° lag	Y/d150°/d150°	1	WYE		150° lag
	2	DELTA 150° lag		0°		2	DELTA 150° lag		0°
	3	DELTA 30° lag		120° lag		3	DELTA 150° lag		0°
Y/d150°/d210°	1	WYE		150° lag	Y/d150°/d330°	1	WYE		150° lag
	2	DELTA 150° lag		0°		2	DELTA 150° lag		0°
	3	DELTA 210° lag		300° lag		3	DELTA 330° lag		180° lag

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
Y/d210°/y0°	1	WYE		210° lag	Y/d210°/y180°	1	WYE		210° lag
	2	DELTA 210° lag		0°		2	DELTA 210° lag		0°
	3	WYE 0°		210° lag		3	WYE 180° lag		30° lag
Y/d210°/d30°	1	WYE		210° lag	Y/d210°/d150°	1	WYE		210° lag
	2	DELTA 210° lag		0°		2	DELTA 210° lag		0°
	3	DELTA 30° lag		180° lag		3	DELTA 150° lag		60° lag
Y/d210°/d210°	1	WYE		210° lag	Y/d210°/d330°	1	WYE		210° lag
	2	DELTA 210° lag		0°		2	DELTA 210° lag		0°
	3	DELTA 210° lag		0°		3	DELTA 330° lag		240° lag
Y/d330°/y0°	1	WYE		330° lag	Y/d330°/y180°	1	WYE		330° lag
	2	DELTA 330° lag		0°		2	DELTA 330° lag		0°
	3	WYE 0°		330° lag		3	WYE 180° lag		150° lag
Y/d330°/d30°	1	WYE		330° lag	Y/d330°/d150°	1	WYE		330° lag
	2	DELTA 330° lag		0°		2	DELTA 330° lag		0°
	3	DELTA 30° lag		300° lag		3	DELTA 150° lag		180° lag

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
Y/d330°/d210°	1	WYE		330° lag	Y/d330°/d330°	1	WYE		330° lag
	2	DELTA 330° lag		0°		2	DELTA 330° lag		0°
	3	DELTA 210° lag		120° lag		3	DELTA 330° lag		0°
D/d0°/d0°	1	DELTA		0°	D/d0°/d60°	1	DELTA		60° lag
	2	DELTA 0°		0°		2	DELTA 0°		60° lag
	3	DELTA 0°		0°		3	DELTA 60° lag		0°
D/d0°/d120°	1	DELTA		120° lag	D/d0°/d180°	1	DELTA		180° lag
	2	DELTA 0°		120° lag		2	DELTA 0°		180° lag
	3	DELTA 120° lag		0°		3	DELTA 180° lag		0°
D/d0°/d240°	1	DELTA		240° lag	D/d0°/d300°	1	DELTA		300° lag
	2	DELTA 0°		240° lag		2	DELTA 0°		300° lag
	3	DELTA 240° lag		0°		3	DELTA 300° lag		0°
D/d0°/y30°	1	DELTA		0°	D/d0°/y150°	1	DELTA		0°
	2	DELTA 0°		0°		2	DELTA 0°		0°
	3	WYE 30° lag		330° lag		3	WYE 150° lag		210° lag

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
D/d0°/y210°	1	DELTA		0°	D/d0°/y330°	1	DELTA		0°
	2	DELTA 0°		0°		2	DELTA 0°		0°
	3	WYE 210° lag		150° lag		3	WYE 330° lag		30° lag
D/d60°/d0°	1	DELTA		60° lag	D/d60°/d60°	1	DELTA		60° lag
	2	DELTA 60° lag		0°		2	DELTA 60° lag		0°
	3	DELTA 0°		60° lag		3	DELTA 60° lag		0°
D/d60°/d240°	1	DELTA		240° lag	D/d60°/y30°	1	DELTA		0°
	2	DELTA 60° lag		180° lag		2	DELTA 60° lag		300° lag
	3	DELTA 240° lag		0°		3	WYE 30° lag		330° lag
D/d60°/y210°	1	DELTA		0°	D/d120°/d0°	1	DELTA		120° lag
	2	DELTA 60° lag		300° lag		2	DELTA 120° lag		0°
	3	WYE 210° lag		150° lag		3	DELTA 0°		120° lag
D/d120°/d120°	1	DELTA		120° lag	D/d120°/d180°	1	DELTA		120° lag
	2	DELTA 120° lag		0°		2	DELTA 120° lag		0°
	3	DELTA 120° lag		0°		3	DELTA 180° lag		300° lag

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
D/d120°/y150°	1	DELTA		0°	D/d120°/y330°	1	DELTA		0°
	2	DELTA 120° lag		240° lag		2	DELTA 120° lag		240° lag
	3	WYE 150° lag		210° lag		3	WYE 330° lag		30° lag
D/d180°/d0°	1	DELTA		180° lag	D/d180°/d120°	1	DELTA		120° lag
	2	DELTA 180° lag		0°		2	DELTA 180° lag		300° lag
	3	DELTA 0°		180° lag		3	DELTA 120° lag		0°
D/d180°/d180°	1	DELTA		0°	D/d180°/d300°	1	DELTA		300° lag
	2	DELTA 180° lag		180° lag		2	DELTA 180° lag		120° lag
	3	DELTA 180° lag		180° lag		3	DELTA 300° lag		0°
D/d180°/y150°	1	DELTA		0°	D/d180°/y330°	1	DELTA		0°
	2	DELTA 180° lag		180° lag		2	DELTA 180° lag		180° lag
	3	WYE 150° lag		210° lag		3	WYE 330° lag		30° lag
D/d240°/d0°	1	DELTA		240° lag	D/d240°/d60°	1	DELTA		240° lag
	2	DELTA 240° lag		0°		2	DELTA 240° lag		0°
	3	DELTA 0°		240° lag		3	DELTA 60° lag		180° lag

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
D/d240°/d240°	1	DELTA		240° lag	D/d240°/y30°	1	DELTA		0°
	2	DELTA 240° lag		0°		2	DELTA 240° lag		120° lag
	3	DELTA 240° lag		0°		3	WYE 30° lag		330° lag
D/d240°/y210°	1	DELTA		0°	D/d300°/d0°	1	DELTA		300° lag
	2	DELTA 240° lag		120° lag		2	DELTA 300° lag		0°
	3	WYE 210° lag		150° lag		3	DELTA 0°		300° lag
D/d300°/d180°	1	DELTA		300° lag	D/y30°/d60°	1	DELTA		0°
	2	DELTA 300° lag		0°		2	WYE 30° lag		330° lag
	3	DELTA 180° lag		120° lag		3	DELTA 60° lag		300° lag
D/y30°/d240°	1	DELTA		0°	D/y30°/y30°	1	DELTA		0°
	2	WYE 30° lag		330° lag		2	WYE 30° lag		330° lag
	3	DELTA 240° lag		120° lag		3	WYE 30° lag		330° lag
D/y30°/y210°	1	DELTA		0°	D/y150°/d0°	1	DELTA		0°
	2	WYE 30° lag		330° lag		2	WYE 150° lag		210° lag
	3	WYE 210° lag		150° lag		3	DELTA 0°		0°

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
D/y150°/d120°	1	DELTA		0°	D/y150°/d180°	1	DELTA		0°
	2	WYE 150° lag		210° lag		2	WYE 150° lag		210° lag
	3	DELTA 120° lag		240° lag		3	DELTA 180° lag		180° lag
D/y150°/d300°	1	DELTA		0°	D/y150°/y150°	1	DELTA		0°
	2	WYE 150° lag		210° lag		2	WYE 150° lag		210° lag
	3	DELTA 300° lag		60° lag		3	WYE 150° lag		210° lag
D/y150°/y330°	1	DELTA		0°	D/y210°/d0°	1	DELTA		0°
	2	WYE 150° lag		210° lag		2	WYE 210° lag		150° lag
	3	WYE 330° lag		30° lag		3	DELTA 0°		0°
D/y210°/d60°	1	DELTA		0°	D/y210°/d240°	1	DELTA		0°
	2	WYE 210° lag		150° lag		2	WYE 210° lag		150° lag
	3	DELTA 60° lag		300° lag		3	DELTA 240° lag		120° lag
D/y210°/y30°	1	DELTA		0°	D/y210°/y210°	1	DELTA		0°
	2	WYE 210° lag		150° lag		2	WYE 210° lag		150° lag
	3	WYE 30° lag		330° lag		3	WYE 210° lag		150° lag

Transformer type	Wdg.	Connection	Voltage phasors	Phase shift	Transformer type	Wdg.	Connection	Voltage phasors	Phase shift
D/y330°/d0°	1	DELTA		0°	D/y330°/d120°	1	DELTA		0°
	2	WYE 330° lag		30° lag		2	WYE 330° lag		30° lag
	3	DELTA 0°		0°		3	DELTA 120° lag		240° lag
D/y330°/d180°	1	DELTA		0°	D/y330°/d300°	1	DELTA		0°
	2	WYE 330° lag		30° lag		2	WYE 330° lag		30° lag
	3	DELTA 180° lag		180° lag		3	DELTA 300° lag		60° lag
D/y330°/y150°	1	DELTA		0°	D/y330°/y330°	1	DELTA		0°
	2	WYE 330° lag		30° lag		2	WYE 330° lag		30° lag
	3	WYE 150° lag		210° lag		3	WYE 330° lag		30° lag
Y/z30°/z30°	1	WYE		30° lag	Y/y0°/y0°	1	WYE		0°
	2	ZIG-ZAG 30° lag		0°		2	WYE 0°		0°
	3	ZIG-ZAG 30° lag		0°		3	WYE 0°		0°

7.7.8 TRANSFORMER STATUS DETECTION

The relay can be set to detect the status of the protected transformer when energized or de-energized. The detection of the transformer energized/de-energized status is set to produce operands, which can be used for transformer monitoring applications, and to trigger an LED (operand set by the factory to trigger LED “Transformer De-Energized”). The transformer status is detected based on measured voltage, or breaker status, which can be supervised by a current above the programmed minimum level.

Detection by breaker status

When the 'b' auxiliary contacts from all switching devices (which can be used to energize the transformer) are assigned to the ALL BREAKERS OPEN setpoints, closed contacts indicate de-energization. When Current Supervision is enabled, any current exceeding the minimum energization current indicates energization.

Detection by voltage

When energization sensing by voltage is enabled, any voltage drops below the minimum energization voltage indicates de-energization. However, if Current Supervision is enabled, any of the winding currents that exceed the minimum energization current shows that the transformer is being energized.

Current Supervision

The Current Supervision is set to support the decision for the Transformer Energized or De-Energized status. If all winding currents drop below the minimum transformer magnetizing current after transformer de-energization, this will be added to the decision from the selected sensing method (Opened Breakers, or Voltage), and will indicate de-energization. Any current exceeding the minimum energization current will indicate energization.

Path: Setpoints > System > Transformer > Xfmr Status Detection

SENSING BY BREAKERS OPEN

Range: Disabled, Enabled

Default: Disabled

This method of sensing indicates that when all transformer breakers are detected open, the transformer must be de-energized. For a more secure detection, the breakers open detection can be supervised by the detection of the minimum current, when the Current Supervision setpoint is enabled.

ALL BREAKERS OPEN

Range: Off, Any FlexLogic operand

Default: Off

Select the FlexLogic operand from the list representing to assert a flag when all transformer breakers are open. This can be "52b" contacts from the transformer breakers wired in series before connected to the relay, or another FlexLogic operand (Virtual Output) becoming high upon the open status of all breakers.

SENSING BY VOLTAGE

Range: Disabled, Ph VT Bank 1-J2, Ax VT Bank1-J2

Default: Disabled

Select Ph VT Bnk1-J2 to detect the transformer status if all three-phase VTs are connected to the phase VT terminals on the relay. Select Ax VT Bnk1-J2 if only one voltage input is available from the system, and it is connected to Vaux terminals of the voltage bank J2. In order for the relay to detect the transformer status accurately, the VTs must be placed within the differential zone of protection between the Breaker and the winding. If the VTs are placed outside the zone of protection, the transformer status will not be correct. Even when the breaker is open, the relay can show the Transformer Energized status.

Note:

The transformer status detection will work even if only one voltage input is available from the power system. In such cases, the voltage input must be connected to the appropriate phase voltage terminals on the relay. Since the other two voltages per the logic diagram will be zero, the transformer de-energized status will be detected when the magnitude of the connected single voltage input is below the minimum voltage setting.

MINIMUM VOLTAGE

Range: 0.50 to 0.99 x VT in steps of 0.01 x VT

Default: 0.85 x VT

Select the minimum voltage level required for the energized/de-energized transformer status. Note that during faults the voltage tends to decrease. If the voltage stays below the minimum voltage for more than 50 ms, the transformer will show the transformer de-energized status. This situation can be avoided if Current Supervision is set to “Enabled”. In this case, even if all the voltages collapse below the minimum voltage level, the transformer will still show energized, because during fault conditions at least one phase will measure substantial current.

Note:

When Sensing by Voltage is set to Ph VT Bnk1-J1, the relay calculates delta voltages, and compares them against the specified minimum voltage threshold given in times VT. If Wye is programmed for phase VT connection, the VT unit is obtained by multiplying the programmed secondary voltage through the VT ratio and $\sqrt{3}$. If Delta is programmed for phase VT connection, multiplication of $\sqrt{3}$ is not necessary.

Note:

When Sensing by Voltage is set to Ax VT Bnk1-J2, the minimum voltage threshold applies to the voltage measured at the auxiliary voltage input from the J2 terminals..

CURRENT SUPERVISION

Range: Disabled, Enabled

Default: Disabled

Current supervision can be used to add another element into one or another sensing mechanism for detecting the Transformer Energized, or Transformer De-Energized status. When “Enabled” the relay scans all the winding currents and compares the measurements against the programmed setpoint “Minimum Current” level.

MINIMUM CURRENT

Range: 0.020 to 0.500 x CT in steps of 0.001

Default: 0.050 x CT

Select the minimum current, below which the transformer is considered de-energized. Current supervision alone cannot change the Transformer De-Energized status unless all transfer breakers are open or the voltage drops below the Minimum Voltage level. Note that if no load is connected to a transformer which has been energized, the current transformers from the closed breaker will detect only the transformer magnetizing current. In order to have Transformer energized status supervised by current, the level of the minimum current must be below the transformer magnetizing current.

When Enabled, a current level (< Minimum Current) alone does not change the Transformer De-Energized status unless all transformer breakers are open or voltage drops below Minimum Voltage level. Moreover, when Current Supervision is enabled, neither All Breakers Open nor a voltage less than the Minimum Voltage can change the Transformer De-Energized status unless current falls below the Minimum Current level.

When Current Supervision is Disabled, transformer De-Energized status monitoring is based on the All Breakers Open condition or voltage less than Minimum Voltage condition.

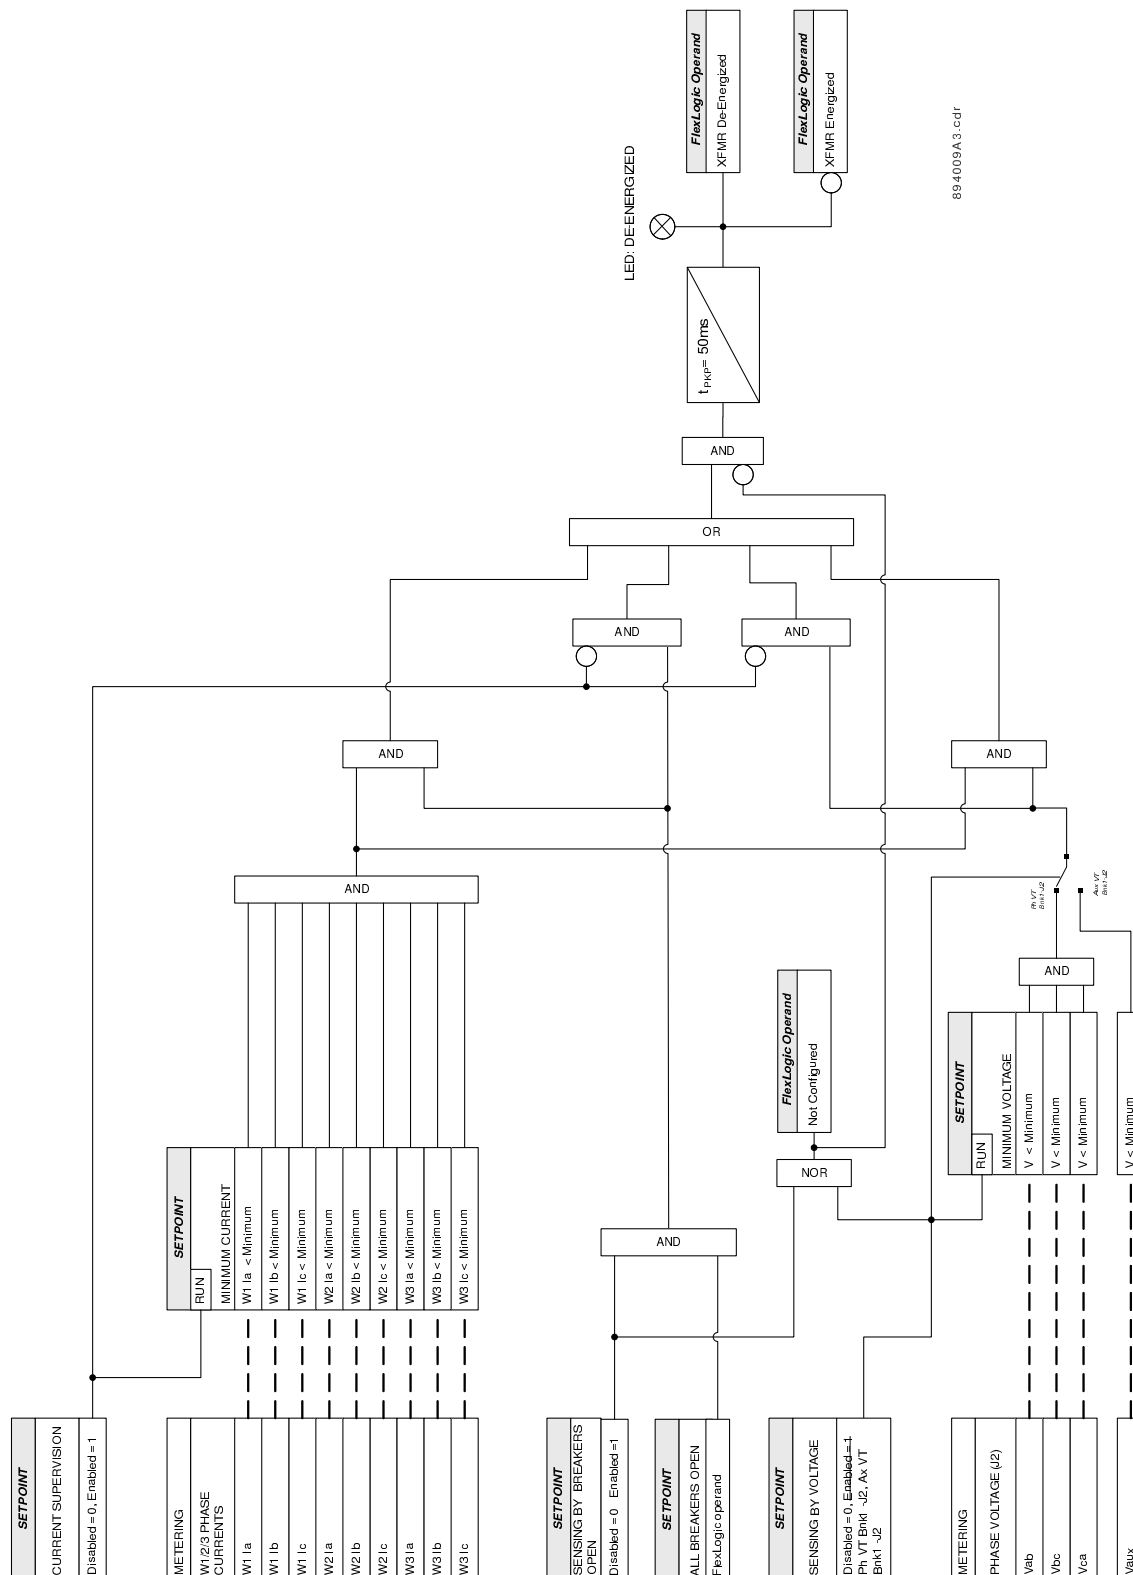


Figure 144: Transformer Status Detection Logic Diagram

7.7.9 THERMAL INPUTS

The relay can be set to monitor the hottest-spot winding temperature, the aging acceleration factor and the transformer insulation life. In order for the relay to perform the correct calculations, you need to enter transformer

data and program RTD inputs for measuring ambient and top-oil temperatures. The following menu shows the selections for ambient and top-oil temperatures.

Path: Setpoints > System > Transformer > Thermal Inputs

WINDING CURRENTS

Range: CT Bank1-J1, CT Bank 2 – K1, CT Bank 3 –K2

Default: CT Bank 1-J1

Select the bank representing the currents (loading) of the winding to which the thermal elements are applied.

AMBIENT TEMPERATURE

Range: Monthly Average, RTD 1, RTD 2....RTD x

Default: Monthly Average

Select *RTD input* if the ambient temperature is to be measured directly. Select the **Monthly Average** setting and enter an average temperature for every month of the year, if direct ambient temperature measurement is not available.

Note:

The setpoints for average monthly temperatures will show on the screen only when the **Monthly Average** setting is selected. In all other cases, these setpoints will be hidden.

AMBIENT TEMPERATURE AVG - Jan to Dec

Range: -60°C to 60°C (-76°F to 140°F) in steps of 1°C

Default: Jan= -20, Feb= -20, Mar= -10, Apr= 10, May= 20, Jun= 30, Jul= 30, Aug= 30, Sep= 20, Oct= 10, Nov= 10, Dec= -10

TOP-OIL TEMPERATURE

Range: Computed, RTD 1, RTD 2....RTD x

Default: Computed

Select RTD input for direct measurement of top-oil temperature. If such input is not available, select the setting "Computed".

Note:

Refer to SETPOINTS/RTD Temperature, on how to select RTD, to be used for measuring ambient and top-oil temperatures.

7.7.10 ON-LOAD TAP CHANGER

This section contains the settings to configure the tap position input. The relay offers tap position detection by monitoring either a resistive input from the tap changer control circuitry, a dcma analog input, or by Binary Coded Decimal (BCD) inputs. Based on the detected tap, the relay dynamically corrects for CT ratio mismatch resulting from the changes of the voltage ratio of the transformer. Thus, the percent differential function of the device can be set for greater sensitivity.

Tap detection using Resistive Input

A typical tap position input layout is shown in the figure: Tap position input. Minimum tap position and minimum tap voltage correspond to the TAP 1 label in the figure.

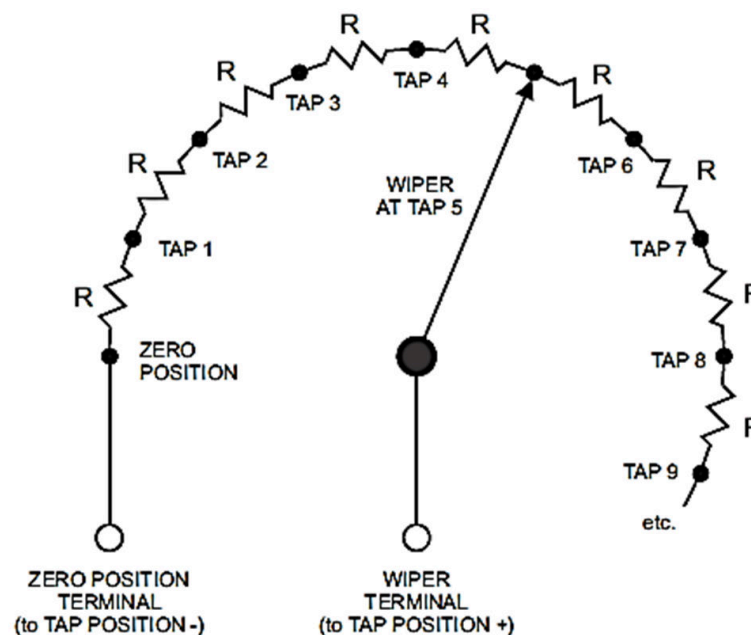


Figure 145: Tap position input

In this method of detection, the resistive output from the tap changer is connected to the Ohms input on the relay. The maximum resistance supported by the Ohms input is 5.1k Ω . The user defines the minimum and maximum tap, voltage increment per tap, and the Ohms per tap.

Tap detection using dcmA analog input

In this method, the user selects Analog Input 1 dedicated for detection of DC milliamp value corresponding to a tap position. To detect the tap, the relay measures the dcmA current at the terminal of the Analog Input 1 and compares it to the corresponding dcmA current computed for each tap.

Tap detection using BCD input

The Binary Coded Decimal (BCD) is another way of detecting tap position by using the combination of six bits each driven by contact input. The user wires and selects the contact input per bit number. Each combination of six bits corresponds to a certain tap position. Refer to the following table: *All BCD combinations supported by the relay:*

Path: **Setpoints > Monitoring > Transformer > Tap Changer**

TAP POSITION DETECTION

Range: Disabled, Enabled

Default: Disabled

TC WINDING CURRENTS

Range: None, J1, K1, K2

Default: None

Enter the CT bank associated with the winding with tap changer. Enter 'None' if the transformer is not equipped with a tap changer. Enter 'None' if automatic magnitude compensation based on tap position used for the differential protection is not needed. The setting "None" can be selected in cases where either the transformer is not equipped with Tap Changer, or it is equipped with Tap Changer, but it is not desired to automatically compensate winding currents forming the differential current in the transformer differential protection, or in cases where the differential protection is not used at all.

All transformer windings from 845 are associated with CT bank inputs. Depending on 845 ordering, the following CT banks represent the winding currents:

1. 845 orders for two-winding transformers without voltage inputs:
 - K1 CT bank is used for Winding 1
 - K2 CT bank is used for Winding 2
2. 845 orders for two-winding transformers with voltage inputs:
 - J1 CT bank is used for Winding 1
 - K1 CT bank is used for Winding 2
3. 845 orders for three-winding transformers (voltage inputs always included):
 - J1 CT bank is used for Winding 1
 - K1 CT bank is used for Winding 2
 - K2 CT bank is used for Winding 3

Note:

If the Tap Changer setpoint TC Winding Currents is set to J1, K1, or K2, the computed tap position voltage will be used for automatic magnitude mismatch compensation for the winding represented by the same CT bank currents. Otherwise, if the setpoint TC Winding Currents is set to *None*, the mismatch magnitude computation is not automatically updated to include the new transformation ratio. In such cases, the relay may display differential current, where this current will be higher for taps far away from the tap representing the nominal winding voltage, and it will be lower for taps closer to the nominal voltage tap. It is recommended to increase the minimum PKP setting of the Percent Differential characteristic to be above the maximum differential current that can be seen at either Maximum tap, or Minimum tap.

TAP DETECTION INPUT

Range: BCD, Ohms In 1, Analog Ip 1

Default: BCD

Select either BCD (Binary Coded Decimals), or Ohms In 1 or Analog Ip 1 input for detection of the tap positions. The Ohms input provides maximum total resistance of up to 5.1 kΩ. For example, the maximum resistance increment per tap for a 33-position tap changer should not exceed 151 Ω. If Analog In 1 is selected, the relay measures DC mA current, and detects the tap position according to the selection for **DCmA at Min Tap**, and **DCmA at Max Tap** setpoints.

Note:

If Analog Input 1 is selected as the tap detection input, then Analog Input 1 will not be available for use in any other application. The Analog Input 1 is excluded from the list of analog inputs, and its range is forced to 0.000 – 20.000 mA. The Tap changer monitors the measured μA . When the total number of taps per the tap changer setup is computed, the tap position is detected based on minimum tap corresponding to the measured **DCmA at MIN TAP**, maximum tap corresponding to the measured **DCmA at MAX TAP**, and the μA step obtained by dividing the total μA of **DCmA at MIN TAP** and **DCmA at MAX TAP** by the total number of taps.

MIN TAP

Range: -19 to +35 in steps of 1

Default: -16

This setting defines the minimum tap from the tap changer. The relay uses the setting to signal when the minimum tap is reached.

NEUTRAL TAP

Range: -17 to +37 in steps of 1

Default: 0

This setting defines the neutral tap position. The relay uses the setting to signal when the neutral tap is reached.

MAX TAP

Range: 0 to +39 in steps of 1

Default: +16

This setting defines the maximum tap from the tap changer. The relay uses this setting to signal when the maximum tap is reached.

MIN TAP VOLTAGE

Range: 0.01 to 20000.00 kV in steps of 0.01 kV

Default: 61.00 kV

Enter the voltage at the minimum position

VOLTAGE INCREMENT PER TAP

Range: 0.01 to 20.00 kV in steps of 0.01 kV

Default: 0.50 kV

Enter the voltage increment per tap change.

Ohms at MIN TAP

Range: 0 to 5100 Ohms in steps of 1 Ohm

Default: 33 Ohms

Enter the resistance in Ohms corresponding to the minimum tap. This setting is used only when Ohms input is selected as "Tap Detection Input".

Ohms at MAX TAP

Range: 0 to 5100 Ohms in steps of 1 Ohm

Default: 1089 Ohms

Enter the resistance in Ohms corresponding to the maximum tap. This setting is used only when Ohms input is selected as "Tap Detection Input".

DCmA at MIN TAP

Range: 0.000 to 20.000 mA in steps of 0.001 mA

Default: 4.000 mA

Enter the DCmA current corresponding to the minimum tap. This setting is used only when Analog In 1 is selected as "Tap Detection Input".

DCmA at MAX TAP

Range: 0.000 to 20.000 mA in steps of 0.001 mA

Default: 18.000 mA

Enter the DCmA current corresponding to the maximum tap. This setting is used only when Analog In 1 is selected as "Tap Detection Input".

BCD BIT 1- 5 INPUT

Range: Off, Contact Input 1(X), Virtual Input 1(X), Remote Input 1(X)

Default: Off

The six BCD inputs require selection of contact inputs, virtual inputs, or remote inputs. The tap position is detected by the state combination of high/low bits received from the tap changer mechanism.

BCD BIT 6 INPUT:

Range: Off, Contact Input 1(X), Virtual Input 1(X), Remote Input 1(X)

Default: Off

This input provides the configuration of the BCD Bit 6 input. The tap position provided by the transformer can be either positive from 1 to 39, or positive and negative from -19 to 19.

BCD BIT 6 input provides the configuration of the positive BCD BIT 6 or the sign (-) of the BCD code.

The selection of BCD BIT 6 working mode is made according to the TAP MIN setting.

When the TAP MIN setpoint is configured with a negative value, the BCD BIT 6 will provide the sign(-) of the BCD.

Hence, the maximum range for BCD tap detection of negative and positive taps goes from -19 to +19.

When, TAP MIN setting is positive the BCD BIT 6 INPUT provides the BCD 20 code. As a result, the full BCD range goes from 1 to 39.

INVERSE TAP POSITIONS

Range: Disabled, Enabled

Default: Disabled

When disabled, increasing the tap position increases turns and hence the winding voltage, used also for automatic compensation of the currents mismatch, which otherwise could be seen as differential current upon changing tap. This usually is the case when the OLTC(On-Load Tap Changer) is installed on the winding connected to the load.

When enabled, increasing the tap position will decrease the ampere-turns of the winding. When the OLTC is installed on the winding connected to the source, increasing the tap will have to decrease the turns, to maintain constant voltage at the secondary winding connected to load. This usually is the case when the OLTC is installed on the winding connected to the source.

Binary Coded Decimal (BCD) inputs

To configure the BCD decoder inputs into an I/O card, you must program the BCD BIT x INPUT setpoints.

- With 4 BCD bits programmed, only 9 tap positions can be detected.
- Five BCD bits programmed can be used for detection of up to 19 tap positions.
- With all 6 BCD bits programmed, the relay can detect up to 39 tap positions.

The physical connection between the output BCD decoder and the I/O card (for five BCD bits programmed) is shown in the next figure:

The selection of the suitable setting depends on the customer's criteria. In both cases, when the BCD format is chosen, the neutral tap position must be entered.

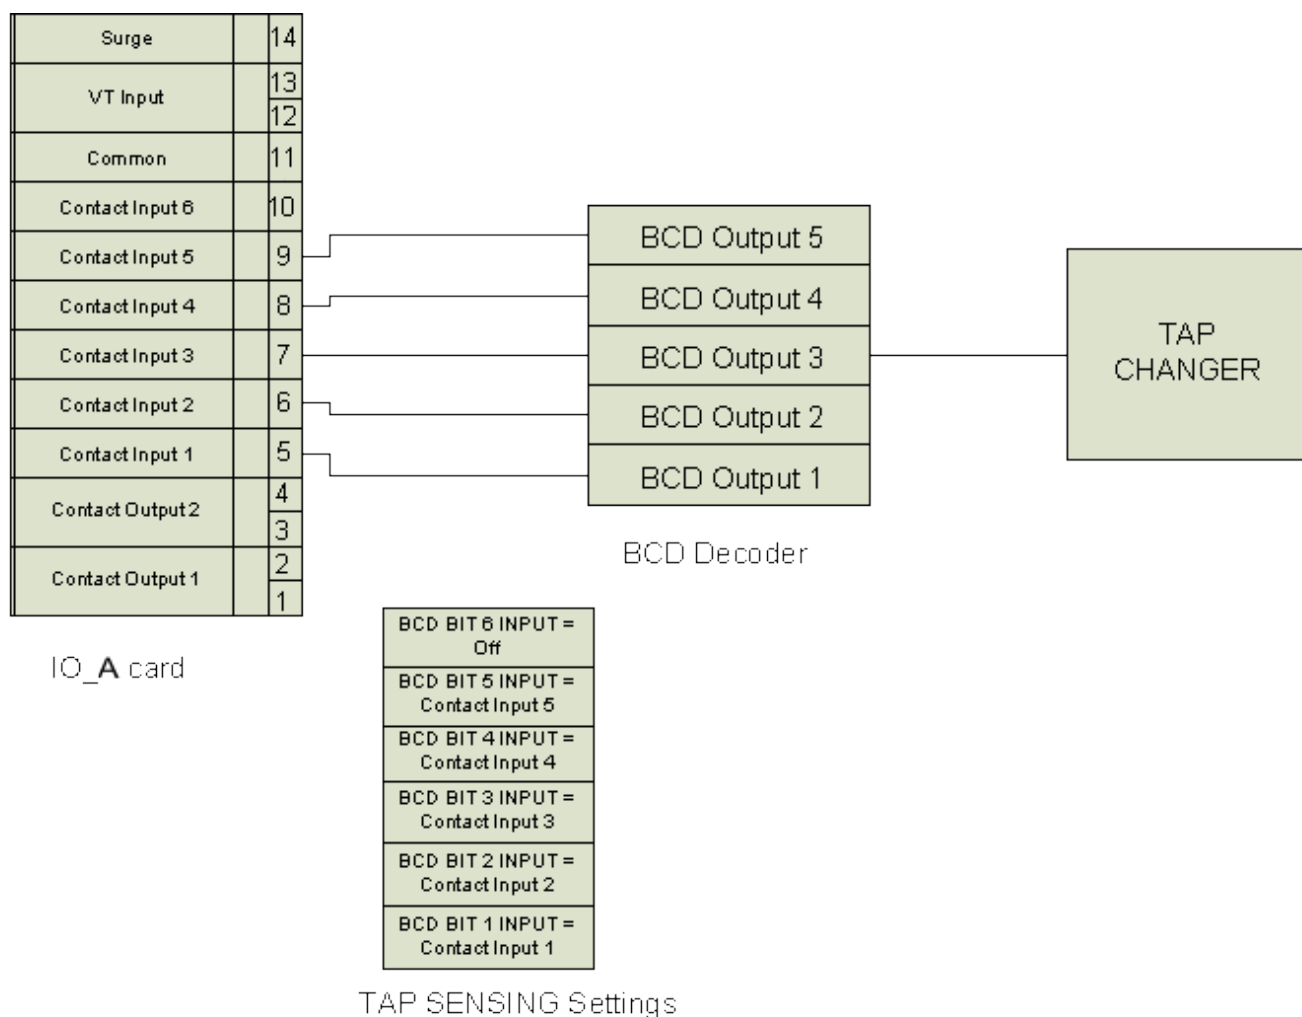


Figure 146: An example of BCD decoder connections to an IO_A card for up to 19 taps

All BCD combinations supported by the relay

MIN TAP	BCD bit 6 Input	BCD bit 5 Input	BCD bit 4 Input	BCD bit 3 Input	BCD bit 2 Input	BCD bit 1 Input	TAP Position
+Tap	0	0	0	0	0	0	0
+Tap	0	0	0	0	0	1	1
+Tap	0	0	0	0	1	0	2
+Tap	0	0	0	0	1	1	3
+Tap	0	0	0	1	0	0	4
+Tap	0	0	0	1	0	1	5
+Tap	0	0	0	1	1	0	6
+Tap	0	0	0	1	1	1	7
+Tap	0	0	1	0	0	0	8
+Tap	0	0	1	0	0	1	9
+Tap	0	0	1	0	1	0	invalid
+Tap	0	0	1	0	1	1	invalid
+Tap	0	0	1	1	0	0	invalid

MIN TAP	BCD bit 6 Input	BCD bit 5 Input	BCD bit 4 Input	BCD bit 3 Input	BCD bit 2 Input	BCD bit 1 Input	TAP Position
+Tap	0	0	1	1	0	1	invalid
+Tap	0	0	1	1	1	0	invalid
+Tap	0	0	1	1	1	1	invalid
+Tap	0	1	0	0	0	0	10
+Tap	0	1	0	0	0	1	11
+Tap	0	1	0	0	1	0	12
+Tap	0	1	0	0	1	1	13
+Tap	0	1	0	1	0	0	14
+Tap	0	1	0	1	0	1	15
+Tap	0	1	0	1	1	0	16
+Tap	0	1	0	1	1	1	17
+Tap	0	1	1	0	0	0	18
+Tap	0	1	1	0	0	1	19
+Tap	0	1	1	0	1	0	invalid
+Tap	0	1	1	0	1	1	invalid
+Tap	0	1	1	1	0	0	invalid
+Tap	0	1	1	1	0	1	invalid
+Tap	0	1	1	1	1	0	invalid
+Tap	0	1	1	1	1	1	invalid
+Tap	1	0	0	0	0	0	20
+Tap	1	0	0	0	0	1	21
+Tap	1	0	0	0	1	0	22
+Tap	1	0	0	0	1	1	23
+Tap	1	0	0	1	0	0	24
+Tap	1	0	0	1	0	1	25
+Tap	1	0	0	1	1	0	26
+Tap	1	0	0	1	1	1	27
+Tap	1	0	1	0	0	0	28
+Tap	1	0	1	0	0	1	29
+Tap	1	0	1	0	1	0	invalid
+Tap	1	0	1	0	1	1	invalid
+Tap	1	0	1	1	0	0	invalid
+Tap	1	0	1	1	0	1	invalid
+Tap	1	0	1	1	1	0	invalid
+Tap	1	0	1	1	1	1	invalid
+Tap	1	1	0	0	0	0	30
+Tap	1	1	0	0	0	1	31
+Tap	1	1	0	0	1	0	32
+Tap	1	1	0	0	1	1	33
+Tap	1	1	0	1	0	0	34
+Tap	1	1	0	1	0	1	35
+Tap	1	1	0	1	1	0	36

MIN TAP	BCD bit 6 Input	BCD bit 5 Input	BCD bit 4 Input	BCD bit 3 Input	BCD bit 2 Input	BCD bit 1 Input	TAP Position
+Tap	1	1	0	1	1	1	37
+Tap	1	1	1	0	0	0	38
+Tap	1	1	1	0	0	1	39
+Tap	1	1	1	0	1	0	invalid
+Tap	1	1	1	0	1	1	invalid
+Tap	1	1	1	1	0	0	invalid
+Tap	1	1	1	1	0	1	invalid
+Tap	1	1	1	1	1	0	invalid
+Tap	1	1	1	1	1	1	Invalid
....		...	...	...	...	...	...
-Tap	0	0	0	0	0	1	+1
-Tap	0	0	0	0	0	0	0
-Tap	1	0	0	0	0	0	0
-Tap	1	0	0	0	0	1	-1
-Tap	1	0	0	0	1	0	-2
...	...	...	...	...	...	...	...
-Tap	1	1	1	0	0	1	-19

7.8 BREAKERS

The status of each winding breaker is detected by monitoring the state of either one, or two contact inputs. We recommend you monitor the status of the breaker using both breaker auxiliary contacts 52a, and 52b. However using only one of them is also acceptable.

The breaker connection/disconnection to/from the power system is provided by monitoring the contact input **BKR CONNECTED**. If the contact input is asserted, the breaker is considered to be connected to the primary system. When the breaker is determined to be disconnected, the breaker state is shown to be neither open, nor closed. The trolley is integrated with a circuit breaker (CB), which works as a Disconnect Switch. CB Trolley status based on the contact input selected under the **CONNECTED** and **BKR TROLLEY** setpoints.

Path: Setpoints > System > Breakers

NAME

Range: Up to 13 alphanumeric characters

Default: BKRX

CONTACT INPUT 52a

Range: Off, Any FlexLogic operand

Default: Off

Selects the Contact Input connected to the Breaker auxiliary contact 52a.

CONTACT INPUT 52b

Range: Off, Any FlexLogic operand

Default: Off

Selects the Contact Input connected to the Breaker auxiliary contact 52b.

CONNECTED

Range: Off, Any FlexLogic operand

Default: Off

Select a contact input to show whether the breaker is connected (Racked-in, or disconnect switches switched-on), or disconnected (racked-out, or disconnect switches switched-off) from the system.

BKR TROLLEY

Range: Off, Any FlexLogic operand

Default: Off

Select a contact input to show whether the Breaker Trolley is connected or disconnected from the system.

TRIP RELAY SELECT

Range: Off, Any Output Relay

Default: Relay 1

This setting is typically available for two or more breaker applications. For single breaker applications, the setting is hidden and trip relay selection is defaulted to Relay 1. Any output relay from the list of available output relays can be programmed for breaker tripping action.

CLOSE RELAY SELECT

Range: Off, Relay X

Default: Relay 2

This setting is typically available for two or more breaker applications. For single breaker applications, the setting is hidden and close relay selection is defaulted to Relay 2. Any output relay from the list of available output relays can be programmed for breaker closing action.

Breaker status depending on availability of contacts 52a and 52b

52a Contact Configured	52b Contact Configured	Breaker Status	
		Open	Closed
Yes	Yes	52a contact open 52b contact closed	52a contact closed 52b contact open
Yes	No	52a contact open	52a contact closed
No	Yes	52b contact closed	52b contact open
No	No	Breaker Not Configured	Breaker Not Configured

Breaker status with both contacts 52a and 52b configured

52a Contact Configured	52b Contact Configured	Breaker Status
Off	On	BKR Opened
On	Off	BKR Closed
On	On	BKR Unknown State
Off	Off	BKR Unknown State

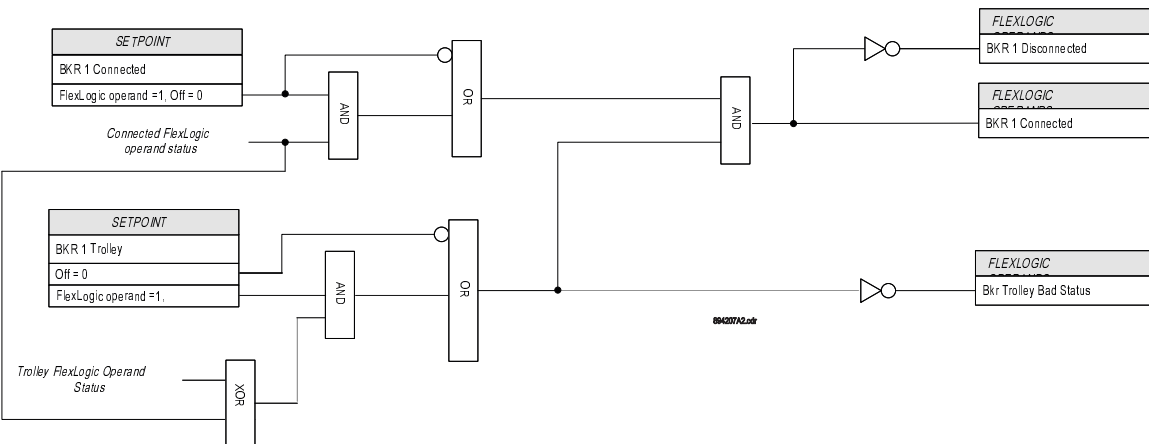


Figure 147: Breaker Connected/Disconnected (Racked-In/Racked-Out) Detection

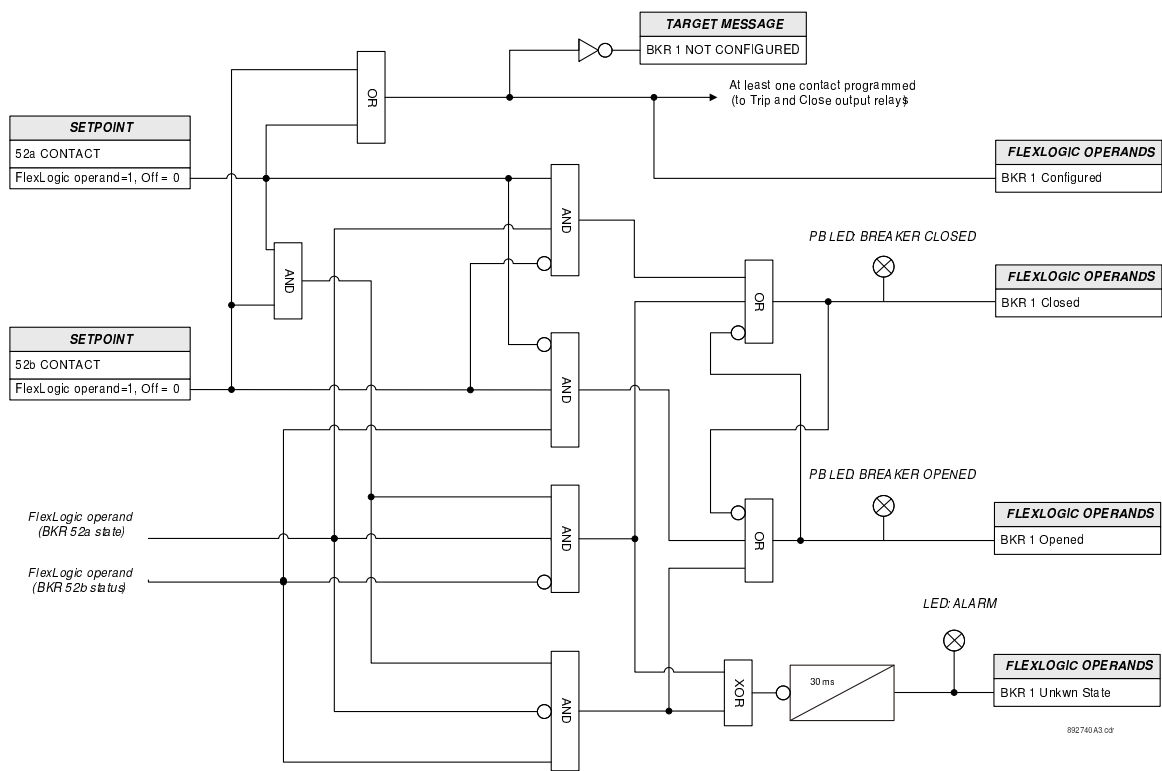


Figure 148: Breaker State Detection logic diagram

7.9 SWITCHES

The Single Line Diagram (SLD) relays can be configured with up to 9 disconnect switches. The disconnect switch detection is performed by monitoring the state/states of either one or preferably two contact inputs 89a and 89b. Monitoring the status of the switch using both auxiliary contacts 89a, and 89b is recommended, however using only one of them is also possible. When both contacts are programmed, the switch can be monitored for state discrepancy, i.e. both auxiliary contacts OFF, or both auxiliary contacts ON during operation. Discrepancy Alarm Delay can be programmed to reflect the transition of the switch during operation from Closed to Opened, and Opened to Closed. If no auxiliary contact discrepancy is detected after the time delay expires, the switch will be in one of its normal states, i.e. Opened or Closed. However, if contact inputs discrepancy is detected after the time delay expires, the relay will issue a SW1(9) Discrepancy target message and illuminate the ALARM LED. The switch discrepancy condition can be reset by the operand assigned under Reset Alarm setpoint, providing both contact inputs 89a and 89b show normal states on the relay.

Path: *Setpoints > System > Switches > Switch 1(9)*

NAME

Range: 13 alphanumeric characters

Default: SW 1

Assign a user-defined name to the disconnect switch. This name is used in the SLD, flash messages related to disconnect switch 1, and the event recorder.

CONTACT INPUT 89a

Range: Off, Any FlexLogic operand

Default: Off

Select an operand (usually NO aux. contact wired to contact input in the relay) to reflect the status of the Disconnect Switch auxiliary contact 89a.

CONTACT INPUT 89b

Range: Off, Any FlexLogic operand

Default: Off

Select an operand (usually NC auxiliary contact wired to contact input in the relay) to reflect the status of the Disconnect Switch auxiliary contact 89b.

ALARM DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

This setting specifies the required time interval to overcome transient disagreement between the 89a and 89b auxiliary contacts during disconnect switch operation. If transient disagreement still exists after this time has expired, SW1(9) Discrepancy FlexLogic operand is asserted for alarm and/or blocking purposes.

RESET ALARM

Range: Off, Any FlexLogic operand

Default: Off

Select an operand from the list of FlexLogic operands, which when asserted resets the Switch Discrepancy state. Please note that resetting the discrepancy alarm will work only after no discrepancy condition exists between the switch aux contacts 89a and 89b.

OPEN RELAY SELECT

Range: Off, Relay 1, ..., Relay X

Default: Off

This setpoints selects an output relay from the list of available output relays that is used to open the Disconnect Switch once an open command is issued either from the front panel or remotely. This output relay is controlled from the Switch Control menu.

CLOSE RELAY SELECT

Range: Off, Relay 1, ..., Relay X

Default: Off

This setpoint selects an output relay from the list of available output relays that is used to close the Disconnect Switch upon issued close command from either front panel or remotely. This output relay is controlled from Switch Control menu.

Note:

The selection of Output Relay for Open Relay Select and Close Relay Select has higher priority than other settings as follows: If an Output Relay is first set to *Operate* under a protection element for example, and then this same Output Relay is selected under either **Open Relay Select** or **Close Relay Select**, this Output Relay is automatically reverted to *Do Not Operate* and hidden from the menu of the protection element. Deselecting the Output Relay from **Open Relay Select** or **Close Relay Select** unhides the output in the menu of the protection element showing the setting value *Do Not Operate*.

EVENTS

Range: Disabled, Enabled

Default: Enabled

This setting disables or enables the disconnect switch operation events.

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Enabled

This setting disables or enables the disconnect switch operation Targets.

The logic for Switch configuration and the Open, and Close status is shown in the following tables.

Switch configuration with Open and Close status

Contact Input 89a setpoint programming	Contact Input 89b setpoint programming	SwitchStatus	
		Open	Closed
Yes	Yes	89a contact open 89b contact closed	89a contact closed 89b contact open
Yes	No	89a contact open	89a contact closed
No	Yes	89b contact closed	89b contact open
No	No	Not Configured	Not Configured

Switch status with both contacts 89a and 89b programmed

89a Contact Status	89b Contact Status	Disconnect Switch Status
Off	On	SW[X] Opened
On	Off	SW[X] Closed
On	On	SW[X] Intermittent, SW[X] Discrepancy
Off	Off	SW[X] Intermittent, SW[X] Discrepancy

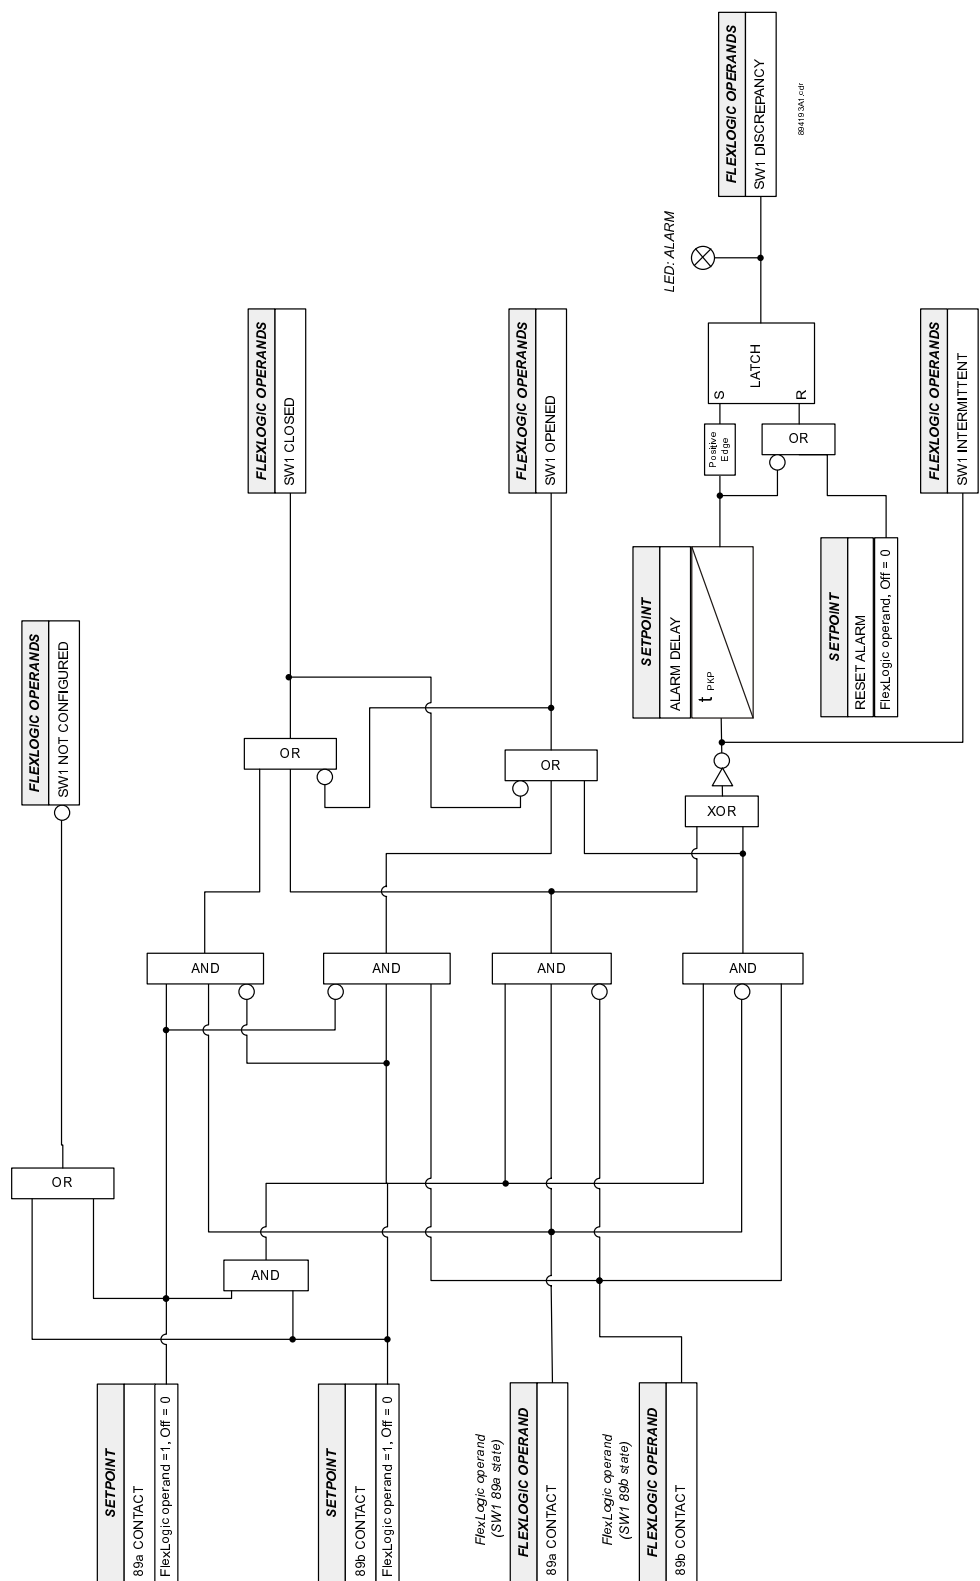


Figure 149: Disconnect Switch State Detection logic diagram

7.10 FLEXCURVES

The relay incorporates four programmable FlexCurves - FlexCurve A, B, C and D. The points for these curves are defined in the EnerVista D&I Setup. User-defined curves can be used for Time Overcurrent protection in the same way as IEEE, IAC, ANSI, and IEC curves. Each of the four FlexCurves has 120-point settings for entering times to reset and operate, 40 points for reset (from 0 to 0.98 times the Pickup value) and 80 for operate (from 1.03 to 20 times the Pickup). This data is converted into two continuous curves by linear interpolation between data points.

Path: Setpoints > System > FlexCurves

Note:
Use EnerVista D&I Setup to select, design or modify any of the Flexcurves

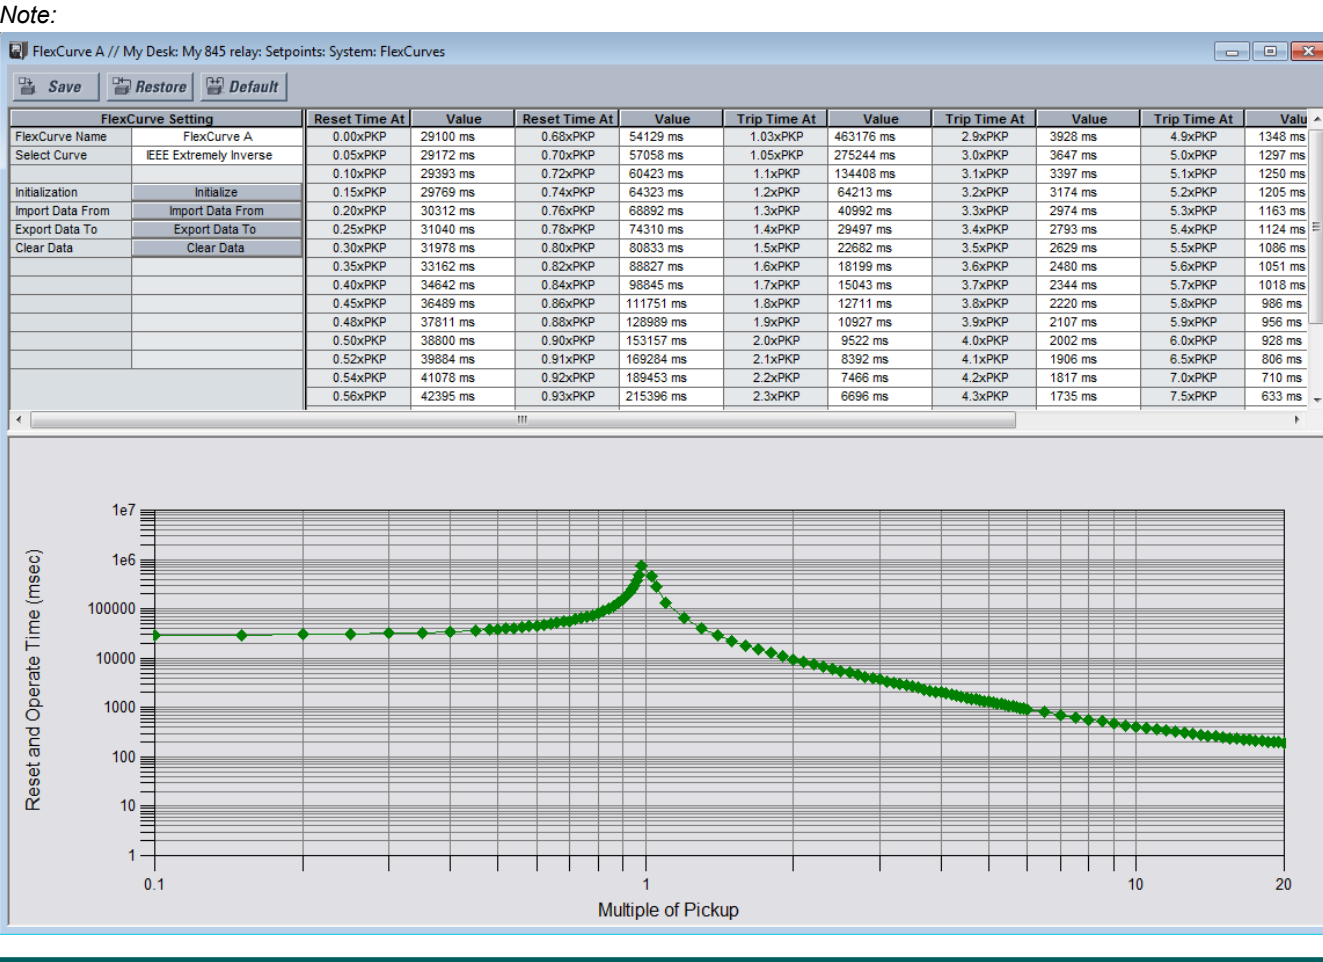


Figure 150: Flexcurve setpoints

The following table for FlexCurves A, B, C, and D details the 120 points as well as the characteristic for each of them, and a blank cell to write the time value when the operation (for $I > I_{pickup}$) or the reset (for $I < I_{pickup}$) is required.

RESET TIME ms		RESET TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms	
0.00		0.68		1.03		2.9		4.9		10.5	

RESET TIME ms		RESET TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms		OPERATE TIME ms	
0.05		0.70		1.05		3.0		5.0		11.0	
0.10		0.72		1.1		3.1		5.1		11.5	
0.15		0.74		1.2		3.2		5.2		12.0	
0.20		0.76		1.3		3.3		5.3		12.5	
0.25		0.78		1.4		3.4		5.4		13.0	
0.30		0.80		1.5		3.5		5.5		13.5	
0.35		0.82		1.6		3.6		5.6		14.0	
0.40		0.84		1.7		3.7		5.7		14.5	
0.45		0.86		1.8		3.8		5.8		15.0	
0.48		0.88		1.9		3.9		5.9		15.5	
0.50		0.90		2.0		4.0		6.0		16.0	
0.52		0.91		2.1		4.1		6.5		16.5	
0.54		0.92		2.2		4.2		7.0		17.0	
0.56		0.93		2.3		4.3		7.5		17.5	
0.58		0.94		2.4		4.4		8.0		18.0	
0.60		0.95		2.5		4.5		8.5		18.5	
0.62		0.96		2.6		4.6		9.0		19.0	
0.64		0.97		2.7		4.7		9.5		19.5	
0.66		0.98		2.8		4.8		10.0		20.0	

The first two columns (40 points) correspond to the RESET curve. The other 4 columns, with 80 points in total, correspond to the OPERATE curve. The reset characteristic values are between 0 and 0.98xPKP, and the operation values are between 1.03 and 20xPKP.

The final curve is created by means of a linear interpolation from the defined points. This is a separate process for the RESET and the OPERATE curve.

The definition of these points is performed in a separate module from the relay, using a configuration program included in EnerVista D&I Setup, which incorporates a graphical environment for viewing the curve, thus making it easy to create.

Note:

The relay using a given FlexCurve applies linear approximation for times lying between the user-entered points. Therefore, special care must be taken when setting the points close to a Pickup multiple of 1; that is, $0.97 \cdot I_{pickup}$ and $0.98 \cdot I_{pickup}$ should be set to a similar value as $1.03 \cdot I_{pickup}$. Otherwise, the thermal model may incorrectly estimate the TCU% level resulting in undesired behavior.

FLEXCURVE A, B, C, D CONFIGURATION WITH EnerVista D&I Setup

EnerVista D&I Setup allows for easy configuration and management of FlexCurves and their associated data points. Prospective FlexCurves can be configured from a selection of standard curves to provide the best approximate fit, then specific data points can be edited afterwards. Alternately, curve data can be imported from a specified file (.csv format) by selecting the Import Data From setting.

Curves and data can be exported, viewed, and cleared by clicking the appropriate buttons. FlexCurves A, B, C, and D are customized by editing the operating time (ms) values at pre-defined per-unit current multiples. Note that the pickup multiples start at zero (implying the “reset time”), operating time below Pickup, and operating time above Pickup.

CHAPTER 8

INPUT AND OUTPUT SETPOINTS

8.1 **CHAPTER OVERVIEW**

This chapter describes the Device setpoint menu settings in detail.

This chapter contains the following sections:

Chapter Overview	327
Inputs	328
Outputs	339

8.2 INPUTS

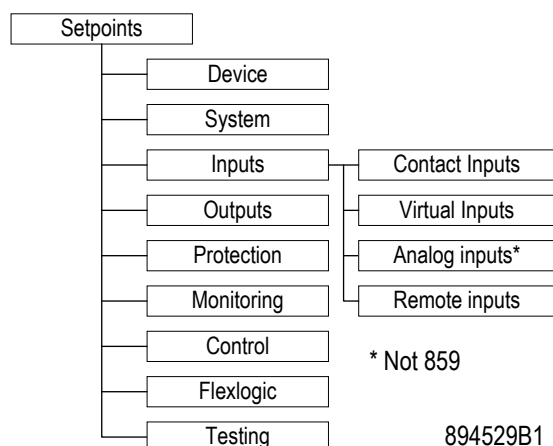


Figure 151: Inputs Display Hierarchy

8.2.1 CONTACT INPUTS

The relay is equipped with a number of Contact Inputs, specified by the Order Code. These can be used to provide a variety of functions such as for circuit breaker control, external trips, blocking of protection elements, etc. Contact inputs accept wet and dry input signals. A wet type contact input signal requires an external DC voltage source. A dry type contact input signal uses an internal DC voltage source. Depending on the DC source level, you can select the voltage threshold (17V, 33V, 84V, 166V). The Contact Inputs can be located on the HV I/O and Arc Flash cards located on slots B or C or F or G or H or all.

Note:

The maximum load current that can be delivered by the relay +24 V voltage supply is 100 mA. When the internal +24 V supply is used, the current limitations of the 24V supply must be considered.

The Contact Inputs are either open or closed with a programmable debounce time to prevent false operation from induced voltage. The debounce time is adjustable as per manufacturer specifications.

A raw status is scanned for all Contact Inputs synchronously at the constant rate of one protection pass (1/8 cycle) as shown in the figure below. The DC input voltage is compared to a user-settable threshold. A new Contact Input state must be maintained for a user-configurable debounce time in order for the relay to validate the new contact state. In the figure below, the debounce time is set at 2.5 ms; thus the 3rd sample in a row validates the change of state (mark no. 2 in the diagram). Once validated (debounced), the new state will be declared and a FlexLogic operand will be asserted at the time of a new protection pass. A time stamp of the first sample in the sequence that validates the new state is used when logging the change of the Contact Input into the Event Recorder (mark no. 1 in the diagram).

Protection and control elements, as well as FlexLogic equations and timers, are executed eight times in a power system cycle. The protection pass duration is controlled by the frequency tracking mechanism. The FlexLogic operand reflecting the debounced state of the contact is updated at the protection pass following the debounce (marked no. 2 on the figure below). The update is performed at the beginning of the protection pass so all protection and control functions, as well as FlexLogic equations, are fed with the updated states of the Contact Inputs.

The FlexLogic operand response time to the Contact Input change is related to the debounce time setting plus up to one protection pass (variable and depending on system frequency if frequency tracking enabled). For example, 8 protection passes per cycle on a 60 Hz system correspond to a protection pass every 2.1 ms. With a contact debounce time setting of 3.0 ms, the FlexLogic™ operand-assert time limits are: $4.2 + 0.0 = 4.2$ ms and $4.2 + 2.1 = 6.3$ ms. The 4.2 ms is the minimum protection pass period that contains a debounce time, 3.0 ms.

Regardless of the contact debounce time setting, the Contact Input event is time-stamped with 1 protection pass accuracy using the time of the first scan corresponding to the new state (mark no. 1 below). Therefore, the time stamp reflects a change in the DC voltage across the Contact Input terminals that was not accidental as it was subsequently validated using the debounce timer. The debounce algorithm is symmetrical: the same procedure and debounce time are used to filter the LOW-HIGH (marks no.1 and 2 in the figure below) and HIGH-LOW (marks no. 3 and 4 below) transitions.

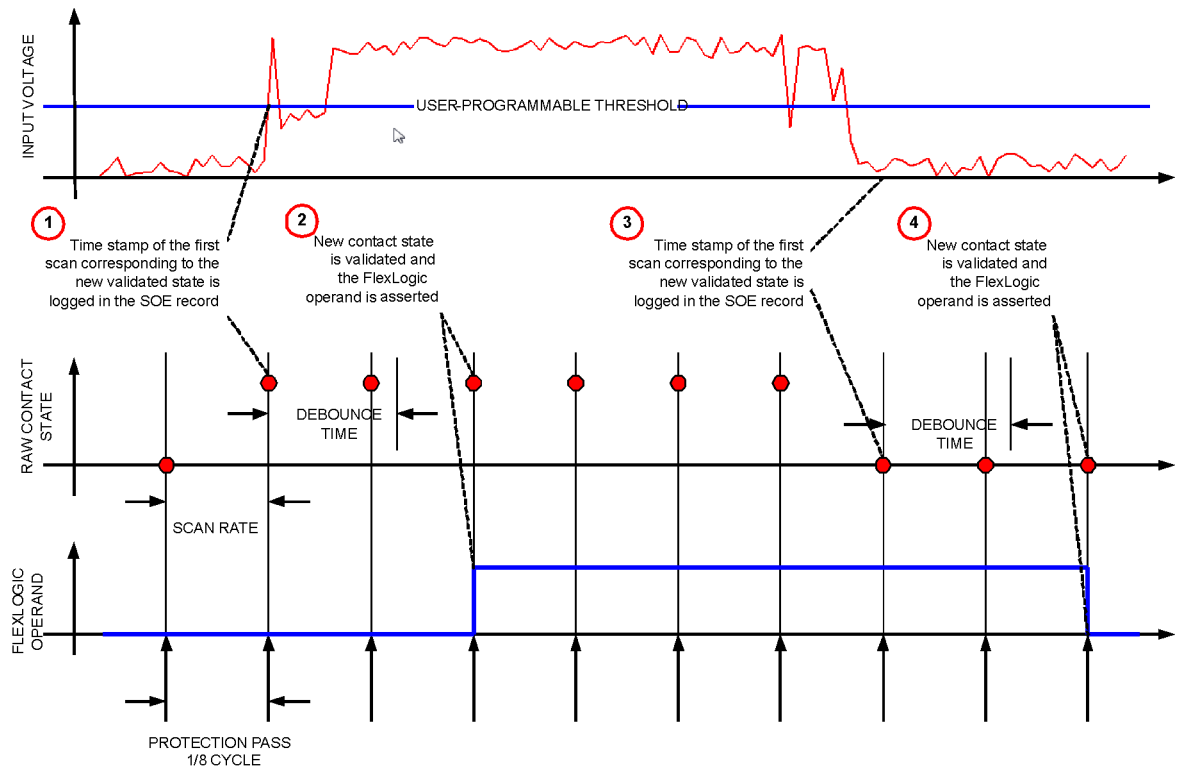


Figure 152: Contact Input Debouncing Mechanism and Time-stamping Sample Timing

Path: **Setpoints > Inputs > Contact Inputs**

The Contact Inputs menu contains configuration settings for each Contact Input as well as voltage threshold for all Contact Inputs.

..\Inputs\Contact Inputs				
Item Name				
CI Voltage Threshold				
Contact Input 1				
Contact Input 2				
Contact Input 3				
Contact Input 4				
Contact Input 5				
Contact Input 6				
Contact Input 7				
Contact Input 8				
Contact Input 9				
Contact Input 10				
CI DC Volt	CI 1	CI 2	CI 3	>>

Path: **Setpoints > Inputs > Contact Inputs > CI Voltage Threshold**

Depending on the order code, Voltage Threshold value can be configured for all the Contact Inputs (Slot F/G/H with order code A or M or F) or for each group of Contact Inputs (Slot F/G/H with order code B or K and Slot B/C with order code C).

As an example, the following section shows description of the settings for Slot F with order code A, Slot G with order code B and Slot B with order code C.

Home\Contact Inputs\CI Voltage Threshold		
Item Name	Value	Unit
Voltage Threshold/Slot F	33	Vdc
Voltage Threshold /G13-G17	33	Vdc
Voltage Threshold /G19-G23	33	Vdc
Voltage Threshold/B1-B5	33	Vdc
Voltage Threshold /B7-B11	33	Vdc
Voltage Threshold /B13-B17	33	Vdc
CI DCVolt		

Contact input card type A allocated at Slot F requires one Voltage Threshold configuration for all the contact inputs. Contact input card type B allocated at Slot G has two groups of five contact inputs and therefore requires two Voltage Threshold settings. While Contact input card type C allocated at Slot B has three groups of five contact inputs, and therefore requires three Voltage Threshold settings.

Each Voltage Threshold setting is distinct by the slot or terminal numbers. For example: Voltage Threshold/Slot F specifies the threshold setting of all the contact inputs in Slot F with order code A; while Voltage Threshold/G13-G17 specifies the threshold setting for group of five contact inputs with terminals G13 to G17.

Upon start-up, the relay processor determines (from an assessment of the installed modules) which Contact Inputs are available, then displays settings for only these inputs.

VOLTAGE THRESHOLD /[X]

Range: 17, 33, 84, 166 VDC

Default: 17 VDC

The setting determines the minimum voltage required to detect a closed Contact Input. The value is selected according to the following criteria: 17 for 24 V sources, 33 for 48 V sources, 84 for 110 to 125 V sources and 166 for 250 V sources.

Note:

For internal wetting set the Voltage Threshold to 17V.

Note:

When thresholds above 17V are selected, the internal +24V is disabled.

Path: Setpoints > Inputs > Contact Inputs > Contact Input X

NAME

Range: Up to 13 alphanumeric characters

Default: CI 1

An alphanumeric name may be assigned to a Contact Input for diagnostic, setting, and event recording purposes. The CI X ON (Logic 1) FlexLogic operand corresponds to Contact Input X being closed, while CI X OFF corresponds to Contact Input X being open.

DEBOUNCE TIME

Range: 0.0 to 16.0 ms in steps of 0.5 ms

Default: 10.0 ms

The Debounce Time defines the time required for the contact to overcome 'contact bouncing' conditions. As this time differs for different contact types and manufacturers, set it as a maximum contact debounce time (per manufacturer specifications) plus some margin to ensure proper operation.

EVENTS

Range: Enabled, Disabled

Default: Enabled

For example, to use Contact Input F1 as a status input from the breaker 52b contact, to seal-in the trip relay and record it in the Event Records menu, make the following settings changes:

CONTACT INPUT 1 NAME: *52b*

CONTACT INPUT 1 EVENTS: *Enabled*

Note:

The 52b contact is closed when the breaker is open and open when the breaker is closed.

8.2.2 VIRTUAL INPUTS

The relay is equipped with 64 Virtual Inputs that can be individually programmed to respond to input signals from the keypad or from communications protocols. This has the following advantages over Contact Inputs only:

- The number of logic inputs can be increased without introducing additional hardware.
- Logic functions can be invoked from a remote location over a single communication channel.
- The same logic function can be invoked both locally via contact input or front panel keypad, and/or remotely via communications.
- Panel switches can be replaced entirely by virtual switches to save cost and wiring.

All Virtual Input operands are defaulted to *Off* (logic 0) unless the appropriate input signal is received.

Path: *Setpoints > Inputs > Virtual Inputs > Virtual Input*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

If this setting is disabled, the input is OFF (logic 0) regardless of any attempt to alter the input. If enabled, the input operates as shown on the logic diagram below, and generates output FlexLogic operands in response to received input signals and the applied settings.

NAME

Range: Up to 13 Alphanumeric Characters

Default: VI 1

An alphanumeric name may be assigned to a Virtual Input for diagnostic, setting, and event recording purposes.

Note:

Do not use special characters (e.g. <) as this could result in an error. Use only letters from the alphabet and numbers.

TYPE

Range: Latched, Self-reset

Default: Latched

There are two types of operation: self-reset and latched. If VIRTUAL INPUT x TYPE is “Self-Reset,” when the input signal transits from OFF to ON the output operand will be set to ON for only one evaluation of the FlexLogic equations, then return to OFF. If set to “Latched,” the virtual input sets the state of the output operand to the same state as the most recent received input.

The self-reset operating mode generates the output operand for a single evaluation of the FlexLogic equations (i.e., a pulse of one protection pass). If the operand is to be used anywhere other than internally in a FlexLogic equation, it will likely have to be lengthened in time. A FlexLogic timer with a delayed reset time can perform this function.

EVENTS

Range: Enabled, Disabled

Default: Enabled

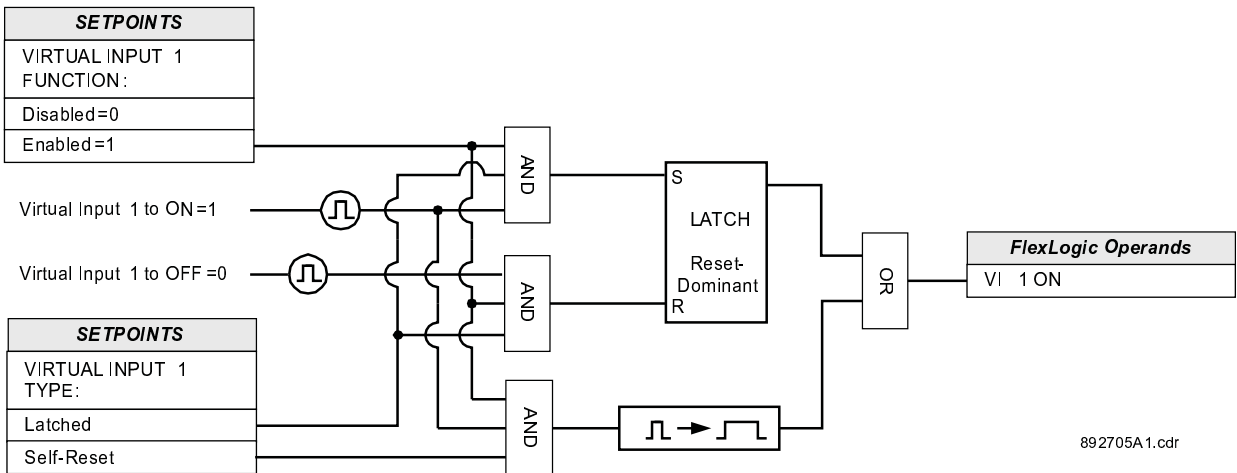


Figure 153: Virtual Inputs Scheme Logic

8.2.3 ANALOG INPUTS

The relay can monitor any external quantity from the DcmA transducers such as vibration, field current, pressure, tap position etc., using analog inputs. Any one of the standard transducer output ranges: 0 to 1 mA, 0 to 5 mA, 0 to 10mA, 0 to 20 mA, or 4 to 20 mA can be connected to the Analog Input terminals. Polarity of these inputs must be observed for proper operation. The analog input circuitry is isolated as a group with the analog output circuitry and the RTD circuitry, only one ground reference is used for the three circuits. Transducers limit this isolation to ± 36 V with respect to the relay's safety ground.

Depending upon the order code, the relay supports one optional DC analog card. The analog card has 4 analog inputs and 7 analog outputs. For each element, when the measured analog input quantity exceeds the pickup level for longer than the associated time delay, the relay can be configured to cause an alarm, or trip. The element will drop out only when the user-configured dropout ratio has been met.

Note:

The connected analog input is still read and displayed in METERING /ANALOG INPUTS if the trip function or alarm function is disabled, and the Analog Input is not disabled.

Path: Setpoints > Inputs > Analog Inputs > Analog Input 1(X)

Settings

FUNCTION

Range: Disabled, Enabled

Default: Disabled

This setting enables or disables the Analog Input function.

FUNCTION

Range: Disabled, Enabled

Default: Disabled

This setting disables the Analog Input function or enables it for any generic application or any specific application i.e., Tap Position. Upon selecting a specific application its value is also displayed in the Transformer metering menu.

Note:

In the Tap Changer Setup, DcmA input is selected as Tap Detection Input and Analog Input 1 Function is set as Tap Position. All other settings for Analog Input 1 are hidden.

FUNCTION

Range: Disabled, Enabled, Bearing Vibration, Excitation Current

Default: Disabled

This setting disables the Analog Input function or enables it for any generic application or any specific application such as Bearing Vibration or Excitation Current. Upon selecting a specific application, its value is also displayed in the Generator metering menu.

NAME

Range: Any combination of 13 Characters

Default: Anlp 1

This setting allows the assignment of symbolic names to each analog input. The length is limited to 13 characters.

UNITS

Range: Any combination of 6 Characters

Default: units

This setting allows the assignment of symbolic names to the engineering units. The length is limited to 6 characters.

RANGE

Range: 0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, 4 to 20 mA

Default: 0 to 1 mA

This setting provides the selection for the analog input range.

MIN VALUE

Range: -500000 to 500000 units in steps of 1 unit

Default: 0

For the **MINIMUM VALUE** setpoint, enter the value which corresponds to the minimum output value of the transducer. For example, if a temperature transducer which outputs 4 to 20 mA for temperatures 0 to 250°C is connected to the analog input, then enter “0” for the MINIMUM VALUE. The relay then interprets 4 mA as representing 0°C. Intermediate values between the minimum and maximum are scaled linearly.

MAX VALUE

Range: -500000 to 500000 units in steps of 1 unit

Default: 0

For the MAXIMUM VALUE setpoint, enter the value which corresponds to the maximum output value of the transducer. For example, if a temperature transducer which outputs 4 to 20 mA for temperatures 0 to 250°C is connected to the analog input, then enter 250 for the MAXIMUM VALUE. The relay then interprets 20 mA as representing 250°C. Intermediate values between the minimum and maximum are scaled linearly.

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Default: Disabled

Selecting the Trip or Configurable setting enables the Trip function of the analog input. If Disabled is selected, the main function still remains enabled and reads the meter value.

TRIP TYPE

Range: Over, Under

Default: Over

This setting determines if pickup occurs when the analog input is over or under the programmed threshold.

TRIP PICKUP

Range: -500000 to 500000 units in steps of 1 unit

Default: 20

This setpoint provides the trip pickup level in the engineering units defined in the setting.

TRIP DROPOUT RATIO

Range: 2 to 20 in steps of 1%

Default: 5%

This setting represents the variation of pickup value, in percentage of pickup, at which the element will effectively drop out. The drop out ratio is defined as follows:

Drop Out = pickup – pickup * dropout ratio /100, when TRIP TYPE is Over

Drop Out = pickup + pickup * dropout ratio /100, when TRIP TYPE is Under

For example, if the pickup level is 5000 µA, **TRIP TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 µA. Conversely, if the **TRIP TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 µA.

µA, **TRIP TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 µA.

Conversely, if the **TRIP TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 µA.

TRIP PICKUP DELAY

Range: 0 to 600 s in steps of 1 s

Default: 2

This setpoint will operate if the trip pickup condition is maintained for a longer time than the delay time set here.

TRIP DROPOUT DELAY

Range: 0 to 600 s in steps of 1 s

Default: 0

This setpoint selects a fixed time interval to delay dropping out the output signal after being generated.

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

The selection of Alarm or Latched Alarm setting enables the alarm function.

ALARM TYPE

Range: Over, Under

Default: Over

This setting determines if alarm pickup will occur when the analog input is over or under the programmed threshold.

ALARM PICKUP

Range: -500000 to 500000 units in steps of 1 unit

Default: 10

This setpoint provides the alarm pickup level in engineering units as defined in the setting.

ALARM DROPOUT RATIO

Range: 2 to 20 in steps of 1%

Default: 5%

This setting represents the variation of pickup value, in percentage of pickup, at which the alarm element will effectively drop out. The drop out ratio is defined as follows:

Drop Out = pickup – pickup * dropout ratio /100, when ALARM TYPE is Over

Drop Out = pickup + pickup * dropout ratio /100, when ALARM TYPE is Under

For example, if the pickup level is 5000 μ A, **ALARM TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 μ A. Conversely, if the **ALARM TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 μ A.

μ A, **ALARM TYPE** is set to *Over* and **DROPOUT RATIO** set to 10%, the actual dropout will be 4500 μ A.

Conversely, if the **ALARM TYPE** is *Under* with the same dropout ratio, the actual dropout will be 5500 μ A.

ALARM PICKUP DELAY

Range: 0 to 600 s in steps of 1 s

Default: 2

This setpoint will operate the element if the alarm pickup condition is maintained for a longer time than the delay time set here.

ALARM DROPOUT DELAY

Range: 0 to 600 s in steps of 1 s

Default: 0

This setpoint selects a fixed time interval to delay dropping out the output signal after being generated.

BLOCK

Range: Any FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled


This setting enables or disables the events of the Analog Input function.

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Latched

The selection of the Self-Reset or Latched setting enables the targets of the Analog Input function.

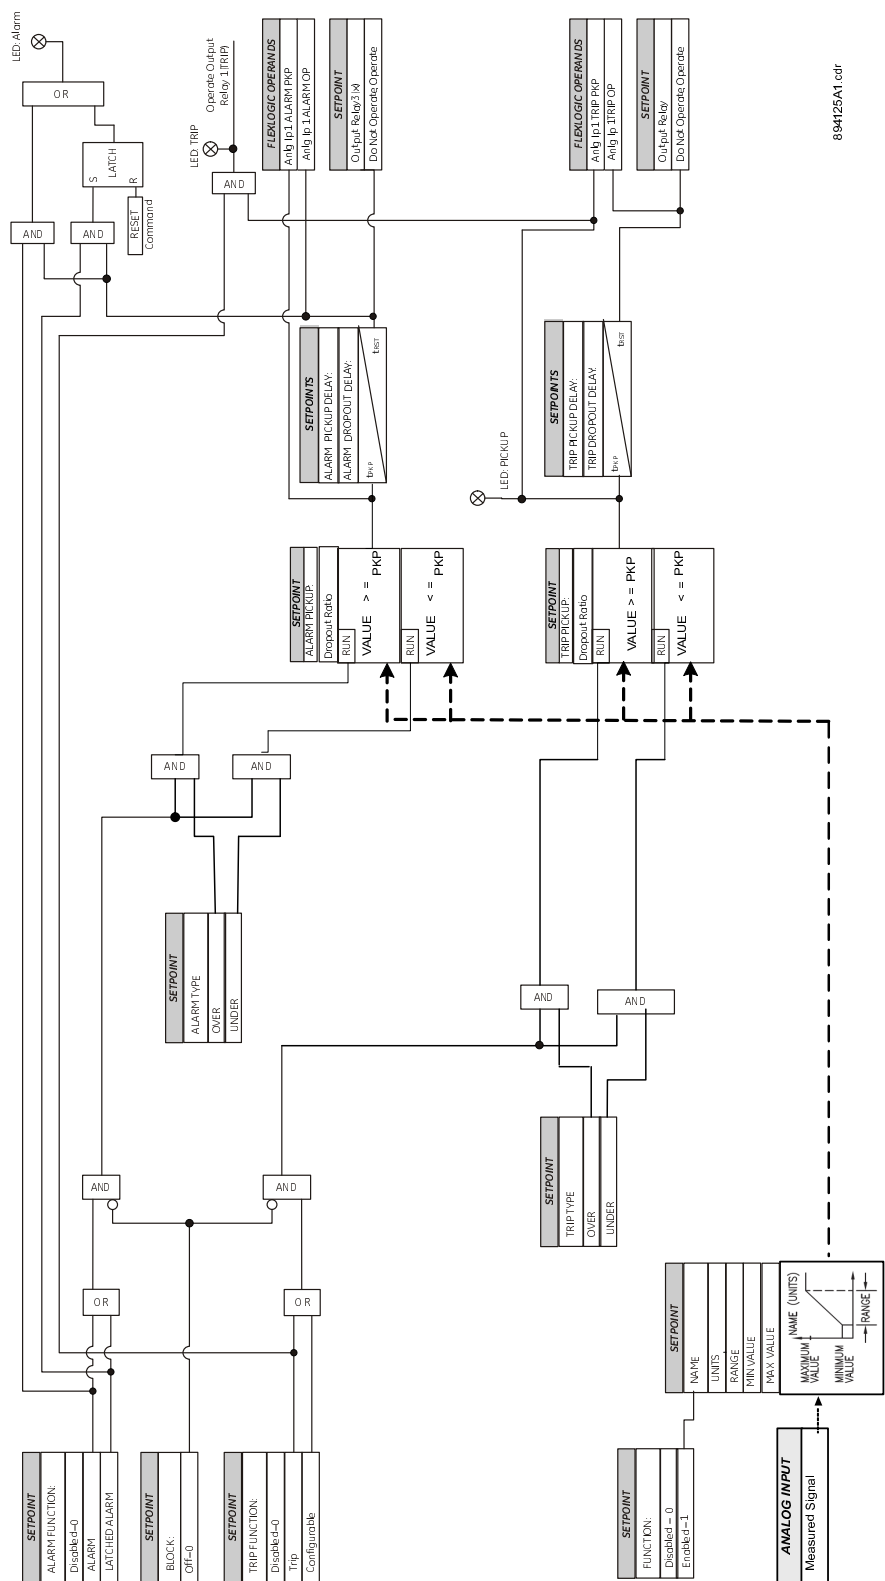

894125A1 cdr

Figure 154: Analog Input Threshold Logic Diagram

8.2.4 REMOTE INPUTS

Remote inputs provide a means of exchanging digital state information between Ethernet-networked devices supporting IEC 61850. Remote inputs that create FlexLogic operands at the receiving relay are extracted from GOOSE messages originating in remote devices.

Remote input 1 must be programmed to replicate the logic state of a specific signal from a specific remote device for local use. The programming is performed by the three settings shown in the *Virtual Inputs* section.

Path: *Setpoints > Inputs > Remote Inputs*

NAME

Range: Up to 13 Alphanumeric Characters

Default: VI 1

An alphanumeric name may be assigned to a Remote Input for diagnostic, setting, and event recording purposes.

EVENTS

Range: Enabled, Disabled

Default: Enabled

This setting enables event generation whenever **Remote Input Status** is updated.

8.3 OUTPUTS

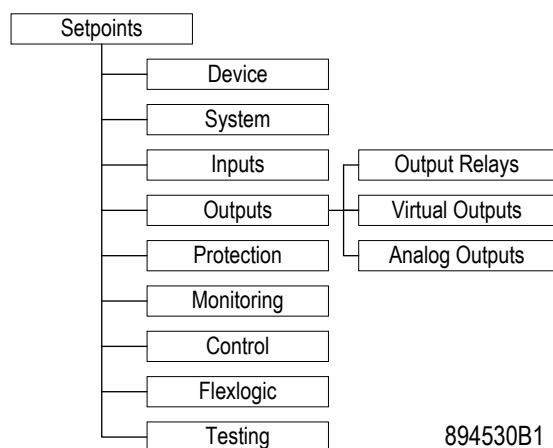


Figure 155: Outputs Display Hierarchy

8.3.1 OUTPUT RELAYS

Note:

In this section the product itself is referred to as a "Device" rather than a relay, to prevent confusion with the term "output relay".

The 8 Series devices are equipped with a number of electromechanical output relays or solid state output relays specified at the time of ordering. The exact configuration of the output relays depend on the model and the order code. For this reason, this description covers the 5 models of the 8 series and their possible configurations. The I/O modules for slot F provides 5 contact outputs for 5 output relays

Devices with one breaker

Output Relay 1 is a Form A relay, which can be used for Trip Coil monitoring and is used for tripping the breaker. The relay is energized upon operation of any element when the setpoint **Function** is set to *Trip*. The relay can be customized by changing the name, type, adding triggers, blocking. Output Relay 1 is configured internally for tripping the breaker, and it cannot be changed, disabled, or replaced by any other relay. Additional output relays can be selected to operate, and this can be done from the menu of each protection, control, or monitoring element.

Output Relay 2 is a Form A relay which can be used for *Close Coil monitoring*. It is selected by default for closing the breaker, but it can be used for any other purposes for some models by configuring the setpoint **Breaker/Close Relay Select**.

Devices with two breakers

Devices with two breakers are equipped with a number of Auxiliary Relays. The Auxiliary Relays can be energized by assigning a FlexLogic operand (trigger) under the setpoint **Aux Rly # Operate**. The Auxiliary Relays can be used for different applications. Any of these auxiliary output relays can be configured for either tripping or closing a breaker. For each of the breakers, you can select a pair of Auxiliary Relays for tripping and closing.

Depending on how an auxiliary relay is assigned, one of the following logic diagrams apply:

- If the auxiliary output relay is configured under the Breaker menu for breaker tripping, the operation of the output follows the *Trip* logic diagram.
- If the auxiliary output relay is configured under the Breaker menu for breaker closing, the operation of the output follows the *Close* logic diagram.
- If the auxiliary output is not configured for tripping or closing a breaker, the operation of the output follows the Auxiliary Relay Generic logic from logic diagram.

The *Trip* and *Close* auxiliary relays follow the respective *Trip* and *Close* logic, meaning they will have fixed operating characteristics as they depend on breaker feedback for resetting.

The auxiliary relays selected for breaker tripping are also available for selection from the menus of all protection elements. However, the auxiliary relays selected for breaker closing are excluded from the list for selection from the menu of all elements. Refer to the Breaker setup section on how to select an auxiliary relay for tripping and closing breakers.

Trip and Close output relay operation

The operation of the Trip and Close output relays is designed to be controlled by the 52a and 52b contacts.

If **TYPE** is set to *Dropoff*, the Trip and Close relay operation follows the logic outlined below:

- The Trip and Close relays reset after a breaker is detected in a state corresponding to the command. When a command is sent to one of these special relays, it remains operated until the requested change of the breaker state is confirmed and the initiating condition has reset.
- If the command resets without a change of the breaker state, the output relay is reset after a default interval of 2 seconds plus the Dropoff time.
- If neither of the breaker auxiliary contacts 52a nor 52b is assigned to a logic input, the Trip Relay resets after a default interval of 100 ms after the initiating input resets. The Close Relay is reset after 200 ms plus the Dropoff time.

If the selection is *Latched*, the relay is energized by any trip or open command and remains energized upon element dropout. Latched auxiliary outputs can be reset with a reset command.

If *Self-Reset* type is selected, the output relay is energized when the corresponding element operates and it stays energized until the element drops out.

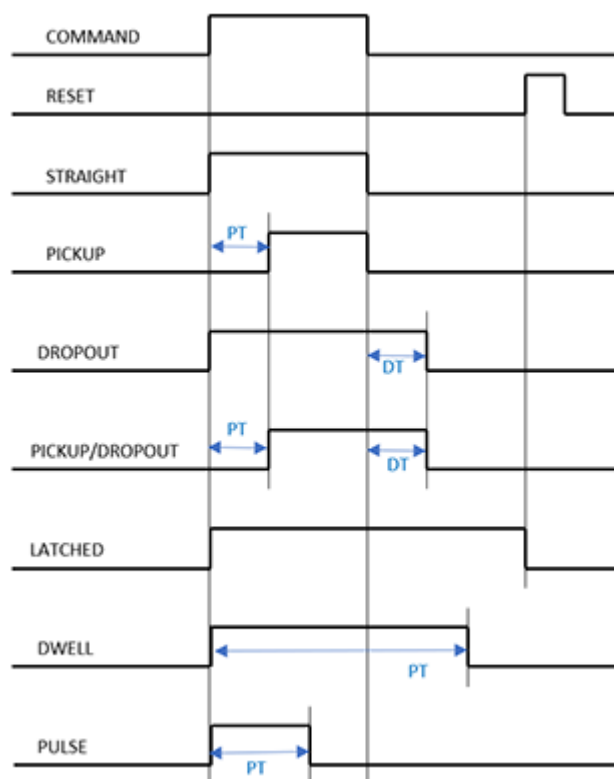


Figure 156: Switch timing of relay types

DWELL TIMER

When the input energizing quantity is true, the output is also activated at the same time instance. If the input energizing quantity stays activated for a time period shorter than the amount of time defined by the setpoint **pickup value**, the output stays activated for the specified time, even if the input energizing quantity is activated again in between.

If the input energizing quantity stays activated for a time period longer than the predefined amount of the pickup value time, the output is deactivated when the input energizing quantity is deactivated.

The following tables summarize the operation

Setpoint 'Type'	Reset Operation	Setpoint 'Pickup Value'	Setpoint 'Dropoff Value'
Pickup	Self-Reset	Visible	Hidden
Dropoff	Self-Reset	Hidden	Visible
Pickup/Dropoff	Self-Reset	Visible	Visible
Self-Reset	Self-Reset	Hidden	Hidden
Latched	Latched, can reset only by Reset Command.	Hidden	Hidden
Pulsed	Pulsed	Visible	Hidden
Dwell	Dwell	Visible	Hidden

52a Contact Configured	52b Contact Configured	Relay Operation
Yes	Yes	Trip Relay and Close Relays continue operating until the breaker is detected open or closed using both 52a and 52b contacts as per breaker detection logic.
Yes	No	The Trip Relay continues operating until 52a indicates an open breaker. The Close Relay continues operating until 52a indicates a closed breaker.

52a Contact Configured	52b Contact Configured	Relay Operation
No	Yes	The Trip Relay continues operating until 52b indicates an open breaker. The Close Relay continues operating until 52b indicates a closed breaker.
No	No	The Trip Relay operates upon a trip command and stays "high" until the 100 ms default time expires. The Close Relay operates upon close command and resets after the 200 ms time expires.

8.3.1.1 OUTPUT RELAY AVAILABILITY


The output relays can be used for many different purposes such as opening and closing breakers, contactors, switches, control of primary equipment such as motor, transformer, generator, for blocking or supervision purposes, for interlocking, etc. To avoid using the same output relay for two totally different actions, the 8series relays checks the assignments of these output relays, and prevents their usage for some other actions. For this purpose, the output relays that have been already assigned for some action, are hidden from the menus of other elements.

For example, if output relay 1 has been assigned under Trip Relay Select setpoint to trip breaker 1, this output relay will be hidden from the list of outputs available to select in the menu for opening or closing a Switch, and vice versa. The table below defines the dependency of output relay availability based on the first come-first serve principal.

Place selected	Assigned/Non-assigned Output Relays	Available/Hidden
Output Relays in: Setpoints > Protection > Control > Monitoring Elements	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Open Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Available Hidden Hidden Hidden Available
Output Relays in Control Elements with Restoration Ability	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Close Relay Select SW [1-9] Open Relay Select Other Auxiliary Relays NOTE: The elements producing close commands are directly linked to their respective breakers for closing/restoring.	Hidden Hidden Hidden Hidden Available
Setpoints > System > Switch [X] > Open Relay Select	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available
Setpoints > System > Switch [X] > Close Relay Select	BKR [1-3] Trip Relay Select BKR [1-3] Close Relay Select SW [1-9] Open Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available
Setpoints > System > Breaker [X] > Trip Relay Select	BKR [1-3] Close Relay Select SW [1-9] Open Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available
Setpoints > System > Breaker [X] > Close Relay Select	BKR [1-3] Trip Relay Select SW [1-9] Open Relay Select SW [1-9] Close Relay Select Other Auxiliary Relays	Hidden Hidden Hidden Available

8.3.1.2 CRITICAL FAILURE RELAY

The 8 Series relay is equipped with one output relay (# 8 - Critical Failure Relay) for failsafe indication. The Critical Failure Relay is a Form-C contact with one normally open (NO) and one normally closed (NC) contact. There are no user-programmable setpoints associated with this output relay.

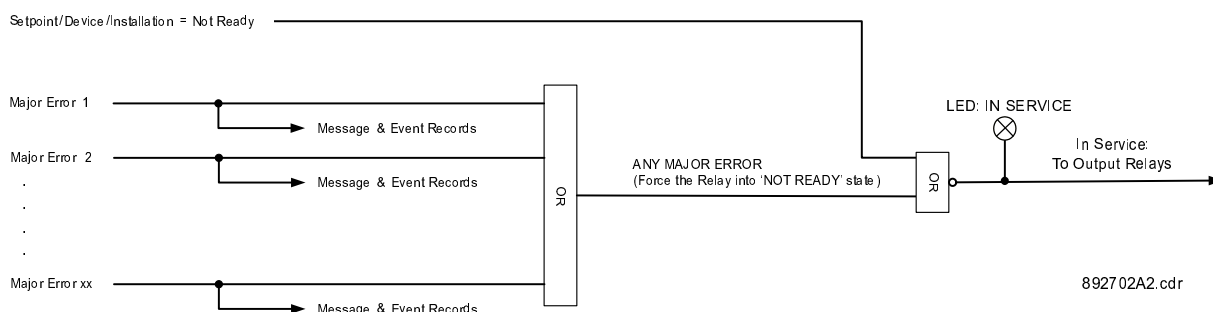**Note:**

Please refer to the *Self-Test Errors* section from the manual for details on the status of the output relays during *Relay Not Ready* state, or detection of *Major Self-Test error*.

MAINTAINING AN UNINTERRUPTED PROCESS

The Output Relays are operational (can be closed/opened) while the is In-Service. If the relay goes into “Out-of-Service” mode, the status of all previously energized output relays changes to de-energized. If an output relay was used to maintain a running process, or to hold a motor contactor while energized, the process or the motor contactor will be interrupted. To keep the process uninterrupted, the following connection scheme can be applied:

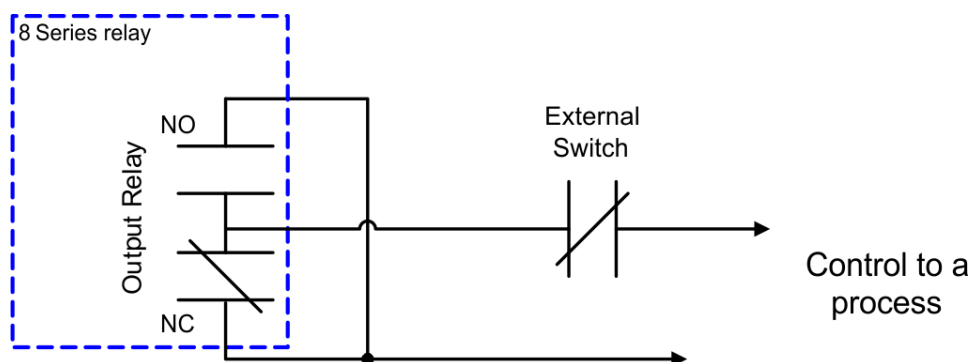


Figure 157: Maintaining an uninterrupted process upon a relay Major Error

If the output relay is energized during the In-Service relay condition, the NO contact will be closed, and the NC contact will be open. The process is running. If the relay goes into “Out-of-Service” mode, the output relay will be de-energized, and the process will still be running, as the NC contact will be closed. An external switch, or stop pushbutton must be installed in series to the relay output contacts, so that one can stop the process if needed.

8.3.1.3 RELAY SELECTED FOR BREAKER TRIP

When any Auxiliary Relay is selected under **Setpoints > System > Breakers (Contactor) > Breakers 1 (Contactor 1) > Trip Relay Select**, the Trip Relay logic is applied to energize the selected Relay. If the selected value of Trip Relay Select is *Off*, the output relay functions as an Auxiliary relay. The description below applies to the Relay 1 Trip functionality

NAME

Range: Up to 13 alphanumeric characters

Default: Trip

The setpoint is used to name the Trip relay by selecting up to 13 alphanumeric characters.

Note:

If Aux Relay 1 is selected for Breaker Trip or Contactor Trip, the relay name from the Output Relays menu changes to "Trip". If Aux Relay 1 is not selected, the name reverts to "Aux Relay 1".

BLOCK

Range: Disabled, Any FlexLogic operand

Default: Disabled

This setting defines a Block to the Trip output relay. When the selected input is asserted, the Trip output relay is blocked.

OPERATE

Range: Off, On, Any FlexLogic operand

Default: Off

This setpoint provides a selection of any operand from the list of FlexLogic or communications, which can be used to energize the Trip output relay.

When set to On, the output relay is constantly asserted (On=1).

When set to Off and no FlexLogic operand is selected, the output relay operates as set in individual protection elements.

Note:

Setting OPERATE to On supersedes individual protection function settings.

PICKUP VALUE

Range: 0 to 14400000 in steps of 1 ms

Default: 0 ms

This setting is used to set the time/time delay for Pickup, Dwell, Pulse, Pickup/Dropoff.

DROPOFF VALUE

Range: 0 to 14400000 in steps of 1 ms

Default: 0 ms

This setting is used to set the drop-off time delay for Dropoff, Pickup/Dropoff.

BLOCK

Range: Disabled, Any FlexLogic operand

Default: Disabled

This setting defines a Block to the Trip output relay. When the selected input is asserted, the Trip output relay is blocked.

OPERATE

Range: Off, Any FlexLogic operand

Default: Off

This setpoint provides a selection of any operand from the list of FlexLogic or communications, which can be used to energize the Trip output relay.

TYPE

Range: Pickup, Dropoff, Dwell, Pulse, Pickup/Dropoff, Self-Reset, Latched

Default: Self-Reset

If Self-Reset type is selected, the output relay is energized as long as the element is in operating mode and resets when the element drops out. If Latched type is selected, the output relay stays energized upon element dropout. The latched auxiliary outputs can be reset by issuing a reset command. More detail is provided in description of the Output Relays

OPERATION

Range: Non-Failsafe, Failsafe

Default: Failsafe

Failsafe operation causes the output relay to be energized when the Trip condition signal is low and de-energized when the same signal is high. A failsafe relay also changes state (if not already activated by an operand driving this output relay) when control power is removed from the 859. Conversely a non-failsafe relay is de-energized in its normal non-activated state and will not change state when control power is removed from the relay (if not already activated by a protection element).

The default value depends on the selection made in: Setpoints > System > Motor > Setup > Switching Device Type. If the Switching Device Type is “Breaker”, the Operation default is “Non-Failsafe”. If the Switching Device Type is “Contactor”, the Operation default is “Failsafe”.

Note:

Changing the default setting will result in losing the basic functionality of the output relay.

Caution:

A failsafe relay changes state when control power is removed from the relay. When Switching Device Type is “Contactor”, output relay in failsafe mode can result into tripping of the motor when relay power is removed.

EVENTS

Range: Disabled, Enabled

Default: Enabled

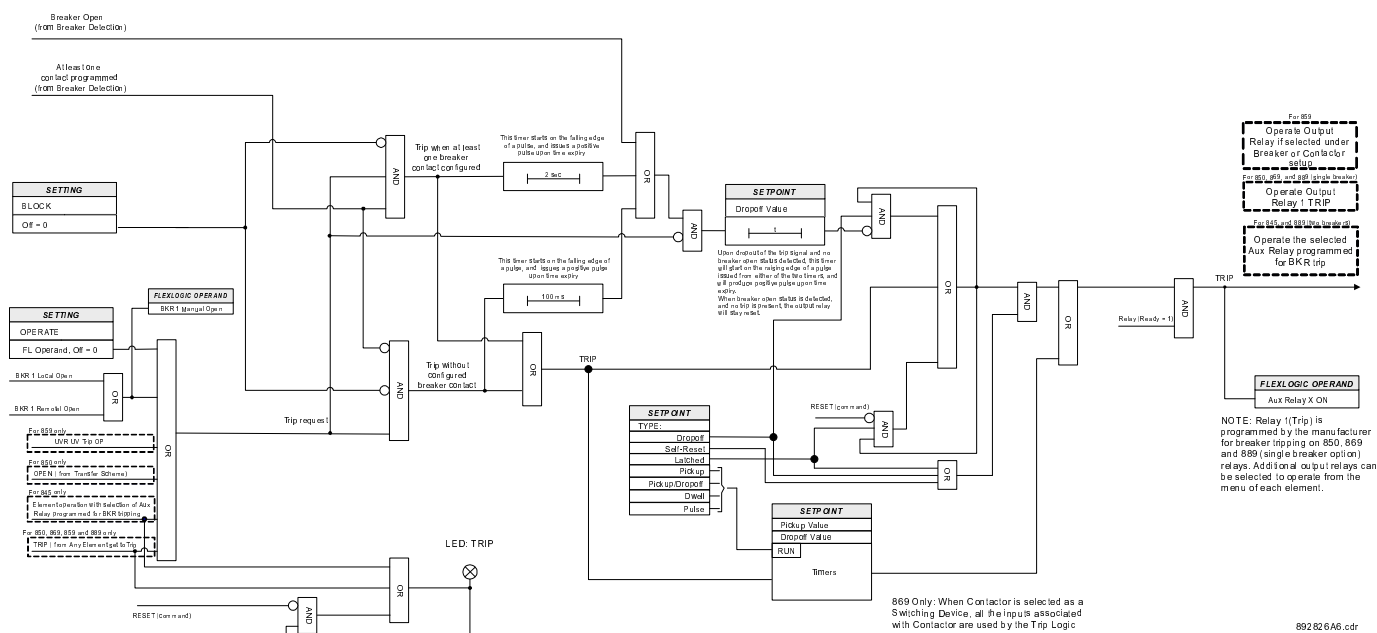


Figure 158: Relay 1 “TRIP” Selected for Breaker 1 logic diagram

8.3.1.4 RELAY SELECTED FOR BREAKER CLOSE

Output Relay 2 (F4) is labeled CLOSE/AUX on the wiring diagram. As suggested by that name, it can be used as a Close relay or an Auxiliary relay. This selection is made at Setpoints > System > Breakers (Contactor) > Breakers 1 (Contactor 1) > Close Relay Select. If the selected value of the CLOSE RELAY SELECT setting is Off, Output Relay 2 functions as an Auxiliary relay. If the selected value is Relay 2, Output Relay 2 functions as a Close relay. The default value is Off. The description below applies to both Relay 2 “Close” functionality.

Path: Setpoints > Outputs > Output Relays > Aux Relay 2 (Close)

Note:

The output relays selected under the Breaker menu for breaker closing are excluded from the list of outputs for selection under the menus of all elements providing such output relay selection.

Note:

For relays with a single breaker, if Aux Relay 2 is selected for Breaker Close, the relay name from the Output Relays menu changes to “Close”. If Aux Relay 2 is not selected, the name reverts to “Aux Relay 2”.

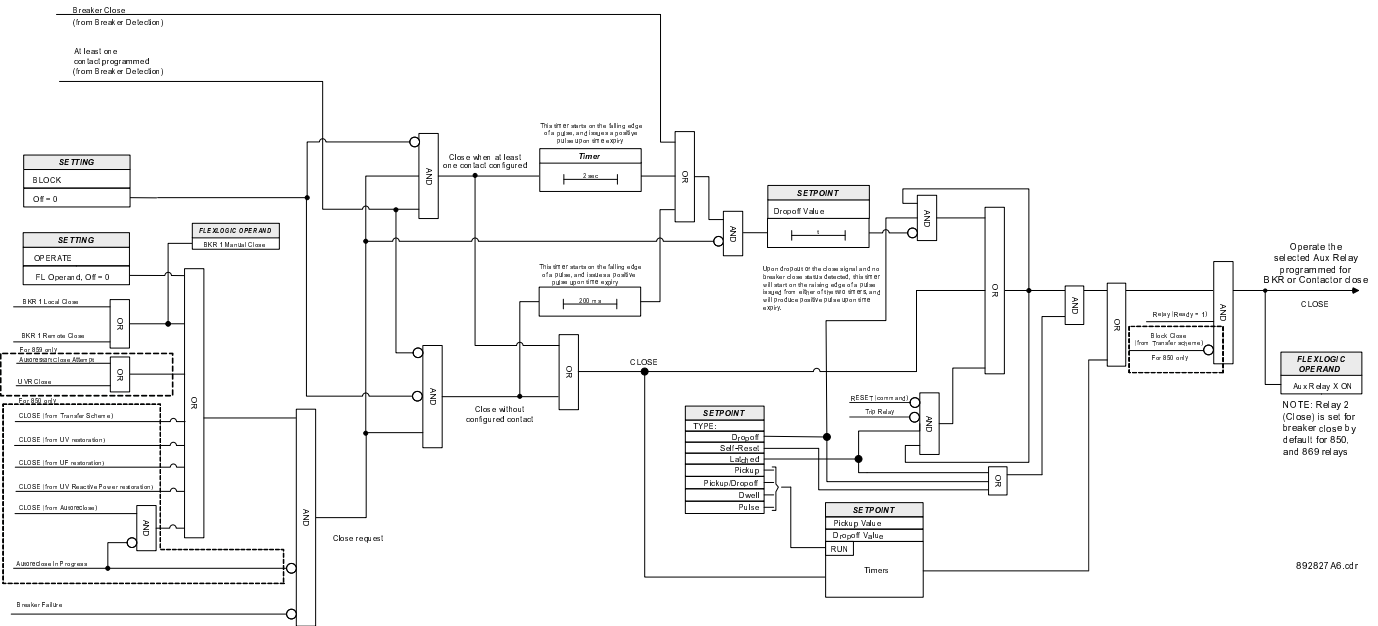


Figure 159: Close" Selected for Breaker 1 logic diagram

8.3.2 VIRTUAL OUTPUTS

The relay is equipped with 96 virtual outputs that may be assigned for use via FlexLogic. Virtual outputs not assigned for use are set to *OFF* (Logic 0).

A name can be assigned to each virtual output. Any change of state to a virtual output can be logged as an event if programmed to do so. Virtual outputs are resolved in each protection pass via the evaluation of FlexLogic equations.

For example, if Virtual Output 1 is the trip signal from FlexLogic and the trip relay is used to signal events, the settings would be programmed as follows:

VIRTUAL OUTPUT 1 NAME: *Trip*

VIRTUAL OUTPUT 1 EVENTS: *Enabled*

Path: *Setpoints > Outputs > Virtual Outputs > Virtual Outputs 1 (32)*

NAME

Range: up to 13 alphanumeric characters

Default: VO 1

An alphanumeric name may be assigned to a virtual output for diagnostic, setting, and event recording purposes.

Note:
Do not use special characters (e.g. <) as this could result in an error. Use only letters from the alphabet and numbers.

EVENTS

Range: Disabled, Enabled

Default: Disabled

8.3.3 ANALOG OUTPUTS

Depending on the order code, the relay supports one optional DC analog card. The Analog card has 4 analog inputs and 7 analog outputs. There are three Analog Output channel scenarios for analog minimum and maximum output range shown in the figure below. Type A characteristics apply when the minimum range is 0 and the maximum range is a positive (+ve) value. Type B characteristics apply when the minimum and maximum ranges are definitely positive (+ve) values. Type C characteristics apply when the minimum range is a negative (-ve) and the maximum range is a positive (+ve) value. The following diagram illustrates these characteristics.

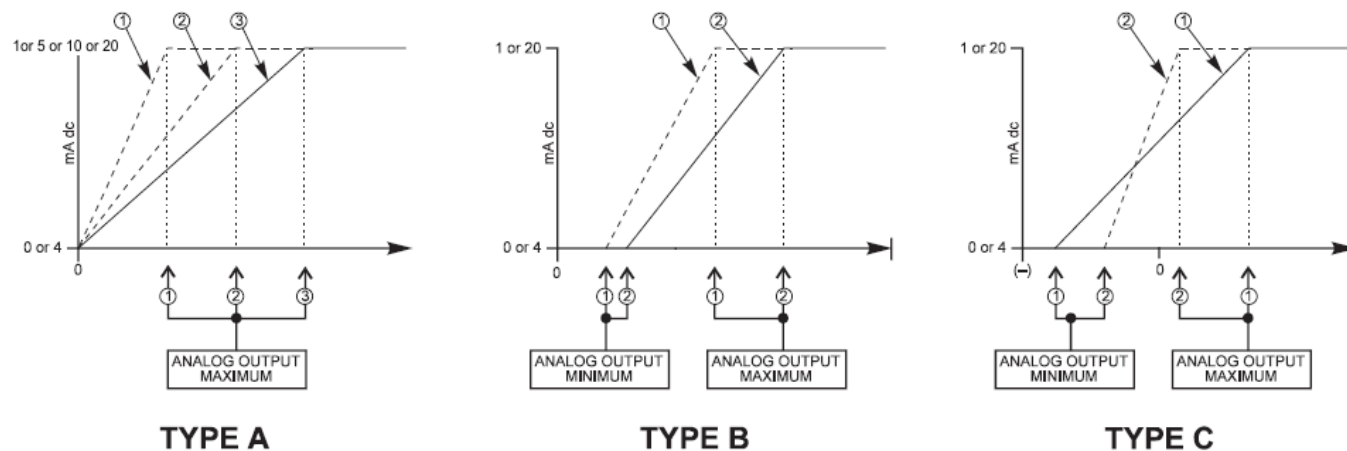


Figure 160: Analog Outputs Channel Characteristics

Path: **Setpoints > Outputs > Analog Outputs > Analog Output 1(X)**

FUNCTION

Range: Disabled, Enabled

Default: Disabled

RANGE

Range: 0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, or 4 to 20 mA

Default: 0 to 1 mA

This setting provides the selection for the analog output range.

PARAMETER

Range: Off, any Flex Analog Parameter

Default: Off

This setting selects the measured parameter to control the Analog Output level.

MIN VALUE

Range: Populates per selection of the analog parameter

Default: 0

This setting defines the minimum value of the analog output quantity. It populates based on the selection of the analog parameter.

MAX VALUE

Range: Populates per selection of the analog parameter

Default: 0

This setting defines the maximum value of the analog output quantity. It populates based on the selection of the analog parameter.

Each channel can be programmed to represent a FlexAnalog parameter available in the respective relay. The range and steps is the same as the range of the FlexAnalog.

PF SCALING TYPE

Range: Flat, Step

Default: Flat

The measured Power Factor values can be transferred to any of the available analogue outputs. There are two options for scaling power factor: Flat and Step.

Note:
This setting is only available when Analog Output is selected as Power Factor.

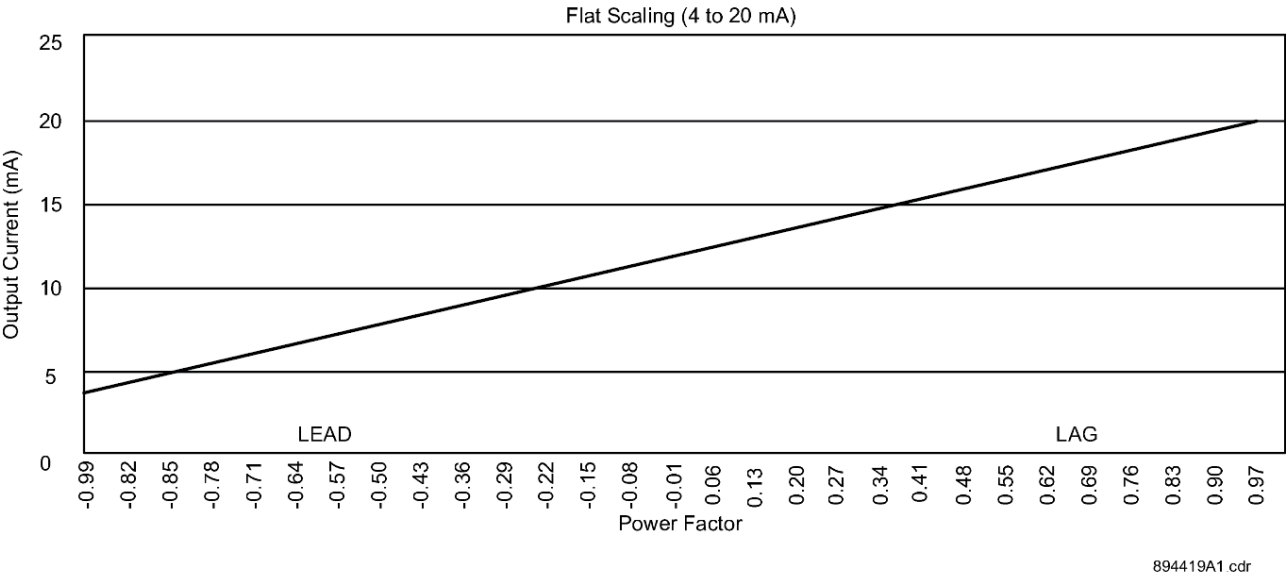


Figure 161: Flat Scaling

Flat scaling is a simple ascending linear function. It covers all selected ranges. The above figure shows the graph for the 4 to 20 mA output range in Flat Scaling. It covers the entire selected power factor range from the minimum (-0.99) to the maximum setting (+1.00).

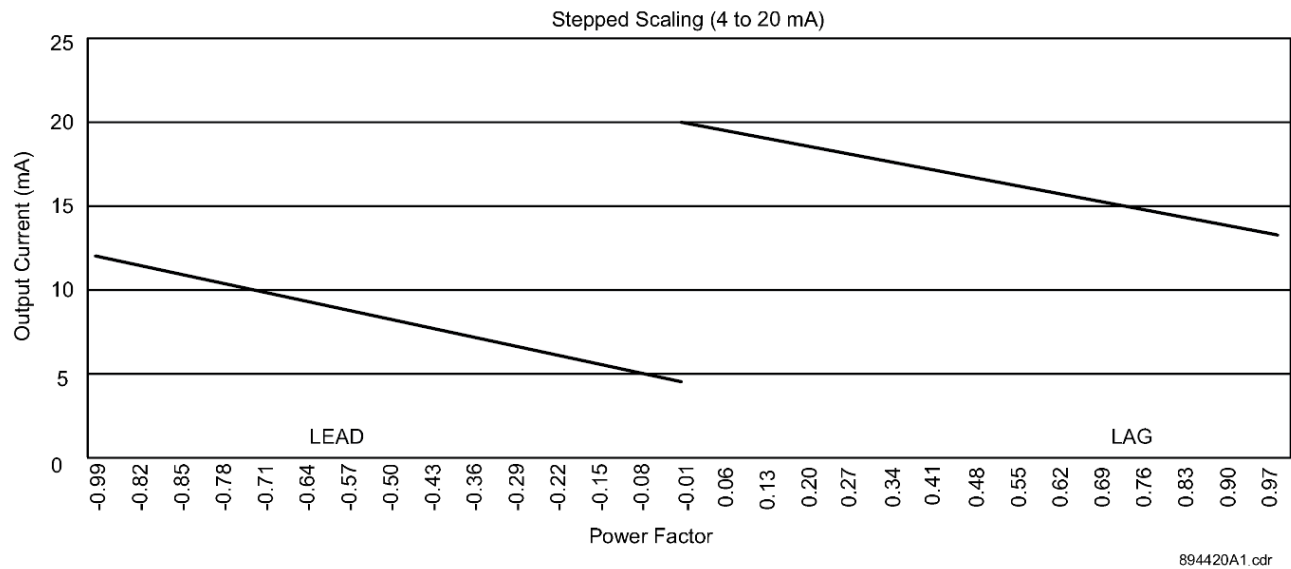


Figure 162: Step Scaling

Step scaling is a discontinuous descending linear function with one step-up point. The figure above shows the related graph for the 4 to 20 mA output range in Step Scaling. It covers all the entire selected power factor range from the minimum (-0.01) to the maximum setting (+0.00).

CHAPTER 9

PROTECTION

9.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	352
Protection	353
Transformer elements overview	354
Current elements overview	373
Voltage elements overview	427
Power elements	454
Frequency elements	459

9.2 PROTECTION

The protection elements are organized in six (6) identical setpoint groups: Setpoint Group 1 to Setpoint Group 6.

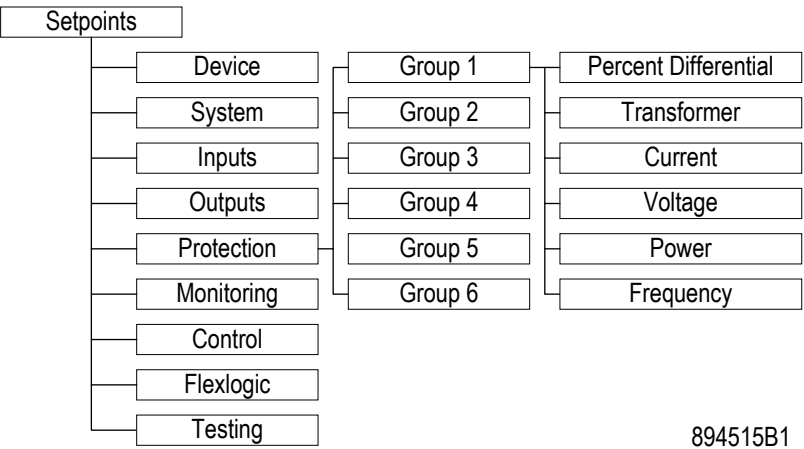


Figure 163: Protection Display Hierarchy

Each Setpoint Group has the same protection functions, depending on the relay order code.

9.3 TRANSFORMER ELEMENTS OVERVIEW

The relay provides the following transformer protection elements:

- Percent Differential
- Transformer Overload

9.3.1 PERCENTDIFFERENTIAL

The relay provides a Percent Differential element per setpoint group. The setpoints from the protection menu define a dual slope, dual breakpoint differential/restraint characteristic. The filtering and calculation of transformer differential and restraint currents, and differential current 2nd and 5th harmonics are as shown in the following figure.

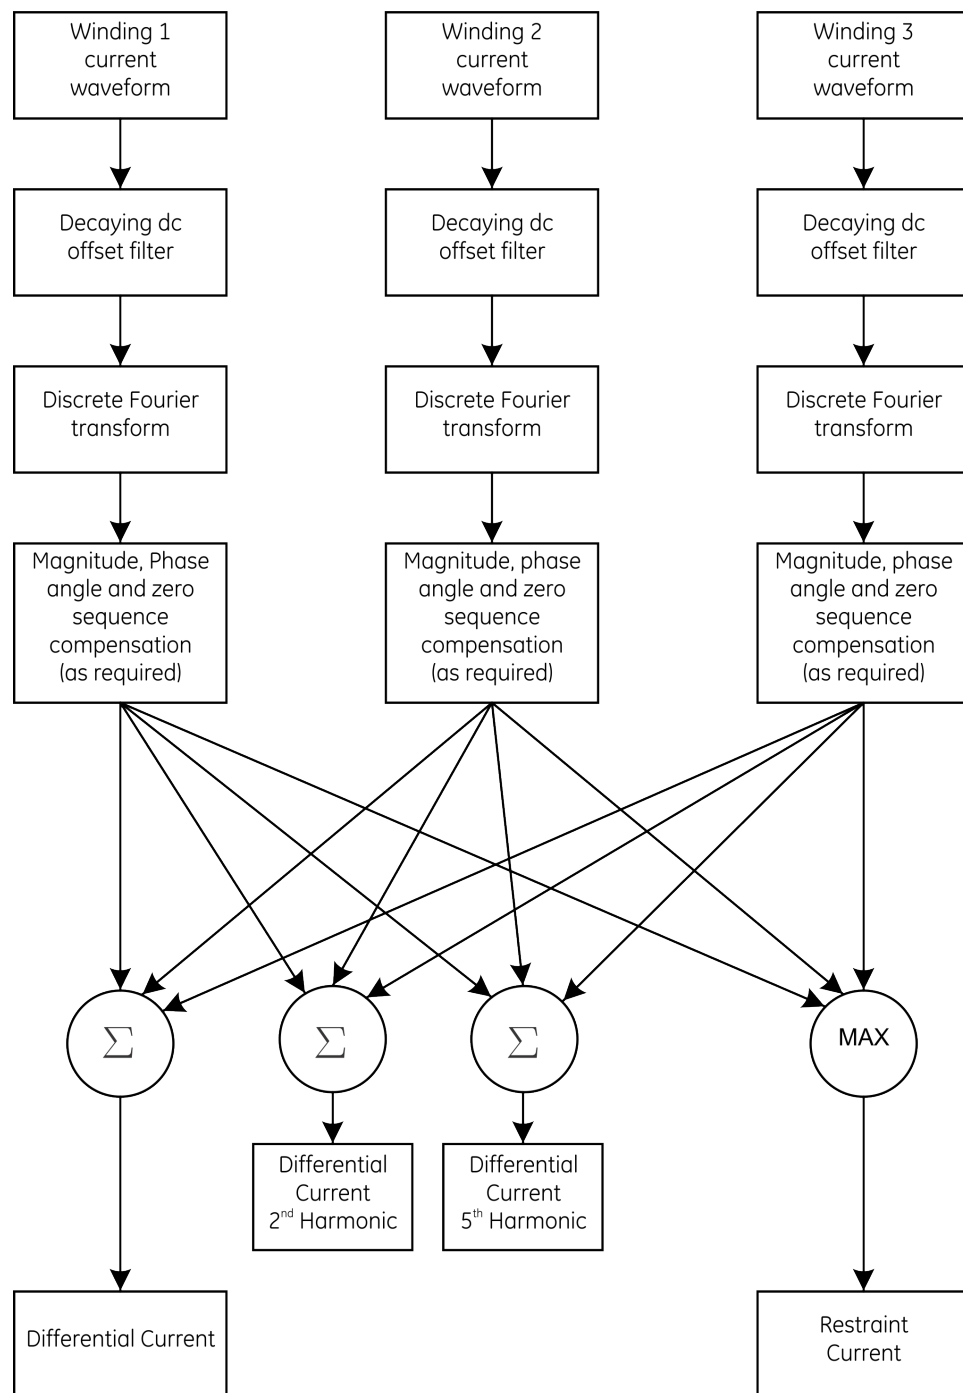


Figure 164: Filtering and Calculation of differential and restraint currents

The relay continuously calculates per-phase differential and restraint currents, and compares the ratio between the two values with a user-defined differential/restraint characteristic. The purpose of the characteristic is to define the zone of differential protection operation and the zone of no operation. The differential characteristic provides setpoints for sensitivity, dependability, and security for all types of faults, and is programmed by the user to reflect a variety of transformer differential protection applications.

The differential current is calculated per-phase as a vector sum of the currents from all windings after magnitude and angle compensation.

$$Id = \vec{I}_{1_{comp}} + \vec{I}_{2_{comp}} + \vec{I}_{3_{comp}}$$

The restraint current is calculated as a maximum of the same internally compensated currents:

$$Ir = \max(|\vec{I}_{1_{comp}}|, |\vec{I}_{2_{comp}}|, |\vec{I}_{3_{comp}}|)$$

Note:

Refer to the *Transformer Setup* chapter for the winding current magnitudes and phase shift compensation.

The following figure shows the differential/restraint characteristic of the main transformer percent differential protection.


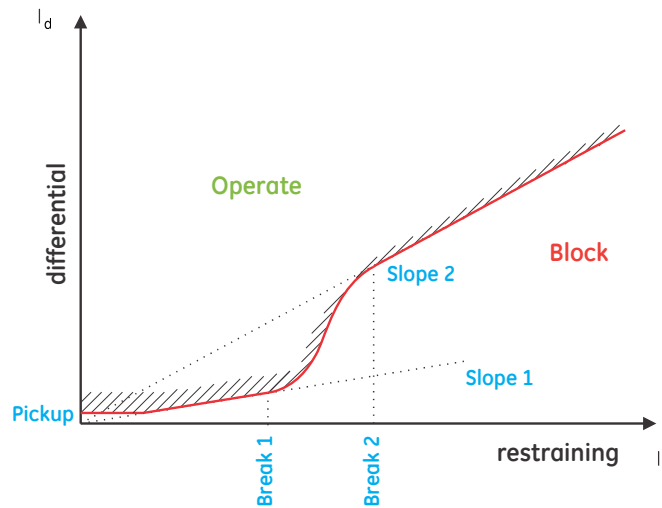


Figure 165: Differential/Restraint Characteristic for main transformer

The decision for operation or no operation is also influenced by detection of CT saturation, followed by a directional check on the currents. The saturation flag (SAT) can only be initiated during an external fault, providing the magnitude of any of the restraints is bigger than a threshold average using the Break1 and Break 2 setting configured in the menu. While at the same time, the differential/restraint ratio is below a slope average calculated based on Slope 1 and Slope 2 settings. The directional flag is not checked unless the SAT flag is initiated. Normally during internal faults, the trajectory of the differential/restraint ratio does not cross the average calculated breakpoint threshold, in which case the directional flag is not checked. The directional flag is checked during external faults (SAT flag triggered), where due to saturation, the differential/restraint trajectory is able to enter the operating region. Usually the angle between the currents during external fault and CT saturation remains larger than 90 degrees, in which case the percent differential protection does not operate. However, while in the operating region, the protection would operate, on evolving faults (external to internal fault), as the directional flag would be high (angle less than 90 degrees).

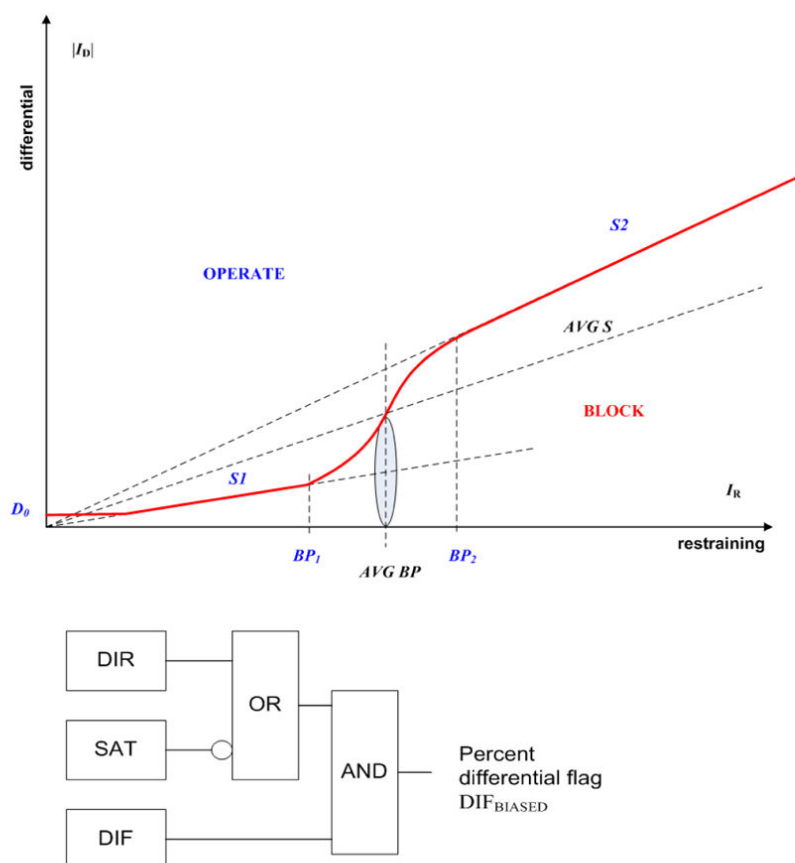

Path: **Setpoints > Protection > Group 1 (6) > Transformer > Percent Differential**

FUNCTION

Range: Disabled, Trip, Configurable

Default: Disabled

You enable the Percent Phase Differential function by selecting **Trip** or **Configurable**. The trip output relays selected to trip each breaker will operate, if the Percent Differential protection operates and these trip outputs are selected in the Percent Differential menu as *Operate*.

PICKUP

Range: 0.05 to 1.00 x CT in steps of 0.01

Default: 0.20 x CT

This setting defines the minimum differential current required for operation. Select this setting based on the amount of differential current that might be seen under normal conditions. This differential current is a result of the transformer magnetizing current, CT inaccuracies, and transformer ratio that would change by the transformer on-load tap changer. When the tap changer feature is set properly, the relay compensates the transformation ratio which impacts the differential protection automatically.

SLOPE 1

Range: 1 to 100% in steps of 1

Default: 25%

This setting is applicable for restraint currents (through currents) of zero to kneepoint 1, and defines the ratio of differential/restraint currents, above which the element will operate. Set this slope to ensure sensitivity on internal faults at normal transformer loading. The value of slope 1 must be above the maximum differential currents which may be seen for through currents with magnitudes less than break 1 setting. The differential currents can be caused by winding CT inaccuracies, the constant transformer magnetizing current, and the leakage current from in-zone grounding transformers. Usually a margin of 2% to 5% is added to this setting.

BREAK 1

Range: 0.50 to 2.00 x CT in steps of 0.01 x CT

Default: 1.50 x CT

The setting defines the limit of linear operation of the magnitude reference CT, accounting for up to 80% residual flux, which effectively reduces the capability of the CT by a factor of 5. **BREAK 1** must be set below the current that can cause CT saturation due to DC components and/or residual magnetism. Very often the **BREAK 1** setting is based on the transformer winding 1 nominal current (100% transformer loading). In such cases, you must check whether or not this setting complies with the above recommendation regarding the CT linear performance. This breakpoint marks the end of slope 1, where no CT saturation is expected for restraining (through) currents smaller than that breakpoint.

BREAK 2

Range: 2.00 to 30.00 x CT in steps of 0.01 x CT

Default: 4.00 x CT

BREAK 2 must be set below the fault current that is most likely to saturate any of the transformer CTs due to an AC component alone. The setting is expressed in times CT, where the CT rating is the magnitude reference CT either user selected, or selected automatically.

SLOPE 2

Range: 1% to 100% in steps of 1%

Default: 95%

This setting ensures stability during through fault conditions, resulting in CT saturation and spurious high differential current. **SLOPE 2** must be set high to cater for the worst case scenario, where only CTs from one winding saturate, but the CTs from the other winding(s) do not saturate. In such cases the differential/restraint ratio can go as high as 95% to 98%.

Note:

Avoid setting **SLOPE 1** higher than **SLOPE 2**. It is not practical, even though the ranges for both slopes can allow it. **SLOPE 1** is used for sensitivity of operation during internal fault in the range of 15% to 35%, and **SLOPE 2** is usually set from 80% to 98%, to provide a secure area for the diff./restr. trajectory during external faults and CT saturation.

PICKUP DELAY

Range: 0.000 to 10.000 in steps of 0.001 s

Default: 0.000 s

This setting defines the pickup time delay of the percent differential element.

INRUSH INHIBIT

Range: Disabled, 2nd Harm Block

Default: 2nd Harm Block

This setting enables or disables the inrush inhibit function. None of the settings for inrush inhibit are active, when the function is disabled.

INRUSH INHIBIT LEVEL

Range: 1.0% to 40.0% in steps of 0.1%

Default: 20.0%

This setting specifies the ratio of the 2nd harmonic differential current to the fundamental frequency differential current for the selected mode of the 2nd harmonic inhibit. The percent differential protection will be blocked from operation if the actual ratio of the differential 2nd harmonic current to the fundamental frequency differential current is above this threshold.

INRUSH INHIBIT MODE

Range: Per Phase, Average, 2-out-of-3, 1-out-of-3

Default: Per Phase

This setting specifies the mode of blocking during transformer magnetizing (inrush) conditions.

If set to *Per phase*, the function performs inrush inhibit per each phase individually.

If set to *Average*, the relay calculates the average 2nd harmonic level and compares this level against the setting for inrush inhibit level. Averaging of the 2nd harmonics follows an adaptive algorithm depending on per-phase magnitude of the fundamental frequency differential current. If the differential current on any of the three phases goes below the differential current cut-off level of $0.04 \times CT$, the 2nd harmonic current from that phase is dropped (zeroed) from the equation for averaging, and the divider is decreased from 3 to 2. The same happens if the magnitude of the differential current on one of two remaining phases during this same energization drops below the cut-off level. In this case the 2nd harmonic on this phase will be dropped from summation, and the divider will be decreased to 1.

If set to *2-out-of-3*, the relay estimates the 2nd harmonic differential current per-phase, and blocks the differential protection for all three phases, if the 2nd harmonic content from **any two phases** is higher than the 2nd harmonic value entered in the setpoint ***inrush inhibit level***.

If set to *1-out-of-3*, the relay estimates the 2nd harmonic differential current per-phase, and blocks the differential protection for all three phases, if the 2nd harmonic content from **any phase** is higher than the 2nd harmonic value entered in the setpoint ***inrush inhibit level***. This method is also known as the *cross-blocking* method.

OVEREXCITATION INHIBIT

Range: Disabled, 5th Harmonic

Default: 5th Harmonic

This setting provides 5th harmonic differential protection blocking during an over excitation condition resulting from an increased V/Hz ratio.

An overexcitation condition resulting from an increased V/Hz ratio poses a danger to the protected transformer. A given transformer can tolerate an overfluxing condition for a limited time, as the danger is associated with thermal processes in the core. Instantaneous tripping of the transformer from the differential protection is not desirable.

The relay uses a traditional 5th harmonic ratio for inhibiting the differential function during overexcitation conditions.

OVEREXCITATION LEVEL

Range: 1.0% to 40.0% in steps of 0.1%

Default: 10.0%

This setting specifies the level of 5th harmonic during overexcitation (overfluxing) transformer conditions. When the 5th harmonic level exceeds the specified **OVEREXCITATION LEVEL** setting (5th harmonic ratio) the differential element is blocked. The overexcitation inhibit works on a per-phase basis.

BLOCK

Range: Any FlexLogic operand

Default: Off

RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

Any, or all of the output relays can be selected to operate, upon percent differential operation.

The relay provides one instantaneous differential element per setpoint group.

The Instantaneous differential protection is not biased protection and operates similar to the instantaneous overcurrent protection. Inputs to this protection are computed by the relay per-phase differential currents. Operation occurs if any of the computed phase differential current is above the instantaneous differential pickup setting. The instantaneous differential protection is usually set to operate during high fault currents, and if used, its pickup must be set according to the following criteria:

The **PICKUP** setting (xCT) must be selected higher than the maximum inrush current during transformer energization.

The **PICKUP** setting must be set higher than the differential current caused CT saturation during faults outside the zone of protection.

The **PICKUP** setting must be selected lower than the maximum fault current during internal faults.

INSTANTANEOUS DIFF FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

INST DIFF PICKUP

Range: 3.00 to 30.00 x CT in steps of 0.01 x CT

Default: 10.00 x CT

This setting defines the pickup level of the differential current required for operation.

INST DIFF BLOCK

Range: Any FlexLogic operand

Default: Off

INST DIFF OUTPUT RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

The menu includes a list of available output relays to be set for operation or no operation upon protection operation.

Note:

The output relays selected under the Breaker menu for breaker trip need to be reselected if the Percent Differential function is set to "Trip". These output relays will not be operational even if selected to operate if the Percent Differential function is set to "Configurable".

EVENTS


Range: Disabled, Enabled

Default: Disabled

TARGETS

Range: Disabled, Self-Reset, Latched

Default: Latched

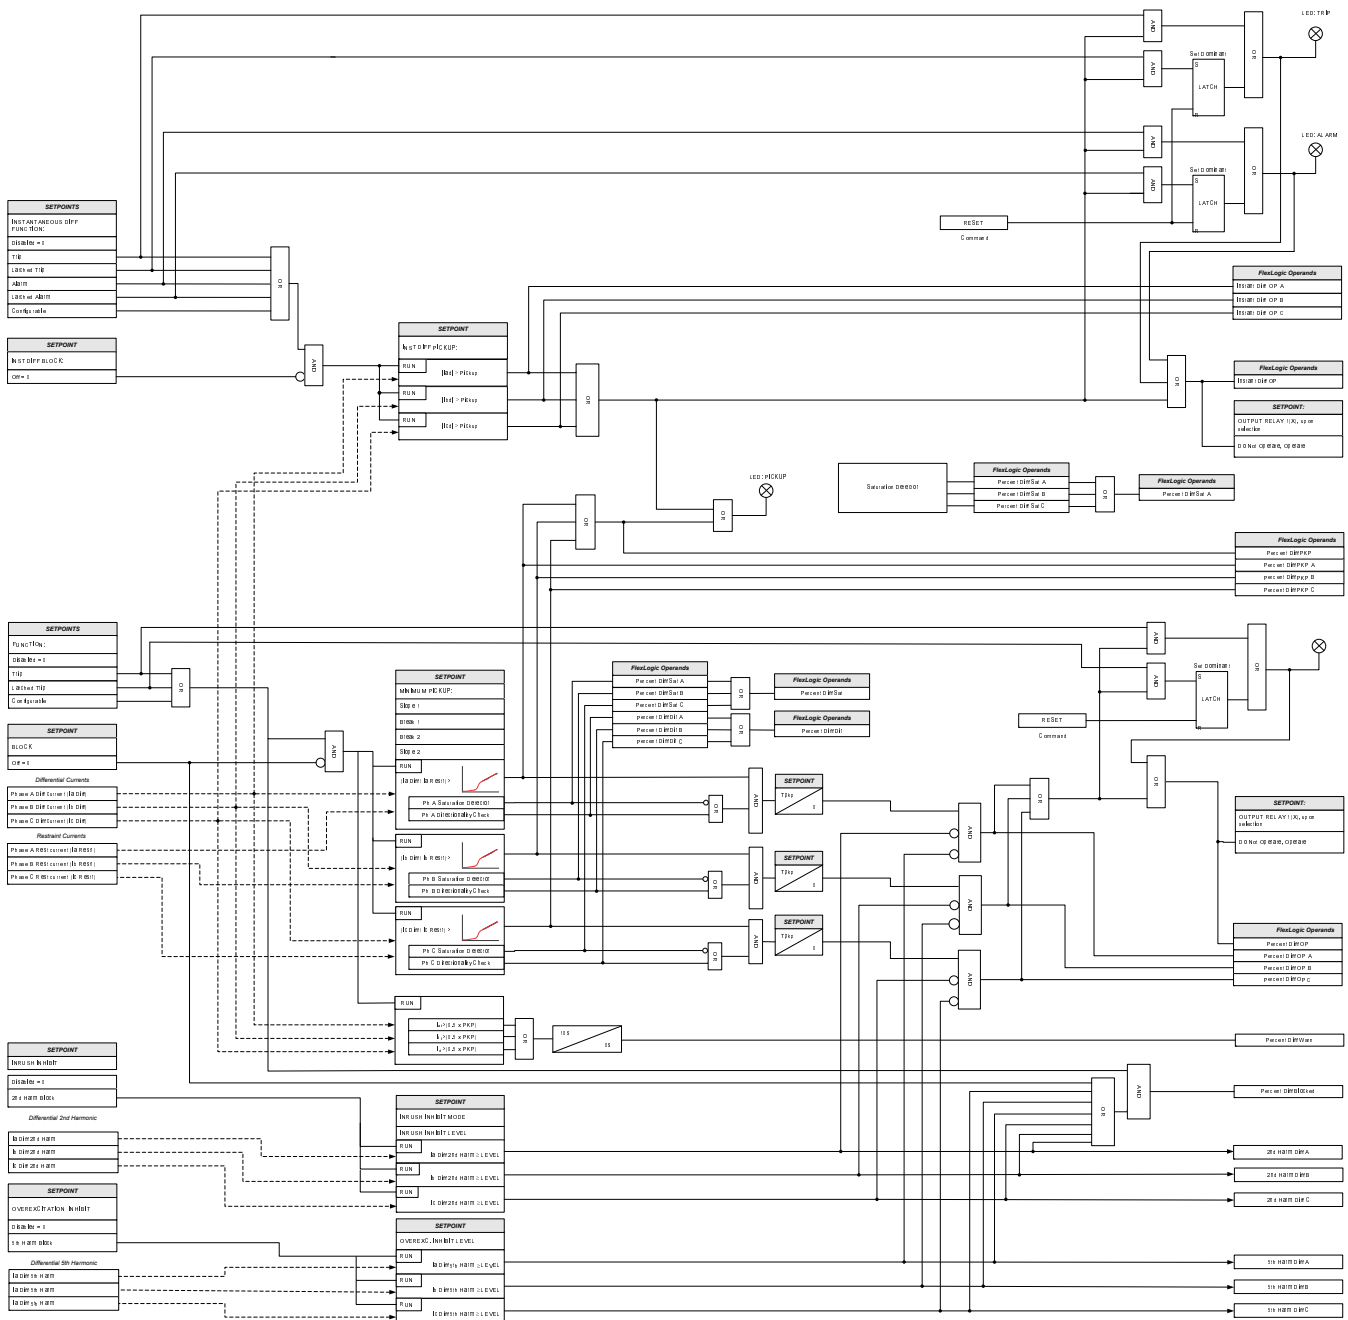

894021 C2

Figure 166: Percent and Instantaneous Differential Protection Logic Diagram

9.3.1.1 PERCENT DIFFERENTIAL EXAMPLE

The following setpoints define the differential/restraint characteristic:

Minimum Pickup

This setpoint is expressed in x CT of the reference winding. The minimum pickup defines the minimum differential current required for operation. The pickup setting must be higher than the amount of differential current that is seen under normal transformer loading conditions, and must be higher than the maximum differential current that is seen during transformer tap changer operation, providing the tap changer automatic differential current compensation is disabled, i.e. the setpoint TC Winding Currents from Tap Changer setup set to *None*. If this setpoint is set to a

current bank (J1, K1, K2) representing any of the transformer winding currents, the Minimum Pickup can be set to be more sensitive but not below the differential current caused by CT errors during normal transformer loading.

For example, for a 20MVA, 25MVA, or 28MVA power transformer with a 138kV/4.16kV ratio, and class C current transformers CT(w1) 200:5, and CT(w2) 3000:5, the CT errors and the minimum pickup setting is calculated as follows:

Winding 1 (138kV) CT – reference. Magnitude factor: $M(w1) = 1$

Winding 2 (4.16kV) CT – non reference. Magnitude factor: $M(w2) = 4.16 * 3000 / 138 * 200 = 0.4521$

Based on emergency MVA rating

Winding 1 rated current = $28\text{MVA} / (138\text{kV} * \sqrt{3}) = 117 \text{ Amps}$

Winding 2 rated current = $28\text{MVA} / (4.16 * \sqrt{3}) = 3890 \text{ Amps}$

The accuracy of the Class C current transformer is defined in the IEEE standard C37.110 as not exceeding 10% for symmetrical current magnitudes of up to 20 times the rating for a standard burden resistance:

$117\text{Amps} * 10\% = 11.7 \text{ Amps} \Rightarrow 11.7 / 200 = 0.0585 \text{ xCT}(w1)$

$3890 \text{ Amps} * 10\% = 389 \text{ Amps} \Rightarrow 389 / 3000 * M(w2) = 389 / 3000 * 0.4521 = 0.0585 \text{ xCT}(w1)$

In the worst case, the errors from the two CTs as expressed in $\text{xCT}(w1)$ as a reference can be summed as follows:

Minimum Pickup = $0.0585 + 0.0585 = 0.117$ (0.2xCT setting for Pickup is sufficient)

Slope 1

This setting defines the desired differential/restraint ratio for detecting internal faults. The percent Slope 1 setting must be above the differential/restraint ratio during external faults with non-significant fault current magnitude, but with long lasting DC component, which is able to cause CT saturation.

The Slope 1 setting can be calculated based on the restraint current during emergency loading of the transformer:

Restraint current Winding 1 = $117 \text{ Amps} / 200 = 0.585 \text{ xCT}$

Restraint current Winding 2 (scaled) = $3890 / 3000 * 0.4521 = 0.585 \text{ xCT}$

Differential current = CT error = 0.117 xCT

Slope 1 = $(0.117 / 0.585) * 100 = 20\%$

Adding 5% margin, produces a Slope 1 setting of 25%

Slope 2

The Slope 2 setting ensures stability during heavy through fault conditions, where CT saturation results in high differential current. Slope 2 must be set high enough to cope with the worst case when the CTs from one winding saturate but the CTs from the other winding do not saturate during external fault. In such case the ratio of the differential to restraint current can be as high as 95 to 98%.

Break 1

Set this to reflect the through current (restraint current) expressed in times winding 1 CT (w1) below which CT saturation due to DC components and/or residual magnetism is not expected. The latter may be as high as 80% of the nominal flux, effectively reducing the CT capabilities by factor of 5.

Therefore, this setting must correspond to the end of the linear operation of the CT with the worst characteristic, counting up to 80% remnant flux in the CT core. To calculate this setting, CTs knee-point voltage and CT secondary burden are needed.

$$B_1 = \left[\frac{V_{sat} \bullet M(w)}{R_p \bullet I_{sec}^{CT}} \right] \bullet 0.2 (\text{xCT})$$

where:

- R_b (burden resistance) = $2 (R_{lead} + R_{CTsec} + R_{relay})$
- R_{CTsec} = CT secondary resistance
- R_{lead} = conductor resistance
- R_{relay} = relay resistance
- I_{CTsec} is the CT secondary nominal current.
- V_{sat} is the CT knee-point voltage.

You calculate the Break 1 point using the above formula for each winding CT. Then the smallest per unit value (x CT) is entered as a setting.

Break 2

The **Break 2** setting defines the beginning of Slope 2. This is used to provide stability during heavy through fault conditions, where CT saturation results in high differential current. You must set **Break 2** to the through-fault current, which causes the worst CT to saturate, with saturation-free time of at least half a power cycle.

To define the degree of CT saturation, the IEEE CT saturation tool can be used:

Let the CT 3000:5 on winding 2 be the worst one which would saturate first during external faults, and let the maximum external fault current be 25kA, with an X/R ratio of 15.

The CT voltage kneepoint from the saturation characteristic is 300 V, with winding resistance of 0.5 Ohms, Burden resistance of 2.19 Ohms, and Burden reactance of 0.01 Ohms.

Logging this data into the CT sat tool, produces the following CT saturation waveform:

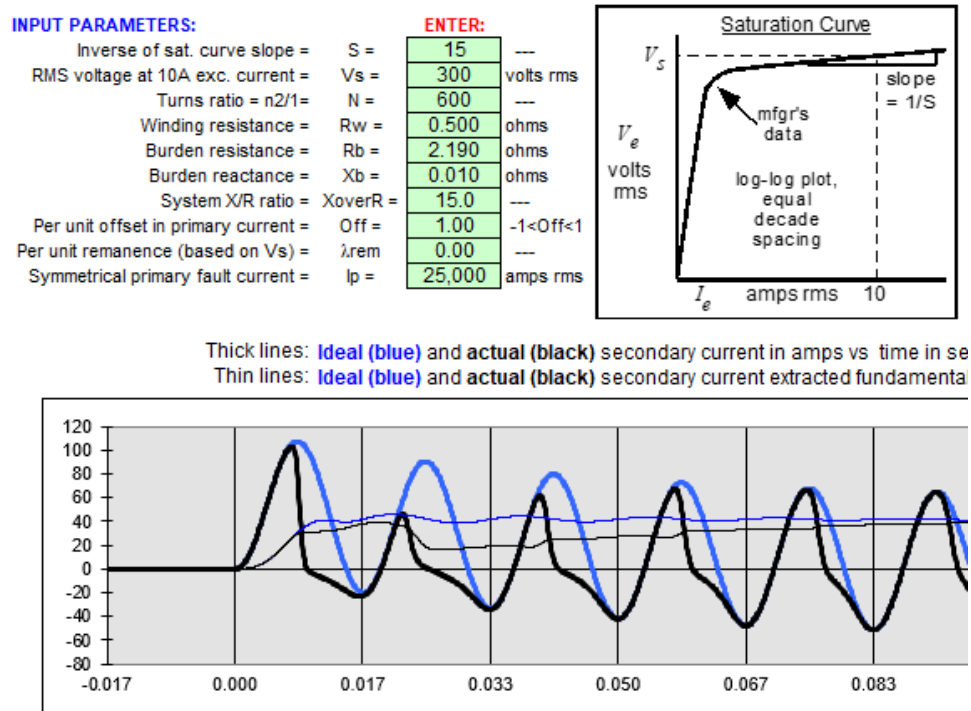
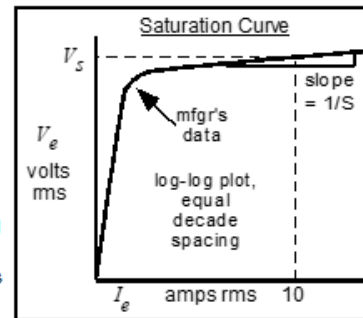


Figure 167: Saturation waveform

The waveform shows that during this external fault with maximum fault current of 25 kA, the CT (3000:5) will saturate severely, and produce only a $\frac{1}{4}$ of a cycle saturation free time. **Break 2** must be set to a through fault current so that the CT (3000:5) produces at least $\frac{1}{2}$ cycle saturation free time. The solution is to change the fault current to 15000 kA. The waveform now shows a bigger part of the first cycle before saturation.

INPUT PARAMETERS:

Inverse of sat. curve slope =	S =	15	---
RMS voltage at 10A exc. current =	Vs =	300	volts rms
Turns ratio = n2/1 =	N =	600	---
Winding resistance =	Rw =	0.500	ohms
Burden resistance =	Rb =	2.190	ohms
Burden reactance =	Xb =	0.010	ohms
System X/R ratio =	XoverR =	15.0	---
Per unit offset in primary current =	Off =	1.00	-1<Off<1
Per unit remanence (based on Vs) =	Irem	0.00	---
Symmetrical primary fault current =	Ip =	15,000	amps rms

ENTER:

Thick lines: **Ideal (blue)** and **actual (black)** secondary current in amps vs time in se
 Thin lines: **Ideal (blue)** and **actual (black)** secondary current extracted fundamental

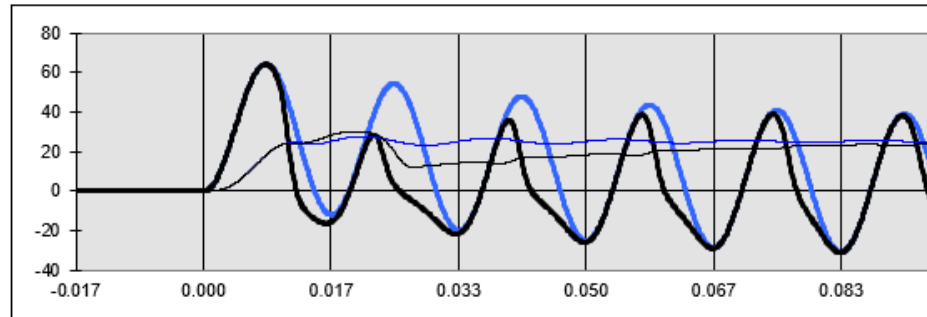
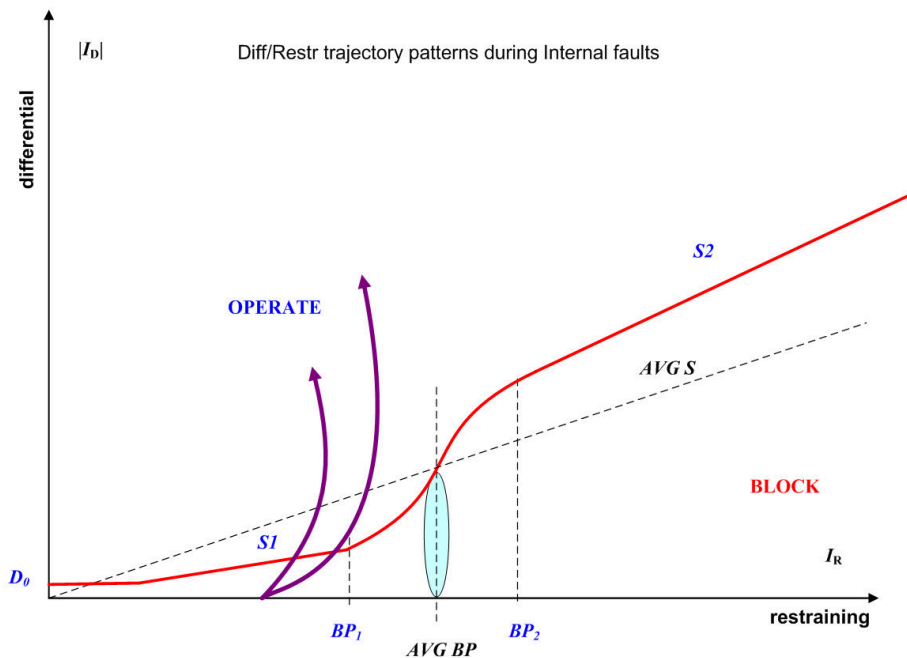


Figure 168: Compensated saturation waveform

The fault current of 15000 Amps would then be translated as $15000/3000 = 5$ times winding 2 CT.

Bringing this to the same scale with respect to winding 1 CT reference, i.e. multiplying by a magnitude of 0.4521, the Break 2 setting would be:

$$\text{Break 2} = 5 * 0.4521 = 2.21 \text{ xCT (w1)}$$



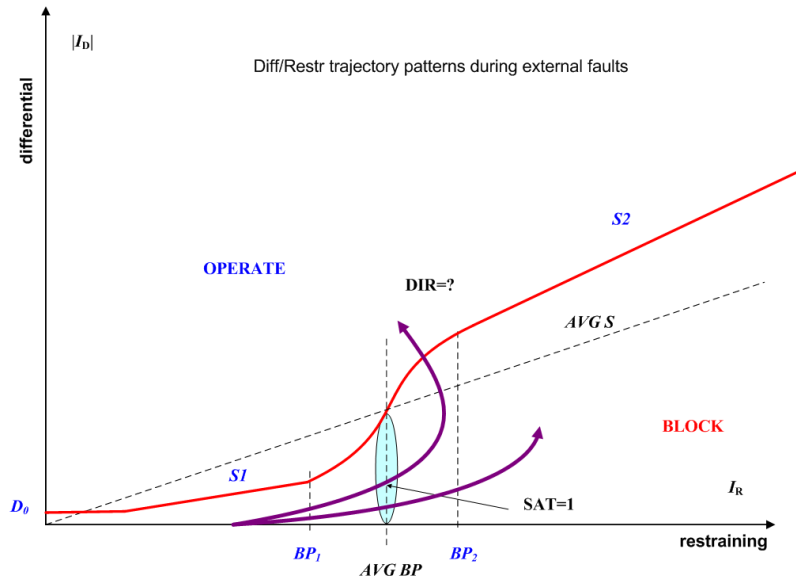


Figure 169: Examples of differential/restraint trajectory during external fault

9.3.2 TRANSFORMER INTER-TURN FAULT DETECTION

During steady state, the transformer differential current mainly contains excitation current, measurement errors and noises. Inherent CT inaccuracies are very low when transformer is carrying normal load current. For a power transformer, with the core and windings in healthy condition, the excitation current mainly depends on the transformer terminal voltage. So, an additional term, which is function of system voltage, can be added to the existing current differential equation to compensate for the steady state excitation current component. However, voltage dependent additional term will also compensate a portion of the measurement errors. So, during steady state, the compensated differential current will mainly contain noises and a fraction of the measurement errors. Traditional current differential protection becomes more sensitive due to the addition of this voltage dependent compensation term. As a result, smaller change in the differential current (caused by Inter-Turn fault) can be detected in this approach. The compensated phase differential currents (denoted by single quote superscript) are calculated using below formulas:

$$I_{ad}'(x \text{ CT}) = I_{ad} - k_a \times V_a$$

$$I_{bd}'(x \text{ CT}) = I_{bd} - k_b \times V_b$$

$$I_{cd}'(x \text{ CT}) = I_{cd} - k_c \times V_c$$

Where, k_a , k_b , k_c are the coefficients (k factors) calculated during steady state, meaning during the time that no system disturbance is detected. Voltages V_a , V_b , and V_c , in $x \text{ VT}$, are phase voltages of the chosen supervising source. I_{ad} , I_{bd} , I_{cd} are phase A, B, and C differential current phasors without any cutoff applied and in per unit of nominal of the CTs on the reference winding. During steady state, k factors, k_a , k_b , and k_c are calculated such that compensated currents are zero:

$$I_{ad}'(x \text{ CT}) = 0$$

$$I_{bd}'(x \text{ CT}) = 0$$

$$I_{cd}'(x \text{ CT}) = 0$$

k_a , k_b and k_c can be derived:

$$k_a = I_{ad} / V_a$$

$$k_b = I_{bd} / V_b$$

$$k_c = I_{cd} / V_c$$

where:

- I_{ad} is Phase A differential current measured during steady state
- I_{bd} is Phase B differential current measured during steady state
- I_{cd} is Phase C differential current measured during steady state
- V_a is phase A voltage measured during steady state
- V_b is phase B voltage measured during steady state
- V_c is phase C voltage measured during steady state

The calculation of compensated differential and k factors are vector calculation. The aforementioned equations assume a Wye connected VT. For Delta connected VTs, the corresponding line voltages will be used (V_{AB} , V_{BC} , and V_{CA}).

Note: The three phase voltages are used for the k factors (compensating coefficients) calculation and voltage compensated differential currents calculation. Also, the three phase current and voltages are used for steady state condition supervision. VT Connection must be programmed to WYE or Delta for this element to work properly.

To account for the above-mentioned steady state calculation condition, the algorithm applies a calculation blocking signal when the supervising source voltages or currents in any of the phases undergo a major change. That is when the difference between two cycle old and present time fundamental frequency phasor magnitudes reaches above 0.1 pu.

Furthermore, transformer Percent Differential element's SAT flag, 2nd harmonic inhibit (inrush currents), and 5th harmonic inhibit (over-excitation) block k factors calculations and comparators.

Inter-Turn fault involving fewer turns has negligible effect on system voltages. Compensated phase differential current increases when Inter-Turn fault takes place in a phase. The coefficients: k_a , k_b , and k_c maintain through the evolving turn to turn fault, and this consequently leads to detection of the turn to turn fault condition.

Implementation

This element is a complement to the percent differential function, and it can detect Inter-Turn fault condition using voltage compensated differential currents. The voltage-based compensation term cancels out voltage dependent portion of steady state differential current of each phase. The resultant compensated differential current therefore will be sensitive enough to pick up turn to turn faults.

The three phase differential currents (I_{ad} , I_{bd} , I_{cd}) are calculated same way as for percent differential element but without applying any cutoff level. In this function, fundamental frequency phasor magnitudes of the selected supervising source voltages and currents will be used for detecting disturbances and blocking the function. Furthermore, as long as the compensated differential current in any phase is greater than the pickup value, updating of the compensating coefficients will be blocked.

Path: Setpoints > Protection > Group 1(6) > Transformer > Inter-Turn Fault Detection

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

Note:

The Percent Differential element must be enabled in order to allow Inter-Turn Fault Detection element to be enabled using the Function setting, otherwise an alert message "Percent Differential element must be enabled first to enable Inter-Turn Fault Detection." appears.

Autoset Mode

Range: None, Auto, Manual

Default: Auto

When Autoset Mode is programmed to None, the element operation is blocked until new k factors are calculated and applied in either Manual or Auto mode.

In both Auto and Manual modes, the initial k factors update is triggered when the inter-turn function is enabled, the block condition is removed, or the Autoset Mode setting is changed.

In Auto mode, after following the initial k factors update, subsequent updates occur automatically at intervals defined by the 'Autoset Recurring Timer' setting.

In Manual mode, after the initial update, the k factors update is recalculated only when the 'Manual k factor Update' command is executed by changing its value from 'No' to 'Yes'. This setting automatically reverts to 'No' after a one-shot update is detected.

Autoset Recurring Time

Range: 1 to 240 min in steps of 1 min

Default: 30 min

Manual k Factor Update

Range: No, Yes

Default: No

Note:

The execution of the k factors update is triggered when the command associated with the setting 'Manual k factor Update' is executed by changing its value from 'No' to 'Yes'. This setting automatically reverts to 'No' once the command is executed.

Force k Factor Update

Range: Off, Any FlexLogic operand

Default: Off

Regardless of whether the Autoset Mode is set to Auto or Manual, the k factors recalculation is forcibly triggered when the operand assigned to 'Force k Factor Update' setting becomes true. The k factors update is initiated 200 milliseconds after the operand assertion, irrespective of how long the operand remains active. This delay ensures that any process associated with the 'Force k Factor Update' setting has time to complete before the k factors recalculation begins.

One possible application of this feature is in tap changer position operations. The tap changer may signal initiation of tap changing operation, but the exact completion time may be uncertain. Therefore, a 200 ms security delay is added to ensure that the tap changer operation is completed before the k factors update is occurs.

Additionally, the operation of the pickup comparator is blocked for 300 milliseconds after the 'Force k Factor Update' operand becomes true. This added delay provides sufficient time for the k-factor recalculation to complete before the pickup comparator resumes its function.

Note: In Auto, Manual, or Forced k factors update modes, if a k factors update request is initiated but the calculation is blocked due to a disturbance or a voltage supervision failure - the operand "Inter-Turn Flt k Fac Cal Fail" is asserted for two power cycles. On the contrary, if the k-factor update is successfully recalculated and applied, the operand "Inter-Turn Flt k Fac Cal Apld" is set asserted for two power cycles.

PICKUP STAGE1

Range: 0.010 to 0.500 x CT in steps of 0.001

Default: 0.050 x CT

The values of this setting and the following Pickup Stage2 are expressed as x CT based on the nominal of the CT of the Reference Winding.

PICKUP DELAY STAGE1

Range: 0 to 600.000 seconds in steps of 1 s

Default: 0.020 seconds

PICKUP STAGE2

Range: 0.010 to 0.500 x CT in steps of 0.001

Default: 0.100 x CT

PICKUP DELAY STAGE2

Range: 0 to 600.000 seconds in steps of 1 s

Default: 0.020 seconds

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

When the assigned operand becomes high, all the comparators are disabled causing output operands to reset, except for the latched outputs, which remains high. Additionally, all timers reset, and the calculations of k factors are blocked. The recalculation of k factors is triggered once the block operand becomes low.

OUTPUT RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched



9.3.3 TRANSFORMER OVERLOAD

The Transformer overload element may be used as an instantaneous element with no intentional delay or as a definite time element. Each winding load current is compared with the pickup setpoint to produce an alarm or trip condition. Alternatively, the overload detection is available through the over-temperature alarm input. An external transformer over temperature detector can be connected to this input.

Path: *Setpoints > Protection > Group 1(6) > Transformer > Overload*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

PICKUP

Range: 50 to 300 % in steps of 1 %

Default: 208 %

This setting identifies the level of transformer overload, where the pickup delay starts timing. For a two winding transformer, the setting is expressed as a percentage of the transformer base MVA rating, and is normally set at or above the maximum rated MVA from the transformer nameplate. For a three winding transformer, the setting is expressed as a percentage of the winding base MVA rating.

PICKUP DELAY

Range: 0 to 60000 seconds in steps of 1 s

Default: 10 seconds

OVERTEMP INPUT

Range: Off, Any FlexLogic operand

Default: Off

Select Any FlexLogic operand that, when asserted, indicates the transformer cooling system has failed or an over-temperature condition exists on the transformer.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched

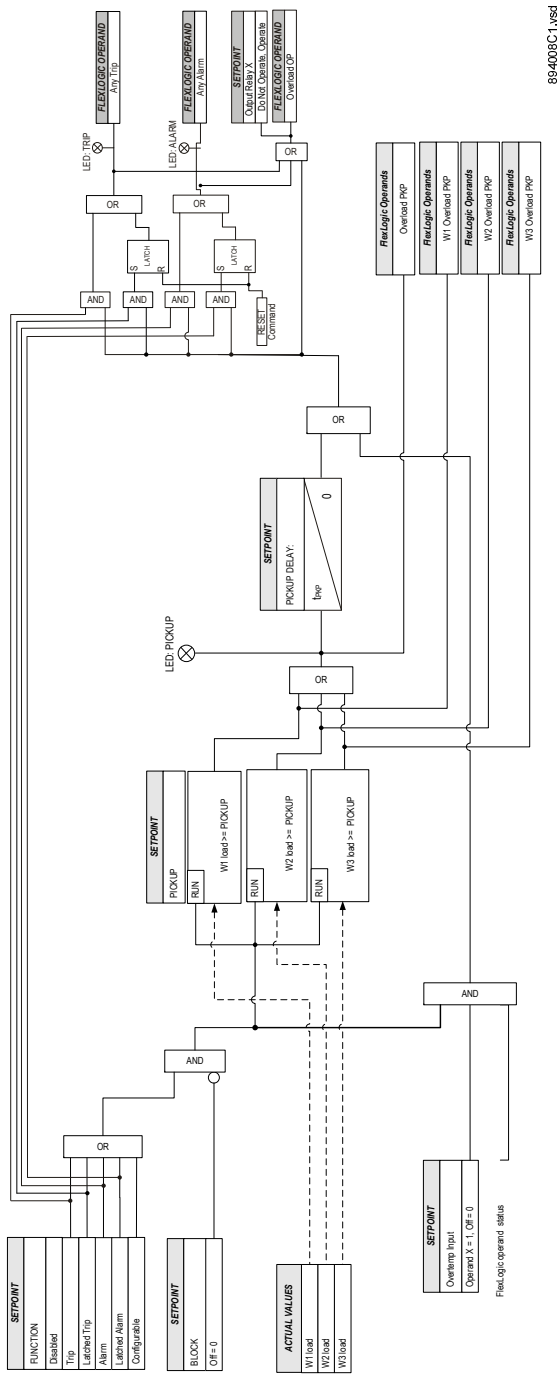

894008C1.16d

Figure 171: Transformer Overload Logic Diagram

9.4 CURRENT ELEMENTS OVERVIEW

As well as the transformer protection elements, the 845 transformer protection relay provides the following current protection elements:

- Phase time overcurrent (Phase TOC)
- Phase instantaneous overcurrent Phase IOC
- Phase directional overcurrent (Phase Directional OC)
- Neutral time overcurrent (Neutral TOC)
- Neutral instantaneous overcurrent (Neutral IOC)
- Neutral directional overcurrent (Neutral Directional OC)
- Ground time overcurrent (Ground TOC)
- Ground instantaneous overcurrent (Ground IOC)
- Ground directional overcurrent (Ground OC)
- Restricted ground fault
- Negative sequence time overcurrent (Negative Sequence TOC)
- Negative sequence instantaneous overcurrent (Negative Sequence IOC)
- Negative sequence directional overcurrent (Negative Sequence Dir. OC)

The relay has six setpoint groups. The programming of the time-current characteristics of these elements is identical in all cases and is only covered in this section. The required curve is established by programming a Pickup Current, Curve Shape, Curve Multiplier, and Reset Time. The Curve Shape can be either a standard shape or a user-defined shape programmed with the FlexCurve feature. Accurate coordination may require changing the time overcurrent characteristics of particular elements under different conditions.

9.4.1 INVERSE TIME OVERCURRENT CURVES

The Inverse Time Overcurrent Curves used by the Time Overcurrent elements are the IEEE, IEC, GE Type IAC, ANSI, I^2t and I^4t standard curve shapes. This allows for simplified coordination with downstream devices.

If none of these curve shapes are adequate, FlexCurves may be used to customize the inverse time curve characteristics. The definite time curve is also an option that may be appropriate if only simple protection is required.

OVERCURRENT CURVE TYPES

IEEE	ANSI	IEC	GE TYPE IAC	OTHER
IEEE Extremely Inverse	ANSI Extremely Inverse	IEC Standard Inverse	IAC Extremely Inverse	I^2t
IEEE Very Inverse	ANSI Very Inverse	IEC Very Inverse	IAC Very Inverse	I^4t
IEEE Moderately Inverse	ANSI Normally Inverse	IEC Extremely Inverse	IAC Inverse	FlexCurves™ A, B, C and D
US Inverse	ANSI Moderately Inverse	UK Long Time Inverse	IAC Short Inverse	Recloser Curve
US Short Time Inverse		Rectifier		Definite Time
		FR Short Time Inverse		RI
		Standard Inverse (1.3s)		IDG
		BPN EDF		EPATR B

A time dial multiplier setting allows the selection of a multiple of the base curve shape (where the time dial multiplier = 1) with the curve shape setting. Unlike the electromechanical time dial equivalent, operate times are directly

proportional to the time multiplier (**TD MULTIPLIER**) setting value. For example, all times for a multiplier of 10 are 10 times the multiplier 1 or base curve values. Setting the multiplier to zero results in an instantaneous response to all current levels above Pickup.

Time Overcurrent time calculations are made with an internal *energy capacity* memory variable. When this variable indicates that the energy capacity has reached 100%, a Time Overcurrent element will operate. If less than 100% energy capacity is accumulated in this variable and the current falls below the dropout threshold of 97 to 98% of the Pickup value, the variable must be reduced.

Two types of this resetting operation are available: *DT* and *Inverse*. The *Inverse* selection can be used where the relay must coordinate with electromechanical relays. The *DT* selection is intended for applications with other relays, such as most static relays, which set the energy capacity directly to zero or some fixed time delay when the current falls below the reset threshold or when inverse curve coordination is not available.

Note:

In IEEE, ANSI, IAC, I2T, I4T User Curves, multiplier setting TDM value is provided by the **Time Dial** setting

IEEE CURVES

The IEEE Time Overcurrent curve shapes conform to industry standards and the IEEE C37.112-1996 curve classifications for extremely, very, and moderately inverse. The IEEE curves are derived from the formula:

$$T = TDM \times \left[\frac{A}{\left(I / I_{pickup} \right)^p - 1} + B \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - \left(I / I_{pickup} \right)^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- A, B, p = constants
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)
- t_r = characteristic constant

IEEE INVERSE TIME CURVE CONSTANTS

IEEE CURVE SHAPE	A	B	P	t_r
IEEE Extremely Inverse	28.2	0.1217	2.000	29.1
IEEE Very Inverse	19.61	0.491	2.000	21.6
IEEE Moderately Inverse	0.0515	0.1140	0.02000	4.85
US Inverse	5.95	0.180	2.000	5.95
US Short Time Inverse	0.16758	0.11858	0.02000	2.261

IEEE CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
IEEE EXTREMELY INVERSE										
0.5	11.341	4.761	1.823	1.001	0.648	0.464	0.355	0.285	0.237	0.203

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
1.0	22.682	9.522	3.647	2.002	1.297	0.927	0.709	0.569	0.474	0.407
2.0	45.363	19.043	7.293	4.003	2.593	1.855	1.418	1.139	0.948	0.813
4.0	90.727	38.087	14.587	8.007	5.187	3.710	2.837	2.277	1.897	1.626
6.0	136.090	57.130	21.880	12.010	7.780	5.564	4.255	3.416	2.845	2.439
8.0	181.454	76.174	29.174	16.014	10.374	7.419	5.674	4.555	3.794	3.252
10.0	226.817	95.217	36.467	20.017	12.967	9.274	7.092	5.693	4.742	4.065
IEEE VERY INVERSE										
0.5	8.090	3.514	1.471	0.899	0.654	0.526	0.450	0.401	0.368	0.345
1.0	16.179	7.028	2.942	1.798	1.308	1.051	0.900	0.802	0.736	0.689
2.0	32.358	14.055	5.885	3.597	2.616	2.103	1.799	1.605	1.472	1.378
4.0	64.716	28.111	11.769	7.193	5.232	4.205	3.598	3.209	2.945	2.756
6.0	97.074	42.166	17.654	10.790	7.849	6.308	5.397	4.814	4.417	4.134
8.0	129.432	56.221	23.538	14.387	10.465	8.410	7.196	6.418	5.889	5.513
10.0	161.790	70.277	29.423	17.983	13.081	10.513	8.995	8.023	7.361	6.891
IEEE MODERATELY INVERSE										
0.5	3.220	1.902	1.216	0.973	0.844	0.763	0.706	0.663	0.630	0.603
1.0	6.439	3.803	2.432	1.946	1.688	1.526	1.412	1.327	1.260	1.207
2.0	12.878	7.606	4.864	3.892	3.377	3.051	2.823	2.653	2.521	2.414
4.0	25.756	15.213	9.729	7.783	6.753	6.102	5.647	5.307	5.041	4.827
6.0	38.634	22.819	14.593	11.675	10.130	9.153	8.470	7.960	7.562	7.241
8.0	51.512	30.426	19.458	15.567	13.507	12.204	11.294	10.614	10.083	9.654
10.0	64.390	38.032	24.322	19.458	16.883	15.255	14.117	13.267	12.604	12.068
US Inverse										
0.5	2.470	1.082	0.462	0.288	0.214	0.175	0.152	0.137	0.127	0.120
1.0	4.940	2.163	0.924	0.577	0.428	0.350	0.304	0.274	0.254	0.240
2.0	9.880	4.327	1.848	1.153	0.856	0.700	0.608	0.549	0.509	0.480
4.0	19.760	8.653	3.695	2.307	1.712	1.400	1.216	1.098	1.018	0.960
6.0	29.640	12.980	5.543	3.460	2.568	2.100	1.824	1.647	1.526	1.441
8.0	39.520	17.307	7.390	4.613	3.423	2.800	2.432	2.196	2.035	1.921
10.0	49.400	21.633	9.238	5.767	4.279	3.500	3.040	2.744	2.544	2.401
US Short Time Inverse										
0.5	10.350	6.062	3.831	3.040	2.621	2.356	2.171	2.032	1.924	1.837
1.0	20.700	12.123	7.662	6.079	5.241	4.712	4.341	4.065	3.849	3.674
2.0	41.400	24.247	15.324	12.159	10.483	9.423	8.683	8.130	7.698	7.349
4.0	82.800	48.493	30.648	24.317	20.966	18.847	17.365	16.259	15.395	14.698
6.0	124.200	72.740	45.972	36.476	31.448	28.270	26.048	24.389	23.093	22.046
8.0	165.600	96.987	61.296	48.635	41.931	37.694	34.730	32.519	30.791	29.395
10.0	207.001	121.233	76.620	60.793	52.414	47.117	43.413	40.648	38.489	36.744

ANSI CURVES

The ANSI time overcurrent curve shapes conform to industry standards and the ANSI C37.90 curve classifications for extremely, very, and moderately inverse. The ANSI curves are derived from the following formulae:

$$T = TDM \times \left[A + \frac{B}{(I/I_{pickup}) - C} + \frac{D}{((I/I_{pickup}) - C)^2} + \frac{E}{((I/I_{pickup}) - C)^3} \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - (I/I_{pickup})^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- A to E = constants
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)
- t_r = characteristic constant

ANSI INVERSE TIME CURVE CONSTANTS

ANSI CURVE SHAPE	A	B	C	D	E	t_r
ANSI Extremely Inverse	0.0399	0.2294	0.5000	3.0094	0.7222	5.67
ANSI Very Inverse	0.0615	0.7989	0.3400	-0.2840	4.0505	3.88
ANSI Normally Inverse	0.0274	2.2614	0.3000	-4.1899	9.1272	5.95
ANSI Moderately Inverse	0.1735	0.6791	0.8000	-0.0800	0.1271	1.08

ANSI CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
ANSI EXTREMELY INVERSE										
0.5	2.000	0.872	0.330	0.184	0.124	0.093	0.075	0.063	0.055	0.049
1.0	4.001	1.744	0.659	0.368	0.247	0.185	0.149	0.126	0.110	0.098
2.0	8.002	3.489	1.319	0.736	0.495	0.371	0.298	0.251	0.219	0.196
4.0	16.004	6.977	2.638	1.472	0.990	0.742	0.596	0.503	0.439	0.393
6.0	24.005	10.466	3.956	2.208	1.484	1.113	0.894	0.754	0.658	0.589
8.0	32.007	13.955	5.275	2.944	1.979	1.483	1.192	1.006	0.878	0.786
10.0	40.009	17.443	6.594	3.680	2.474	1.854	1.491	1.257	1.097	0.982
ANSI VERY INVERSE										
0.5	1.567	0.663	0.268	0.171	0.130	0.108	0.094	0.085	0.078	0.073
1.0	3.134	1.325	0.537	0.341	0.260	0.216	0.189	0.170	0.156	0.146
2.0	6.268	2.650	1.074	0.682	0.520	0.432	0.378	0.340	0.312	0.291
4.0	12.537	5.301	2.148	1.365	1.040	0.864	0.755	0.680	0.625	0.583

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
6.0	18.805	7.951	3.221	2.047	1.559	1.297	1.133	1.020	0.937	0.874
8.0	25.073	10.602	4.295	2.730	2.079	1.729	1.510	1.360	1.250	1.165
10.0	31.341	13.252	5.369	3.412	2.599	2.161	1.888	1.700	1.562	1.457
ANSI NORMALLY INVERSE										
0.5	2.142	0.883	0.377	0.256	0.203	0.172	0.151	0.135	0.123	0.113
1.0	4.284	1.766	0.754	0.513	0.407	0.344	0.302	0.270	0.246	0.226
2.0	8.568	3.531	1.508	1.025	0.814	0.689	0.604	0.541	0.492	0.452
4.0	17.137	7.062	3.016	2.051	1.627	1.378	1.208	1.082	0.983	0.904
6.0	25.705	10.594	4.524	3.076	2.441	2.067	1.812	1.622	1.475	1.356
8.0	34.274	14.125	6.031	4.102	3.254	2.756	2.415	2.163	1.967	1.808
10.0	42.842	17.656	7.539	5.127	4.068	3.445	3.019	2.704	2.458	2.260
ANSI MODERATELY INVERSE										
0.5	0.675	0.379	0.239	0.191	0.166	0.151	0.141	0.133	0.128	0.123
1.0	1.351	0.757	0.478	0.382	0.332	0.302	0.281	0.267	0.255	0.247
2.0	2.702	1.515	0.955	0.764	0.665	0.604	0.563	0.533	0.511	0.493
4.0	5.404	3.030	1.910	1.527	1.329	1.208	1.126	1.066	1.021	0.986
6.0	8.106	4.544	2.866	2.291	1.994	1.812	1.689	1.600	1.532	1.479
8.0	10.807	6.059	3.821	3.054	2.659	2.416	2.252	2.133	2.043	1.972
10.0	13.509	7.574	4.776	3.818	3.324	3.020	2.815	2.666	2.554	2.465

IEC CURVES

For European applications, the relay offers three standard curves defined in IEC 255-4 and British standard BS142. These are defined as IEC Curve A, IEC Curve B, and IEC Curve C. The formula for these curves is:

$$T = TDM \times \left[\frac{K}{\left(I / I_{pickup} \right)^E - 1} \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - \left(I / I_{pickup} \right)^2} \right]$$

BPN EDF Curve Operate Equation

$$T = TDM \times \left[\frac{K}{\left(I / I_{pickup} \right)^E - 1} + L \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting

- K, E = constants
- t_r = characteristic constant
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

IEC (BS) INVERSE TIME CURVE CONSTANTS

IEC (BS) CURVE SHAPE	K	E	t_r
IEC Curve A (BS142)	0.140	0.020	9.7
IEC Curve B (BS142)	13.500	1.000	43.2
IEC Curve C (BS142)	80.000	2.000	58.2
IEC Short Inverse	0.050	0.040	0.500
Long Time Inverse	120	1	-
Rectifier	45900	5.6	-
Standard Inverse (1.3s)	0.0607	0.02	3.55

IEC (BS) CURVE SHAPE	K	E	L
BPN EDF	1000	2	0.655

Note:

When using Long Time Inverse, Rectifier, IEC Short Time Inverse, BPN EDF curves for the operate characteristic, DT (Definite Time) is always used for the Reset characteristic

IEC CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
IEC CURVE A										
0.05	0.860	0.501	0.315	0.249	0.214	0.192	0.176	0.165	0.156	0.149
0.10	1.719	1.003	0.630	0.498	0.428	0.384	0.353	0.330	0.312	0.297
0.20	3.439	2.006	1.260	0.996	0.856	0.767	0.706	0.659	0.623	0.594
0.40	6.878	4.012	2.521	1.992	1.712	1.535	1.411	1.319	1.247	1.188
0.60	10.317	6.017	3.781	2.988	2.568	2.302	2.117	1.978	1.870	1.782
0.80	13.755	8.023	5.042	3.984	3.424	3.070	2.822	2.637	2.493	2.376
1.00	17.194	10.029	6.302	4.980	4.280	3.837	3.528	3.297	3.116	2.971
IEC CURVE B										
0.05	1.350	0.675	0.338	0.225	0.169	0.135	0.113	0.096	0.084	0.075
0.10	2.700	1.350	0.675	0.450	0.338	0.270	0.225	0.193	0.169	0.150
0.20	5.400	2.700	1.350	0.900	0.675	0.540	0.450	0.386	0.338	0.300
0.40	10.800	5.400	2.700	1.800	1.350	1.080	0.900	0.771	0.675	0.600
0.60	16.200	8.100	4.050	2.700	2.025	1.620	1.350	1.157	1.013	0.900
0.80	21.600	10.800	5.400	3.600	2.700	2.160	1.800	1.543	1.350	1.200
1.00	27.000	13.500	6.750	4.500	3.375	2.700	2.250	1.929	1.688	1.500
IEC CURVE C										

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.05	3.200	1.333	0.500	0.267	0.167	0.114	0.083	0.063	0.050	0.040
0.10	6.400	2.667	1.000	0.533	0.333	0.229	0.167	0.127	0.100	0.081
0.20	12.800	5.333	2.000	1.067	0.667	0.457	0.333	0.254	0.200	0.162
0.40	25.600	10.667	4.000	2.133	1.333	0.914	0.667	0.508	0.400	0.323
0.60	38.400	16.000	6.000	3.200	2.000	1.371	1.000	0.762	0.600	0.485
0.80	51.200	21.333	8.000	4.267	2.667	1.829	1.333	1.016	0.800	0.646
1.00	64.000	26.667	10.000	5.333	3.333	2.286	1.667	1.270	1.000	0.808
IEC SHORT INVERSE										
0.05	0.153	0.089	0.056	0.044	0.038	0.034	0.031	0.029	0.027	0.026
0.10	0.306	0.178	0.111	0.088	0.075	0.067	0.062	0.058	0.054	0.052
0.20	0.612	0.356	0.223	0.175	0.150	0.135	0.124	0.115	0.109	0.104
0.40	1.223	0.711	0.445	0.351	0.301	0.269	0.247	0.231	0.218	0.207
0.60	1.835	1.067	0.668	0.526	0.451	0.404	0.371	0.346	0.327	0.311
0.80	2.446	1.423	0.890	0.702	0.602	0.538	0.494	0.461	0.435	0.415
1.00	3.058	1.778	1.113	0.877	0.752	0.673	0.618	0.576	0.544	0.518
Rectifier										
0.05	264.241	48.313	4.896	0.976	0.280	0.101	0.042	0.020	0.010	0.006
0.10	528.482	96.626	9.792	1.952	0.559	0.201	0.085	0.040	0.021	0.012
0.20	1056.964	193.251	19.583	3.904	1.119	0.403	0.170	0.080	0.042	0.023
0.40	2113.928	386.502	39.167	7.808	2.237	0.806	0.340	0.161	0.083	0.046
0.60	3170.891	579.754	58.750	11.712	3.356	1.209	0.510	0.241	0.125	0.069
0.80	4227.855	773.005	78.334	15.615	4.474	1.612	0.680	0.322	0.166	0.092
1.00	5284.819	966.256	97.917	19.519	5.593	2.015	0.850	0.402	0.208	0.115
Standard Inverse (1.3s)										
0.05	0.373	0.217	0.137	0.108	0.093	0.083	0.076	0.071	0.068	0.064
0.10	0.745	0.435	0.273	0.216	0.186	0.166	0.153	0.143	0.135	0.129
0.20	1.491	0.870	0.546	0.432	0.371	0.333	0.306	0.286	0.270	0.258
0.40	2.982	1.739	1.093	0.864	0.742	0.665	0.612	0.572	0.540	0.515
0.60	4.473	2.609	1.639	1.295	1.113	0.998	0.918	0.858	0.811	0.773
0.80	5.964	3.479	2.186	1.727	1.484	1.331	1.224	1.144	1.081	1.030
1.00	7.455	4.348	2.732	2.159	1.856	1.664	1.530	1.429	1.351	1.288

IAC CURVES

The curves for the General Electric type IAC relay family are derived from the formula:

$$T = TDM \times \left[A + \frac{B}{\left(\frac{I}{I_{pickup}} \right) - C} + \frac{D}{\left(\left(\frac{I}{I_{pickup}} \right) - C \right)^2} + \frac{E}{\left(\left(\frac{I}{I_{pickup}} \right) - C \right)^3} \right], \quad T_{RESET} = TDM \times \left[\frac{t_r}{1 - \left(\frac{I}{I_{pickup}} \right)^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting

- I = input current
- I_{pickup} = Pickup Current setting
- A to E = constants
- t_r = characteristic constant
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

GE TYPE IAC INVERSE TIME CURVE CONSTANTS

IAC CURVE SHAPE	A	B	C	D	E	t_r
IAC Extremely Inverse	0.0040	0.6379	0.6200	1.7872	0.2461	6.008
IAC Very Inverse	0.0900	0.7965	0.1000	-1.2885	7.9586	4.678
IAC Inverse	0.2078	0.8630	0.8000	-0.4180	0.1947	0.990
IAC Short Inverse	0.0428	0.0609	0.6200	-0.0010	0.0221	0.222

IAC CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
IAC EXTREMELY INVERSE										
0.5	1.699	0.749	0.303	0.178	0.123	0.093	0.074	0.062	0.053	0.046
1.0	3.398	1.498	0.606	0.356	0.246	0.186	0.149	0.124	0.106	0.093
2.0	6.796	2.997	1.212	0.711	0.491	0.372	0.298	0.248	0.212	0.185
4.0	13.591	5.993	2.423	1.422	0.983	0.744	0.595	0.495	0.424	0.370
6.0	20.387	8.990	3.635	2.133	1.474	1.115	0.893	0.743	0.636	0.556
8.0	27.183	11.987	4.846	2.844	1.966	1.487	1.191	0.991	0.848	0.741
10.0	33.979	14.983	6.058	3.555	2.457	1.859	1.488	1.239	1.060	0.926
IAC VERY INVERSE										
0.5	1.451	0.656	0.269	0.172	0.133	0.113	0.101	0.093	0.087	0.083
1.0	2.901	1.312	0.537	0.343	0.266	0.227	0.202	0.186	0.174	0.165
2.0	5.802	2.624	1.075	0.687	0.533	0.453	0.405	0.372	0.349	0.331
4.0	11.605	5.248	2.150	1.374	1.065	0.906	0.810	0.745	0.698	0.662
6.0	17.407	7.872	3.225	2.061	1.598	1.359	1.215	1.117	1.046	0.992
8.0	23.209	10.497	4.299	2.747	2.131	1.813	1.620	1.490	1.395	1.323
10.0	29.012	13.121	5.374	3.434	2.663	2.266	2.025	1.862	1.744	1.654
IAC INVERSE										
0.5	0.578	0.375	0.266	0.221	0.196	0.180	0.618	0.160	0.154	0.148
1.0	1.155	0.749	0.532	0.443	0.392	0.360	0.337	0.320	0.307	0.297
2.0	2.310	1.499	1.064	0.885	0.784	0.719	0.674	0.640	0.614	0.594
4.0	4.621	2.997	2.128	1.770	1.569	1.439	1.348	1.280	1.229	1.188
6.0	6.931	4.496	3.192	2.656	2.353	2.158	2.022	1.921	1.843	1.781
8.0	9.242	5.995	4.256	3.541	3.138	2.878	2.695	2.561	2.457	2.375
10.0	11.552	7.494	5.320	4.426	3.922	3.597	3.369	3.201	3.072	2.969
IAC SHORT INVERSE										

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.5	0.072	0.047	0.035	0.031	0.028	0.027	0.026	0.026	0.025	0.025
1.0	0.143	0.095	0.070	0.061	0.057	0.054	0.052	0.051	0.050	0.049
2.0	0.286	0.190	0.140	0.123	0.114	0.108	0.105	0.102	0.100	0.099
4.0	0.573	0.379	0.279	0.245	0.228	0.217	0.210	0.204	0.200	0.197
6.0	0.859	0.569	0.419	0.368	0.341	0.325	0.314	0.307	0.301	0.296
8.0	1.145	0.759	0.559	0.490	0.455	0.434	0.419	0.409	0.401	0.394
10.0	1.431	0.948	0.699	0.613	0.569	0.542	0.524	0.511	0.501	0.493

I²T CURVES

The curves for the I²t are derived from the formula:

$$T = TDM \times \left[\frac{100}{(I/I_{pickup})^2} \right], \quad T_{RESET} = TDM \times \left[\frac{100}{(I/I_{pickup})^2} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

I²T CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.05	2.22	1.25	0.55	0.31	0.20	0.14	0.10	0.08	0.06	0.05
0.10	4.44	2.50	1.11	0.63	0.40	0.28	0.20	0.16	0.12	0.10
1.00	44.44	25.00	11.11	6.25	4.00	2.78	2.04	1.56	1.23	1.00
10.00	444.44	250.00	111.11	62.50	40.00	27.78	20.41	15.63	123.5	10.00
100.00	4444.44	2500.00	1111.1	625.00	400.00	277.78	204.08	156.25	123.46	100.00
600.00	26666.7	15000.0	6666.7	3750.0	2400.0	1666.7	1224.5	937.50	740.74	600.00

I⁴T CURVES

The curves for the I⁴t are derived from the formula:

$$T = TDM \times \left[\frac{100}{(I/I_{pickup})^4} \right], \quad T_{RESET} = TDM \times \left[\frac{100}{(I/I_{pickup})^4} \right]$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting
- I = input current
- I_{pickup} = Pickup Current setting
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

I4T CURVE TRIP TIMES (IN SECONDS)

TDM	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.05	0.9876	0.3125	0.0617	0.0198	0.0008	0.0038	0.0021	0.0012	0.0007	0.0005
0.10	1.9753	0.6250	0.1235	0.0391	0.0160	0.0077	0.0042	0.0024	0.0015	0.0010
1.00	19.753	6.250	1.235	0.391	0.160	0.077	0.042	0.024	0.015	0.010
10.00	197.531	62.500	12.346	3.906	1.600	0.772	0.416	0.244	0.152	0.100
100.00	1975.31	625.00	123.46	39.06	16.00	7.72	4.16	2.44	1.52	1.00
600.00	11851.9	3750.0	740.7	234.4	96.00	46.3	25.0	14.65	9.14	6.00

RI (RAPID INVERSE) CHARACTERISTIC

The RI operate curve is represented by the following equation

$$T = k(RI) * \left[\frac{1}{0.339 - \frac{0.236}{\left(I/I_{pickup}\right)}} \right]$$

where:

- T is the operating time
- k(RI) is the Time Multiplier setting.
- I = input current,
- I_{pickup} = Pickup Current setting

Note:

When using RI for the Operate characteristic, DT (Definite Time) is always used for the Reset characteristic.

RI CURVE TRIP TIMES (IN SECONDS)

MULTIPLIER (k(RI))	CURRENT (I/I_{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.1	0.550	0.452	0.384	0.357	0.343	0.334	0.328	0.323	0.320	0.317
0.2	1.101	0.905	0.768	0.714	0.685	0.667	0.655	0.646	0.639	0.634

MULTIPLIER (k(RI))	CURRENT (I/I _{pickup})									
	1.5	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0
0.4	2.202	1.810	1.536	1.429	1.371	1.335	1.310	1.292	1.279	1.268
0.6	3.303	2.715	2.305	2.143	2.056	2.002	1.965	1.939	1.918	1.902
0.8	4.404	3.620	3.073	2.857	2.742	2.670	2.620	2.585	2.558	2.536
1.0	5.505	4.525	3.841	3.571	3.427	3.337	3.276	3.231	3.197	3.171

IDG CURVE

The IDG curve is commonly used for time delayed neutral/ground fault protection in the Swedish market. The IDG curve is represented by the following equation:

$$T = 5.8 - 1.35 \times \ln (I/I_{pickup})$$

where:

- T is the operating time
- I = input current,
- I_{pickup} = Pickup Current setting.

The **IDG Is** setting is set as a multiple of the Ground/Neutral overcurrent setting I_{pickup} for the IDG curve. It determines the actual current threshold at which the element starts.

The **IDG Time** setting sets the minimum operate time at high levels of fault current for IDG curves.

Note:

When using IDG for the Operate characteristic, DT (Definite Time) with a value of zero is recommended to use for the Reset characteristic.

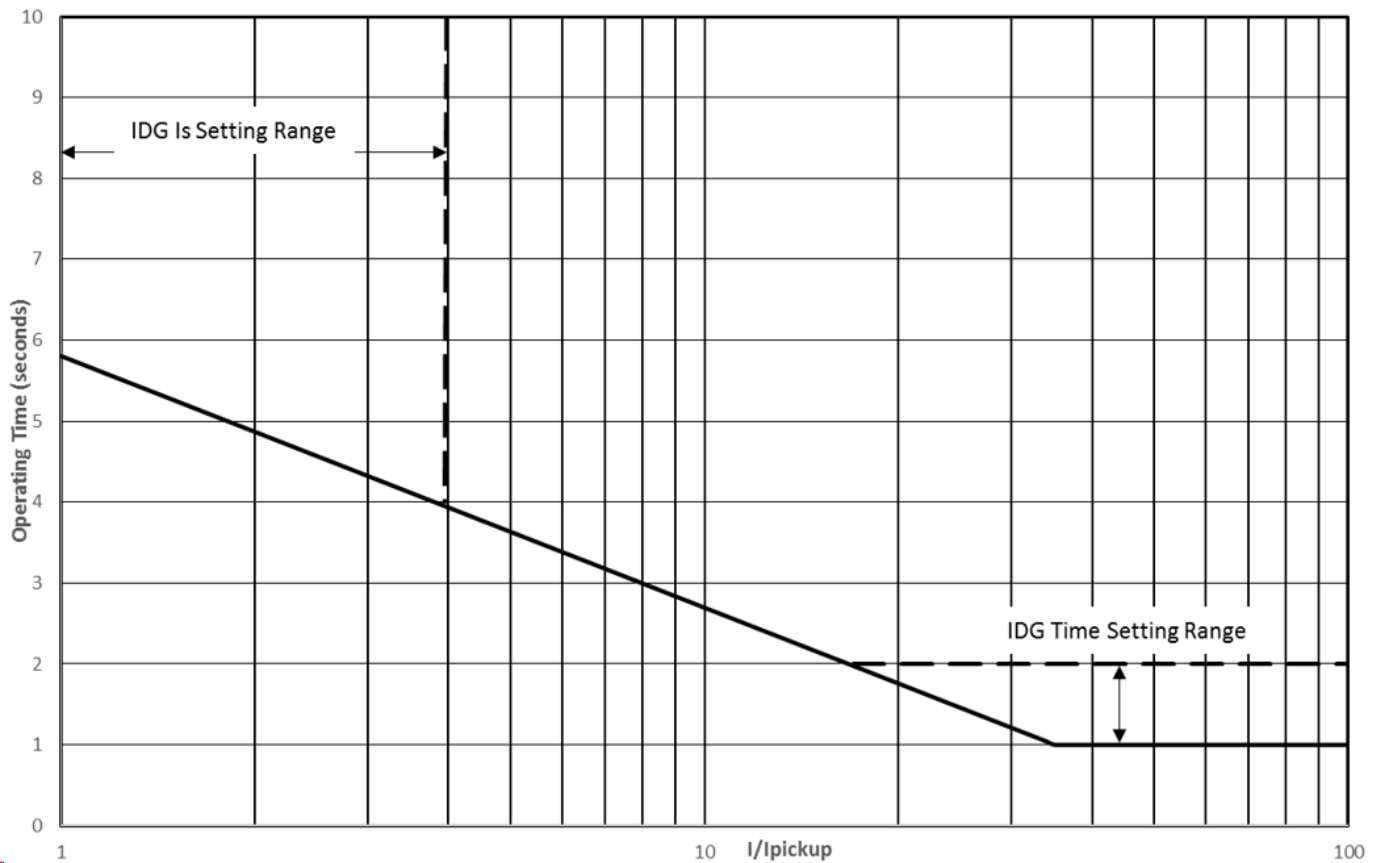


Figure 172: IDG Characteristic

EPATR B CURVE

The EPATR B curve is commonly used for Sensitive Earth Fault protection. It is based on primary current settings, employing a SEF CT ratio of 100:1 A. The EPATR_B curve has 3 separate segments defined in terms of the primary current. It is defined as follows:

Segment	Primary Current Range Based on 100A: 1A CT Ratio	Current/Time Characteristic
1	ISEF = 0.5A to 6.0A	$t = 432 \times \text{TMS} / \text{ISEF}^{0.655} \text{ sec}$
2	ISEF = 6.0A to 200A	$t = 800 \times \text{TMS} / \text{ISEF} \text{ sec}$
3	ISEF > 200A	$t = 4 \times \text{TMS} \text{ sec}$

where TMS (time multiplier setting) is 0.025 - 1.2 in steps of 0.025.

Note:

When using EPATR B curve, DT (Definite Time) is always used for the Reset characteristic.

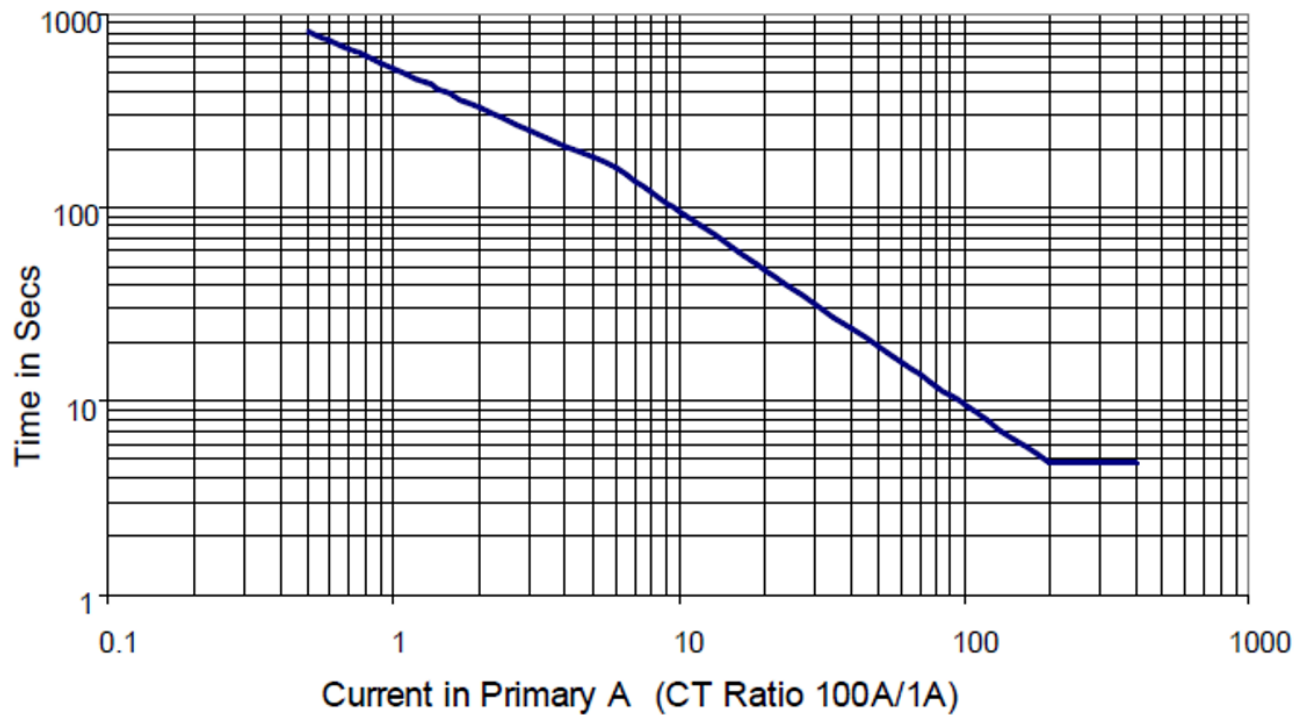


Figure 173: EPATR B characteristic shown for TMS = 1.0

FLEXCURVES

The custom FlexCurves are described in detail in the FlexCurves section of this chapter. The curve shapes for the FlexCurves are derived from the formulae:

$$T = TDM \times [\text{FlexCurveTime at } (I/I_{\text{pickup}})] \text{ when } (I/I_{\text{pickup}}) \geq 1.00$$

$$T_{\text{RESET}} = TDM \times [\text{FlexCurveTime at } (I/I_{\text{pickup}})] \text{ when } (I/I_{\text{pickup}}) \leq 0.98$$

Where:

- T = operate time (in seconds),
- TDM = Multiplier setting,
- I = input current,
- I_{pickup} = Pickup Current setting,
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is timed)

DEFINITE TIME CURVES

The Definite Time curve shape operates as soon as the pickup level is exceeded for a specified period of time. The base Definite Time curve delay is in seconds. The curve multiplier of 0.05 to 600 makes this delay adjustable from 50 to 600000 milliseconds.

$$T = TDM \text{ in seconds, when } I > I_{\text{pickup}}$$

$$T_{\text{reset}} = TDM \text{ in seconds}$$

Where:

- T = operate time (in seconds)
- TDM = Multiplier setting

- I = input current
- I_{pickup} = Pickup Current setting
- T_{RESET} = reset time in seconds (assuming energy capacity is 100% and RESET is *Timed*)

Note:

Note: In Definite Time Curves, Multiplier setting value is provided by 'Time Delay' setting.

9.4.2 PERCENT OF LOAD-TO-TRIP

The Percent of Load-to-Trip is calculated from the phase with the highest current reading. It is the ratio of this current to the lowest **PICKUP** setting among the phase time and the instantaneous overcurrent elements. If all of these elements are disabled, the value displayed is 0.

9.4.3 PHASE TIME OVERCURRENT PROTECTION (51P)

You can configure the TOC element as follows:

- Apply any of the IEEE, ANSI, IEC, and IAC standard inverse curves
- Apply any of the four FlexCurves
- Set it to definite time.

The selection of Time Dial Multiplier and minimum Pickup helps to fine tune the protection for accurate upstream/downstream coordination and during certain conditions, such as manual closing and maintenance.

The settings of this function are applied to each of the three phases to produce *Pickup* and *Trip* flags per phase. There is no intentional dead band when the current is above the Pickup level. However the Pickup accuracy is guaranteed within the current input accuracy of 1.5% above the set pickup value. The time overcurrent (TOC) Pickup flag is asserted, when the current on any phase is above the pickup value. The TOC Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the current. The element drops from Pickup without operating if the measured current drops below 97 to 98% of the Pickup value before the time for operation is reached. When Definite Time is selected, the time for TOC operation is defined only by the **TDM** setting. When in Definite Time mode, **TDM** sets the time to operate in seconds.

Path: *Setpoints > Protection > Group 1(6) > Current > Phase TOC > Phase TOC 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Latched Trip, Configurable

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

INPUT

Range: Phasor, RMS

Default: Phasor

This selection defines the method of processing of the current signal. It could be Root Mean Square (RMS) or Fundamental Phasor Magnitude.

PICKUP

Range: 0.020 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

CURVE

Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I²t, I⁴t, Rapid Inverse, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE Mod Inverse

This setting sets the shape of the selected over-current inverse curve. If none of the standard curve shapes is appropriate, a FlexCurve can be created. Refer to the User curve and the FlexCurve setup for more details on their configurations and usage.

TDM

Range: 0.01 to 28800.00 in steps of 0.01

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Curve A/B/C, IEEE M/V/E Inverse, US Inverse, US Short Time, ANSI E/V/N/M Inverse, IAC E/V/N/S Inverse, I²T and I⁴T curves. For example, if an IEEE Extremely Inverse curve is selected with TDM = 2, and the fault current is 5 times bigger than the PKP level, the operation of the element will not occur before 2.59 s have elapsed after Pickup.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s), and BPN EDF curves.

K (RI)

Range: 0.10 to 10.00 in steps of 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This k(RI) setting can be made visible from setting management, only when the **Curve** setting is selected as *Rapid Inverse*.

TIME DELAY

Range: 0.000 s to 28800.000 s in steps of 0.001 s

Default: 1.000

This setting defines the time delay for operation. This Time Delay setting can be made visible from setting management, only when the **Curve** setting is selected as Definite Time.

MINIMUM TIME

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting sets a minimum operating time for the Phase TOC element when Minimum Time setting is selected with a value different from 0, the Phase TOC element minimum operating time will be fixed by this setting, ensuring the operating time of the element never falls below this setting. The minimum operating time selected will be the maximum value between the curve value and the Minimum Time setting, whichever is greater.

Note: Minimum Time setting will be visible when any curves are selected under Curve setting (all curves but DT selection).

DT ADDER

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the **IDMT Operate** characteristic. The **DT Adder** setting will be visible for when any IDMT curves are selected under the **Curve** setting.

RESET

Range: DT, Inverse

Default: DT

Selection of a Definite Time (DT) or Inverse reset time is provided using this setting.

If Definite Time (DT) reset is selected, the Phase TOC element will reset after a time delay provided by the **Reset Time** setting. If Inverse reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

Note: When using IEC Short Inverse, Long Time Inverse, BPN EDF, Rectifier, Rapid Inverse curves for the Operate characteristic, Definite Time is used by default as Reset characteristic.

RESET TIME

Range: 0.000 to 28800.000 in steps of 0.001

Default: 0.000

This setting provides selection for dropout time delay used to delay the dropout of the detection of the overcurrent condition.

This can be made visible from setting management when the **Reset** setting is selected as DT or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, and Rapid Inverse curves.

DIRECTION

Range: Disabled, Forward (Ph Dir OCx FWD), Reverse (Ph Dir OCx REV)

Default: Disabled

This setting determines the direction of Phase TOC element.

V DEP OC

Range: Disabled, VCO, VRO

Default: Disabled

V Dep OC (Voltage Dependent Overcurrent) replaces the legacy Voltage Restrained Overcurrent (VRO) function by adding Voltage Controlled Overcurrent functionality to it. This setting can now select Disabled, VCO or VRO. When enabled, this feature controls the Pickup value of each individual Phase Time Overcurrent element in a fixed relationship with its corresponding phase input voltage.

An overcurrent protection scheme is co-ordinated throughout a system such that cascaded operation is achieved. This means that if for some reason a downstream circuit breaker fails to trip for a fault condition, the next upstream circuit breaker should trip.

If the current seen by a local device for a remote fault condition is below its overcurrent setting, a voltage dependent element may be used to increase the sensitivity to such faults. As a reduction in system voltage will occur during overcurrent conditions, this may be used to enhance the sensitivity of the overcurrent protection by reducing the pick-up level.

If cold load pickup, autoreclosing, or manual close blocking features are controlling the protection, the Phase TOC Voltage Restraint does not work, even when enabled.

In Voltage Controlled Operation (VCO) mode of operation, the under-voltage detector is used to produce a step change in the current setting, when the voltage falls below the voltage setting $V_{Dep OC V1}$. The operating characteristic of the current setting when voltage-controlled mode is selected is as follows:

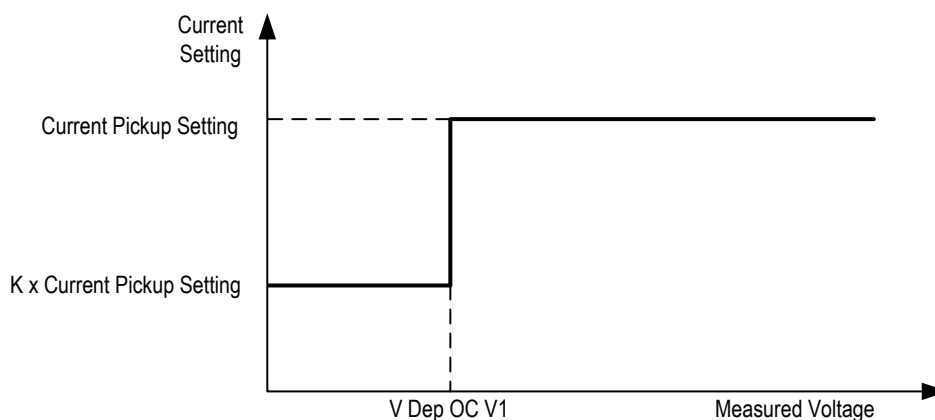


Figure 174: VCO operation

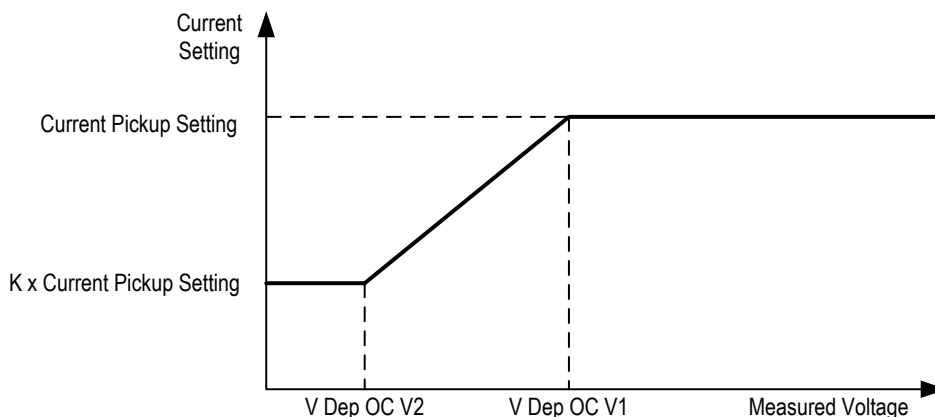


Figure 175: VRO operation

VT INPUT

Range: Dependent upon the order code

Default: Ph VT Bank 1-J2

This setting provides the selection for the voltage input bank, when **V Dep OC** is enabled.

V Dep OC V1

Range: 0.01 to 1.20 x VT in steps of 0.01 x VT

Default: 0.72 x VT

This setting sets the voltage V1 threshold at which the current setting of the overcurrent stage becomes reduced. This is on a per phase basis.

V Dep OC k

Range: 0.10 to 1.00 in steps of 0.05

Default: 0.25

This setting determines the Overcurrent multiplier factor used to reduce the pick-up overcurrent setting.

V Dep OC V2

Range: 0.01 to $1.2 \times V_T$ in steps of $0.01 \times V_T$

Default: $0.54 \times V_T$

This setting sets the voltage V2 threshold at which the current setting of the overcurrent stage becomes reduced. This is on a per phase basis.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

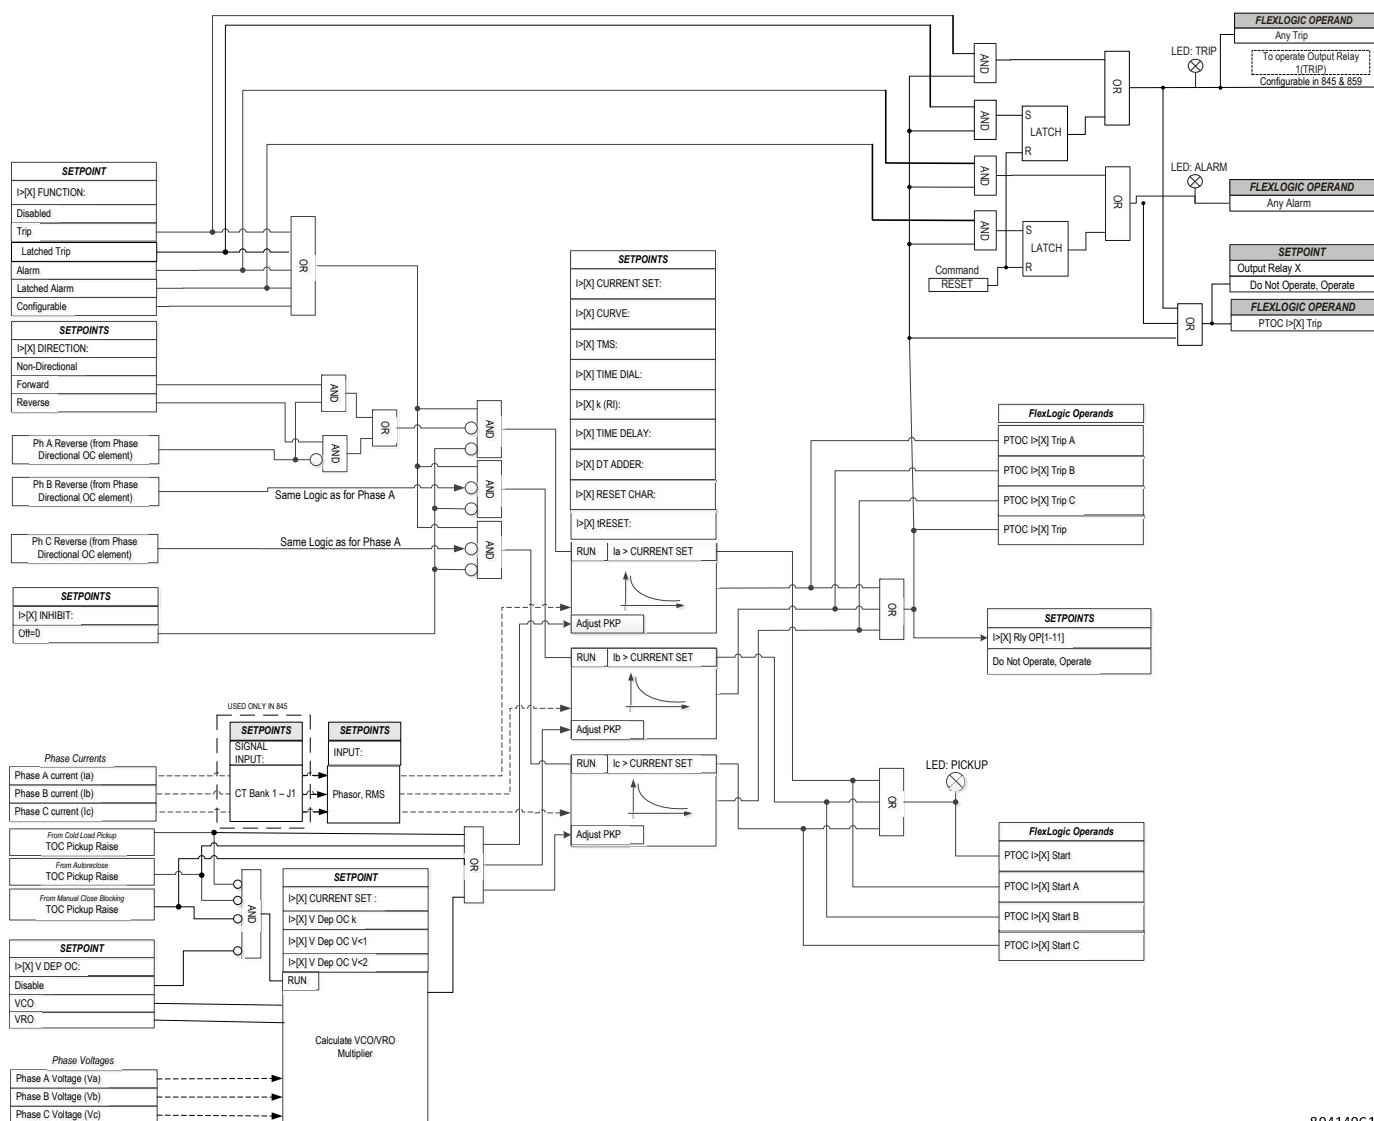

894149C1

Figure 176: Phase Time Overcurrent Protection logic diagram

9.4.4 PHASE INSTANTANEOUS OVERCURRENT PROTECTION (50P)

The PIOC protection consists of three identical instantaneous overcurrent elements, one for each phase. All three have identical characteristics. The settings of this function are applied to each of the three phases to produce *Pickup* and *Trip* flags per phase. There is no intentional dead band when the current is above the Pickup level. However the Pickup accuracy is guaranteed within the current input accuracy of 3% above the set pickup value. The IOC Pickup flag is asserted, when the current of any phase is above the pickup value. The IOC Operate flag is asserted if the element stays picked up for the time defined in **PH IOC PKP DELAY**. The element drops from Pickup without operating if the measured current drops below 97-98% of the Pickup value before the time for operation is reached.

Path: Setpoints > Protection > Group1(6) > Current > Phase IOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

INPUT

Range: Phasor, RMS

Default: Phasor

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

DIRECTION

Range: Disabled, Forward (Ph Dir OCx FWD), Reverse (Ph Dir OCx REV)

Default: Disabled

PICKUP DELAY

Range: 0.000 to 28800.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 28800.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

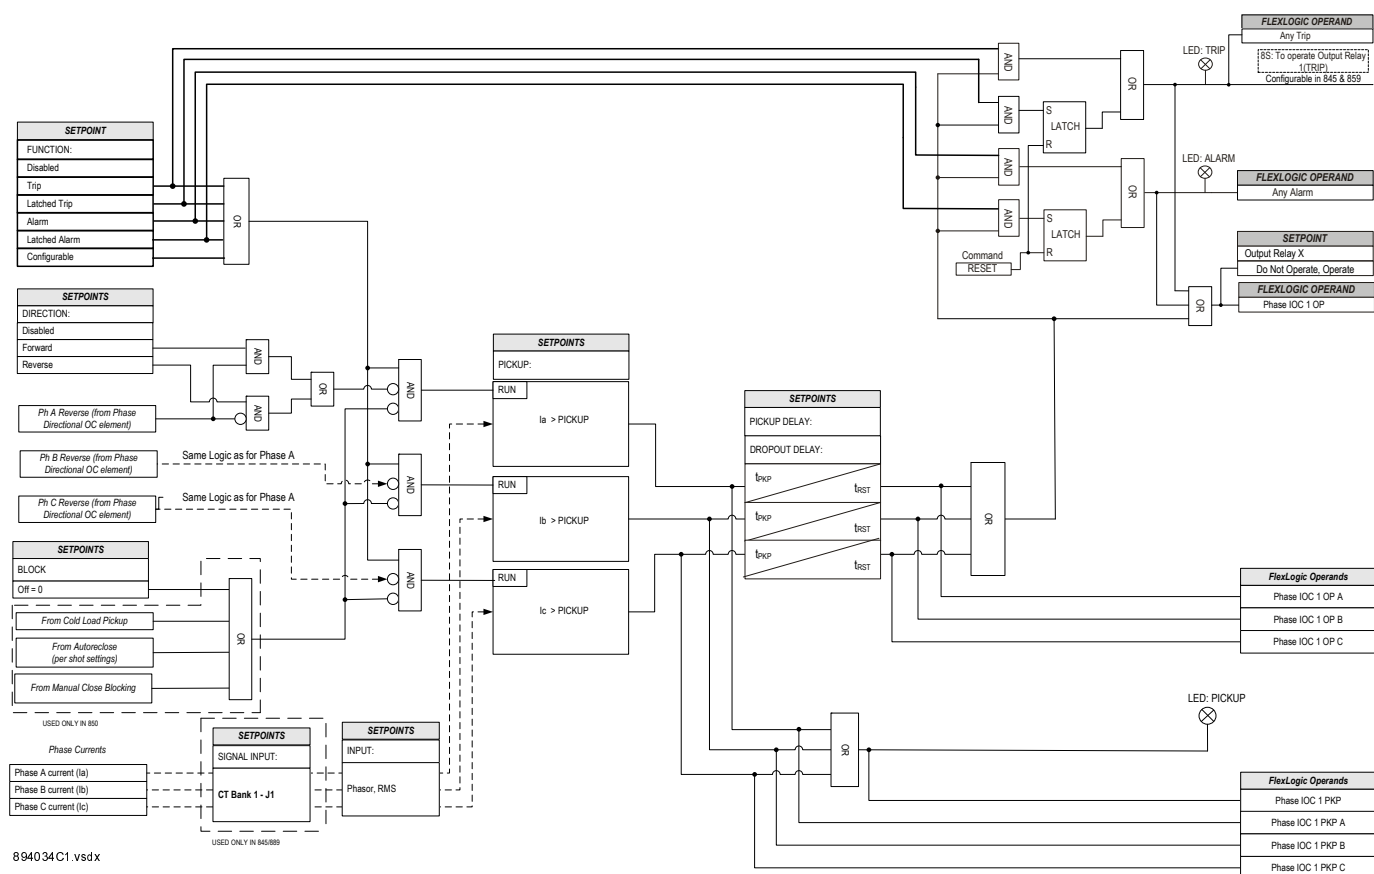


Figure 177: Phase Instantaneous Overcurrent logic diagram

9.4.5 PHASE DIRECTIONAL OVERCURRENT PROTECTION (67P)

The Phase Directional Overcurrent protection elements (one for each of phases A, B, and C) determine the phase current flow direction for steady state and fault conditions and can be used to control the operation of the phase overcurrent elements by sending directional bits to inputs of these elements.

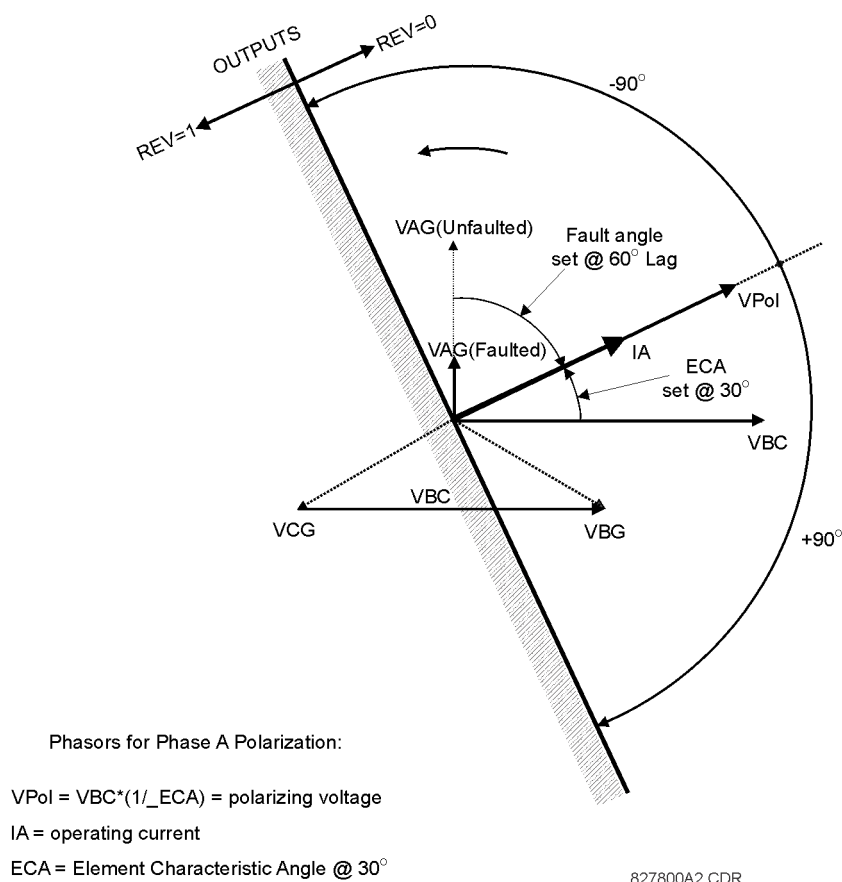


Figure 178: Phasors for phase A polarization

The element is intended to send a directional signal to an overcurrent element to prevent an operation when current is flowing in a particular direction. The direction of current flow is determined by measuring the phase angle between the current from the phase CTs and the line-line voltage from the VTs, based on the 90° or quadrature connection. To increase security for three phase faults very close to the VTs used to measure the polarizing voltage, a voltage memory feature is incorporated. This feature remembers the measurement of the polarizing voltage 3 cycles back and uses it to determine direction. The voltage memory remains valid for one second after the voltage has collapsed.

The main component of the phase directional element is the phase angle comparator with two inputs: the operating signal (phase current) and the polarizing signal (the line voltage, shifted in the leading direction by the characteristic angle, ECA).

The following table shows the operating and polarizing signals used for phase directional control:

PHASE	OPERATING SIGNAL	POLARIZING SIGNAL (Vpol)	
		ABC PHASE SEQUENCE	ACB PHASE SEQUENCE
A	Angle of Ia	Angle of Vbc × (1∠ECA)	Angle of Vcb × (1∠ECA)
B	Angle of Ib	Angle of Vca × (1∠ECA)	Angle of Vac × (1∠ECA)
C	Angle of Ic	Angle of Vab × (1∠ECA)	Angle of Vba × (1∠ECA)

Note:

For 850D dual feeder applications, when the signal input is from CT Bank 1 – J1, VT Bank 1-J2 is used as the polarizing voltage source. Similarly, when the signal input is from CT Bank 2 – K1, VT Bank 2 – K2 is used as the polarizing voltage source.

Path: Setpoints > Protection > Group1(6) > Current > Phase Dir OC 1(X)

FUNCTION

Range: Disabled, Enabled

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

ECA

Range: 0° to 359° in steps of 1°

Default: 30°

The setting is used to select the element characteristic angle, i.e. the angle by which the polarizing voltage is shifted in the leading direction to achieve dependable operation.

POLARIZING V THRESHOLD

Range: 0.015 to 3.000 x VT in steps of 0.001 x VT

Default: 0.700 x VT

The setting is used to establish the minimum level of voltage for which the phase angle measurement is reliable. The setting is based on VT accuracy.

REV WHEN V MEM EXP

Range: No, Yes

Default: No

The setting is used to select the required operation upon expiration of voltage memory. When set to “Yes” the directional element output value is forced to Reverse when voltage memory expires; when set to “No” the directional element is Forward when voltage memory expires.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

Note:

The Phase Directional element responds to the forward load current. In the case of a following reverse fault, the element needs some time – in the order of 8 ms – to change the directional signal. Some protection elements such as Instantaneous Overcurrent may respond to reverse faults before the directional signal has changed. A coordination time of at least 10 ms must therefore be added to all the instantaneous protection elements under the supervision of the Phase Directional element. If current reversal is a concern, a longer delay – in the order of 20 ms – is needed.

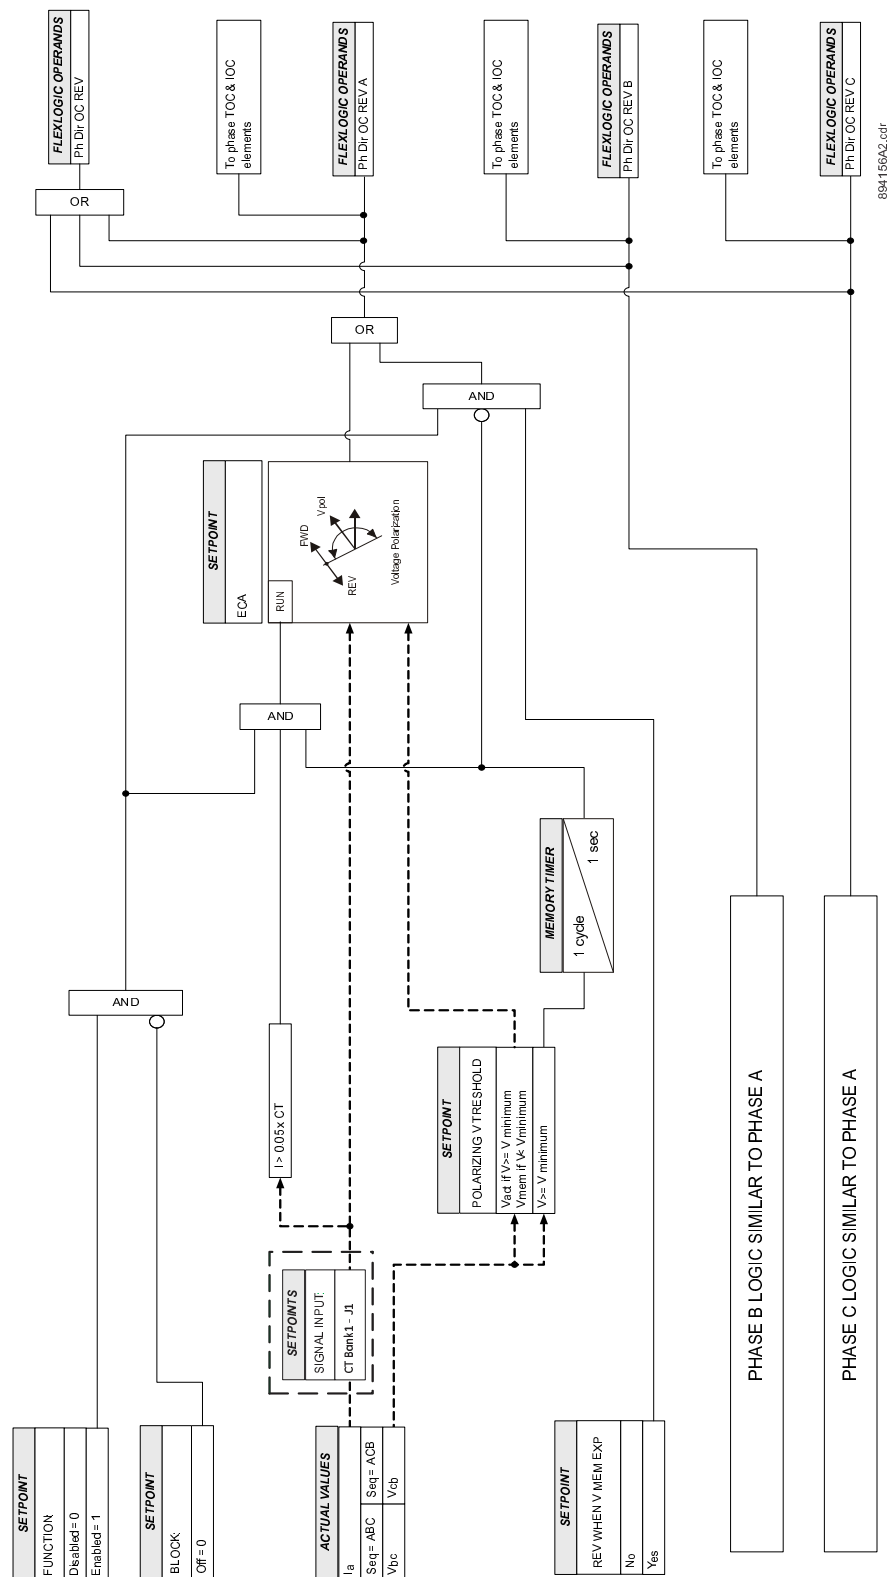


Figure 179: Phase Directional Overcurrent Protection logic diagram

9.4.6 NEUTRAL TIME OVERCURRENT PROTECTION (51N)

The relay computes the neutral current (I_n) using the following formula:

$$|I_n| = |I_a + I_b + I_c|$$

The settings of this function are applied to the neutral current to produce *Trip* or *Pickup* flags. The Neutral TOC Pickup flag is asserted when the neutral current is above the pickup value. The Neutral TOC Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the current. The element drops from Pickup without operation if the measured current drops below 97 to 98% of the Pickup value before the time for operation is reached. When Definite Time is selected, the time for Neutral TOC operation is defined only by the **TDM** setting.

Path: *Setpoints > Protection > Group 1(6) > Current > Neutral TOC 1(X)*

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

INPUT

Range: Phasor, RMS

Default: Phasor

This selection defines the method of processing of the current signal. It could be Root Mean Square (RMS) or Fundamental Phasor Magnitude.

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

CURVE

Range: Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I^2t , I^4t , Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE Mod Inverse

This setting sets the shape of the selected over-current inverse curve. If none of the standard curve shapes is appropriate, a FlexCurve can be created. Refer to the User curve and the FlexCurve setup for more details on their configurations and usage.

TDM

Range: 0.01 to 600.00 in steps of 0.01

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Curve A/B/C, IEEE M/V/E Inverse, US Inverse, US Short Time, ANSI E/V/N/M Inverse, IAC E/V/N/S Inverse, I^2T and I^4T curves.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.000

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s), BPN EDF and EPATR B curves.

K (RI)

Range: 0.10 to 10.00 Step: 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This setting can be made visible from setting management, only when **Curve** setting is selected as *Rapid Inverse*.

IDG Is

Range: 1.0 to 4.0 in steps of 0.1

Default: 1.5

This setting is set as a multiple of the ground fault overcurrent setting for the IDG curve.

It determines the actual current threshold at which the element starts.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

IDG Time

Range: 1.00 to 2.00 s in steps of 0.01 s

Default: 1.20

This setting sets the minimum operate time at high levels of fault current for IDG curves.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

Time Delay

Range: 0.000 s to 200.000 s in steps of 0.001 s

Default: 1.000

This setting defines the time delay for operation.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *DT* (Definite Time).

DT Adder

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the IDMT Operate characteristic.

This setting will be visible for when any IDMT curves are selected under the **Curve** setting.

RESET

Range: DT, Inverse

Default: DT

This setting sets a Definite Time (DT) or Inverse reset time.

If Definite Time (*DT*) reset is selected, the Neutral TOC element will reset after a time delay provided by the **Reset Time** setting. If *Inverse* reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

When using Long Time Inverse, BPN EDF, Rectifier, IEC Short Inverse, Rapid Inverse, IDG, EPATR B curves the reset is always definite time defined by the setpoint **Reset Time**.

Reset Time

Range: 0.000 to 100.000 s in steps of 0.001 s

Default: 0.000s

This setting determines the Reset time for the Definite Time Reset characteristic.

This can be made visible from setting management when the **Reset** setting is selected as *DT* or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, IDG, EPATR B and Rapid Inverse curves.

DIRECTION

Range: Disabled, Forward (Ntrl Dir OCx FWD), Reverse (Ntrl Dir OCx REV)

Default: Disabled

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

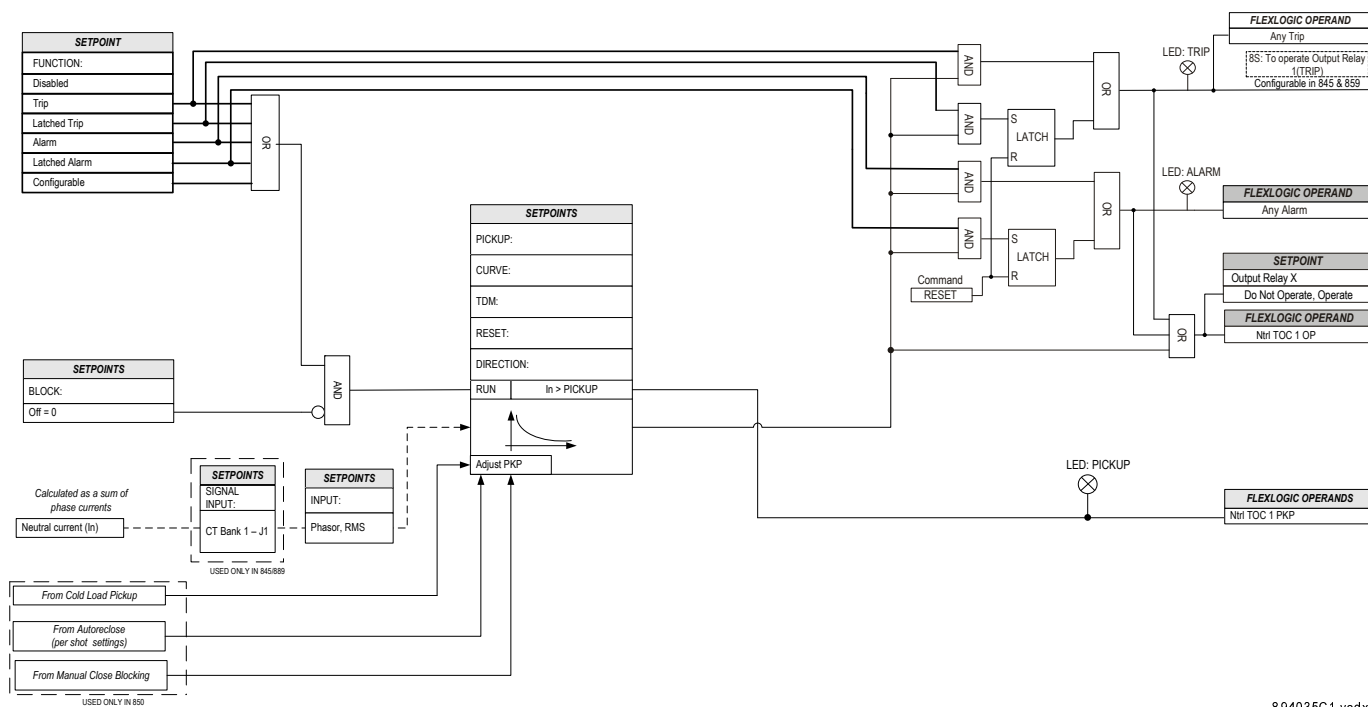

894035C1.vsd

Figure 180: Neutral Time Overcurrent Protection logic diagram

9.4.7 NEUTRAL INSTANTANEOUS OVERCURRENT PROTECTION (50N)

The Neutral Instantaneous Overcurrent protection element computes the neutral current (I_n) using the following formula:

$$|I_n| = |I_a + I_b + I_c|$$

The element responds to the magnitude of a neutral current fundamental frequency phasor calculated from the phase currents. A positive-sequence restraint is applied for better performance. A small portion (6.25%) of the positive-sequence current magnitude is subtracted from the zero-sequence current magnitude when forming the operating quantity of the element as follows:

$$I_{op} = 3 * (|I_{0}| - K * |I_{1}|) \text{ where } K = 1/16 \text{ and } |I_{0}| = 1/3 * |I_n|$$

The positive-sequence restraint allows for more sensitive settings by counterbalancing spurious zero-sequence currents resulting from:

- system unbalances under heavy load conditions
- current transformer (CT) transformation errors of during double-line and three-phase faults
- switch-off transients during double-line and three-phase faults

The positive-sequence restraint must be considered when testing for Pickup accuracy and response time (multiple of Pickup). The operating quantity depends on how test currents are injected into the relay (single-phase injection: $I_{op} = 0.9375 * I_{injected}$ three-phase pure zero sequence injection: $I_{op} = 3 * I_{injected}$).

The settings of this function are applied to the neutral current to produce *Pickup* and *Trip* flags. The Neutral IOC Pickup flag is asserted, when the neutral current is above the pickup value. The Neutral IOC Operate flag is asserted if the element stays picked up for the time defined by the Neutral IOC **PICKUP DELAY** setting. If the Pickup time delay is set to 0.000 seconds, the Pickup and Operate flags are asserted at the same time. The element drops from Pickup without operation if the neutral current drops below 97 to 98% of the Pickup value.

Path: Setpoints > Protection > Group 1(6) > Current > Neutral IOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default (FW 4.10): 0.20 x CT

DIRECTION

Range: Disabled, Forward (Ntrl Dir OCx FWD), Reverse (Ntrl Dir OCx REV)

Default: Disabled

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

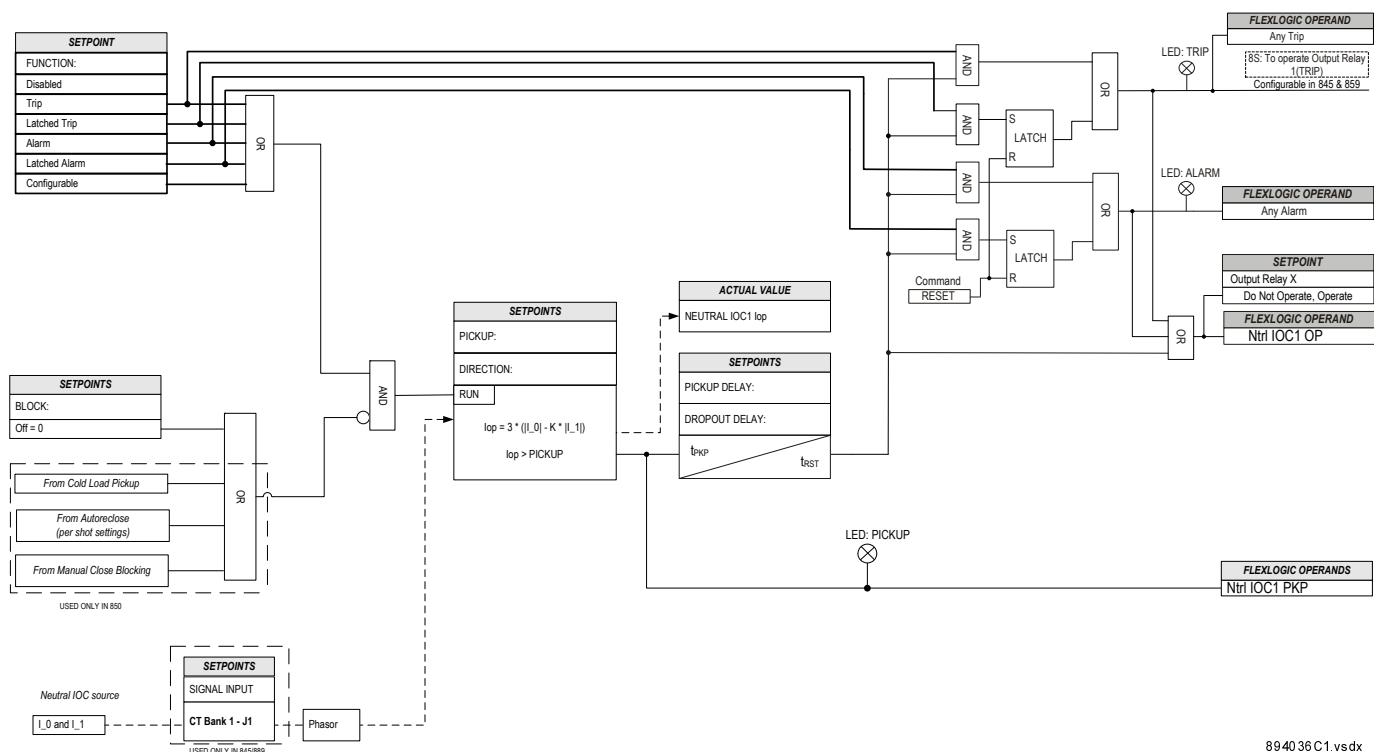


Figure 181: Neutral Instantaneous Overcurrent Protection logic diagram

9.4.8 NEUTRAL DIRECTIONAL OVERCURRENT PROTECTION (67N)

Note:

For FW 4.10 onwards, $V \ X$ (or VX), is know as $V \ N$ (or VN)

The Neutral Directional Overcurrent protection element provides both forward and reverse fault direction indications shown by the operands Ntrl Dir OC FWD and Ntrl Dir OC REV, respectively. The output operands are asserted if the magnitude of the operating current is above a Pickup level (overcurrent unit) and the fault direction is seen as forward or reverse, respectively (directional unit).

The *overcurrent unit* responds to the magnitude of a fundamental frequency phasor of the neutral current calculated from the phase currents. There are separate Pickup settings for the forward-looking and reverse-looking functions. The element applies a positive-sequence restraint for better performance; a small user-programmable portion of the positive-sequence current magnitude is subtracted from the zero sequence current magnitude when forming the operating quantity.

$$\text{Iop} = 3 * (|\text{I } 0| - \text{K} * |\text{I } 1|)$$

The positive-sequence restraint allows for more sensitive settings by counterbalancing spurious zero-sequence currents resulting from:

- system unbalances under heavy load conditions
- current transformer (CT) transformation errors of during double-line and three-phase faults
- switch-off transients during double-line and three-phase faults.

The positive-sequence restraint must be considered when testing for Pickup accuracy and response time (multiple of Pickup). The operating quantity depends on the way the test currents are injected into the relay (single-phase injection: $I_{op} = (1 - K) \times I_{injected}$; three-phase pure zero-sequence injection: $I_{op} = 3 \times I_{injected}$).

The positive-sequence restraint is removed for low currents. If the positive-sequence current is below $0.8 \times CT$, the restraint is removed by changing the constant K to zero. This facilitates better response to high-resistance faults when the unbalance is very small and there is no danger of excessive CT errors as the current is low.

The *directional unit* uses the zero-sequence current (I_0) for fault direction discrimination and may be configured to use either zero-sequence voltage, ground current, or both for polarizing. The following table defines the neutral directional overcurrent element.

Directional unit				Overcurrent unit
Polarizing mode	Direction	Compared phasors		
Voltage	Forward	-V_0	1_0 x 1∠ECA	lop = 3 x { I_0 - K x I_1 } If I_1 > 0.8 x CT
	Reverse	-V_0	-1_0 x 1∠ECA	
Current	Forward	Ig	I_0	lop = 3 x { I_0 } if I_1 ≤0.8 x CT
	Reverse	Ig	-I_0	
Dual	Forward	-V_0 or	I_0 x 1∠ECA or	
		Ig	I_0	
	Reverse	-V_0 or	-I_0 x 1∠ECA or	
		Ig	-I_0	

Where:

- $V_0 = 1/3 \times (V_{ag} + V_{bg} + V_{cg})$ = zero sequence voltage
- $I_0 = 1/3 \times I_n = 1/3 \times (I_a + I_b + I_c)$ = zero sequence current
- ECA = element characteristic angle
- I_n = neutral current

When **POLARIZING VOLTAGE** is set to *Measured VX*, one-third of this voltage is used in place of V_0 .

The following figure explains the use of the voltage polarized directional unit of the element by showing the voltage-polarized phase angle comparator characteristics for a phase A to ground fault, with:

- ECA = 90° (element characteristic angle = centerline of operating characteristic)
- FWD LA = 80° (forward limit angle = the $\pm$ angular limit with the ECA for operation)
- REV LA = 80° (reverse limit angle = the $\pm$ angular limit with the ECA for operation).


The element incorporates a current reversal logic: if the reverse direction is indicated for at least 1.25 of a power system cycle, the prospective forward indication will be delayed by 1.5 of a power system cycle. The element is designed to emulate an electromechanical directional device. Larger operating and polarizing signals will result in faster directional discrimination bringing more security to element operation.

The forward-looking function is designed to be more secure as compared to the reverse-looking function, and should therefore be used for the tripping direction. The reverse-looking function is designed to be faster as compared to the forward-looking function and should be used for the blocking direction. This allows better protection coordination.

The above bias should be taken into account when using the Neutral Directional Overcurrent element to directionalize other protection elements.

Note:

For relays ordered without voltage inputs, the polarizing signal for the Neutral Directional OC element is the ground current (I_g) from the bank selected as *Signal Input* in the element's menu. In this case the setpoints **POLARIZING MODE**, and **POLARIZING VOLTAGE** are not displayed.

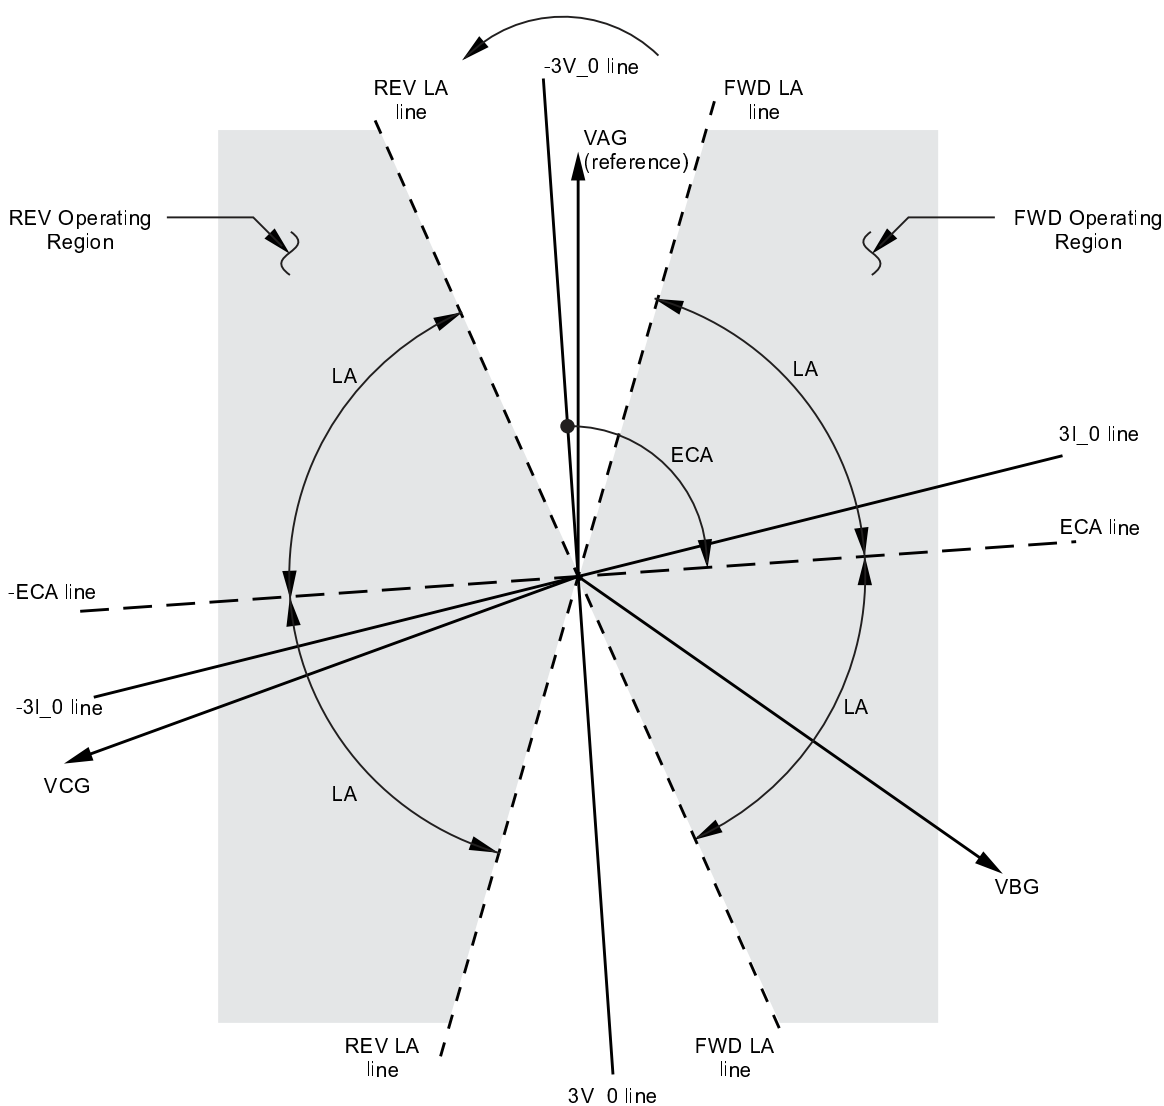

827805A1.CDR

Figure 182: Neutral Directional Voltage-polarized Characteristics

Note:

For 850 Dual Feeder Applications: For Signal Input of CT Bank 1 – J1 >> VT Bank 1 –J2 is considered as Polarizing voltage source. And, For CT Bank 2 – K1 >> VT Bank 2 – K2 is considered as Polarizing Voltage Source

Path: Setpoints > Protection > Group 1(6) > Current > Neutral Directional OC 1(X)

FUNCTION

Range: Disabled, Enabled

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name.**

POLARIZING MODE

Range: Voltage, Current, Dual

Default: Voltage

This setting selects the polarizing mode for the directional unit.

If *Voltage* polarizing mode is selected, the element uses the zero-sequence voltage angle for polarization. Select either the zero-sequence voltage V_0 , calculated from the phase voltages, or the zero-sequence voltage supplied externally as the auxiliary voltage V_X . The calculated V_0 can be used as polarizing voltage only if the voltage transformers are connected in Wye. The auxiliary voltage can be used as the polarizing voltage if the auxiliary voltage is connected to a zero-sequence voltage source (such as the open delta connected secondary of VTs). The zero-sequence (V_0) or auxiliary voltage (V_X), accordingly, must be greater than $0.02 \times V_T$ to be validated for use as a polarizing signal. If the polarizing signal is invalid, neither forward nor reverse indication is given.

If *Current* polarizing mode is selected, the element uses the angle of the ground current measured on the ground current input. The ground CT must be connected between the ground and neutral point of an adequate source of ground current. The ground current must be greater than $0.05 \times I_T$ to be validated as a polarizing signal. If the polarizing signal is not valid, neither forward nor reverse indication is given. For a choice of current polarizing, it is recommended that the polarizing signal be analyzed to ensure that a known direction is maintained irrespective of the fault location. For example, if using an autotransformer neutral current as a polarizing source, it should be ensured that a reversal of the ground current does not occur for a high-side fault. The low-side system impedance should be assumed minimal when checking for this condition. A similar situation arises for a wye/delta/wye transformer, where current in one transformer winding neutral may reverse when faults on both sides of the transformer are considered.

If *Dual* polarizing mode is selected, the element performs both directional comparisons as described above. A given direction is confirmed if either voltage or current comparators indicate so. If a conflicting (simultaneous forward and reverse) indication occurs, the forward direction overrides the reverse direction.

POLARIZING VOLTAGE

Range: Calculated V_0 , Measured $V_X(VN)$

Default: Calculated V_0

Selects the polarizing voltage used by the directional unit when *Voltage* or *Dual* polarizing mode is set. The polarizing voltage can be programmed to be either the zero-sequence voltage calculated from the phase voltages (*Calculated V_0*) or supplied externally as an auxiliary voltage (*Measured $V_X(VN)$*)

POS SEQ RESTRAINT

Range: 0.000 to 0.500 in steps of 0.001

Default: 0.063

This setting controls the amount of the positive-sequence restraint. Set to zero to remove the restraint. Set higher if large system unbalances or poor CT performance are expected.

FORWARD ECA

Range: -180° to 180° in steps of 1°

Default: 75°

This setting defines the element characteristic angle (ECA) for the forward direction in “Voltage” polarizing mode. “Current” polarizing mode uses a fixed ECA of 0° . The ECA in the reverse direction is the angle set for the forward direction shifted by 180° .

FORWARD LIMIT ANGLE

Range: 40° to 90° in steps of 1°

Default: 90°

This setting defines a symmetrical (in both directions from the ECA) limit angle for the forward direction.

FORWARD PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.050 x CT

This setting defines the Pickup level for the overcurrent unit of the element in the forward direction. When selecting this setting it must be kept in mind that the design uses a 'positive-sequence restraint' technique for the *Calculated 3I0* mode of operation.

REVERSE LIMIT ANGLE

Range: 40° to 90° in steps of 1°

Default: 90°

This setting defines a symmetrical (in both directions from the ECA) limit angle for the reverse direction.

REVERSE PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.050 x CT

This setting defines the Pickup level for the overcurrent unit of the element in the reverse direction. When selecting this setting it must be kept in mind that the design uses a 'positive-sequence restraint' technique for the *Calculated 3I0* mode of operation.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

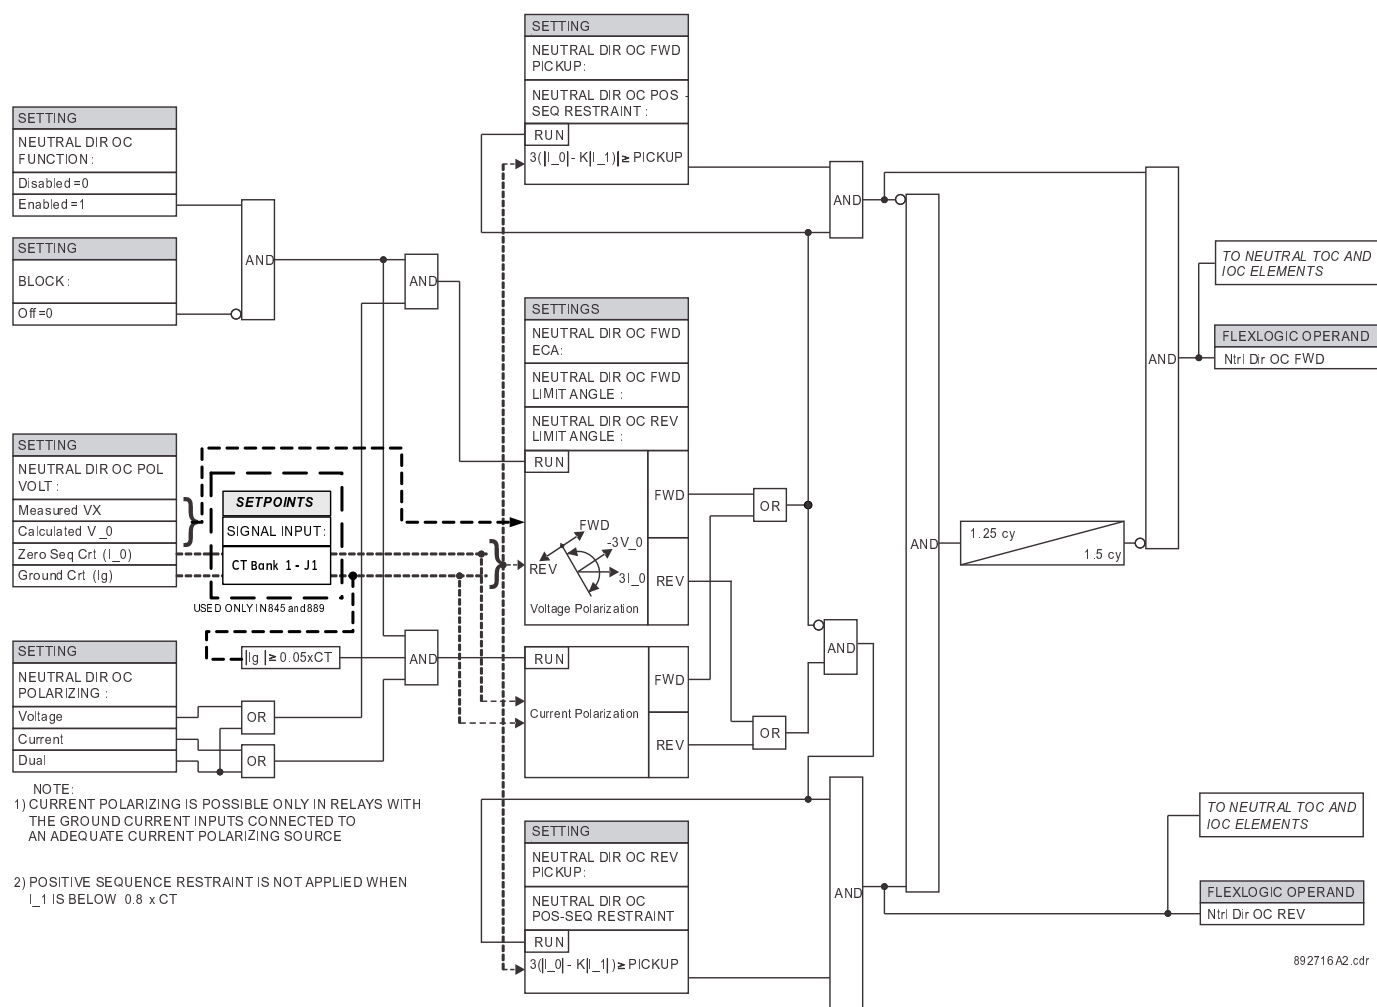


Figure 183: Neutral Directional Overcurrent Protection logic diagram

9.4.9 GROUND TIME OVERCURRENT PROTECTION (51G)

The settings of Ground Time Overcurrent protection element are applied to the ground input current to produce *Trip* or *Pickup* flags. The Ground TOC Pickup flag is asserted when the ground current is above the PKP value. The Ground TOC Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the current. The element drops from Pickup without operation if the measured current drops below 97 to 98% of the Pickup value before the time for operation is reached. When Definite Time is selected, the time for Ground TOC operation is defined only by the **TDM** setting.

Path: *Setpoints > Protection > Group 1(6) > Current > Ground TOC 1(X)*

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name.**

INPUT

Range: Phasor, RMS

Default: Phasor

This selection defines the method of processing of the current signal. It could be Root Mean Square (RMS) or Fundamental Phasor Magnitude.

PICKUP

Range: 0.010 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

CURVE

Range: Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I²t, I⁴t, Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE, Moderately Inverse

TDM

Range: 0.05 to 600.00 in steps of 0.01

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Curve A/B/C, IEEE M/V/E Inverse, US Inverse, US Short Time, ANSI E/V/N/M Inverse, IAC E/V/N/S Inverse, I2T and I4T curves.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.000

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s), BPN EDF and EPATR B curves.

K (RI)

Range: 0.10 to 10.00 Step: 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This setting can be made visible from setting management, only when **Curve** setting is selected as *Rapid Inverse*.

IDG Is

Range: 1.0 to 4.0 in steps of 0.1

Default: 1.5

This setting is set as a multiple of the ground fault overcurrent setting for the IDG curve.

It determines the actual current threshold at which the element starts.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

IDG TIME

Range: 1.00 to 2.00 s in steps of 0.01 s

Default: 1.20

This setting sets the minimum operate time at high levels of fault current for IDG curves.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *IDG*.

TIME DELAY

Range: 0.000 s to 1200.000 s in steps of 0.001 s

Default: 1.000

This setting defines the time delay for operation.

This setting can be made visible from setting management, only when the **Curve** setting is selected as *DT* (Definite Time).

DT ADDER

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the IDMT Operate characteristic.

This setting will be visible for when any IDMT curves are selected under the **Curve** setting.

RESET

Range: DT, Inverse

Default: DT

This setting sets a Definite Time (DT) or Inverse reset time.

If Definite Time (*DT*) reset is selected, the Neutral TOC element will reset after a time delay provided by the **Reset Time** setting. If *Inverse* reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

When using Long Time Inverse, BPN EDF, Rectifier, IEC Short Inverse, Rapid Inverse, IDG, EPATR B curves the reset is always definite time defined by the setpoint **Reset Time**.

RESET TIME

Range: 0.000 to 100.000 s in steps of 0.001 s

Default: 0.000s

This setting determines the Reset time for the Definite Time Reset characteristic.

This can be made visible from setting management when the **Reset** setting is selected as *DT* or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, IDG, EPATR B and Rapid Inverse curves.

DIRECTION

Range: Disabled, Forward, Reverse

Default: Disabled

BLOCK

Range: Off, Any FlexLogic operand

Default: Off or PB 4 OFF (GND TRIP ENABLED), Dependent on order code

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

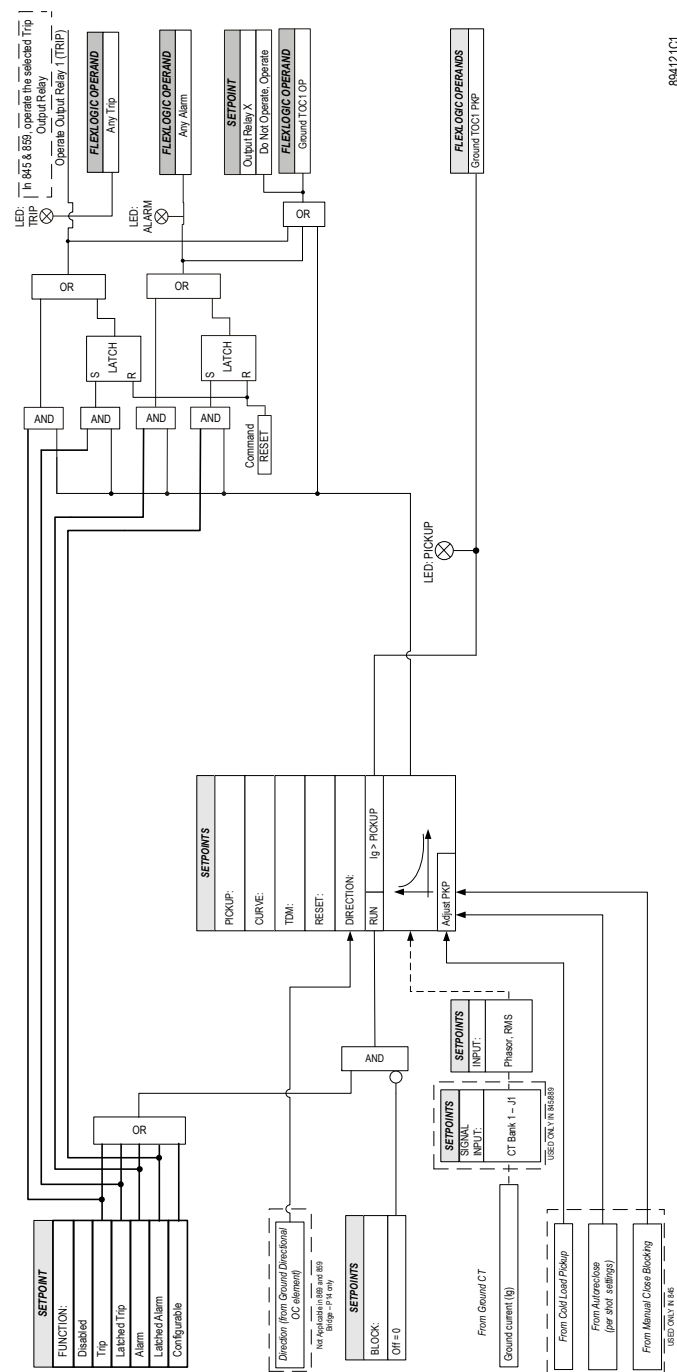

894121C1

Figure 184: Ground Time Overcurrent Protection logic diagram

9.4.10 GROUND INSTANTANEOUS OVERCURRENT PROTECTION (50G)

The settings of the Ground Instantaneous Overcurrent protection element are applied to the measured Ground current for producing *Pickup* and *Trip* flags. The Ground IOC Pickup flag is asserted when the Ground current is above the pickup value. The Ground IOC Operate flag is asserted if the element stays picked-up for the time defined by the Ground IOC **PICKUP DELAY** setting. If the Pickup time delay is set to 0.000 seconds. The Pickup and Operate flags will be asserted at the same time. The element drops from Pickup without operation if the Ground current drops below 97 to 98% of the Pickup value.

Path: Setpoints > Protection > Group 1(6) > Current > Ground IOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the CT Bank input. The default bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

PICKUP

Range (up to FW 3.xx): 0.050 to 30.000 x CT in steps of 0.001 x CT

Range (from FW 4.10): 0.010 to 30.000 x CT in steps of 0.001 x CT

Default (up to FW 3.xx): 1.00 x CT

Default (from FW 4.10): 0.200 x CT

DIRECTION (not used in 859)

Range: Disabled, Forward, Reverse

Default: Disabled

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

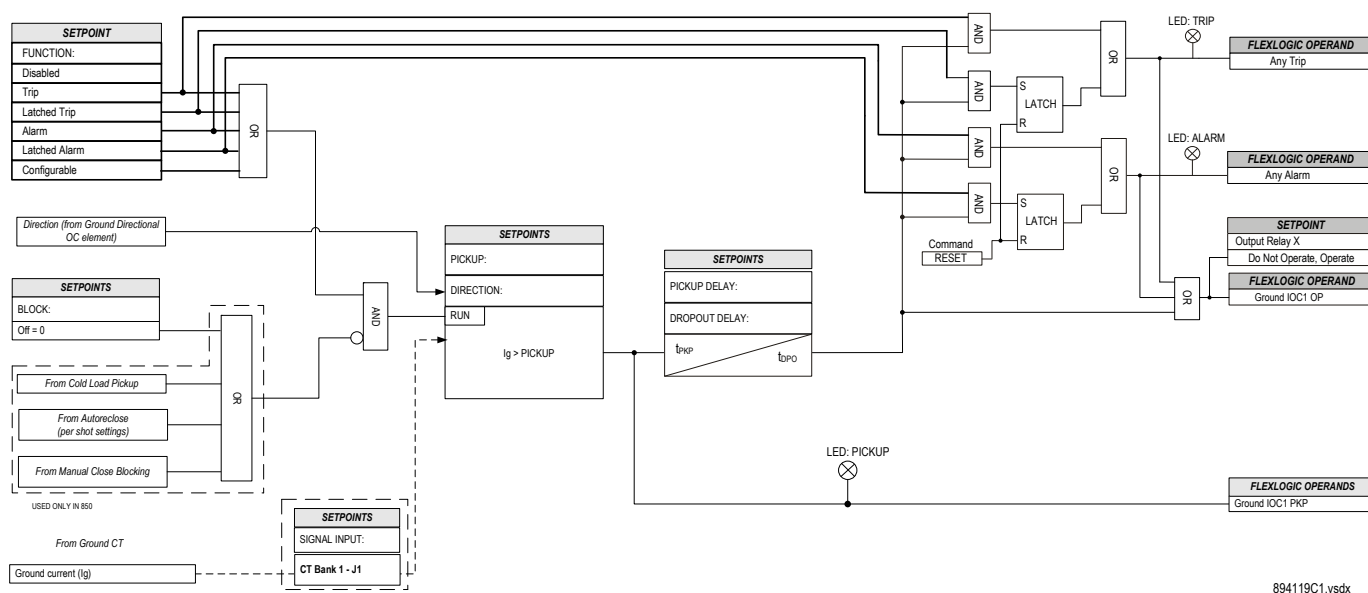


Figure 185: Ground Instantaneous Overcurrent Protection logic diagram

9.4.11 GROUND DIRECTIONAL OVERCURRENT PROTECTION (67G)

The Ground Directional Overcurrent protection element provides both forward and reverse fault direction indications shown by the operands Gnd Dir OC FWD and Gnd Dir OC REV respectively. The output operands are asserted if the magnitude of the operating current is above a Pickup level (overcurrent unit) and the fault direction is seen as forward or reverse, respectively (directional unit).

The *overcurrent unit* responds to the magnitude of a fundamental frequency phasor of the ground current. There are separate Pickup settings for the forward-looking and reverse-looking functions.

The directional unit uses the ground current (I_g) for fault direction discrimination, and can be polarizing, by either *Calculated* V_0 zero-sequence voltage, or *Measured* V_N zero sequence voltage. The following tables define the ground directional overcurrent element.

DIRECTIONAL UNIT				OVERCURRENT UNIT
POLARIZING MODE	DIRECTION	COMPARED PHASORS		
Voltage	Forward	$-V_0$	I_g	GROUND CURRENT (I_g)
		$-V_0 = 1/3(V_N)$	I_g	
	Reverse	$-V_0$	$-I_g$	
		$-V_0 = 1/3(V_N)$	$-I_g$	

When **POLARIZING VOLTAGE** is set to *Measured VX*, one-third of this voltage is used in place of V0. The following figure explains the usage of the voltage polarized directional unit of the element by showing the voltage-polarized phase angle comparator characteristics for a phase A to ground fault, with:

- ECA = 90° (element characteristic angle = centerline of operating characteristic)
- FWD LA = 80° (forward limit angle = the $\pm$ angular limit with the ECA for operation)
- REV LA = 80° (reverse limit angle = the $\pm$ angular limit with the ECA for operation).


The element incorporates a current reversal logic: if the reverse direction is indicated for at least 1.25 of a power system cycle, the prospective forward indication will be delayed by 1.5 of a power system cycle. The element is designed to emulate an electromechanical directional device. Larger operating and polarizing signals will result in faster directional discrimination bringing more security to element operation.

The forward-looking function is designed to be more secure as compared to the reverse-looking function, and should therefore be used for the tripping direction. The reverse-looking function is designed to be faster as

compared to the forward-looking function and should be used for the blocking direction. This allows better protection coordination.

The above bias should be taken into account when using the Ground Directional Overcurrent element to directionalize other protection elements.

For Dual Feeder Applications, for Signal Input of CT Bank 1 – J1 >> VT Bank 1 -J2 is considered as Polarizing voltage source. And, For CT Bank 2 – K1 >> VT Bank 2 – K2 is considered as Polarizing Voltage Source.

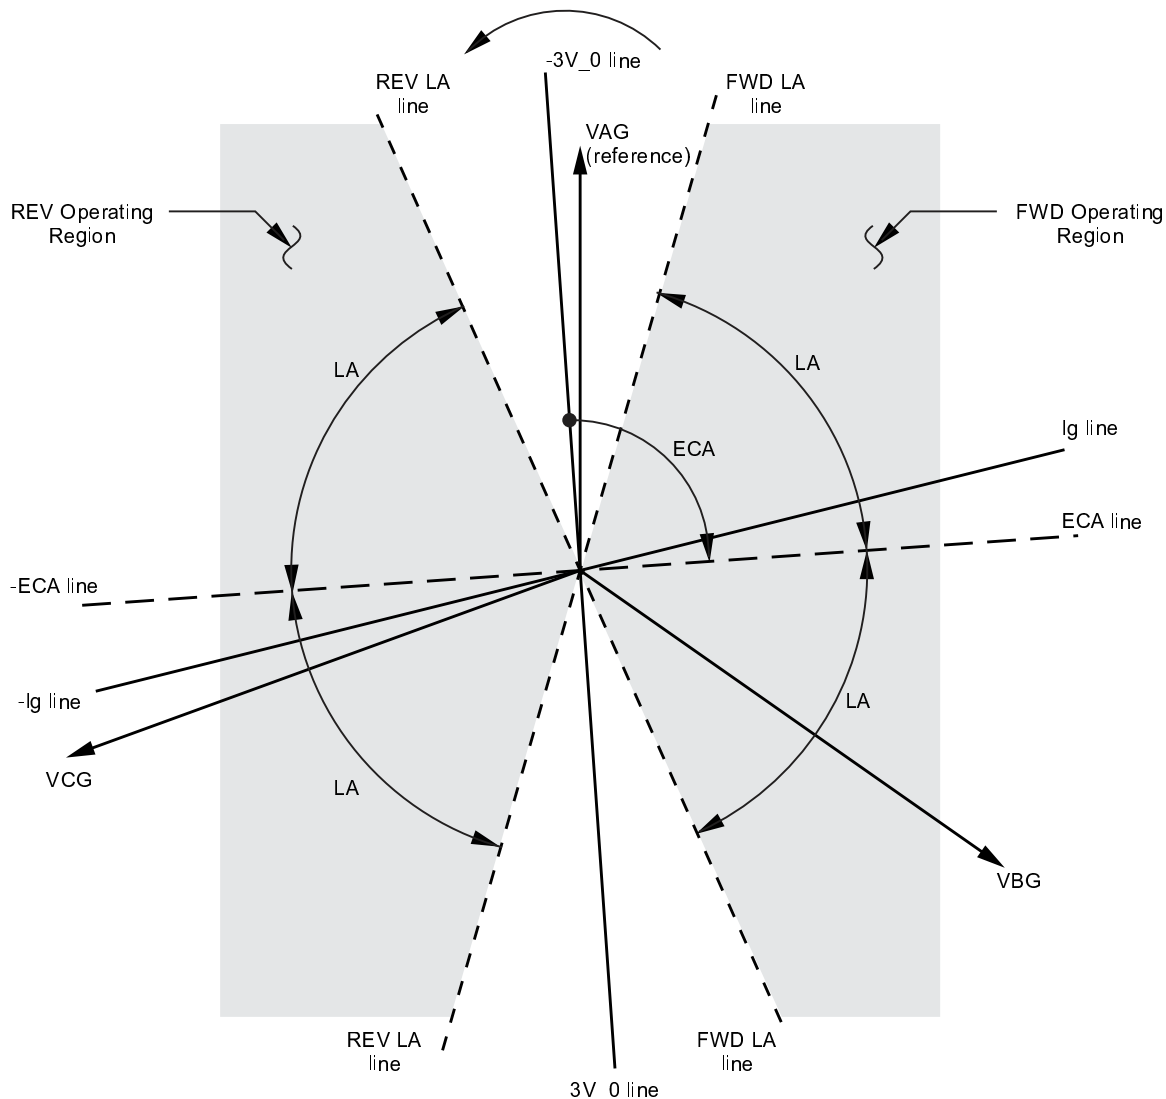

827805X1.CDR

Figure 186: Ground Directional Voltage-polarized Characteristics

9.4.12 RESTRICTED GROUND FAULT (87G)

Restricted Ground Fault (RGF) protection provides ground fault detection for low-magnitude ground fault currents primarily for ground faults close to the neutral point of the wye connected transformer winding. An internal ground fault on an impedance grounded wye winding produces a low magnitude ground fault current depending on the position of the fault with respect to the winding neutral point.

The diagram below shows the dependence of the fault current on the fault distance from the neutral point.

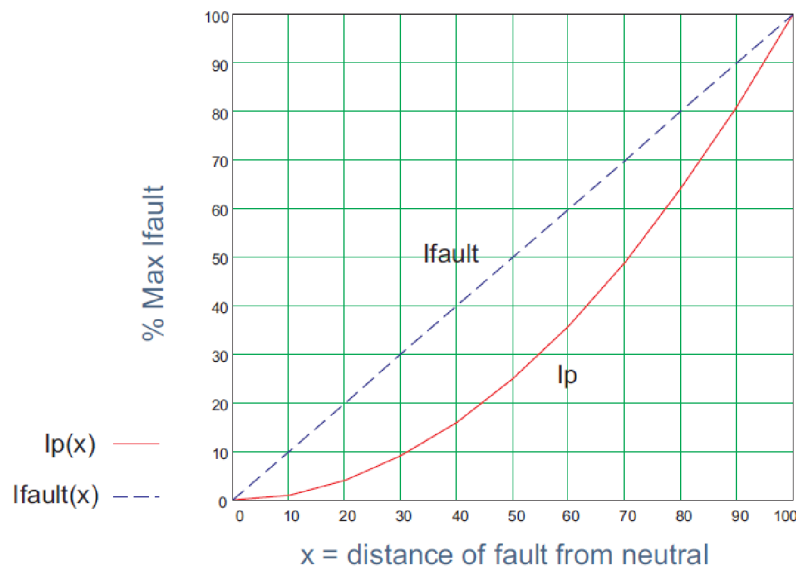


Figure 187: Fault current with respect to distance from neutral

The resultant primary current can be negligible for ground winding faults within 35% of the distance from the neutral point since the fault voltage is not the system voltage, but rather the result of the transformation ratio between the primary windings and the percentage of shorted turns.

Application of Restricted Ground Fault protection extends the fault coverage towards the neutral point for low-impedance grounded winding.

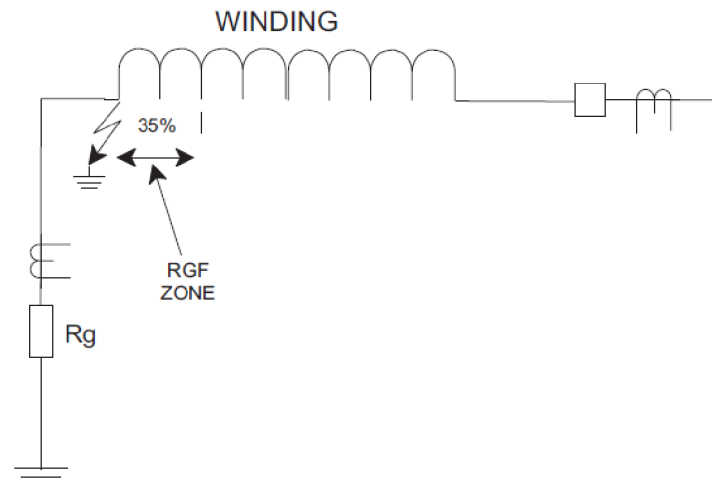


Figure 188: Restricted Ground Fault zone of protection

RGF protection in the 8-series range of relays uses a low impedance current differential scheme. The relay calculates the magnitude of the ground differential current as an absolute value from the vector summation of the computed residual current, and the measured ground current, and applies a restraining current defined as the maximum measured line current (I_{max}) to produce a percent slope value. The slope setting allows determination of the sensitivity of the element based on the class and quality of the CTs used. The figure below shows typical wiring between the winding and ground CTs and the CT terminals, to assure correct performance of the protection. Both wye and zig-zag type transformers are wired in the same manner. Restricted Ground (Earth) Fault protection is also available for delta windings with an in-zone grounding transformer, and for Delta corner grounded windings.

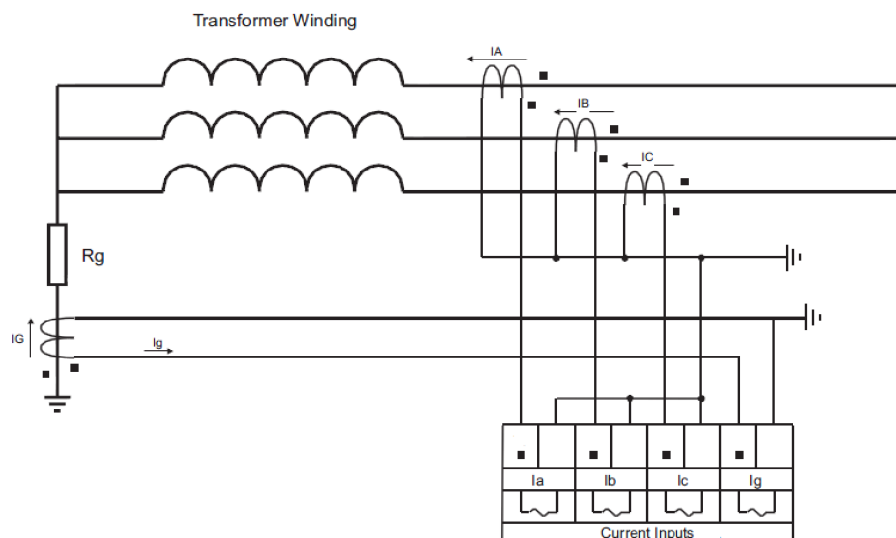


Figure 189: Three CT wiring for the Restricted Ground Fault protection

RGF protection includes ground current supervision mechanism to provide more security during external non-ground faults associated with CT saturation. This can cause spurious neutral currents, which may jeopardize the security of the RGF 1 protection. Therefore, when the **GROUND CURRENT SUPERVISION** setting is enabled, the algorithm checks whether the ground current measured by the relay satisfies the selected **GROUND CURRENT SUPERV LEVEL**, before making an operation decision. The ground current supervision is not active if the **GROUND CURRENT SUPERVISION** is selected as *Disabled*. The RGF 1 protection works without the supervision as well.

The settings of this function are applied to the ground and all three phase currents to produce pickup and trip flags. The RGF 1 pickup flag is asserted, when the restrained ground differential current is above the PKP value. The RGF 1 operate flag is asserted if the element stays picked up for the time defined in **RGF 1 PKP DELAY**. The element drops from Pickup without operation, if the calculated restrained ground differential current drops below 97-98% of the Pickup value, before the time for operation is reached. The Restricted Ground Fault function can be inhibited by a blocking input.

Path: *Setpoints > Protection > Group 1(6) > Current > RGF 1 (X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1 -J1

PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 0.300 x CT

This setting defines the minimum Pickup level of the ground differential current required for operation. The Pickup value is expressed in times Phase CT (primary) rating.

SLOPE

Range: 0 to 100% in steps of 1%

Default: 50%

This setting defines the slope as the ratio between the ground differential current and the maximum line current (ground restraining current) as a percentage. The RGF 1 element operates if the actual ground differential/restraint ratio is greater than the slope and the ground differential current is greater than the RGF 1 Pickup setting.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The RGF 1 Pickup Time Delay setting defines the time required for the RGF 1 element to operate after it has picked up. This time delay overrides the spurious ground differential current condition caused by CT saturation due to external non-ground faults, or during transformer energization. Since RGF 1 protection is intended to detect small ground fault currents, delayed clearance of such a fault is not a high concern. On the other hand delayed RGF 1 operation due to a spurious ground differential current caused by an out-of-zone fault can be used as a backup for downstream protections should they fail to clear the fault.

GND CURR SUPERV

Range: Disabled, Enabled

Default: Disabled

This setting enables or disables the ground current supervision of the RGF 1 function. If set to *Disabled*, the RGF 1 function works without ground current supervision. The ground current level is monitored if the setting is set to *Enabled*.

GND CURR SUPERV LEVEL

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 0.300 x CT

This setting defines the level of measured ground current above which operation of the RGF 1 protection is allowed. The setting is presented as a times ground CT (primary) rating. The measured ground current is compared to the setting only if the **GROUND CURRENT SUPERVISION** is set to *Enabled*.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

Example: Transformer : 5MVA, 13.8kV/4.16kV, D/Yg1 type

- $R_g = 10 \text{ ohms}$
- Phase CTs: 800:5
- Ground CT: 300:5
- $I_{fgnd} (\text{max}) = 4.16\text{kV} / (10 \text{ ohms} \cdot \sqrt{3}) = 240\text{A}$ - maximum ground fault current

To detect a ground fault on the Wye winding at 15% distance from the neutral point, the relay shall detect ground differential current of:

- $I_{gd} = (15 \times 240) / 100 = 36 \text{ A} / 800 = 0.045 \times \text{CT}$ – PKP setting for the RGF protection

The transformer loading is almost unaffected for ground faults close to the winding neutral, so that the winding rated load can be used as a reference in defining the RGF 1 slope setting. The rated load for 4.16kV Wye winding is:

- $I_{rated} = 5\text{MVA} / (4.16\text{kV} \cdot \sqrt{3}) = 693 \text{ A}$

Slope setting, % = $(36 \text{ A} / 693\text{A}) \cdot 100 = 5.1\%$. Select 5% if the transformer is expected to run most of the time at full load. If most of the time the transformer runs at lower than the nominal loads, the slope setting can be set to higher value:

- @ 70% load the slope setting would be: $(36 / 485 \text{ A}) \cdot 100 = 7\%$
- @ 50% load the slope setting would be: $(36 / 346 \text{ A}) \cdot 100 = 10\%$
- @ 30% load the slope setting would be: $(36 / 208 \text{ A}) \cdot 100 = 17\%$

The ground current supervision feature and/or the RGF 1 Pickup time delay can be used if CT saturation due to heavy external fault, is a concern.

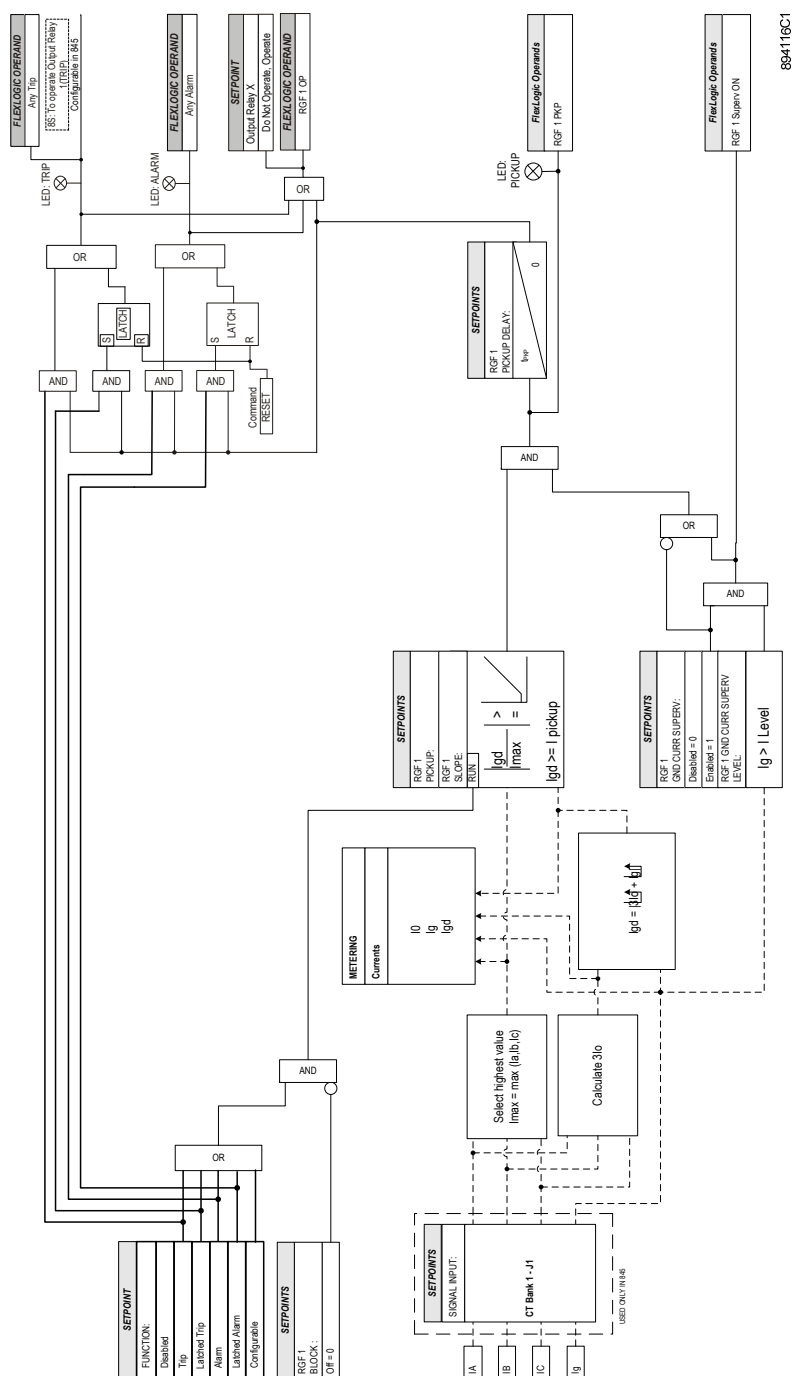


Figure 190: Restricted Ground Fault Protection Logic Diagram

9.4.13 NEGATIVE SEQUENCE TIME OVERCURRENT PROTECTION (51_2)

The Negative Sequence Time Overcurrent element may be used to determine and clear unbalance in the system. The input for computing negative-sequence current is the fundamental phasor value. The relay computes the negative sequence current magnitude $|I_2|$ using the following formula:

$$|I_2| = 1/3 * |I_a + I_b * (1 \angle 240^\circ) + I_c * (1 \angle 120^\circ)|$$

The settings of this function are applied to the calculated negative sequence current to produce *Trip* or *Pickup* flags. The Negative Sequence TOC Pickup flag is asserted when the negative sequence current is above the pickup value. The Negative Sequence TOC Trip flag is asserted if the element stays picked up for the time defined by the

selected inverse curve and the magnitude of the current. The element drops from Pickup without operation if the measured current drops below 97 to 98% of the pickup value, before the time for operation is reached. When Definite Time is selected, the time for Negative Sequence TOC operation is defined only by the TDM setting.

Path: Setpoints > Protection > Group 1(6) > Current > Negative Sequence TOC 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the selection for the current input bank. The default bank name can be changed in Setpoints > System > Current Sensing > [Name] > CT Bank Name.

The **Signal Input** setting is visible only in the 845 and 889. For other products, it is hidden.

PICKUP

Range: 0.020 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

This setting sets the pick-up threshold of Negative Sequence TOC element.

CURVE

Range: Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I2t, I4t, Rapid Inverse, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D.

Default: IEEE Moderately Inverse

TDM

Range: 0.010 to 600.00 in steps of 0.01

Default: 1.00

This is the Time Multiplier Setting to adjust the operate time of IEC Curve A/B/C, IEEE M/V/E Inverse, US Inverse, US Short Time, ANSI E/V/N/M Inverse, IAC E/V/N/S Inverse, I2T and I4T curves.

TMS

Range: 0.025 to 1.200 in steps of 0.005

Default: 1.000

This is the Time Multiplier Setting to adjust the operate time of IEC Short Inverse, Long Time Inverse, Rectifier, Standard Inverse SI(1.3s) and BPN EDF curves.

K (RI)

Range: 0.10 to 10.00 in steps of 0.05

Default: 1.00

This setting defines the Time multiplier constant to adjust the operate time of the Rapid Inverse (RI) curve.

This k(RI) setting can be made visible from setting management, only when 'Curve' setting is selected as Rapid Inverse curve

TIME DELAY

Range: 0.000 to 200.000 s in steps of 0.001 s

Default: 1.000

This setting sets the Time delay for the Negative Sequence TOC element, when operate time is selected as Definite Time (DT).

This Time Delay setting can be made visible from setting management, only when 'Curve' setting is selected as Definite Time (DT).

DT Adder

Range: 0.00 to 100.00 s in steps of 0.01 s

Default: 0.00

This setting adds an additional fixed time delay to the IDMT Operate characteristic.

The **DT Adder** setting will be visible for when any IDMT curves are selected under Curve setting.

RESET

Range: DT, Inverse

Default: DT

Selection of a Definite Time (DT) or Inverse reset time is provided using this setting.

If Definite Time (DT) reset is selected, the element will reset after a time delay provided by Reset Time (IEC tReset) setting. If Inverse reset is selected, the time to reset is calculated based on the reset equation for the selected inverse curve.

When using IEC Short Inverse, Long Time Inverse, BPN EDF, Rectifier, Rapid Inverse curves for the Operate characteristic, Definite Time is used by default as Reset characteristic.

Reset Time [ANSI]

Range: 0.000 to 600.000 s in steps of 0.001 s

Default: 0.000s

This setting determines the Reset Time for the Definite Time (DT) characteristic.

This can be made visible from setting management when 'Reset Char' setting is selected as DT or when using Long Time Inverse, IEC Short Inverse, BPN EDF, Rectifier, and RI curves.

DIRECTION

Range: Disabled, Forward, Reverse

Default: Disabled

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

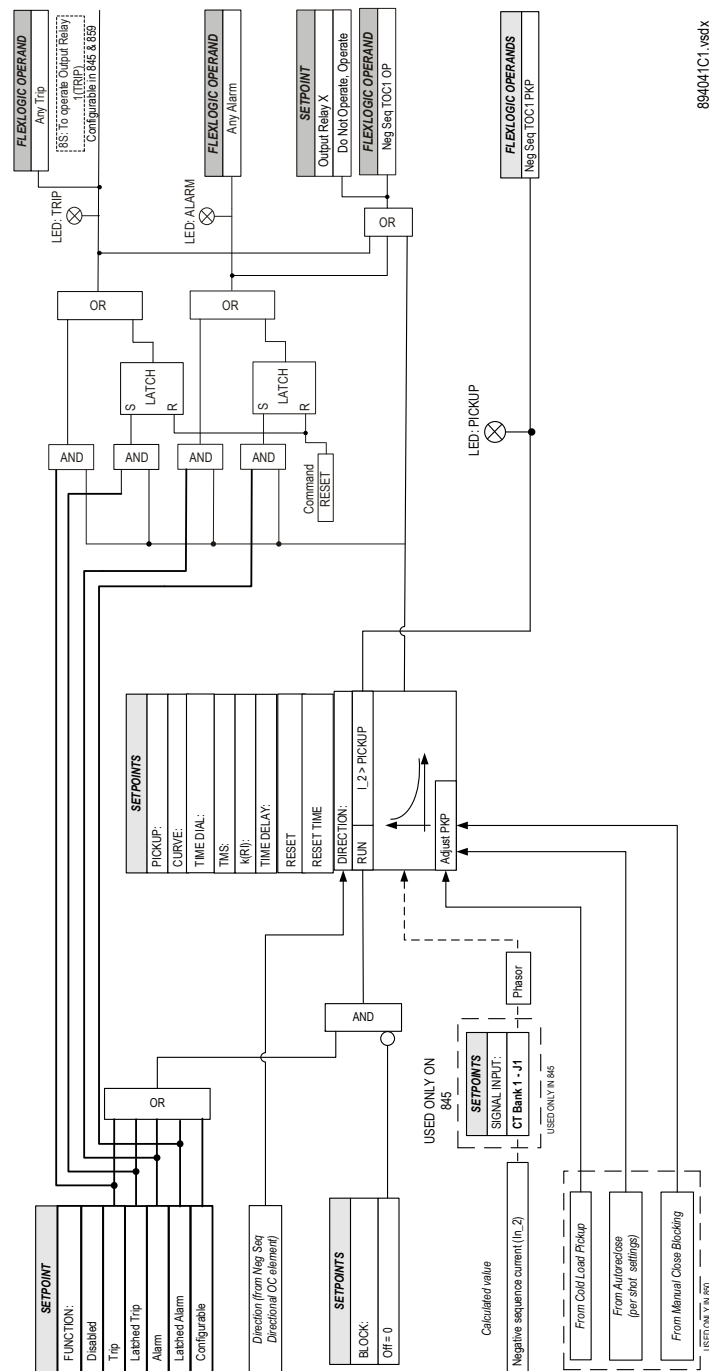

894041C1.vsd x

Figure 191: Negative Sequence Time Overcurrent Protection logic diagram

9.4.14 NEGATIVE SEQUENCE INSTANTANEOUS OVERCURRENT PROTECTION (50_2)

The Negative Sequence Instantaneous Overcurrent element may be used to determine and clear unbalance in the system. The input for computing negative sequence current is the fundamental phasor value. The relay computes the negative sequence current magnitude $|I_2|$ using the following formula:

$$|I_2| = 1/3 * |I_a + I_b * (1 \angle 240^\circ) + I_c * (1 \angle 120^\circ)|$$

The element responds to the negative-sequence current and applies a positive sequence restraint for better performance: a small portion (12.5%) of the positive sequence current magnitude is subtracted from the negative sequence current magnitude when forming the operating quantity:

$$I_{op} = |I_2| - K * |I_1|$$

where $K = 1/8$ and $|I_1| = 1/3 * |I_a + I_b * (1 \angle 120^\circ) + I_c * (1 \angle 240^\circ)|$

The positive sequence restraint allows for more sensitive settings by counterbalancing spurious negative-sequence currents resulting from:

- system unbalances under heavy load conditions
- current transformer (CT) transformation errors during three-phase faults
- fault inception and switch-off transients during three-phase faults.

The positive sequence restraint must be considered when testing for Pickup accuracy and response time (multiple of Pickup). The operating quantity depends on the way the test currents are injected into the relay (single-phase injection: $I_{op} = 0.2917 * I_{injected}$; three-phase injection, opposite rotation: $I_{op} = I_{injected}$).

The settings of this function are applied to the calculated negative sequence current to produce *Pickup* and *Trip* flags. The Negative Sequence IOC Pickup flag is asserted, when the negative sequence current is above the pickup value. The Negative Sequence IOC Operate flag is asserted if the element stays picked up for the time defined by the Negative Sequence IOC **PICKUP DELAY** setting. If the Pickup time delay is set to 0.000 seconds, the Pickup and Operate flags are asserted at the same time. The element drops from Pickup without operation if the negative sequence current drops below 97 to 98% of the Pickup value.

Path: *Setpoints* > *Protection* > *Group 1(6)* > *Current* > *Negative Sequence IOC 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the selection for the current input bank. The default bank names can be changed in:

Setpoints > **System** > **Current Sensing** > **[Name]** > **CT Bank Name**.

PICKUP

Range: 0.020 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

DIRECTION

Range: Non-Directional, NegSeq Dir [1-4] FWD, NegSeq Dir [1-4]

Default: Non-Directional

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

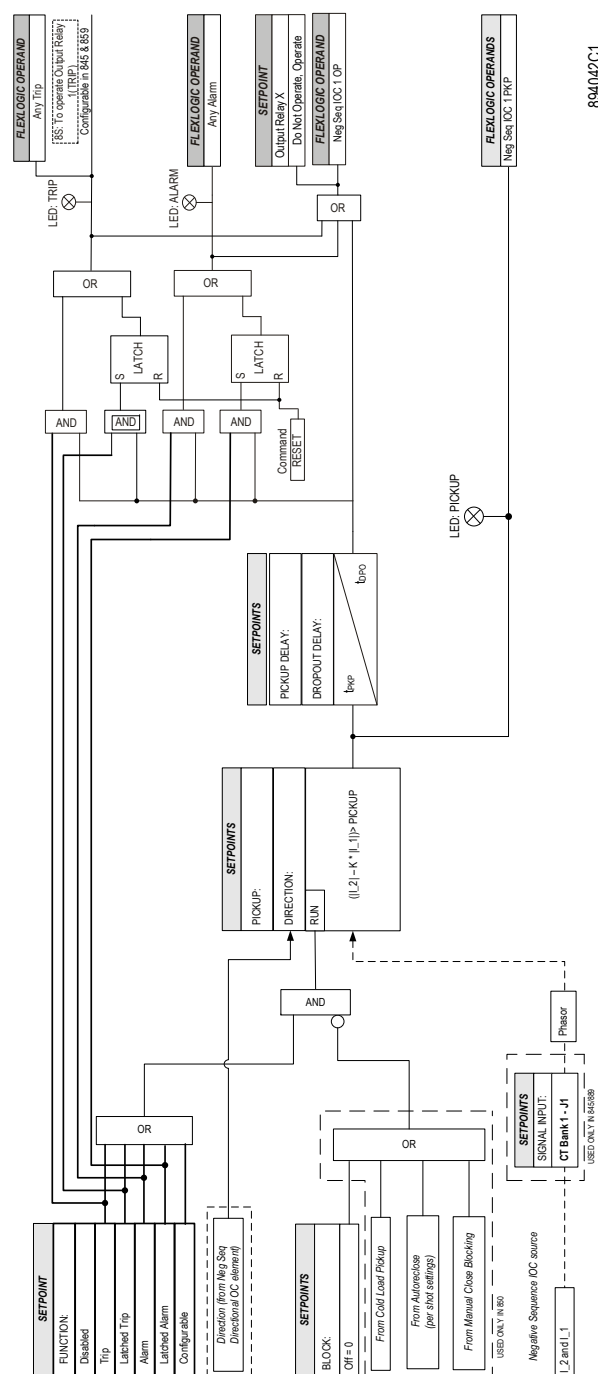


Figure 192: Negative Sequence Instantaneous Overcurrent logic diagram

9.5 VOLTAGE ELEMENTS OVERVIEW

The 845 transformer protection relay provides the following voltage protection elements:

- Undervoltage curves (UV Curves)
- Phase undervoltage (Phase UV)
- Auxiliary undervoltage (Auxiliary UV)
- Phase overvoltage (Phase OV)
- Auxiliary overvoltage (Auxiliary OV)
- Neutral overvoltage (Neutral OV)
- Negative sequence overvoltage (Neg Seq OV)
- Volts per Herz

9.5.1 UNDERVOLTAGE CURVES

The undervoltage elements can be programmed to have an inverse time delay characteristic. The undervoltage delay setpoint defines a family of curves as shown below.

The operating time is given by:

$$T = D / (1 - V/V_{pkp})$$

Where:

- T = Operating Time
- D = Undervoltage **PICKUP DELAY** setpoint (for D = 0.00 operates instantaneously)
- V = Voltage as a fraction of the nominal VT Secondary Voltage
- V_{pkp} = Undervoltage Pickup Level

The element resets instantaneously if the applied voltage exceeds the dropout voltage. The delay setting selects the minimum operating time of the phase undervoltage.

Note:

*At 0% of Pickup, the operating time equals the Undervoltage **PICKUP TIME DELAY** setpoint.*

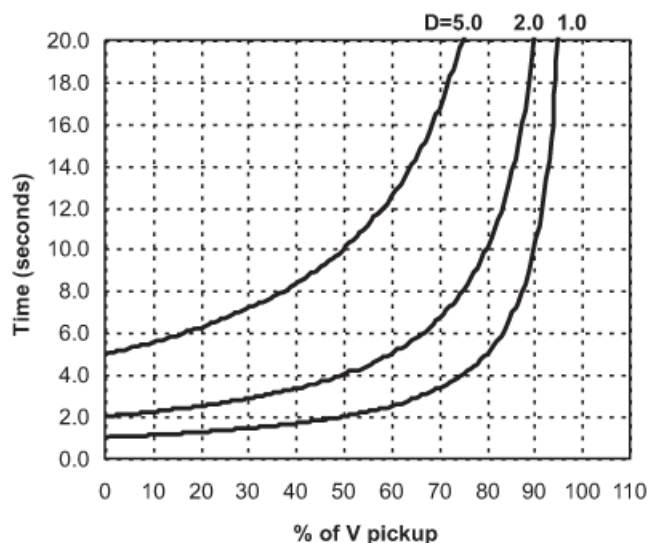


Figure 193: Inverse Time Undervoltage Curves

If FlexCurves are selected, the operating time determined based on following equation:

$$T = \text{FlexCurve} (V_{pkp} / V)$$

Note:

FlexCurve reverses the ratio of voltages. The ratio of set pickup value to the measured voltage.

Example: For a Pickup set to $0.9 \times V_T$, when the measured voltage is $0.82 \times V_T$, the ratio would be $0.9/0.8 = 1.1$, therefore in the FlexCurve, the corresponding Trip time setting entry is at $1.1 \times PKP$ (not at $0.82 \times PKP$). On the other hand, when the measured voltage is $1 \times V_T$, the ratio is $0.9/1 = 0.9$, therefore, in the FlexCurve, the corresponding Reset time entry is at $0.9 \times PKP$.

9.5.2 PHASE UNDERVOLTAGE PROTECTION (27P)

The Phase Undervoltage element may be used to protect voltage sensitive loads and system components against sustained undervoltage conditions. This element may be used for permissive functions, initiation of the source transfer schemes, and similar functions.

The Phase Undervoltage element may be set as an instantaneous element with no time delay or as a time delayed element which can be configured with definite time, inverse time or FlexCurves. The Phase Undervoltage element has programmable minimum operating threshold to prevent some undesired operation when voltage is not available. The input voltages are the three phase to phase voltages from delta connected VTs (PTs) or three phase to ground voltages from wye connected VTs (PTs).

The settings of this function are applied to each of the three voltage inputs to produce Pickup and Trip flags per voltage input. The UV Pickup flag is asserted, when the measured voltage on any of the three voltage inputs is below the PKP value. The UV Trip flag is asserted if the element stays picked up for the time defined by Pickup time delay or for the time defined by the selected inverse curve / FlexCurve, and number of voltages required for operation matches the number of voltages selected in the setting. The element drops from Pickup without operation if the measured voltage rise above 102 to 103% of the Pickup value, before the time for operation is reached.

The **MINIMUM VOLTAGE** setting selects the operating voltage below which the element is blocked (a setting of 0 allows a dead source to be considered a fault condition).

This element may be used to give a desired time delay operating characteristic versus the applied voltage (phase to ground or phase to phase for wye VT connection, or phase to phase for delta VT connection) or as a definite time element. For the inverse time setpoint, the undervoltage delay setpoint defines a family of curves.

Path: *Setpoints > Protection > Group 1(6) > Voltage Elements > Phase UV 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

MODE

Range: Phase to Ground, Phase to Phase

Default (3.xx): Phase to Ground

Default (4.10): Phase to Phase

This setting provides the selection of phase to ground and phase to phase voltages for a Wye VT connection (phase to phase for delta connected VT connection).

Note:

Only Phase-to-Phase mode should be used when Delta/Single' VT Connection Type and Pseudo Reference Phase-to-Phase is programmed for the Phase VT Connection setting under System/Voltage Sensing.

PICKUP

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 1.00 x VT

This setting sets the Phase Undervoltage Pickup level specified per times VT.

For example, a Pickup setting of 0.80 x VT with a 13800:115 VT translates into 11.04kV (or 92V secondary). If the mode selection is phase to phase and the Setpoints/System Setup/Voltage Sensing/Phase VT Connection selection is Wye, the previous example translates to the phase to phase voltage value of $11.04\text{kV} \times 1.732 = 19.12\text{kV}$.

MINIMUM VOLTAGE

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

This setting sets the minimum operating voltage for the undervoltage Pickup level specified per times VT.

For example, a PKP setting of 0.20 x VT with 13800:115 VT translates into 2.76kV (or 23V secondary).

If the Mode setting selection is Phase to Phase and the Setpoints/System Setup/Voltage Sensing/Phase VT Connection selection is Wye, the previous example translates to a

Phase to Phase voltage value of $2.76\text{kV} \times 1.732 = 4.78\text{kV}$.

PHASES FOR OPERATION

Range: Any One, Any Two, All Three

Default: Any One

This setting defines the number of voltages required for operation of the Phase UV protection function.

UNDervOLTAGE CURVES

Range: Definite Time, Inverse Time, FlexCurves A/B/C/D

Default: Definite Time

This setting provides the selection of definite time delay or time delay inverse undervoltage curves, or FlexCurves. In the case of FlexCurves, the voltage ratio used is reversed. Refer to the equation and note regarding FlexCurves in the previous section .

PICKUP DELAY

Range: 0.020 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time pickup delay.

RESET TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides selection for dropout time delay used to delay the dropout of the detection of the undervoltage condition.

RESET MODE

Range: Definite Time, Dependent Time

Default: Definite Time

This setting is based on IEC 60255-151 reset characteristics.

If Definite Time is selected, the percentage of elapsed time for the operate timer is memorized for the set reset time. If the pickup condition returns before the reset timer has timed out, the operate time initializes from the memorized value. Otherwise, the memorized value is reset to zero after the reset time times out.

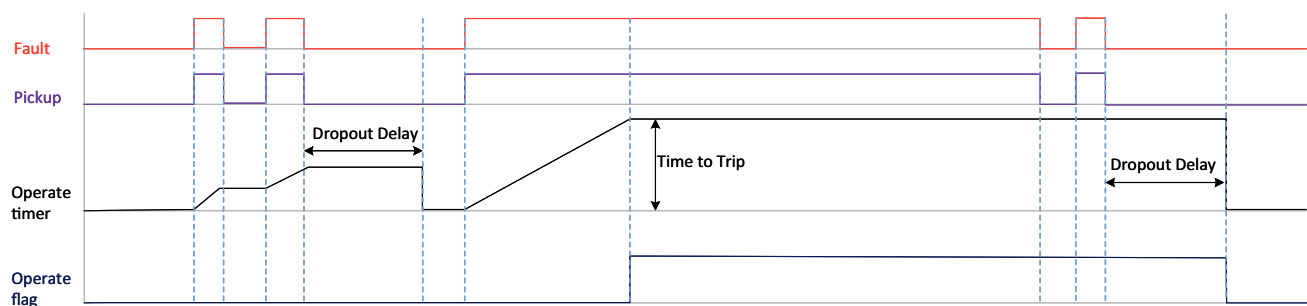


Figure 194: Reset Mode Definite Time

If Dependent Time is selected, the operate timer start decrementing when the pickup condition resets. If the pickup condition returns before the reset timer has timed out, the operate timer again start incrementing. Otherwise, the relay returns to its reset state after the set reset time.

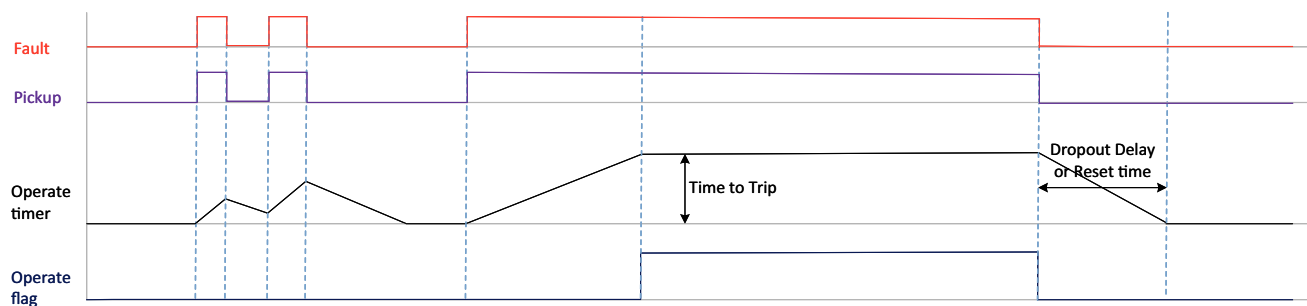


Figure 195: Reset Mode Dependent Time

Note:

This setting is hidden when Undervoltage Curve is configured to Definite Time. When Curve is programmed as Definite Time, the Reset Mode is always Definite Time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

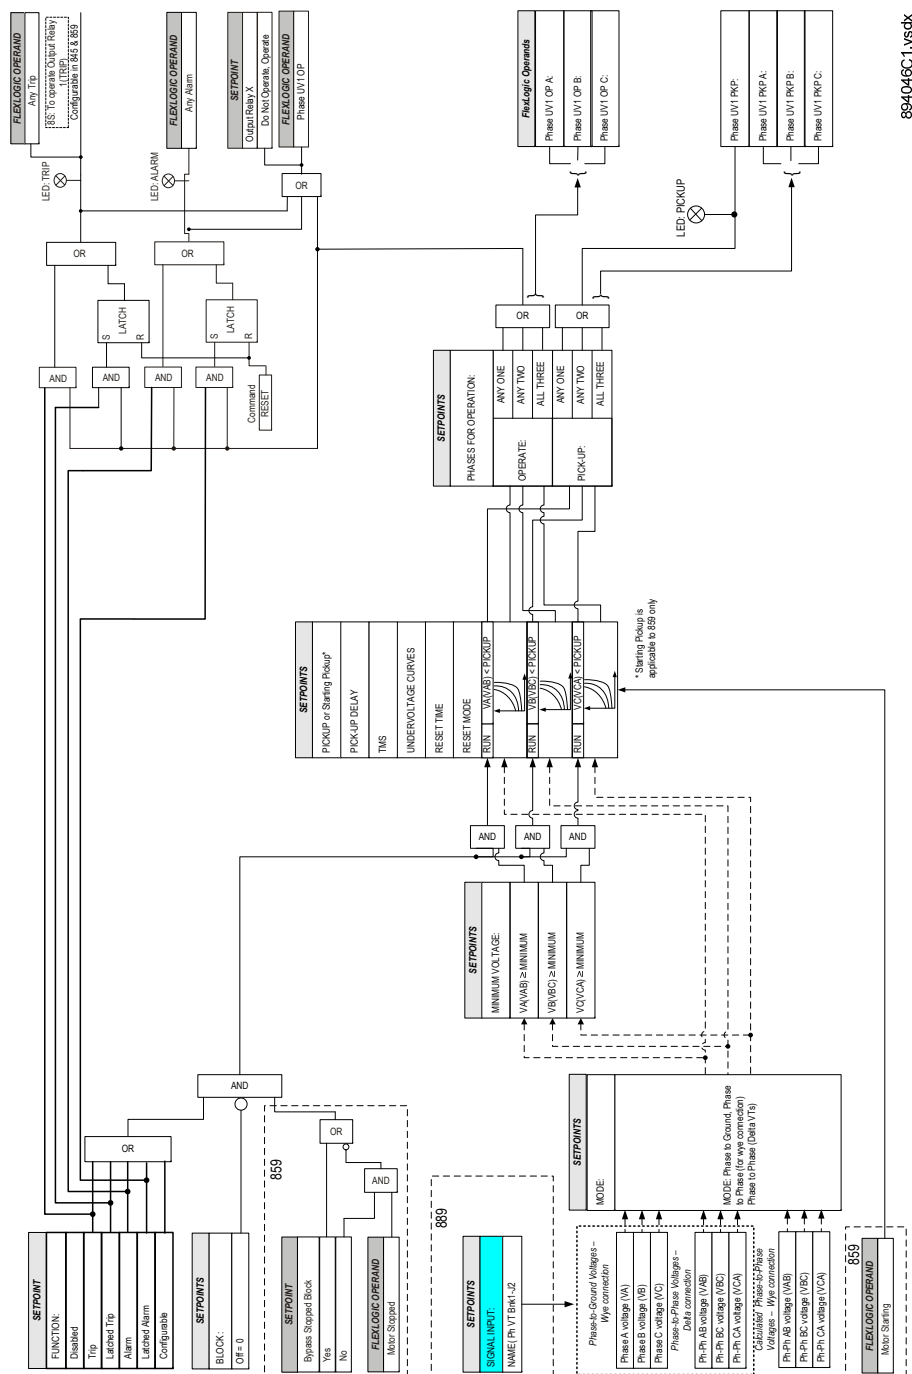


Figure 196: Phase Undervoltage Protection logic diagram

9.5.3 AUXILIARY UNDERVOLTAGE (27X)

The relay provides two identical Auxiliary Undervoltage (UV) elements per protection group, or a total of 12 elements. Each Auxiliary Undervoltage element may be used to protect voltage sensitive loads and system components against sustained undervoltage conditions. This element may be used for permissive functions, initiation of the source transfer schemes and similar functions.

The Auxiliary Undervoltage element may be set as an instantaneous element with no time delay or as a time delayed element which can be programmed with definite time, inverse time or FlexCurves. The Auxiliary Undervoltage element has a programmable minimum operating threshold to prevent undesired operation when voltage is not available. The input voltage is the auxiliary voltage.

The settings of this function are applied to auxiliary voltage input to produce Pickup and Trip flags. The Auxiliary UV Pickup flag is asserted when the auxiliary input voltage is below the PKP value. The Auxiliary UV Trip flag is asserted if the element stays picked up for the time defined by Pickup time delay or for the time defined by the selected inverse curve/FlexCurve. The element drops from Pickup without operation if the measured voltage rises above 102 to 103% of the Pickup value before the time for operation is reached.

The minimum voltage setting selects the operating voltage below which the element is blocked (a setting of 0 will allow a dead source to be considered a fault condition).

This element may be used to give a desired time-delay operating characteristic versus the applied voltage, or as a definite time element. For the inverse time setpoint, the undervoltage delay setpoint defines a family of curves.

Path: Setpoints > Protection > Group 1(6) > Voltage Elements > Auxiliary UV 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ax VT Bnk1-J2

Default: Ax VT Bnk1-J2

This setting provides the selection for the signal input.

PICKUP

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 1.00 x VT

This setting sets the Auxiliary Undervoltage Pickup level specified per times VT. For example, a Pickup setting of 0.80 x VT with a 13800:115 VT translates into 11.04kV (or 92V secondary).

MINIMUM VOLTAGE

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

This setting sets the minimum operating voltage for the undervoltage Pickup level specified per times VT.

UNDervOLTAGE CURVES

Range: Definite Time, Inverse Time, FlexCurves A/B/C/D

Default: Definite Time

This setting provides the selection of definite time delay or time delay inverse undervoltage curves. In the case of FlexCurves, the voltage ratio is reversed.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

If *Inverse Time* is selected as an Undervoltage Curve setpoint, the Pickup Delay value is loaded to variable D in the curve formula.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS


Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

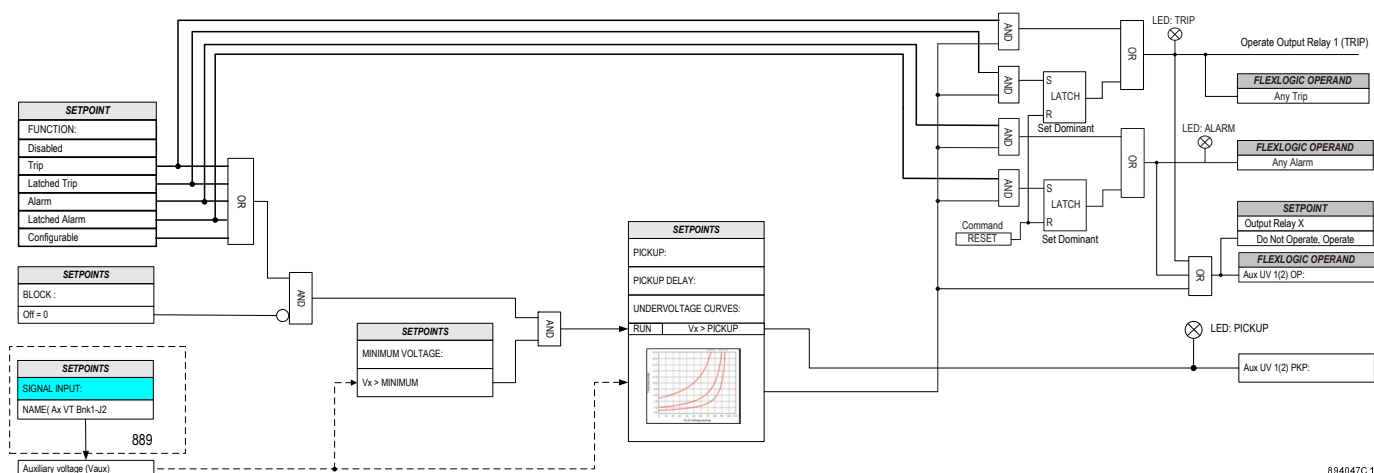

894047C 1

Figure 197: Auxiliary Undervoltage Protection logic diagram

9.5.4 PHASE OVERVOLTAGE PROTECTION (59P)

The relay provides two identical Phase Overvoltage (OV) elements per protection group, or a total of 12 elements. Each Phase Overvoltage element may be used to protect voltage sensitive loads and system components against sustained overvoltage conditions. The Phase Overvoltage element may be set as an instantaneous element with no time delay or may be set as a definite time element. The input voltages are the three phase to phase voltages from delta connected VTs or three phase to ground voltages from wye connected VTs.

The settings of this function are applied to each of the three voltage inputs to produce Pickup and Trip flags per voltage input. The OV Pickup flag is asserted when the voltage on any voltage input is above the PKP value. The OV Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay, Inverse Time or Flex Curves and that number of voltages required for operation is equal to the number defined by voltages required for the operation setting. The element drops from pickup without operation, if the measured voltage drops below the configured dropout level of the pickup value, before the time for operation is reached. The dropout level can be configured at **Setpoints > Device > Installation > OV/UV DPO Range**.

Phase Overvoltage elements may be used to protect voltage sensitive loads and system components against sustained overvoltage conditions. The Phase Overvoltage element may be set as an instantaneous element with no time delay or may be set as a definite time element, Inverse Time, or with FlexCurve. The input voltages are the

three phase to phase voltages from delta connected VTs, or the three phase to ground voltages from wye connected VTs.

This element may be used to give a desired time-delay operating characteristic versus the applied voltage or as a definite time element. For the inverse time setpoint, the overvoltage pickup delay setpoint defines a family of curves as shown below.

The operating time is given by:

$$T = D / [(V/V_{\text{pickup}})-1] \text{ when } V > V_{\text{pickup}}$$

where:

- T = trip time in seconds
- D = Overvoltage Pickup Delay setpoint
- V = actual phase-phase voltage
- V_{pickup} = Overvoltage Pickup setpoint

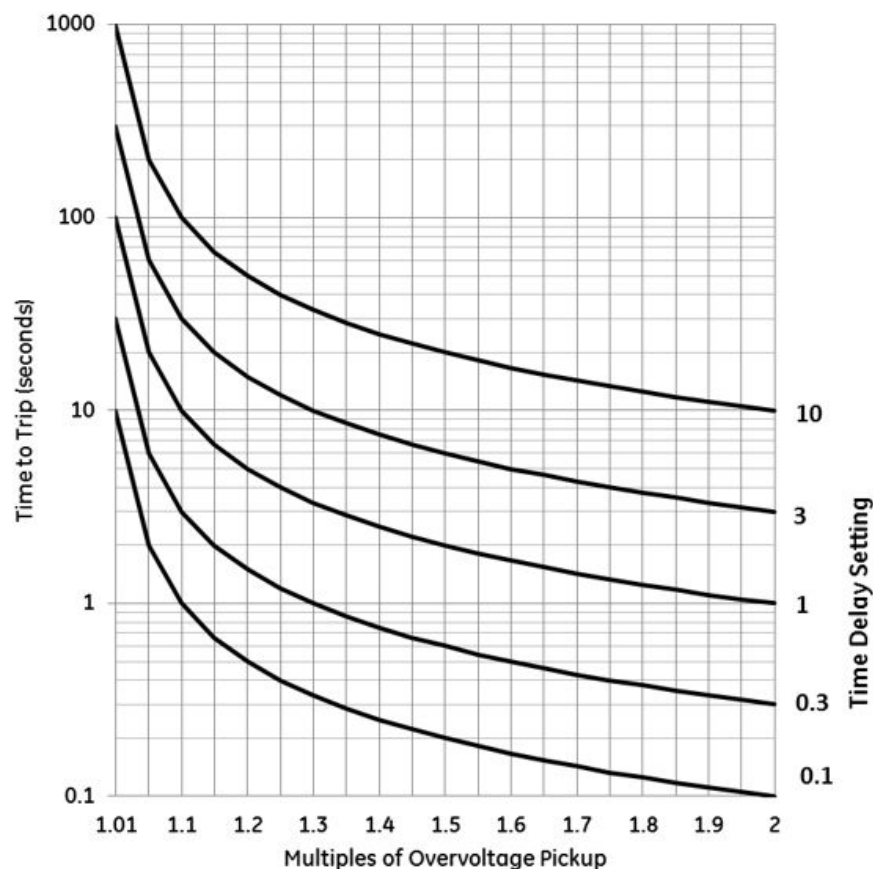


Figure 198: Overvoltage curves

Path: *Setpoints > Protection > Group 1(6) > Voltage > Phase OV 1(X)*

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

MODE

Range: Phase to Ground, Phase to Phase

Default (3.xx): Phase to Ground

Default (4.10): Phase to Phase

This setting provides the selection of phase to ground and phase to phase voltages for a Wye VT connection (phase to phase for delta connected VT connection).

Note:

Only Phase to Phase mode should be selected when Delta/Single VT Connection Type and Pseudo Reference Phase-to-Phase is programmed for the Phase VT Connection setting under **Setpoints > System > Voltage Sensing**.

PICKUP

Range: 0.02 to 3.00 x VT in steps of 0.01 x VT

Default: 1.50 x VT

The setting sets the phase overvoltage pickup level to specified per times VT.

For example, a Pickup setting of 1.10 x VT with 13800:115 VT translates into 15.18kV. If the mode selection is phase to phase and **Setpoints > System Setup > Voltage Sensing > Phase VT Connection** selection is Wye, the previous example translates to the phase to phase voltage value of 15.18kV x 1.732 = 26.29kV.

PHASES FOR OPERATION

Range: Any One, Any Two, All Three

Default: Any One

The setting defines the number of voltages required for operation of the Phase OV protection function.

CURVE (not used in 859)

Range: Definite Time, Inverse Time, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D

Default: Definite Time

This setting provides selection of curves for overvoltage as definite time, inverse time overvoltage curves or FlexCurves.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time pickup delay.

Note:

This Time Delay setting is visible from setting management, only when the Curve setting is selected as DT (Definite Time).

TMS

Range: 0.5 to 100.0 in steps of 0.5

Default: 1.0

If the Inverse Time is selected as an Curve setpoint, the TMS value is loaded to variable “D” in the curve formula

Note:

Note: This TMS setting is visible from setting management, only when ‘Curve’ setting is selected as IDMT or Inverse Time.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides the dropout delay used for resetting the element. An instantaneous reset is provided by dropout time delay setting of 0.000s.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides the dropout delay used for resetting the element. An instantaneous reset is provided by dropout time delay setting of 0.000 s.

RESET MODE

Range: Definite Time, Dependent Time

Default: Definite Time

If the reset mode is set to definite time, the operate timer retains its current value for the duration of dropout delay after the pickup drops (i.e., fault clears). If the pickup condition occurs again before the dropout delay ends, the operate timer will increment from its retained value instead of zero. Otherwise, at the end of the dropout delay, the operate timer resets to zero. If the operate flag was already set, it resets when the operate timer fully resets. When Curve is set to Definite Time, the Reset Mode is always Definite Time.

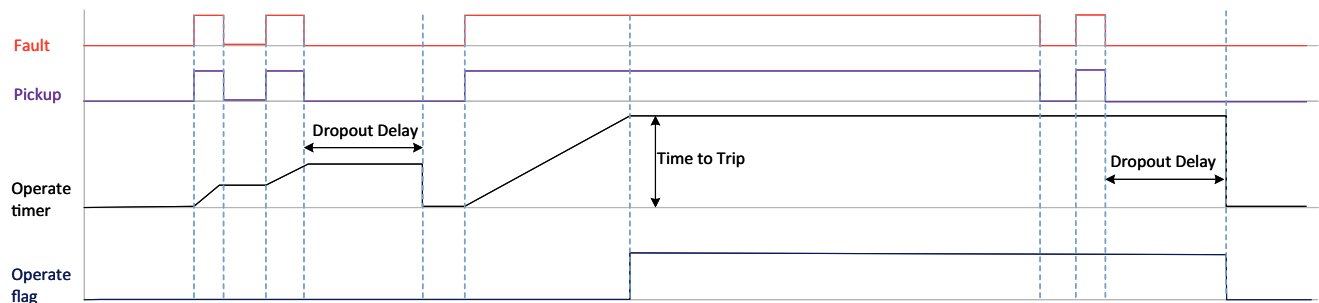


Figure 199: Reset Mode Definite Time

If the reset mode is set to dependent time, the operate timer will linearly decrement when the pickup drops. If the pickup condition occurs again before the dropout delay, the operate timer will increment from the previous value instead of zero. In this mode, the dropout delay is the time to fully reset the operate timer from the trip threshold. If the operate flag was already set, it resets when the pickup drops. after the operate timer fully resets. . If the ‘Curve’ is selected as a FlexCurve, the Dropout Delay setting is not used. Instead, the reset time calculated from the FlexCurve characteristics is used for resetting.

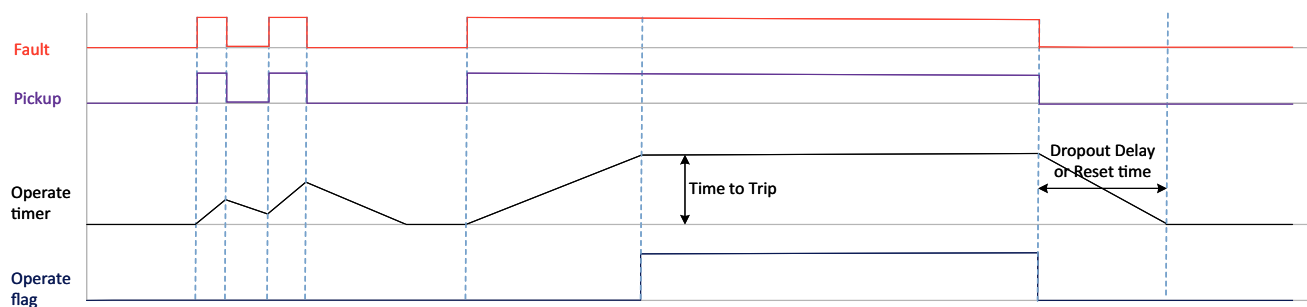


Figure 200: Reset Mode Dependent Time

Note:

This Reset mode setting is hidden when Curve is configured to Definite Time. When Curve is set to Definite Time or DT, the Reset Mode is always Definite Time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

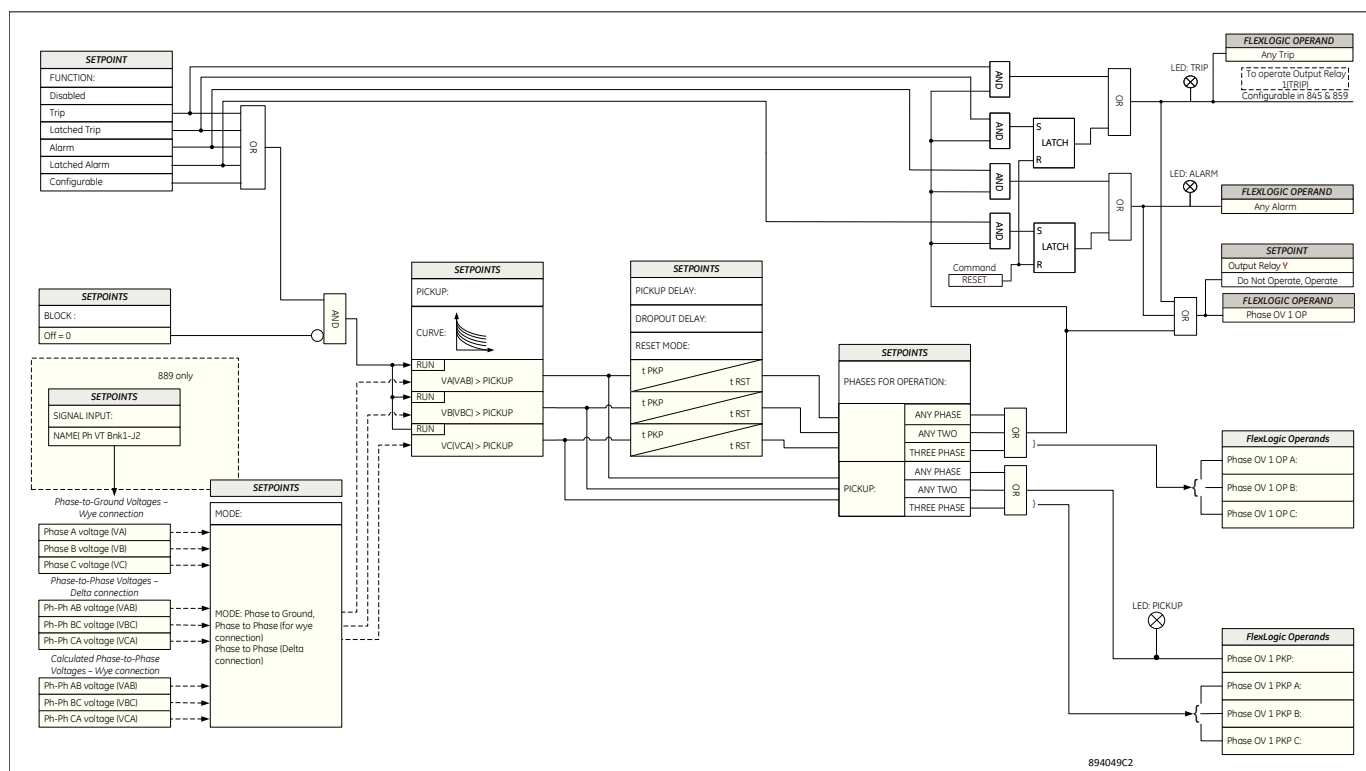


Figure 201: Phase Overvoltage logic diagram

9.5.5 AUXILIARY OVERVOLTAGE PROTECTION (59X)

The relay provides one Auxiliary Overvoltage (OV) element per protection group, or a total of 6 elements. Each Auxiliary OV element is used to protect voltage sensitive loads and system components against sustained overvoltage conditions. This element can be used for monitoring zero-sequence voltage (from an "open corner delta" VT connection), permissive functions, the source transfer schemes, restoration and similar functions.

The Auxiliary OV element may be set as an instantaneous element with no time delay or may be set as a definite time element, Inverse Time, or with FlexCurves. The input voltage is the auxiliary voltage.

The settings of the Auxiliary OV Protection function are applied to the auxiliary voltage input to produce pickup and trip flags. The Auxiliary OV pickup flag is asserted, when the voltage on auxiliary input is above the PKP value. The Auxiliary OV trip flag is asserted if the element stays picked up for the time defined by pickup time delay, Inverse Time, or FlexCurves. The element drops from pickup without operation, if the measured voltage drops below 97-98% of the pickup value, before the time for operation is reached.

This element may be used to give a desired time-delay operating characteristic versus the applied voltage or as a definite time element. For the inverse time setpoint, the overvoltage pickup delay setpoint defines a family of curves as shown below.

The operating time is given by:

$$T = D / [(V/V_{\text{pickup}}) - 1] \text{ when } V > V_{\text{pickup}}$$

Where:

- T = trip time in seconds
- D = Overvoltage Pickup Delay setpoint
- V = actual phase-phase voltage
- V_{pickup} = Overvoltage Pickup setpoint
- The element reset rate is a linear reset time from the threshold of trip.

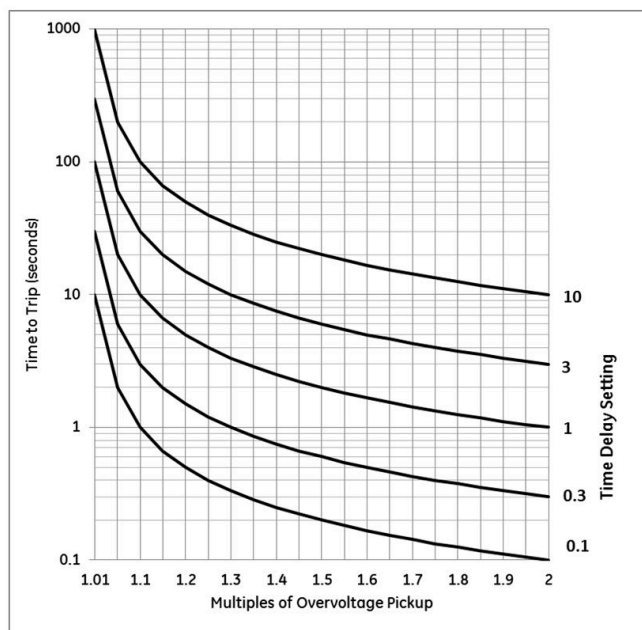


Figure 202: Overvoltage Curves

Path: *Setpoints > Protection > Group 1(6) > Voltage > Auxiliary OV*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT

Range: Ax VT Bnk1-J2

Default: Ax VT Bnk1-J2

This setting provides the selection for the signal input.

PICKUP

Range: 0.00 to 3.00 x VT in steps of 0.01 x VT

Default: 1.50 x VT

This setting sets the auxiliary overvoltage pickup level specified per times VT.

For example, a Pickup setting of 1.10 x VT with 13800:115 VT translates into 15.08kV (or 126.5V secondary).

CURVE

Range: Definite Time, Inverse Time, FlexCurves A/B/C/D

Default: Definite Time

This setting provides the selection of curves for the overvoltage as definite time, inverse time overvoltage curves or FlexCurves.

PICKUP DELAY

Range: 0.000 - 6000.000s in steps of 0.001s

Default: 1.000s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time dropout delay of the operate signal if the Curve setting is selected as Definite Time. An instantaneous reset is provided by dropout time delay setting of 0.000 s. If the selected Curve setting is Inverse Time, the dropout delay value is used to linearly reset the element. If the Curve is selected as a FlexCurve, the reset setpoints of the FlexCurve are used to reset the element.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

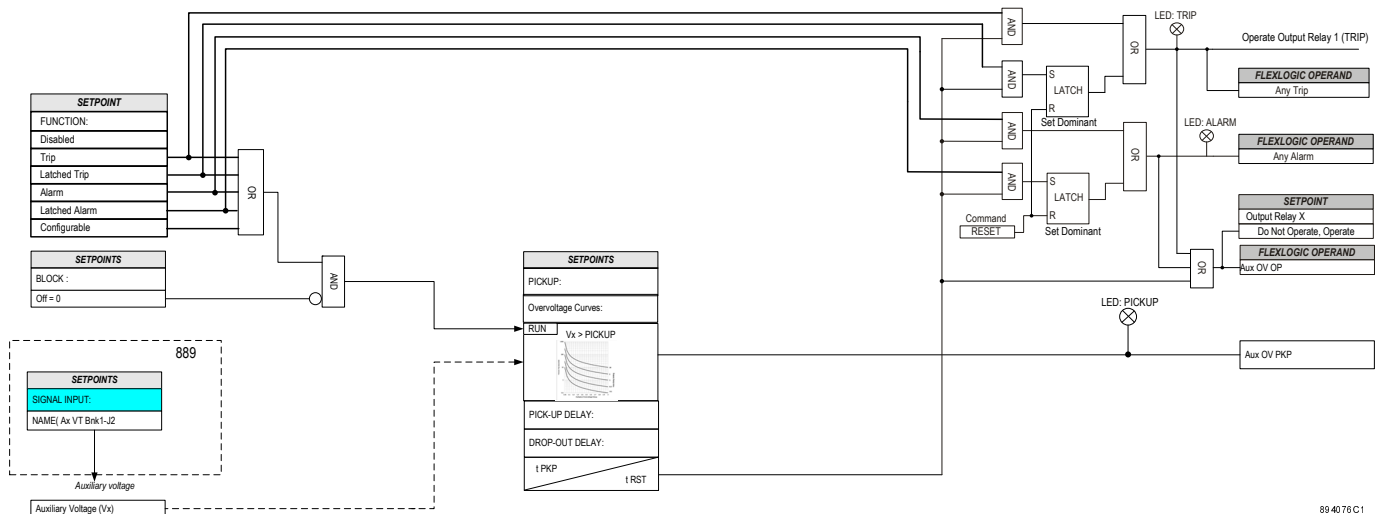


Figure 203: Auxiliary Overvoltage Protection logic diagram

9.5.6 NEUTRAL OVERVOLTAGE PROTECTION (59N)

The relay provides one Neutral Overvoltage (Neutral OV, also called Neutral Displacement) element per protection group.

The Neutral Overvoltage element can be used to detect asymmetrical system voltage conditions caused by a ground fault or the loss of one or two phases of the source. The element responds to the system neutral voltage (3V0), calculated from the phase voltages. The nominal secondary voltage of the phase voltage channels entered under **Setpoints > System > Voltage Sensing > Phase VT Secondary** is the base used when setting the Pickup

level. The Neutral Overvoltage element can provide a time-delayed operating characteristic versus the applied voltage (initialized from FlexCurves A, B, C or D) or can be used as a definite time element. The source voltage assigned to this element must be configured for a phase VT and phase VTs must be wye connected. VT errors and normal voltage unbalance must be considered when setting this element.

Note:

The same curves used for the time overcurrent elements are used for Neutral Displacement. When using the curve to determine the operating time of the Neutral Displacement element, substitute the ratio of neutral voltage to Pickup level for the current ratio shown on the horizontal axis of the curve plot.

The relay provides Neutral Overvoltage protection with independent time delay characteristics. Each stage provides a choice of operate characteristics, where you can select between:

- An IDMT characteristic
- A range of user-defined curves
- DT (Definite Time)

The undervoltage delay setpoint defines a family of curves as shown below.

The Inverse Time characteristics is given by:


$$T = D / [(V/V_{pkp}) - 1]$$

where:

- T = Operating Time
- D = neutral over voltage Pickup Time Delay setpoint (for D = 0.00 operates instantaneously)
- V = Voltage as a fraction of the nominal VT Secondary Voltage
- V_{pkp} = neutral over voltage Pickup Level

If FlexCurves are selected, the same curves used for the time overcurrent elements are used for Neutral Displacement. When using the curve to determine the operating time of the Neutral Displacement element, substitute the ratio of neutral voltage to the pickup level for the current ratio shown on the horizontal axis of the curve plot.

$$T = \text{FlexCurve}(V/V_{pkp})$$

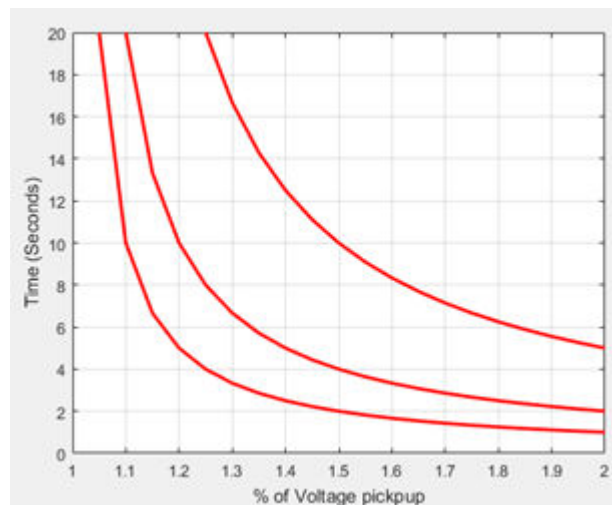

Inverse Time neutral over voltage Curves for varying D

The Neutral Overvoltage feature should be applied with caution. It would normally be applied to give line-to-ground fault coverage on high impedance grounded or ungrounded systems, which are isolated. This constraint stems from the fact that a measurement of 3V0 cannot discriminate between a faulted circuit and an adjacent healthy circuit.

Use of a time delayed back-up or alarm mode allows other protections an opportunity to isolate the faulted element first.

The settings of this function are applied to 3V0 calculated from the three phase-to-ground (wye connected VTs) voltage inputs to produce Pickup and Trip flags per 3V0 calculated voltage. The Neutral OV Pickup flag is asserted when the calculated 3V0 voltage is above the PKP value. The Neutral OV Trip flag is asserted if the element stays picked up for the time defined by the selected inverse curve and the magnitude of the 3V0 voltage. The element drops from Pickup without operation, if the calculated voltage drops below 97 to 98% of the Pickup value before the time for operation is reached.

Path: *Setpoints > Protection > Group 1(6) > Voltage Elements > Neutral OV 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

PICKUP

Range (3.xx): 0.02 to 3.00 x VT in steps of 0.01 x VT

Range (4.10): 0.02 to 4.00 x VT in steps of 0.01 x VT

Default: 0.30 x VT

CURVE

Range (3.xx): Definite Time, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D

Range (4.10): Definite Time, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D, Inverse time

Default: Definite Time

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

The **NEUTRAL OV 1 PICKUP DELAY** setting applies only if the **NEUTRAL OV 1 CURVE** setting is *Definite time*.

If Inverse Time is selected as neutral OV Curve, the Pickup Delay value is loaded to variable D in the curve formula.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

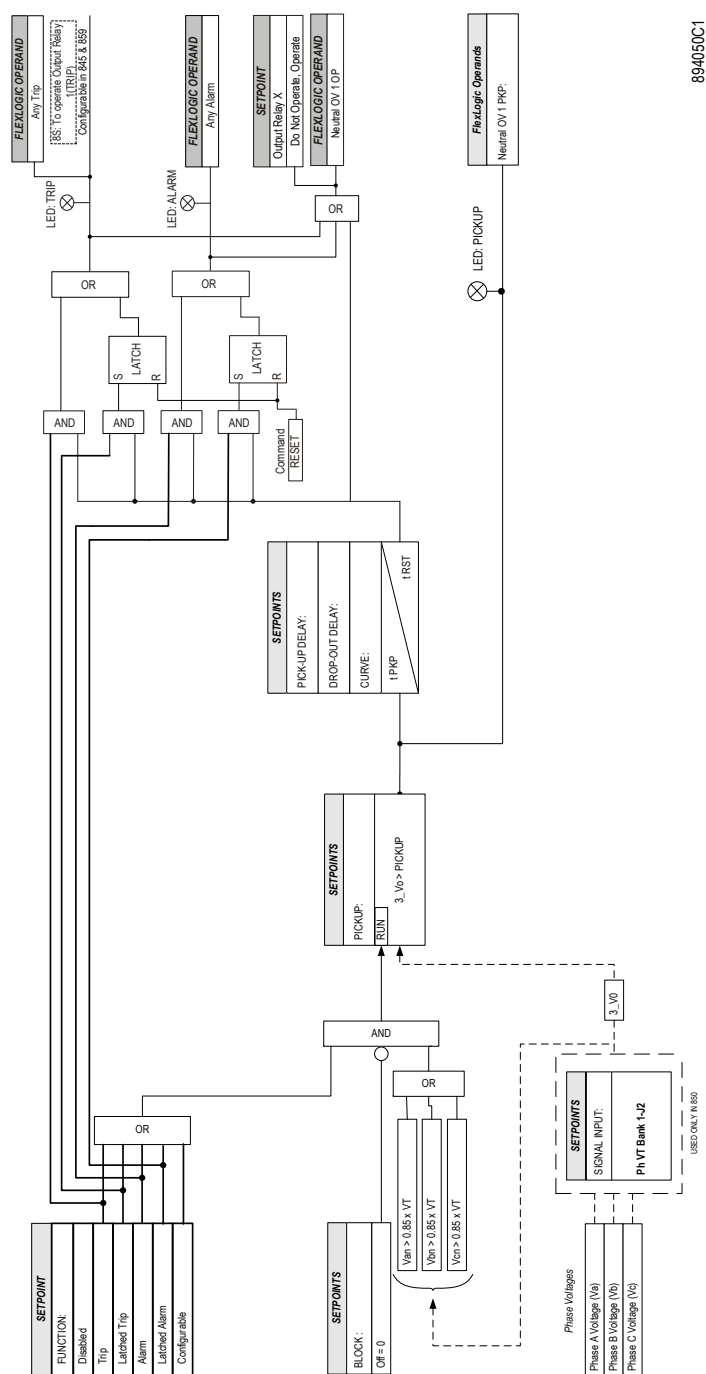


Figure 204: Neutral Overvoltage Protection logic diagram

9.5.7 NEGATIVE SEQUENCE OVERVOLTAGE PROTECTION (59_2)

The relay provides one Negative Sequence Overvoltage (Negative Sequence OV 1) element per protection group, or a total of 6 elements.

The Negative Sequence Overvoltage element can be used to detect an asymmetrical system voltage condition, loss of one or two phases of the source, or reversed phase sequence of voltages. The element responds to the negative sequence voltage (V2), calculated from the phase voltages. The Negative Sequence Overvoltage element may be set as an instantaneous element with no time delay, or may be set as a definite time element.

The settings of this function are applied to the calculated Negative Sequence Voltage to produce Pickup and Trip flags. The Negative Sequence OV Pickup flag is asserted when the Negative Sequence Voltage is above the PKP

value. The Negative Sequence OV Trip flag is asserted if the element stays picked up for the time defined by Pickup time delay. The element drops from Pickup without operation if the calculated Negative Sequence Voltage drops below 97 to 98% of the Pickup value before the time for operation is reached.

Path: *Setpoints > Protection > Group 1(6) > Voltage > Neg Seq OV 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: Ph VT Bnk1-J2, Ph VT Bnk2-K2

Default: Ph VT Bnk1-J2 (order code dependent)

This setting provides the selection for the voltage signal input.

PICKUP

Range: 0.00 to 3.00 x VT in steps of 0.01 x VT

Default: 1.00 x VT

This setting sets the Negative Sequence Overvoltage Pickup level specified per times VT. For example, a Pickup setting of 0.80 x VT with 13800:115 VT translates into 11.04 kV (or 92 V secondary).

Note:

If the 3 phase VT is delta connected, the Negative Sequence Overvoltage pickup level is internally changed to $1/\sqrt{3}$ of the user setting, before being compared to the actual negative sequence voltage.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time pick-up delay. Instantaneous operation is selected by pick-up time delay setting of 0.000 s.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 1.000 s

This setting provides definite time drop-out delay. An instantaneous reset is provided by drop-out time delay setting of 0.000 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

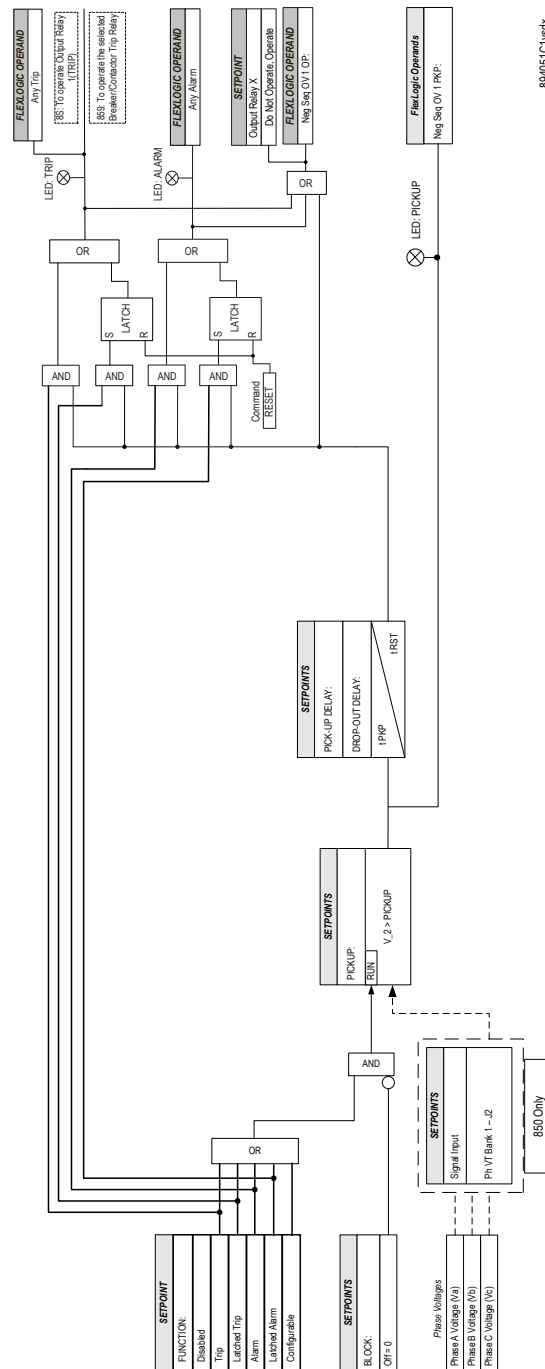


Figure 205: Negative Sequence Overvoltage Protection logic diagram

9.5.8 VOLTS PER HERTZ (24)

The volts-per-hertz (V/Hz) value is calculated using the maximum of the three-phase voltage inputs. If there is no voltage on the relay terminals, the V/Hz value is automatically set to “0”. The V/Hz value is established as per voltage and nominal frequency power system settings as follows: if the phase voltage inputs defined in the source menu are used for V/Hz operation, then V/Hz is based on the selected **Setpoint > System > Voltage Sensing > Ph VT Bnk1-J2 > Voltage 1 > Phase VT Secondary** setting, and the **Setpoint > System > Power System > Nominal Frequency** setting.

For example, if Phase VT Secondary and Nominal Frequency are set as 120 V and 60 Hz, respectively, these set values define the base unit as $1 \times (\text{V/Hz})$.

The volts-per-hertz ratio after division of these nominal settings is $120/60 = 2$.

Assume the **PICKUP** setpoint from the V/Hz element is set to $1.05 \times (\text{V/Hz})$. This will mean that in order for the element to pick up, the actual volts-per-hertz ratio after division should be $2 * 1.05 = 2.1$.

The ratio of 2.1 can be achieved if for example the measured voltage is 126V and frequency is 60 Hz, or the voltage is constant at 120 V and the frequency is 57.14 Hz, or any other combination of these two values, which after V/Hz division equals 2.1.

To check back the **PICKUP** setting, we use the base (V/Hz) unit = $120/60 = 2$, such that the **PICKUP** setting value is $2.1/2 = 1.05 \times (\text{V/Hz})$.

The element has a linear reset characteristic. The reset time can be programmed to match the cooling characteristics of the protected equipment. The element will fully reset from the trip threshold in Reset Time seconds. The V/Hz element can be used as an instantaneous element with no intentional time delay or as a Definite or Inverse timed element. The characteristics of the inverse curves are shown as follows.

Path: Setpoints > Protection > Group 1(6) > Voltage > Volts per Hertz 1(2)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT (not for 859)

Range: dependent on the order code

Default: Ph VT Bnk1-J2

This setting specifies the input voltage used to calculate the per-unit volts-per-Hertz (V/Hz). If three phase voltages are used then set the AC Inputs to “Ph VT Bnk1-J2”. To use the V/Hz element with auxiliary voltage, set AC Inputs to “Aux VT Bnk1-J2”.

VOLTAGE MODE

Range: Phase-ground, Phase-phase

Default: Phase-ground

If the Phase VT Connection is selected as “Wye”, then the **VOLTAGE MODE** setting further defines the operating quantity and per-unit value for this element. If the **VOLTAGE MODE** is set as “Phase-phase”, then the operating quantity for this element will be phase-to-phase nominal voltage. Likewise, if the **VOLTAGE MODE** is set to “Phase-ground”, then the operating quantity for this element will be the phase-to-ground nominal voltage.

If the Phase VT Connection (set under **Setpoint > System > Voltage Sensing**) is selected as “Delta”, then the phase-to-phase nominal voltage is used to define the per-unit value, regardless of the Voltage Mode selection.

PICKUP

Range: 0.80 to 4.00 V/Hz in steps of 0.01

Default: 1.05 V/Hz

Enter the Volts per Hertz value (in V/Hz) above which the Volts per Hertz 1 element will pickup.

CURVE

Range: Definite Time, Inverse A, Inverse B, Inverse C, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D

Default: Definite Time

Inverse Curve A: The curve for the Volts/Hertz Inverse Curve A shape is derived from the formula:

$$T = \frac{TDM}{\left[\left(\frac{V}{F} \right) / Pickup \right]^2 - 1} \quad \text{when } \frac{V}{F} > Pickup$$

where:

- T = Operating Time
- TDM= Time Delay Multiplier (delay in seconds)
- V = fundamental RMS value of voltage (pu)
- F = frequency of voltage signal (pu)
- Pickup = volts-per-hertz pickup setpoint (pu)

The volts/hertz inverse A curves are shown below.

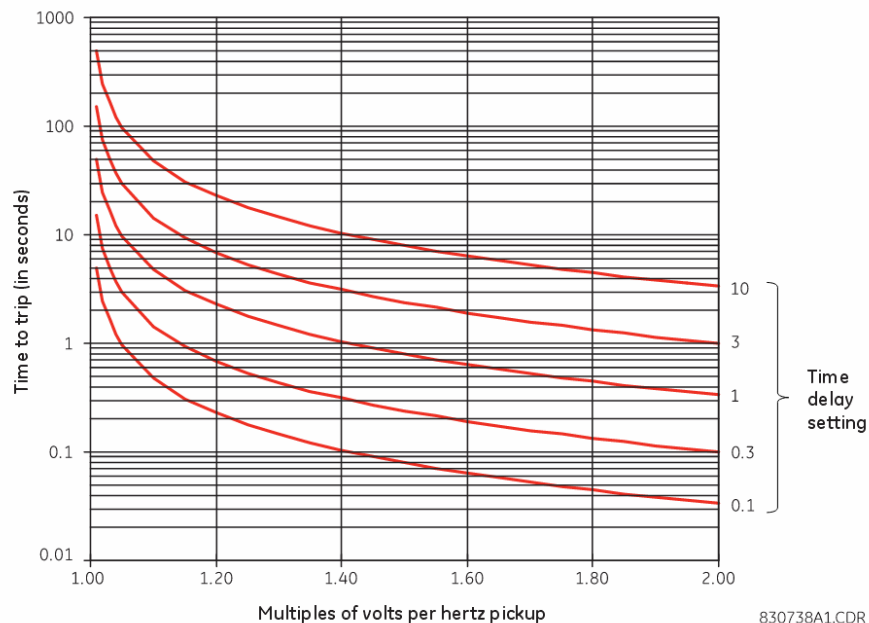


Figure 206: Volts-Per-Hertz Curves for Inverse Curve A


Inverse Curve B: The curve for the Volts/Hertz Inverse Curve B shape is derived from the formula:

$$T = \frac{TDM}{\left[\left(\frac{V}{F} \right) / Pickup \right] - 1} \quad \text{when } \frac{V}{F} > Pickup$$

where:

- T = Operating Time
- TDM = Time Delay Multiplier (delay in seconds)
- V = fundamental RMS value of voltage (pu)
- F = frequency of voltage signal (pu)
- Pickup = volts-per-hertz pickup setpoint (pu)

The Volts/Hertz inverse B curves are shown below.

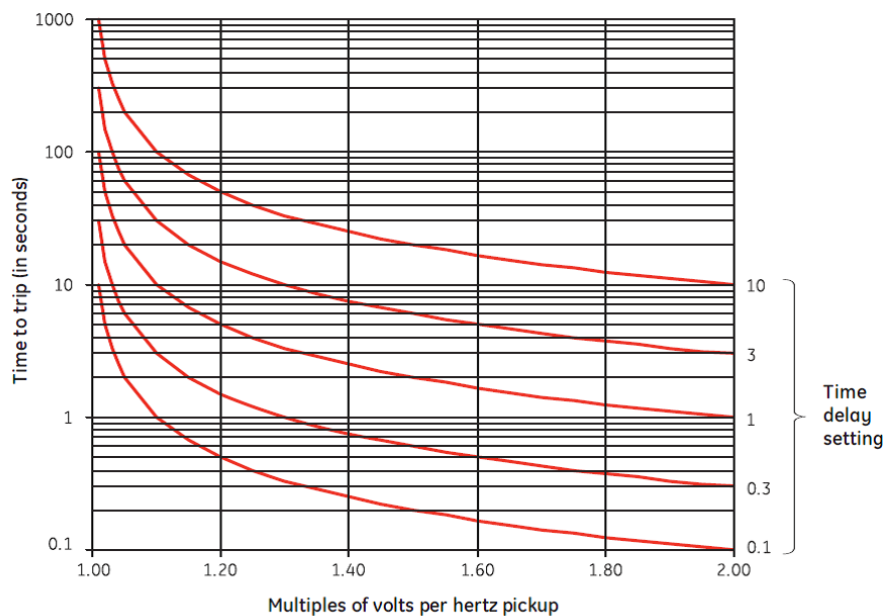

830739A1.CDR

Figure 207: Volts-Per-Hertz Curves for Inverse Curve B

Inverse Curve C: The curve for the Volts/Hertz Inverse Curve C shape is derived from the formula:

$$T = \frac{TDM}{\left[\left(\frac{V}{F} \right) / Pickup \right]^{1/2} - 1} \quad \text{when } \frac{V}{F} > Pickup$$

where:

- T = Operating Time
- TDM = Time Delay Multiplier (delay in seconds)
- V = fundamental RMS value of voltage (pu)
- F = frequency of voltage signal (pu)
- Pickup = volts-per-hertz pickup setpoint (pu)

The Volts/Hertz Inverse C curves are shown below.

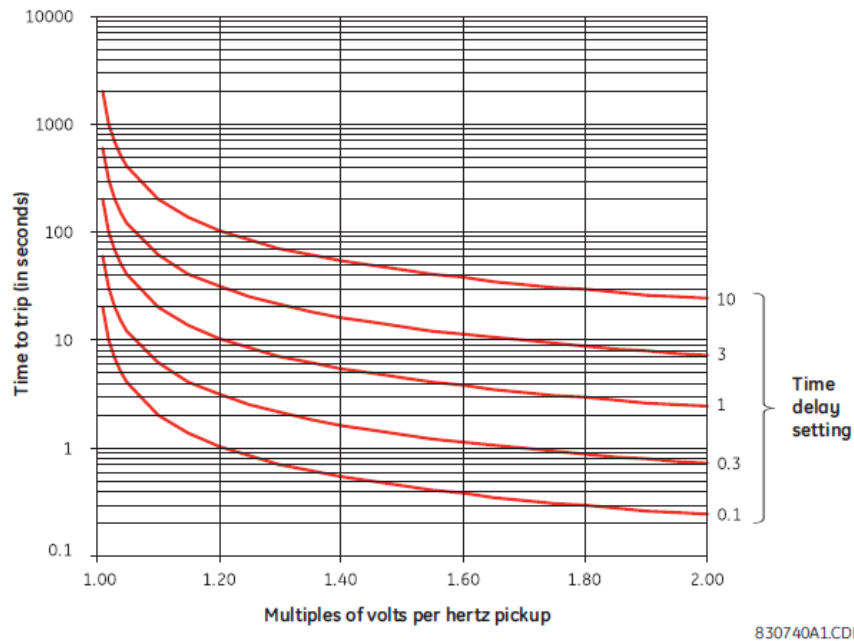


Figure 208: Volts-Per-Hertz Curves for Inverse Curve C

TD MULTIPLIER

Range: 0.05 to 600.00 in steps of 0.01

Default: 1.00

This setting provides a selection for the Time Dial Multiplier which modifies the operating times for the selected inverse curve. The setting will change to PICKUP DELAY when the CURVE type is set to Definite Time.

PICKUP DELAY

Range: 0.00 to 600.00 in steps of 0.01

Default: 1.00

When the curve is set "Definite Time", $T(s) = \text{Pickup Delay}$. For example, setting the Pickup Delay to 20 results a time delay of 20 seconds to operate when above the Volts/Hz pickup setting. This setting will only be visible when the CURVE is set to Definite Time, it will change to TD Multiplier for other Curve types.

T RESET

Range: 0.00 to 6000.00 in steps of 0.01

Default: 1.00

Enter the time that the Volts per Hertz value must remain below the pickup level before the element resets.

BLOCK

Range: Off, Any FlexLogic Operand

Default: Off

The Volts per Hertz can be blocked by any asserted FlexLogic operand.

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

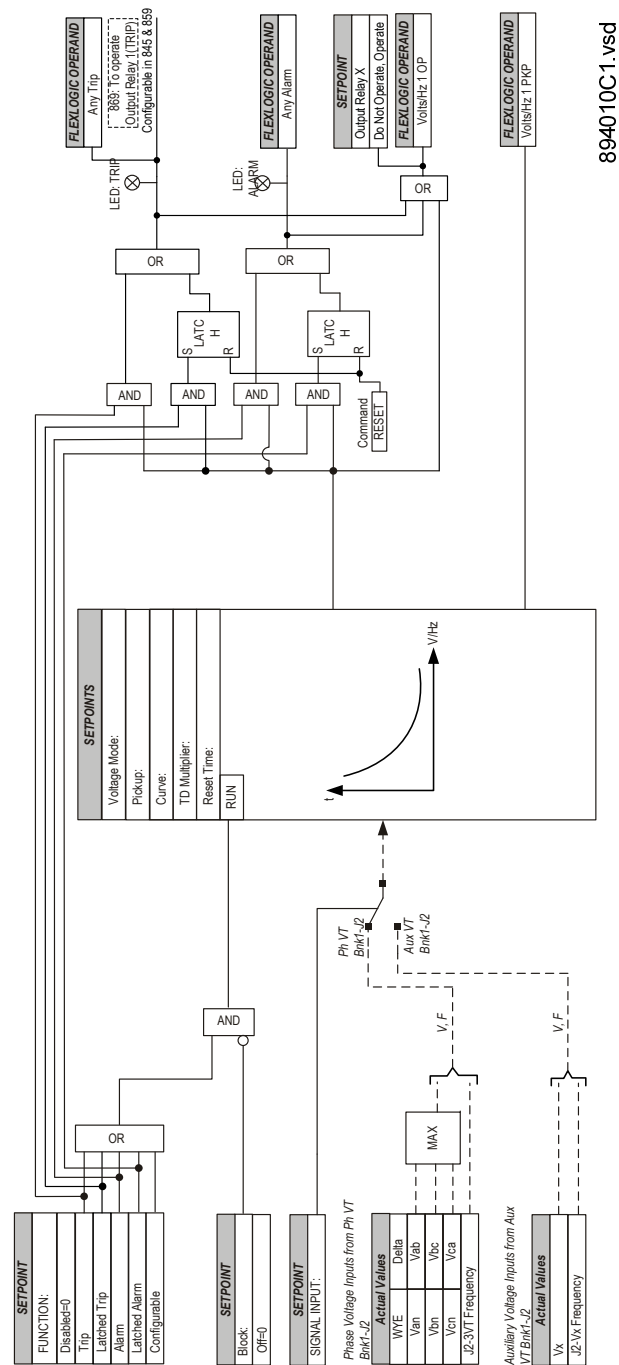


Figure 209: Volts per Hertz logic diagram

9.6 POWER ELEMENTS

9.6.1 DIRECTIONAL POWER (32)

The relay provides two identical Directional Power elements per protection group; a total of 12 elements.

The Directional Power element responds to three-phase directional power and is designed for reverse power (32REV) and low forward power (32FWD) applications for synchronous machines or interconnections involving co-generation. The relay measures the three-phase power from either a full set of wye-connected VTs or a full-set of delta-connected VTs. In the latter case, the two-wattmeter method is used.

The element has an adjustable characteristic angle and minimum operating power as shown in the Directional Power characteristic diagram. The element responds to the following condition:

$$P\cos\theta + Q\sin\theta > \text{MIN}$$

Where:

- P and Q are active and reactive powers as measured per the metering convention
- θ is a sum of the element characteristic (DIR POWER 1 RCA) and calibration (DIR POWER 1 CALIBRATION) angles
- SMIN is the minimum operating power.

The element has two independent (as to the **PICKUP** and **DELAY** settings) stages for Alarm and Trip, and they can be set separately to provide mixed power protection.

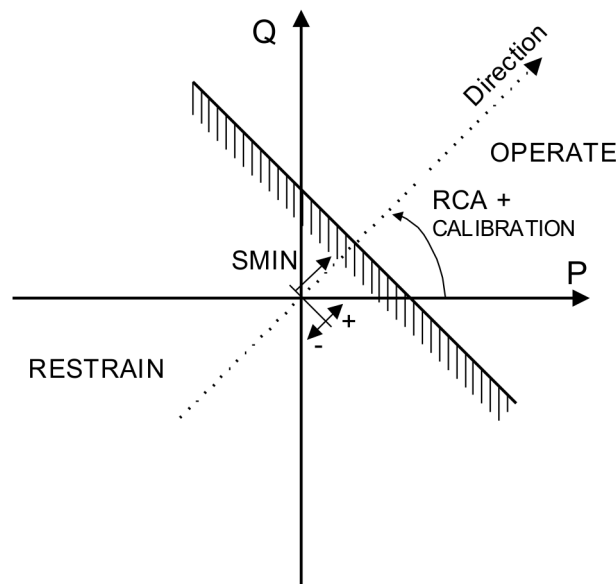


Figure 210: Directional Power characteristic

By making the characteristic angle adjustable and providing for both negative and positive values of the minimum operating power, a variety of operating characteristics can be achieved as presented in the figure below. For example, section (a) in the figure below shows settings for reverse power, while section (b) shows settings for low forward power applications.

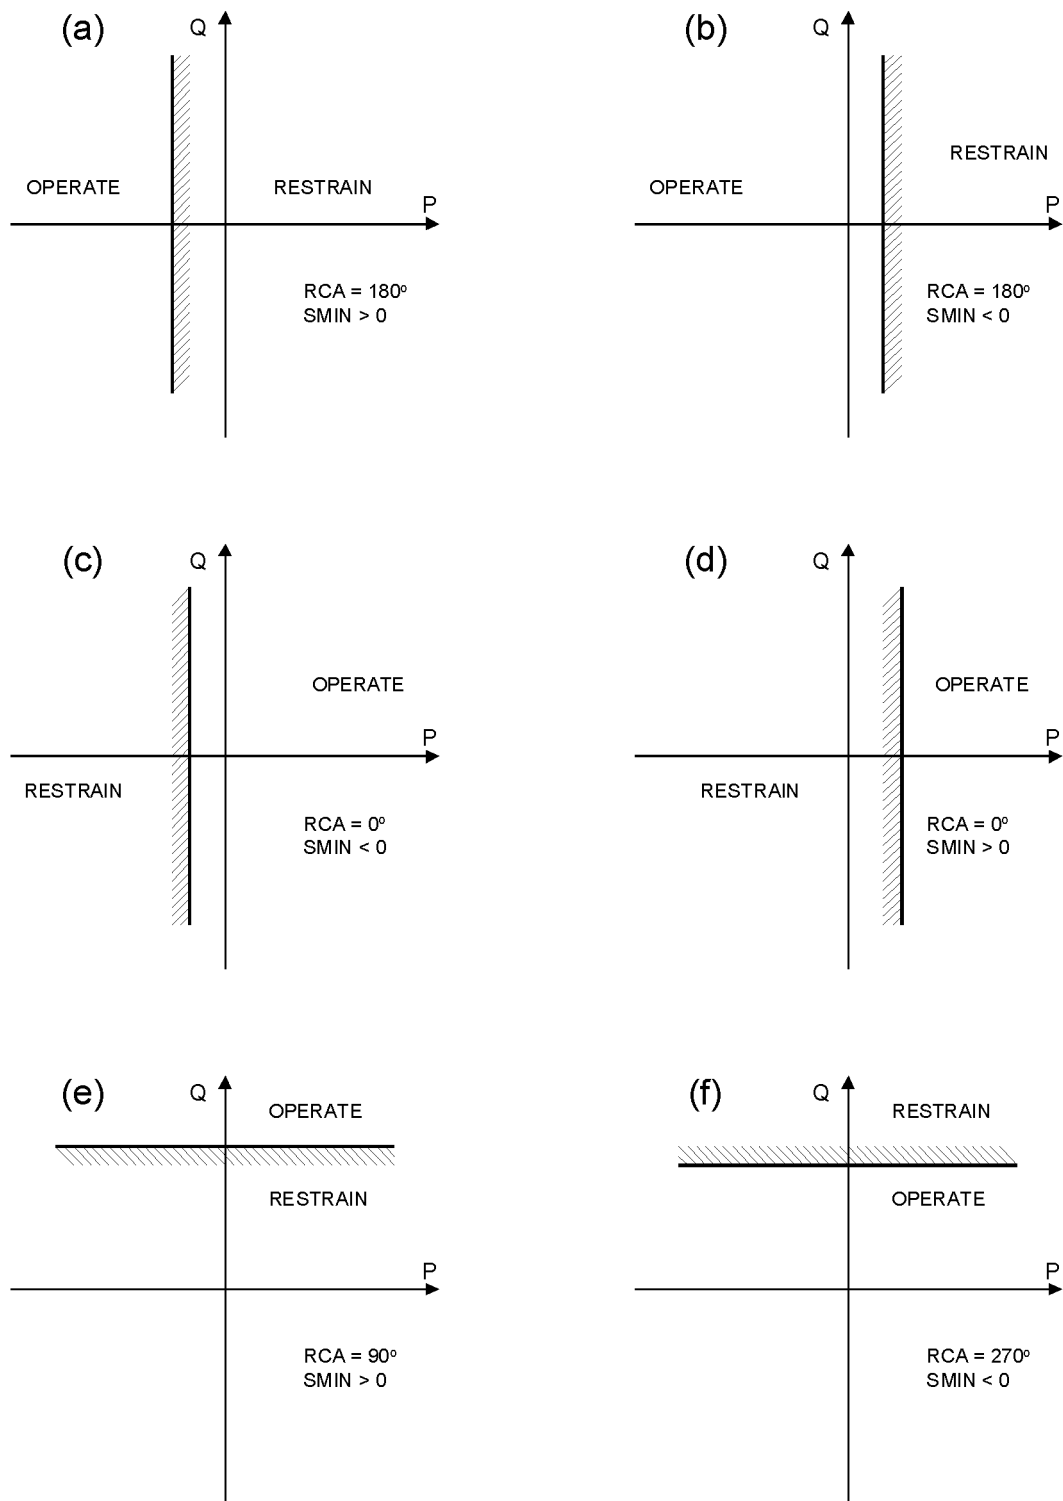


Figure 211: Sample applications of the Directional Power element

Path: *Setpoints > Protection > Group 1(6) > Power > Directional Power 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

SIGNAL INPUT (Not 859)

Range: Power 1, Power 2

Default: Power 1

This setting provides the selection for the power input. Depending on the order code selection, the corresponding CT/VT inputs to calculate power are selected under **Setpoints > System > Power Sensing**.

RCA

Range: 0 to 359° in steps of 1°

Default: 180°

This setting specifies the Relay Characteristic Angle (RCA) for the Directional Power function. Application of this setting provides the following benefits:

- It allows the element to respond to active or reactive power in any direction (active overpower/underpower, etc.).

- Together with a precise calibration angle, it allows compensation for any CT and VT angular errors to permit more sensitive settings.

- It allows for required direction in situations when the voltage signal is taken from behind a delta-wye connected power transformer and phase angle compensation is required.

For example, the active overpower characteristic is achieved by setting **DIR POWER 1 RCA** to “0°,” reactive overpower by setting **DIR POWER 1 RCA** to “90°,” active underpower by setting **DIR POWER 1 RCA** to “180°,” and reactive underpower by setting **DIR POWER 1 RCA** to “270°”.

CALIBRATION

Range: 0 to 0.95° in steps of 0.05°

Default: 0°

This setting allows the Relay Characteristic Angle to change in steps of 0.05°. This may be useful when a small difference in VT and CT angular errors is to be compensated to permit more sensitive settings.

The setting enables calibration of the Directional Power function in terms of the angular error of applied VTs and CTs. The element responds to the sum of the **DIR POWER 1 RCA** and **DIR POWER 1 CALIBRATION** settings.

STAGE 1 SMIN

Range: -3.000 to 3.000 x Rated Power in steps of 0.001 x Rated Power

Default: 0.100 x Rated Power

The setting specifies the minimum power as defined along the relay characteristic angle (RCA) for the stage 1 of the element. The positive values imply a shift towards the operate region along the RCA line; the negative values imply a shift towards the restrain region along the RCA line. Refer to the Directional power sample applications figure for details. Together with the RCA, this setting enables a wide range of operating characteristics.

The setting applies to three-phase power and the rated power is as follows:

$$\begin{aligned} \text{Rated Power} &= 3 \times \text{VT}_{\text{Secondary (phase-neutral)}} \times \text{VT}_{\text{Ratio}} \times \text{CT}_{\text{Primary (Wye-connected VT)}}, \text{ or } \text{Rated Power} \\ &= (3)^{1/2} \times \text{VT}_{\text{Secondary (phase-phase)}} \times \text{VT}_{\text{Ratio}} \times \text{CT}_{\text{Primary (Delta-connected VT)}} \end{aligned}$$

For example:

A setting of 2% for a 200 MW machine is $0.02 \times 200 \text{ MW} = 4 \text{ MW}$.

If 7.967 kV is a primary VT phase-neutral voltage and 10 kA is a primary CT current, the source rated power is 239 MVA, and, SMIN must be set at $4 \text{ MW}/239 \text{ MVA} = 0.0167 \times \text{Rated} \approx 0.017 \times \text{Rated}$.

If the reverse power application is considered, $\text{RCA} = 180^\circ$ and $\text{SMIN} = 0.017 \times \text{Rated}$.

The element drops out if the magnitude of the positive-sequence current becomes virtually zero, that is, it drops below the cutoff level.

STAGE 1 DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.500 s

The setting specifies a time delay for stage 1. For reverse power or low forward power applications for a synchronous machine, stage 1 is typically applied for alarming and stage 2 for tripping.

STAGE 2 SMIN

Range: -3.000 to 3.000 x Rated Power in steps of 0.001 x Rated Power

Default: 0.100 x Rated Power

The setting specifies the minimum power as defined along the relay characteristic angle (RCA) for stage 2 of the element. The setting needs to be coordinated with the setting of stage 1.

STAGE 2 DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 20.000 s

The setting specifies a time delay for stage 2. For reverse power or low forward power applications for a synchronous machine, stage 1 is typically applied for alarming and stage 2 for tripping.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

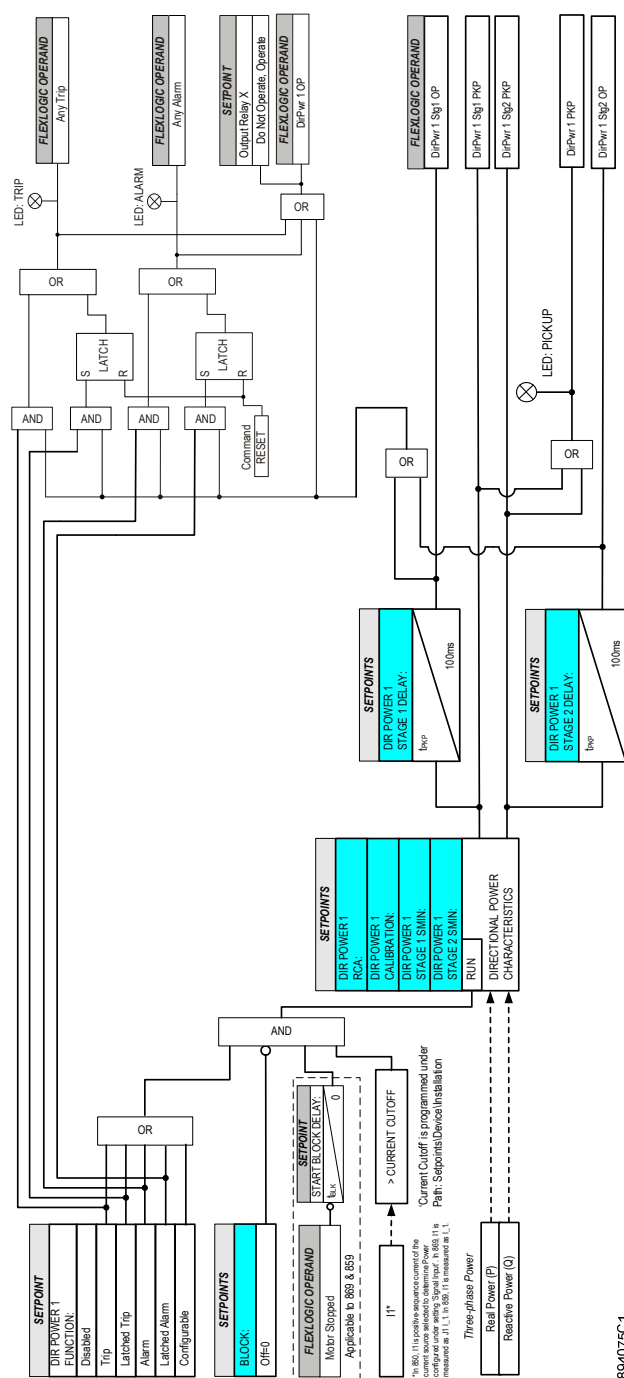


Figure 212: Directional Power logic diagram

9.7 FREQUENCY ELEMENTS

9.7.1 FREQUENCY PROTECTION COMMON SETUP

The relay provides a selection to detect between *Normal* and *Hi-Speed Freq* as input to detect underfrequency, overfrequency and rate of change of frequency (ROCOF). Compared to the regular metered voltage frequency value, the *Hi-Speed Freq* input has a faster response time, but is less accurate.

The Normal frequency estimation algorithm checks the time between two positive zero-crossing of the effective frequency signal. It also provides an extra security condition before considering that the new incoming period would be valid and available for the estimation of the frequency. The frequency is updated with the integration of the last 16 stored periods. When there is a large change in frequency between two consecutive periods, the estimation of the frequency is updated with the integration of the last 4 valid periods.

The Hi-Speed Freq estimation algorithm is less restrictive and checks the time between two consecutive zero-crossings in both directions of the effective frequency signal. Therefore, one measurement (raw frequency) would be available every half cycle. The frequency is updated with the integration of the latest valid stored periods. The number of periods used for the calculation is specified by the setting **Semicycles Set**. Another estimation of the frequency is also provided after the integration of the latest valid stored periods but considering the setting **Semicycles Reset**.

The Actual value **Hi-Speed Freq** is available under Path: **Measurement > Hi-Speed Freq**.

High-Speed Frequency

Range: Disabled, Enabled

Default: Disabled

This setting enables measurement of Hi-Speed Freq. When enabled, all the frequency-based elements (UF, OF, ROCOF) provide user-configurable selection between *Normal* and *Hi-Speed Freq*. The selection between Normal and Hi-Speed Freq is specified by the setpoint **Frequency Input**. When disabled, all the frequency-based elements (UF, OF, ROCOF) use Normal Frequency.

Freq Set # Semi-Cycles

Range: 5 to 16

Default: 5

Short Description:

The number of semi-cycles used for frequency estimation.

Freq Reset # Semi-Cycles

Range: 3 to 16

Default: 3

The number of semi-cycles used for frequency estimation to evaluate the reset conditions.

9.7.2 UNDERFREQUENCY (81U)

The relay can be used as the primary detecting relay in automatic load-shedding schemes based on underfrequency. The need for such a relay arises if during a system disturbance, an area becomes electrically isolated from the main system and suffers a generation deficiency due to the loss of either transmission or generation facilities. If reserve generation is not available in the area, conditions of low system frequency occur which can lead to a complete collapse. The relay provides several identical Underfrequency (UNDERFREQ) elements per protection group, which can automatically disconnect sufficient load to restore an acceptable balance between load and generation. The Underfrequency element can be set as an instantaneous element with no time

delay or as a definite time delayed element. The Underfrequency element has the programmable minimum operating thresholds to prevent undesired operation during periods of light load or unavailable voltage. The input voltages are the three phase-to-phase voltages from delta connected VTs (PTs), three phase-to-ground voltages from wye connected VTs (PTs), or single phase auxiliary voltage. The input currents are the three phase currents.

The Underfrequency Pickup flag is asserted when the measured frequency of the specified source is below the PKP value and the voltage and current are above the MINIMUM levels. The Underfrequency Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay. The element drops from Pickup without operation if the measured frequency rises above 0.03Hz of the Pickup value and stays dropped-out for the defined time delay before the time for operation is reached.

The minimum operating voltage setting selects the minimum voltage below which the element is blocked.

The minimum operating current setting selects the minimum current below which the element is blocked. Operation during periods of light load are prevented.

Path: Setpoints > Protection > Group 1(6) > Frequency > Underfrequency 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

FREQUENCY INPUT

Range: Normal, High-Speed

Default: Normal

You can select *Normal* or *High-speed* frequency as an input. Compared to the regular metered voltage frequency value, the high-speed frequency has the faster response but lesser accuracy. This setpoint is only available when Hi-Speed Freq is enabled under the path: **Setpoints\Protection\Frequency\Common Setup**.

PICKUP

Range (normal frequency): 15.00 to 65.00 Hz in steps of 0.01 Hz

Range (high-speed frequency): 40.00 to 65.00 Hz in steps of 0.01 Hz

Default: 59 Hz

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

Default: Ph VT Bnk1-J2

VT INPUT

Range: dependent upon the order code

Default: Ph VT Bnk1-J2 or LEA Bnk1-J2, Dependent on order code

MINIMUM VOLTAGE

Range: 0.000 to 1.250 x VT in steps of 0.001 x VT

Default: 0.700 x VT

The setting sets the minimum voltage for Underfrequency element operation specified per times VT. The setpoint prevents incorrect operation before energization of the source to the relay location, and during voltage dips.

Note:

If the 3-phase VT uses a delta connection and **SIGNAL INPUT** is set to Ph VT Bnk1-J2, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

If the 3-phase VT uses a delta connection, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

When the source input for tracking frequency differs from that used for Under Frequency function, due to frequency variations, you may encounter notable voltage measurement errors as the frequency of input signal moves away from the tracking frequency source input. For instance, when the setting **Frequency Input** is configured to auxiliary voltage (from the 4th VT), while the tracking frequency comes from the main source's three-phase voltages, any difference between the frequency of the auxiliary voltage (Vx) and the three-phase voltages (3VT) leads to a magnitude measurement error in Vx, caused by the deviation of Vx frequency from the main frequency

CT INPUT (not for 859 or 889)

Range: dependent upon the order code

Default: CT Bank 1-J1 or CT Bank 1-K1, dependent on order code

MINIMUM CURRENT

Range: 0.000 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

The setting sets the minimum value of current required on any phase to allow the Underfrequency element to operate. The setpoint is used to prevent underfrequency tripping during periods of light load, when this action would have an insignificant effect on the system. A setting of zero is suspend current supervision.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

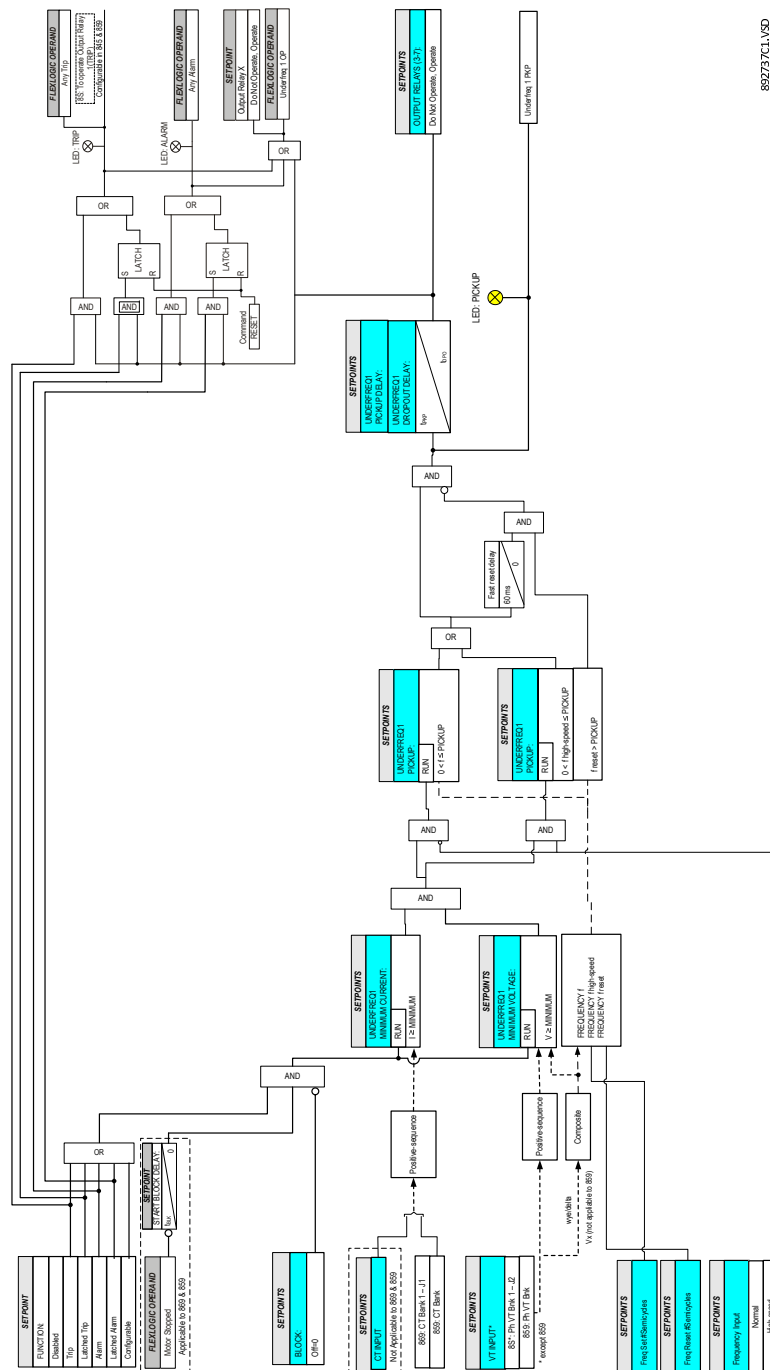


Figure 213: Underfrequency Protection logic diagram

9.7.3 OVERFREQUENCY (81O)

The relay provides several identical Overfrequency (OVERFREQ) elements per protection group.

A significant overfrequency condition, likely caused by a breaker opening and disconnecting load from a particular generation location, can be detected and used to quickly ramp the turbine speed back to normal. If this is not done, the over speed can lead to a turbine trip, which would then subsequently require a turbine start up before restoring the system. If the overfrequency turbine ramp down is successful, the system restoration can be much quicker. The overfrequency monitoring feature of the relay can be used for this purpose at a generating location.

The Overfrequency feature is inhibited from operating unless the magnitude of the positive sequence or auxiliary voltage rises above a threshold. When the supply source is energized, the overfrequency delay timer is allowed to start timing only when the threshold is exceeded and the frequency is above the programmed Pickup level. In the same way, when an overfrequency condition starts the overfrequency delay timer and the voltage falls below the threshold before the timer has expired, the element resets without operating.

The Overfrequency element may be set as an instantaneous element with no time delay, or as a definite time delayed element. The Overfrequency element has a fixed minimum operating threshold to prevent undesired operation during periods of unavailable voltage. The input voltages are the three phase-to-phase voltages from delta connected VTs (PTs), three phase-to-ground voltages from wye connected VTs (PTs), or single phase auxiliary voltage.

The settings of this function are applied to each source to produce Pickup and Operate flags. The Overfrequency Pickup flag is asserted when the measured frequency of the specified source is above the PKP value and the voltage is above the threshold. The Overfrequency Operate flag is asserted if the element stays picked up for the time defined by the Pickup time delay. The element drops from Pickup without operation if the measured frequency decreases below 0.03 Hz of the Pickup value and stays dropped out for the defined time delay before the time for operation is reached.

The minimum operating voltage is set as a threshold below which the element is blocked.

Path: Setpoints > Protection > Group 1(6) > Frequency > Overfrequency 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

SIGNAL INPUT

Range: dependent upon the order code

Default: Ph VT Bnk1-J2 or LEA Bnk1-J2, Dependent on order code

This setting provides selection of the frequency input.

FREQUENCY INPUT

Range: Normal, High-Speed

Default: Normal

You can select *Normal* or *High-speed* frequency as an input. Compared to the regular metered voltage frequency value, the high-speed frequency has the faster response but lesser accuracy. This setpoint is only available when Hi-Speed Freq is enabled under the path: **Setpoints\Protection\Frequency\Common Setup**.

PICKUP

Range (normal frequency): 15.00 to 65.00 Hz in steps of 0.01 Hz

Range (high-speed frequency): 40.00 to 65.00 Hz in steps of 0.01 Hz

Default: 59 Hz

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

MINIMUM VOLTAGE

Range: 0.000 to $1.250 \times VT$ in steps of $0.001 \times VT$

Default: $0.700 \times VT$

The setting sets the minimum voltage for Overfrequency element operation specified per times VT.

Note:

If the 3-phase VT uses a delta connection and SIGNAL INPUT is set to Ph VT Bnk1-J2, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

If the 3-phase VT uses a delta connection, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

Note:

When the source input for tracking frequency differs from that used for Under Frequency function, due to frequency variations, you may encounter notable voltage measurement errors as the frequency of input signal moves away from the tracking frequency source input. For instance, when the setting 'Frequency Input' is configured to auxiliary voltage (from the 4th VT), while the tracking frequency comes from the main source's three-phase voltages, any difference between the frequency of the auxiliary voltage (V_x) and the three-phase voltages ($3VT$) leads to a magnitude measurement error in V_x , caused by the deviation of V_x frequency from the main frequency.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

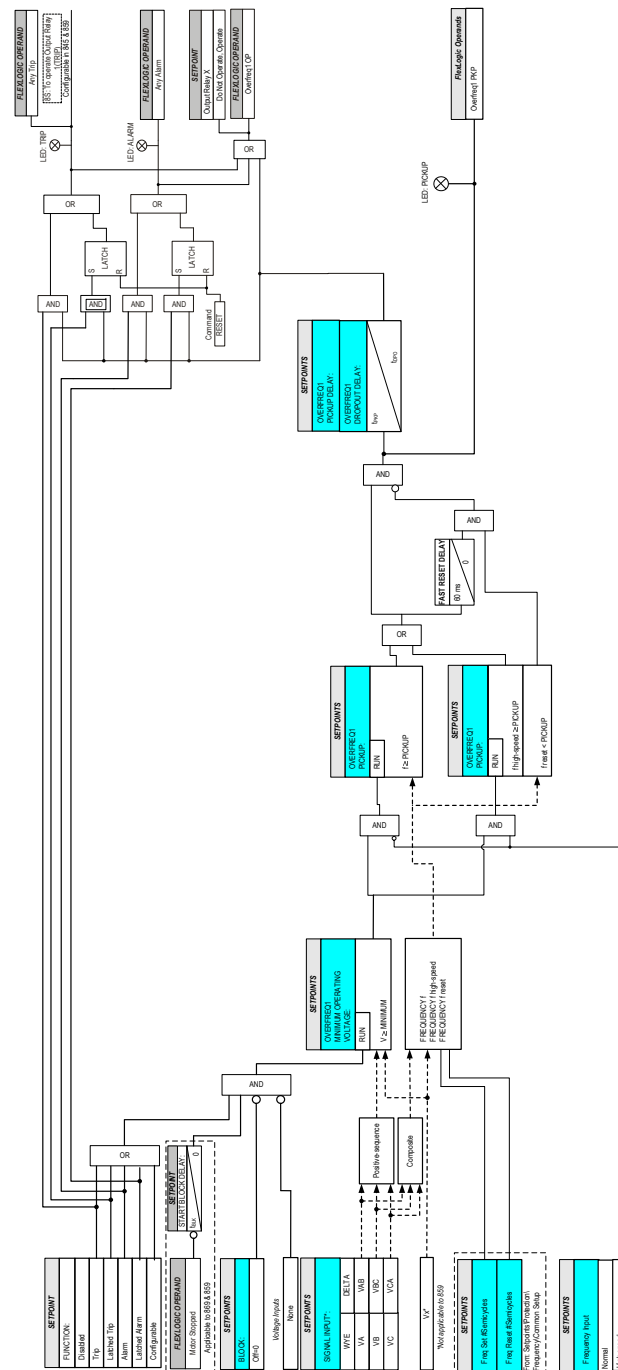


Figure 214: Overfrequency logic diagram

9.7.4 FREQUENCY RATE OF CHANGE (81R)

There is one Frequency Rate of Change protection element which can respond to rate of change of frequency with voltage, current and frequency supervision.

The Rate of Change element may be set as an instantaneous element with no time delay or as a definite time delayed element. The rate of change element has the programmable minimum operating voltage and current thresholds to prevent undesired operation under specific system conditions.

The settings of this function are applied to each source to produce Pickup and Trip flags.

The Frequency Rate of Change Pickup flag is asserted when the calculated frequency rate of change of the specified source is above the PKP value, the voltage and current are above the MINIMUM levels, and the frequency is within a certain range. The Frequency Rate of Change Trip flag is asserted if the element stays picked up for the time defined by the Pickup time delay. The element instantaneously drops from Pickup without operation, if the frequency rate of change drops below 96% of the Pickup value, before the time for operation is reached.

The minimum voltage and current thresholds select the minimum voltage and current below which the element is blocked.

The minimum and maximum frequencies set the operating frequency range out of which the element is blocked.

Path: Setpoints > Protection > Group 1(6) > Frequency > Frequency Rate of Change 1(X)

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

FREQUENCY INPUT

Range: Normal, High-Speed

Default: Normal

You can select *Normal* or *High-speed* frequency as an input. Compared to the regular metered voltage frequency value, the high-speed frequency has the faster response but lesser accuracy. This setpoint is only available when Hi-Speed Freq is enabled under the path: **Setpoints\Protection\Frequency\Common Setup**.

TREND

Range: Decreasing, Increasing, Bi-directional

Default: Decreasing

The setting allows configuring of the element to respond to increasing or decreasing frequency, or to a frequency change in either direction.

PICKUP

Range: 0.10 to 15.00 Hz/sec in steps of 0.01 Hz/sec

Default: 0.50 Hz/sec

The setting specifies an intended Pickup threshold.

For applications monitoring a decreasing trend, set **TREND** to *Decreasing* and specify the Pickup threshold accordingly. The operating condition is: $-df/dt > PKP$.

For applications monitoring an increasing trend, set **TREND** to *Increasing* and specify the pickup threshold accordingly. The operating condition is: $df/dt > PKP$.

For applications monitoring rate of change of frequency in any direction, set **TREND** to "Bi-Directional" and specify the Pickup threshold accordingly. The operating condition can be either of the above two conditions.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 2.000 s

This setting provides a definite Pickup time delay. Instantaneous operation is selected by a Pickup time delay setting of 0.000 s.

MINIMUM FREQUENCY

Range (normal speed): 20.00 to 80.00 Hz in steps of 0.01 Hz

Range (high-speed): 40.00 to 70.00 Hz in steps of 0.01 Hz

Default: 45.00 Hz

The setting defines the minimum frequency level required for operation of the element.

The setting may be used to effectively block the feature based on frequency. For example, if the intent is to monitor an increasing trend but only if the frequency is already above certain level, this setting is set to the required frequency level.

MAXIMUM FREQUENCY

Range: 20.00 to 80.00 Hz in steps of 0.01 Hz (3.x.x, normal speed with 4.xx)

Range: 40.00 to 70.00 Hz in steps of 0.01 Hz (4.xx high speed)

Default: 65.00 Hz

The setting defines the maximum frequency level required for operation of the element.

The setting may be used to effectively block the feature based on frequency. For example, if the intent is to monitor a decreasing trend but only if the frequency is already below a certain level (such as for load shedding), this setting is set to the required frequency level.

VT INPUT

Range: dependent upon the order code

Default: Ph VT Bnk1-J2 or LEA Bnk1-J2, Dependent on order code

This setting provides selection of the frequency input.

MINIMUM VOLTAGE

Range: 0.000 to 1.250 x VT in steps of 0.001 x VT

Default: 0.700 x VT

The setting defines the minimum voltage level required for operation of the element. The supervising function responds to the positive-sequence voltage. Overvoltage supervision is used to prevent operation under specific system conditions such as faults.

Note:

*If the 3-phase VT uses a delta connection and **FREQUENCY INPUT** is set to Ph VT Bnk1-J2, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.*

Note:

If the 3-phase VT uses a delta connection, the positive sequence voltage is used as the supervision voltage. In such condition, the true supervision level is internally changed to $1/\sqrt{3}$ of the user setting since the base of VT here is the phase-phase voltage.

CT INPUT

Range: dependent upon the order code

Default: CT Bank1-J1 or CT Bank1-K1, dependent on order code

This setting provides the current bank selection for the minimum current setting.

MINIMUM CURRENT

Range: 0.000 to 30.000 x CT in steps of 0.001 x CT

Default: 0.200 x CT

This setting defines the minimum current level required for operation of the element. The supervising function responds to the positive-sequence current. Typical application includes load shedding. Set the Pickup threshold to zero if no overcurrent supervision is required. The setting of zero suspends the current supervision.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The element will be blocked when the selected operand is asserted.

OUTPUT RELAYS

Range: Operate, Do Not Operate

Default: Do Not Operate

Each relay can be selected to become either energized or de-energized when operated, and to operate as latched, self-resetting or pulsed.

EVENTS

Range: Enabled, Disabled

Default: Enabled

The selection of the Enabled setting enables the events of the function.

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

This setting is used to define the operation of an element target message. When disabled, no target message is issued upon operation of the element. When set to *Self-Reset*, the target message and its LED indication follow the operate state of the element, and self-reset once the operate element condition clears. When set to *Latched*, the target message will remain visible after the element output returns to logic 0 until a RESET command is received by the relay.

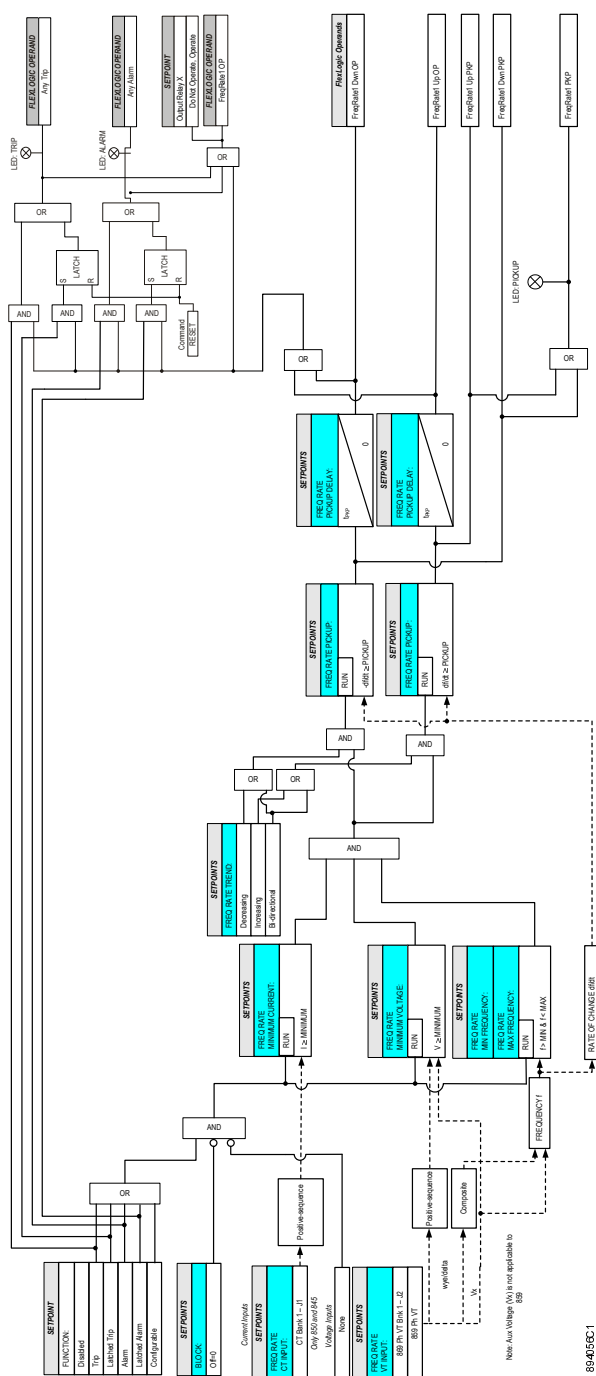


Figure 215: Frequency Rate-of-Change Protection logic diagram

CHAPTER 10


MONITORING

10.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	471
Monitoring Overview	472
Transformer monitoring	473
Breaker monitoring	484
Functions	497
Harmonic Detection	518
RTD Temperature	521
RTD Trouble	526
Loss of Communications	527

10.2 MONITORING OVERVIEW

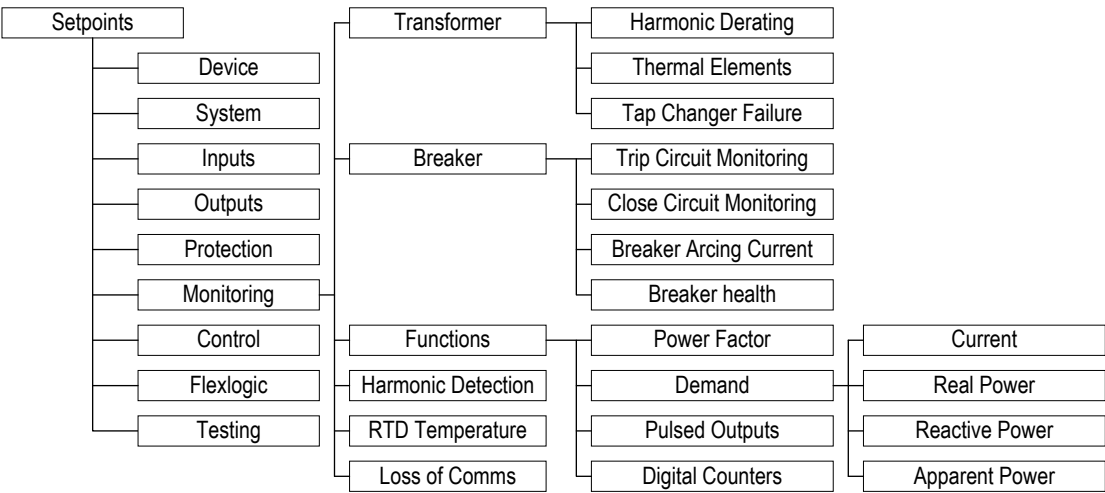

894519B1

Figure 216: Monitoring Display Hierarchy

10.3 TRANSFORMER MONITORING

10.3.1 HARMONIC DERATING

The presence of harmonic currents in transformers increases the I^2R losses, stray losses in the core, clamps and structural parts, and eddy current losses in the windings. Of these losses, the eddy current losses are of most concern since they tend to be proportional to the square of the load current and approximately proportional to the square of frequency which, in turn can cause excessive winding loss and abnormal winding temperature rise in transformers when harmonics are present.

The Harmonic Derating element makes use of the harmonic derating factor (HDF) computed by the Series 8 relay, using the harmonic content of the current signals and the transformer data (refer to IEEE C57.110-2008 for the computation method). Once the derating factor falls below a set value, the relay operates accordingly. The derating factor is used to evaluate the load capability of the installed transformer under the non-sinusoidal load currents. Once harmonics are present, the derating factor will decrease from the ideal value of one per unit, which means the load capability is reduced due to harmonics.

The Load-Limit Reduced LED indicator is ON and an operand of 'Load Limit Reduced' is asserted if the HDF of any winding is less than 0.96, regardless of whether the element is disabled or enabled.

Note:

The following three settings are used in this element:

- **Setpoints > System > Transformer > Transformer Setup > Load Loss at Rated Load**
- **Setpoints > System > Transformer > Transformer Setup > Rated Wndg Temp Rise**
- **Setpoints > System > Transformer > Transformer Setup > Wndg Resistance (3-ph)**

Path: Setpoints > Monitoring > Transformer > Harmonic Derating > W1(2,3) Harmonic Derating

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

MINIMUM OPER CURRENT

Range: 0.03 to 1.00 x CT in steps of 0.01 x CT

Default: 0.10 x CT

This setting sets the minimum value for all three-phase currents to allow the Harmonic Derating element to operate.

PICKUP

Range: 0.01 to 0.98 in steps of 0.01

Default: 0.90

PICKUP DELAY

Range: 0 to 60000 s in steps of 1 s

Default: 10 s

LOAD LIMIT SUPV

Range: Disabled, Enabled

Default: Enabled

This setting enables the Load Limit Supervision function

BLOCK

Range: Any flexoperand

Default: Off

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

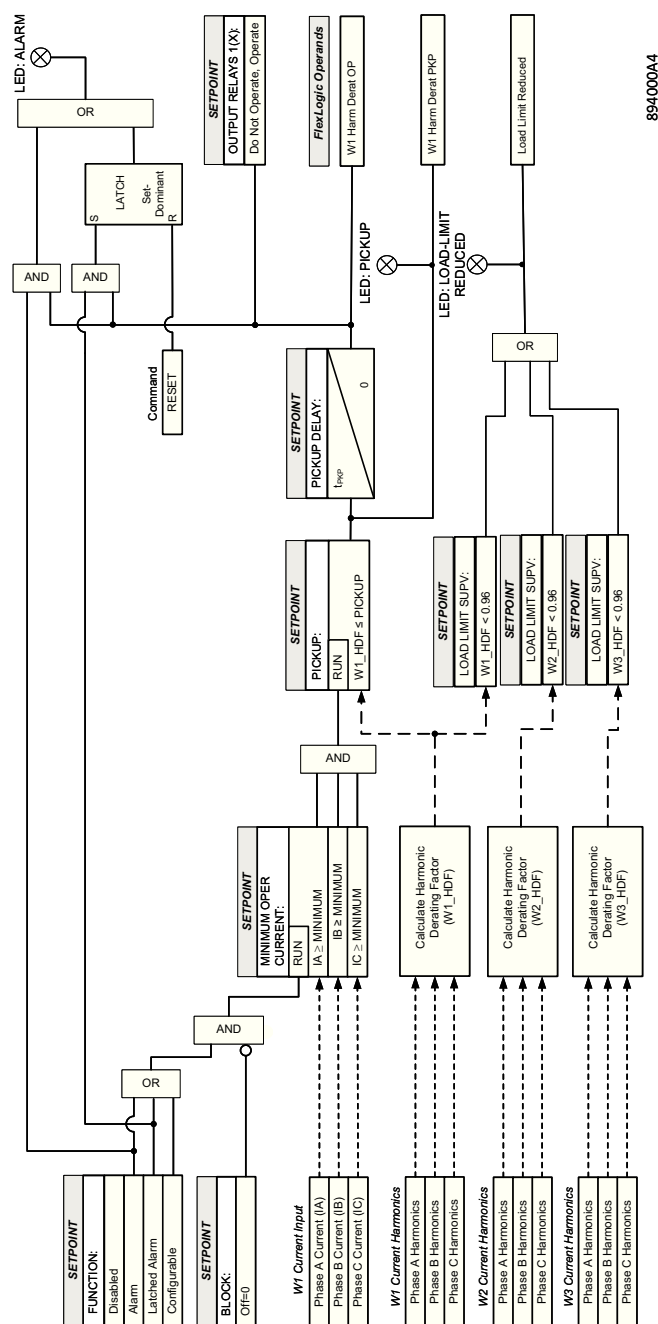


Figure 217: Harmonic Derating Logic diagram

10.3.2 THERMAL ELEMENTS

The thermal elements include Hottest-spot temperature, Aging Factor, and Loss of Life elements. The computation of these elements follows the IEEE standards C57.91-2011 *IEEE Guide for Loading Mineral-Oil-Immersed Transformers*, and C57.96-2013 *IEEE Guide for Loading Dry-Type Distribution Transformers*. The computations are based on transformer loading conditions, ambient temperature, and entered transformer data.

Refer to **SETPOINTS** > **SYSTEM** > **TRANSFORMER** > **GENERAL** and enter the transformer data used in the computation of Hottest-Spot winding temperature, Aging Factor, and Transformer Loss of Life

Refer to **SETPOINTS > SYSTEM > TRANSFORMER > WINDING 1(2,3)** and enter the windings data used to compute the transformer loading

Transformer\General Setup			
Item Name	Value	Unit	
Phase Compensation	Internal (software)		
Load Loss at Rated Load	100.000	kW	
Rated Wndg Temp Rise	65 °C (oil)		
No Load loss	10.000	kW	
Type of Cooling	OA		
Top Oil Rise over Ambient	35	°C	
Hfmr Thermal Capacity	1.00	kWh/°C	
Wndg Thermal Time Constant	2.00	min	
Energization Winding Source	J1		
Year of Manufacture	1950		
Setup	W 1	W 2	HfmrStat >>

Transformer\Winding 1			
Item Name	Value	Unit	
Rated MVA	5.000	MVA	
Nominal Ph-Ph Voltage	13.800	kV	
Connection	Wye		
Grounding	Not Within Zone		
Wndg Resistance (3-ph)	10.0000	ohms	
Setup	W 1	W 2	HfmrStat >>

Transformer\Thermal Inputs			
Item Name	Value	Unit	
Winding Currents	J1		
Ambient Temperature	Monthly Average		
Ambient Temp Avg - Jan	-20	°C	
Ambient Temp Avg - Feb	-20	°C	
Ambient Temp Avg - Mar	-10	°C	
Ambient Temp Avg - Apr	10	°C	
Ambient Temp Avg - May	20	°C	
Ambient Temp Avg - Jun	30	°C	
Ambient Temp Avg - Jul	30	°C	
Ambient Temp Avg - Aug	30	°C	
Ambient Temp Avg - Sep	20	°C	
Ambient Temp Avg - Oct	10	°C	
Ambient Temp Avg - Nov	10	°C	
Ambient Temp Avg - Dec	-10	°C	
Top Oil Temperature	Computed		
<<	HfmrStat	Thermal	Tap Chnr

The transformer winding settings are used for calculation of the winding nominal current, and the load loss at rated load. The ratio of the actual load to the rated load K is used in the Hottest-spot temperature computation. If the load loss at rated load is not available from the transformer's test report, use the following formulae to calculate it.

$$P_R = I_{n(W)}^2 * R$$

where

- $I_{n(W)}$ is the winding rated current
- R is the three phase series resistance.

Refer to **Setpoints > System > Transformer > Thermal Inputs** menu, and select the inputs for Ambient temperature and Top-Oil temperature. If no transducer is available to measure Ambient temperature, select the **Monthly Average** setting, and enter the approximate average temperature per month in the monthly calendar menu. If Top-Oil temperature measurement is not available, select the setting **Computed**.

..\System\Transformer\Thermal Inputs		
Setpoints	Value	Unit
Winding Currents	CT Bank 1-J1	
Ambient Temperature	Monthly Average	
January	-20	°C
February	-20	°C
March	-20	°C
April	7	°C
May	15	°C
June	25	°C
July	30	°C
August	30	°C
September	20	°C
October	17	°C
November	14	°C
December	9	°C
Top-Oil Temperature	Computed	

..\Setpoints\RTD Temperature\RTD 1		
Setpoints	Value	Unit
Function	Disabled	
Name	RTD 1	
Type	100 W Platinum	
Trip Temperature	155	°C
Trip Pickup Delay	2	s
Trip Dropout Delay	0	s
Trip Output Relay X	Do Not Operate	
Alarm Function	Disabled	
Alarm Temperature	130	°C
Alarm Pickup Delay	2	s
Alarm Dropout Delay	0	s
Alarm Output Relay X	Do Not Operate	
Sensor Open	None	
Block	Off	
Events	Enabled	
Targets	Latched	

Note:

To change the temperature unit, i.e. Fahrenheit, Celsius go to **Setpoints > Device > Front Panel** menu.

The inputs for Ambient Temperature and Top-Oil Temperature from Thermal Inputs menu include selection of RTDs. The selected RTDs must be programmed, for the temperature to be measured on the relay and be included in the calculation for hottest-spot winding temperature.

10.3.3 HOTTEST SPOT

The Hottest-Spot Temperature element provides the mechanism for detecting the hottest-spot winding temperatures inside the transformer. It can be set to alarm or trip in cases where the hottest-spot temperature (as computed by the relay) is above the PKP threshold for the specified time, this is considered an overheated transformer.

Path: **Setpoints > Monitoring > Transformer > Hottest-Spot Temperature**

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

PICKUP

Range: 50 to 300 in steps of 1 degree (in degrees° F or °C)

Default: 140

Enter the hottest-spot temperature required for operation of the element. This setting must be defined based on the maximum permissible hottest-spot temperature under emergency transformer loading conditions, and the maximum ambient temperature.

PICKUP DELAY

Range: 0 to 60000 min in steps of 1 min

Default: 1 min

This setting is used to select a pickup time delay that is used to delay the operation of the protection.

OUTPUT RELAY 1 (X)

Range: Do Not Operate, Operate

Default: Do Not Operate

The menu includes a list of available output relays to be set for operation or no operation upon protection operation.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled


The selection of the **Enabled** setting enables the events function.

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

The selection of the **Self-reset** or **Latched** settings enables the target messages of the function.

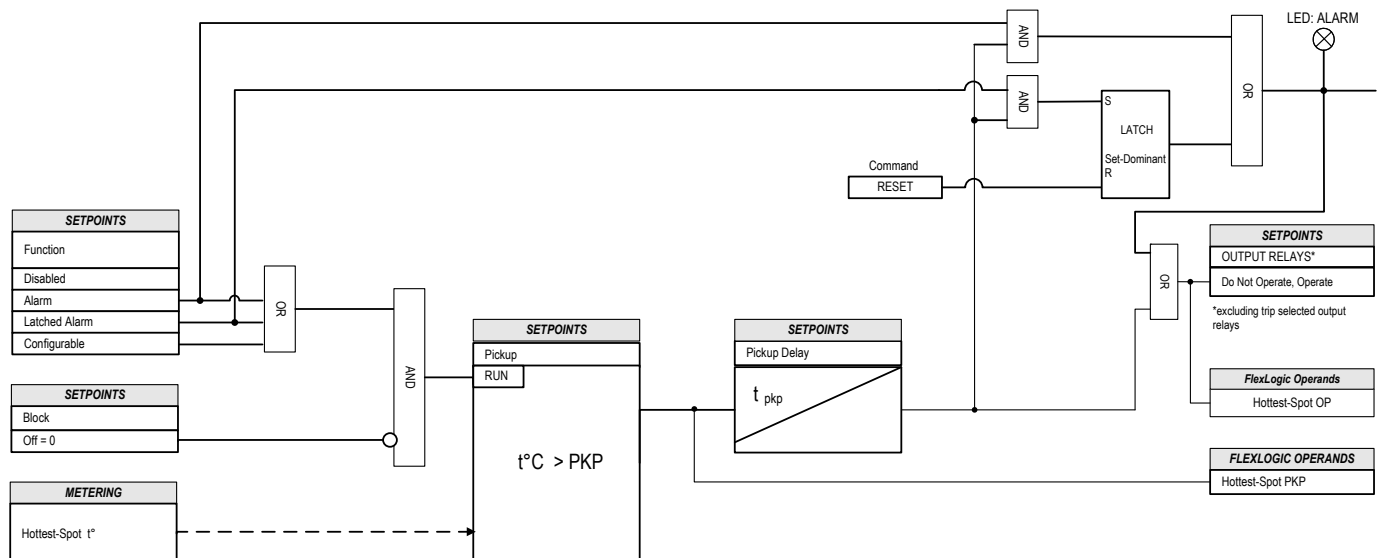

894005C1

Figure 218: Hottest-Spot Logic diagram

10.3.4 AGING FACTOR

The Aging Factor element detects the aging of the transformer in per unit normal insulation aging. The element can be set for an alarm or trip, whenever the actual aging factor (as computed by the relay) is bigger than the (defined as acceptable) setting of the aging factor PKP for the specified time delay.

Path: *Setpoints > Monitoring > Transformer > Aging Factor*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a `Latched Trip` option

Default: Disabled

PICKUP

Range: 1.1 to 10.0 in steps of 0.1

Default: 2.0

Enter a setting for the aging factor, above which the element will operate. The setting must be above the maximum permissible aging factor under emergency loading conditions, and maximum ambient temperature.

PICKUP DELAY

Range: 0 to 60000 min in steps of 1 min

Default: 10 min

This setting is used to select a pickup time delay that is used to delay the operation of the protection.

OUTPUT RELAY 1 (X)

Range: Do Not Operate, Operate

Default: Do Not Operate

The menu includes a list of available output relays to be set for operation or no operation upon protection operation.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Neutral IOC is blocked when the selected operand is asserted.

EVENTS

Range: Enabled, Disabled

Default: Enabled


The selection of the **Enabled** setting enables the Events function.

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

The selection of the **Self-reset** or **Latched** settings enables the target messages of the function.

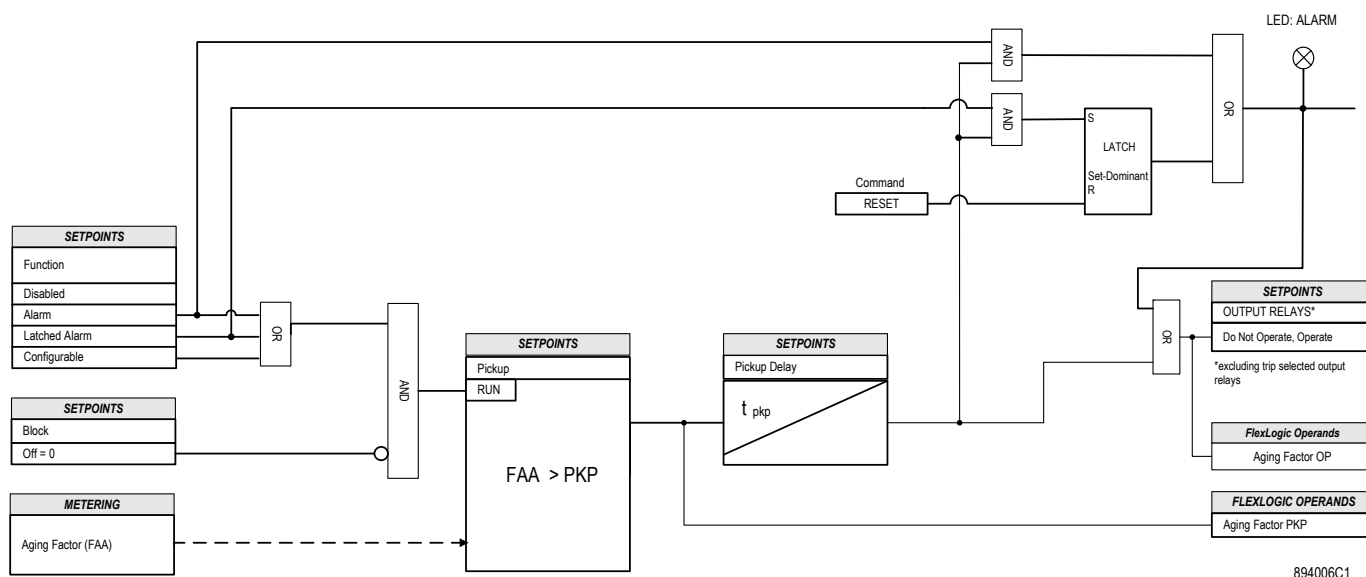

894006C1

Figure 219: Aging Factor Logic diagram

10.3.5 LOSS OF TRANSFORMER LIFE

The Loss of Life (LOL) element provides a mechanism for detecting the accumulated total consumed transformer life. It can be set to issue an alarm or trip, when the actual accumulated transformer loss of life is higher than what is specified by the user loss of life pickup setpoint. For brand new installed transformers, the setting for **XFMR INITIAL LOSS** is 0, and for already installed transformers, the user must estimate the consumed transformer life in hours, being in service.

Path: Setpoints > Monitoring > Transformer > Loss of Xfmr Life

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip option*

Default: Disabled

INITIAL XFMR LOL

Range: 1 to 500000 hours in steps of 1 hr

Default: 0 hours

Enter a setting for the consumed transformer life in hours. When the LOL element is enabled, the loss of life computed by the relay is added to the initial loss of life in hours.

PICKUP

Range: 0 to 500000 hours in steps of 1 hr

Default: 200000 hours

Enter the expected life, in hours, required for operation of the element. This setting must be above the total transformer life set as a reference based on nominal loading conditions, and 30° C ambient temperature, as outlined in the IEEE standards.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Neutral IOC is blocked when the selected operand is asserted.

OUTPUT RELAY 1(X)

Range: Do Not Operate, Operate

Default: Do Not Operate

The menu includes a list of available output relays to be set for operation or no operation upon protection operation.

EVENTS

Range: Enabled, Disabled

Default: Enabled


The selection of the **Enabled** setting enables the Events function.

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

The selection of the **Self-reset** or **Latched** settings enables the target messages of the function.

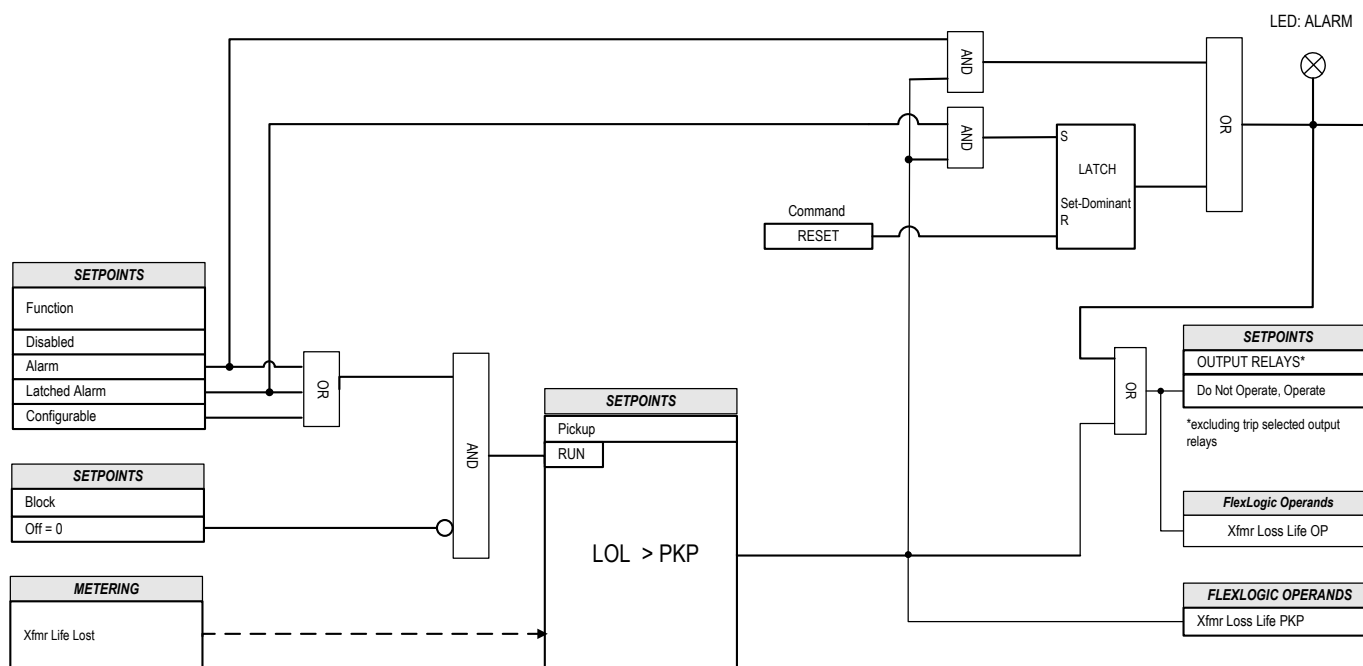

894007C1

Figure 220: Loss of Life Logic diagram

10.3.6 TAP CHANGER FAILURE

The Tap Changer Failure element compares the actual tap changer position with the maximum and minimum set values. The element picks up when the measured tap position actual value exceeds by one tap step the value programmed for maximum tap, or when it is lower by one tap step than the value programmed for minimum tap. The minimum and maximum taps are set in Max Tap and Min Tap setpoints respectively under **Setpoints > System > Transformer > On-load Tap Changer**. If this condition persists for the time selected as a Delay setpoint, the element will operate.

Note:

The Tap Changer Failure element will not be able to detect tap failure, if the Min Tap and Max Tap setpoints Input from the Tap Changer setup menu are set to the minimum and maximum available values from the range. This applies to any of the three methods used for tap position detection – BCD, DCmA, and Ohms. To be able to successfully detect Tap changer failure, the selected Ohms or DCmA at Tap Min must be bigger than the smallest measured Ohms or DCmA values by a value corresponding to at least one tap step, and the selected Ohms or DCmA values must be smaller than the highest Ohm or DCmA measured value by a value corresponding to at least one tap step

If the Tap position is used for compensation of the differential current due to the new transformation ratio and the tap position is detected below the Minimum, or above the Maximum tap, the relay may show small differential current. If the percent differential protection is set to a very sensitive pickup level, this differential current may cause operation. To avoid such undesired operation, it is wise to de-sensitize the protection until the tap position is detected back in the range between the minimum and maximum tap. For this reason either operand **TC at Min Tap**, or **TC at Max Tap** from the Tap changer Setup, or **The Tap Changer Fail PKP** can be used for setpoint group change, where the Percent differential protection can be enabled with less sensitive settings.

Path: Setpoints > Monitoring > Transformer > Tap Changer Failure

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a *Latched Trip* option

Default: Disabled

DELAY

Range: 0.00 to 600.00 s in steps of 0.01 s

Default: 5.00 s

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAYS

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

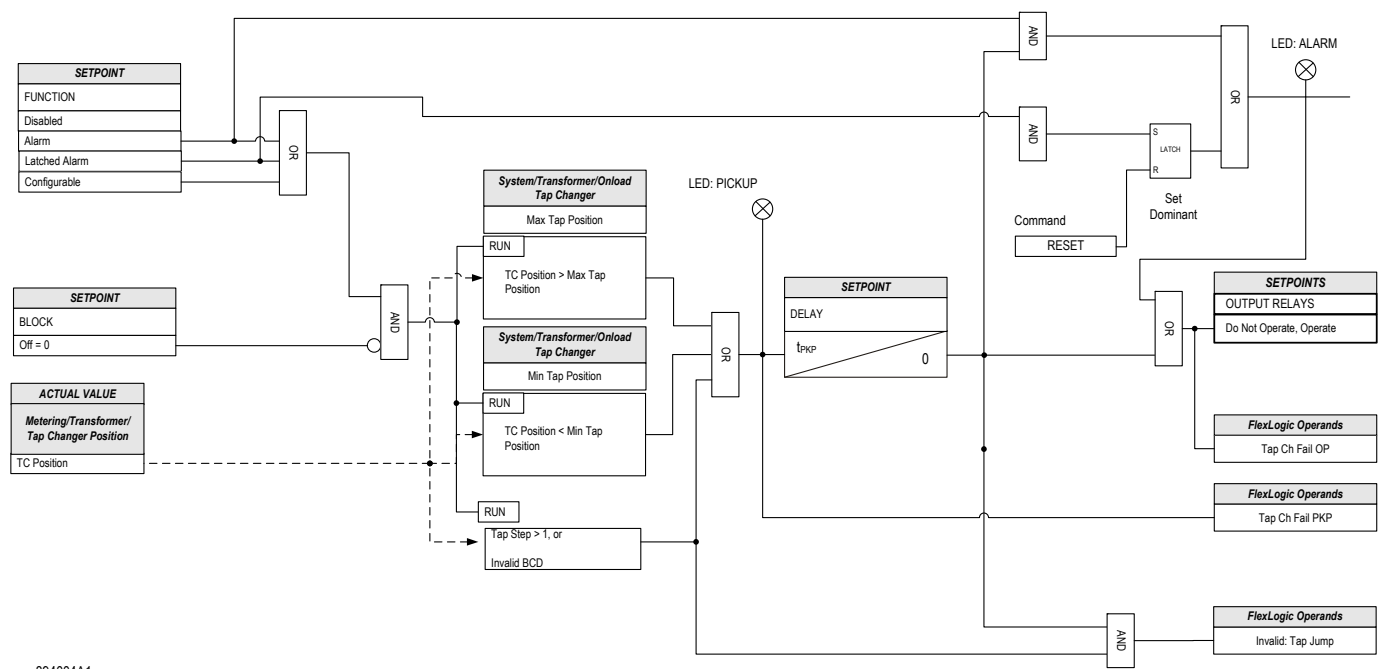


Figure 221: Tap Changer Failure logic diagram

10.4 BREAKER MONITORING

10.4.1 TRIP AND CLOSE CIRCUIT MONITORING

The first and second Form A relay outputs on slot F include a circuit to monitor the DC voltage across the output contact when it is open. To do that, an external jumper is wired between the terminals **FA_1 COM** and **FA_1 OPT/V** for the Trip coil monitoring, or/and **FA_2 COM** and **FA_2 OPT/V** for the Close coil monitoring.

The monitor contains a level detector whose output is set to logic 1 (ON) when the voltage is above 20 volts. The voltage monitor is used to check the health of the overall trip and closing circuit.

The two figures below show the two different connections of the breaker trip and close coils to the relay's trip and close output relays for either no voltage monitoring and for voltage monitoring of the circuits.

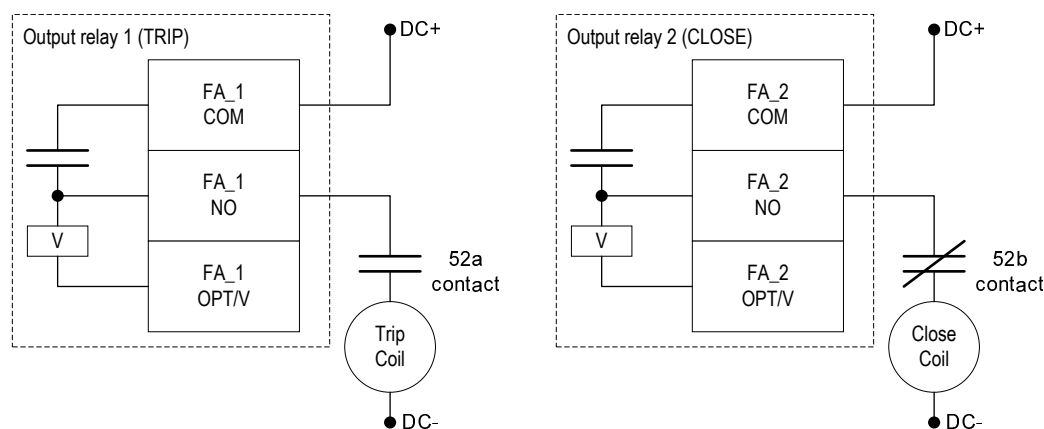


Figure 222: Coil Circuits without Monitoring

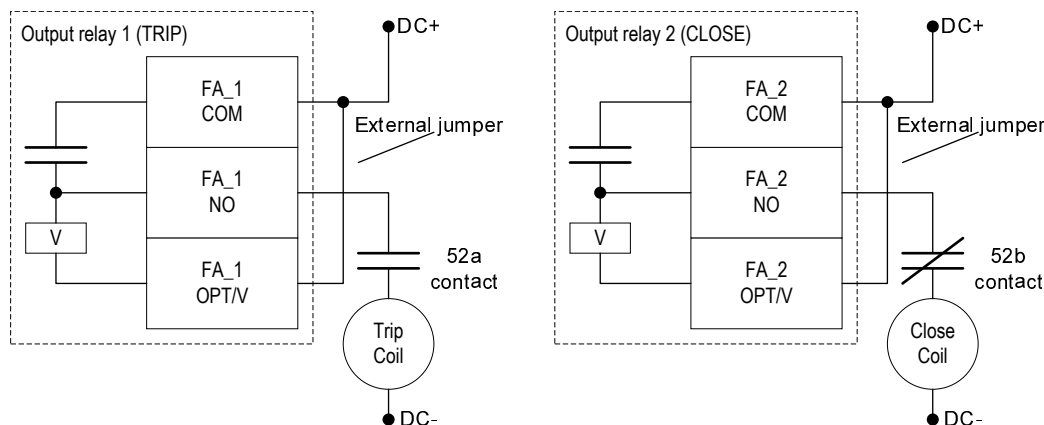


Figure 223: Coil Circuits with Monitoring

To monitor the trip coil circuit integrity, use the relay terminals **FA_1 NO** and **FA_1 COM** to connect the Trip coil, and provide a jumper between terminals **FA_1 COM** and **FA_1 OPT/V** (voltage monitor).

To monitor the close coil circuit integrity, use the relay terminals **FA_2 NO** and **FA_2 COM** to connect the Close coil and provide a jumper between terminals **FA_2 COM** and **FA_2 OPT/V** (voltage monitor).

Some applications require monitoring of the Trip coil or/and Close coil continuously, regardless of the breaker position (open or closed). This can be achieved by connecting a suitable resistor across the auxiliary contacts. With such connections, the trickle current is maintained by the resistor. For these applications the setting for the Bypass Breaker Status should be enabled.

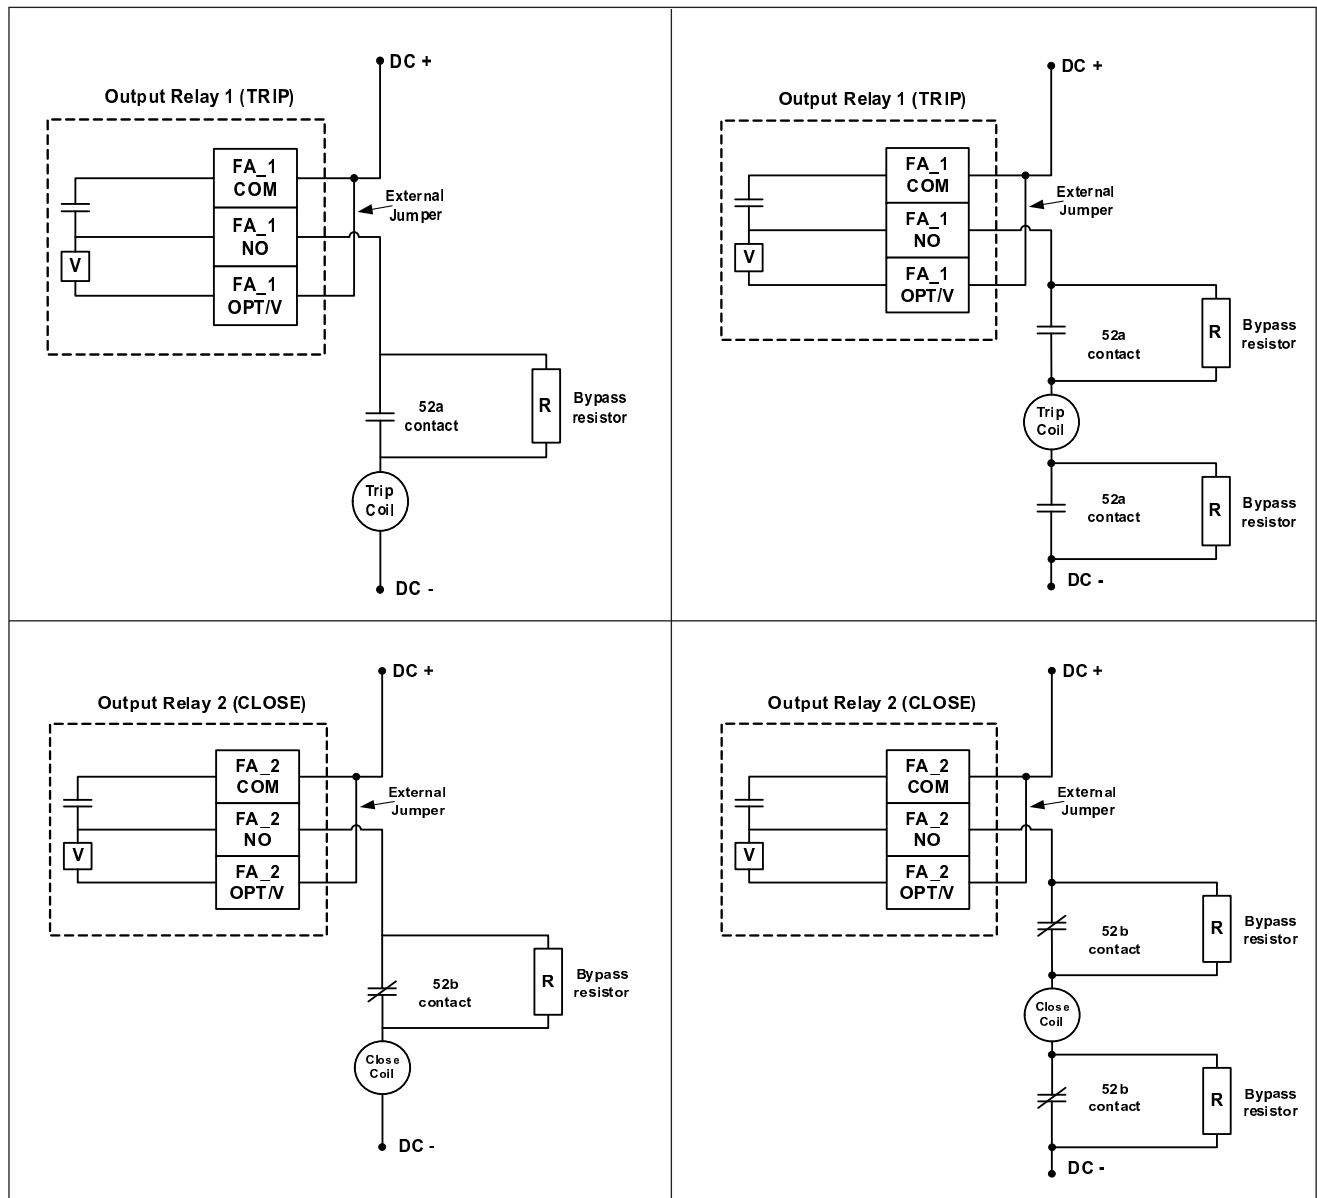


Figure 224: Trip and Close Coil Circuit with Continuous Monitoring

The value of the resistor is shown in the following table:

Power Supply (V DC)	Resistance (Ohms)	Power (Watts)
24	1000	2
48	10000	2
110	25000	5
125	25000	5
220	50000	5



Warning:
The Trip and Close Contacts must be considered unsafe to touch when the relay is energized.

Path: *Setpoints > Monitoring > Breaker 1 > Trip Circuit Monitoring*

TRIP CIRCUIT MONITORING

FUNCTION:

Range: Disabled, Latched Alarm, Alarm, Configurable

Default: Disabled

PICKUP DELAY:

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 10.000 s

DROPOUT DELAY:

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting provides selection for reset time delay used to delay the dropout of the detection of the TCM element.

TRIP RELAY SELECT:

Default: Relay 1

Range: Off, Relay X

Any output relay from the list of available output relays can be programmed for breaker tripping coil monitoring.

Note:

It is recommended to select the same Trip Relay set under the "Breaker: Trip Relay Select" option.

BYPASS BREAKER STATE:

Range: Enabled, Disabled

Default: Disabled

Set the Bypass Breaker State to Enabled when a by-pass resistor is connected across the breaker auxiliary contact for continuous Trip circuit monitoring. The circuits are monitored regardless of breaker position.

BLOCK:

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS:

Range: Disabled, Enabled

Default: Enabled

TARGETS:

Default: Self-reset

Range: Disabled, Self-reset, Latched

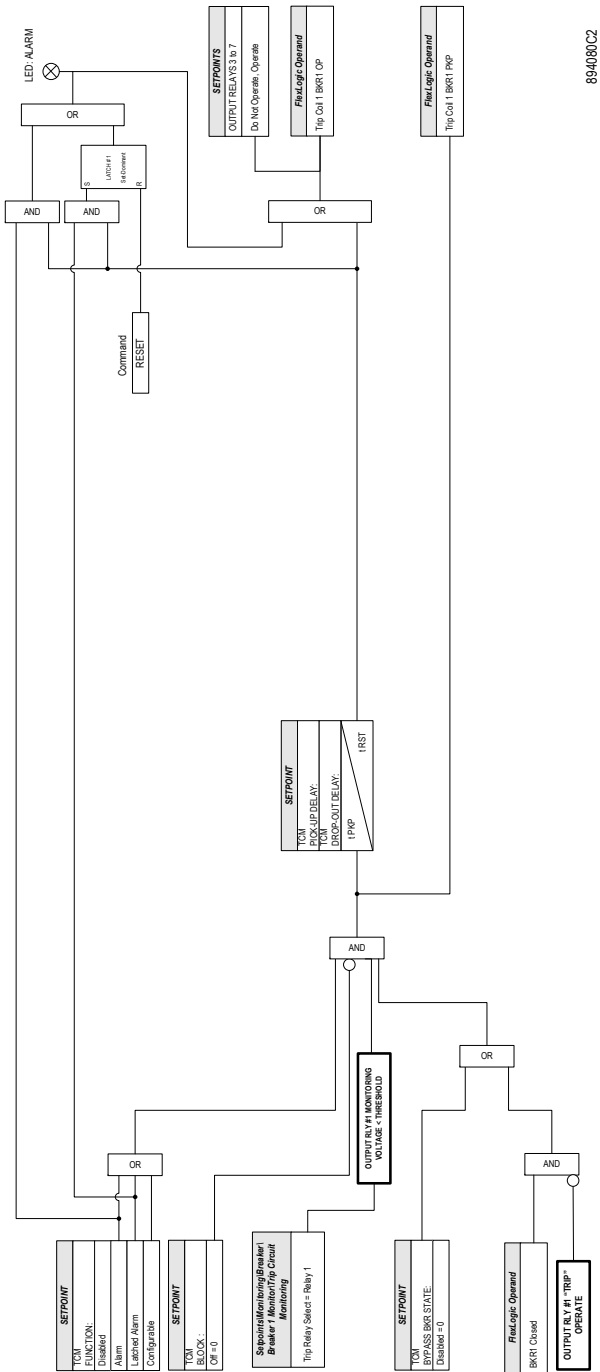


Figure 225: Trip Circuit Monitoring Diagram

CLOSE CIRCUIT MONITORING

Path: Setpoints > Monitoring > Breaker 1 > Close Circuit Monitoring

FUNCTION:

Range: Disabled, Latched Alarm, Alarm, Configurable

Default: Disabled

PICKUP DELAY:

Default: 10.000 s

Range: 0.000 to 6000.000 s in steps of 0.001 s

DROPOUT DELAY:

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

CLOSE RELAY SELECT:

Default: Relay 2

Range: Off, Relay X

Any output relay from the list of available output relays can be programmed for breaker coil closing monitoring.

Note:

*We recommend selecting the same Trip Relay set under the **Breaker: Close Relay Select** option.*

BYPASS BREAKER STATE:

Range: Enabled, Disabled

Default: Disabled

Set the Bypass Breaker State to Enabled when a by-pass resistor is connected across the breaker auxiliary contact for continuous Close circuit monitoring. The circuits are monitored regardless of breaker position.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK:

Default: Off

Range: Off, Any FlexLogic operand

EVENTS:

Range: Disabled, Enabled

Default: Enabled

TARGETS:

Range: Disabled, Self-reset, Latched

Default: Self-reset

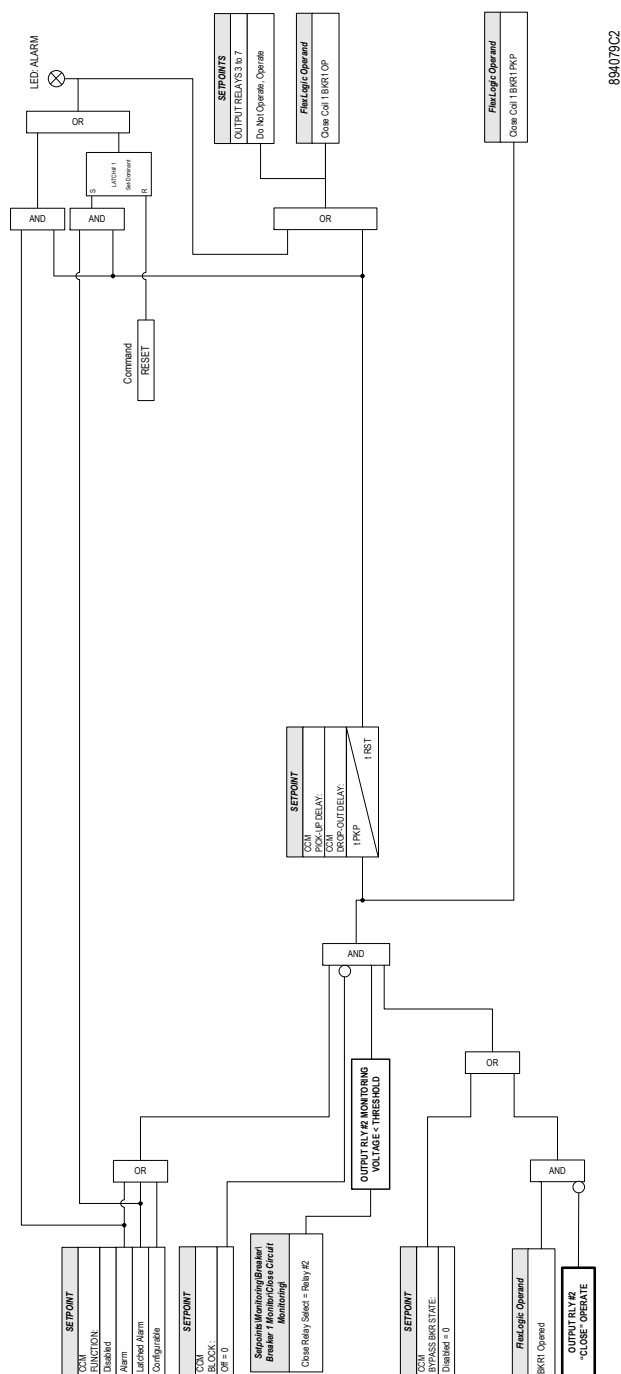


Figure 226: Close Circuit Monitoring Diagram

10.4.2 BREAKER ARCING CURRENT

The relay provides one Breaker Arcing Current element. This element calculates an estimate of the per-phase wear on the breaker contacts by measuring and integrating the current squared passing through the breaker contacts as an arc. These per-phase values are added to accumulated totals for each phase and compared to a programmed threshold value. When the threshold is exceeded in any phase, the relay can set an output operand and set an alarm. The accumulated value for each phase can be displayed as an actual value.

The same output operands that are selected to operate the Trip output relay that is used to trip the breaker indicating a tripping sequence has begun, are used to initiate this feature. A time delay is introduced between initiation and starting of integration to prevent integration of current flow through the breaker before the contacts

have parted. This interval includes the operating time of the output relay, any other auxiliary relays and the breaker mechanism. For maximum measurement accuracy, the interval between the change-of-state of the operand (from 0 to 1) and contact separation should be measured for the specific installation. Integration of the measured current continues for 100 ms, which is expected to include the total arcing period.

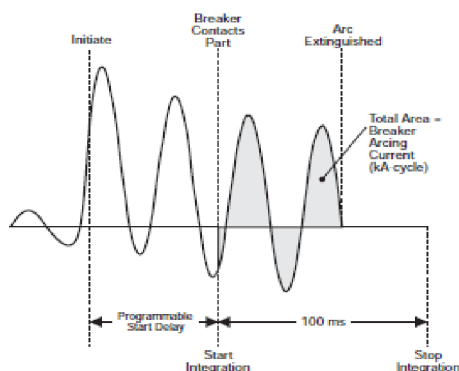


Figure 227: Breaker Arcing Current Measurement

Path: *Setpoints > Monitoring > Breaker > BKR 1 Monitor > BKR 1 Arcing Current*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT (not used in 859)

Range: CT Bank 1 -J1, CT Bank 2 -K1, CT Bank 3 -K2

Default: CT Bank 1 -J1

This setting provides selection of the current input source.

INITIATION

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand, digital input, virtual input or remote input that initiates the Breaker Arcing Current scheme, typically the Trip signals from internal protection functions.

DELAY

Range: 0.000 to 6000.00 s in steps of 0.001 s

Default: 0.030 s

The setpoint provides a delay interval between the time the tripping sequence is initiated and the time the breaker contacts are expected to part, starting the integration of the measured current.

ALARM LEVEL

Range: 0 to 50000 kA2-c in steps of 1 kA2-c

Default: 1000 kA2-c

The setpoint specifies the threshold value (kA2-cycle) above which the output operand is set.

OUTPUT RELAYS X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

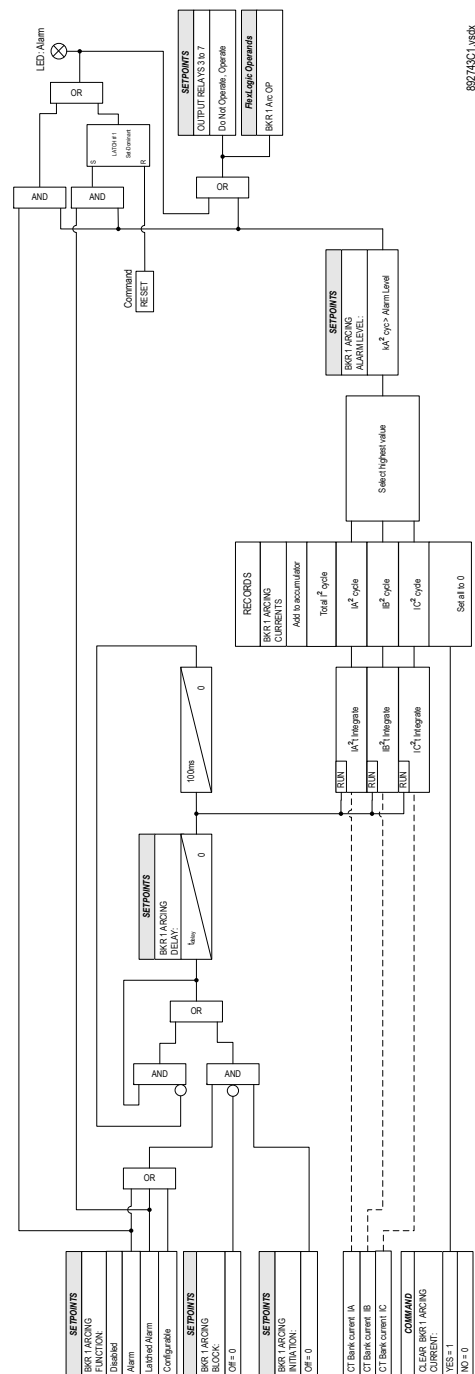


Figure 228: Breaker Arcing Current logic diagram

10.4.3 BREAKER HEALTH

The relay provides breaker health information by monitoring and analyzing the operation count, arcing energy of breaking current, arcing time, tripping time, closing time and spring charging time if applicable. The breaker health status depends on many factors, such as permissible operation number, magnitude of breaking current, mechanical wear and contact wear.

The operation count is able to give direct information by comparing it with the permissible operation number. The longer tripping time and closing time can provide an approximate estimation of trip/close coils and mechanical wear. The increasing spring charging time may imply developing problems in motor and spring mechanisms. Meanwhile, the increase in arcing energy of the breaking current may reflect the possibility of contact wear. Longer arcing time

may suggest the loss of dielectric strength in the arc chamber. If the arcing energy or any of the time intervals is above the related Pickup levels for the use-defined times, the Alarm Led is lit.

The scheme is equipped with three incomplete sequence timers for Trip/Close time, arc time and spring charge time respectively. So it automatically resets the related time interval after the programmed delay.

A breaker operation function is also included, where breaker operation failure is caused by either of the following conditions:

- The breaker does not respond to a Trip command within the programmed breaker operation delay time.
- The breaker does not respond to a Close command within the programmed time.

Path: Setpoints > Monitoring > Breaker 1 > Breaker Health

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

MODE

Range: Detection, Monitoring

Default: Detection

The Breaker Health has two running modes: detection and monitoring. Since the monitored time intervals differ for different breaker types and manufacturers, the detection mode can be used to help set the Pickup settings based on the historical true values. The operation count, arcing energy of the breaking current, arcing time, tripping time, closing time and spring charging time are measured and displayed in **Records > Breaker Health**, but the element does not pick up when in detection mode. Monitoring mode is the normal mode, wherein measurements are analyzed and the element may pick up accordingly.

PRESET TRIP COUNTER

Range: 0 to 100000 in steps of 1

Default: 0

This setting pre-sets the actual operation number when the relay is starting in service or the record is cleared.

TRIP TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setting assigns the trip initiation signal.

CLOSE TRIGGER

Range: Off, Any FlexLogic operand

Default: Off

This setting assigns the close initiation signal.

SPRING CHARGE STATUS

Range: Off, Any FlexLogic operand

Default: Off

The setting selects the signal to show the status of Spring Charge. Normally, the contact input connected to the auxiliary contact of the limit switch can be used.

TRIP TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.050 s

The setting sets the Pickup level of the Trip time. The Trip time interval is initiated by the Trip Trigger signal and stopped by the Open Status signal.

CLOSE TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.050 s

The setting sets the Pickup level of the Close time. The Close time interval is initiated by the Close Trigger signal and stopped by the Close Status signal.

INCOMPLETE TRP/CLS TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The setting declares a breaker operation failure condition if the breaker does not respond within this time delay. The setting should be greater than the Trip time PKP value and Close time PKP value.

ARC TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The setting sets the Pickup level of the Arc time. The Arc time is initiated by the Open Status signal and stopped when the current samples in one cycle are less than 0.02 CT. Then the Arc time is equal to the calculated time interval minus one cycle.

INCOMPLETE ARC TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.300 s

The setting declares an Arc time failure condition if there are currents flowing through the breaker after this time delay. This setting should be greater than the Arc time PKP value.

SPRING CHARGE TIME PICKUP

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 15.000 s

This setting sets the Pickup level of the Spring Charge time. The Spring Charge time is measured from the pulse duration of the Spring Charge Status.

INCOMPLETE CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 45.000 s

The setting declares a Charge time failure condition if the spring charging process is not finished after this time delay. The setting should be greater than the Charge time PKP value.

ARC ENERGY PICKUP

Range: 1 to 100000 kA²-c in steps of 1 kA²-c

Default: 1000 kA²-c

The setting sets the Pickup level of the arc energy. The arc energy value is calculated in the Breaker Arcing Current element.

Note:

The arc energy is calculated by the breaker arcing current element. If the breaker arcing current element is disabled, the arc energy is not calculated and this setting should not be used. The arc energy used here is the individual value for each trip and not the accumulated value recorded in the Breaker Arcing Current element.

ALARM COUNTER

Range: 1 to 100 in steps of 1

Default: 5

The setting sets the alarm counter level. One counter is used to accumulate the Pickup data from all monitoring quantities. If the counter value is above the alarm counter level, the LED is lit and one operand is asserted.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

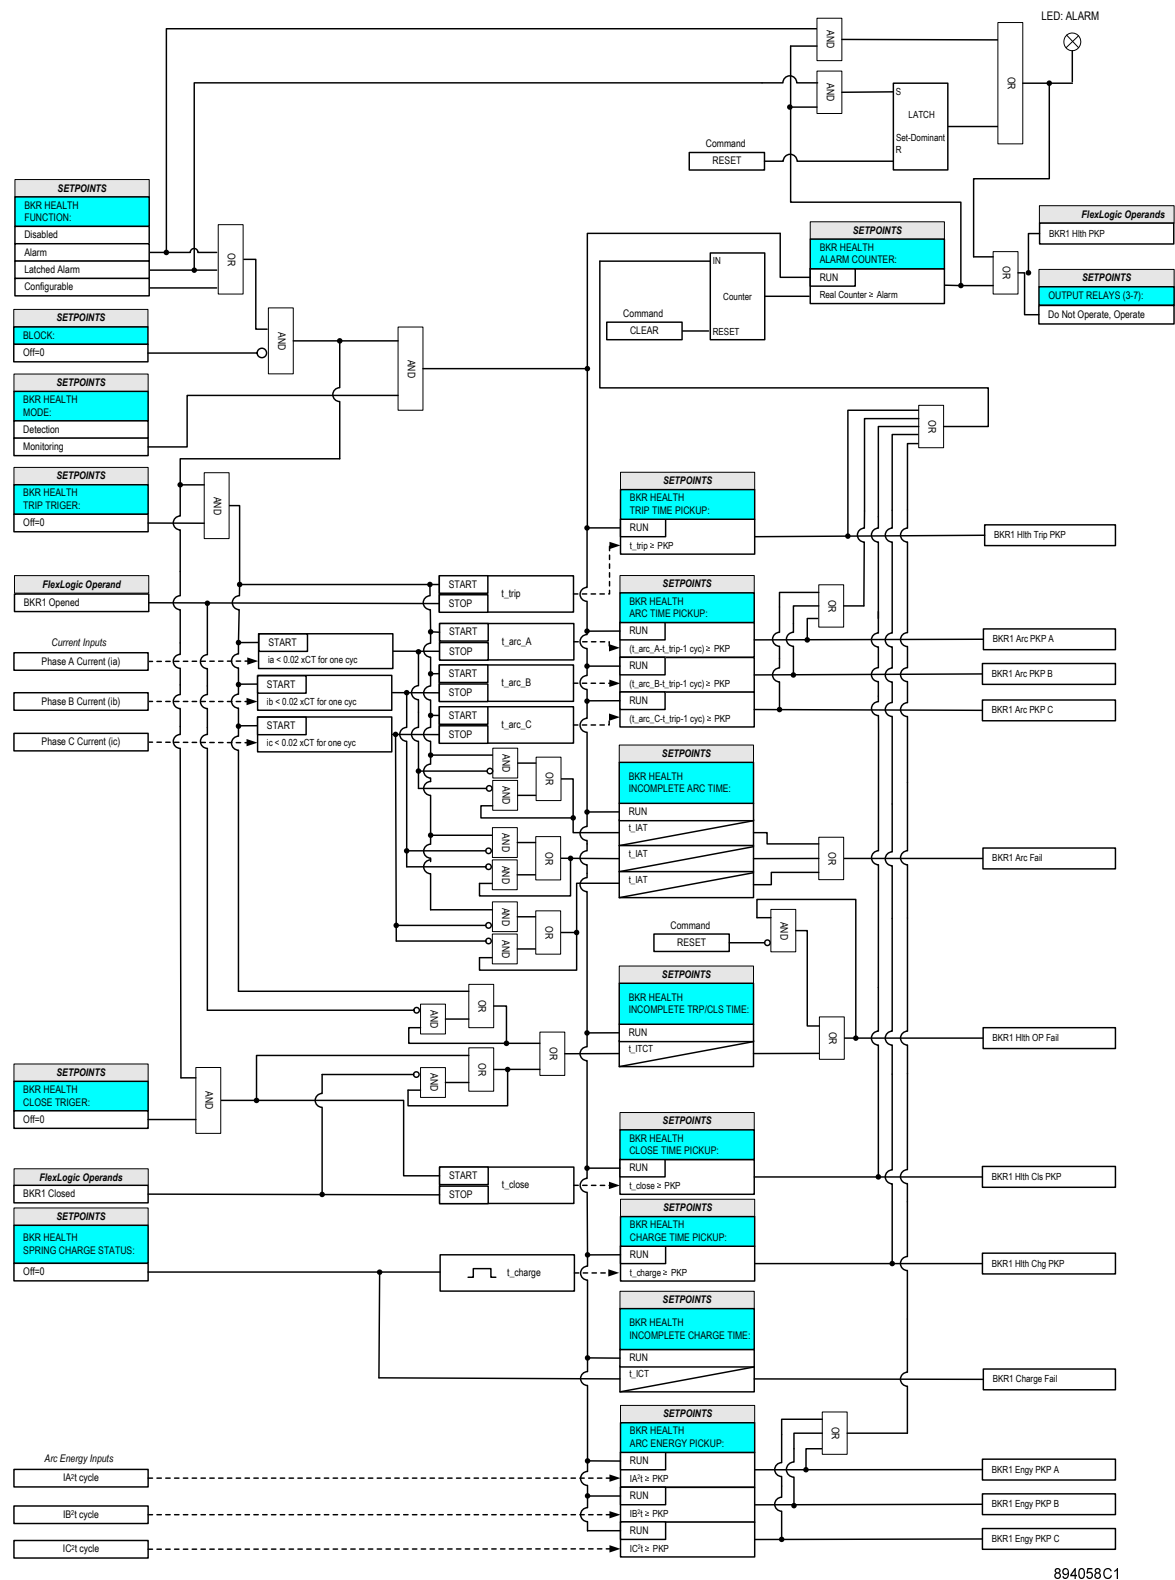


Figure 229: Breaker Health and Operation logic diagram


10.5 FUNCTIONS

10.5.1 POWER FACTOR (55)

It is generally desirable for a system operator to maintain the Power Factor as close to unity as possible to minimize both costs and voltage excursions. Since the Power Factor is variable on common non-dedicated circuits, it is advantageous to compensate for low (lagging) Power Factor values by connecting a capacitor bank to the circuit when required. The relay allows two stages of capacitance switching for Power Factor compensation.

The relay calculates the average Power Factor in the three phases as follows:

Average Power

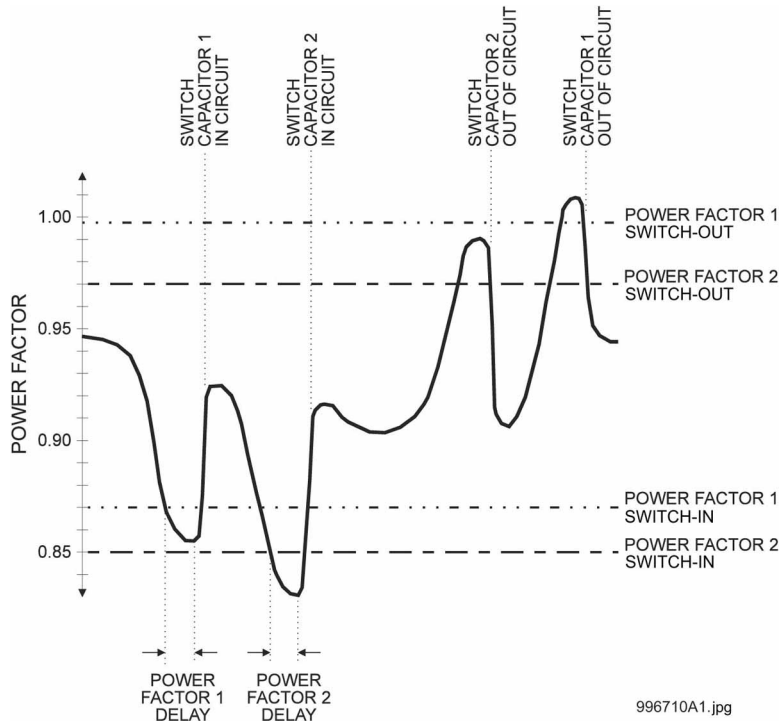

$$\text{Factor} = \text{Total 3-Phase Real Power} / \text{Total 3-Phase Apparent Power}$$

Figure 230: Capacitor bank switching

When the measured Power Factor becomes more lagging or leading (depending on the user setting) than the Switch-In level, the relay operates a user-selected output contact. This output can be used to control a switching device which connects capacitance to the circuit, or to signal an alarm to the system operator. After entering this state, when the Power Factor becomes less lagging or leading than the Power Factor Switch-Out level for a time greater than the set delay, the relay resets the output contact to the non-operated state.

For delta-connected VTs, the Power Factor feature is inhibited from operating unless all three voltages are above a threshold and one or more currents are above $0.002 \times \text{CT}$. Power Factor element delay timers are only allowed to time when the voltage threshold is exceeded on all phases and the Power Factor remains outside of the region between the programmed Switch-In and Switch-Out levels. In the same way, when a Power Factor condition starts the Power Factor delay timer, if all three phase voltages fall below the threshold before the timer has timed-out, the element resets without operating. A loss of voltage during any state returns the Power Factor element(s) to the Reset state.

For wye-connected VTs, the power factor value is calculated from the valid phase(s) with a voltage that is above a user-selected threshold and a current that is above $0.002 \times \text{CT}$. Power Factor element delay timers are only allowed to time when the supervision conditions are met and the Power Factor remains outside of the region between the

programmed Switch-In and Switch-Out levels. In the same way, when a Power Factor condition starts the Power Factor delay timer, if one or more valid phases no longer satisfy the supervision conditions, the power factor will be re-calculated based on the still valid phase(s). If the element is continuously asserted with the new power factor value, the timer will continue timing, otherwise, the element will reset without operating.

The following figure illustrates the conventions established, where the negative value means the lead power factor, and the positive value means the lag power factor.

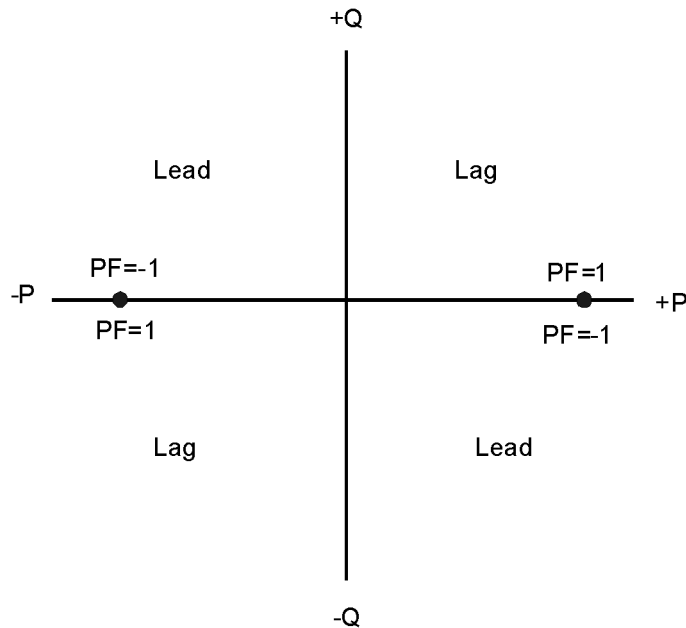
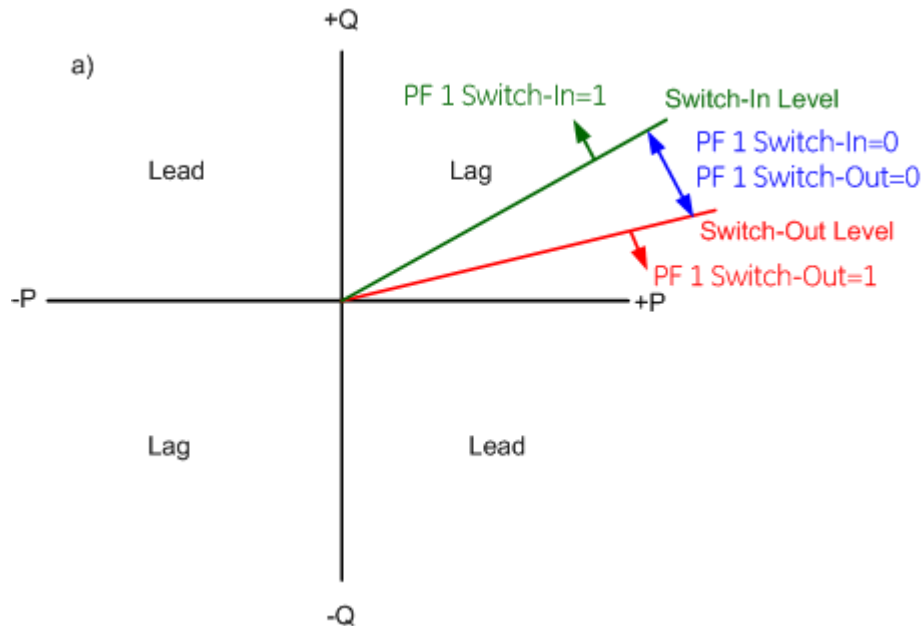
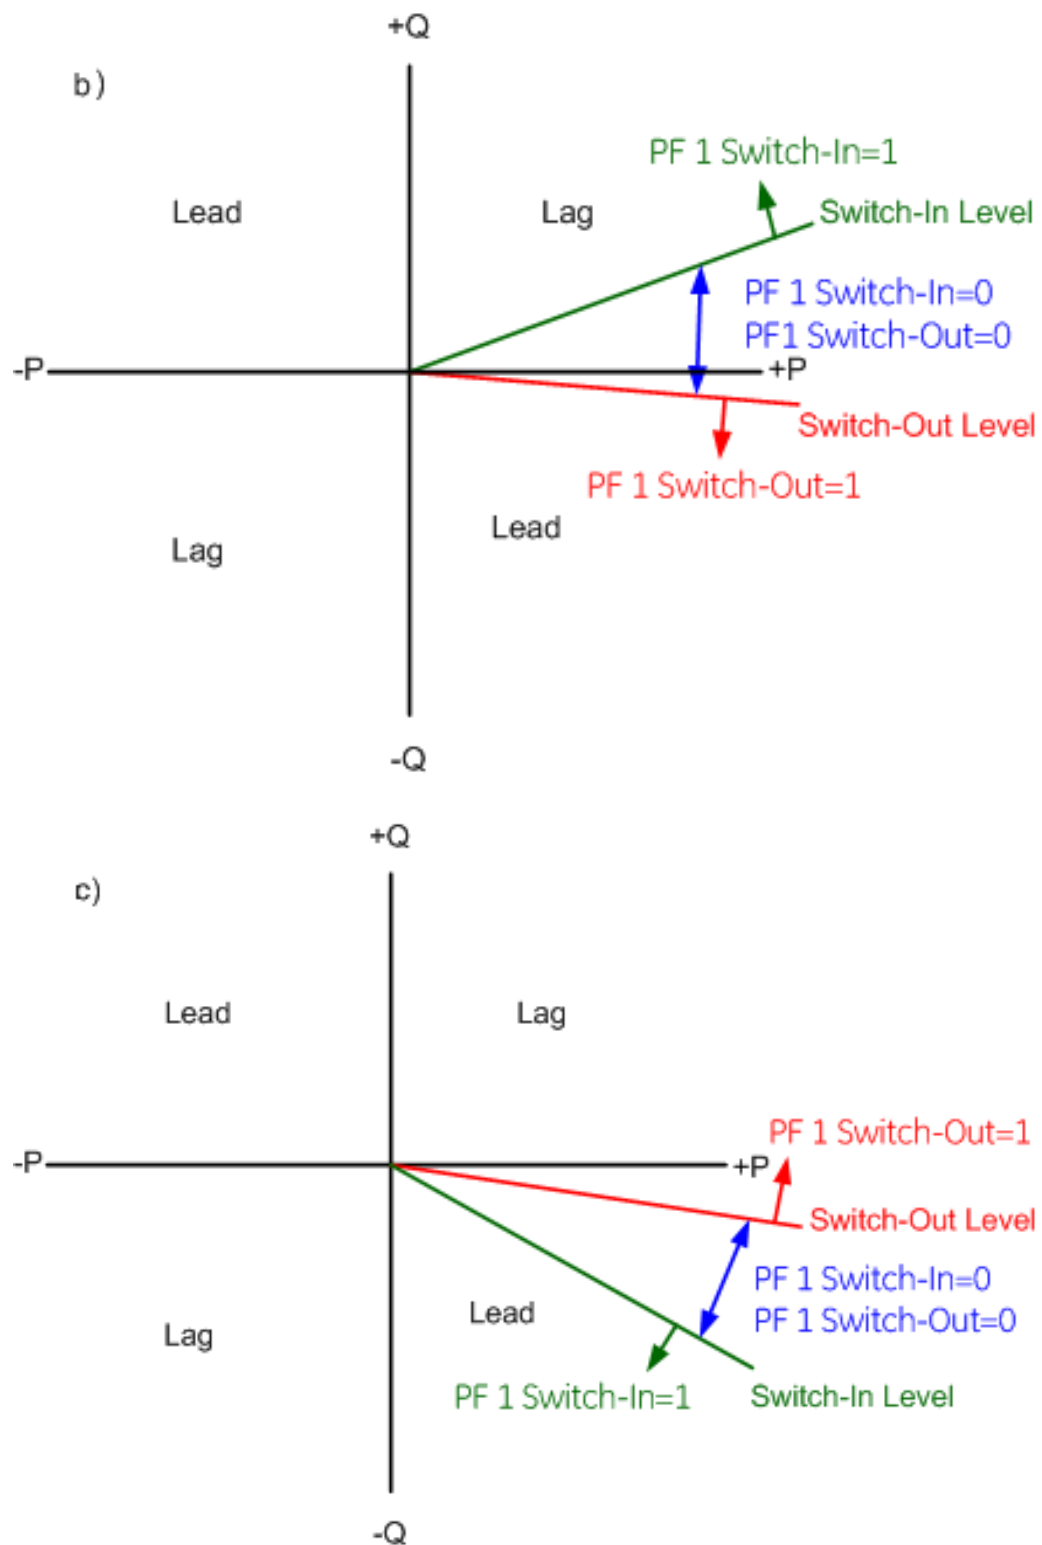


Figure 231: Conventions for Power Factor

For example, the applications of Switch-In and Switch-Out levels are shown in the figures below.





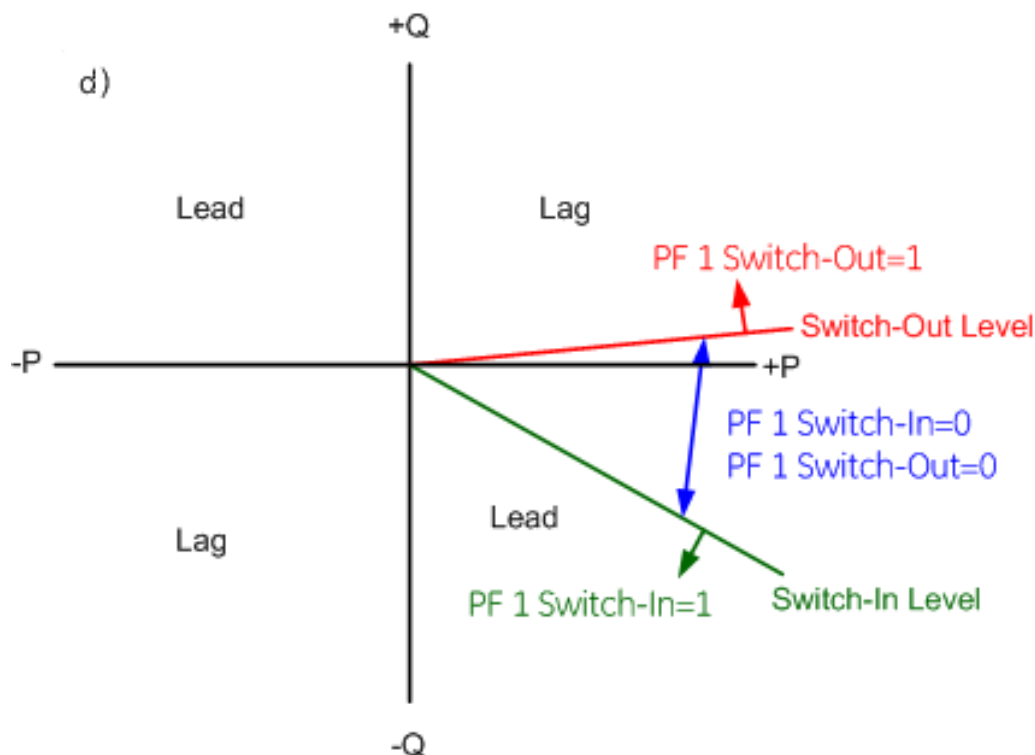


Figure 232: Switch in and switch out levels

The settings of this function produces Switch-In, Switch-Out and Operate flags. The Power Factor Switch-In flag is asserted when the absolute value of the calculated Power Factor is below the Switch-In value, and supervision conditions are satisfied. The Power Factor Operate flag in the Switch-In level is asserted if the element stays switched-in for the time defined by the time delay. After the element drops from Switch-In, the Power Factor Switch-Out flag is asserted when the Power Factor passes the Switch-Out value. The Power Factor Operate flag in the Switch-Out level is asserted if the element stays switched out for the time defined by the time delay.

The minimum operating voltage is set as a threshold below which the element is reset.

Path: *Setpoints > Monitoring > Functions > Power Factor 1(X)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT (not used in 859)

Range: Power 1, Power 2

Default: Power 1

This setting provides the selection for the power input. (850-D only)

SWITCH-IN

Range: -0.01 to -0.99, 1, 0.99 to 0.01 (for 8 Series EnerVista D&I Setup Setup software: 0.01 Lead, 0.02 Lead, ..., 0.98 Lead, 0.99 Lead, 1, 0.99 Lag, 0.98 Lag, ..., 0.02 Lag, 0.01 Lag)

Default: 0.08 Lag

The setting sets the Power Factor Switch-In level. The negative value is used to denote the lead power factor, and the positive value is used for the lag power factor.

SWITCH-OUT

Range: -0.01 to -0.99, 1, 0.99 to 0.01 (for 8 Series EnerVista D&I Setup Setup software: 0.01 Lead, 0.02 Lead, ..., 0.98 Lead, 0.99 Lead, 1, 0.99 Lag, 0.98 Lag, ..., 0.02 Lag, 0.01 Lag)

Default: 1.00

The setting sets the Power Factor Switch-Out level. The negative value is used to denote the lead power factor, and the positive value is used for the lag power factor.

Note:

SWITCH-IN and SWITCH-OUT are mutually exclusive settings. See the application examples above which show no common zone in which both SWITCH-IN and SWITCH-OUT are asserted.

DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 50.000 s

The setting provides the definite Switch-In and Switch-Out time delay. Instantaneous operation is selected by the time delay setting of 0.000 s.

MINIMUM VOLTAGE

Range: 0.00 to 1.25 x VT in steps of 0.01 x VT

Default: 0.30 x VT

The setting sets the minimum voltage for Power Factor element operation specified per times VT.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

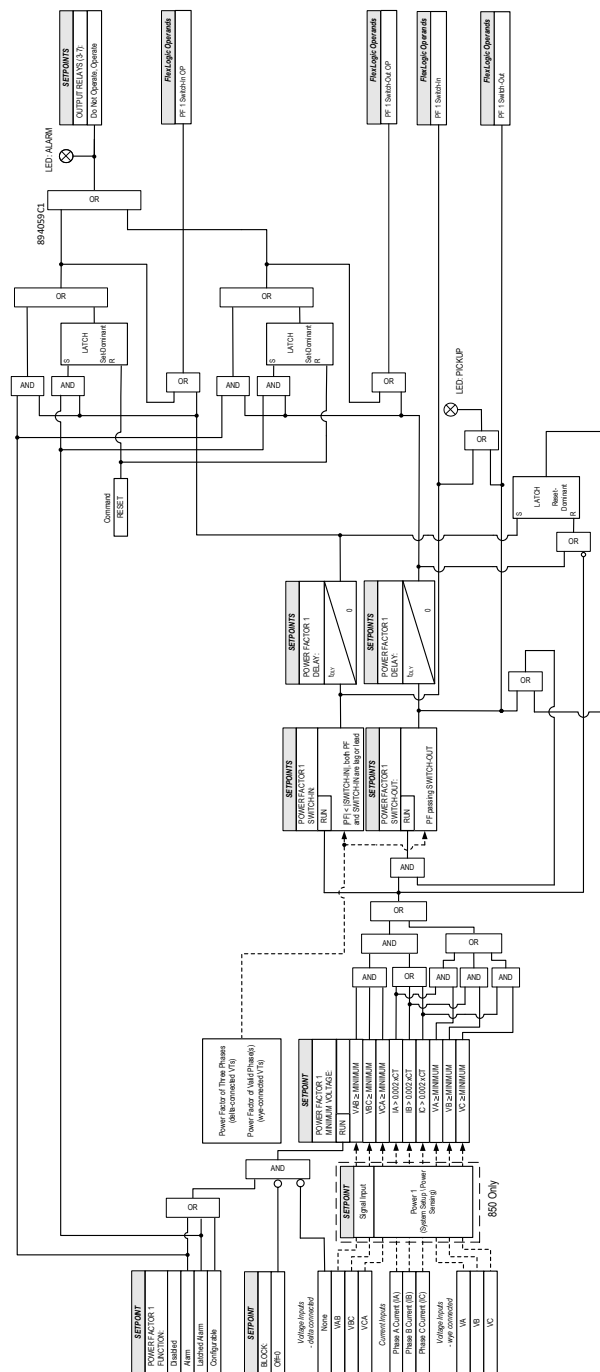


Figure 233: Power Factor logic diagram

10.5.2 DEMAND

Current Demand is measured on each phase, and on three phases for real, reactive, and apparent power. Setpoints allow emulation of some common electrical utility demand measuring techniques for statistical or control purposes.

Note:

The relay is not approved as, or intended to be, a revenue metering instrument. If used in a peak load control system, the user must consider the accuracy rating and method of measurement employed, and the source VTs and CTs, in comparison with the electrical utility revenue metering system.

The relay can be set to calculate Demand by any of three methods; Thermal Exponential, Block Interval, Rolling Demand.

Thermal Exponential

This selection emulates the action of an analog peak recording Thermal Demand meter. The relay measures the quantity (RMS current, real power, reactive power, or apparent power) on each phase every second, and assumes the circuit quantity remains at this value until updated by the next measurement. It calculates the Thermal Demand equivalent based on:

$$d(t) = D(1 - e^{-kt})$$

Where:

- d = demand value after applying input quantity for time t (in minutes)
- D = input quantity (constant)
- k = 2.3/thermal 90% response time.

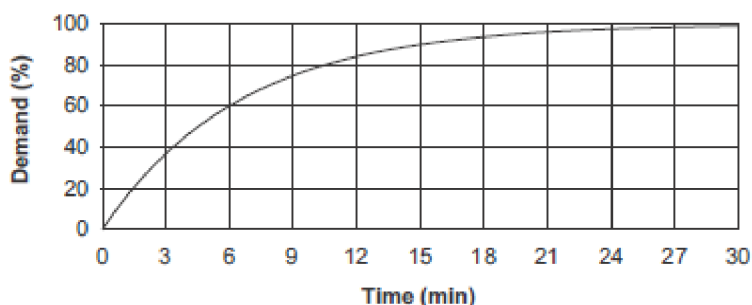


Figure 234: Thermal Demand Characteristic (15 min response)

The 90% thermal response time characteristic defaults to 15 minutes. A setpoint establishes the time to reach 90% of a steady-state value, just as with the response time of an analog instrument. A steady-state value applied for twice the response time will indicate 99% of the value.

Block Interval

This selection calculates a linear average of the quantity (RMS current, real power, reactive power, or apparent power) over the programmed Demand time interval, starting daily at 00:00:00 (i.e. 12 am). The 1440 minutes per day is divided into the number of blocks as set by the programmed time interval. Each new value of Demand becomes available at the end of each time interval.

Rolling Demand

This selection calculates a linear average of the quantity (RMS current, real power, reactive power, or apparent power) over the programmed Demand time interval, in the same way as Block Interval. The value is updated every minute and indicates the Demand over the time interval just proceeding the time of update.

10.5.2.1 CURRENT DEMAND

The Current Demand for each phase is calculated individually, and the Demand for each phase is monitored by comparison with a single Current Demand Pickup value. If the Current Demand Pickup is equaled or exceeded by any phase, the relay can cause an alarm or signal an output relay.

Path: *Setpoints > Monitoring > Functions > Demand > Current Demand 1(X)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: dependent upon the order code

Default: CT Bank 1-J1

This setting provides the selection for the current input bank. The bank names can be changed in: **Setpoints > System > Current Sensing > [Name] > CT Bank Name**.

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Dmd

Default: Blk Interval

This setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

This setpoint sets the time required for a steady state current to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

This setpoint sets the time period over which the current demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 10 to 10000 A in steps of 1 A

Default: 5000 A

This setpoint sets the Current Demand Pickup level.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Enabled, Disabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

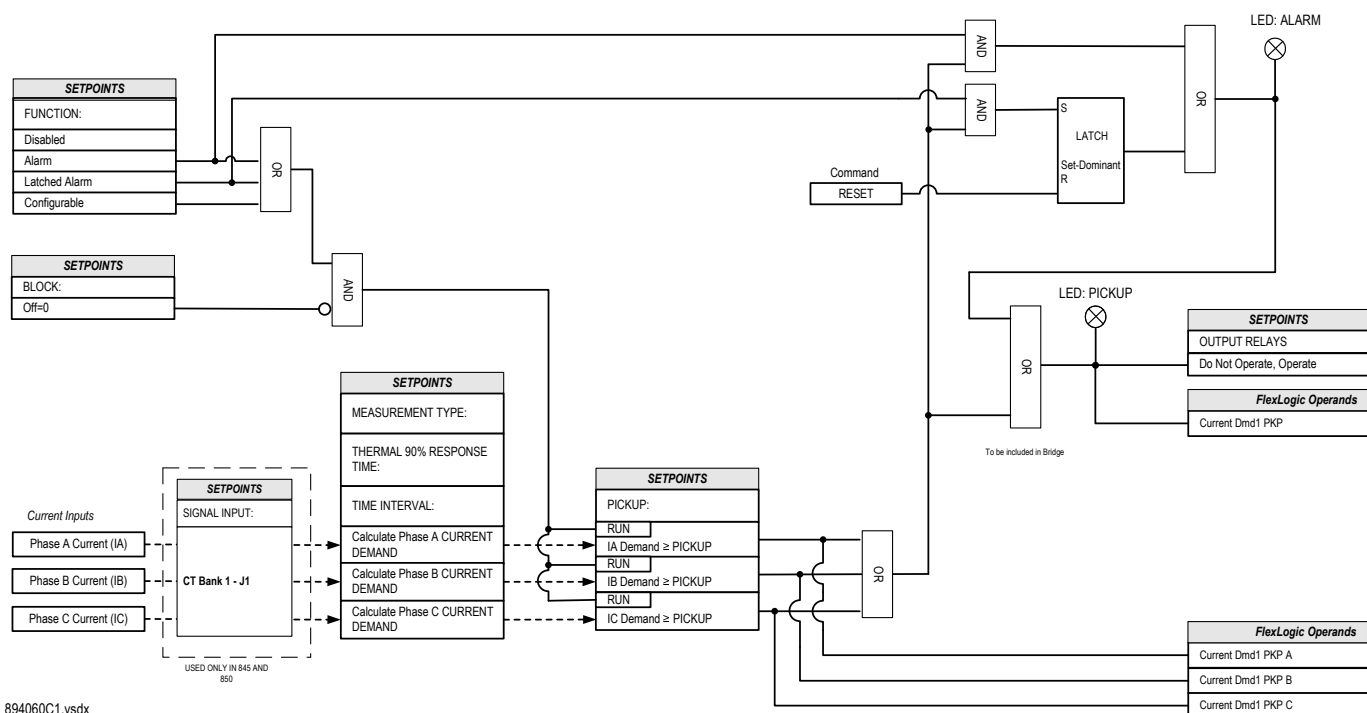

894060C1.vsdX

Figure 235: Current Demand logic diagram

10.5.2.2 REAL POWER DEMAND

The Real Power Demand is monitored by comparing it to a Pickup value. If the Real Power Demand Pickup is ever equaled or exceeded, the relay can be configured to cause an alarm or signal an output relay.

Path: *Setpoints > Monitoring > Functions > Demand > Real Power Demand 1(X)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: Power x, (Dependent on order code)

Default: Power 1

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Demand

Default: Blk Interval

This setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

This setpoint sets the time required for steady-state Real Power to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

This setpoint sets the time period over which the Real Power Demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 0.1 to 300000.0 kW in steps of 0.1 kW

Default: 5000.0 kW

This setting sets the Real Power Demand Pickup level. The absolute value of real power demand is used for the Pickup comparison.

RESET DEMAND

Range: Off, Any FlexLogic operand

Default: Off

Any FlexLogic operand can be used to reset the minimum and maximum real power demand from the current value to zero. These values are reset to zero at the rising edge of the set operand. After reset to zero, calculation of minimum and maximum real power demand values continues until the next rising edge of the reset operand.

An application example is the monitoring of the minimum and maximum demand values per shift. A shift can be defined by the breaker status operand (open or closed) or operand derived from the **Time of Day Timer** element.

The Reset Demand operand does not reset the current value of the demand used by the **Real Power Demand** function.

OUTPUT RELAYS X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

Logic Diagram

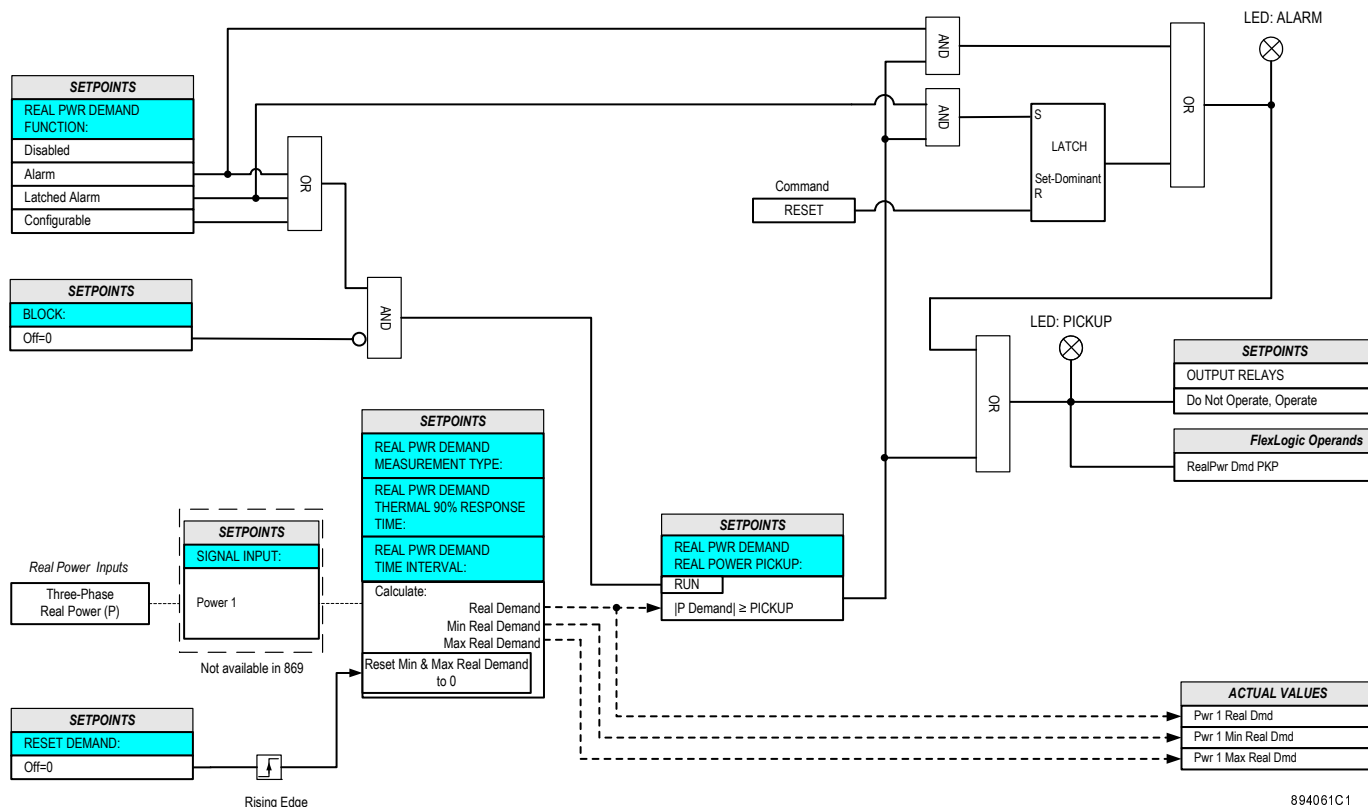


Figure 236: Real Power Demand logic diagram

10.5.2.3 REACTIVE POWER

The Reactive Power Demand is monitored by comparing to a Pickup value. If the Reactive Power Demand Pickup is ever equaled or exceeded, the relay can be configured to cause an alarm or signal an output relay.

Path: Setpoints > Monitoring > Functions > Demand > Reactive Power Demand 1(X)

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: Power x (Dependent on order code)

Default: Power 1

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Demand

Default: Blk Interval

The setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

The setpoint sets the time required for a steady state Reactive Power to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

The setpoint sets the time period over which the Reactive Power Demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 0.1 to 300000.0 kvar in steps of 0.1 kvar.

Default: 5000.0 kvar

Any FlexLogic operand can be used to reset the accumulated reactive power demand from its current value to zero. The accumulated value resets at the rising edge of the set operand. After reset to zero, the reactive power demand element continues calculating the demand until the next rising edge of the reset operand.

RESET DEMAND

Range: Off, Any FlexLogic operand

Default: Off

Any FlexLogic operand can be used to reset the minimum and maximum reactive power demand from its current value to zero. The minimum and maximum values reset at the rising edge of the set operand. After reset to zero, calculation of minimum and maximum reactive power demand values continues until the next rising edge of the reset operand.

The Reset Demand operand doesn't reset the current value of the demand used by the Reactive Power Demand function.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Enabled, Disabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

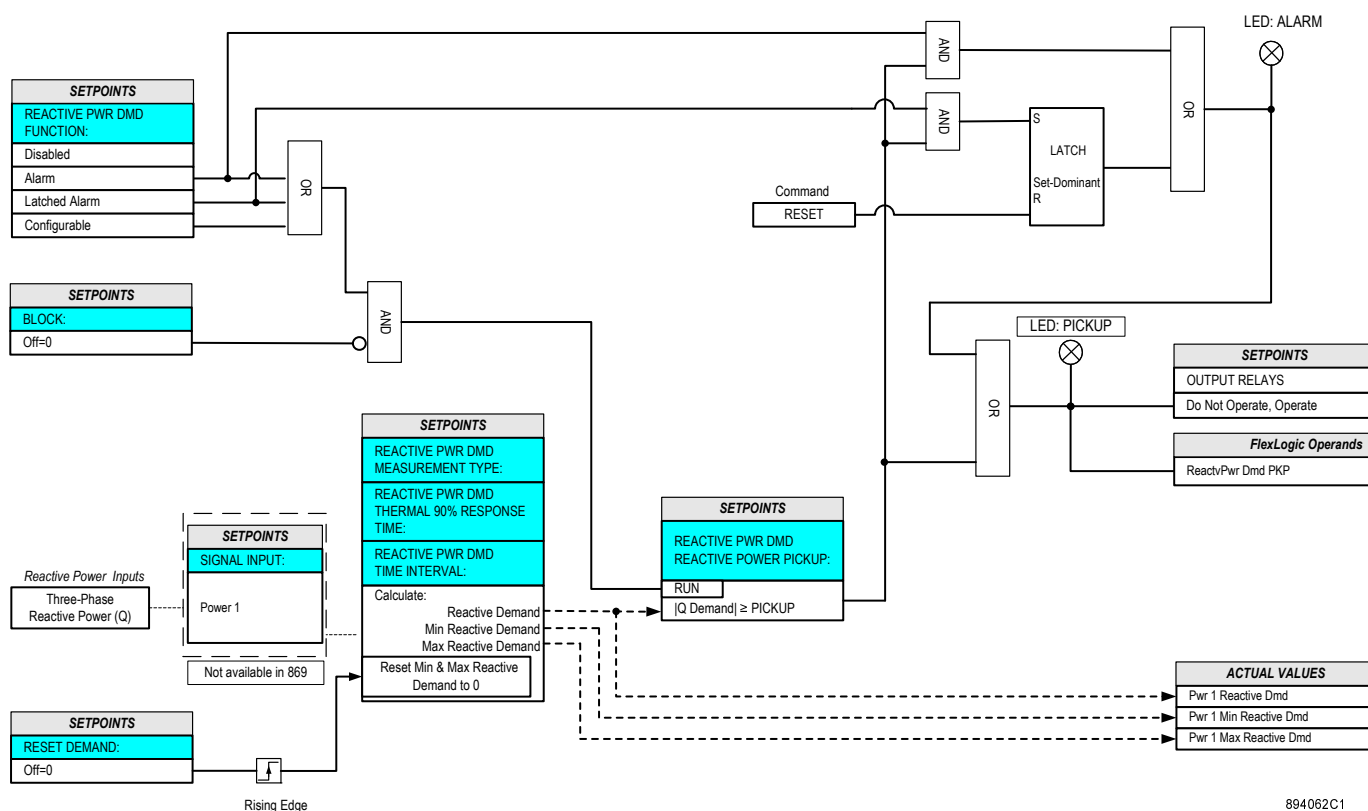

894062C1

Figure 237: Reactive Power Demand logic diagram

10.5.2.4 APPARENT POWER DEMAND

The Apparent Power Demand is monitored by comparing to a Pickup value. If the Apparent Power Demand Pickup is ever equaled or exceeded, the relay can be configured to cause an alarm or signal an output relay.

Path: Setpoints > Monitoring > Functions > Demand > Apparent Power Demand 1(X)

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Configurable

SIGNAL INPUT (not used in 859)

Range: Power x (Dependent on order code)

Default: Power 1

MEASUREMENT TYPE

Range: Blk Interval, Exponential, Rolling Demand

Default: Blk Interval

The setting sets the measurement method. Three methods can be applied.

THERMAL 90% RESPONSE TIME

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 15 min

The setpoint sets the time required for a steady state Apparent Power to indicate 90% of the actual value to approximately match the response of the relay to analog instruments. The setpoint is visible only if **MEASUREMENT TYPE** is *Exponential*.

TIME INTERVAL

Range: 5 min, 10 min, 15 min, 20 min, 30 min

Default: 20 min

The setpoint sets the time period over which the Apparent Power Demand calculation is to be performed. The setpoint is visible only if **MEASUREMENT TYPE** is *Block Interval* or *Rolling Demand*.

PICKUP

Range: 0.1 to 300000.0 kVA in steps of 0.1 kVA

Default: 5000.0 kVA

The setting sets the Apparent Power Demand Pickup level.

RESET DEMAND

Range: Off, Any FlexLogic operand

Default: Off

Any FlexLogic operand can be used to reset the minimum and maximum apparent power demand from its current value to zero. The minimum and maximum values reset at the rising edge of the set operand. After reset to zero, calculation of minimum and maximum apparent power demand values continues until the next rising edge of the reset operand.

The Reset Demand operand doesn't reset the current value of the demand used by the Apparent Power Demand function.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Enabled, Disabled

Default: Disabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Disabled

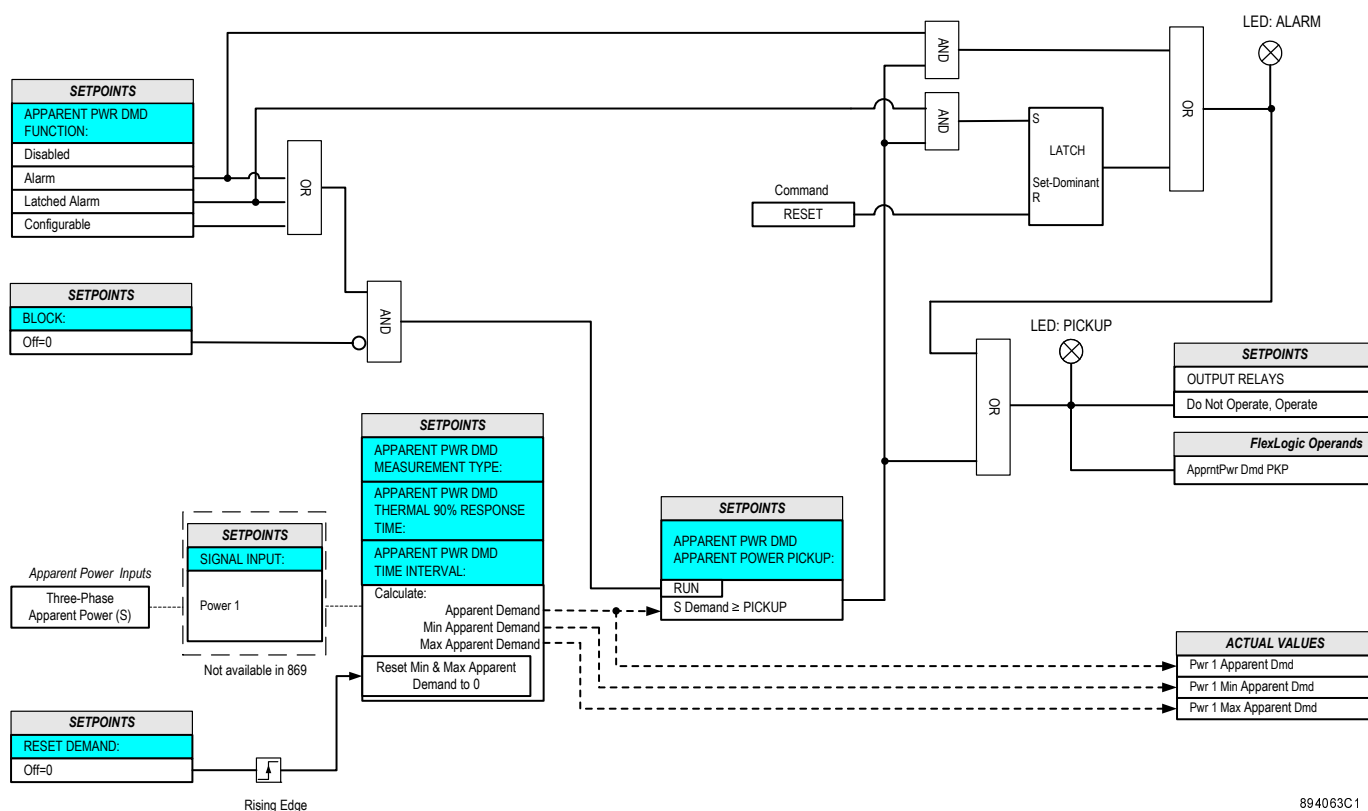

894063C1

Figure 238: Apparent Power Demand logic diagram

10.5.3 PULSED OUTPUTS

The relay provides a Pulse Output element for four energy measurements. The Pulse Output element can operate auxiliary relays after an adjustable energy increment for the quantities of positive and negative MWh (Megawatt hours) and positive and negative MVARh (Mega Volt Amp Reactive hours).

Pulses occur at the end of each programmed energy increment. Upon power-up of the relay, the Pulse Output function, if enabled, continues from where it was at the time of loss of control power. For example, if control power is removed when the positive Watt hours stored at last pulse was 24.000 MWh, when control power is re-applied a pulse occurs at 34.000 MWh if the energy increment is set at 10.000 MWh.

1. The Auxiliary Output relay(s) used for this element must be set to *Self-Resetting*. The pulses consist of a one second on-time and a one second off-time. This feature is programmed such that no more than one pulse per two seconds is required.
2. The relay is not a revenue class meter and cannot be used for billing purposes.
3. Energy quantities are displayed in MWh and MVarh, with resolutions of 1 kWh and 1 kVarh respectively.

Path: *Setpoints* > *Monitoring* > *Functions* > *Pulsed Outputs*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

SIGNAL INPUT (not used in 859)

Range: Power x (Dependent on order code)

Default: Power 1

This setting provides the power element selection for the CT and VT bank identification.

POS WHS PULSE INCREMENT

Range: 0.000 to 1000.000 MWh in steps of 0.001 MWh

Default: 10.000 MWh

The setpoint specifies the positive Watthours threshold pulse increment after which the output pulse and output operand are set.

POS WHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

NEG WHS PULSE INCREMENT

Range: 0.000 to 1000.000 MWh in steps of 0.001 MWh

Default: 10.000 MWh

The setpoint specifies the negative Watthours threshold pulse increment after which the output pulse and output operand are set.

NEG WHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

POS VARHS PULSE INCREMENT

Range: 0.000 to 1000.000 MVARh in steps of 0.001 MVARh

Default: 10.000 MVARh

The setpoint specifies the positive VARhours threshold pulse increment after which the output pulse and output operand are set.

POS VARHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

NEG VARHS PULSE INCREMENT

Range: 0.000 to 1000.000 MVARh in steps of 0.001 MVARh

Default: 10.000 MVARh

The setpoint specifies the positive VARhours threshold pulse increment after which the output pulse and output operand are set.

NEG VARHS PULSE RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched
Default: Self-Reset

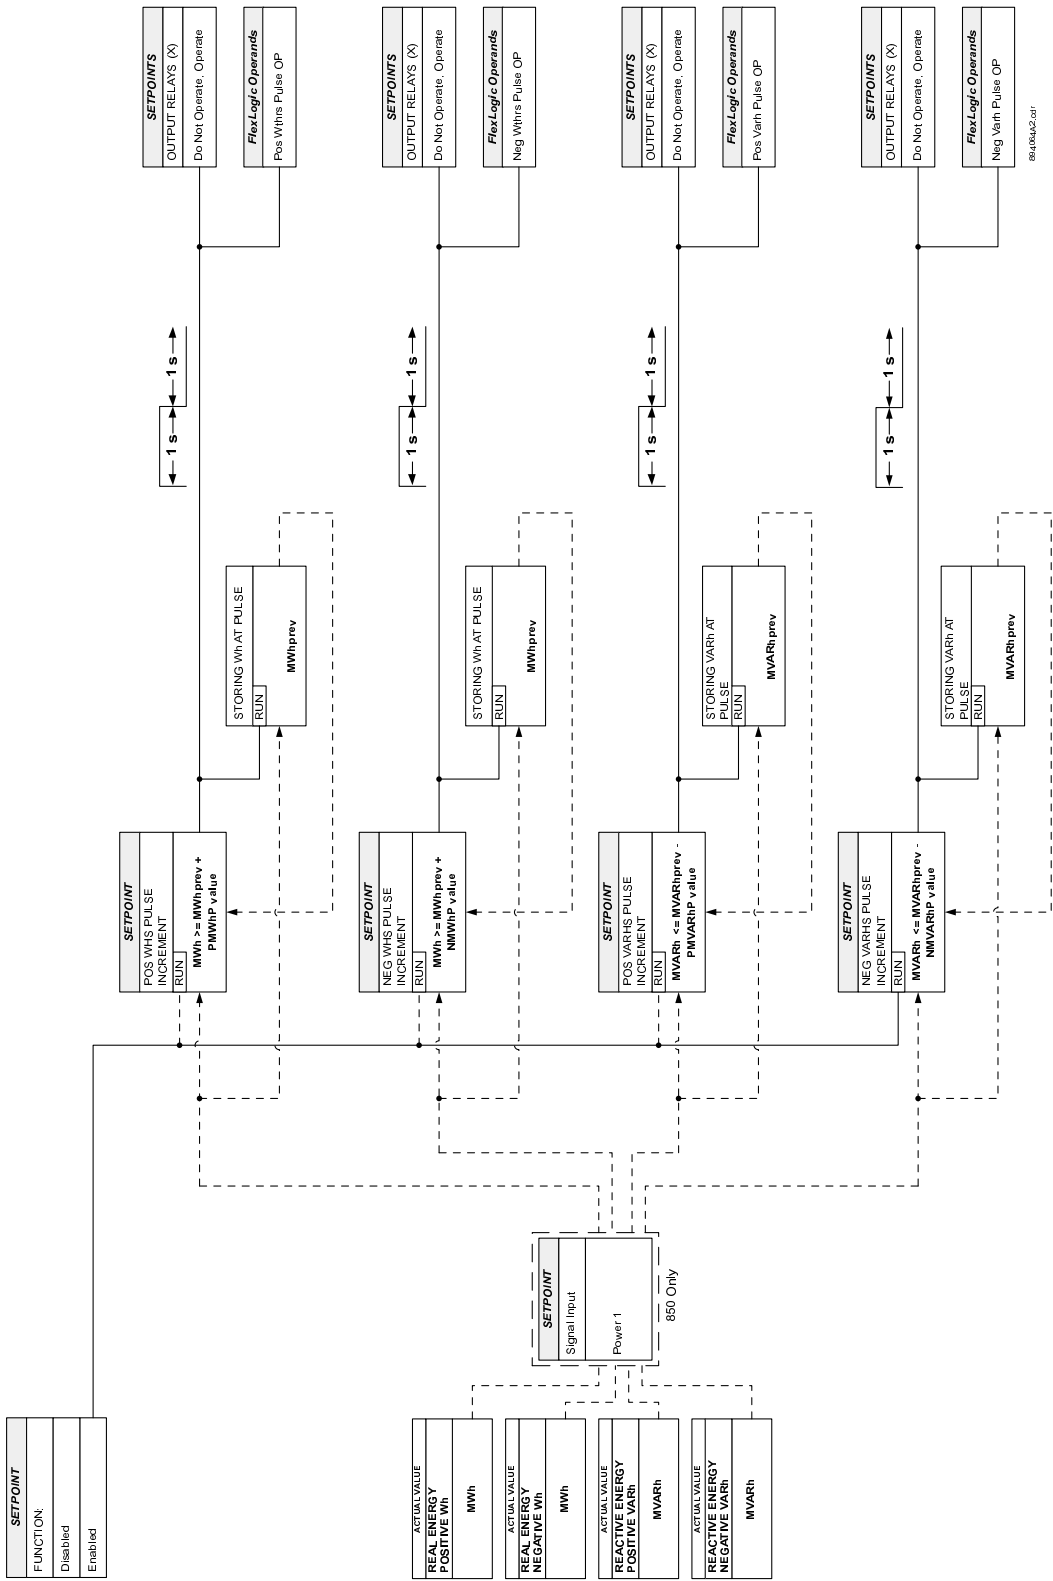


Figure 239: Pulsed Outputs logic diagram

10.5.4 DIGITAL COUNTERS

The relay provides sixteen identical Digital Counters. A Digital Counter counts the number of state transitions from logic 0 to logic 1.

The Digital Counters are numbered from 1 to 16. The counters are used to count operations such as the Pickups of an element, the changes of state of an external contact (e.g. breaker auxiliary switch), or the pulses from a watt-hour meter.

Path: *Setpoints > Monitoring > Functions > Digital Counters > Digital Counter 1 (16)*

FUNCTION

Range: Disabled, Enabled

Default: Disabled

NAME

Range: Any 13 alphanumeric characters

Default: Counter 1

UNITS

Range: Any 5 alphanumeric characters

Default: Units

Assigns a label to identify the unit of measure with respect to the digital transitions to be counted. The units label will appear in the metering corresponding Actual Values Status under **Records > Digital Counters**.

PRE-SET

Range: -2147483648, 0, +2147483647

Default: 0

The setpoint sets the count to a required pre-set value before counting operations begin, as in the case where a substitute relay is installed in place of an in-service relay, or while the Counter is running.

COMPARE

Range: -2147483648, 0, +2147483647

Default: 0

The setpoint sets the value to which the accumulated count value is compared. Three FlexLogic output operands are provided to indicate if the present value is 'more than (HI)', 'equal to (EQL)', or 'less than (LO)' the set value.

UP

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for incrementing the Counter. If an enabled UP input is received when the accumulated value is at the limit of +2147483647, the counter rolls over to -2147483648 and shows the alarm 'Digital Counter 1 at Limit'.

DOWN

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for decrementing the Counter. If an enabled DOWN input is received when the accumulated value is at the limit of +2147483647, the counter rolls over to -2147483648 and shows the alarm 'Digital Counter 1 at Limit'.

SET TO PRE-SET

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand used to set the counter to the pre-set value. The counter is set at pre-set value in the following situations:

When the Counter is enabled and Digital Counter 1 Set to Pre-Set operand has value 1 (when the Counter is enabled and Digital Counter 1 Set to Pre-Set operand has value 0, the Counter will be set to 0).

When the Counter is running and Digital Counter 1 Set to Pre-Set operand changes the state from 0 to 1 (Digital Counter 1 Set to Pre-Set changing from 1 to 0 while the Counter is running has no effect on the count).

When a reset or reset/freeze command is sent to the Counter and Digital Counter 1 Set to Pre-Set operand has the value 1 (when a reset or reset/freeze command is sent to the Counter and Digital Counter 1 Set to Pre-Set operand has the value 0, the Counter will be set to 0).

RESET

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for setting the count, either 0 or the pre-set value depending on the state of the Counter 1 Set to Pre-set operand.

FREEZE/RESET

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for freezing (capturing) the accumulating count value into a separate register with the associated date and time of the operation while resetting the count to either 0 or the pre-set value depending on the state of the Counter 1 Set to Pre-set operand.

FREEZE/COUNT

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand for freezing (capturing) the accumulating count value into a separate register with the associated date and time of the operation while continuing counting. The present accumulated value and frozen (captured) value with the associated date/time stamp are available as STATUS values. If control power is interrupted, during the power-down operation, the accumulated and frozen (captured) values are saved into non-volatile memory.

HI OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EQL OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

LO OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled

Note:

The counter accumulated value can be reset to zero either by asserting an operand programmed under Reset from the counter menu, executing the clear Digital Counters command under the Records/Clear menu, or by setting the function of the counter to "Disabled".

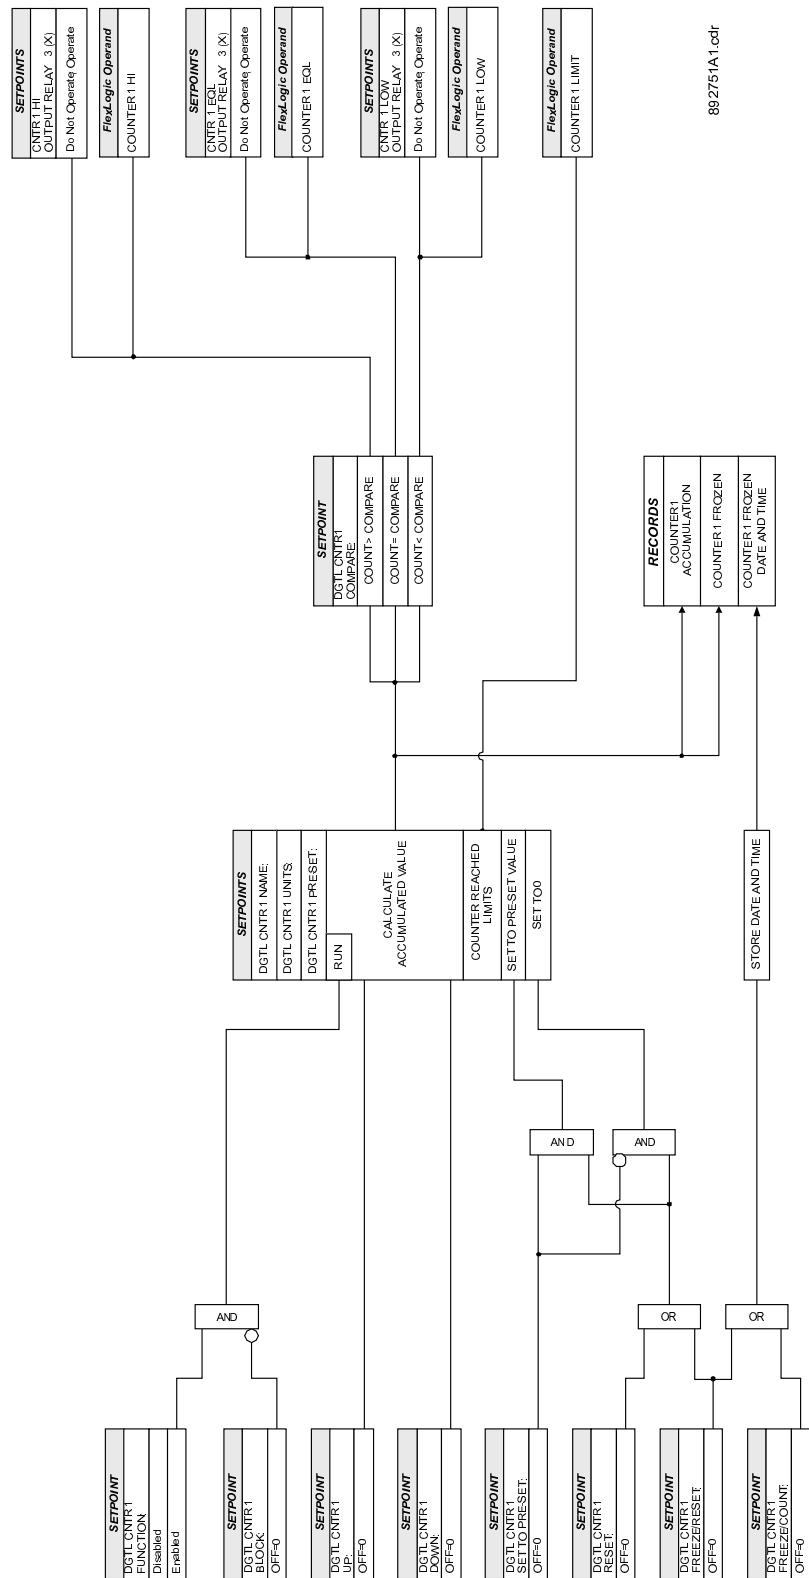


Figure 240: Digital Counter logic diagram

10.6 HARMONIC DETECTION

The Harmonic detection 1(6) element monitors the selected 2nd to 5th harmonic or Total Harmonics Distortion (THD), which is present in the phase currents. The relay provides six identical Harmonic Detection elements.

In a distribution network, harmonic detection can be used to monitor spurious harmonics from inverter based distributed energy resources, and take control actions such as islanding DERs or turning on harmonic filters. During transformer energization or motor starts, the inrush current present in phase currents can impact some sensitive elements, such as negative sequence overcurrent. Therefore, the ratio of the second harmonic to the fundamental magnitude per phase is monitored, while exceeding the settable pickup level, an operand is asserted, which can be used to block such sensitive elements.

During startup or shutdown of generator connected transformers, or following a load rejection, the transformer can experience an excessive ratio of volts to hertz, that is, become overexcited. Similarly, the ratio of the fifth harmonic to the fundamental magnitude can be monitored to detect the overexcitation condition.

Note:

The harmonics monitored in this element is calculated from the phase currents, unlike the second or fifth harmonic differential current used in the transformer differential element.

Note:

The harmonics are updated every protection pass. The THD is updated every three cycles, which is not recommended as a blocking signal.

Path: *Setpoints > Monitoring > Harmonic Detection > Harmonic Detection 1(X)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

SIGNAL INPUT (not used in 859)

Range: dependent upon the order code

Default: CT Bank 1–J1

HARMONIC

Range: 2nd, 3rd, 4th, 5th, THD

Default: 2nd

This setting selects the specified harmonic or THD to be monitored. The harmonic or THD is expressed in percent relative to the fundamental magnitude.

PICKUP

Range: 0.1 to 100.0% in steps of 0.1%

Default: 20.0%

PICKUP DELAY

Range: 0.000 to 60000.000 s in steps of 0.001 s

Default: 0.000 s

PHASES FOR OPERATION

Range: Any One, Any Two, All Three, Average

Default: Any One

This setting defines the phases required for operation, and the detail is explained below:

ANY ONE: At least one phase picked up.

ANY TWO: Two or more phases picked up.

ANY THREE: All three phases picked up.

AVERAGE: The average of three-phase harmonics or THDs picked up.

If set to *Average*, the relay calculates the average level of the selected harmonic and compares this level against the pickup setting. Averaging of the selected harmonic follows an adaptive algorithm depending on the fundamental current magnitude per-phase. If the fundamental magnitude on any of the three phases goes below the current cut-off level, the selected harmonic current from that phase is dropped (zeroed) from the equation for averaging, and the divider is decreased from 3 to 2. The same happens if the magnitude of the fundamental magnitude on one of remaining two phases drops below the cut-off level. In this case the selected harmonic on this phase is dropped from summation, and the divider is decreased to 1.

MIN OPER CURRENT

Range: 0.03 to 1.00 x CT in steps of 0.01

Default: 0.10 x CT

This setting sets the minimum value of current required to allow the Harmonic Detection element to operate.

If **PHASES FROM OPERATION** is set to *Average*, the average of three-phase currents is used for supervision. A similar adaptive average algorithm is applied to calculate the average of operation current magnitude.

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled

Default: Self-reset

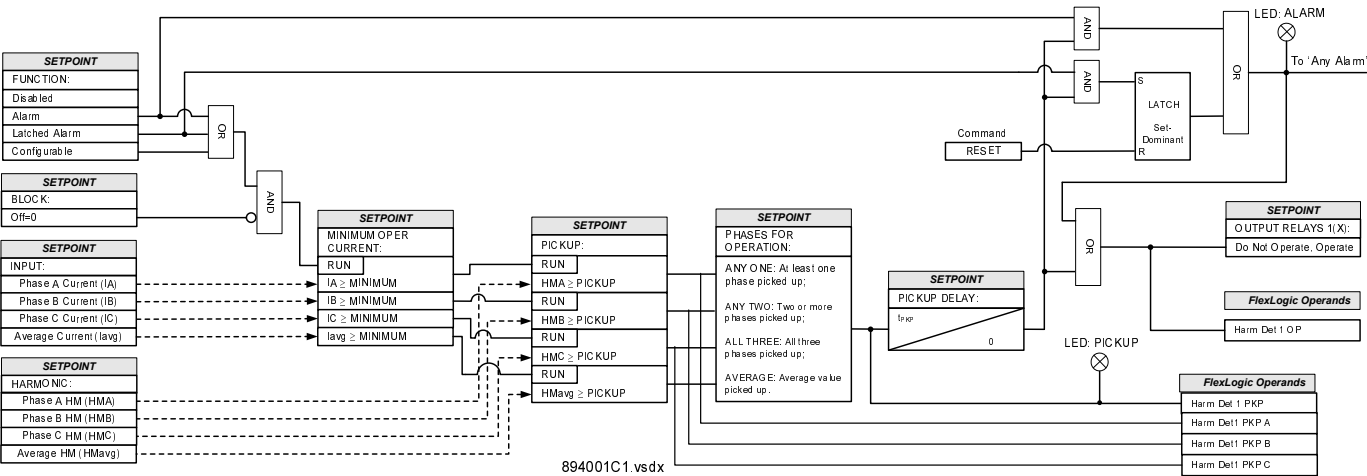


Figure 241: Harmonic Detection logic diagram

10.7 RTD TEMPERATURE

The Resistance Temperature Detector (RTD) wiring diagram is shown below:

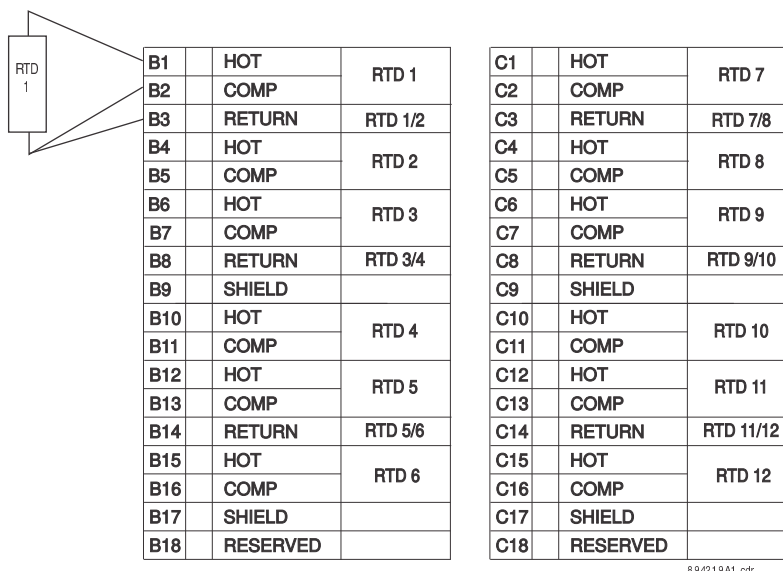


Figure 242: RTD Wiring diagram

Note:

To enhance the accuracy of the RTD, ensure all 3 cables are of the same length and gauge. In addition, the Compensation and Return wires must be connected on the RTD side and not on the relay side.

RTD Inputs

The relay has two methods of supporting RTD inputs.

- I/O cards installed in the relay can supply up to 13 RTDs.
- An optional CANBUS-based Remote Input/Output module (RMIO unit) can also be installed, which can monitor up to 12 additional RTDs (referred to as RRTDs). The RMIO unit supports 6, 9, or 12 RRTDs.

Hardware and software is provided to receive signals from external Resistance Temperature Detectors (RTDs) and convert these signals into a digital format for use as required. These channels are intended to be connected to any of the RTD types in common use.

Depending on the order code (Advanced Monitoring option selected), the relay is supplied with one combo card consisting of one RTD input, one Ohms input, four DCmA inputs and seven DCmA outputs. Additionally, the relay can be furnished with up to two optional RTD cards, each of them having 6 RTD input channels. Only slots B and C can accept the optional RTD cards.

Note:

If only one RTD card is ordered at the time the relay is ordered, this RTD card is always shown in slot B. The order code selection does not allow for an RTD card in slot C, if no RTD card is ordered in slot B.

Note:

An I/O card L ordered in Slot G will contain an additional RTD input on the card. It will be the highest RTD number shown (i.e. if 1 additional RTD card is used, then the low voltage I/O (LVIO) RTD will be RTD #7).

An alphanumeric name is assigned to each channel; this name is included in the channel actual values. It is also used to reference the channel as the input parameter to features designed to measure this type of parameter. Selecting the type of RTD connected to the channel configures the channel. The conversion chart is shown in the following table.

RTD Temperature vs. Resistance

TEMPERATURE		RESISTANCE (IN OHMS)			
°C	°F	100 Ω PT (IEC 60751)	120 Ω NI	100 Ω NI	10 Ω CU
-40	-40	84.27	92.76	77.30	7.49
-30	-22	88.22	99.41	82.84	7.88
-20	-4	92.16	106.15	88.45	8.26
-10	14	96.09	113.00	94.17	8.65
0	32	100.00	120.00	100.00	9.04
10	50	103.90	127.17	105.97	9.42
20	68	107.79	134.52	112.10	9.81
30	86	111.67	142.06	118.38	10.19
40	104	115.54	149.79	124.82	10.58
50	122	119.40	157.74	131.45	10.97
60	140	123.24	165.90	138.25	11.35
70	158	127.08	174.25	145.20	11.74
80	176	130.90	182.84	152.37	12.12
90	194	134.71	191.64	159.70	12.51
100	212	138.51	200.64	167.20	12.90
110	230	142.29	209.85	174.87	13.28
120	248	146.07	219.29	182.75	13.67
130	266	149.83	228.96	190.80	14.06
140	284	153.58	238.85	199.04	14.44
150	302	157.33	248.95	207.45	14.83
160	320	161.05	259.30	216.08	15.22
170	338	164.77	269.91	224.92	15.61
180	356	168.48	280.77	233.97	16.00
190	374	172.17	291.96	243.30	16.39
200	392	175.86	303.46	252.88	16.78
210	410	179.53	315.31	262.76	17.17
220	428	183.19	327.54	272.94	17.56
230	446	186.84	340.14	283.45	17.95
240	464	190.47	353.14	294.28	18.34
250	482	194.10	366.53	305.44	18.73

Note:

RTD type copper (Cu) is only available when order code option 'S' is chosen for Slot B or C.

RTD Protection

The relay can monitor up to 13 RTDs and 12 RRTDs, each of which can be configured to have a trip temperature and an alarm temperature. The RTD Temperature protection menu will be seen on the relay upon availability of RTD input/inputs. The RRTD Temperature protection setpoints can be seen only if the relay has the RMIO module installed and validated. The minimum RTD Temperature requirement is to set the setpoint **TYPE**. The default value for **TYPE**, for each RTD is *100 Ω Platinum*. The protection RTD Trip, and RTD Alarm from the menu are optional. They respond to directly measured RTD temperature. The Alarm temperature is set slightly above the normal measured temperature for the transformer top-oil, bottom-oil, or LTC oil. The Trip temperature is normally set at the maximum permissible oil temperatures defined as dangerous for the transformer and the transformer insulation.

This element also monitors the RTD broken connection and blocks the RTD trip and alarm functions if the RTD connection is detected as Open or Shorted and generates RTD Open and RTD Shorted FlexLogic operands. An RTD is detected as Open when the RTD connection is either open or the temperature is greater than 250°C. An RTD is detected as Shorted when the RTD connection is either shorted or the temperature is equal to less than -40°C.

Note:

The RTD input is active regardless of whether or not, the RTD Trip, or/and RTD Alarm functions are enabled.

Path: *Setpoints > RTD Temperature > RTD 1[X]*

Path: *Setpoints > RRTD Temperature > RRTD 1[X]*

TRIP FUNCTION

Range: Disabled, Trip, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

If a trip is not required from the RTD, select *Configurable*. This enables the RTD without producing a trip.

NAME

Range: Up to 13 alphanumeric characters

Default: RTD 1

TYPE

Range: 100 Ω Platinum, 100 Ω Nickel, 120 Ω Nickel, 10 Ω Copper

Default: 100 Ω Platinum

Selects the type of the RTD used.

TRIP TEMPERATURE

Range: 1°C to 250°C in steps of 1°C (33°F to 482°F in steps of 2°F)

Default: 155°C (311°F)

TRIP PICKUP DELAY

Range: 0 s to 600 s in steps of 1 s

Default: 2 s

TRIP DROPOUT DELAY

Range: 0 s to 600 s in steps of 1s

Default: 0 s

TRIP OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

ALARM FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

ALARM TEMPERATURE

Range: 1°C to 250°C in steps of 1°C (33°F to 482°F in steps of 2°F)

Default: 130°C (266°F)

ALARM PICKUP DELAY

Range: 0 s to 600 s in steps of 1 s

Default: 2 s

ALARM DROPOUT DELAY

Range: 0 s to 600 s in steps of 1 s

Default: 0 s

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS


Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

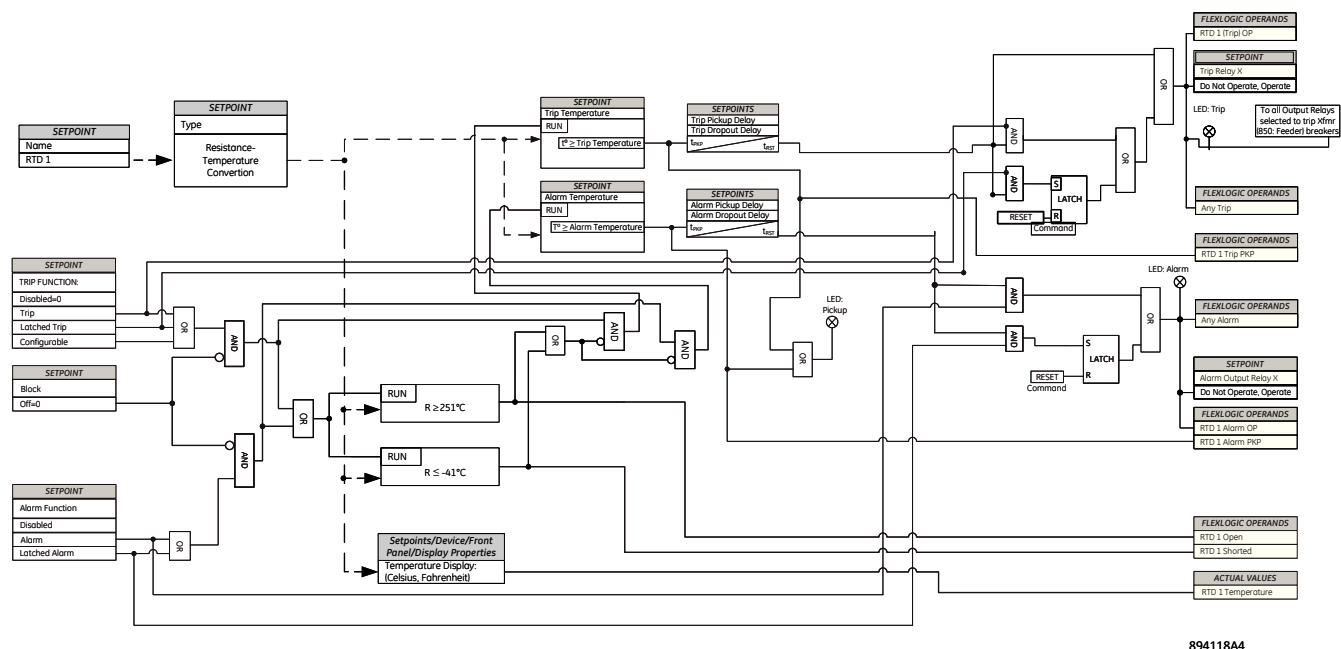

894118A4

Figure 243: RTD Protection logic diagram

10.8 RTD TROUBLE

When set to Alarm or Latched Alarm, this element monitors all the RTDs that are either programmed as Alarm or Trip or Configurable and generates an alarm if any of the RTDs are detected as Open or Shorted. Upon detection of an RTD Open or Shorted condition, the element also asserts the RTD Trouble PKP and RTD Trouble OP and operates the assigned output relay. Both RTDs and RRTDs can be monitored using this element.

Path: *Setpoints > Monitoring > RTD Trouble*

FUNCTION

Range: Disabled, Alarm, Latched Alarm

Default: Disabled

ALARM OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

EVENTS


Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

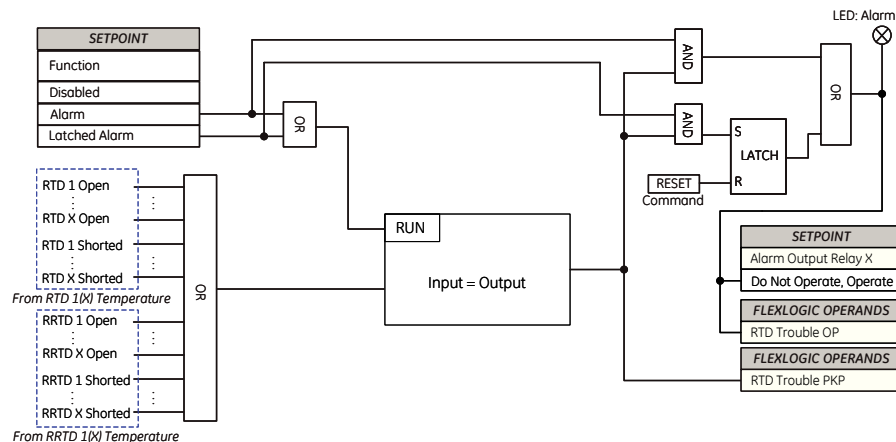

894178A2

Figure 244: RTD Trouble logic diagram

10.9 LOSS OF COMMUNICATIONS

This section covers the functionality of the Loss of Communications element.

The relay monitors activity on an interface via the configured protocol for this interface. The communications status is set for each protocol.

If communication is lost, the enabled interface will issue a *Loss of Comms* event and operate a combination of output relays/states.

Note:

The **MODBUS ACTIVITY TIMEOUT** specifies the minimum time without Modbus communication. This timeout is used to declare the Modbus 'Loss of Communication' state. The **MODBUS ACTIVITY TIMEOUT** must be set to a value other than 0 for the Loss of Communication monitoring to work properly.

Note:

MODBUS ACTIVITY TIMEOUT is set under: **Setpoints > Device > Communications > Modbus Protocol**

Path: **Setpoints > Monitoring > Loss of Comms**

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

INTERFACE

Range: Serial, Serial + Ethernet, Ethernet, All

Default: Serial

Only the protocols associated with the selected interface are shown in this screen as options. For example, if "Ethernet" is selected, select the Ethernet protocols to monitor. The Ethernet protocols selection is defined as EthernetProtocolBitmask bitmasks.

PICKUP DELAY

Range: 0 to 600 s in steps of 1

Default: 2 s

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Latched

Logic diagram

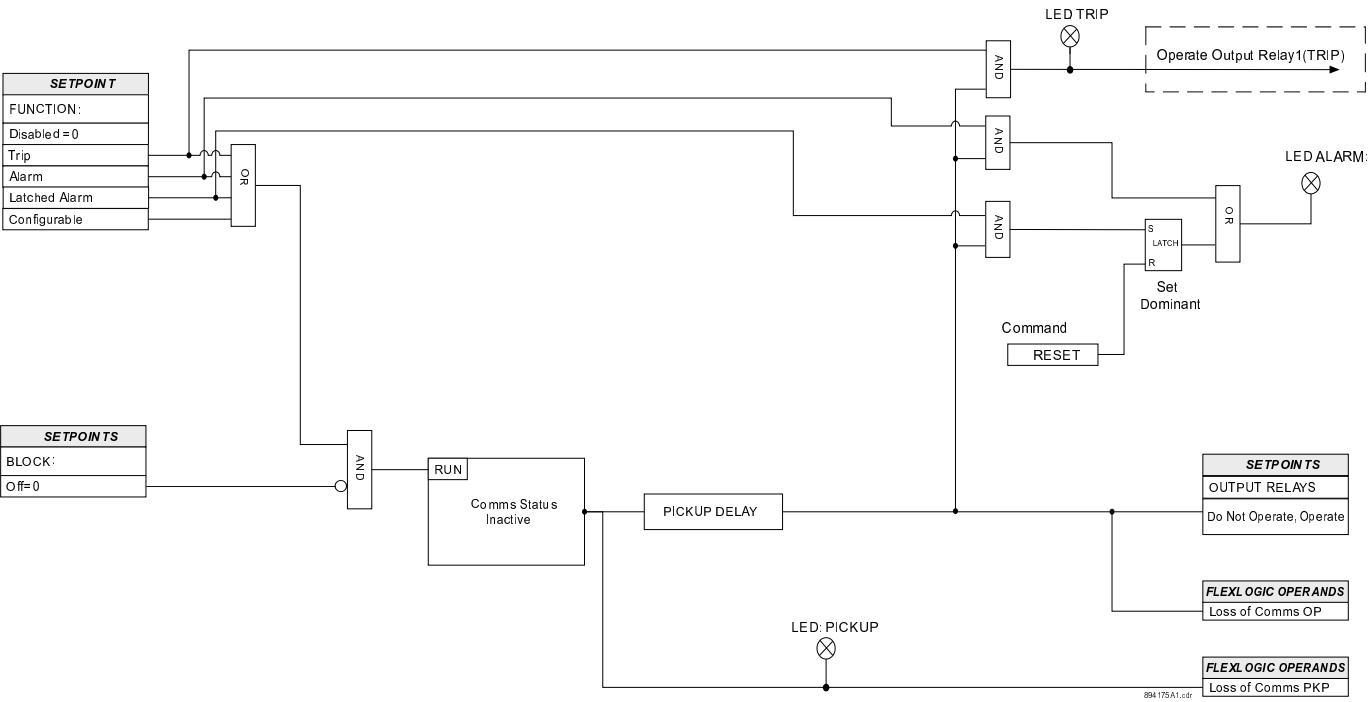


Figure 245: Loss of Communications logic diagram

CHAPTER 11

CONTROL

11.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	530
Control Overview	531
Setpoint Group	532
Local Control Mode	534
Breaker Control	544
Switch Control (89)	549
Virtual Input Control	553
Trip Bus	554
Breaker Failure (50BF)	557
Arc Flash Protection	563
Synchrocheck (25)	566
VT Fuse Failure (VTFF)	571
Digital Elements	574

11.2 CONTROL OVERVIEW

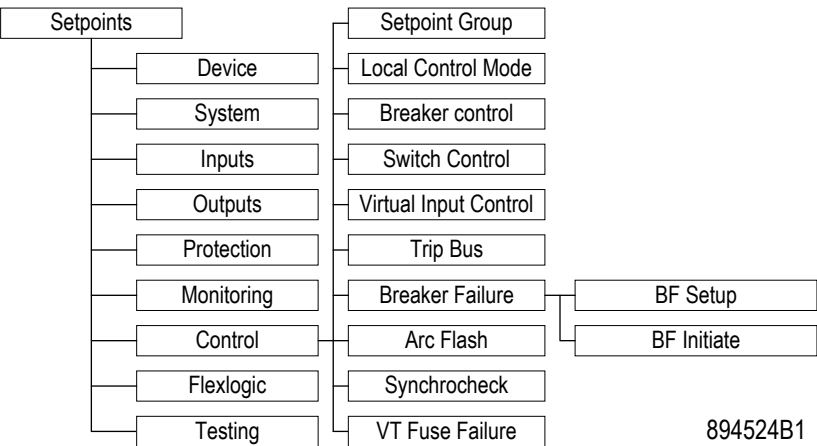


Figure 246: Control Display Hierarchy

11.3 SETPOINT GROUP

The relay provides six setpoint groups. All setpoints contained under the protection setpoints are reproduced in six groups, identified as Setpoint Groups 1, 2, 3, 4, 5 and 6. These multiple setpoints provide the capability for both automatic and manual switching to protection settings for different operating situations. Automatic (adaptive) protection setpoint adjustment is available to change settings when the power system configuration is altered.

Automatic group selection can be initiated from the autoreclose, **SETPOINT GROUPS** and by use of a **SET GROUP x ACTIVE** setpoint input. The group selection can be initiated by this input from any FlexLogic operands, inputs, pushbuttons or communications.

Group 1 is the default for the Active Group and is used unless another group is requested to become active. The active group can be selected with the **ACTIVE SETPOINT GROUP** setpoint, by **SET ACTIVE x GROUP** input or inputs from autoreclose, **SETPOINT GROUPS**. If there is a conflict in the selection of the active group, between a setpoint, inputs and inputs from functions, the higher numbered group is made active. For example, if the inputs for Group 2, 4, and 6 are all asserted the relay uses Group 6. If the logic input for Group 6 then becomes de-asserted, the relay uses Group 4. Some application conditions require that the relay does not change from the present active group. This prevention of a setpoint group change can be applied by setting Change Inhibit inputs (1 to 16). If needed, typically this change inhibit is done when any of the overcurrent (phase, neutral, ground, or negative sequence), overvoltage, bus or line undervoltage, or underfrequency elements are picked-up.

Path: Setpoints > Control > Setpoint Groups

ACTIVE SETPOINT GROUP

Range: 1,2,3,4,5,6

Default: 1

The **ACTIVE SETPOINT GROUP** setting is used for manual selection of the Active Setpoint Group.

SET GROUP 2 (3,4,5,6) ACTIVE

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand that initiates change of the **ACTIVE SETPOINT GROUP**.

GROUP CHANGE INHIBIT 1 (UP TO 16)

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand that inhibits change of the active setpoint group.

EVENTS

Range: Disabled, Enabled

Default: Enabled

Logic diagram

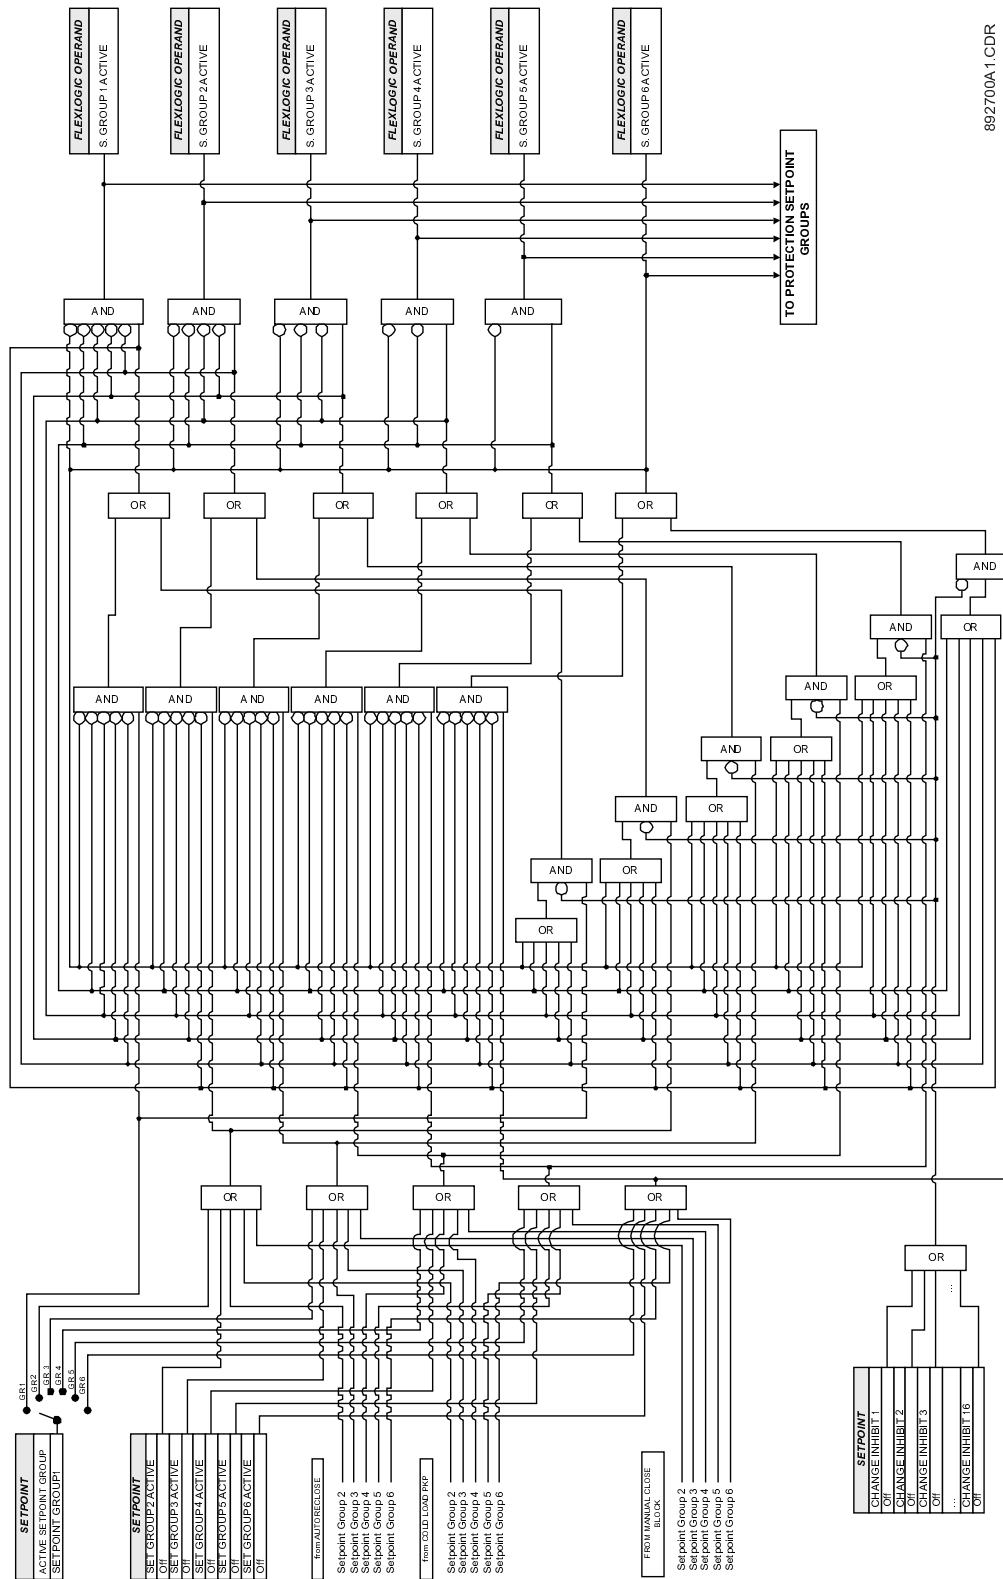


Figure 247: Setpoint Groups logic diagram

11.4 LOCAL CONTROL MODE

Local Mode

When the setpoint **LOCAL MODE** is enabled, Open and Close control of breakers and switches is performed using relay pushbuttons (PBs), or contact inputs from PBs installed in close proximity to the relay (such as on the relay panel, or in the relay cubicle).

The addition of contact inputs and other FlexLogic operands for closing and opening the breaker, or switch while in local mode provides the flexibility to use PBs mounted near the relay.

If contact inputs or other FlexLogic operands are used while the Select Before Operate (SBO) mechanism is enabled, the breaker or the switch shall first be selected using the relay PBs, and then opened or closed using the designated relay panel or cubicle PBs. (The **SELECT BEFORE OPERATE** setpoint is only available for relays supporting a single breaker.) If the SBO mechanism is disabled while the relay supports configurable single line diagrams (SLDs), only the breaker PBs either on the relay front panel or mounted nearby will work. The menu setpoints for local switch Open and Close are hidden and deactivated.

If the relay does not support configurable SLD, the setpoints for local switch Open and Close are omitted from the menu.

While in Local Mode, the letters LM are displayed on the relay display banner. In addition, an LED can be programmed to turn ON when the relay is set to Local Mode. By default the relay comes with one LED programmed to show Local Mode.

In Local Mode, control for the breakers and disconnect switches can be accessed from the relay front panel (PBs programmed for Open and Close) or by contact inputs for Open and Close from PBs installed near the relay. Hard coded SLD PBs are designated for Tag, Block and Bypass Block for each component upon selection. In this mode, the **LOCAL OPEN** and **LOCAL CLOSE** setpoints for Breaker Control or Switch Control (see the respective logic) are active.

The same Local Control Mode applies if Contactor is selected as a switching device.

Remote Mode

When Remote Mode is enabled, the switches are controlled (open/close) from any assigned FlexLogic operand, contact input, virtual input, virtual output, remote input, or via communication. The Control Mode menu is designed to switch the control for both breakers and switches to either Remote Mode (**LOCAL MODE** setpoint set to Off, or the selected Local Mode input de-asserted), or Local Mode (**LOCAL MODE** setpoint asserted).

Breaker Mode defaults

The default value of the breaker control mode with one breaker is *Remote* (**LOCAL MODE** set to Off or the selected Local Mode input de-asserted). In this mode, all programmed setpoints from the respective menus for Breaker Control and Switch Control are active. The same Remote Mode applies if a Contactor is selected as a switching device. The default value for relays with two breakers is *Local*.

Navigation

The 8 Series front panel provides navigation pushbuttons (PBs) which highlight the component (breaker or disconnect switch) from the single line diagram. The navigation PBs (Up/Down or Up/Down/Left/Right depending on relay front panel model), are used to browse through the Single Line Drawing (SLD) components. These PBs are used for SLD navigation only. The navigation starts with highlighting the first breaker, and then goes through all other components in sequence, until the last one (breaker or switch). Only the breakers and switches included in the SLD from the display will be browsed (navigated).

Select Before Operate

Once the breaker or the switch is highlighted in the SLD using the navigation PBs, the component must be selected before open or close action is performed. The selection of the component is performed by pressing "ENTER" key

from the front panel. A flash message `BKR # Selected`, or `Sw # Selected` appears on the screen to denote the selection. Once selected, the text from the first three tabs from the display corresponding to the PBs 1, 2, and 3 changes to **Tag**, **Block**, and **Bypass**. At this stage, the selected breaker or switch can be Opened or Closed using the programmed PBs, and Tagged/Blocked/Bypassed using the SLD PBs.

For PBs supporting one breaker only, the Local Control Mode menu includes the setpoint **SELECT BEFORE OPERATE**, which can be set to either Enabled or Disabled. When it is set to Disabled, tagging, blocking and block bypassing commands are disabled from both Local and Remote control. In this mode the breaker can be controlled directly by the programmed Open and Close PBs. The local control for the disconnect switches is suspended. In this mode they can only be controlled remotely, i.e. using pre-programmed contact inputs, virtual inputs, comms, or any selected FlexLogic operand for closing and opening commands. The remote block and block bypass flags are also suspended. With **SELECT BEFORE OPERATE** set to Disabled the relay behaves similar to some other legacy relays, where when in Local mode the breaker is directly controlled by pressing the Open and Close PBs without additional confirmation, and when in Remote mode the breaker is directly controlled by executing the remote open and close commands from the configured setpoints.

When the **SELECT BEFORE OPERATE** setpoint is set to Enabled, the navigation, the breaker or switch selection, as well as the blocking, bypassing and tagging are operational when in Local mode. When switched to Remote mode, the remote blocking and bypassing will also be operational.

Note:

*The selected component from SLD will be deselected if either the time programmed in setpoint **Bkr/Sw Select Timeout** expires, or the **ESCAPE** pushbutton is pressed. The **HOME** button will not de-select the selected object. To navigate to home page, the component must be first de-selected on the SLD page.*

The programmed PBs for breaker or switch Open and Close can be used only in local mode when an active object is selected in the SLD. The selected device can be opened or closed provided it is not blocked or tagged. If no operation is detected, the selection is removed, and the selected PB must be pressed again to enable the selection. The local mode breaker selection and operation is only active if the user has proper level security access.

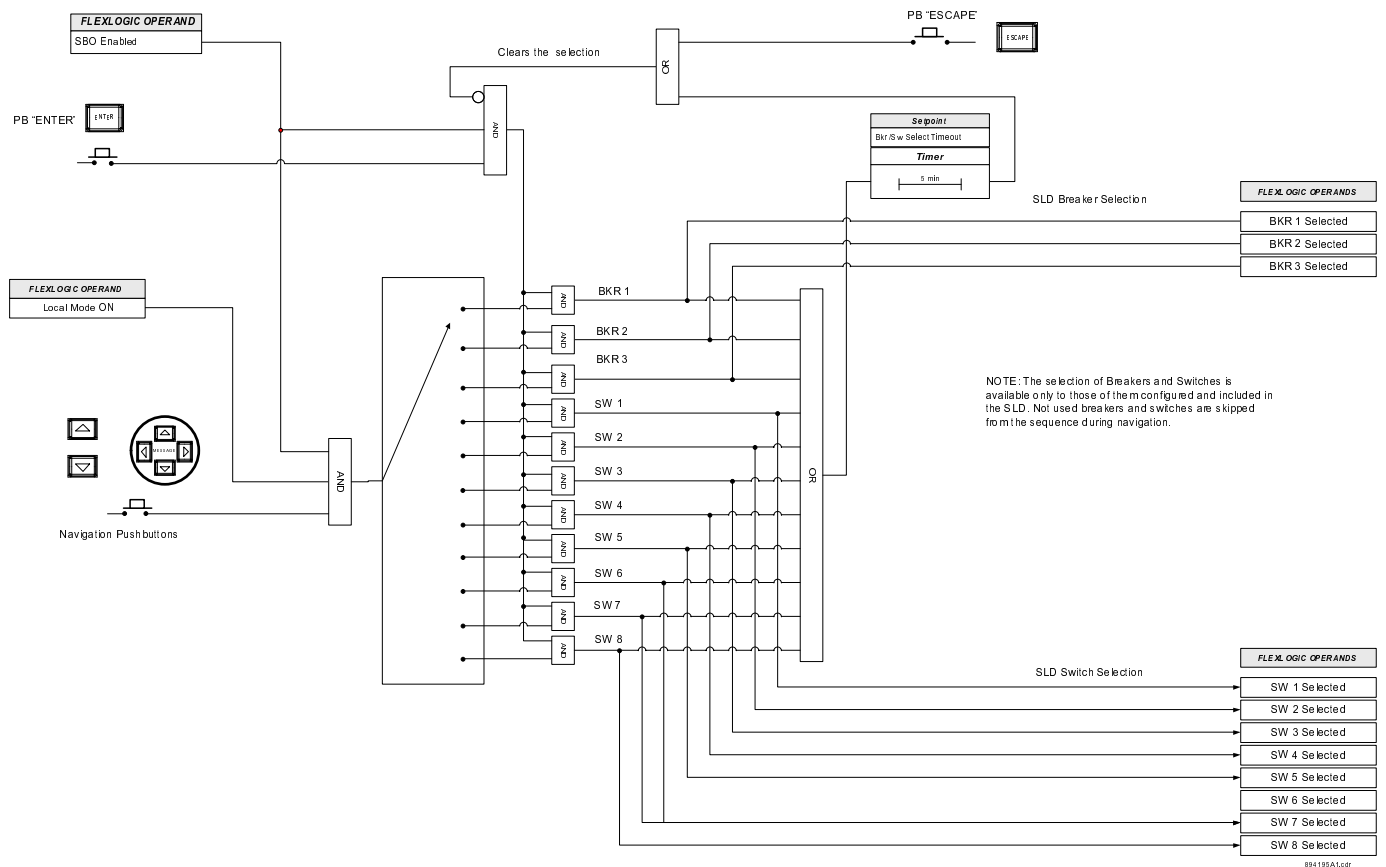


Figure 248: Navigation and SLD component selection

PB Block (Hard coded SLD Pushbutton)

Blocking of a breaker or switch can be used for inhibiting the close or open operation while in Local Mode. The selected breaker or disconnect switch can be blocked. If block was not applied to the selected component, pressing the **Block** PB will block either the Open or Close command depending on the existing state. When the block is active, the letter **B** appears in the SLD next to the controlled component

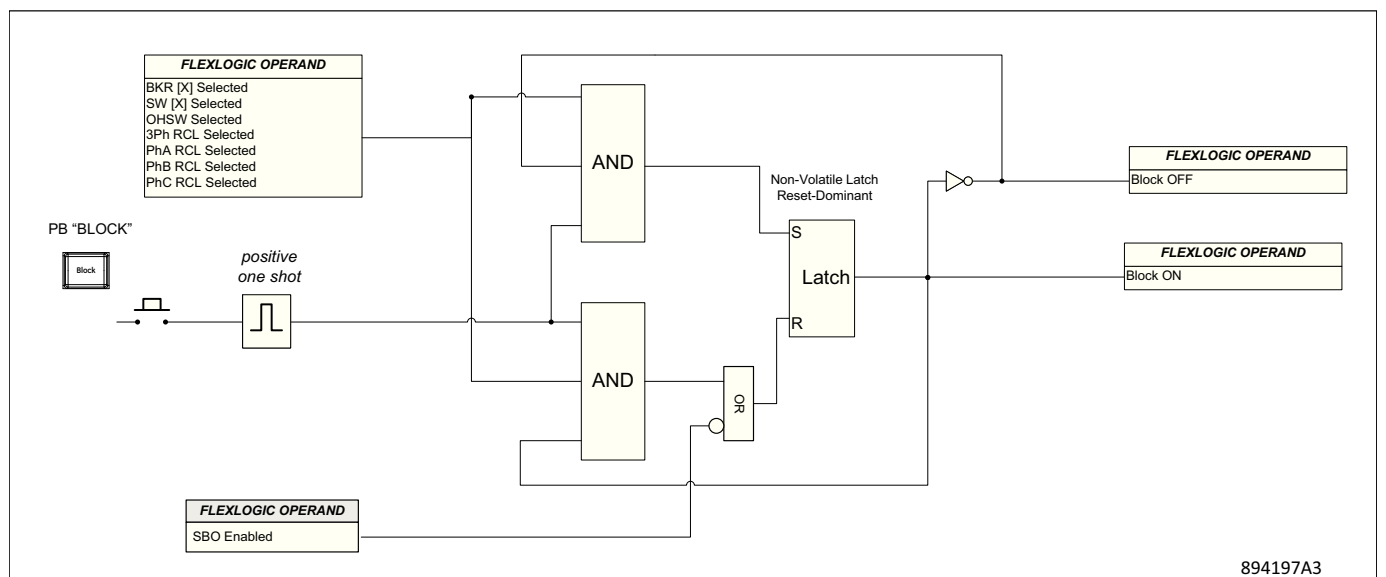


Figure 249: SLD Pushbutton Block logic diagram

PB Bypass (Hard coded SLD Pushbutton)

Blocking of the command can be bypassed using the SLD pushbutton **Bypass**. When pressed, the previously applied block is bypassed. For example if the block was applied when the Breaker/Switch was opened, pressing the PB **Bypass** will allow closing command. If the bypass is active for the selected breaker or switch, the letters **By** appear next to the symbol in the SLD.


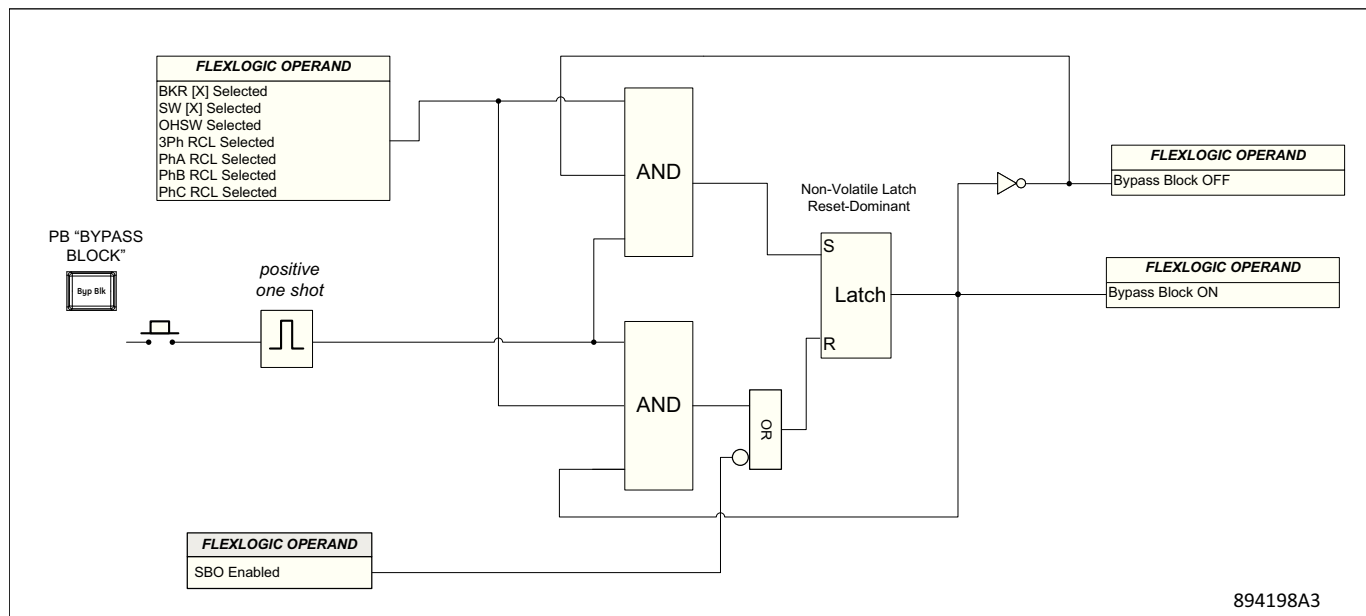


Figure 250: SLD Pushbutton Bypass Block logic diagram

PB Tag (Hard coded SLD pushbutton)

Lockout/Tagout is a practice and procedure to safeguard employees from unexpected energization or startup of machinery and equipment, or hazardous energy during service or maintenance activities. If a breaker or disconnect switch is tagged, the open and close controls are inhibited.

Both remote and local control commands are blocked if the tagged operand BKR# Tag ON, or SW# Tag ON is active for the selected particular breaker or switch respectively. The breaker or switch is tagged by pressing the SLD pushbutton **Tag**. If the selected switching device is tagged, a letter **T** appears under its symbol. Tagging can be achieved in local mode using the front panel control from the configurable SLD screens. The Pushbutton Tag logic diagram shows the tagging logic diagram for a switch. The logic applies to one breaker or switch at the time in the single line diagram.

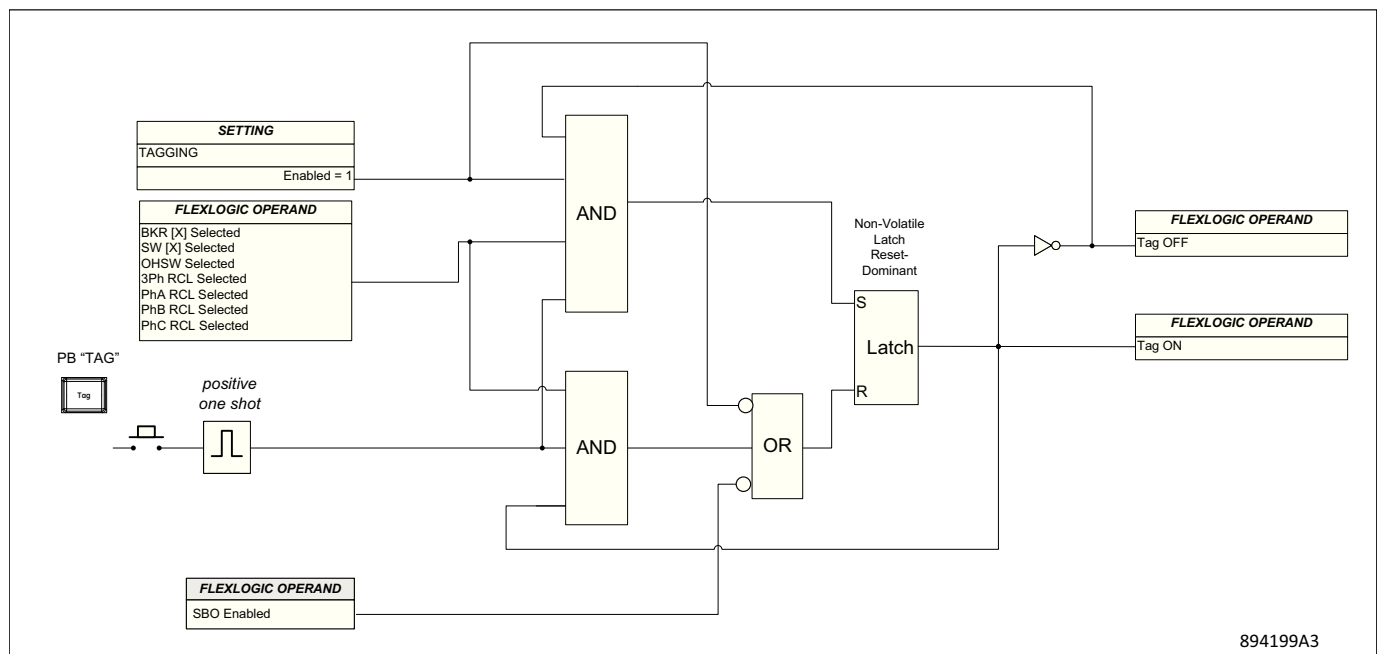

894199A3

Figure 251: Pushbutton Tag logic diagram**Note:**

The pushbuttons, Tag, Block and Bypass Block are used for both breakers and switches when selected in the SLD. Only one component at the time can be selected in the SLD.

Note:

Tagging, blocking, or bypassing block can be performed in Local Mode, and only when the component (breaker or switch) is selected in the SLD. The applied action of tagging, blocking or bypassing block is retained for this component after it's been deselected. To change the status of the applied action, the component need be reselected.

Note:

The Local Mode control allows programming of separate pair of PBs for Open and Close commands to breakers and for Open and Close commands to switches. If desired, one pair of pushbuttons can be programmed for Open and Close commands to both breakers (contactors) and switches.

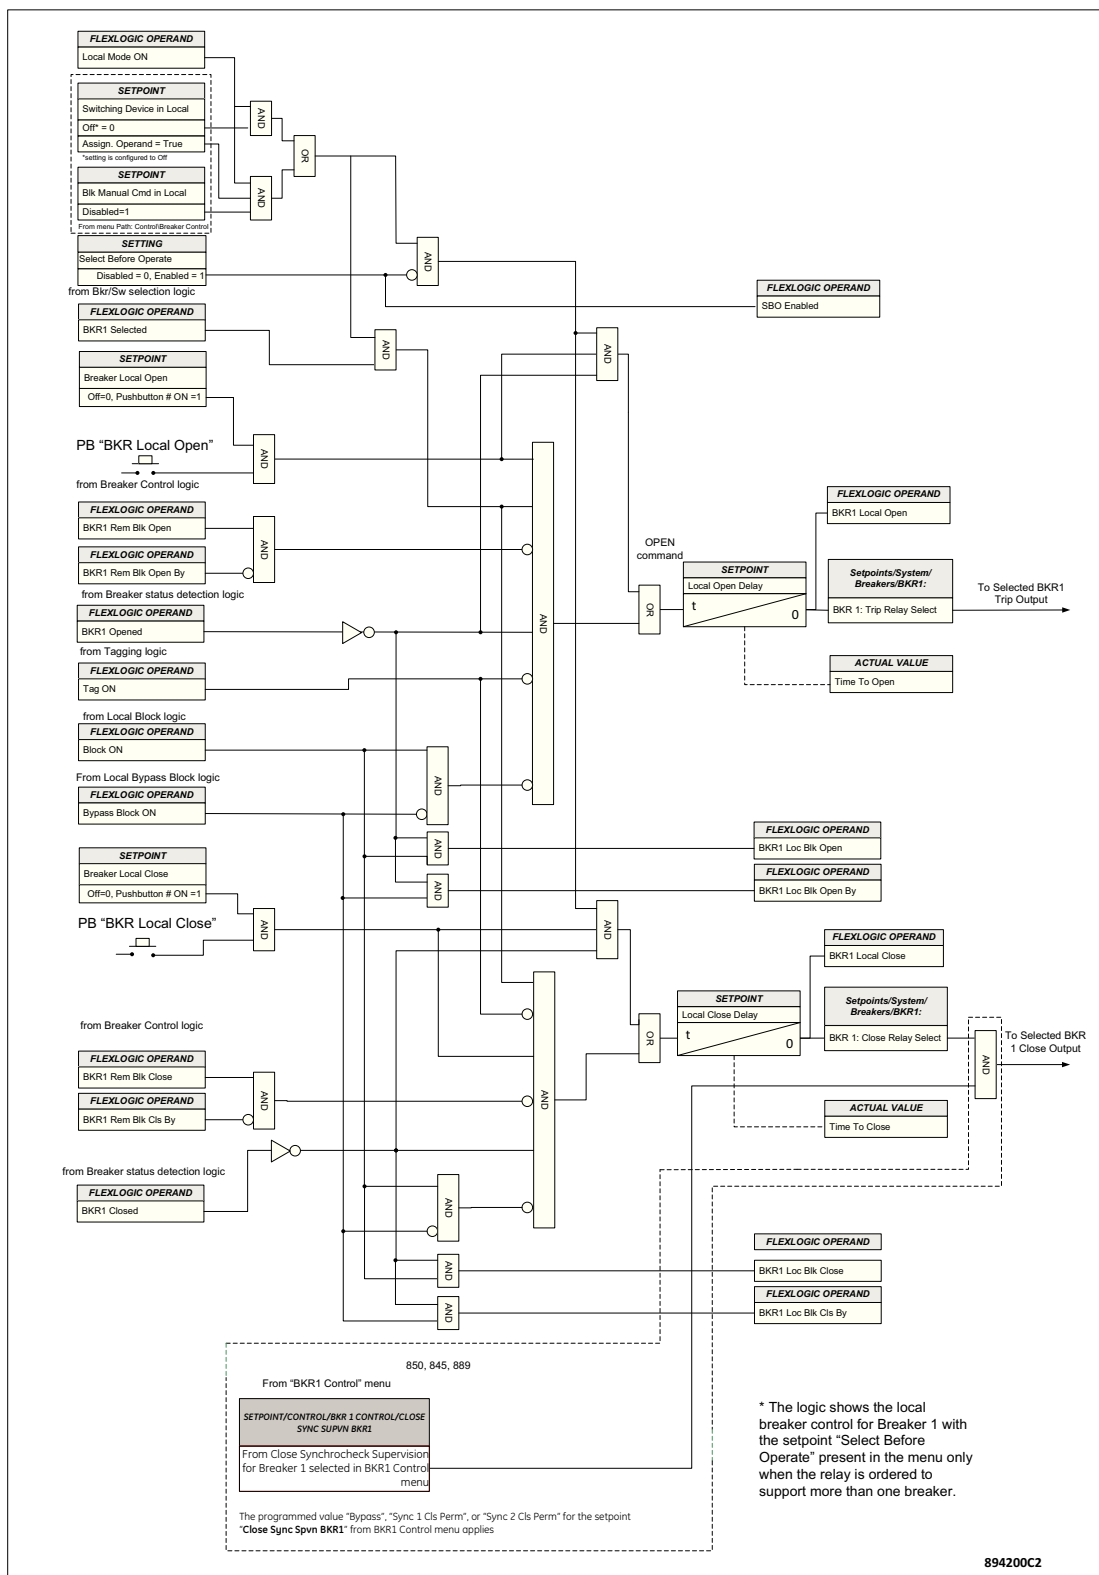


Figure 252: Local Control for breakers

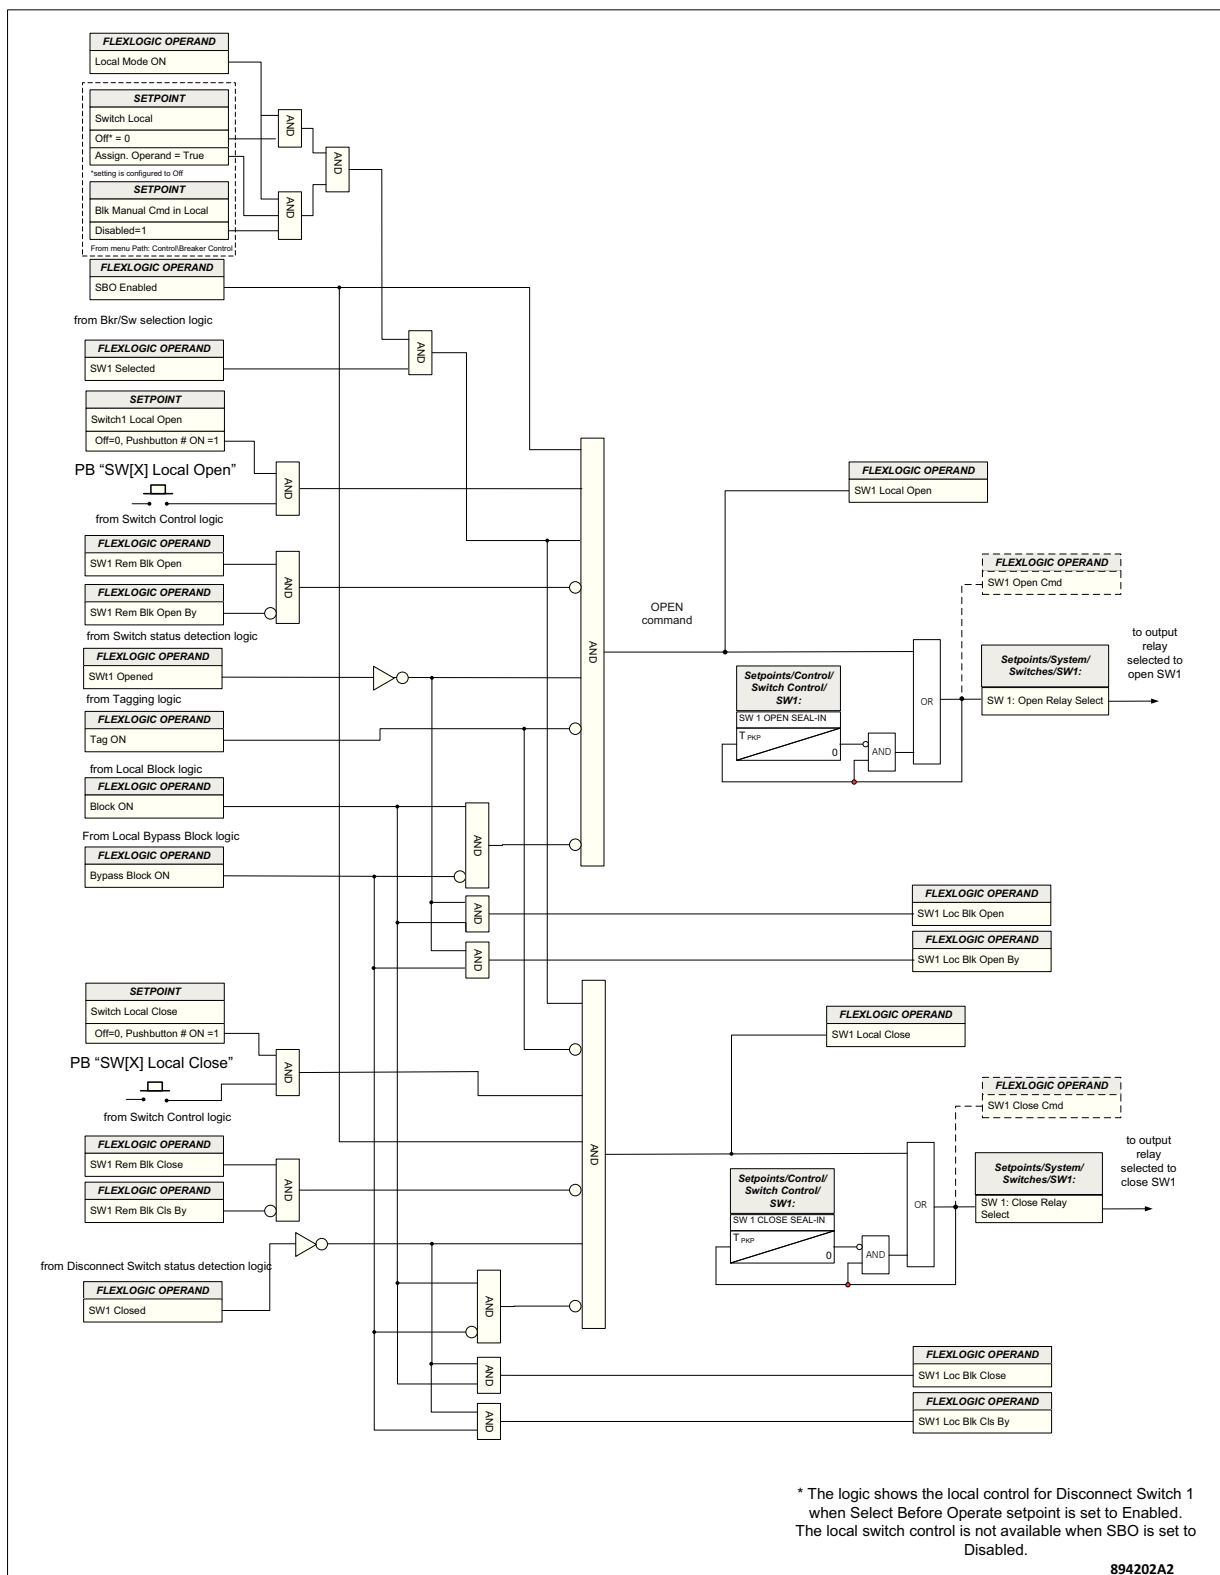


Figure 253: Local Control for Switches

Path: **Setpoints > Control > Local Control Mode**

For this path the HMI menus vary depending on the order code and the number of breakers selected.

Note:
For relays supporting single breaker control, the SW Local Open and SW Local Close setpoints appear in the menu only if the relay is ordered with Advanced SLD; and the **SELECT BEFORE OPERATE** setpoint is enabled. In all other cases, these setpoints are hidden and inactive.

SELECT BEFORE OPERATE

Range: Disabled, Enabled

Default: Disabled (in most cases, but dependent on order code)

This setpoint is included in the Local Control Mode menu only if the 8 Series relay supports one breaker. This setpoint is omitted for relays supporting more than one breaker.

When the Select Before Operate (SBO) is disabled, and Local Mode is set, the breaker control can be performed directly by pressing the corresponding front panel pushbuttons (or those mounted in close proximity to the relay). No component selection or additional confirmation is needed. The same applies when the breaker control is in Remote mode.

Note:
When SBO is disabled, all local and remote flags such as blocking, bypassing, and tagging are reset.

Setting the SBO to Enabled enables the navigation and the selection of a component from the SLD, so that the pushbuttons Open or Close from the front panel (or those mounted in close proximity to the relay) can be used in Local Mode only after the component is selected. All flags such as blocking, bypassing and tagging can be initiated during this mode. Blocking and bypassing can also be initiated remotely, when in Remote Mode.

LOCAL MODE

Range: Off, On, Any FlexLogic operand

Default: On or Pushbutton 5 Off

The **LOCAL MODE** setting places the relay in Local Mode. The relay is in Remote mode, if not forced into Local mode by this setpoint (i.e. **LOCAL MODE** is disabled, or the selected input de-asserted). When in Local Mode, both Breakers and Disconnect switches can be controlled using the faceplate pushbuttons and SLD pushbuttons.

Moreover, if the relay is ordered with IEC 61850, it can enter into local control when operand programmed to IEC Local Status (Path: Product Setup\Communication\General) becomes true.

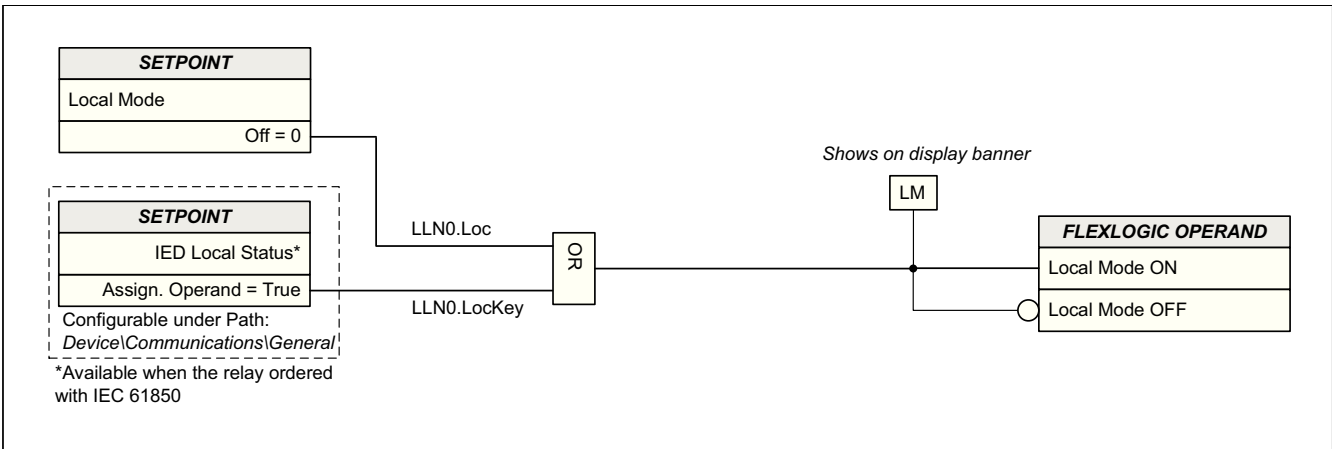


Figure 254: Local Mode On Logic

BKR /SW SELECT TIMEOUT

Range: 1 to 10 min in steps of 1 min

Default: 5 min

This setting specifies the available time for open/close commands, after a breaker or a disconnect switch has been selected in the single line diagram.

BKR(CONTACTOR) LOCAL OPEN

Range: Off, Any FlexLogic operand

Default: Pushbutton 1 ON

This setpoint is active, when Local Mode is activated. The breaker open command can be initiated by the selected configured pushbutton.

BKR(CONTACTOR) LOCAL CLOSE

Range: Off, Any FlexLogic operand

Default: Pushbutton 2 ON

This setpoint is active, when Local Mode is activated. The breaker close command can be initiated by the selected configured pushbutton.

Note:

When you close a selected breaker locally using a relay pushbutton, Synchrocheck supervision is used, as defined by the setting value configured for the setpoint **Close Sync Spvn BKR[X]** from the **BKR[X] Control** menu. For example, if you select the value **Sync 1 Cls Perm** in the **Close Sync Spvn BKR1** setpoint, initiation of the **BKR Local Close** command will not close BKR1 unless the Synchrocheck 1 permits closing by producing a Sync 1 Cls Perm signal

SW LOCAL OPEN

Range: Off, Any FlexLogic operand

Default: Pushbutton 1 ON

This setpoint is active, when Local Mode is activated. The switch open command can be initiated by the configured pushbutton. The setpoint appears in the Local Control Mode menu only when advanced SLD is selected when ordering the relay.

SW LOCAL CLOSE

Range: Off, Any FlexLogic operand

Default: Pushbutton 2 ON

This setpoint is active, when Local Mode is activated. The switch close command can be initiated by the programmed faceplate pushbutton. The setpoint appears in the Local Control Mode menu only when advanced SLD is selected when ordering the relay.

TAGGING

Range: Enabled, Disabled

Default: Enabled

When enabled, tagging control is enabled and the TAG key is displayed on the front panel interface. When a breaker or a switch is tagged both the local and remote control of the device is inhibited.

Note:

Tagging is applied only from the TAG key and is mostly used for maintenance purposes, and in general when either the open or close control must be inhibited. The tagging cannot be bypassed and can only be disabled (untagged) by pressing the TAG key again.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

11.5 BREAKER CONTROL

While the Local breaker control is generic as the same front panel pushbuttons are used for control of each selected breaker from the SLD, the remote breaker control requires programming of setpoints for each individual breaker. When the relay is in Remote mode (Local Mode set to Off, or the assigned operand de-asserted), the setpoint **REMOTE BLOCK OPEN** and **REMOTE BLOCK CLOSE** from the breaker menu can be used. These setpoints can be used to provide Interlocking to the breaker control by assigning appropriate operands. The control for each breaker can be programmed to have Bypass Remote Block Open and Bypass Remote Block Close inputs. These inputs can be programmed if temporary permission for open or close is required.

The remote breaker open and close controls, as well as the blocking and bypassing the block commands are executed as per the programmed setpoints from the Breaker Control menu.

Note:

The breaker flags **Remote Block Open**, **Remote Block Close**, **Bypass Rem Blk Open** and **Bypass Rem Blk Close** are inhibited, when the setpoint **SELECT BEFORE OPERATE** residing under Local Control Mode menu is disabled. The breaker remote open and close commands are operational.

Note:

An additional remote breaker status is available for HMI status only.

Path: *Setpoints > Control > Breaker Control > BKR1(X)*

REMOTE OPEN

Range: Off, Any FlexLogic operand

Default: Off

The setting specifies the input which, when asserted, initiates a Trip command to output relay selected to open the recloser. When the selected input is asserted, the Trip contact is energized and stays energized until the input drops off, the breaker opens, and the selected Trip seal-in time expires. This setpoint provides the flexibility to operate the Trip output relay by selecting an operand from the list of FlexLogic operands, contact inputs, virtual inputs, or remote inputs. For example the operand Trip Bus 1 Op can be selected to activate this output according to the Trip conditions configured under the Trip Bus 1 menu.

REMOTE CLOSE

Range: Off, Any FlexLogic operand

Default: Off

The setting specifies the input which, when asserted, initiates a Close command to the output relay selected to close the breaker. This setpoint provides flexibility to operate the output relay by selecting an operand from the list of FlexLogic operands.

REMOTE BLOCK OPEN

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the breaker from opening/tripping.

REMOTE BLOCK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the breaker from closing.

BYPASS REM BLK OPEN

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies selection of an input which when asserted bypasses the asserted remote block open signal. Open command is permitted for the breaker.

BYPASS REM BLK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies selection of an input which when asserted bypasses the asserted remote block close signal. Close command is permitted for the breaker.

CLOSE SYNC SPVN BKR

Range: Bypass, Sync 1 CIs Perm

Default: order code dependent (e.g. Bypass or Sync 1CIs Perm)

This setpoint selects whether or not the closing of the breaker is supervised by the synchrocheck function. For this purpose the Synchrocheck element must be enabled.

If the supervision is not bypassed and Close is applied for an application where the breaker is located on radial feeders, or the line is powered by one source only, the **DEAD SOURCE PERM** setpoint from the Synchrocheck menu shall not be disabled.

Note:

*The 845 relay has one three-phase voltage inputs, a single auxiliary voltage input, and one Synchrocheck element. It is strongly recommended to connect the relay voltage **inputs to three-phase** VTs and an Aux VT installed across a breaker on the same side of the transformer winding. With this condition in place, select Synchrocheck Close Permission only for that breaker. Do not select Synchrocheck Close Permission for the breakers on the other transformer windings.*

INTERLOCK OPEN

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Breaker Interlock status for "Open/Off" command from an IEC 61850 client. When the operand value is set (CBCILO1.EnaOpn.stVal: is set to false), the "Open/Off" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command.

INTERLOCK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Breaker Interlock status for "Close/On" command from an IEC 61850 client. When the operand value is set (CBCILO1.EnaCls.stVal: is set to false), the "Close/On" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command

BAY LEVEL 61850 AUTHORITY

Range: Off, Any FlexLogic operand

Default: Off

This selects an operand that indicates the Bay level authority status. The operand status is modeled in the IEC 61850 server using the respective breaker's CSWI Loc data object and the operand status is applied to the control authority table to determine the control authority for different levels. It is an Edge driven function.

STATION LEVEL 61850 AUTHORITY

Range: Off, Any FlexLogic operand

Default: Off

This selects an operand that indicates the Station level authority status. The operand status is modeled in the IEC 61850 server using the respective breaker's CSWI Loc data object and the operand status is applied to the control authority table to determine the control authority for different levels. It is an Edge driven function.

SWITCHING DEVICE IN LOCAL

Range: Off, Any FlexLogic operand

Default: Off

The selected operand indicates the Breaker control behavior from an IEC 61850 client. When the operand value is true, it indicates the Breaker is in Local mode and the remote commands from IEC 61850 client are blocked.

Note:

If this setting is not configured (i.e., remains Off), it is not applicable and not considered for enabling local mode. However, once an operand is assigned, local mode will be enabled only when the assigned operand becomes True, indicating that the switching device is in local mode.

BLK MANUAL CMD IN LOCAL

Range: Off, Any FlexLogic operand

Default: Off

When this setting is enabled, and the "Switching Device in Local" operand state is true (i.e. the Breaker is in Local mode and XCBR.Loc is True), manual commands originating from the front panel pushbuttons and graphical front panel are blocked. When disabled, manual commands originating from the relay are allowed even when the Breaker is in Local mode. This setting is available only if the order code includes IEC 61850.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

Logic diagram

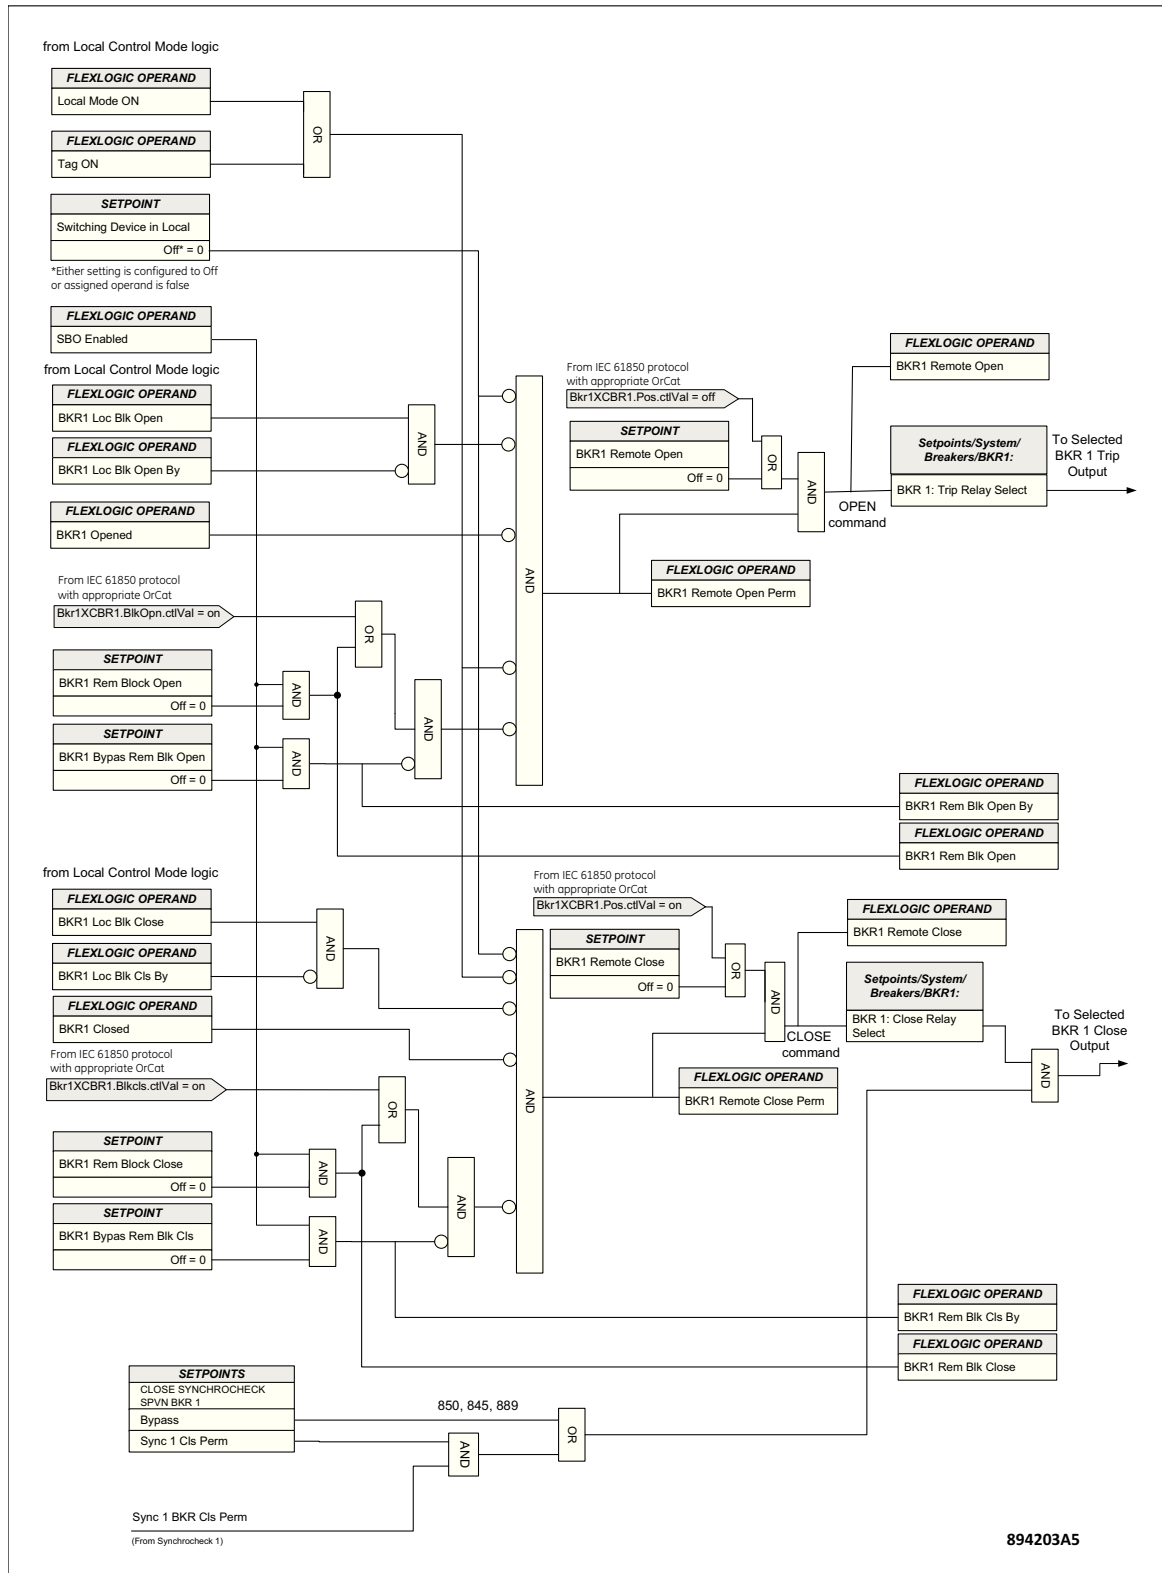


Figure 255: Breaker Control logic diagram

11.5.1 CONTROL AUTHORITY

This section describes the 61850 control authority feature implementation. Within the substation, control commands to the primary equipment, such as the breaker or the disconnect switch, can be originated from one of three levels – Bay, Station or Remote. The local/remote control feature (described in IEC61850 7-4: Annex B) allows users to enable or disable control authority from one or more of the three levels.

The table below shows the control authority applied in the 8 series.

	Switch	Bay control			Manual Control at D&I Platform (process) b	Non 61850 Bay Control (Front Panel PB, HMI)a	Command from			
							Bay	Station	NCC	
			Mode of switching authority for local control	Local Control Behavior			Control Authority At Station Level	OrCat		
		XCBR.Loc XSWI.Loc	LLN0.MltLev	CSWI.Loc			CSWI.LocSta	Local Ctl (Bay)	Station	Remote
Setting “Blk Manual Cmd in Local”	Setting "Switching Device in Local" c	Setting “Multilevel Control” = Enabled	Setting “Bay Level 61850 Authority” = 1 (ON)	Setting “Station Level 61850 Authority” = 1 (ON)						
Enabled	T	F	NA	NA	AA	NA	NA	NA	NA	
Disabled	T	F	NA	NA	AA	AA	NA	NA	NA	
NA	F	F	T	NA	AA	AA	AA	NA	NA	
NA	F	F	F	T	AA	AA	NA	AA	NA	
NA	T	F	F	F	AA	AA	NA	NA	AA	
Enabled	T	T	NA	NA	AA	NA	NA	NA	NA	
Disabled	T	T	NA	NA	AA	AA	NA	NA	NA	
	F	T	T	NA	AA	AA	AA	NA	NA	
	F	T	F	T	AA	AA	AA	AA	NA	
	F	T	F	F	AA	AA	AA	AA	AA	

Note:

If applicable, we strongly recommended connecting the relay voltage inputs to three-phase VTs and an Aux VT installed across a breaker on the same side of the transformer winding. With this condition in place, select the Synchrocheck Close Permission only for that breaker. Do not select the Synchrocheck Close Permission for the breakers on the other transformer windings.

11.6 SWITCH CONTROL (89)

The disconnect switch control provides local and remote opening and closing of the switches. The local control (Open, Close, Tag, Block, Bypass Block) is performed from the relay front panel pushbuttons when Local Mode is active, and the switch is selected from the displayed single line diagram. The remote switch open and close controls, as well as the blocking and bypassing the block commands are executed as per the programmed setpoints from the Switch Control menu. While the Local switch control is generic and the same front panel pushbuttons are used for every selected component from the SLD, the remote switch control requires programming of setpoints per each individual switch. These settings are defined in the menu of each individual switch control. When the relay is in Remote mode (Local Mode set to Off, or the assigned operand de-asserted), the setpoint **Remote Block Open** and **Remote Block Close** from the Switch Control menus can be used. These setpoints can be used to provide Interlocking to the switch control by assigning appropriate operands. The control for each disconnect switch can be programmed to have Bypass Remote Block Open and Bypass Remote Block Close inputs. These inputs can be programmed if temporary permission for open or close is required.

Note:

The switch **Remote Block Open**, **Remote Block Close**, **Bypass Remote Block Open** and **Bypass Remote Block Close** flags are inhibited, when the setpoint **Select Before Operate** residing under Local Control Mode menu is disabled. The remote open and close commands are still operational.

Path: *Setpoints > Control > Switch Control > SW 1(X) Control*

REMOTE OPEN

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies an input which when asserted initiates the open command to the switch. This setpoint is active only when the operand assigned for Local Mode is de-asserted, or Local Mode is set to "Off".

REMOTE CLOSE

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies an input which when asserted initiates the close command to the switch. This setpoint is active only when the operand assigned for Local Mode is de-asserted, or Local Mode is set to "Off".

OPEN SEAL-IN

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting specifies the seal-in time of the open commands due to an operator initiated manual or remote open command to the disconnect switch.

CLOSE SEAL-IN

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

This setting specifies the seal-in time of the open commands due to an operator initiated manual or remote close command to the disconnect switch.

Note:

To maintain the close/open command for a certain time, do so by either using the seal-in timers *Open Seal-In* and *Close Seal-In*, or the setpoint "Seal-in" from the output relays, or FlexLogic.

REMOTE BLOCK OPEN

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the disconnect switch from opening.

REMOTE BLOCK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

The assertion of the operand assigned to this setpoint prevents the disconnect switch from closing.

BYPASS REM BLK OPEN

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies the selection of an input which when asserted bypasses the block to the disconnect open control. The Open command is permitted.

BYPASS REM BLK CLOSE

Range: Off, Any FlexLogic operand

Default: Off

This setting specifies the selection of an input which when asserted bypasses the block to the disconnect close control. The Close command is permitted.

INTERLOCK OPEN (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Switch Interlock status for "Open/Off" command from an IEC 61850 client. When the operand value is set (**SWICILO1.EnaOpn.stVal: is set to false**), the "Open/Off" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command.

INTERLOCK CLOSE (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Set in the setup software or via SCL File. It selects an operand that indicates the Switch Interlock status for "Close/On" command from an IEC 61850 client. When the operand value is set (**SWICILO1.EnaCls.stVal: is set to false**), the "Close/On" command from the IEC 61850 Client is rejected, if the client set the interlock-check but in the "Check" parameter of the control command.

BAY LEVEL 61850 AUTHORITY (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Selects an operand, that indicates the Bay level authority status. The operand status is modelled in IEC61850 server using respective switch's CSWI Loc data object and the operand status is **applied to control authority table** (Table 1) to determine the control authority for different levels. It is Edge driven function.

STATION LEVEL 61850 AUTHORITY (not 869)

Range: Off, Any FlexLogic operand

Default: Off

Selects an operand, that indicates the Station level authority status. The operand status is modelled in IEC61850 server using respective switch's CSWI LocSta data object and the operand **status is applied to control authority** table (Table 1) to determine the control authority for different levels. It is Edge driven function.

SWITCH LOCAL (not 869)

Range: Off, Any FlexLogic operand

Default: Off

The selected operand indicates the Switch control behavior from an IEC 61850 client. When the operand value is true, it indicates the Switch is in Local mode and the remote commands from **IEC 61850 client are blocked**.

Note: If this setting is not configured (i.e., remains Off), it is not applicable and not considered for enabling local mode. However, once an operand is assigned, local mode will be enabled only when the assigned operand becomes True, indicating that the switching device is in local mode.

BLK MANUAL CMD IN LOCAL (not 869)

Range: Off, Any FlexLogic operand

Default: Off

When this setting is enabled, and the Switch Local operand state is true (i.e. the Switch is in Local mode and XSWI.Loc is True), manual commands originating from the front panel pushbuttons, **graphical front panel are blocked**. When disabled, manual commands originating from the relay are allowed even when the Switch is in Local mode. This setting is available only if the order code includes IEC 61850.

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset



11.7 VIRTUAL INPUT CONTROL

Path: *Setpoints > Control > Virtual Input Control*

FORCE VIRTUAL INPUT 1 (64)

Range: Off, On

Default: Off

The states of up to 64 Virtual Inputs are changed here. The current or selected status of the Virtual Input is also shown here. The status is a state OFF (logic 0) or ON (logic 1). If the corresponding Virtual Input selected under Setpoints/Inputs/Virtual Inputs is set to *Latched*, the ON command initiated from this menu stays on and the status of this Virtual Input is also on until the OFF command is received. If the Virtual Input type is *Self-Reset*, the command and status of this Virtual Input reverts to OFF after one evaluation of the FlexLogic equations.

11.8 TRIP BUS

Note:

Output Relays configured for Recloser operation are under the Trip Close Logic. Setpoints under Trip Bus are not applicable to the output relays set under Trip Close Logic.

The relay provides six identical Trip Bus elements. The Trip Bus element allows aggregating outputs of protection, control elements, inputs without using FlexLogic and assigning them in a simple and effective manner. Each Trip Bus can be assigned to trip, alarm or the other logic actions. Simple trip conditioning such as latch, delay, and seal-in delay are available.

Path: *Setpoints > Control > Trip Bus 1(X)*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

Output relay #1, "Trip", will operate only when the Trip or Latched Trip function is selected and the Trip Bus X operates. If Latched Trip function is selected, the output relay will be ON even after the input conditions are cleared until reset command is issued. The "ALARM" LED will not turn on if the Trip Bus X operates when set to Trip or Latched Trip.

When the Alarm function is selected and the Trip Bus X operates, the "ALARM" LED will flash and will self-reset when the operating conditions are cleared.

When the Latched Alarm function is selected, and the Trip Bus X operates, the "ALARM" LED will flash during the Trip Bus X operating condition, and will be lit steadily after the conditions are cleared. The "ALARM" LED can be cleared by issuing a Reset command.

The output relay #1, "Trip", will not operate if the Latched Alarm or Alarm setting is selected. The Output relay #1 can be configured to operate using the Trip Bus X output operands and the FlexLogic.

When the Configurable function is selected, neither the Trip output, nor the "ALARM" LED will turn on automatically. These must be configured using their own menus and FlexLogic operands.

INPUT 1 to 16

Range: Off, Any FlexLogic operand

Default: Off

These settings select a FlexLogic operand to be assigned as an input to the Trip Bus.

LATCHING

Range: Enabled, Disabled

Default: Disabled

The setting enables or disables latching of the Trip Bus output. This is typically used when lockout is required or user acknowledgement of the relay response is required.

When the NV Latch is enabled using this setting, the PKP operand remains latched after the input trip condition becomes false, and PKP Delay timer continues to run. The Trip Bus operates once the Pickup Delay timer elapses to zero. Both the PKP and OP signals, along with the assigned output relay, will remain latched until the operand configured under the Reset setting becomes true.

It is important to clarify that the NV Latch is distinct from the Trip/Alarm Latched functionality specified under setting Function. The NV Latch holds both PKP and OP signals, including the output relay, whereas Trip/Alarm

Latch is applicable only to output signals, specifically Trip Bus OP and the assigned output relay. The Trip/Alarm Latch resets upon the initiation of the Reset command via the Reset button located on the front panel or through Device\Resetting. However, the NV Latch has a specific resetting input configured under the RESET setting.

If both the Trip/Alarm Latched Function and NV Latching are not required simultaneously, either the Function setting should be configured to Trip/Alarm rather than Latched Trip/Alarm, or NV Latching should be disabled.

RESET

Range: Off, Any FlexLogic operand

Default: Off

The trip bus output is reset when the operand assigned to this setting is asserted.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Self-reset, Latched, Disabled


Default: Self-reset

Note:

The Any Trip operand must not be programmed as an input for the Trip Bus function.

Note:

When Trip Bus is programmed as Latched Trip, multiple resets are required to clear the trip

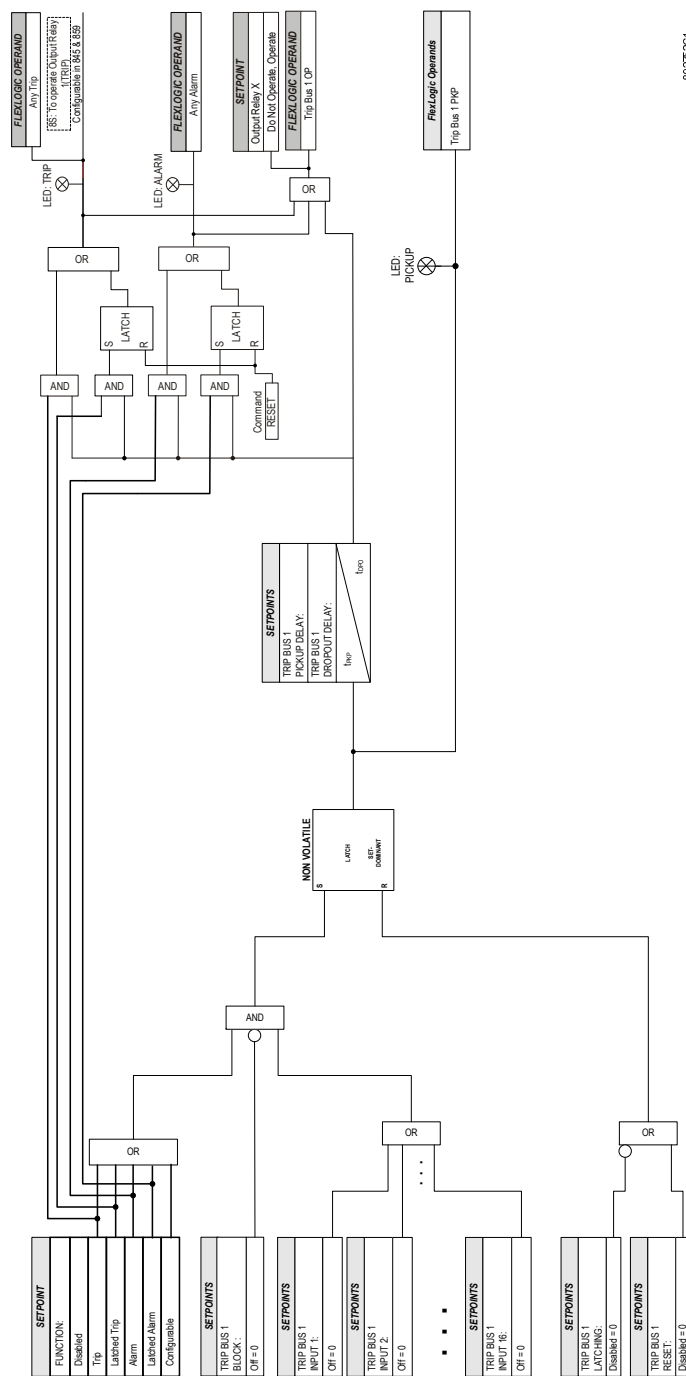

862752C1

Figure 257: Trip Bus logic diagram

11.9 BREAKER FAILURE (50BF)

The Breaker Failure element determines that a breaker signaled to Trip has not cleared a fault within a definite time. The Breaker Failure scheme must trip all breakers that can supply current to the faulted zone. Operation of a breaker Failure element causes clearing of a larger section of the power system than the initial Trip. Because Breaker Failure can result in tripping a large number of breakers and this can affect system safety and stability, a very high level of security is required.

The Breaker Failure function monitors phase and neutral currents and/or status of the breaker while the protection trip or external initiation command exists. If Breaker Failure is declared, the function operates the selected output relays, forces the autoreclose scheme to lockout and raises FlexLogic operands.

The operation of a Breaker Failure element consists of three stages: initiation, determination of a Breaker Failure condition, and outputs.

Initiation of a Breaker Failure

The protection signals initially sent to the breaker or external initiation (FlexLogic operand that initiates Breaker Failure) initiates the Breaker Failure scheme. The initiating signal should be sealed-in if primary fault detection can reset before the breaker failure timers have finished timing. The seal-in is supervised by current level, so it is reset when the fault is cleared. If required, an incomplete sequence seal-in reset can be implemented by using the initiating operand to initiate a FlexLogic timer, set longer than any breaker failure time, with the output operand selected to block the breaker failure scheme.

When the scheme is initiated, it sends a Trip signal after a pick-up delay, to the breaker initially signaled to Trip (this feature is usually described as re-trip). This reduces the possibility of widespread tripping that can result from a declaration of a failed breaker.

Determination of a Breaker Failure condition

The schemes determine a Breaker Failure condition supervised by one of the following:

- Current supervision only
- Breaker status only
- Both (current and breaker status)

Each type of supervision is equipped with a time delay, after which a failed breaker is declared and Trip signals are sent to all breakers required to clear the zone. The delays are associated with breaker failure timers 1, 2, and 3.

Timer 1 logic is supervised by current level only. If fault current is detected after the delay interval, an output is issued. The continued presence of current indicates that the breaker has failed to interrupt the circuit. This logic detects a breaker that opens mechanically but fails to interrupt fault current.

Timer 2 logic is supervised by both current supervision and breaker status. If the breaker is still closed (as indicated by the auxiliary contact) and fault current is detected after the delay interval, an output is issued.

Timer 3 logic is supervised by a breaker auxiliary contact only. There is no current level check in this logic as it is intended to detect low magnitude faults. External logic may be created to include control switch contact used to indicate that the breaker is in out-of-service mode, disabling this logic when the breaker is out-of-service for maintenance.

Timer 1 and 2 logic provide two levels of current supervision - high-set and low-set - that allow the supervision level to change (for example: from a current which flows before a breaker inserts an opening resistor into the faulted circuit to a lower level after resistor insertion). The high-set detector is enabled after the timeout of timer 1 or 2, along with a timer low-set delay that enables the low-set detector after its delay interval. The delay interval between high-set and low-set is the expected breaker opening time. Both current detectors provide a fast operating time for currents at small multiples of the Pickup value. The overcurrent detectors are required to operate after the Breaker Failure delay interval to eliminate the need for very fast resetting overcurrent detectors.

Outputs

The outputs from the schemes are:

- Re-trip of the protected breaker
- FlexLogic operand that reports on the operation of the portion of the scheme where high-set or low-set current supervision is used
- FlexLogic operand that reports on the operation of the portion of the scheme where 52b status supervision is used only
- FlexLogic operand that initiates tripping required to clear the faulted zone. The Breaker Failure output can be sealed-in for an adjustable period
- Target message indicating a failed breaker has been declared.

11.9.1 BREAKER FAILURE SETUP

Path: **Setpoints > Control > Breaker Failure > BF1(X) > BF1(X) Setup**

FUNCTION

Range (3.xx): Disabled, Retrip, Alarm, Latched Alarm, Configurable

Range (4.10): Disabled, Retrip, Latched Retrip, Alarm, Latched Alarm, Configurable

Default: Disabled

When a *Retrip* function is selected and Breaker Failure is initiated (with re-trip current supervision), the output relay Trip operates but the alarm LED does not turn on.

SIGNAL INPUT (not used in 859)

Range: dependent upon the order code

Default: CT Bank 1-J1

USE SEAL-IN

Range: Yes, No

Default: Yes

If set to *Yes*, the element will only be initiated if current flowing through the breaker is above the supervision pickup level.

PH RETRIP SUPERV PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the phase current Retrip level, which when exceeded after Breaker Failure initiation, will re-trip its own breaker. The setting is set to detect the lowest expected fault current on the protected circuit.

NTRL RETRIP SUPERV PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

This setpoint specifies the neutral current Retrip level, which when exceeded after Breaker Failure initiation, will Retrip its own breaker. The setting detects the lowest expected fault current on the protected circuit. Neutral Retrip current supervision is used to provide increased sensitivity.

RETRIP PICKUP DELAY

Range: 00.000 to 6000.000 s in steps of 0.001 s

Default: 0.033 s

This setting specifies a pickup delay for the re-trip command. This delay should be set longer than the possible spurious contact input activation duration due to transients or temporary dc grounds by taking the contact input de-bounce time into account. This will avoid re-trip operation for such transients.

SUPERVISION

Range: Current, 52b & Current, 52b

Default: Current

The setpoint specifies the type of supervision of the Breaker Failure element. There are three options: current only, breaker status only, or both.

BREAKER CLOSED

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand (auxiliary switch contact) to indicate that the circuit breaker is closed.

T1 PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.120 s

The setting provides a delay for Timer 1 logic which is supervised with current supervision only. The timer is set to the expected opening time of the circuit breaker, plus a safety margin intended to overcome the relay measurement and timing errors as well as relay processing time and current supervision reset time. In a microprocessor relay this time is not significant. The current magnitude ramps-down to zero in $\frac{3}{4}$ of a power cycle after the current is interrupted.

Note:

In bulk oil circuit breakers, the interrupting time for currents less than 25% of the interrupting rating can be significantly longer than the normal interrupting time.

T2 PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.120 s

The setting provides a delay for Timer 2 logic which is supervised with current supervision and breaker status (52b indication). The timer is set to the expected opening time of the circuit breaker, plus a safety margin intended to overcome the relay measurement and timing errors, relay processing time, current supervision reset time, and the time required for the breaker auxiliary contact to open.

T3 PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.120 s

The setting provides a delay for Timer 3 logic which is supervised with breaker status only (52b indication). The timer is set to the expected opening time of the circuit breaker, plus a safety margin intended to overcome the relay timing errors, and the time required for the breaker auxiliary contact to open.

PHASE HIGHSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the phase current output supervision level. The setting detects the lowest expected fault current on the protected circuit.

NEUTRAL HIGHSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the neutral current output supervision level. The setting detects the lowest expected fault current on the protected circuit. Neutral current supervision is used to provide increased sensitivity.

LOWSET DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000 s

The setting provides the lowest current supervision Pickup. The setting is used in applications where a change in supervision current level is required (for example: breakers with opening resistors).

The lowest delay (interval between high-set and low-set) is the expected breaker opening time.

PHASE LOWSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the phase current output supervision level. The setting detects the lowest expected fault current on the protected circuit where significant change in current level is expected (for example: breakers with opening resistors).

NEUTRAL LOWSET PICKUP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

The setpoint specifies the neutral current output supervision level. The setting detects the lowest expected fault current on the protected circuit where significant change in current level is expected (for example: breakers with opening resistors). Neutral current supervision is used to provide increased sensitivity.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.100 s

The setting is used to set the period of time for which the Breaker Fail output is sealed-in. This timer must be coordinated with the automatic reclosing scheme of the failed breaker, to which the Breaker Failure element sends a cancel reclosure signal. Reclosure of a remote breaker can also be prevented by holding a transfer Trip signal on for longer than the reclaim time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

11.9.2 INITIATE

Path: Setpoints > Control > Breaker Failure 1(X) > BF1(X) Initiate

EXTERNAL INITIATE

Range: Off, Any FlexLogic operand

Default: Off

The setpoint selects the FlexLogic operand that initiates the Breaker Failure scheme; typically the trip signals from external devices.

Note:

The trip signals from internal protection functions may be used with the help of FlexLogic, but for easier setting the Breaker Failure function is provided with a BF1 INITIATE submenu.

INITIATE IN1(15)

Range: Off, Any FlexLogic operand

Default: Ph TOC 1 OP

The setpoint selects the FlexLogic operand that initiates the Breaker Failure scheme; typically the trip signals from internal protection functions.

Logic diagram



11.10 ARC FLASH PROTECTION

The Arc Flash Protection module supports fast and secure protection against an arc flash event for a safe working environment. The relay provides two Arc Flash protection elements (AF1 and AF2). Each element can utilize up to four arc flash sensor inputs. The relay supports two different arc flash sensor types, point and loop. Arc Flash protection uses up to eight light detection fiber sensors and a dedicated high-speed instantaneous overcurrent element with secure Finite Response Filtering.

Light from the light sensor AND logic with high-speed overcurrent ensures fast and secure operation. Further enhancement includes continuous monitoring of individual light sensors with self-test trouble indication. Eight Arc Flash elements with self-test from the individual light sensors can be used to design flexible Arc Flash protection schemes for different configurations depending upon the physical locations of the sensors. Each individual element can also provide a higher level of redundancy/reliability of the system.

In case any issues with the sensors are detected (i.e. failure of a self-test), the corresponding light sensor trouble operand (Light Sensor # Trouble) is asserted. Very fast detection of the Arc flash light event is also possible using Light as the only detection parameter for alarm purposes. In addition, customized logic can be designed using individual AF1 Light # PKP and Arc Flash 1 S# OP operands from different light sensors in the FlexLogic engine.

Note:

When using arc flash protection, the critical failure relay must be connected to annunciate the status of the device.

Path: *Setpoints > Control > Arc Flash > Arc Flash 1*

FUNCTION

Range: Disabled, Trip, Alarm, Latched Alarm, Configurable

Note: Relays with firmware version 4 and later have a Latched Trip option

Default: Disabled

The selection of Trip, Alarm, Latched Alarm or Configurable setting enables the HS Phase/Ground IOC function.

SIGNAL INPUT

Range: dependent upon the order code

Default: CT Bank 1 - J1

This setting provides the selections for the current input bank. The default bank names can be changed in:

Setpoints > System > Current Sensing > [Name] > CT Bank Name.

HS PHASE PKP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 2.000 x CT

HS GROUND PKP

Range: 0.050 to 30.000 x CT in steps of 0.001 x CT

Default: 1.000 x CT

Note:

The value of HS Gnd PICKUP can be set to a very high value, when only the HS Phs element needs to be applied for Arc Flash detection.

Note:

The HS Ground PKP setting is not available if the order code is selected to have just one sensitive ground current input on the J1-Bank (4-0B in the order code).

LIGHT SENSOR 1(4)

Range: Disabled, Enabled

Default: Disabled

Light Sensor 1 (4) is the setting used to enable/disable a specific light sensor. It is important to disable each unused light sensors, even if nothing is connected to it. If not, the Light Sensor 1 (8) Trouble operands and Light Sensor Trouble operand will engage for the unused sensors..

Note:

No light settings are needed due to the automatic threshold capabilities included in the relay, described in the next section.

SEAL-IN TIME

Range: 0.00 to 10.00 s in steps of 0.01 s

Default: 0.00 s

This setting specifies length of time to extend the Arc Flash S1(4) OP and Arc Flash OP operands by a time beyond which any of the light sensors AND any of the HS current elements are picked up. The recommended time is the expected breaker operating time plus some margin, typically 30%.

Note:

The Arc Flash OP operand is typically much shorter than the actual breaker operating time; hence there is a risk that the relay trip contact could attempt to open the DC trip circuit long before the breaker auxiliary contacts open the DC trip circuit, which could damage the relay trip contact. Hence the need for this seal-in delay: during an actual arc flash event, the light pulse can be as short as 20msec. The arc flash logic of the relay extends the arc flashlight operands by 20msec of a cycle for added dependability, however this is still much shorter than the expected breaker operating time. With the Seal-in Time setting, the Arc Flash OP operand can be coordinated with expected HS current operating time, which is very similar to the breaker trip time.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Disabled, Enabled

Default: Enabled

This setting enables or disables the events of the Arc Flash function.

TARGETS

Range: Self-reset, Latched, Disabled

Default: Latched

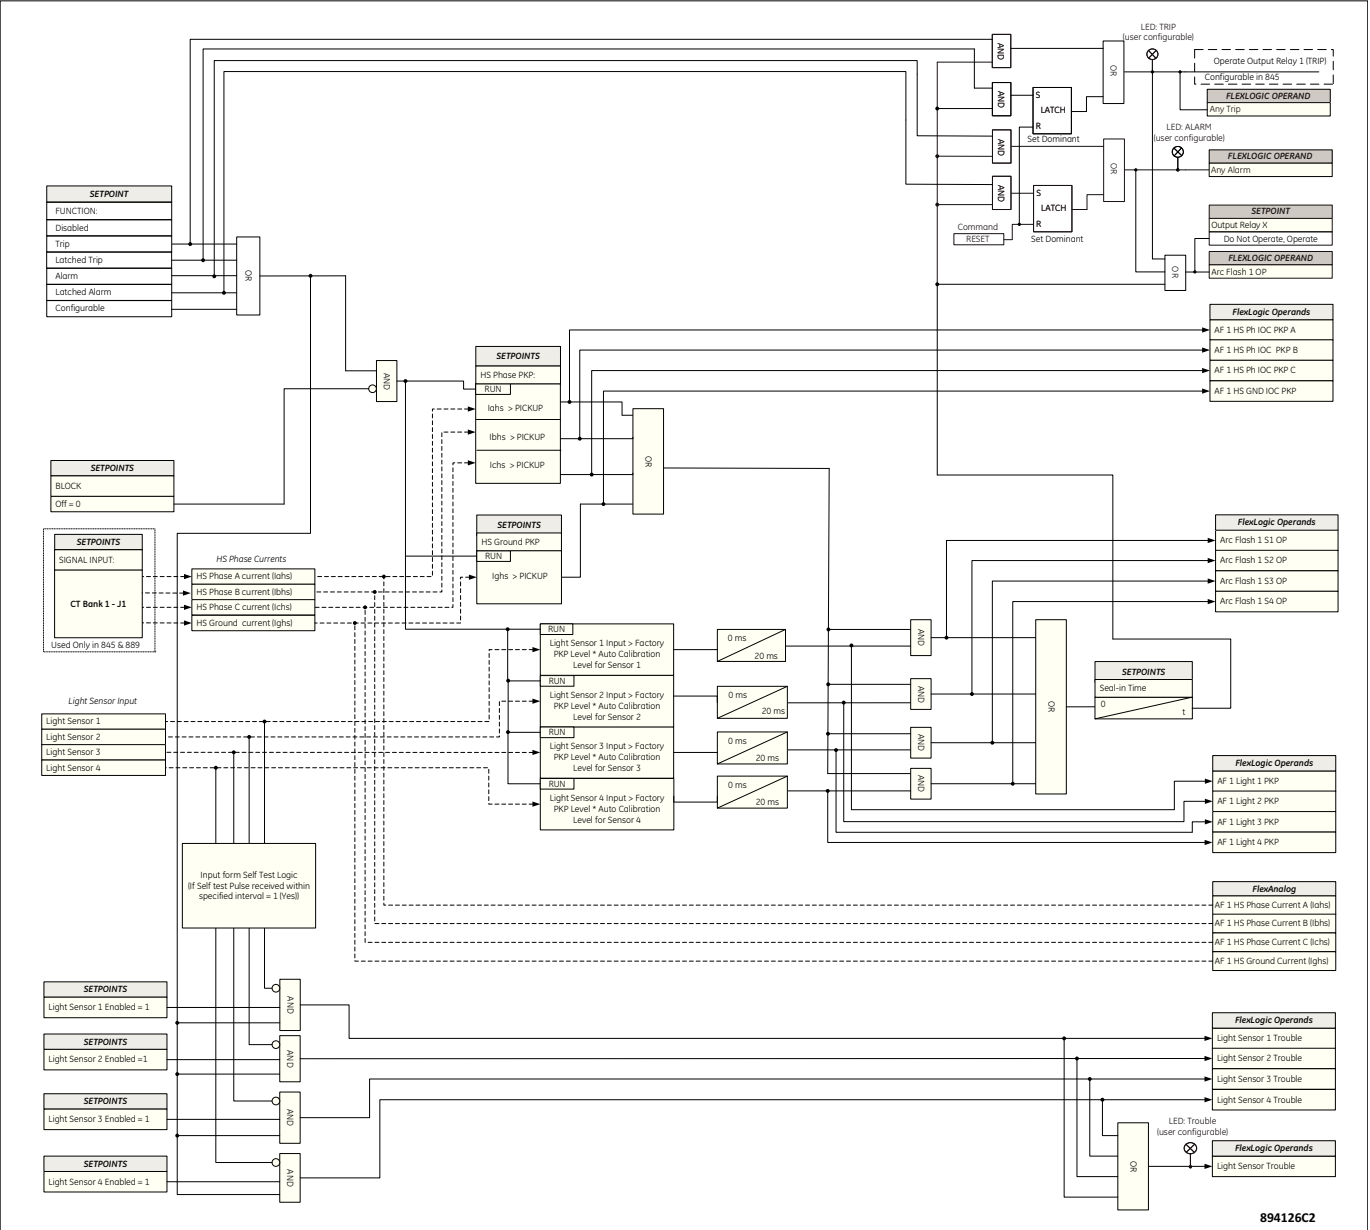


Figure 259: Arc Flash logic diagram

11.11 SYNCHROCHECK (25)

The synchronism check (Synchrocheck) function is intended for supervising the paralleling of two parts of a system which are to be joined by the closure of a circuit breaker. The Synchrocheck elements are typically used at locations where the two parts of the system are interconnected.

If a breaker can be a paralleling point between two generation sources, it is common practice to automatically perform a check to ensure the sources are within allowable voltage limits before permitting closing of the breaker. Synchrocheck provides this feature by checking that the bus and line input voltages are within the programmed differentials of voltage magnitude, phase angle position, and frequency. If this feature is enabled, the check will be performed before either manual close or automatic reclose signals can operate the Close Output Relay. The Synchrocheck programming can allow permitted closing if either or both of the sources are de-energized.

Synchrocheck verifies that the voltages (BUS and LINE) on the two sides of the supervised circuit breaker are within set limits of magnitude, angle and frequency difference. The time during which the two voltages remain within the admissible angle difference is determined by the setting of the phase angle difference $\Delta\Phi$ (without angle compensation) and the frequency difference ΔF (slip frequency). It can be defined as the time it would take the voltage phasor, BUS or LINE, to traverse an angle equal to $2 \times \Delta\Phi$ at a frequency equal to the frequency difference ΔF . This time can be calculated by:

$$T = \frac{1}{\frac{360^\circ}{2 \times \Delta\Phi} \times \Delta F}$$

where:

- $\Delta\Phi$ = phase angle difference in degrees
- ΔF = frequency difference in Hz.

Example: For the values of $\Delta\Phi = 30^\circ$ and $\Delta F = 0.1$ Hz, the time during which the angle between the two voltages is less than the set value is:

$$T = \frac{1}{\frac{360}{2 \times 30} \times 0.1} = 1.66 \text{ sec}$$

As a result the breaker closing time must be less than this computed time, to successfully close and connect both energized sides.

If one or both sides of the synchronizing breaker are de-energized, the Synchrocheck programming can allow for closing of the circuit breaker using undervoltage control to by-pass the Synchrocheck measurements (dead source function).

The measured bus and line input voltage magnitudes, angles and frequencies, and calculated differential values of angle magnitude and frequency are available as actual values under **Metering > Synchrocheck 1**.

The selection of *Aux VT Connection* under **Setpoints > System > Voltage Sensing** determines the voltage used for Synchrocheck as derived from the three-phase voltages available on the relay. For example, if the Aux VT Connection is selected as Vab, and the three-phase VTs are connected in Wye configuration, the relay computes delta voltage Vab as well, and uses it for Synchrocheck.

Note:

*The Synchrocheck cannot be performed if the three-phase VTs are Delta connected, and the Wye single voltage input is selected under **Aux VT connection**. Wye voltages cannot be calculated from Delta connected VTs.*

Note:

If both Line and Bus sides are three-phase VTs, the VT types must match, i.e. either both Line and Bus Volt inputs are Delta or both are Wye. If both sides are single-phase Aux VT inputs, then both Aux VT connection types must match, i.e. if the Line side Aux VT type is V_{ab} , then the Bus side Aux VT type must be V_{ab} . Aux VT connection V_n is not a valid type for synchrocheck.

Caution:

If the VT types on the Line and Bus side do not match, as specified above, the Synchrocheck does not run even when the Function is set to Enabled.

Note:

Once the Synchrocheck function is programmed, it will perform a voltage input selection check, to determine that the voltage magnitudes are not different by more than 5%. This check depends only on the settings entered for phase and auxiliary VTs under **Setpoints > System > Voltage Sensing**. If the difference between the selected voltage inputs by calculation is bigger than 5%, the Synchrocheck will not work. For example, the phase VT can be set to Wye connection with secondary voltage of 66.4V. The Aux. VT can be connected between phase A to B with the secondary voltage set to 115V. Then, one of the Synchrocheck inputs can be set as the Wye connected phase voltage bank, and the other input can be the Aux. VT with voltage V_{ab} . Since the difference between the computed V_{ab} input and the Aux. VT setting is 0%, the Synchrocheck will work. However, if this difference is bigger than 5%, the Synchrocheck will not work.

Path: **Setpoints > Control > Synchrocheck 1(X)**

FUNCTION

Range: Disabled, Enabled

Default: Disabled

BUS VOLTS INPUT

Range: dependent upon the order code

Default: J2-3VT

The setting provides selection of the Bus Volts input; either three-phase voltages from the three-phase VTs connected to the relay, or a single voltage from the Auxiliary VT also connected to the relay Aux VT input. The setup of these VTs is outlined under **Setpoints > System > Voltage Sensing**.

LINE VOLTS INPUT

Range: dependent upon the order code

Default: J2-Vx

The setting provides selection of the Line Volts input; either three-phase voltages from the three-phase VTs connected to the relay, or a single voltage from the Auxiliary VT also connected to the relay Aux VT input. The setup of these VTs is outlined under **Setpoints > System > Voltage Sensing**.

MAX FREQ DIFFERENCE

Range: 0.01 to 5.00 Hz in steps of 0.01 Hz

Default: 0.20 Hz

The setting selects the maximum frequency difference in 'Hz' between the two sources. A frequency difference between the two input voltage systems below this value is within the permissible limit for synchronism.

MAX ANGLE DIFFERENCE

Range: 1 to 100° in steps of 1°

Default: 20°

The setpoint selects the maximum angular difference in degrees between the two sources. An angular difference between the two input voltage phasors below this value is within the permissible limit for synchronism.

MAX VOLT DIFFERENCE

Range: 10 to 600000 V in steps of 1 V

Default: 2000 V

The setpoint selects the maximum primary voltage difference in volts between the two sources. A primary voltage magnitude difference between the two input voltages below this value is within the permissible limit for synchronism.

MAX FREQ HYSTERESIS

Range: 0.01 to 0.10 Hz in steps of 0.01 Hz

Default: 0.05 Hz

The setpoint specifies the required hysteresis for the maximum frequency difference condition. The condition becomes satisfied when the frequency difference becomes lower than SYNC1 MAX FREQ DIFFERENCE. Once the Synchrocheck element has operated, the frequency difference must increase above the SYNC1 MAX FREQ DIFFERENCE + SYNC1 MAX FREQ HYSTERESIS sum to drop out (assuming the other two conditions, voltage and angle, remain satisfied).

DEAD SOURCE PERM

Range: Disabled, LB & DL, DB & LL, DB & DL, DB OR DL, DB XOR DL

Default: Disabled

The setpoint selects the combination of dead and live sources that bypass the synchronism check function and permit the breaker to be closed when one or both of the two voltages (Bus Voltage or/and Line Voltage) are below the maximum voltage threshold. A dead or live source is declared by monitoring the voltage level. Six options are available.

The voltage levels that determine whether a source is dead or live are configurable in the four setpoints following this one.

The DEAD SOURCE PERMISSION range is as follows:

Disabled: Dead source permissive is disabled.

LB & DL: Live Bus AND Dead Line. "DB & LL": Dead Bus AND Live Line.

DB & DL: Dead Bus AND Dead Line.

DB OR DL: Dead Bus OR Dead Line.

DB XOR DL: Dead Bus XOR Dead Line (one source is Dead and one is Live).

Note:

For an application where the breaker is located on radial feeders, or line is powered by one source only, the DEAD SOURCE PERM setpoint shall not be disabled.

LIVE BUS VOLTS MIN

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.80 x VT

The setpoint establishes a minimum voltage magnitude for the Bus Voltage. Above this magnitude, the Bus Voltage input used for Synchrocheck is considered “Live” or energized.

LIVE LINE VOLTS MIN

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.80 x VT

The setpoint establishes a minimum voltage magnitude for the Line Voltage. Above this magnitude, the Line Voltage input used for Synchrocheck is considered “Live” or energized.

DEAD BUS VOLTS MAX

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

The setpoint establishes a maximum voltage magnitude for the Bus Voltage. Below this magnitude, the Bus Voltage input used for Synchrocheck is considered “Dead” or de-energized.

DEAD LINE VOLTS MAX

Range: 0.00 to 1.50 x VT in steps of 0.01 x VT

Default: 0.20 x VT

This setpoint establishes a maximum voltage magnitude for the Line Voltage. Below this magnitude, the Line Voltage input used for Synchrocheck is be considered “Dead” or de-energized.

SYNCCHECK BYPASS

Range: Off, Any FlexLogic operand

Default: Off

The Synchrocheck is bypassed when the selected operand is asserted. Typically BKR(X) Disconnected is used to bypass Synchrocheck.

BLOCK

Range: Off, Any FlexLogic operand

Default: Off

The Synchrocheck is blocked when the selected operand is asserted. Typically 52a (the circuit breaker closed) contact is used to block Synchrocheck (Synchrocheck is needed only when the circuit breaker is open). Synchrocheck can be also blocked when the relay is tripping.

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

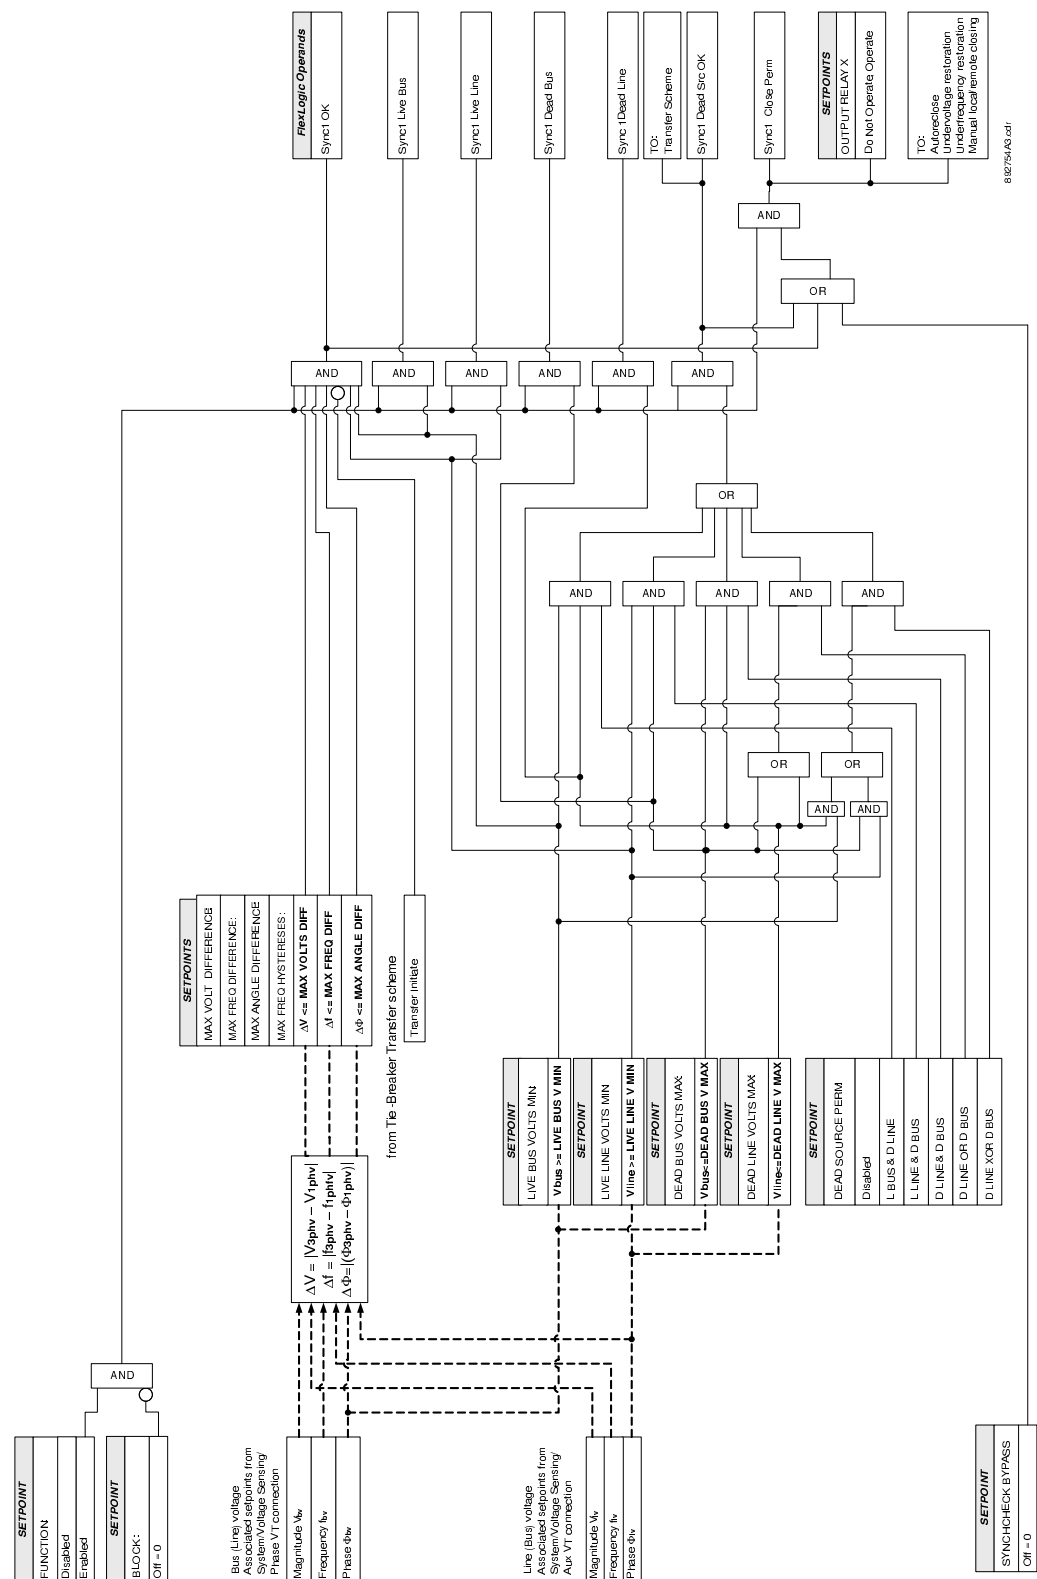


Figure 260: Synchroncheck logic diagram

11.12 VT FUSE FAILURE (VTFF)

The VT Fuse Failure detector can be used to raise an alarm and/or block elements that may operate incorrectly for a full or partial loss of AC potential caused by one or more blown fuses. Some elements that might be blocked (via the BLOCK input) are voltage restrained overcurrent, directional current, power functions. This loss can be caused by a blown primary voltage transformer fuse (or fuses), or by voltage transformer secondary circuit protection fuse failure.

There are two classes of fuse failure that may occur:

1. Class A: loss of one or two phases
2. Class B: loss of all three phases.

Different means of detection are required for each class. An indication of a Class A failure is a significant level of negative sequence voltage, whereas an indication of a Class B failure is the presence of positive sequence current and an insignificant amount of positive sequence voltage. These noted indications of fuse failure could also be present when faults are present on the system, so a means of detecting faults and inhibiting fuse failure declarations during these events is provided.

Once the fuse failure condition is declared, it is sealed-in until the cause that generated it disappears. An additional condition is introduced to inhibit a fuse failure declaration when the monitored circuit is de-energized: positive sequence voltage and current are both below threshold levels.

The settings of this function are applied to three-phase voltage input (supervised with positive, negative and zero sequence current components) to produce an Operate flag.

This function also provides detection of the VT neutral wire open condition using the third harmonic content in the 3V0 (i.e. $V_a + V_b + V_c$) signal. Under neutral wire open condition, 3V0 contains small fundamental content under balance load condition but contains significant 3rd harmonic contents regardless of the load condition (balance or imbalance).

11.12.1 VT FUSE FAILURE SETTINGS

Path: *Setpoints > Control > VT Fuse Failure 1 (2)*

FUNCTION

Range: Disabled, Alarm, Latched Alarm, Configurable

Default: Disabled

CT INPUT

Range: Dependent upon the order code

Default: CT Bnk1-J1

TIME DELAY

Range: 0 to 60000 s in steps of 1 s

Default: 0.1 s

This setting can be used to avoid fuse failure detection in the case of sudden loss of voltage when the current is zero (breaker remains in open condition) and the transient negative sequence voltage appears. This setting should be used where the VT is on the Bus side, in which case the relay may detect voltage loss when the breaker is open.

Operate Delay:

Range: 1 to 10 sec in steps of 1 sec

Default: 5 Sec

This setting determines the operate time-delay upon detection of a VTS condition.

VT Ntrl Wire Det

Range: Disabled, Enabled

Default: Disabled

This setting enables and disables the VT neutral wire open detection function. When the VT is connected in Delta, do not enable this function because there is no neutral wire for Delta connected VT.

VT Ntrl Wire PKP

Range: 0.0 to 100.0% in steps of 0.1 %

Default: 10.0 %

This setting specifies the pickup level of 3rd harmonic of 3V0 signal for the VT neutral wire open detection logic to pick up. % is calculated based on the Phase VT Secondary

OUTPUT RELAY X

Range: Operate, Do Not Operate

Default: Do Not Operate

EVENTS

Range: Enabled, Disabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

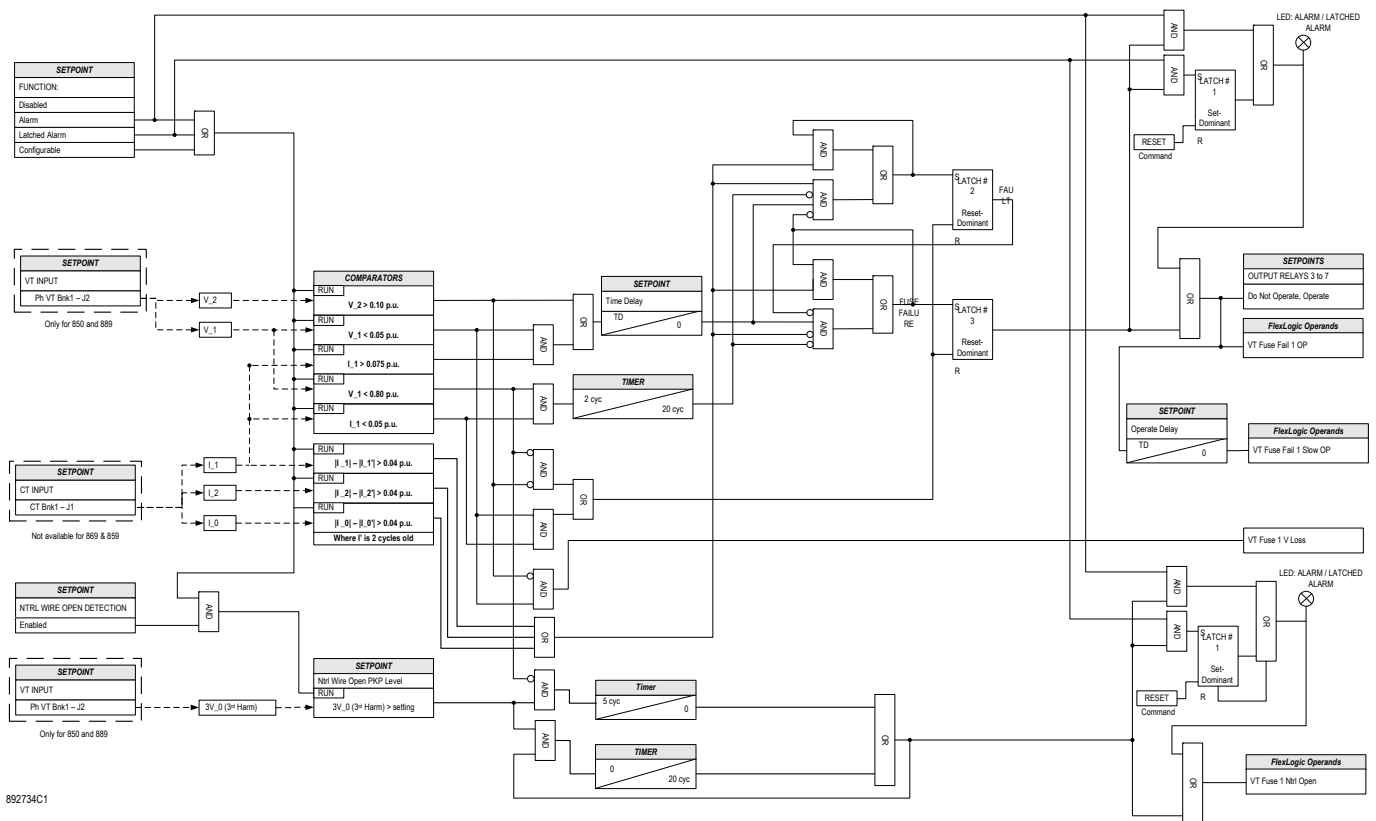


Figure 261: VT Fuse Failure logic diagram

11.13 DIGITAL ELEMENTS

The 8Series has 64 identical digital elements available. A digital element can monitor any FlexLogic operand and present a target message and enable events recording depending on the output operand state. The digital element settings include:

- a name to be referenced in any target message
- a blocking input from any selected FlexLogic operand
- a timer for pickup and reset delays for the output operand

Digital elements run once per power system cycle. As such they can easily fail to react to an input signal or a block signal with a duration less than one power system cycle. This also means that digital element output can react up to one power system cycle later than the pickup and reset delay settings indicate. Therefore, do not use digital elements:

- with transient signals, such as communications commands.
- where random delays of up to one cycle cannot be tolerated, such as in high speed protection.

Example : Trip circuit integrity monitoring

In many applications it is desirable to monitor the breaker trip circuit integrity such that problems can be detected before a trip operation is required. The circuit is considered to be healthy when the voltage monitor connected across the trip output contact detects a low level of current (Contact output voltage is not zero), well below the operating current of the breaker trip coil. If the circuit presents a high resistance, the trickle current falls below the monitor threshold, and an alarm is declared.

In most breaker control circuits, the trip coil is connected in series with a breaker auxiliary contact, which is open when the breaker is open. To prevent unwanted alarms in this situation, the trip circuit monitoring logic must include the breaker position.

Assume that output 1 is a trip contact. Using the output settings, this output is given an ID name; for example, **Cont Op 1**. Assume a 52a breaker auxiliary contact is connected to contact input 1 to monitor breaker status (Block when contact input 1 is OFF).

Using the contact input settings, this input is given a name, for example, **CI 1**, and is set *On* when the breaker is closed. The function is blocked when breaker is open, i.e. **CI 1** is Off. The settings to use digital element 1 to monitor the breaker trip circuit are shown below:

SETTING	PARAMETER
Function	Enabled
Name	Bkr Trip Cct Out
Input	Cont Op 1
Pickup Delay	0.200 s
Dropout Delay	0.100 s
Relays	Relay : Disabled
Block	CI 1 Off
Target	Self-Reset
Events	Enabled

NAME

Range : 13 alphanumeric characters

Default: Digital Elem1

Assign a user-defined name to the Digital Element. This Name is used In Flexlogic operands, Target messages, a blocking input from any selected flexlogic operands, and a timer for pickup and reset delays for the output operands.

FUNCTION

Range: Disabled, Trip, Latched Trip, Alarm, Latched Alarm or Configurable

Default: Disabled

INPUT

Range : Off, Any FlexLogic operand

Default: Off

Selects a FlexLogic operand to be monitored by the digital element.

PICKUP DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000

Sets the required time delay from element pickup to element operation. If a pickup delay is not required, set to "0.000," To avoid nuisance alarms, set the delay greater than the operating time of the breaker.

DROPOUT DELAY

Range: 0.000 to 6000.000 s in steps of 0.001 s

Default: 0.000

Sets the dropout time delay to reset. If a reset delay is not required, set to "0.000."

OUTPUT RELAY X

Range: Do Not Operate, Operate

Default: Do Not Operate

BLOCK

Range: FlexLogic operand

Default: Off

EVENTS


Range: Disabled, Enabled

Default: Enabled

TARGETS

Range: Disabled, Self-reset, Latched

Default: Self-reset

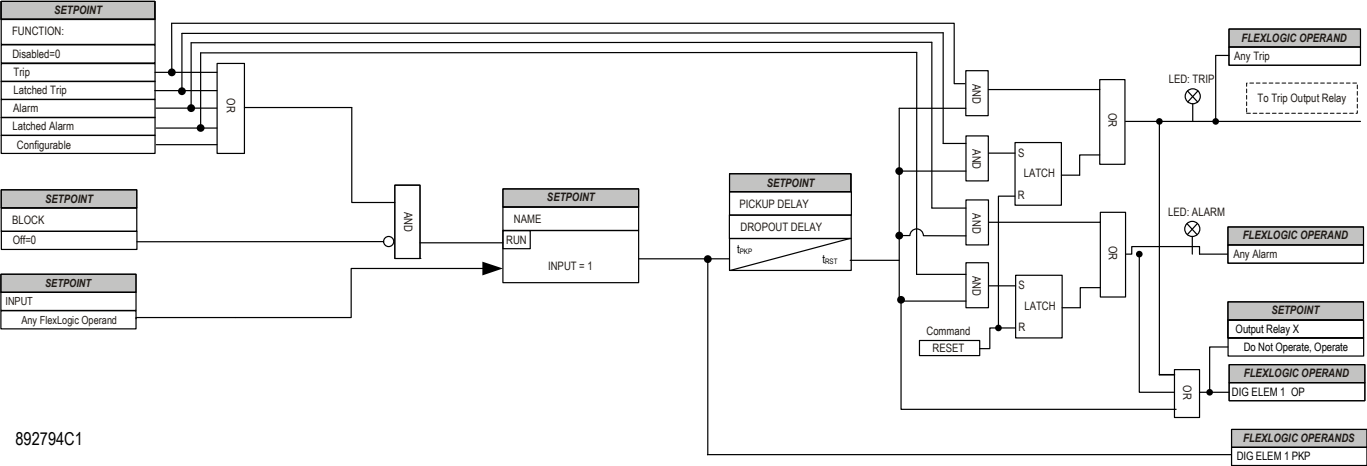

892794C1

Figure 262: Digital Elements logic

CHAPTER 12

FLEXLOGIC

12.1 CHAPTER OVERVIEW

This chapter describes the FlexLogic and Testing setpoints. FlexLogic setpoints provide access to the variable logic used with the relay. Testing setpoints include simulated current and voltage inputs, and test operations for LEDs, input contacts, and output relays.

This chapter contains the following sections:

Chapter Overview	578
FlexLogic	579

12.2 FLEXLOGIC

To provide maximum flexibility, the arrangement of internal digital logic combines fixed and user-programmed parameters. Logic upon which individual features are designed is fixed, and all other logic, from digital input signals through elements or combinations of elements to digital outputs, is variable. The user has complete control of all variable logic through FlexLogic. In general, the system receives analog and digital inputs, which then uses FlexLogic to produce analog and digital outputs.

Note:

For information on the Logic Designer and Logic Monitor menu items, refer to the EnerVista D & I Setup help menu.

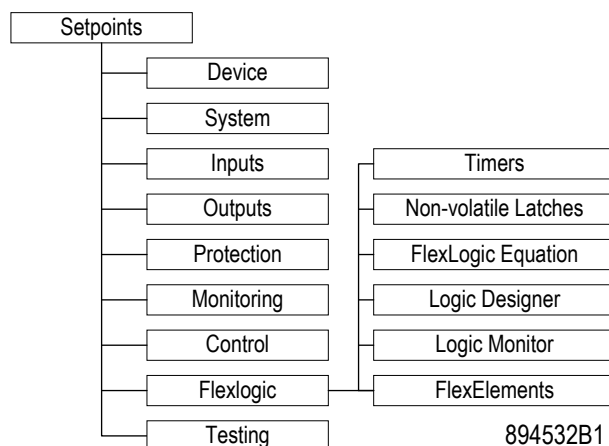


Figure 263: FlexLogic Display Hierarchy

The states of all digital signals are represented by flags (FlexLogic operands). A digital 1 is represented by a *Set* flag. Any external contact change-of-state can be used to block an element from operating, as an input to a control feature in a FlexLogic equation, or to operate an output relay. The state of the contact input can be displayed locally or viewed remotely via the communications facilities provided. In a simple scheme where a contact input is used to block an element is desired, this selection is made within the menu of the element. This applies to other features that set flags: elements, virtual inputs, remote inputs, schemes, and human operators.

When more complex logic than the one presented above is required, the FlexLogic tool should be used. For example, if it is desired to block the operation of a Phase Time Overcurrent element by the closed state of a contact input, and the operated state of a Phase Undervoltage element, the two input states need be programmed in a FlexLogic equation. This equation ANDs the two inputs to produce a virtual output which then must be programmed within the menu of the Phase Time Overcurrent as a blocking input. Virtual outputs can be created only by FlexLogic equations.

Traditionally, protective relay logic has been relatively limited. Any unusual applications involving interlocks, blocking, or supervisory functions had to be hard-wired using contact inputs and outputs. FlexLogic minimizes the requirement for auxiliary components and wiring while making more complex schemes possible.

The logic that determines the interaction of inputs, elements, schemes and outputs is field programmable through the use of logic equations that are sequentially processed. The use of virtual inputs and outputs in addition to hardware is available internally and on the communication ports for other relays to use (distributed FlexLogic).

FlexLogic allows customization of the relay through a series of equations that consist of operators and operands. The operands are the states of inputs, elements, schemes and outputs. The operators are logic gates, timers and latches (with set and reset inputs). A system of sequential operations allows any combination of specified operands to be assigned, as inputs to specified operators, to create an output. The final output of an equation is a numbered register called a 'Virtual Output'. Virtual Outputs can be used as an input operand in any equation, including the equation that generates the output, as a seal-in or other type of feedback.

A FlexLogic equation consists of parameters that are either operands or operators. Operands have a logic state of 1 or 0. Operators provide a defined function, such as an AND gate or a Timer. Each equation defines the combinations of parameters to be used to set a Virtual Output flag. Evaluation of an equation results in either a 1 (=ON, i.e. flag set) or 0 (=OFF, i.e. flag not set). Each equation is evaluated at least 4 times during every power system cycle.

Some types of operands are present in the relay in multiple instances; e.g. contact and remote inputs. These types of operands are grouped together (for presentation purposes only) on the faceplate display. The characteristics of the different types of operands are listed in the table below.

FlexLogic Operands

FlexOperands 845 430

The following operands can be re-named if required

- Breakers in the breaker control feature
- ID (identification) of contact inputs
- ID of virtual inputs
- ID of virtual outputs.
- If the default name or ID of any of these operands are changed, the assigned name appears in the relay list of operands.

FlexLogic Operators

TYPE	SYNTAX	DESCRIPTION	NOTES
Editor	INSERT	Insert a parameter in an equation list.	
	DELETE	Delete a parameter from an equation list.	
End	END	The first END encountered signifies the last entry in the list of processed FlexLogic™ parameters.	
One-shot	POSITIVE ONE SHOT	One shot that responds to a positive going edge.	A 'one shot' refers to a single input gate that generates a pulse response to an edge on the input. The output from a 'one shot' is True (positive) for only one pass through the FlexLogic equation. There is a maximum of 64 'one shots'.
	NEGATIVE ONE SHOT	One shot that responds to a negative going edge.	
	DUAL ONE SHOT	One shot that responds to both the positive and negative going edges.	

TYPE	SYNTAX	DESCRIPTION	NOTES
Logic gate	NOT	Logical NOT	Operates on the previous parameter.
	OR(2)↓ OR(16)	2 input OR gate↓ 16 input OR gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	AND(2)↓ AND(16)	2 input AND gate↓ 16 input AND gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	NOR(2)↓ NOR(16)	2 input NOR gate↓ 16 input NOR gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	NAND(2)↓ NAND(16)	2 input NAND gate↓ 16 input NAND gate	Operates on the 2 previous parameters. ↓Operates on the 16 previous parameters.
	XOR(2)	2 input Exclusive OR gate	Operates on the 2 previous parameters.
	LATCH (S,R)	Latch (set, reset): reset-dominant	The parameter preceding LATCH(S,R) is the reset input. The parameter preceding the reset input is the set input.
Timer	TIMER 1↓ TIMER 32	Timer set with FlexLogic™ timer 1 settings.↓ Timer set with FlexLogic™ timer 32 settings.	The timer is started by the preceding parameter. The output of the timer is TIMER #.
Assign virtual output	= Virt Op 1↓ = Virt Op 32	Assigns previous FlexLogic™ operand to virtual output 1.↓ Assigns previous FlexLogic™ operand to virtual output 96.	The virtual output is set by the preceding parameter

The characteristics of the logic gates are tabulated below, and the operators available in FlexLogic are listed in the FlexLogic operators table.

FlexLogic Gate Characteristics

GATES	NUMBER OF INPUTS	OUTPUT IS 1 (= ON) IF...
NOT	1	input is '0'
OR	2 to 16	any input is '1'
AND	2 to 16	all inputs are '1'
NOR	2 to 16	all inputs are '0'
NAND	2 to 16	any input is '0'
XOR	2	only one input is '1'

FLEXLOGIC RULES

When forming a FlexLogic equation, the sequence in the linear array of parameters must follow these general rules:

- Operands must precede the operator which uses the operands as inputs.
- Operators have only one output. The output of an operator must be used to create a Virtual Output if it is to be used as an input to two or more operators.
- Assigning the output of an operator to a Virtual Output terminates the equation.
- A timer operator (for example, TIMER 1) or Virtual Output assignment may only be used once. If this rule is broken, a syntax error will be declared.

FLEXLOGIC EVALUATION

- Each equation is evaluated in the order in which the parameters have been entered.
- FlexLogic provides latches which by definition have a memory action, remaining in the set state after the set input has been asserted. However, they are volatile; that is, they reset on the re-application of control power.
- When making changes to settings, all FlexLogic equations are re-compiled whenever any new setting value is entered, so all latches are automatically reset. If it is necessary to re-initialize FlexLogic during testing, for example, it is suggested to power the unit down then back up.

12.2.1 TIMERS

Path: *Setpoints > FlexLogic > Timers*

There are 32 identical FlexLogic timers available. These timers can be used as operators for FlexLogic equations.

TIMER 1 TYPE

Range: Milliseconds, Seconds, Minutes

Default: Milliseconds

The setpoint is used to select the time measuring unit.

TIMER 1 MODE

Range: Pickup, Dropoff, Dwell, Pulse, Pickup/Dropoff,

Default: Pickup

TIMER 1 PICKUP DELAY

Range: 0 to 60000 s in steps of 1 s

Default: 0 s

The setpoint sets the time delay to Pickup. If a Pickup delay is not required, set this function to "0".

This setting is used to set the time delay for Pickup, Dwell, Pulse and Pickup/Dropoff.

TIMER 1 DROPOUT DELAY

Range: 0 to 60000 s in steps of 1 s

Default: 0 s

The setpoint sets the time delay to Dropout. If a Dropout delay is not required, set this function to "0".

This setting is used to set the drop-off time delay for Dropoff, Pickup/Dropoff.

12.2.2 NON-VOLATILE LATCHES

The purpose of a Non-volatile Latch is to provide a permanent logical flag that is stored safely and does not reset when the relay reboots after being powered down. Typical applications include sustaining operator commands or permanently blocking relay functions such as Autorecloser, until a deliberate HMI action resets the latch.

Operation of the element is summarized in the following table:

LATCH 1 TYPE	LATCH 1 SET	LATCH 1 RESET	LATCH 1 ON	LATCH 1 OFF
Reset Dominant	On	Off	On	Off
	Off	Off	Previous State	Previous State
	On	On	Off	On
	Off			

LATCH 1 TYPE	LATCH 1 SET	LATCH 1 RESET	LATCH 1 ON	LATCH 1 OFF
Set Dominant	On	Off	On	Off
		On		
	Off	Off	Previous State	Previous State
	Off	On	Off	On

Path: *Settings > FlexLogic > Non-volatile Latches > Latch 1(16)*

NV LATCH 1 FUNCTION

Range: Disabled, Enabled

Default: Disabled

The setpoint enables or disables the Non-volatile Latch function.

NV LATCH 1 TYPE

Range: Reset-Dominant, Set-Dominant

Default: Reset-Dominant

The setting characterizes NV LATCH 1 to be set- or reset-dominant.

NV LATCH 1 SET

Range: Any FlexLogic operand

Default: Off

If asserted, this specified FlexLogic operand sets NV LATCH 1.

LATCH 1 RESET

Range: Any FlexLogic operand

Default: Off

If asserted, this specified FlexLogic operand resets NV LATCH 1.

12.2.3 FLEXLOGIC EQUATION

Path: *Setpoints > FlexLogic > FlexLogic Equation*

The FlexLogic Equation screen is one of two options available to configure FlexLogic. The other option is Logic Designer.

Three time stamp variables: Logic Design Last Saved, Logic Design Last Compiled and FlexLogic Editor Last Saved, have been included in this screen.

Look at the time stamps to easily see which of the options: FlexLogic Editor or Logic Designer is currently being used.

There are 1024 FlexLogic entries available, numbered from 1 to 1024 (i.e. FlexLogic Entry X – where X ranges from 1 to 1024) with default END entry settings. If a Disabled Element is selected as a FlexLogic entry, the associated state flag is never set to 1.

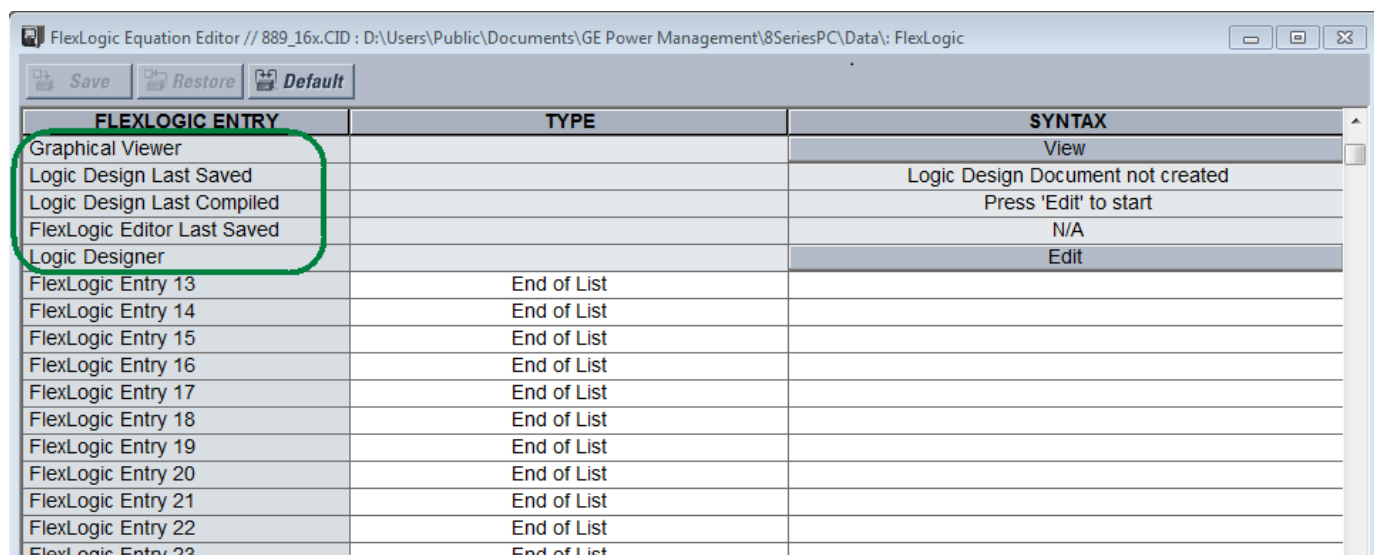


Figure 264: FlexLogic Equation Editor Screen

The FlexLogic entries are defined as follows.

Graphical Viewer: Clicking on the View button enables the FlexLogic equation to be presented in graphical format (Read-only). Refer to the *Viewing FlexLogic Graphics* section for more details.

Logic Design Last Saved, Logic Design Last Compiled, and FlexLogic Editor Last Saved: Each of these three read-only variables holds the time stamp that represents the time that the operation (of the respective variable) was performed.

- When no Logic (New file creation) is present these timestamps are set to default text representations.
- Time stamps are displayed in the format 'Mon DD YYYY HH:MM:SS' [Jun 22 1981 14:20:00]
- Each time a 'Save' operation is performed in the 'FlexLogic Equation Editor' screen, the 'FlexLogic Editor Last Saved' entry gets updated.
- Based on the values present at each launch of the 'FlexLogic Equation Editor' screen, internal validation prompts the relevant messages. These prompts must be followed to ensure that the 'FlexLogic' configuration is synchronized with the 'Logic Designer'. These three variables are shown in color in the FlexLogic Equation Editor based on timestamps. Color is used to indicate the change (non-synchronization if any) of FlexLogic between the FlexLogic Editor and Logic Designer Screens.

File Conversion and Handling of Time Stamps: When File Conversion is applied the three time stamps are processed (either carry forwarded, defaulted, updated with latest PC time) based on the Source and Destination File versions and Order code supported.


The following cases depict the nature of the three time stamps after a file conversion.

Source Version	Target Version	Is FlexLogic Change Detected?	Time Stamps [LDLs, LDLc, FELs]**
>= 160	>= 160	YES	[0^ , 0 , PCTime**]
>= 160	>=160	NO	*Existing time stamps are copied to the converted file
< 160	>= 160	YES	[0 , 0 , PCTime]
< 160 (& > 120***)	>= 160	NO	[PCTime, PCTime, PCTime,]

**	LDLs – Logic Designer Last Saved, LDLc– Logic Designer Last Compiled and FELs – FlexLogic Editor Last Saved
** PCTime	The time that the file conversion took place

^ 0	Indicates the time stamps are being defaulted
***	There is no support for Logic Designer [Graphical Editor] below version 130
*	For each specific case, the source files for Logic Designer (Graphical) content will also get copied "as is" to the destination folder. This enables the user to retain old content "as is".

In a typical scenario where both the FlexLogic Designer and FlexLogic Editor are used for configuring FlexLogic, the updated time stamps appear as shown in the following figure.

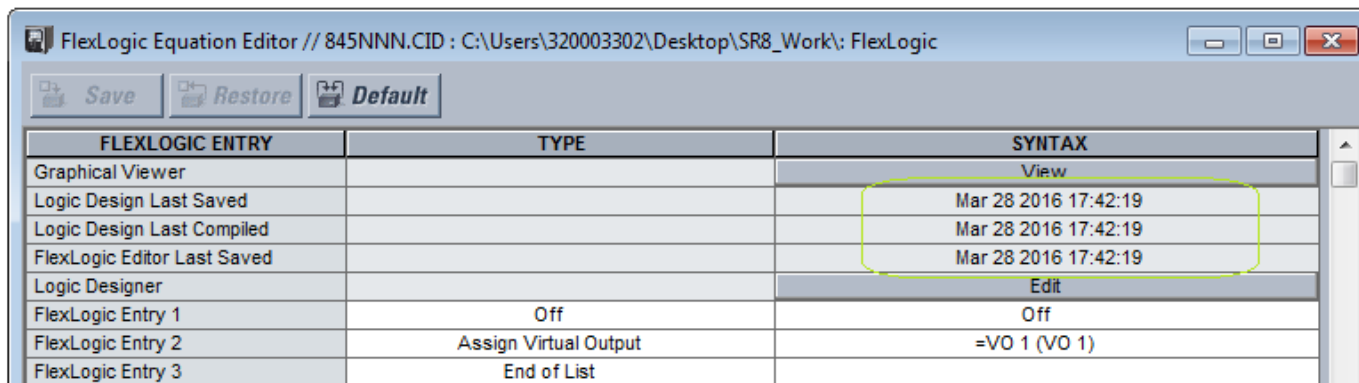

The screenshot shows the 'FlexLogic Equation Editor' window. It has a menu bar with 'Save', 'Restore', and 'Default' options. Below the menu is a table with three columns: 'FLEXLOGIC ENTRY', 'TYPE', and 'SYNTAX'. The table contains several entries, including 'Graphical Viewer', 'Logic Design Last Saved', 'Logic Design Last Compiled', 'FlexLogic Editor Last Saved', 'Logic Designer', 'FlexLogic Entry 1', 'FlexLogic Entry 2', and 'FlexLogic Entry 3'. The 'SYNTAX' column for 'Logic Design Last Saved', 'Logic Design Last Compiled', and 'FlexLogic Editor Last Saved' shows the timestamp 'Mar 28 2016 17:42:19'. The 'SYNTAX' column for 'Logic Designer' shows 'Edit'. The 'SYNTAX' column for 'FlexLogic Entry 1' shows 'Off'. The 'SYNTAX' column for 'FlexLogic Entry 2' shows 'Assign Virtual Output' and '=VO 1 (VO 1)'. The 'SYNTAX' column for 'FlexLogic Entry 3' shows 'End of List'.

FLEXLOGIC ENTRY	TYPE	SYNTAX
Graphical Viewer		View
Logic Design Last Saved		Mar 28 2016 17:42:19
Logic Design Last Compiled		Mar 28 2016 17:42:19
FlexLogic Editor Last Saved		Mar 28 2016 17:42:19
Logic Designer		Edit
FlexLogic Entry 1	Off	Off
FlexLogic Entry 2	Assign Virtual Output	=VO 1 (VO 1)
FlexLogic Entry 3	End of List	

Logic Designer: This entry can be used to initiate the launch of the Logic Designer screen. Once chosen, the existing FlexLogic Equation Editor screen is set to Read-only and then the Logic Designer screen launch is initiated. If the user wants to re-visit the FlexLogic Editor Screen, any existing read-only screen has to be closed first. Then, the screen has to be re-opened. The FlexLogic Editor screen is now editable, again.

In order to maintain synchronization of FlexLogic, the following update rules are defined.

For example, when a user tries to open the 'FlexLogic Equation Editor' of a particular device or file.

- If the Logic Designer screen is open and in Edit mode, a message prompts to save any changes. The FlexLogic Equation Editor is not launched.
- If the Logic Designer is open and in saved mode (no edits to save or compile), the Logic Designer screen is closed and then the FlexLogic Equation Editor launch is initiated.

12.2.4 VIEWING FLEXLOGIC GRAPHICS

To verify that the FlexLogic equation(s) and its selected parameters produce the desired logic, the expression can be viewed by converting the derived equation into a graphic diagram. It is strongly recommended and helpful to view an equation as a graphic diagram before it is saved to the relay in order to troubleshoot any possible error in the equation.

To View the FlexLogic Graphic

Click on the View button at the top of the Type column in the FlexLogic Equation screen, see previous figure. Provided the equation is entered correctly, this generates a graphical representation of the expression previously entered. If any operator inputs are missing or any FlexLogic rules have been violated, the EnerVista D&I Setup displays a message box indicating any problems in the equation when the view feature is attempted.

The expression is also listed to the left of the diagram to demonstrate how the diagram was created. The End statement is added as parameter 5 (End of list).

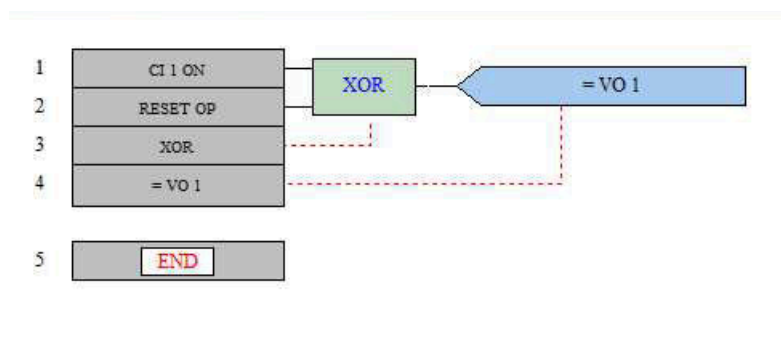


Figure 265: FlexLogic Graphic Example

12.2.5 FLEXELEMENTS

There are 8 identical FlexElements. A FlexElement is a universal comparator, that can be used to monitor any analog actual value measured or calculated by the relay, or a net difference of any two analog actual values of the same type. Depending on how the FlexElement is programmed, the effective operating signal could be either a signed signal or an absolute value.

You can configure the element to respond either to a signal level or to a rate-of-change (delta) over a pre-defined period of time. The output operand is asserted when the operating signal is higher than a threshold or lower than a threshold chosen.

When configuring a FlexElement, keep in mind the following limitations:

1. The analog inputs for any FlexElement must be from the same quantity.
 - current and current (in any combination, phase-symmetrical, phase-phase, kA-A, differential, restraint, etc.)
 - voltage and voltage (as above)
 - active power and active power (Watts and Watts)
 - reactive power and reactive power (Vars and Vars)
 - apparent power and apparent power (VA and VA)
 - angle and angle (any, no matter what signal, for example angle of voltage and angle of current are a valid pair)
 - % and % (any, for example THD and harmonic content is a valid pair)
 - V/Hz and V/Hz
 - °C and °C
 - I^2t and I^2t
 - FlexElement actual and FlexElement actual

For all the other combinations, the element displays 0.000 or N/A and will not assert any output operand.
2. The analog value associated with one FlexElement can be used as an input to another FlexElement "Cascading".

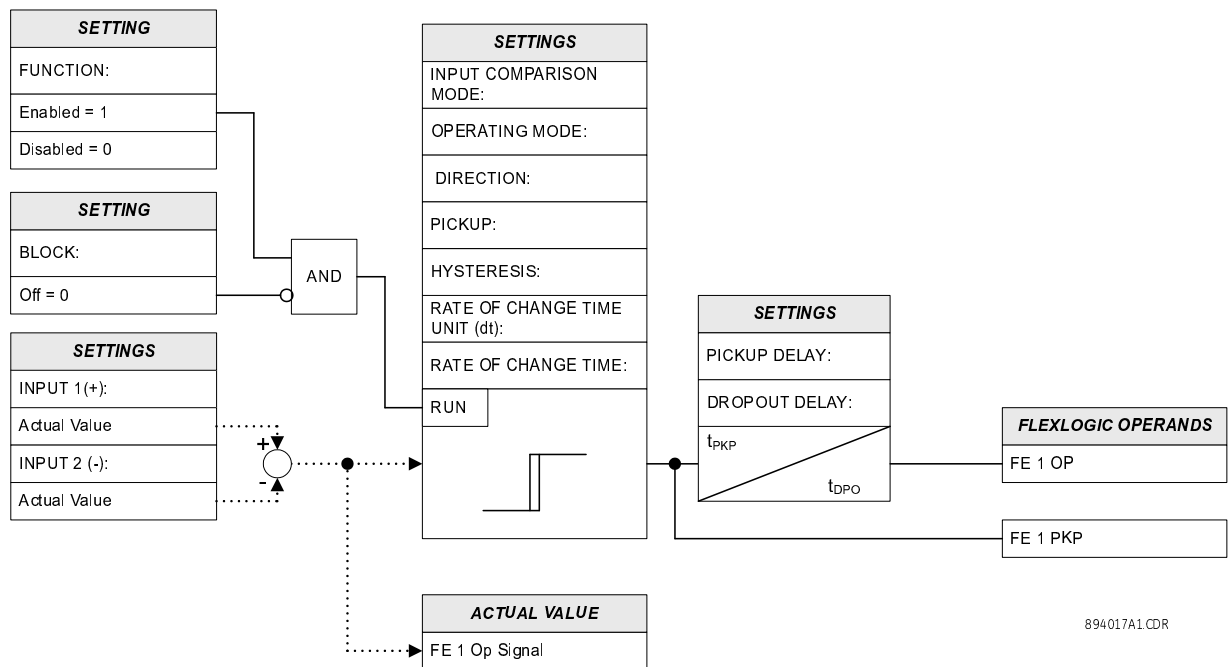


Figure 266: FlexElement logic diagram

12.2.5.1 FLEXELEMENT SETTINGS

Path: **Setpoints > FlexLogic > FlexElements > FlexElement 1**

FUNCTION

Range: Disabled, Enabled

Default: Disabled

NAME

Range: Up to 13 alphanumeric characters

Default: FlexEl 1

INPUT 1 (+)

Range: Off, any FlexAnalog signal

Default: Off

This setting specifies the first input (non-inverted) to the FlexElement. Zero is assumed as the input if this setting is set to *Off*. For proper operation of the element at least one input must be selected. Otherwise, the element will not assert its output operands.

INPUT 2 (-)

Range: Off, any FlexAnalog signal

Default: Off

This setting specifies the second input (inverted) to the FlexElement. Zero is assumed as the input if this setting is set to *Off*. For proper operation of the element at least one input must be selected. Otherwise, the element will not assert its output operands.

This input should be used to invert the signal if needed for convenience, or to make the element respond to a differential signal such as for a top-bottom oil temperature differential alarm.

A warning message is displayed and the element does not operate if the two input signals are of different types, for example if one tries to use active power and phase angle to build the effective operating signal.

PICKUP

Range: -30.000 to 30.000 pu in steps of 0.001 pu

Default: 1.000

This setting specifies the operating threshold for the effective operating signal of the element.

If the *Over* direction is set, the element picks up when the operating signal exceeds the Pickup value.

If the *Under* direction is set, the element picks up when the operating signal falls below the Pickup value.

The **HYSTERISIS** setting controls the element drop out.

Notice that both the operating signal and the pickup threshold can be negative when facilitating applications such as reverse power alarms.

The FlexElement can be programmed to work with all analog values measured or computed by the relay. The **PICKUP** setting is entered in pu values using the following definitions of the base units:

Definitions of the Base Unit for the FLEXELEMENT

Measured or calculated analog value related to:	Base Unit
Voltage	V_{BASE} = maximum nominal primary RMS value of the Input 1(+) and input 2(-) inputs
Current	I_{BASE} = maximum nominal primary RMS value of the Input 1(+) and input 2(-) inputs
Power	P_{BASE} = maximum value of $V_{BASE} * I_{BASE}$ for the Input 1(+) and input 2(-) inputs
Power Factor	PF_{BASE} = 1.00
Phase Angle	Deg_{BASE} = 360 deg
Harmonic Content	H_{BASE} = 100% of nominal
THD	THD_{BASE} = 100%
Frequency	f_{BASE} = nominal frequency as entered under the SYSTEM SETUP menu
Volt/Hz	$BASE$ = 1.00
dcmA	$BASE$ = DCMA INPUT MAX (setting under the DCMA menu). If two DCMA signals are used by the FlexElement, the maximum of the above setting among the two elements is used as the base.
RTDs	$BASE$ = 100.00°C
I^2t (arcing Amps)	$BASE$ = 2000 kA ² *cycle
Differential and Restraint currents (Percent Differential)	I_{BASE} = CT primary from the CT bank selected for Winding 1 (the same base as the one for 87T element)
Differential and Restraint currents (RGF)	I_{BASE} = CT primary from the CT bank selected for the RGF element (the same base as the one for RGF element)
Winding Hottest-Spot	$BASE$ = 100°C
Loss of Transformer Life	LOL_{BASE} = 180000 hours
Daily Rate Loss of Life	$DRLOL_{BASE}$ = 1000 hours
Aging Factor	AAF_{BASE} = 1.00
Harmonic Derating	HDF_{BASE} = 1.00
Xfmr Overload	OL_{BASE} = 100%

Measured or calculated analog value related to:	Base Unit
Tap Position	TC _{BASE} = 1

HYSTERESIS

Range: 0.1 to 50.0% in steps of 0.1%

Default: 3.0%

This setting defines the pickup – drop out relation of the element by specifying the width of the hysteresis loop as a percentage of the pickup value as shown above in the *Direction, Pickup, and Hysteresis setpoints* figure.

RATE OF CHANGE TIME UNIT (dt)

Range: millisecond, second, minute

Default: milliseconds

This setting specifies the time base dt when programming the FlexElement as a rate of change element.

The setting is applicable only if the Input Comparison Mode is set to *Delta*.

RATE OF CHANGE TIME

Range: 40 to 65535 in steps of 1

Default: 40

This setting specifies the duration of the time interval for the rate of change mode of operation.

The setting is applicable only if the Input Comparison Mode is set to *Delta*.

12.2.5.2 FLEXELEMENTS - EXAMPLES

T13.8 kV power system:

- Phase VT Connection: Wye
- Phase VT Secondary: 66.4 V
- Phase VT Ratio: 120:1 (phase to neutral primary voltage = $120 \times 66.4 = 7968$ V)
- Aux VT Connection: Vab
- Aux VT Secondary: 115 V
- Aux VT Ratio: 120:1 (phase-phase primary voltage = 13800V)
- Phase CTs Primary: 2000 A
- Ground CT Primary: 500 A
- Frequency: 60Hz

Detecting voltage difference:

The voltage difference between calculated phase-phase voltage derived from Wye connected phase VTs, and the directly measured phase-phase voltage from auxiliary VT can be monitored by programming a FlexElement.

FlexElement settings:

- Input 1(+): J2 Vab RMS
- Input 2 (-): J2 Vaux RMS (input from VT connected between phases A and B)
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over

The analog input J2 Vab is phase-phase voltage computed by the relay based on three-phase Wye voltages. As per the Phase VT setup, the primary RMS nominal voltage for J2 Vab input is $66.4 \text{ V} * 120 = 7.968\text{kV}$.

The analog input J2 Vaux is directly measured phase-phase voltage and its primary RMS nominal voltage is $115\text{V} * 120 = 13.8\text{kV}$

$$V_{\text{BASE}} = \max(7.968\text{kV}, 13.8\text{kV}) = 13.8\text{kV}.$$

If we want to detect 2% voltage difference ($2\% @ 13.8\text{kV} = 276\text{V}$) between the computed phase to phase Vab voltage, and the measured Vaux voltage from a VT connected between phases A and B, the pickup per-unit setting for the FlexElement can be set as follows:

$$\text{Pickup} = 276\text{V} / 13800\text{V} = 0.02 \text{ pu}$$

If the voltage difference between the selected inputs becomes bigger than 276 Volts, the FlexElement will pickup, and operate, which can be used to energize contact, or initiate alarm, or trip.

Detecting current difference between Neutral and Ground currents:

In a balanced system, the computed neutral and the measured ground currents is 0 Amps. However, during ground faults their values are not zero. More specifically if the phase and ground CTs are located on the same transformer winding, such that the ground CT is installed on the grounded neutral of the winding, their values supposed to be the same during external fault, and would be different during internal fault. The FlexElement can be used for detecting the differential signal between these quantities. For example the following condition can be made:

$$I_{\text{BASE}} = \max(2000\text{A}, 500\text{A}) = 2000\text{A}$$

FlexElement settings:

- Input 1(+): J1
- Input 2 (-): J1 Ig
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over
- Pickup = $200\text{A} / 2000\text{A} = 0.1 \text{ pu}$

When no CT saturation conditions exist, if the difference between the neutral current and the ground current becomes more than 200 Amps primary, this can be treated as an indication of an internal ground fault, which should be cleared. With $I_{\text{BASE}} = \max(2000\text{A}, 500\text{A}) = 2000\text{A}$, the pickup can be set as follows: $\text{Pickup} = 200\text{A} / 2000\text{A} = 0.1 \text{ pu}$

Detecting Low 3-ph Apparent Power:

$$V_{\text{BASE}} = 7.968\text{kV}$$

$$I_{\text{BASE}} = 1000 \text{ A}$$

$$P_{\text{BASE}} = V_{\text{BASE}} * I_{\text{BASE}} = 7968 \text{ V} * 2000\text{A} = 15.936\text{MVA}$$

The FlexElement can be set to detect under-power conditions and produce alarm, or trip if the apparent power is less than 500kVA. In this case the pickup setting for the FlexElement can be computed as follows:

$$\text{Pickup} = 0.5\text{MVA} / 15.936 \text{ MVA} = 0.0313 \text{ pu}$$

FlexElement settings:

- Input 1(+): Pwr1 Apparent
- Input 2(-): Off
- Operating Mode: Absolute

- Input Comparison Mode: Level
- Direction: Under
- Pickup: 0.0313 pu

Power Factor Cap Bank Switch-In Example

$$PF_{BASE} = 1.00$$

FlexElement can be programmed to switch-in cap bank, if for example the measured 3Ph Power Factor has negative value(lag), and drops below the pickup of -0.7 pu. Programming the Hysteresis setpoint to the desired percentage can define the PF value at which the cap bank can be switched off. For example, if the cap bank is required to be switched off at PF value of -0.9, then the percent hysteresis is computed as:

$$\% \text{ hysteresis} = ((\text{abs}(-0.9) - \text{abs}(-0.7)) / PF_{BASE}) * 100 = 20\%$$

Note:

The minimum pickup should not be less than 0.01 pu, as the measurement resolution for the Power Factor is 0.01.

- Input 1(+): Pwr1 PF
- Input 2(-): Off
- Operating Mode: Signed
- Input Comparison Mode: Level
- Direction: Under
- Pickup: -0.700 pu
- Hysteresis: 20.0 %

Detecting high THD (Total Harmonic Distortion)

$$THD_{BASE} = 100\%$$

A FlexElement can be programmed to detect excessive amount of harmonics in the system, and Alarm, Trip, or switch-in/out an equipment to suppress the high amount of harmonics. The Total Harmonic Distortion is an estimation of how the AC signals are distorted and as shown above, it can be used as an input for the FlexElement.

For example if an operation from a FlexElement is desired when the THD for the phase A voltage exceeds 20%, then having a base of 100%, the pickup setting should be set to 0.200 pu.

- Input 1(+): J2 Phase A THD
- Input 2(-): Off
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over
- Pickup: 0.200 pu

Note:

The harmonics and THD values are measured as percentage of the fundamental signal, and have resolution of 0.01%. However for the minimum pickup setting of 0.001 pu, this would mean percentage step of 0.1%.

Simple V/Hz ratio detection for protected equipment

$V/Hz_{BASE} = 1.00$ High V/Hz ratios in the power system are harmful for the insulation of the protected equipment – transformer, generator, or elsewhere in the power system. If not detected, it can lead to excessive heat and degradation of the insulation which will damage the equipment. A FlexElement can be used for simple detection of V/Hz values, and to issue an Alarm, or Trip, if detected above Pickup setting. Since the base unit for V/Hz = 1.00,

programming of the pickup setpoint is straight forward for the desired FlexElement operation. For the example given here, a value of 1.200 pu has been selected.

- Input 1(+): Volts Per Hertz 1 Input 2(-): Off Operating Mode: Absolute Input Comparison Mode: Level Direction: Over Pickup: 1.200 pu Hysteresis: 8.3%

Now, if the FlexElement is needed to drop down when the V/Hz ratio becomes equal to 1.1, the hysteresis can be calculated as: $1.2\text{pu} - 1.1\text{pu} = 0.1\text{ pu}$ $\text{Hysteresis} = (0.1 * 100) / 1.2 = 8.3\%$

High Breaker Arcing current detection

High breaker arcing current can be detected by using a FlexElement during the opening of a breaker. One or more FlexElements can be configured for detecting levels of maximum arcing current during the tripping of a particular breaker, and give an indication for the health of the breaker.

The base unit for the breaker arcing current is programmed in the relay as: $\text{BASE} = 2000\text{ kA}^2 \cdot \text{cycle}$

- Input 1(+): Total Arcing Current
- Input 2(-): Off
- Operating Mode: Absolute
- Input Comparison Mode: Level
- Direction: Over
- Pickup: 2.500 pu
- Hysteresis: 0.0%

To configure the pickup setpoint for a total arcing current of $5000\text{ kA}^2 / \text{cycle}$, the per-unit pickup value can be calculated as follows:

$$\text{Pickup} = 5000\text{ kA}^2 \cdot \text{cycle} / 2000\text{ kA}^2 \cdot \text{cycle} = 2.500\text{ pu}$$

CHAPTER 13

TESTING

13.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	594
Testing display hierarchy	595
Simulation	596
General	600
Test LEDs	602
Contact Inputs	603
Output Relays	604
GOOSE	605

13.2 TESTING DISPLAY HIERARCHY

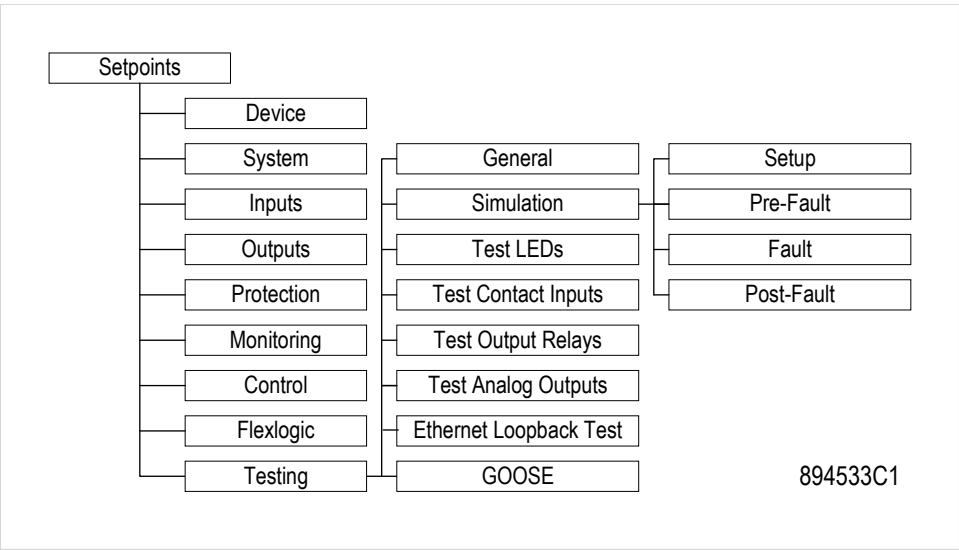


Figure 267: Testing Display Hierarchy

Path: *Setpoints* > *Testing*

The relay can simulate current and voltage inputs when the Simulation feature is enabled. Other test operations are also possible such as LED lamp test of each color, contact input states and testing of output relays.

13.3 SIMULATION

Path: **Setpoints > Testing > Simulation**

- Setup
- Pre-Fault
- Fault
- Post-Fault

The Simulation feature is provided for testing the functionality of the relay in response to programmed conditions, without the need of external AC voltage and current inputs. First time users will find this to be a valuable training tool. System parameters such as currents, voltages and phase angles are entered as setpoints. When placed in simulation mode, the relay suspends reading actual AC inputs, generates samples to represent the programmed phasors, and loads these samples into the memory to be processed by the relay. Normal (pre-fault), fault and post-fault conditions can be simulated to exercise a variety of relay features. There are three sets of input parameters used during simulation, each provides a particular state of the system as follows.

Note:

Simulation mode current input should be set at more than three times the CT rating. All Simulation setpoints revert to default values at power-up.

Note:

Testing of Arc Flash functionality is not possible with the Simulation feature.

13.3.1 SIMULATION SETUP

Path: **Setpoints > Testing > Simulation > Setup**

SIMULATION STATE

Range: Disabled, Prefault State, Fault State, Postfault State

Default: Disabled

Disable this setpoint if actual system inputs are to be monitored. If set to any other value, the relay is in test mode and actual system parameters are not monitored, including Current, Voltage, and Contact Inputs. The system parameters simulated by the relay will be those in the section below that correspond to the set value of this setpoint. For example, if set to *Fault*, the system parameters will be set to those defined by the **FAULT** setpoint values.

PRE-FAULT TO FAULT TRIGGER

Range: Off, On, Any FlexLogic Operand

Default: Off

POST-FAULT TO PRE-FAULT TRIGGER

Range: Off, On, Any FlexLogic Operand

Default: Off

FORCE RELAYS

Range: Disabled, Enabled

Default: Disabled

When in test mode, and **FORCE RELAYS** is enabled, relay states can be forced from the **Setpoints > Testing > Output Relays** menu, which overrides the normal operation of the output contacts. When in test mode, and **FORCE RELAYS** is disabled, the relay states maintain their normal operation. Forcing of output relay states is not performed when the Simulation State is disabled.

FORCE LEDS

Range: Disabled, Enabled

Default: Disabled

When in test mode, and **FORCE LEDS** is enabled, LED states and colors can be forced from the **Setpoints > Testing > Test LEDS** menu, this will override the normal operation of the LEDs. When in test mode, and **FORCE LEDS** is disabled, the LED states and colors will maintain their normal operation. Forcing of LEDs is not performed when the **SIMULATION STATE** is disabled.

13.3.2 SIMULATION PRE-FAULT

This state is intended to simulate the normal operating condition of a system by replacing the normal input parameters with programmed pre-fault values. For proper simulation, values entered here must be below the minimum trip setting of any protection feature.

Voltage magnitudes and angles are entered as Wye values only. The voltage setpoints are not available if the corresponding VT Bank **PHASE VT CONNECTION** setpoint is Delta. Voltages are set in secondary VT units.

The CT and VT Bank availability is dependent on the installed Order Code options.

Path: **Setpoints > Testing > Simulation > Pre-Fault**

J2 Prefault Van(Vbn,Vcn,Vx) Voltage:

Range: 0.00 to 300.00 V in steps of 0.01

Default: 0.00 V

J2 Prefault Van(Vbn,Vcn,Vaux) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

J1(K1,K2) Prefault Phase Ia(Ib,Ic):

Range: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

Phase current magnitudes are entered as a multiple of the corresponding CT Bank **PHASE CT PRIMARY** setpoint.

J1(K1,K2) Prefault Phase Ig:

Range: For Ground CT: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

The ground current magnitude setpoint range is dependent on the ground CT type as defined in the Order Code options. For Ground CT, the magnitude is entered as a multiple of the corresponding CT Bank **GROUND CT PRIMARY** setpoint.

J1(K1,K2) Prefault Ia(Ib,Ic,Ig) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

13.3.3 SIMULATION FAULT

The Fault state is intended to simulate the faulted operating condition of a system by replacing the normal input parameters with programmed fault values.

Voltage magnitudes and angles are entered as Wye values only. The voltage setpoints are not available if the corresponding VT Bank **PHASE VT CONNECTION** setpoint is Delta. Voltages are set in secondary VT units.

The CT and VT Bank availability is dependent on the installed Order Code options.

Path: **Setpoints > Testing > Simulation > Fault**

J2 Fault Van(Vbn,Vcn,Vx) Voltage:

Range: 0.00 to 300.00 V in steps of 0.01

Default: 0.00 V

J2 Fault Van(Vbn,Vcn,Vaux) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

J1(K1,K2) Fault Phase Ia(Ib,Ic):

Range: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

J1(K1,K2) Fault Phase Ig:

Range: For Ground CT: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

J1(K1,K2) Fault Ia(Ib,Ic,Ig) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

13.3.4 SIMULATION POST-FAULT

The Post-fault state is intended to simulate a system that has tripped by replacing the normal input parameters with programmed post-fault values.

Voltage magnitudes and angles are entered as Wye values only. The voltage setpoints are not available if the corresponding VT Bank **PHASE VT CONNECTION** setpoint is Delta. Voltages are set in secondary VT units.

The CT and VT Bank availability is dependent on the installed Order Code options.

Path: **Setpoints > Testing > Simulation > Post-Fault**

J2 Postfault Van(Vbn,Vcn,Vx) Voltage:

Range: 0.00 to 300.00 V in steps of 0.01

Default: 0.00 V

J2 Postfault Van(Vbn,Vcn,Vaux) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

J1(K1,K2) Postfault Phase Ia(Ib,Ic):

Range: 0.000 to 46.000 x CT in steps of 0.001 x CT

Default: 0.000 x CT

J1(K1,K2) Postfault Phase Ig:

Range: For Ground CT: 0.000 to 46.000 x CT in steps of 0.001 x CT For Sensitive Ground CT: 0.000 to 4.600 x CT in steps of 0.001 x CT For CBCT: 0.000 to 15.000 A in steps of 0.001

Default: 0.000 x CT

J1(K1,K2) Postfault Ia(Ib,Ic,Ig) Angle:

Range: -359.9° to 0.0° in steps of 0.1

Default: 0.0°

13.4 GENERAL

The relay enters into test mode when any of the test operations (Simulation, Contact Inputs, Contact Output Relays, LEDs or Analog Outputs) is programmed to Enabled. The actual system parameters are not monitored, including Current, Voltage, and Contact Inputs.

Simulation State

Range: Disabled, Prefault State, Fault State, Postfault State

Default: Disabled

Set the Simulation State to *Disabled* if you want to monitor the actual system inputs.

If set to any other value, the relay is in test mode and the actual system parameters are not monitored, including Current, Voltage, and Contact Inputs. The system parameters simulated by the relay will be those in the section below that correspond to the configured value of this setpoint. For example, if set to **Fault**, then the system parameters will be set to those defined by the **Fault** setpoint values.

When Fault State is set as the Simulation State and a Trip occurs, the Simulation State automatically transitions to the Postfault State.

Force LEDs

Range: Disabled, Enabled

Default: Disabled

When enabled, the relay enters in test mode and LED states and colors can be forced from the **Setpoints \Testing\Test LEDs** menu.

This will override the normal operation of the LEDs. When disabled, the LED states and colors will maintain their normal operation.

Force Contact Inputs

Range: Disabled, Enabled

Default: Disabled

When **Force Contact Inputs** is enabled, the relay enters test mode and the contact inputs states can be forced from the **Testing\Contact Inputs** menu.

This will override the normal operation of the input contacts. When **Force Contact Inputs** is disabled, the relay states will maintain their normal operation.

Force Relays

Range: Disabled, Enabled

Default: Disabled

When **Force Relays** is enabled, the relay enters test mode and the relay states can be forced from the **Testing \Output Relays** menu.

This will override the normal operation of the output contacts. When **Force Relays** is disabled, the relay states will maintain their normal operation.

Force Analog Outputs

Range: Disabled, Enabled

Default: Disabled

When **Force Analog Outputs** is enabled, the relay enters test mode and the output will reflect the forced value as a percentage of the range 0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, or 4 to 20 mA.

When **Force Analog Outputs** is disabled, the relay states will maintain their normal operation.

13.5 TEST LEDS

The Test LEDs setting is used to program the state and color of each LED when in test mode and **FORCE LEDS** is enabled.

Note:
Test LEDs setpoints here will revert to default values at power-up.

Path: *Setpoints > Testing > Test LEDs*

LED 1 (17)

Range: Off, Red, Green, Orange

Default: Off

LED 1 (24)

Range for 1(14): Off, Red, Green, Orange

Range for 15(24): Off, Orange

Default: Off

13.6 CONTACT INPUTS

This section is used to program the state of each contact input when enabled in test mode. The number of Contact Inputs available is dependent on the installed Order Code options.

Note:

Contact Inputs setpoints here will revert to default values at power-up.

Path: *Setpoints > Testing > Contact Inputs*

CI 1(X):

Range: Off, On

Default: Off

The item name displays the user configurable name for the contact input.

13.7 OUTPUT RELAYS

This section is used to program the state of each output relay when **FORCE RELAYS** is enabled.

Select *Off* to force the output relay to the de-energized state, or select *On* to force the output relay to the energized state.

The number of Output Relays available is dependent on the installed Order Code options.

Note:

Output Relays setpoints here will revert to default values at power-up.

Path: *Setpoints > Testing > Output Relays*

OUTPUT RELAY 1(X)

Range: Off, On

Default: Off

13.8 GOOSE

When the relay provides GOOSE, a menu is available for testing GOOSE messaging

SETPOINTS > TESTING > GOOSE

TXGOOSE Sim Mode

Range: Disabled, Enabled

Default: Disabled

When disabled, the SIM bit in all transmitted GOOSE messages are set to *FALSE*. When enabled, the SIM bit in all transmitted GOOSE messages are set to *TRUE*.

Accept Sim GOOSE

Range: Disabled, Enabled

Default: Disabled

When disabled, the relay SIM attribute (LPHD1.Sim.StValin) is set to *FALSE* and the GOOSE/SV messages received with simulation bit set are ignored. When enabled, the relay SIM attribute (LPHD1.Sim.StValin) is set to *TRUE* so that if GOOSE/SV messages are received with the SIM bit set, these will be used in place of the normal messages.

CHAPTER 14

STATUS

14.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	607
Summary	608
Breaker status	611
Information	612
Communications status	615
Other status settings	619

14.2 SUMMARY

Configurable Single Line Diagram (SLD)

The status of each SLD screen is displayed under **Status > Summary > Configurable SLDs > SLD1(X)**.

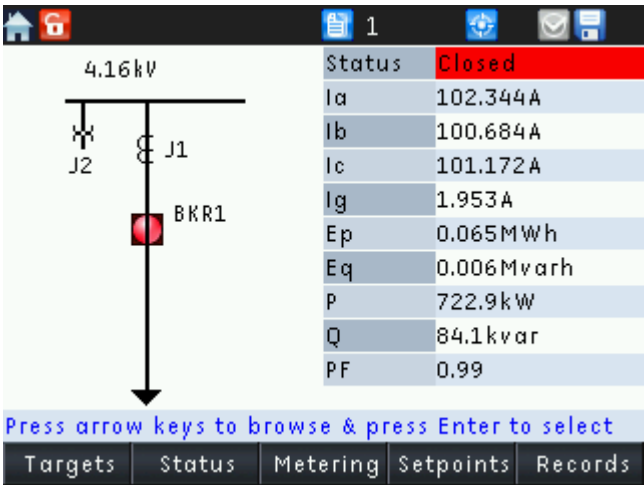


Figure 268: Sample SLD

Once in the SLD screen, by default no breaker/switch is highlighted or selected. Pressing the Up/Dn (or Up/Dn/Left/Right) navigation keys highlights BKR1 and navigates through BKR1, 2, 3, etc. and then through Switch1, 2, 3, etc.

If the Up/Dn/Left/Right keys are used, the selection moves to the closest available breaker/switch from the currently highlighted object. To select the breaker/switch, press the enter key. Upon pressing the Enter key, the tab labels change to the programmable tab pushbutton labels and a flash message for the breaker selected appears (Flash Message: BKR1 Selected). Pressing Escape de-selects the breaker/switch and the tab pushbutton labels.

Annunciator

The graphical annunciator panel emulates a physical annunciator panel. Indicators on the graphical panel are backlit and have a description of the alarm condition that lights each indicator. The annunciator panel status window shows the alarms that are active.

To reset an active alarm, first highlight the active alarm using the navigation keys, then press the reset button to reset the highlighted alarm. If no indicator is selected, all alarms on the page are reset by pushing the reset button.

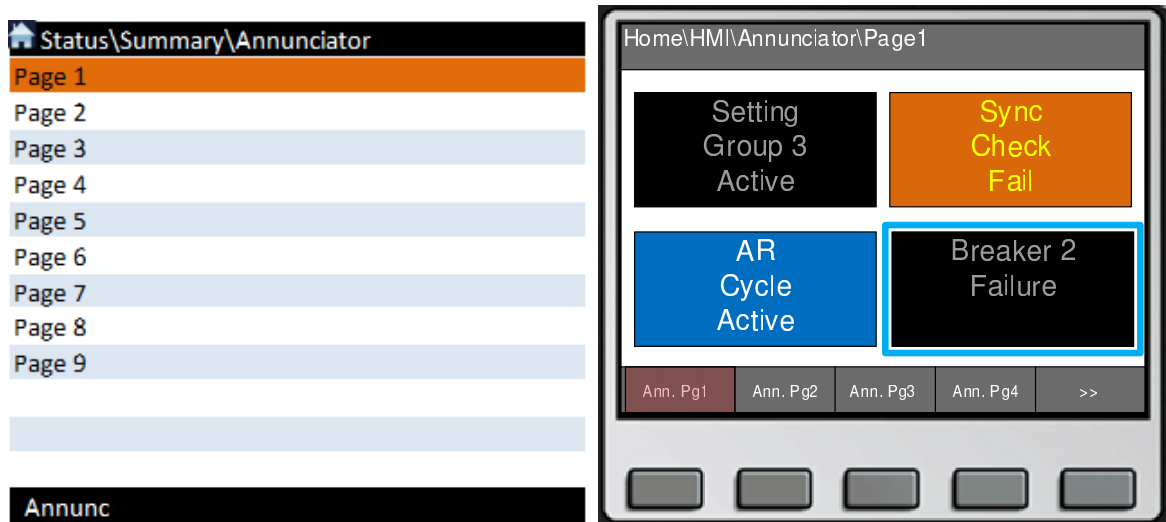


Figure 269: Physical and Graphical Annunciator Panels

Tab pushbuttons

Navigation

There are two ways to navigate to the Tab Pushbutton control pages:

- Relay Home Screens
- **Path: Status > Summary > Tab Pushbuttons** (from relay) **Home Screens**

By default, the Tab Pushbuttons summary page is programmed as one of the Home Screens. Press the home button repeatedly to cycle through the programmed Home Screens.

Note:

Tab pushbuttons can only be controlled physically through the front panel of the relay. Their operation is not available from the setup software.

Path: Status > Summary > Tab Pushbuttons

The initial view of the Tab Pushbutton controls is the Summary page, which shows the status of all 20 pushbuttons. To operate the pushbuttons, navigate to the individual pages where the tab pushbuttons can be used to activate them.

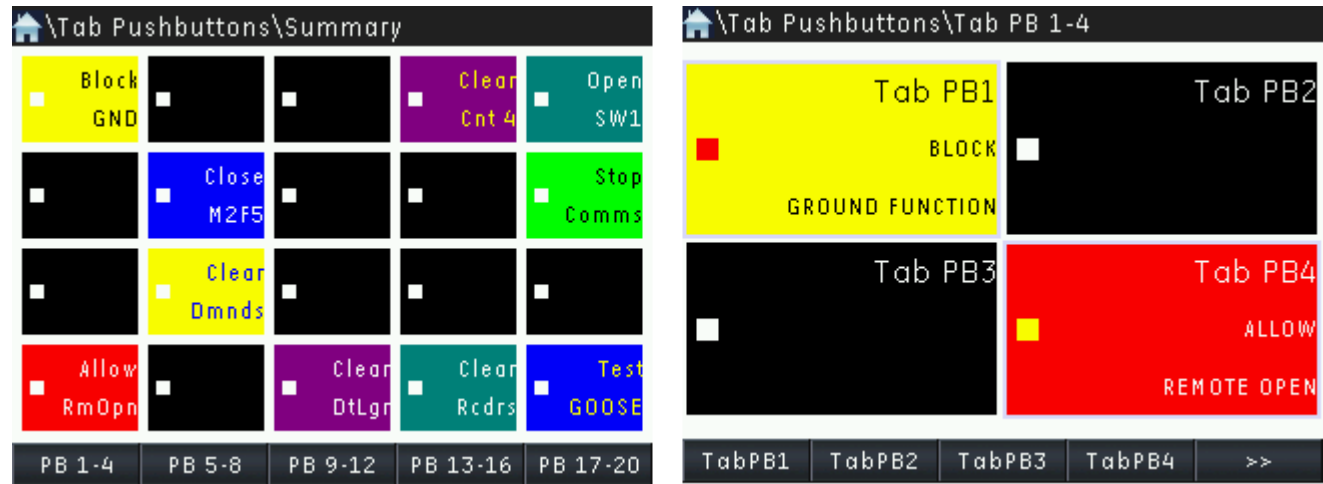


Figure 270: Tab pushbutton summary (left) and detailed view (right)

Only the tab pushbuttons that are not set to Disabled are shown in color; labels for the tab pushbuttons are shown for both active and disabled pushbuttons if labels have been configured. (Configure tab pushbuttons from **Device > Front Panel > Tab PBs > Tab PB1(X).**)

When the actual button is pressed, the button on the screen is highlighted in blue and the PB [X] PRESS operand becomes active. Although a disabled pushbutton can be pressed, no action is taken and its operands are not activated. Pressing ESCAPE returns the screen to Tab Pushbutton summary page. The Short Text for each Tab Pushbutton is used on the Summary Page.

Pressing >> shows the next set of tab pushbuttons. For example, when in the page with pushbuttons 1 to 4, pressing >> will navigate to the screen with pushbuttons 5 to 8. Press >> to cycle through all five pushbutton screens. To go from page 2 to page 1, press >> 4 times to cycle through and navigate to page 1 with pushbuttons 1 to 4. Alternatively, escape to the overall summary screen and navigate to any desired page of pushbuttons.

14.3 BREAKER STATUS

The status of the breaker/breakers is displayed individually. If the selected trip output relay is Form A-type, the status of the breaker Trip and Close circuitry is also displayed here. The screen also includes the total accumulated arcing current information for the breaker.

Path: *Status* > *Breaker* > *Breaker X Status*

STATE

Range: Not Configured, Opened, Closed, Disconnected, State Unknown

The Unknown state is displayed upon discrepancy of the 52a and 52b contacts for more than 30 milliseconds.

Range: Not Set, Fail, OK

The Close coil state is displayed when Form -A output relays are used, and Close Coil monitoring is enabled.

BKR TROLLEY STATE

Range: Not Configured, Opened, Closed, State Unknown

TRIP COIL

Range: Not Set, Fail, OK

The Trip Coil state is displayed when Form -A output relays are used, and Trip Coil monitoring is enabled.

CLOSE COIL

Range: Not Set, Fail, OK

The Close coil state is displayed when Form -A output relays are used, and Close Coil monitoring is enabled.

TOTAL ARCING CURRENT

Range: 0.00 to 42949672.95 kA2-cyc in steps of 0.01

The measure of arcing current from all three phases during breaker trips. Refer to the Breaker Arcing Current element description (under **Setpoints** > **Monitoring** > **Breaker**) for more details.

14.4 INFORMATION

Path: *Status > Information > Relay Info*

The Information pages display fixed device information. the pages are divided into three sections: Main CPU, Comms CPU, and Hardware Versions.

Main CPU

The Information related to the Main CPU is displayed here.

Path: *Status > Information > Relay Info > Main CPU*

- **Order Code:** The installed Order Code
- **Product Serial #:** The relay serial number
- **Hardware Revision:** The hardware revision of the relay
- **Firmware Version:** The firmware version of the Main CPU
- **Firmware Date:** The Main CPU firmware build date in the format mm/dd/yyyy
- **Firmware Time:** The Main CPU firmware build time
- **Boot 1/2 Version:** The boot 1/2 code version of the Main CPU
- **Boot 1/2 Date:** The Main CPU boot 1/2 code build date in the format mm/dd/yyyy
- **Boot 1/2 Time:** The Main CPU boot 1/2 code build time
- **MAC Address 1:** The MAC address for copper Ethernet port 1
- **Remote CANBUS RMIO:** The commissioned value of the CANBUS IO is displayed here. If the relay has never been commissioned then the value is None, i.e. default = None and Range = 6 alphanumeric characters.
- **NUM of RMIO RTDs:** The number of remote RTDs detected

Comms CPU

The Information related to the Comms CPU is displayed here.

Path: *Status > Information > Relay Info > Comms CPU*

- **Comms CPU FW Version:** The firmware version of the Comms CPU
- **Comms CPU Firmware Date:** The Comms CPU firmware build date in the format mm/dd/yyyy
- **Comms CPU Firmware Time:** The Comms CPU firmware build time
- **Boot Version:** The boot code version of the Comms CPU
- **Boot Date:** The Comms CPU boot code build date in the format mm/dd/yyyy
- **Boot Time:** The Comms CPU boot code build time
- **MAC Address 1:** The MAC address for Ethernet port 4
- **MAC Address 2:** The MAC address for Ethernet port 5

Hardware versions

Path: *Status > Information > Relay Info > Hardware Versions*

The Information related to the relay hardware is displayed here.

Hardware Versions	
FPGA Firmware Version	03:14:10:31
IO F CPLD	05:14:12:09
IO G CPLD	05:14:12:09
AN J CPLD	08:14:12:03
AN K CPLD	08:14:12:03
Display CPLD	02:13:05:10

Figure 271: Information for Hardware Versions

- **FPGA Firmware Version:** The firmware version of the FPGA
- **IO F CPLD:** The version of the CPLD in IO slot F
- **IO G CPLD:** The version of the CPLD in IO slot G
- **AN J CPLD:** The version of the CPLD in analog slot J
- **AN K CPLD:** The version of the CPLD in analog slot K
- **Display CPLD:** The version of the CPLD of the display

Environment

The Information related to Environmental is displayed here.

Note:

The Temperature Display setpoint can be changed from Celsius to Fahrenheit under **Setpoints > Device > Installation**.

Path: Status > Information > Environment

- **Instantaneous Temperature:** The most recent temperature measurement taken by the EAM.
- **Firmware Version:** The software version of the EAM module found in the relay.
- **Last Poll Date/ Time:** The date and time on which the last measurements were recorded in the format MM/DD/YY and HH/MM/SS.
- **Average Humidity:** The average of all the humidity measurements taken over time (last 1 hr) by the EAM.
- **Maximum Humidity:** The maximum humidity measurement taken by the EAM since it began recording data.
- **Minimum Humidity:** The minimum humidity measurement taken by the EAM since it began recording data.
- **Average Ambient Temp:** The average of all the instantaneous temperature measurements taken over time (last 1 hr) by the EAM.
- **Maximum Ambient Temp:** The maximum temperature taken by the EAM since it began recording data.
- **Minimum Ambient Temp:** The minimum temperature taken by the EAM since it began recording data.
- **Humidity (e.g. <30%):** The accumulated amount of time (hrs) that the humidity measured by the EAM stayed in the range specified.
- **Temp (e.g. <=-20°C):** The accumulated amount of time (hrs) that the temperature measured by the EAM stayed in the range specified.
- **Temp and Humidity (e.g. >40°C and <55%):** The accumulated amount of time (hrs) that the temperature and humidity measured by the EAM stayed in the ranges specified.
- **Surge Count:** The number of surge (>500 V/1.2/50 µS) events that have occurred since the EAM started recording data.

The Information related to settings changes and settings file history is displayed here.

Settings Audit

Path: *Status* > *Information* > *Settings Audit*

- **Last Setting Change:** The date and time of the last setting change.
- **File Modified:**
- **File Received:**
- **File Origin:**
- **File Name:**

14.5 COMMUNICATIONS STATUS

14.5.1 GOOSE

The relay supports 16 GOOSE transmissions and 64 GOOSE receptions each with 64 items per transmission or reception. Non-structured GOOSE is supported. Each item within the GOOSE message can be a digital or analog value. Messages are launched within one scan of a digital point status change or an analog exceeding its deadband.

The server supports a subset of the server features described in part 7.2 of the IEC 61850 standard.

GOOSE Messaging

The details are shown in the table below:

Service	Launch Speed	Support for Programmable time to live	# of Tx	# of Rx	Test Bit Support	Number of items in each transmission or reception	Number of remote inputs per relay
Configurable GOOSE	Within 2 ms (1 CPU scan)	Time to live programmable from 1000 to 60000 ms	16	64	Y	64 Data Items per Data Set	32

14.5.2 COMMUNICATIONS STATUS SETTINGS

REMOTE INPUTS

Path: *Status > Communications > Remote Inputs*

The present state of the 32 remote inputs are shown here. The state displayed is the remote point unless the remote device has been established to be Offline in which case the value shown is the programmed default state for the remote input.

GGIO1 INDICATIONS

Path: *Status > Communications > GGIO1 Indications*

The present state of the 32 GGIO1 Indications are shown here. There are up to 32 GGIO indications that can be used to map any FlexLogic operand into the IED 61850 information model. Default value is "Off".

GOOSE STATUS

Path: *Status > Communications > GOOSE Status*

Range: OFF, ON

Default: OFF

This setting indicates GOOSE communications are being received. A **GOOSE STATUS** of "ON" indicates successful receipt of the last GOOSE packet. A **GOOSE STATUS** of "OFF" indicates the communications link has failed, with the speed this setting changes determined by the Update Time setting configured under GOOSE Transmission.

GOOSE HEADER

Path: *Status > Communications > GOOSE HDR Status*

Range: OFF, ON

Default: OFF

This setting validates the GOOSE packet structure. A **GOOSE HEADER STATUS** of "ON" indicates that the structure of the last GOOSE packet was valid.

GOOSE ANALOG

Path: *Status* > *Communications* > *GOOSE Analog AV*

FLOAT 1 to 24

Range:

Default: 0.0

SINT32 1 to 8

Range:

Default: 0

IEC 61850 STATUS

Path: *Status* > *Communications* > *IEC 61850 Status*

COMMS NOT VALIDATED OK

Range: NO, YES

Default: NO

COMMS NOT VALIDATED DONE

Range: YES, NO

Default: YES

COMMS VALIDATED OK

Range: YES, NO

Default: YES

COMMS VALIDATED DONE

Range: YES, NO

Default: YES

MAIN NOT VALIDATED OK

Range: NO, YES

Default: NO

MAIN NOT VALIDATED DONE

Range: YES, NO

Default: YES

MAIN VALIDATED OK

Range: YES, NO

Default: YES

MAIN VALIDATED DONE

Range: YES, NO

Default: YES

NOT RUNNING.ERROR CID

Range: NO, YES

Default: NO

RUNNING.DEFAULT CID

Range: NO, YES

Default: NO

RUNNING.SAVING CID TO FLASH

Range: NO, YES

Default: NO

CID HANDLING DONE

Range: YES, NO

Default: YES

NUMBER OF CONNECTED CLIENTS

Default: 0

CLIENT 1(8) IP ADDRESS

Range: 0, 0xFFFFFFFF

Default: 0

ACTIVITY STATUS

The communication state for each enabled communication type is shown by its value. The main CPU and Comms software sets/resets the active bits for all enabled communication types. The communication state bits are not latched.

Path: *Status > Communications > Activity Status*

SERIAL MODBUS

Range: NONE, ACTIVE

Default: NONE

ETHERNET MODBUS

Range: NONE, ACTIVE

Default: NONE

Note:

The **MODBUS ACTIVITY TIMEOUT** specifies the minimum time without Modbus communication. This timeout is used to declare the Modbus 'Loss of Communication' state. The **MODBUS ACTIVITY TIMEOUT** must be set to a value other than 0 for the Serial Modbus and Ethernet Modbus Activity Status to work properly.

Note:

MODBUS ACTIVITY TIMEOUT is set under: *Setpoints > Device > Communications > Modbus Protocol*

CONNECTIONS

Path: *Status > Communications > Connections*

MMS TCP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

MMS TCP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

Modbus TCP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

Modbus TCP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

DNP TCP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

DNP TCP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

IEC - 104 - Maximum

Range: 0 to 99 in steps of 1

Default: 0

IEC - 104 - Remaining

Range: 0 to 99 in steps of 1

Default: 0

OPC - UA - Maximum

Range: 0 to 99 in steps of 1

Default: 0

OPC - UA - Remaining

Range: 0 to 99 in steps of 1

Default: 0

SFTP - Maximum

Range: 0 to 99 in steps of 1

Default: 0

SFTP - Remaining

Range: 0 to 99 in steps of 1

Default: 0

14.6 OTHER STATUS SETTINGS

Switches

Path: Status > Switches

SWITCH 1(X)

Range: Not Configured, Opened, Closed, Intermittent, Discrepancy

Default: Not Configured

Last Trip Data

There is no Enabling/Disabling of this feature. It is always ON.

Path: Status > Last Trip Data

CAUSE

Range: Off, Any FlexLogic Operand

Default: No trip to Date

EVENT

Range: 0 to 4294967295 in steps of 1

Default: 0

DATE

Range: MM/DD/YYYY HH:MM

Default: 01/01/08 00:00:00

PARAMETER 1 to 64

Range: -2147483648 to 2147483647 in steps of 1

Default: 0

Arc Flash

Path: Status > Arc Flash > Arc Flash 1

The status value shows the state of the given Flex operand related to Arc Flash protection.

Light 1(4) PKP

Range: ON, OFF

HS Phase IOC PKP A/B/C

Range: ON, OFF

HS Ground IOC PKP

Range: ON, OFF

Arc Flash OP

Range: ON, OFF

Contact Inputs

Path: Status > Contact Inputs

The status of the Contact Inputs is shown here (see device menu via the menu path). The Off/On display indicates the logic state of the Contact Input.

Output Relays

Path: *Status > Output Relays*

The status of all output relays is shown here, see above. In the Parameter column, the value indicates the label on the output terminal. The Value column indicates the present ON or OFF state of the output relay.

Virtual Inputs

Path: *Status > Virtual Inputs 1(X)*

The state of all virtual inputs is shown here, see next figure. The value for each Virtual Input is shown on the control panel graphically as a toggle switch in either the On (I) state or the Off (O) state.

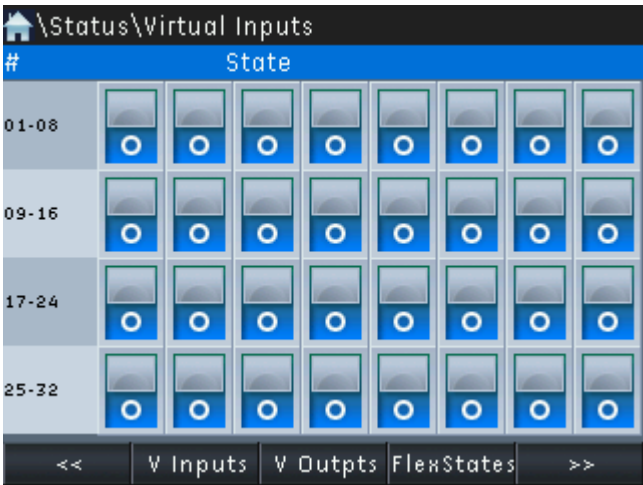


Figure 272: Status of Virtual Inputs, HMI

PARAMETER	VALUE
Virtual Input 1 ()	Off
Virtual Input 2 ()	Off
Virtual Input 3 ()	Off
Virtual Input 4 ()	Off
Virtual Input 5 ()	Off
Virtual Input 6 ()	Off
Virtual Input 7 ()	Off
Virtual Input 8 ()	Off
Virtual Input 9 ()	Off

Figure 273: Status of Virtual Inputs, EnerVista D&I Setup

Virtual Outputs

Path: *Status > Virtual Outputs*

The state of all virtual outputs is shown here, see next figure. The value for each Virtual Output is shown on the control panel graphically as a toggle switch in either the On (I) state or the Off (O) state.

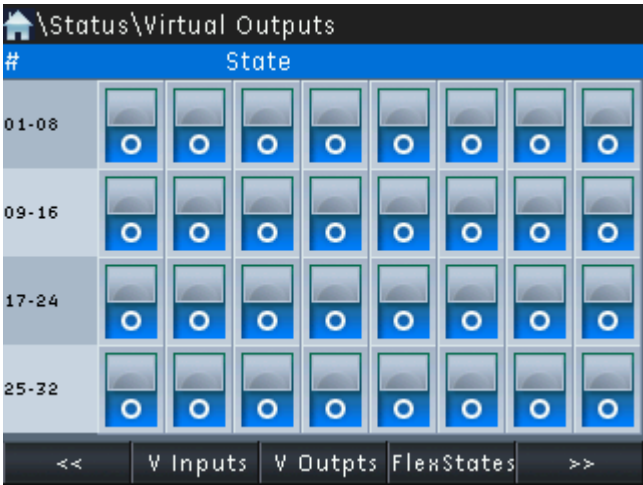


Figure 274: Status of Virtual Outputs, HMI

PARAMETER	VALUE
Virtual Output 1 ()	Off
Virtual Output 2 ()	Off
Virtual Output 3 ()	Off
Virtual Output 4 ()	Off
Virtual Output 5 ()	Off
Virtual Output 6 ()	Off
Virtual Output 7 ()	Off
Virtual Output 8 ()	Off

Figure 275: Status of Virtual Outputs, EnerVista D&I Setup

Flex State

Path: *Status > Flex States*

There are 256 Flex state bits available. The status value indicates the state of the given Flex state bit.

Device Status

The general status of system components is displayed here.

Path: *Status > Device Status*

RUNNING, SAVING CID to FLASH

Range: YES, NO

Default: NO

CID HANDLING DONE

Range: YES, NO

Default: YES

SELF-TEST FAULT

Range: YES, NO

Default: NO

MAINTENANCE

Range: YES, NO

Default: NO

IN SERVICE

Range: YES, NO

Default: YES

PICKUP STATE

Range: YES, NO

Default: YES

BREAKER X CONNECTED

Range: YES, NO

Default: YES

BREAKER X CLOSED

Range: YES, NO

Default: NO

BREAKER X TRIPPED

Range: YES, NO

Default: NO

ALARM

Range: YES, NO

Default: NO

TRIP

Range: YES, NO

Default: NO

ACTIVE GROUP

Range: SP Group 1-6 Active

Default: SP Group 1 Active

Clock Status

Path: Status > Clock

SYSTEM CLOCK

Range: MMM DD YY HH:MM:SS

RTC SYNC SOURCE

Range: None, Port 4 PTP Clock, Port 5 PTP Clock, IRIG-B, SNTP Server 1, SNTP Server 2

The RTC SYNC SOURCE actual value is the time synchronizing source the relay is using at present.

PTP Status

The present values of the PTP protocol are displayed here.

Path:Status > PTP

Grandmaster ID is the grandmaster Identity code being received from the present PTP grandmaster, if any. When the relay is not using any PTP grandmaster, this actual value is zero. The grandmaster Identity code is specified by PTP to be globally unique, so one can always know which clock is grandmaster in a system with multiple grandmaster-capable clocks.

RTC Accuracy is the estimated maximum time difference at present in the Real Time Clock (RTC), considering the quality information imbedded in the received time signal, how long the relay has had to lock to the time source, and in the case of time signal interruptions, the length of the interruption. The value 999,999,999 indicates that the magnitude of the estimated difference is one second or more, or that the difference cannot be estimated.

Port 4 (5) PTP State is the present state of the port's PTP clock. The PTP clock state is:

- DISABLED: If the port's function setting is Disabled
- NO SIGNAL: If enabled but no signal from an active master has been found and selected
- CALIBRATING: If an active master has been selected but lock is not at present established
- SYNCH'D (NO PDELAY): If the port is synchronized, but the peer delay mechanism is non-operational
- SYNCHRONIZED: If the port is synchronized

HMI Display

The HMI Display menu option opens a virtual HMI Display window within the EnerVista D&I Setup. The virtual HMI display provides front panel access to the relay with clickable buttons and realtime display of the front panel, including navigation and viewing relay settings, screens, and LEDs.

Path:Status > HMI Display

Note:

The HMI Display functionality is not available with the Advanced Cybersecurity option

CHAPTER 15

METERING

15.1 CHAPTER OVERVIEW

This chapter provides some information about the device maintenance.

This chapter contains the following sections:

Chapter Overview	625
Metering Overview	626
Metering Summary	629
Transformer metering	630
Currents	633
Neutral IOC	635
Voltages	636
Frequency	639
Harmonics	641
Synchrocheck	644
Percent Differential Current	645
Inter-Turn Fault Detection	646
Power functions	648
Energy	652
Demand	655
Voltage Transformer Fuse Failure	657
Arc Flash	658
Resistance Temperature Detectors	659
Resistance Temperature Detectors	660
Resistance Temperature Detectors	661
Resistance Temperature Detectors	662
Analog Inputs	663
FlexElements	664

15.2 METERING OVERVIEW

All phasors calculated by 8 Series relays and used for protection, control and metering functions are rotating phasors, that maintain the correct phase angle relationships with each other at all times.

For display and oscillography purposes, all phasor angles in a given relay are referred to an AC input channel pre-selected as the phase A voltage. If there is no voltage input, the phase A current is used for angle reference. The phase angle of the reference signal always display zero degrees and all other phase angles are relative to this signal. If the preselected reference signal is not measurable at a given time, the phase angles are not referenced.

The phase angles are always presented as negative values in the lagging direction as illustrated in the following.

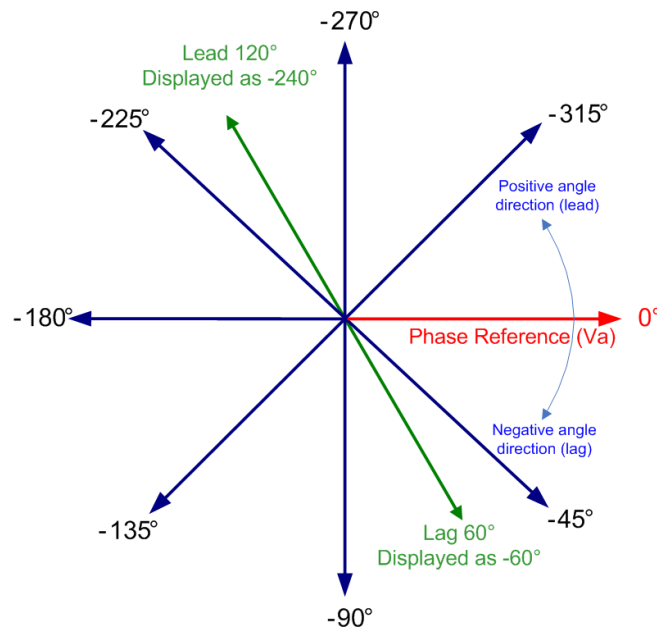


Figure 276: Phase Angle Measurement 8 Series Convention

The relay measures all RMS (root mean square) currents and voltages, frequency, and all auxiliary analog inputs. Other values like neutral current, phasor symmetrical components, power factor, power (real, reactive, apparent), are derived. A majority of these quantities are recalculated every protection pass and perform protection and monitoring functions. Displayed metered quantities are updated approximately three (3) times a second for readability. All phasors and symmetrical components are referenced to the A-N voltage phasor for wye-connected VTs; to the A-B voltage phasor for delta-connected VTs; or to the phase A current phasor when no voltage signals are present.

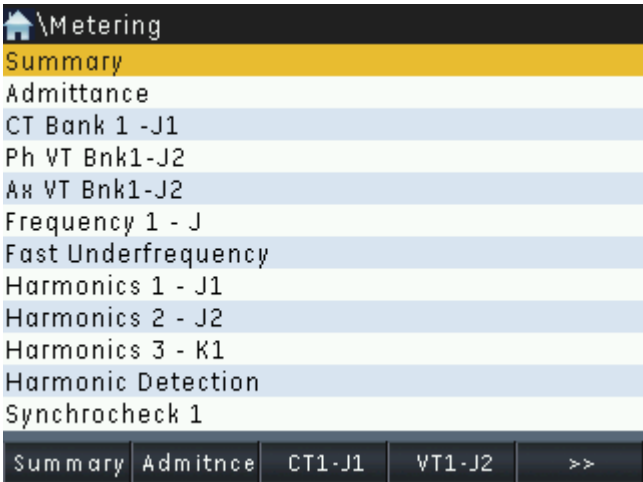


Figure 277: An example of the Metering menu (not representative of all models)

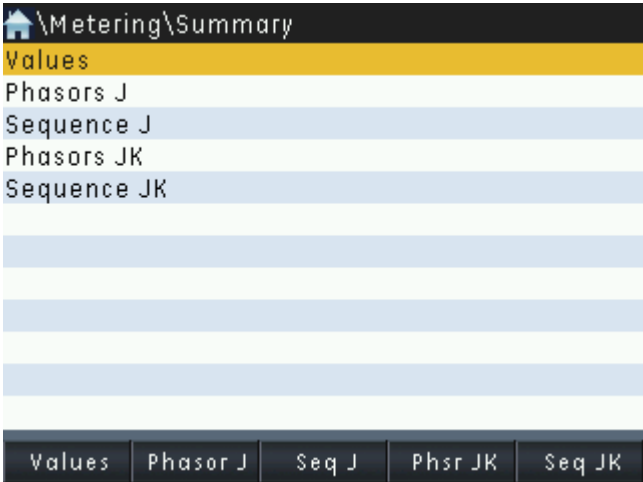


Figure 278: An example of the Metering Summary submenu

All the measured values can be viewed on the front panel display or monitored by remote devices through the communication system. An example of the HMI display showing actual currents is shown here.

\Metering\CT Bank 1 -J1		
Item Name	Value	Unit
J1 Ia	0.000	A
J1 Ib	0.000	A
J1 Ic	0.000	A
J1 Ig	0.000	A
J1 In	0.000	A
J1 Ia RMS	0.000	A
J1 Ib RMS	0.000	A
J1 Ic RMS	0.000	A
J1 Ig RMS	0.000	A
J1 In RMS	0.000	A
J1 Ia Angle	0.0	°
Summary	Motor	CT1-J1 CT2-K1 >>

Figure 279: An example of HMI display showing actual currents

The measured values can also be displayed in the PC (EnerVista D&I Setup). An example follows.

SETTING	PARAMETER
J1 Ia	0.000 A
J1 Ib	0.000 A
J1 Ic	0.000 A
J1 Ig	0.000 A
J1 In	0.000 A
J1 Ia RMS	0.000 A
J1 Ib RMS	0.000 A
J1 Ic RMS	0.000 A
J1 Ig RMS	0.000 A
J1 In RMS	0.000 A
J1 Ia Angle	0.0 °
J1 Ib Angle	0.0 °
J1 Ic Angle	0.0 °
J1 Ig Angle	0.0 °
J1 In Angle	0.0 °
J1 I AVG	0.000 A
J1 L0	0.000 A
J1 L1	0.000 A
J1 L2	0.000 A
J1 L0 Angle	0.0 °
J1 L1 Angle	0.0 °
J1 L2 Angle	0.0 °
J1 Load	0.0 %

Quick Connect Device Metering

Figure 280: Current Metering Screen

The complete list of actual values available in the Metering menu is covered in the following sections.

15.3 METERING SUMMARY

Path: *Metering* > *Summary*

The Metering Summary menu consists of three display screens, including a graphical presentation of key phasor quantities as shown below:

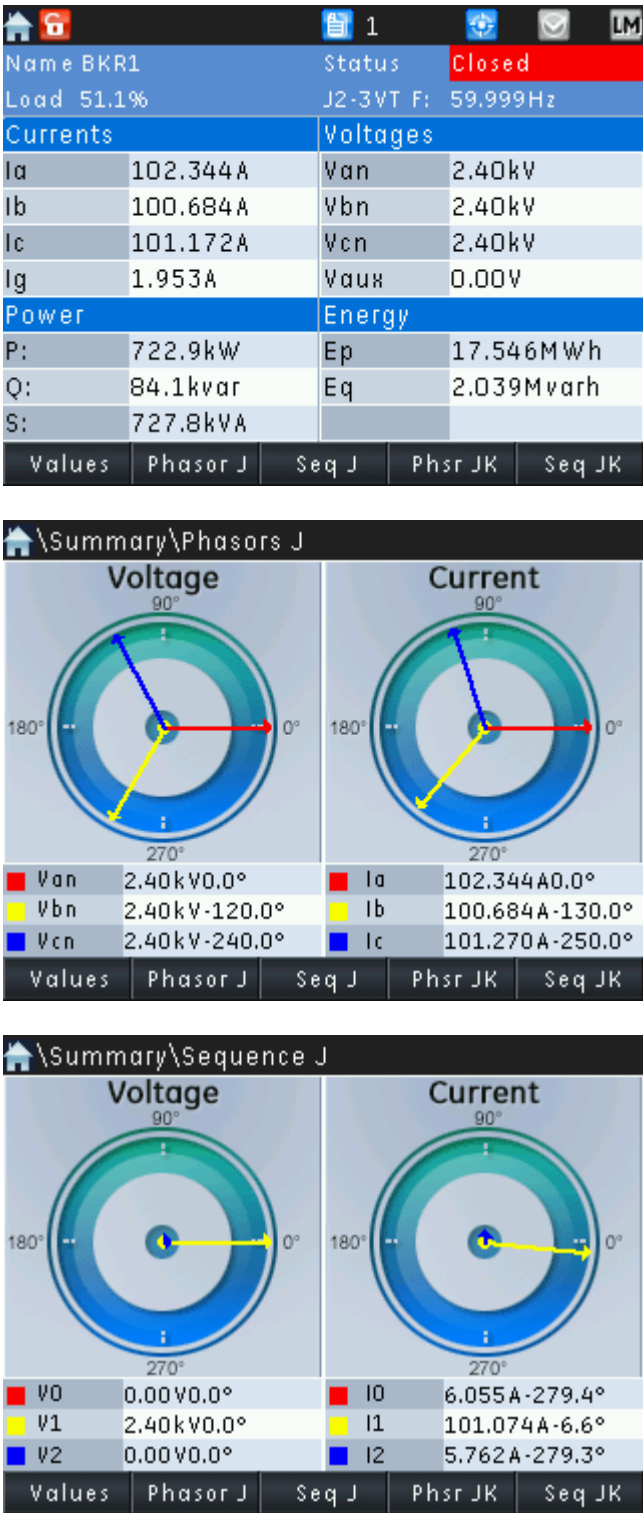


Figure 281: Metering summary screens

15.4 TRANSFORMER METERING

Path: *Metering* > *Summary*

The Metering Summary menu consists of three display screens, including a graphical presentation of key phasor quantities as shown below:

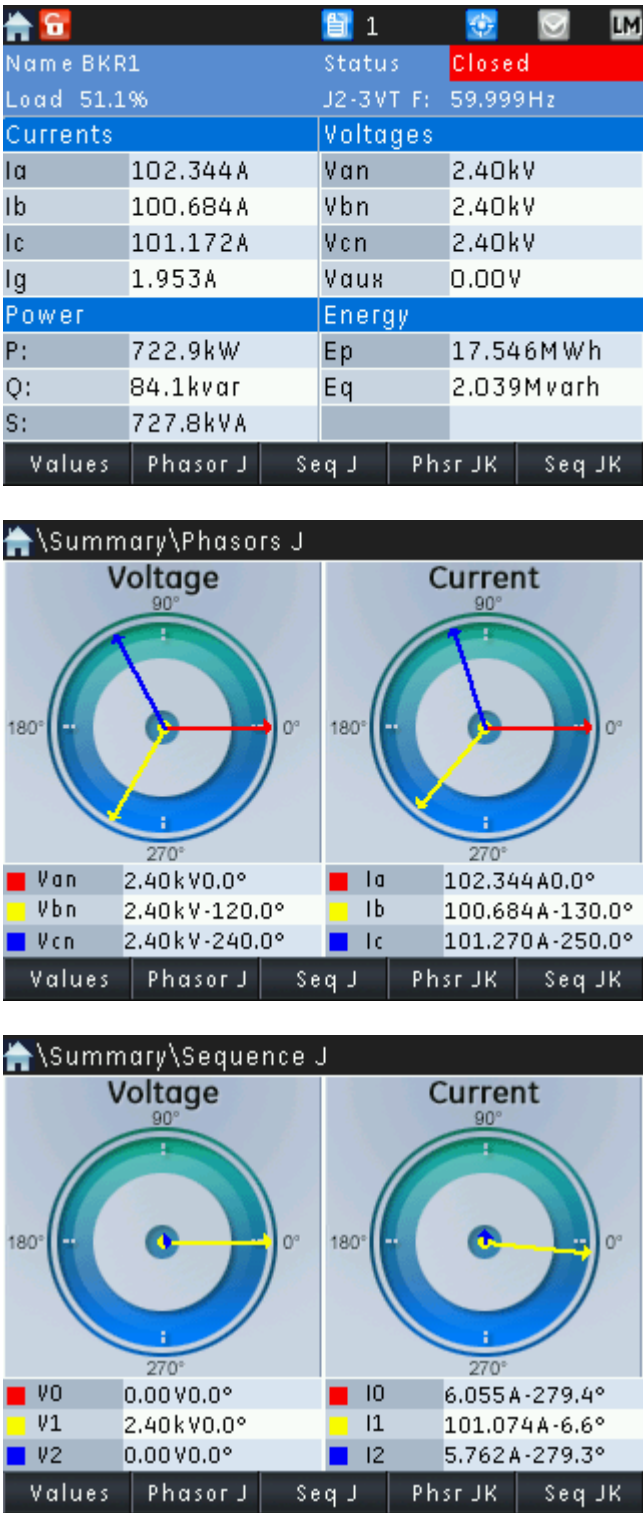


Figure 282: Metering summary screens

15.4.1 WINDINGS

The harmonic derating factor for each of the windings shows the effect of non-sinusoidal load currents on the power transformer's rated full load current. The actual values messages display the harmonic derating factor for windings 1 through 3.

The relay displays winding load parameters as follows:

Path: *Metering* > *Transformer* > *Windings*

Winding 1 load (W1 Load (% of rated))

Range: 0.0 to 100.0 %

Winding 1 average phase current (W1 Average Ph Current)

Range: 0.000 to 120000.000 A

Winding 1 harmonic derating factor (W1 Harm Derate Factor)

Range: 0.00 to 1.00

Winding 2 load (W2 Load (% of rated))

Range: 0.0 to 100.0 %

Winding 2 average phase current (W2 Average Ph Current)

Range: 0.000 to 120000.000 A

Winding 2 harmonic derating factor (W2 Harm Derate Factor)

Range: 0.00 to 1.00

Winding 3 load (W3 Load (% of rated))

Range: 0.0 to 100.0 %

Winding 3 average phase current (W3 Average Ph Current)

Range: 0.000 to 120000.000 A

Winding 3 harmonic derating factor (W3 Harm Derate Factor)

Range: 0.00 to 1.00

For a two winding transformer the winding load and winding average phase current are calculated as:

$$W(1/2) \text{ Load (\% of rated)} = \sqrt{3} \times I_{avg}(1/2) \times V_{rated}(1/2) \times 100\% / S_{rated}$$

Where:

$I_{avg} = (I_a + I_b + I_c)/3$ is the actual average phase current (W(1/2) Average Ph Current) for the corresponding winding.

I_a, I_b, I_c are magnitudes of the corresponding actual phase currents of the winding.

V_{rated} is the rated phase to phase nameplate voltage for the corresponding winding.

S_{rated} is the rated nameplate apparent power for the transformer.

For a three winding transformer the winding load and winding average phase current are calculated as:

$$W(1/2/3) \text{ Load (\% of rated)} = \sqrt{3} \times I_{avg}(1/2/3) \times V_{rated}(1/2/3) \times 100\% / S_{Wrated}(1/2/3)$$

Where:

Iavg = $(I_a + I_b + I_c)/3$ is the actual average phase current (W(1/2/3) Average Ph Current) for the corresponding winding.

Ia , Ib , Ic are magnitudes of the corresponding actual phase currents of the winding.

Vrated is the rated phase to phase nameplate voltage for the corresponding winding.

Srated is the rated nameplate apparent power for the transformer.

15.4.2 THERMAL ELEMENTS

Path: *Metering > Transformer > Thermal Elements*

The calculation of all Thermal Elements actual values starts at the time the relay is first powered up. Therefore, the Daily Rate Loss of Life starts accumulating in the next 24 hour period. All records can be cleared either from the relay's keypad, or from the EnerVista D&I Setup using the **Clear Loss of Life** command from the menu **Records/ Clear Records**.

15.4.3 TAP CHANGER

Path: *Metering > Transformer > Tap Changer*

Tap Position

Range: -19 to 39 in steps of 1, Invalid, Not Set

Ohms In 1

Range: 0 to 5100 ohms in steps of 1

Winding Voltage

Range: 0.00 to 1200000.00 kV in steps of 0.01

Delta V Above Min Tap V

Range: 0.00 to 1200000.00 kV in steps of 0.01

Invalid Tap Detection

An **Invalid** tap position is displayed under one of the following conditions:

- The measured analog input value is one tap step lower than the analog value corresponding to minimum tap.
- The measured analog input value is one tap step higher than the analog value corresponding to maximum tap.
- The detected BCD combination corresponds to a tap which is either below the minimum, or above the maximum tap programmed in Tap Changer setup menu.
- Sudden change from valid BCD combination corresponding to a valid tap position to another valid BCD combination corresponding to a non-sequential tap position.

15.5 CURRENTS

Note:

The number of Currents supported is order code dependent.

The CT bank names shown are set in the CT Bank Name setpoints under **Setpoints > System > Current Sensing > CT Bank X**.

Note:

Below is a complete list of quantities. The quantities visible to you will depend on the model and order code

Path: Metering > CT Bank 1-J1 (CT Bank 2-K1) (CT Bank 3-K2) (CT Bank 4-JK)

Phase A/B/C (Ia/Ib/Ic) 0.000 A

Range: 0.000 to 12000.000 A

Ground (Ig)

Range: 0.000 to 12000.000 A

Sensitive Ground (Isg)

Range: 0.000 to 1200.000 A

Neutral (In)

Range: 0.000 to 12000.000 A

Phase A/B/C (Ia/Ib/Ic RMS)

Range: 0.000 to 12000.000 A

Ground (Ig RMS)

Range: 0.000 to 12000.000 A

Sensitive Ground (Isg RMS)

Range: 0.000 to 1200.000 A

Neutral (In RMS)

Range: 0.000 to 12000.000 A

Phase A/B/C Angle (Ia/Ib/Ic Angle)

Range: 0.0 to 359.9°

Ground Angle (Ig Angle)

Range: 0.0 to 359.9°

Sensitive Ground Angle (Isg Angle)

Range: 0.0 to 359.9°

Neutral Angle (In Angle)

Range: 0.0 to 359.9°

Average (I AVG)

Range: 0.000 to 12000.000 A

Zero Sequence (I_0)

Range: 0.000 to 12000.000 A

Positive Sequence (I_1)

Range: 0.000 to 12000.000 A

Negative Sequence (I_2)

Range: 0.000 to 12000.000 A

Zero Sequence (I_0 Angle)

Range: 0.0 to 359.9°

Positive Sequence Angle (I_1 Angle)

Range: 0.0 to 359.9°

Negative Sequence Angle (I_2 Angle)

Range: 0.0 to 359.9°

Ground Differential (Igd)

Range: 0.000 to 12000.000 A

Ground Differential Angle (Igd Angle)

Range: 0.0 to 359.9°

Load (I%) (not applicable to all models)

Range: 0.0 to 100.0%

Note:

Percent of load-to-trip is calculated from the phase with the highest current reading. This metered value is the ratio between the highest phase current injected for the current bank, and the lowest pickup setting among all Phase Timed and Instantaneous overcurrent elements. If all these elements are disabled, the value displayed is 0.

Note:

For example, if the lowest pickup is 0.5 xCT, and the highest injected phase current is 1 xCT, the displayed value for load-to-trip is 200%.

15.6 NEUTRAL IOC

Path: *Metering > Neutral IOC*

Neutral IOC1(X) Iop

Range: 0.000 to 12000.000 A

Default: 0 A

This value represents the operating quantity of the Neutral IOC element. For more details, see Neutral Instantaneous Overcurrent Protection.

15.7 VOLTAGES

Note:

The number of Voltages supported is order code dependent.

Note:

The VT bank names shown are set in the Phase VT Bank Name setpoints under **Setpoints > System > Voltage Sensing > VT**.

Note:

Below is a complete list of quantities. The quantities visible to you will depend on the model and order code

Path: Metering > VT Bank > Ph VT Bnk1-J2 (Ph VT Bnk2-K2)

Phase A (Van)

Range: 0.00 to 600000.00 V

Phase B (Vbn)

Range: 0.00 to 600000.00 V

Phase C (Vcn)

Range: 0.00 to 600000.00 V

Phase to Phase AB (Vab)

Range: 0.00 to 600000.00 V

Phase to Phase BC (Vbc)

Range: 0.00 to 600000.00 V

Phase to Phase CA (Vca)

Range: 0.00 to 600000.00 V

Neutral (Vn)

Range: 0.00 to 600000.00 V

Phase A (Van RMS)

Range: 0.00 to 600000.00 V

Phase B (Vbn RMS)

Range: 0.00 to 600000.00 V

Phase C (Vcn RMS)

Range: 0.00 to 600000.00 V

Phase to Phase AB (Vab RMS)

Range: 0.00 to 600000.00 V

Phase to Phase BC (Vbc RMS)

Range: 0.00 to 600000.00 V

Phase to Phase CA (Vca RMS)

Range: 0.00 to 600000.00 V

Neutral (Vn RMS)

Range: 0.00 to 600000.00 V

Phase A Angle (Van Angle)

Range: 0.0 to 359.9°

Phase B Angle (Vbn Angle)

Range: 0.0 to 359.9°

Phase C Angle (Vcn Angle)

Range: 0.0 to 359.9°

Phase to Phase AB Angle (Vab Angle)

Range: 0.0 to 359.9°

Phase to Phase BC Angle (Vbc Angle)

Range: 0.0 to 359.9°

Phase to Phase CA Angle (Vca Angle)

Range: 0.0 to 359.9°

Neutral Angle (Vn Angle)

Range: 0.0 to 359.9°

Average Phase to Phase (V AVG L-L)

Range: 0.00 to 600000.00 V

Average Phase (V AVG L-N)

Range: 0.00 to 600000.00 V

Zero Sequence (V0)

Range: 0.00 to 600000.00 V

Positive Sequence (V1)

Range: 0.00 to 600000.00 V

Negative Sequence (V2)

Range: 0.00 to 600000.00 V

Zero Sequence Angle (V0 Angle)

Range: 0.0 to 359.9°

Positive Sequence Angle (V1 Angle)

Range: 0.0 to 359.9°

Negative Sequence Angle (V2 Angle)

Range: 0.0 to 359.9°

Path: *Metering* > *Aux VT Bank* > *Ax VT Bnk1-J2 (Ax VT Bnk2-K2)*

Auxiliary Voltage (Vaux)

Range: 0.00 to 600000.00 V

Auxiliary Voltage RMS (Vaux RMS)

Range: 0.00 to 600000.00 V

Auxiliary Voltage Angle (Vaux Angle)

Range: 0.0 to 359.9°

15.8 FREQUENCY

Note:

Below is a complete list of quantities. The quantities visible to you will depend on the model and order code

Path: *Metering* > *Frequency 1 - J*

Frequency (Current Input J1-CT)

Range: 2.000 to 90.000 Hz

CT Frequency

Range: 20 to 100 Hz

CT Frequency Rate of Change

Range: -20.00 to 20.00 Hz/s

Frequency Rate of Change (Current Input J1-CT)

Range: -20.00 to 20.00 Hz/s

Frequency (Phase Voltage Input J2-3VT)

Range: 2.000 to 90.000 Hz

3 VT Frequency

Range: 20 to 100 Hz

3 VT Frequency Rate of Change

Range: -20.00 to 20.00 Hz/s

Frequency Rate of Change (Phase Voltage Input J2-3VT)

Range: -20.00 to 20.00 Hz/s

Frequency (Auxiliary Voltage Input J2-Vx)

Range: 2.000 to 90.000 Hz

Frequency Rate of Change (Auxiliary Voltage Input J2-Vx)

Range: -20.00 to 20.00 Hz/s

Frequency (Phase Voltage Input LEA1)

Range: 2.000 to 90.000 Hz

Frequency Rate of Change (Phase Voltage Input LEA1)

Range: -20.00 to 20.00 Hz/s

Frequency (Phase Voltage Input LEA2)

Range: 2.000 to 90.000 Hz

Frequency Rate of Change (Phase Voltage Input LEA2)

Range: -20.00 to 20.00 Hz/s

15.8.1 HIGH-SPEED FREQUENCY

Path: *Metering > Hi-speed Freq*

The high speed frequency and high speed rate of change monitored in the High-Speed Underfrequency element are displayed here only if the High Speed Frequency is Enabled under the Common Setup section.

- High Speed Frequency
- High Speed ROCOF

Range: -120.00 to 120.00 Hz/s in steps of 0.01

HIGH-SPEED FREQ MAG

Range: 40.00 to 70.00 Hz in steps 0.01 Hz

Default: 60.00 Hz

HIGH-SPEED ROCOF

Range: -120.00 to 120.00 Hz/sec in steps 0.01 Hz/sec

Default: 0.00 Hz/sec

4TH HIGH-SPEED FREQ MAG

Range: 40.00 to 70.00 Hz in steps 0.01 Hz

Default: 60.00 Hz

4TH HIGH-SPEED ROCOF

Range: -120.00 to 120.00 Hz/sec in steps 0.01 Hz/sec

Default: 0.00 Hz/sec

15.8.2 VOLTS PER HERTZ

Path: *Metering > Volts per Hertz*

VOLTS PER HERTZ 1 (2)

Range: 0.00 to 4.00 V/Hz in steps of 0.01

Default: 0.00 V/Hz

15.9 HARMONICS

Note:

The number of Harmonics supported is dependent on the model and the order code.

All values relate to phase currents measured on the input cards (J1, etc.).

Path: *Metering* > *Harmonics 1 - J1*

Phase A/B/C Total Harmonic Distortion (Phase A/B/C THD)

Range: 0.0 to 100.0%

Phase A/B/C Second Harmonic (Phase A/B/C 2)

Range: 0.0 to 100.0%

Phase A/B/C Third Harmonic (Phase A/B/C 3)

Range: 0.0 to 100.0%

...

Phase A/B/C Twenty Fifth Harmonic (Phase A/B/C 25)

Range: 0.0 to 100.0%

15.9.1 HARMONIC MAGNITUDE

Path: *Metering* > *Harmonic I Magnitude*

J1 Phase A 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

J1 Phase B 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

J1 Phase C 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

J1 Phase A 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

J1 Phase B 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

J1 Phase C 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K1 Phase A 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K1 Phase B 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K1 Phase C 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K1 Phase A 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K1 Phase B 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K1 Phase C 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K2 Phase A 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K2 Phase B 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K2 Phase C 2nd Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K2 Phase A 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K2 Phase B 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

K2 Phase C 5th Harm Mag

Range: 0.000 to 4294967.295 in steps of 0.001

15.9.2 HARMONIC DETECTION

The second, third, fourth, and fifth harmonics per phase are shown here. The harmonics values are presented in percent relative to the fundamental magnitude.

It should be noted that the similar harmonic ratios and THD values are also displayed under the general metering menus, **Harmonics 1 - J1 Current**, **Harmonics 3 - K1 Current**, or **Harmonics 4 - K2 Current**, where all values are calculated every three cycles. The THD values used in the Harmonic Detection element are the same to the general metering, so they are not shown here again. The harmonic ratios in the Harmonic Detection element are calculated and updated every protection pass.

Path: *Metering* > *Harmonic Detection*

HD Ph A/B/C 2nd Harm

Range: 0.00 to 100.0%

HD Ph A/B/C 3rd Harm

Range: 0.00 to 100.0%

HD Ph A/B/C 4th Harm

Range: 0.00 to 100.0%

HD Ph A/B/C 5th Harm

Range: 0.00 to 100.0%

15.10 SYNCHROCHECK

Path: *Metering* > *Synchrocheck*

Bus Voltage Magnitude (Bus Volts Magnitude)

Range: 0.00 to 600000.00 V

Bus Voltage Angle (Bus Volts Angle)

Range: 0.0 to 359.9°

Bus Voltage Frequency (Bus Volts Frequency)

Range: 2.000 to 90.000 Hz

Line Voltage Magnitude (Line Volts Magnitude)

Range: 0.00 to 600000.00 V

Line Voltage Angle (Line Volts Angle)

Range: 0.0 to 359.9°

Line Voltage Frequency (Line Volts Frequency)

Range: 2.000 to 90.000 Hz

Voltage Difference (Volts Difference)

Range: 0.00 to 600000.00 V

Voltage Angle Difference (Angle Difference)

Range: 0.0 to 359.9°

Voltage Frequency Difference (Frequency Difference)

Range: 2.000 to 90.000 Hz

15.11 PERCENT DIFFERENTIAL CURRENT

Path: *Metering* > *Transformer* > *Percent Differential*

Ia Differential (Ia Diff)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ib Differential (Ib Diff)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ic Differential (Ic Diff)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ia Restraint (Ia Restr)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ib Restraint (Ib Restr)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ic Restraint (Ic Restr)

Range: 0.000 to 1000.000 x CT in steps of 0.001

Ia Differential 2nd Harmonic (Ia Diff 2nd Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ib Differential 2nd Harmonic (Ib Diff 2nd Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ic Differential 2nd Harmonic (Ic Diff 2nd Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ia Differential 5th Harmonic (Ia Diff 5th Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ib Differential 5th Harmonic (Ib Diff 5th Harm)

Range: 0.0 to 100.0% in steps of 0.1

Ic Differential 5th Harmonic (Ic Diff 5th Harm)

Range: 0.0 to 100.0% in steps of 0.1

Note:

The values for differential and restraint currents are displayed in per times CT. The CT primary, from the CT Bank assigned as Signal Input for Winding 1, is the reference CT (base CT) used for estimating the differential and restraint currents. The winding reference is explained in the Transformer Setup section.

15.12 INTER-TURN FAULT DETECTION

The harmonic derating factor for each of the windings shows the effect of non-sinusoidal load currents on the power transformer's rated full load current. The actual values messages display the harmonic derating factor for windings 1 through 3.

The relay displays winding load parameters as follows:

Path: *Metering* > *Transformer* > *Inter-Turn Fault Detection*

Inter-Turn Flt Comp Ia Diff

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Phase A compensated differential current.

Inter-Turn Flt Comp Ib Diff

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Phase B compensated differential current.

Inter-Turn Flt Comp Ic Diff

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Phase C compensated differential current.

Inter-Turn Flt ka Factor Mag

Default: 0.0000

Range: 0.0000 to 1.2000 in steps of 0.0001

Magnitude of Phase A voltage compensation factor.

Inter-Turn Flt kb Factor Mag

Default: 0.0000

Range: 0.0000 to 1.2000 in steps of 0.0001

Magnitude of Phase B voltage compensation factor.

Inter-Turn Flt kc Factor Mag

Default: 0.0000

Range: 0.0000 to 1.2000 in steps of 0.0001

Magnitude of Phase C voltage compensation factor.

Inter-Turn Flt ka Factor Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle of phase A voltage compensation factor.

Inter-Turn Flt kb Factor Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle of phase B voltage compensation factor.

Inter-Turn Flt kc Factor Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle of phase C voltage compensation factor.

Inter-Turn Flt Raw Ia Diff Mag

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Magnitude phase A differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ib Diff Mag

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Magnitude phase B differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ic Diff Mag

Default: 0.0000 x CT

Range: 0.0000 to 1000.0000 in steps of 0.0001

Magnitude phase C differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ia Diff Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle phase A differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ib Diff Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle phase B differential current without 0.04 x CT cutoff.

Inter-Turn Flt Raw Ic Diff Ang

Default: 0.0°

Range: -359.9° to 359.9° in steps of 0.1°

Angle phase C differential current without 0.04 x CT cutoff.

15.13 POWER FUNCTIONS

15.13.1 POWER

The following figure illustrates the convention used for measuring power and energy in the 8 Series devices.

Note:

Power 1 is calculated using 3-phase J1 Currents & 3-phase J2 Voltages.

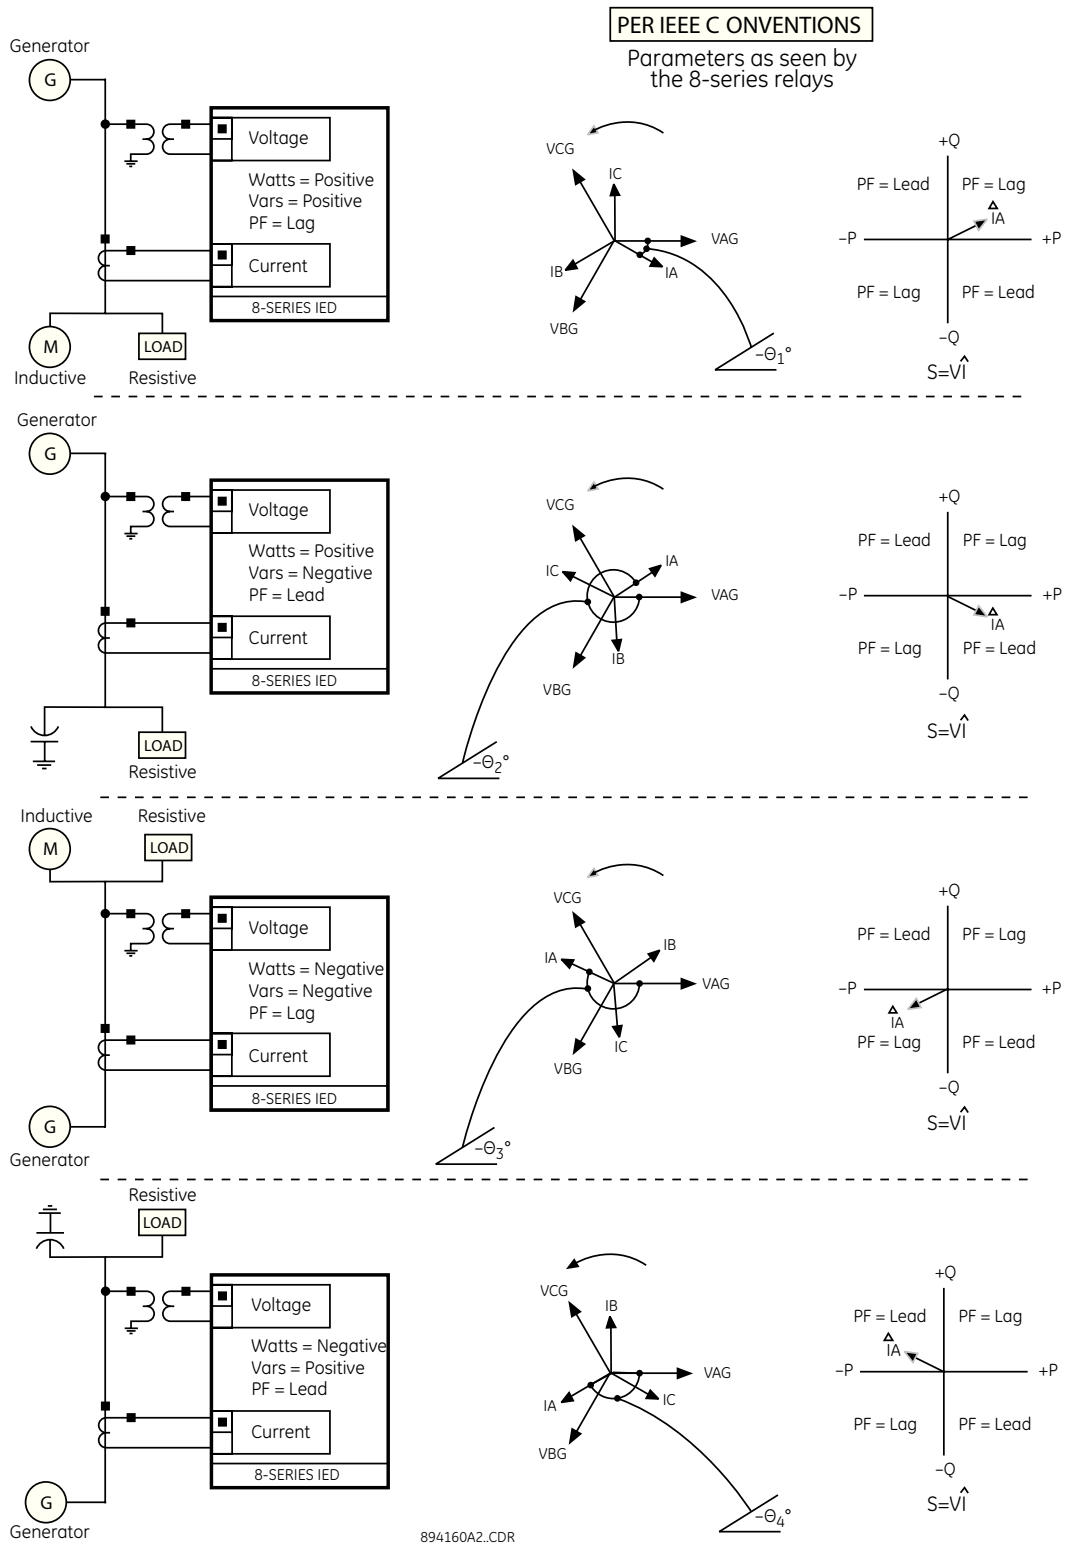


Figure 283: Flow direction of signed values for watts and VARs

Path: Metering > Power 1(X)

Real Total (Real)

Range: - 214748364.8 kW to 214748364.7 kW

Reactive Total (Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Apparent Total (Apparent)

Range: 0 kVA to 214748364.7 kVA

Phase A Real (Ph A Real)

Range: - 214748364.8 kW to 214748364.7 kW

Phase B Real (Ph B Real)

Range: - 214748364.8 kW to 214748364.7 kW

Phase C Real (Ph C Real)

Range: - 214748364.8 kW to 214748364.7 kW

Phase A Reactive (Ph A Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Phase B Reactive (Ph B Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Phase C Reactive (Ph C Reactive)

Range: - 214748364.8 kvar to 214748364.7 kvar

Phase A Apparent (Ph A Apparent)

Range: 0 kVA to 214748364.7 kVA

Phase B Apparent (Ph B Apparent)

Range: 0 kVA to 214748364.7 kVA

Phase C Apparent (Ph C Apparent)

Range: 0 kVA to 214748364.7 kVA

Power Factor Total (PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

Phase A Power Factor (Ph A PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

Phase B Power Factor (Ph B PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

Phase C Power Factor (Ph C PF)

Range: 0.01 Lag to 1.00 to 0.01 Lead

15.13.2 POWER FACTOR

Path: Metering > Power Factor

The power factor value input to the power factor element(s) is displayed here. Note that the value may not be equal to the power factor value displayed under **Metering > Power 1** since the supervision conditions are applied in the element.

POWER FACTOR 1(X)

Range: -0.99 to 1.00 in steps of 0.01

Default: 0.00

15.13.3 DIRECTIONAL POWER

Path: Metering > Directional Power

The effective operating quantities of the sensitive directional power elements are displayed here. The display may be useful to calibrate the feature by compensating the angular errors of the CTs and VTs with the use of the **RCA** and **CALIBRATION** settings.

Directional Power 1

Range: -214748364.8 kW to 214748364.7 kW

Default: 0.0 kW

...

Directional Power X

Range: -214748364.8 kW to 214748364.7 kW

Default: 0.0 kW

15.14 ENERGY

15.14.1 ENERGY (X)

Note:

Below is a complete list of quantities. The quantities visible to you will depend on the model and order code.

Path: *Metering* > *Energy* > *Energy 1(X)*

Reset Energy D/T

Range: MM/DD/YY HH:MM:SS

Positive Watt Hours (Pos WattHours)

Range: 0.000 MWh to 4294967.295 MWh

Pos WattHours Cost

Default: 0.00 \$ to 42949672.95 \$

Negative Watt Hours (Neg WattHours)

Range: 0.000 MWh to 4294967.295 MWh

Neg WattHours Cost

Default: 0.00 \$ to 42949672.95 \$

Positive Var Hours (Pos VarHours)

Range: 0.000 Mvarh to 4294967.295 Mvarh

Negative Var Hours (Neg VarHours)

Range: 0.000 Mvarh to 4294967.295 Mvarh

15.14.2 ENERGY LOG

Path: *Metering* > *Energy 1* > *Energy Log*

Pwr1 Last Event Pos WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This is the logged value of Pos WattHours energy accumulated during the last event or shift interval. The shift interval refers to the time between the last two reset commands, where the reset command refers to the rising edge of the FlexLogic operand set under setpoint Reset Event Energy (**Power Systems** > **Power Sensing**). An application example is the monitoring of the total energy accumulated at the end of an event or a shift interval. An event/shift interval can be defined by the breaker status operand (open or closed).

Pwr1 Last Event Neg WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the logged value of Neg WattHours energy accumulated during the last event or shift interval.

Pwr1 Last Event Pos VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the logged value of Pos VarHours energy accumulated during the last event or shift interval.

Pwr1 Last Event Neg VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the logged value of Neg VarHours energy accumulated during the last event or shift interval.

Pwr1 Today Pos WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Pos WattHours energy accumulated since the start of the day, that is time 00:00 (midnight). At the end of the day this value resets to zero and the total accumulated energy value is logged as Yesterday Pos WattHours.

Pwr1 Today Neg WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg WattHours energy accumulated since the start of the day.

Pwr1 Today Pos VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the current value of Pos VarHours energy accumulated since the start of the day.

Pwr1 Today Neg VarHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg VarHours energy accumulated since the start of the day.

Pwr1 Yesterday Pos WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Pos WattHours energy accumulated during the previous day. This value is logged at the end of the day, midnight, or 23:59 hrs.

Pwr1 Yesterday Neg WattHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg WattHours energy accumulated during the previous day.

Pwr1 Yesterday Pos VarHours

Range: 0.000 to 4294967.295 Mvarh in steps of 0.001 Mvarh

Default: 0.000 Mvarh

This value shows the current value of Pos VarHours energy accumulated during the previous day.

Pwr1 Yesterday Neg VarHours

Range: 0.000 to 4294967.295 MWh in steps of 0.001 MWh

Default: 0.000 MWh

This value shows the current value of Neg VarHours energy accumulated during the previous day.

Note:

*All Energy Log values can be reset to zero using the command Energy Log Data under **Records > Clear Records** or by the Flexlogic operand programmed by the setpoint **ENERGY LOG DATA** under **Device > Clear Records**. The Reset Energy Log D/T in either case is recorded and displayed.*

15.15 DEMAND

15.15.1 CURRENT DEMAND

Note:

The number of Current Demand supported is Order Code dependent.

The relay measures Current Demand on each phase, and three phase Demand for real, reactive, and apparent power. These parameters can be monitored to reduce supplier Demand penalties or for statistical metering purposes. Demand calculations are based on the measurement type selected under **Monitoring > Functions > Demand**. For each quantity, the relay displays the Demand over the most recent Demand time interval, the maximum Demand since the last maximum Demand reset, and the time and date stamp of this maximum Demand value. Maximum Demand quantities can be reset to zero at **Records > Clear Records > Max Current Demand**.

15.15.1.1 CURRENT DEMAND 1(X)

Path: *Metering > Current Demand 1(X)*

Cur1 Ph A/B/C Demand

Range: 0.000 to 12000.000 A

Cur1 Max Ph A/B/C Demand

Range: 0.000 to 12000.000 A

Cur1 D/T Ph A/B/C Demand MM/DD/YY HH:MM:SS

15.15.1.2 CURRENT DEMAND K1

Path: *Metering > Current Demand K1*

Reset (K1 Reset Demand Date/Time) MM/DD/YY 00:00:00

Phase A Demand (K1 Ph A Demand)

Range: 0.000 to 12000.000 A

Phase B Demand (K1 Ph B Demand)

Range: 0.000 to 12000.000 A

Phase C Demand (K1 Ph C Demand)

Range: 0.000 to 12000.000 A

Maximum Phase A Demand (K1 Max Ph A Demand)

Range: 0.000 to 12000.000 A

Maximum Phase B Demand (K1 Max Ph B Demand)

Range: 0.000 to 12000.000 A

Maximum Phase C Demand (K1 Max Ph C Demand)

Range: 0.000 to 12000.000 A

Date/Time Phase A Demand (K1 Date/Time Ph A Demand) MM/DD/YY HH:MM:SS

Date/Time Phase B Demand (K1 Date/Time Ph B Demand) MM/DD/YY HH:MM:SS

Date/Time Phase C Demand (K1 Date/Time Ph C Demand) MM/DD/YY HH:MM:SS

15.15.1.3 CURRENT DEMAND K2

Path: *Metering* > *Current Demand K2*

Reset (K2 Reset Demand Date/Time) MM/DD/YY 00:00:00

Phase A Demand (K2 Ph A Demand)

Range: 0.000 to 12000.000 A

Phase B Demand (K2 Ph B Demand)

Range: 0.000 to 12000.000 A

Phase C Demand (K2 Ph C Demand)

Range: 0.000 to 12000.000 A

Maximum Phase A Demand (K2 Max Ph A Demand)

Range: 0.000 to 12000.000 A

Maximum Phase B Demand (K2 Max Ph B Demand)

Range: 0.000 to 12000.000 A

Maximum Phase C Demand (K2 Max Ph C Demand)

Range: 0.000 to 12000.000 A

Date/Time Phase A Demand (K2 Date/Time Ph A Demand) MM/DD/YY HH:MM:SS

Date/Time Phase B Demand (K2 Date/Time Ph B Demand) MM/DD/YY HH:MM:SS

Date/Time Phase C Demand (K2 Date/Time Ph C Demand) MM/DD/YY HH:MM:SS

15.16 VOLTAGE TRANSFORMER FUSE FAILURE

Path: *Metering\VT Fuse Failure*

VTFF 1(2) 3V0 3rd Harm

Range: 0.0 to 100.0%

Default: 0.0 %

This value represents the percentage of third harmonic content in 3V0. This value is calculated based on the Phase VT Secondary

15.17 ARC FLASH

Path: *Metering > Arc Flash > Arc Flash 1*

HS Phase Current A/B/C

Range: 0.00 to 120000.00 A in steps of 0.01

HS Ground Current

Range: 0.00 to 120000.00 A in steps of 0.01

15.18 RESISTANCE TEMPERATURE DETECTORS

Temperature can be displayed in Celsius or Fahrenheit. The selection is made in **Setpoints > Device > Installation > Temperature Display**.

Path: Metering > RTDs

RTD1(13)

Range: -40 to 250°C (-40 to 482°F)

Temperatures < -40°C are displayed as `Shorted` and temperatures > 250°C are displayed as `Open` RTD.

15.19 RESISTANCE TEMPERATURE DETECTORS

Path: Metering > RRTDs

RRTD1(12)

Range: -40 to 250°C

Temperatures < -40°C or temperatures >250°C are displayed as Trouble RRTD

15.20 RESISTANCE TEMPERATURE DETECTORS

Temperature can be displayed in Celsius or Fahrenheit. The selection is made in **Setpoints > Device > Installation > Temperature Display**.

Path: Metering > RTD Maximums

Reset RTD Date/Time

Range: DD/MM/YY hh/mm/ss

Maximum RTD values can be cleared (reset) by setting the value of **Setpoints > Records > Clear Records > RTD Maximums** to ON. Executing this command loads -40°C (or -40°F) as the initial Maximum RTD value.

RTD1(13) Max

Range: -40 to 250°C (-40 to 482°F)

Temperatures < -40°C are displayed as `Shorted` and temperatures > 250°C are displayed as `Open` RTD.

RTD1(13) Max Date/Time

Range: DD/MM/YY hh/mm/ss

15.21 RESISTANCE TEMPERATURE DETECTORS

Temperature can be displayed in Celsius or Fahrenheit. The selection is made in **Setpoints > Device > Installation > Temperature Display**.

Path: Metering > RTD Maximums

Reset RRTD Date/Time

Range: DD/MM/YY hh/mm/ss

Maximum RTD values can be cleared (reset) by setting the value of **Setpoints > Records > Clear Records > RRTD Maximums** to ON. Executing this command loads -40°C (or -40°F) as the initial Maximum RRTD value.

RRTD1(12) Max

Range: -40 to 250°C (-40 to 482°F)

Temperatures < -40°C are displayed as `Shorted` and temperatures > 250°C are displayed as `Open` RRTD.

RRTD1(12) Max Date/Time

Range: DD/MM/YY hh/mm/ss

15.22 ANALOG INPUTS

Path: *Metering > Analog Inputs*

Analog Ip x

Range: -500000 to 500000 units in steps of 1

15.23 FLEXELEMENTS

Path: *Metering* > *FlexElements*

The operating signals for the FlexElements are displayed in pu values using the definitions of the base units in the *Definitions of the Base Unit for the FLEXELEMENT* table. This table can be found in **Setpoints** > **FlexLogic** > **FlexElements**.

FlexElement Operating Signals:

- FlexEI 1 Op Signal
- FlexEI 2 Op Signal
- FlexEI 3 Op Signal
- FlexEI 4 Op Signal
- FlexEI 5 Op Signal
- FlexEI 6 Op Signal
- FlexEI 7 Op Signal
- FlexEI 8 Op Signal

CHAPTER 16

RECORDS

16.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	666
Events	667
Transient Records	671
Fault Reports	672
Data Logger	674
Breakers	675
Digital Counters	677
Remote Modbus Device	678
Clear Records	681

16.2 EVENTS

The relay has an event recorder, which runs continuously. All event records are stored in non-volatile memory such that information is permanently retained. The events are displayed from newest to oldest event. Each event has a header message containing a summary of the event that occurred, and is assigned an event number equal to the number of events that have occurred since the recorder was cleared. The event number is incremented for each new event.

The Event Recorder captures contextual data associated with the last 1024 events listed in chronological order from most recent to oldest. Events for a particular element are captured, if the setpoint **EVENTS** is selected as "Enabled". By default, the **EVENTS** setpoint from all elements is enabled.

Path: *Records > Event Records*

The events are cleared by pressing the pushbutton corresponding to the tab CLEAR, or when issuing clear event records command from the general clear records menu.

16.2.1 EVENT VIEWER

The Event Viewer provides a consolidated view of up to 1024 events from a single 8 Series device or up to as many as ten connected 8 Series devices or event files (10 x 1024 events in total).

To open the Event Viewer for a connected device, follow these steps in the EnerVista D&I Setup:

1. Establish communications with the relay.
2. Select the **Setpoints > Records > Events** menu item.
3. A small Events window opens displaying the following:
 - Date/Time of Last Clear
 - Events Since Last Clear
 - Date/Time of Last Retrieval
4. In addition, the Event Viewer launches for a detailed view of up to 1024 of the most recent events.

The screenshot shows the 'EnerVista Events' application window. It has a menu bar (File, Home, Data) and a toolbar with icons for event selection. The main area is divided into three sections: 'Event Selector' (showing three event icons), 'Delta Times' (showing three time intervals: 0 days 0 h : 0 m : 0.018749 s, 0 days 0 h : 0 m : 28.061336 s, and 0 days 0 h : 0 m : 28.080085 s), and 'Statistics' (showing 1 Source, 170 Events, and 170 Filtered). Below these is a table of events with columns: Date / Time, Event, Cause of Event, and Data. The table lists 12 events, with the last three highlighted in blue, green, and pink respectively. Below the event list is a detailed view of three events, with columns: Item Name, Value at T1, Value at T2, and Value at T3. The events are: 1. Date/Time: Nov 9 2018 11:29:21.963961, Source Name: Device 99, Cause of Event: PQ Rec Trigger - VD1 - Va, Event Number: 157, Record Number: 13, Element Instance: VD1, Source Phase: Va, Event Type: Volt Swell, RMS Voltage: 40.85 V, Duration: 33.084 s, J1 Ia (A): 0.000, J1 Ia Angle (°): 0.0, J1 Ib (A): 0.000. 2. Date/Time: Nov 9 2018 11:29:21.945212, Source Name: Device 99, Cause of Event: PQ Rec Trigger - VD3 - Vb, Event Number: 156, Record Number: 12, Element Instance: VD3, Source Phase: Vb, Event Type: Volt Swell, RMS Voltage: 40.80 V, Duration: 33.064 s, J1 Ia (A): 0.000, J1 Ia Angle (°): 0.0, J1 Ib (A): 0.000. 3. Date/Time: Nov 9 2018 11:28:53.883876, Source Name: Device 99, Cause of Event: Volt Swell3 OP B, Event Number: 153, Record Number: 12, Element Instance: VD3, Source Phase: Vb, Event Type: Volt Swell, RMS Voltage: 40.80 V, Duration: 33.064 s, J1 Ia (A): 0.000, J1 Ia Angle (°): 0.0, J1 Ib (A): 0.000.

Date / Time	Event	Cause of Event	Data
Nov 9 2018 11:38:17.335891	163	Slot J10 S/N Invalid	
Nov 9 2018 11:29:21.963961	162	PQ Rec Trigger - VD3 - Vc	
Nov 9 2018 11:29:21.963961	161	PQ Rec Trigger - VD3 - Va	
Nov 9 2018 11:29:21.963961	160	PQ Rec Trigger - VD2 - Vc	
Nov 9 2018 11:29:21.963961	159	PQ Rec Trigger - VD2 - Va	
Nov 9 2018 11:29:21.963961	158	PQ Rec Trigger - VD1 - Vc	
Nov 9 2018 11:29:21.963961	157	PQ Rec Trigger - VD1 - Va	
Nov 9 2018 11:29:21.945212	156	PQ Rec Trigger - VD3 - Vb	
Nov 9 2018 11:29:21.945212	155	PQ Rec Trigger - VD2 - Vb	
Nov 9 2018 11:29:21.945212	154	PQ Rec Trigger - VD1 - Vb	
Nov 9 2018 11:28:53.883876	153	Volt Swell3 OP B	
Nov 9 2018 11:28:53.881792	152	Trans. Rec Trigger	

Item Name	Value at T1	Value at T2	Value at T3
Date/Time	Nov 9 2018 11:29:21.963961	Nov 9 2018 11:29:21.945212	Nov 9 2018 11:28:53.883876
Source Name	Device 99	Device 99	Device 99
Cause of Event	PQ Rec Trigger - VD1 - Va	PQ Rec Trigger - VD3 - Vb	Volt Swell3 OP B
Event Number	157	156	153
Record Number	13	12	
Element Instance	VD1	VD3	
Source Phase	Va	Vb	
Event Type	Volt Swell	Volt Swell	
RMS Voltage	40.85 V	40.80 V	
Duration	33.084 s	33.064 s	
J1 Ia (A)	0.000	0.000	0.000
J1 Ia Angle (°)	0.0	0.0	0.0
J1 Ib (A)	0.000	0.000	0.000

The Event Viewer window runs as a separate application, and can be moved outside of the main window and resized as needed.

If EnerVista D&I Setup is closed, the Event Viewer remains open but offline (no further events are received from running devices, however event data is still available).

The Event List includes all events in descending chronological order. For multiple sources, a Source column showing the device name or file name is shown between the Date/Time and the Event columns.

To add an additional connected 8 Series relay to the open Event Viewer, follow these steps:

1. Establish communications with the relay.
2. Select the **Setpoints > Records > Events** menu item.
3. The Event Viewer adds up to 1024 of the most recent events to the open window, labeled with the new device name in the Source column.

The Event column is only shown when **Show Event Numbers** is selected on the **Data** tab.

	Date / Time	Source	Event	Cause of Event	Data
☒	Nov 8 2018 16:07:14.989887	Device 99	7	VD1 Rise Armed C	
☒	Nov 8 2018 16:07:14.989887	Device 99	6	VD1 Rise Armed B	
☒	Nov 8 2018 16:07:14.989887	Device 99	5	VD1 Rise Armed A	
☒	Nov 8 2018 16:07:14.989887	Device 99	4	VD1 Rise Armed	
☒	Nov 8 2018 16:06:57.968508	Device 99	3	Clear Start Rec	
☒	Nov 8 2018 16:06:57.712274	Device 99	2	Clear Transt Rec	
☒	Nov 8 2018 16:06:56.572667	Device 99	1	Clear Event Rec	
☒	Nov 8 2018 12:55:18.528669	Device 212	23115	Critical Fail On	
☒	Nov 8 2018 12:55:18.528669	Device 212	23114	In-Service	
☒	Nov 8 2018 12:55:14.751534	Device 212	23111	Relay Not Ready	
☒	Nov 8 2018 12:55:14.750886	Device 212	23113	Critical Fail Off	
☒	Nov 8 2018 12:55:14.750886	Device 212	23112	Out-Of-Service	

On the left side of the Event List a checkbox column with a toggle button at the top allows selection of specific events. Only the selected events are saved or copied by the **Save to File** and **Copy to Clipboard** options in the **File** tab.

Use the following keys to navigate quickly through the Event List:

- **End** scrolls to the bottom of the Event List
- **Home** scrolls to the top of the Event List
- **Page Down** scrolls one page down in the Event List
- **Page Up** scrolls one page up in the Event List

When the Event Viewer and the EnerVista D&I Setup are both open, new events from connected devices are added to the Event Viewer as they occur and oscillography and fault report records are gradually retrieved from the device, in order of oldest to newest (assuming oscillography records and fault report records are saved in a common location).

	Date/Time	Cause of Event	Data
☒	Nov 10 2017 10:20:20.842706	Fault Rpt Trig	Fault report symbol 
☒	Nov 10 2017 10:19:08.006650	Trans. Rec Trigger	Oscillography record symbol 

Oscillography record events (such as Trans. Rec Trigger shown above) have a symbol in the Data column that includes a link to launch the oscillography record in the EnerVista D&I Setup.

Fault report events (such as Fault Rpt Trig shown above) can be opened in the same manner by clicking the fault report symbol in the Data column.

FILE TAB

Use the **File** tab to open event files in the Event Viewer, save events to a file, or copy events to the clipboard.

- **Open File:** opens a window to browse to an events file (of type .eev, .txt. or .evt) and opens it in the existing Event Viewer window, or in a new Event Viewer window.
 - Check **In New Window** to open the file in a new Event Viewer window.
- **Save to File:** saves the selected events to a file. Hidden (filtered) events are not saved.
 - Select the events to save using the checkboxes on the left of the events list.
 - Check **Include Event Data** to save full details of each event instead of just a summary.
- **Copy to Clipboard:** copies the selected events to the clipboard. Hidden (filtered) events are not copied.
 - Select the events to copy using the checkboxes on the left of the events list.
 - Check **Include Event Data** to copy full details of each event instead of just a summary.

HOME TAB

Use the **Home** tab to select the events shown in the detailed view, measure time between events, and view the current Event Viewer statistics.

By default, the Event Viewer opens displaying the **Home** tab with the last three events selected. Details of these three events are displayed in the lower pane of the Event Viewer window.

To select up to three events from the list displayed in the Event Viewer, follow these steps:

1. From the **Home** tab, choose which event to set by clicking button 1, 2, or 3 above the **Event Selector** label.
2. Click an event from the list of displayed events.
3. The event changes color to match the selected button (blue for 1, green for 2, or red for 3) and the event details display in the lower pane, highlighted in the same color.

The absolute times between the three selected events are displayed above the **Delta Times** label.

The **Statistics** area in the **Home** tab includes the following information:

- **Sources:** the number of event sources (devices and files) currently available.
- **Events:** the number of events being managed by the Event Viewer.
- **Filtered:** the number of events shown after any active filters are applied. (Filters are applied in the **Data** tab).

DATA TAB

Use the **Data** tab to filter the events shown in the Event Viewer.

- **Show Event Numbers:** toggles on and off the event number column in the list of events. The event number can be useful for reconciling events between the Event Viewer and local HMI.
- **Select Event Sources:** provides a drop-down list of all available event sources (devices and files). Uncheck a device or file to hide the associated events from the main list.
- By default events from all sources are shown.
- **Cause of Event Filter:** provides an alphabetized list of all event names, allowing different event types to be shown or hidden.
- By default all events are shown.

16.3 TRANSIENT RECORDS

Path: *Records > Transients > Transient Records*

Using the EnerVista D&I Setup, select a record and then click the **Launch Viewer** button to view the waveform.

16.4 FAULT REPORTS

The latest fault reports can be displayed.

Path: *Records > Fault Reports*

NUMBER OF REPORTS

This value shows the number of reports since the last clear.

LAST TRIP DATE/TIME

Range: MM/DD/YY/ HH:MM:SS

This value is the date and time on which the last report was generated.

LAST CLEAR DATE/TIME

Range: MM/DD/YY/ HH:MM:SS

This value is the date and time on which the record was cleared.

TYPE OF FAULT

Range: N/A, AG, BG, CG, AB, BC, CA, ABG, BCG, CAG, ABC

Default: N/A

This record displays the type of fault.

DISTANCE TO FAULT

Range: 0.00 to 99.99 km/Mile in steps of 0.01 km/Mile

Default: 0.00 km/Mile

This record displays the distance to fault, in kilometers or miles as selected by the UNITS OF LENGTH setpoint.

FAULT REPORT X TIME

Range: MM/DD/YY/ HH:MM:SS

This value is the date and time on which the specified fault report was generated.

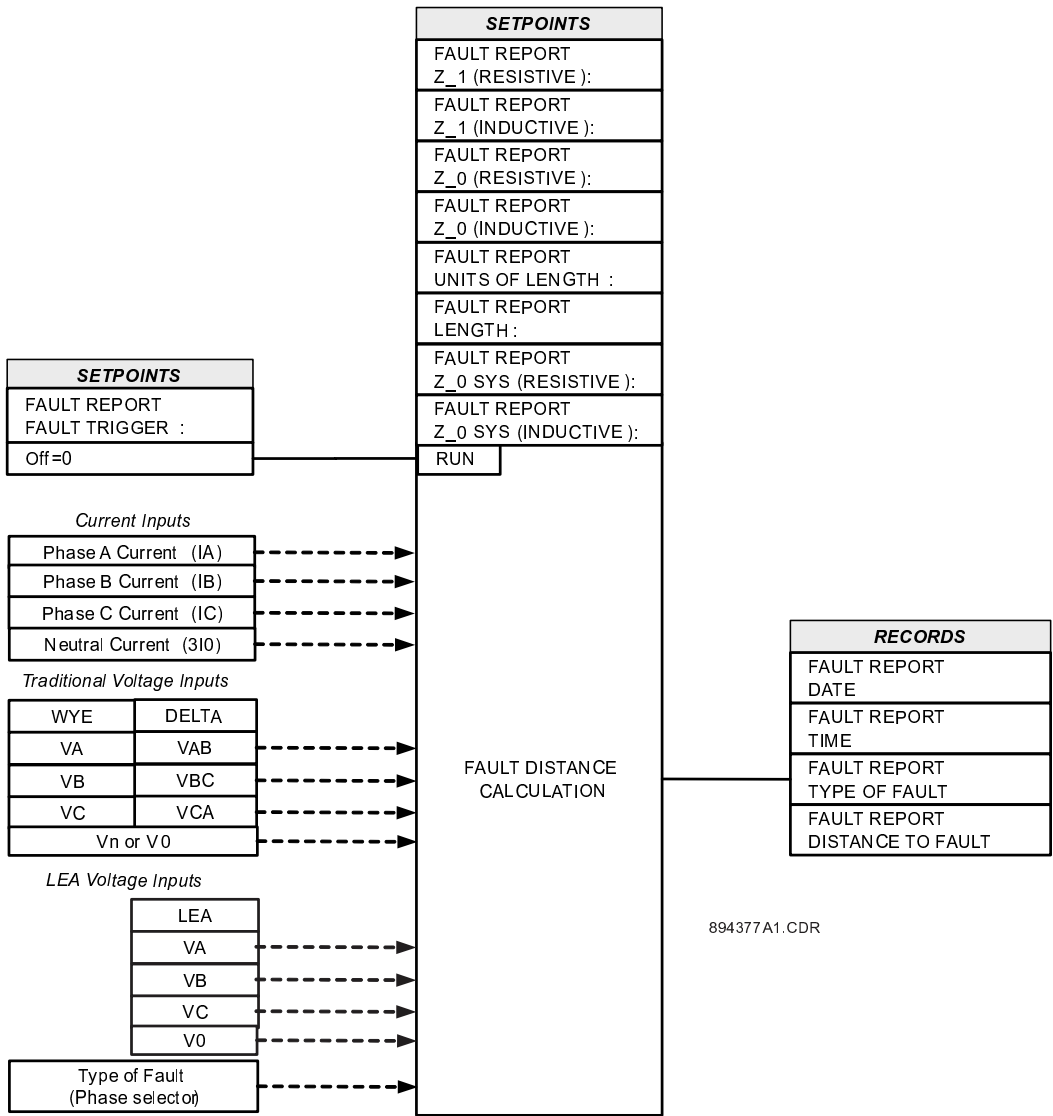


Figure 284: Fault Locator Logic diagram

16.5 DATA LOGGER

The Data Logger record can be retrieved and seen from this window. It displays the oldest and newest timestamps, and the total number of samples captured for all channels programmed in **Setpoints > Device > Data Logger** menu.

Path: *Records > Data Logger*

16.6 BREAKERS

16.6.1 BREAKER ARCING CURRENT

Path: *Records > Breakers Records > Breaker x*

ARCING CURRENT PHASE A

Range: 00.00 TO 42949672.95 kA2-cyc in steps of 0.01

ARCING CURRENT PHASE B

Range: 00.00 TO 42949672.95 kA2-cyc in steps of 0.01

ARCING CURRENT PHASE C

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

TOTAL ARCING CURRENT

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

16.6.2 BREAKER HEALTH

The menu displays the breaker monitoring values. The latest value, average of last five values and average of values since last reset are recorded, calculated and displayed.

When the DETECTION mode is selected, the values displayed here can be used as the reference for user settings. The values are saved into non-volatile memory to avoid the loss of data during the power down period.

Path: *Records > Breakers Records > Breaker Health*

TOTAL BREAKER TRIPS

Range: 0 to 10000 in steps of 1

TRIPS SINCE LAST RESET

Range: 0 to 10000 in steps of 1

ALARM COUNTER

Range: 0 to 100 in steps of 1

LAST TRIP TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF 5 TRIP TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF TRIP TIME

Range: 0 TO 4294967295 ms in steps 1

LAST CLOSE TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF 5 CLOSE TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF CLOSE TIME

Range: 0 TO 4294967295 ms in steps 1

LAST PH A/B/C ARC TIME

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

AVG. OF 5 PH A/B/C ARC TIME

Range: 0 TO 4294967295 ms in steps 1

AVG. OF PH A/B/C ARC TIME

Range: 0 TO 4294967295 ms in steps 1

LAST SPRING CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001

AVG. OF 5 CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001

AVG. OF CHARGE TIME

Range: 0.000 to 6000.000 s in steps of 0.001

LAST PH A/B/C ARC ENERGY

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

AVG. OF 5 PH A/B/C ARCENER

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

AVG. OF PH A/B/C ARC ENERGY

Range: 00.00 TO 42949672.95 Ka2-cyc in steps of 0.01

16.7 DIGITAL COUNTERS

The present status of the sixteen Digital Counters is shown here. The status of each Counter, with the user-defined Counter name, includes the accumulated and frozen counts (the count units label also appears). Also included, is the date and time stamp for the frozen count. The Counter microseconds frozen value refers to the microsecond portion of the time stamp.

Path: *Records > Digital Counter 1 (16)*

COUNTER X ACCUMULATED

Range: -2147483648 to 2147483647 in steps of 1

COUNTER X FROZEN

Range: -2147483648 to 2147483647 in steps of 1

DATE/TIME FROZEN

Range: Date/Time Format (MM/DD/YY HH:MM:SS)

Default: 01/01/70 00:00:00

COUNTER X μ s FROZEN

Range: 0 to 999999 μ s in steps of 1

16.8 REMOTE MODBUS DEVICE

Up to 64 FlexAnalog operands and 32 FlexLogic operands are supported in the configurable Remote Modbus Device. Profiles are configured under **Device > Communications > Remote Modbus Device > Device 1**, with details provided in Chapter 5. Up to 10 format codes enumerations (by default GMD_FC1 to GMD_FC10) can be defined separately for each Modbus Device Profile. For the default BSG3 device profile, 27 analogs and 27 digital operands are pre-configured in the default CID settings file.

All parameters are polled consecutively. Each FlexLogic value can be read from a different Modbus address and bit mask which is then mapped into any of the available 64 bit locations.

Path: Records > Remote Modbus Device > Device 1 > Status

DEVICE STATUS

Range: Offline, Online

Default: Offline

The DEVICE STATUS operand is asserted when the last communication attempt has failed. The operand is deasserted following a successful communication attempt.

LAST SUCCESSFUL POLL

Range: MM/DD/YYYY HH:MM:SS

Default: 01/01/2000 00:00

This is a timestamp value for the last successful read. The LAST SUCCESSFUL POLL is updated if the update of all pooled data is successful.

Path: Records > Remote Modbus Device > Device 1 > Digital States

FLEXLOGIC OPERANDS 1-32

Range: Defined by Remote Modbus Device Profile

Default: Off

Up to 32 FlexLogic operands can be shown here.

The displayed text is the FlexLogic name defined in the Remote Modbus Device Editor **Label** field for each Digital Point in the current profile. See **Device > Communications > Remote Modbus Device > Device 1**.

The value displayed is based on the Enumeration field defined in the Remote Modbus Device Editor for each specific digital point.

\Device 1\Digital States		
Item Name	Value	Unit
Status 1	On	
Status 2	On	
Status 3	On	
Status 4	Off	
Status 5	On	
Status 6	On	
Status 7	On	
Status 8	Off	
Status 9	On	
Warning 1	Yes	
Warning 2	Yes	
Status	Digital	Analog

\Device 1\Digital States		
Item Name	Value	Unit
Warning 3	Yes	
Warning 4	No	
Warning 5	Yes	
Warning 6	Yes	
Warning 7	Yes	
Warning 8	No	
Warning 9	Yes	
Alarm 1	No	
Alarm 2	No	
Alarm 3	No	
Alarm 4	No	
Status	Digital	Analog

Figure 285: Example of Digital States for the default BSG3 RMD profile

Path: *Records > Remote Modbus Device > Device 1 > Analog Values*

RMD-FLEXANALOG 1-64

Range: -2147483648 to 2147483647 in steps of 1


Default: 0

Up to 64 FlexAnalog operands can be shown here.

The value displayed is based on the Enumeration field defined in the Remote Modbus Device Editor for each specific digital point.

The displayed text is the FlexAnalog name defined in the Remote Modbus Device Editor 'Label' field for each Analog Point in the current profile. See **Device > Communications > Remote Modbus Device > Device 1**.

The value displayed is based on the Data Type, Multiplier, Decimals, and Units fields defined in the Remote Modbus Device Setpoint for each specific analog point.

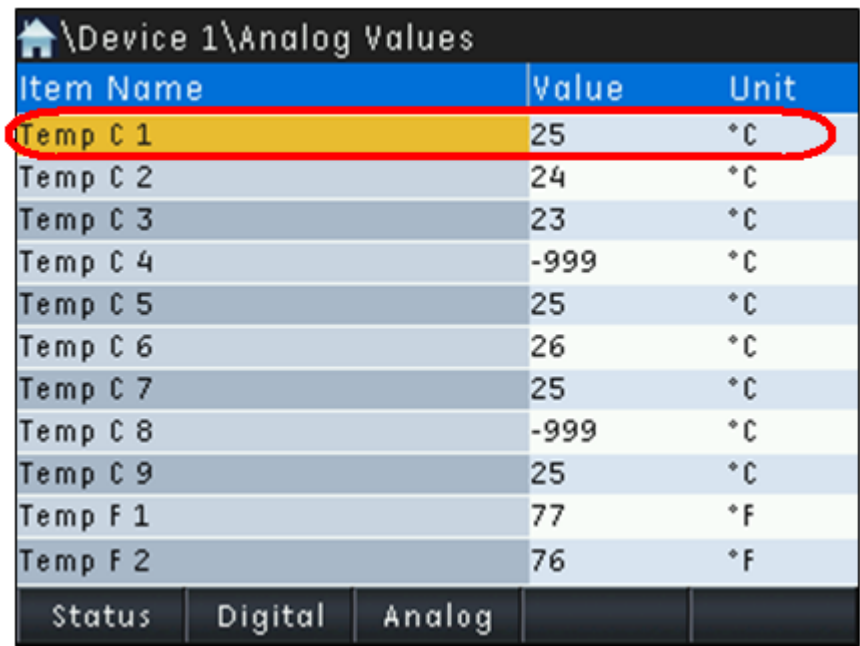

\Device 1\Analog Values		
Item Name	Value	Unit
Temp C 1	25	°C
Temp C 2	24	°C
Temp C 3	23	°C
Temp C 4	-999	°C
Temp C 5	25	°C
Temp C 6	26	°C
Temp C 7	25	°C
Temp C 8	-999	°C
Temp C 9	25	°C
Temp F 1	77	°F
Temp F 2	76	°F

Status

Digital

Analog

Figure 286: Example for Analog Values of the default BSG3 RMD profile

16.9 CLEAR RECORDS

The Clear Records command is accessible from the front panel and from the EnerVista D&I Setup.

Path: *Device > Clear Records*

Records can be cleared either by assigning “On” or a FlexLogic operand to the appropriate setting.

With the optional 10 PB Membrane Front Panel all Clear Records commands related to Demand default to PB7 ON. This includes Clear Records for Max Current Demand, Max Real Power Demand, Max Reactive Power Demand and Max Apparent Power Demand.

Note:

*The Clear Records command is also available from **Records > Clear Records**, however there the allowable settings are only ON and OFF. (FlexLogic operands cannot be used.)*

CHAPTER 17

TRANSFORMER MONITORING AND DIAGNOSTICS

17.1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	683
Overview	684
DGA Monitoring	685
Device Data	687
Dissolved Gas Analysis	688
Learned Data Records	689
Energization Records	690
Digital Fault Records	691
Models	692
Historical Maximum Record	694
Transformer Health Report	695
DGA Historical Trend	696


17.2 OVERVIEW

The 845 Transformer Protection Relay and M&D (monitoring and diagnostics) devices are connected and operated in client-server mode of operation. The contents from the M&D device are organized as per the menu tree shown below under the **Transformer M&D** menu.

Detailed information on the Transformer M&D menu tree contents is available in the *M&D User Guide*.

17.3 DGA MONITORING

The 845 relay provides configuration parameters to establish communication with DGA devices on Modbus TCP/IP protocol. Four DGA devices are supported – Transfix, DGA 500, Minitrans, and HM2. The relay supports MODBUS TCP client protocol which acts as the master or client to M&D devices.

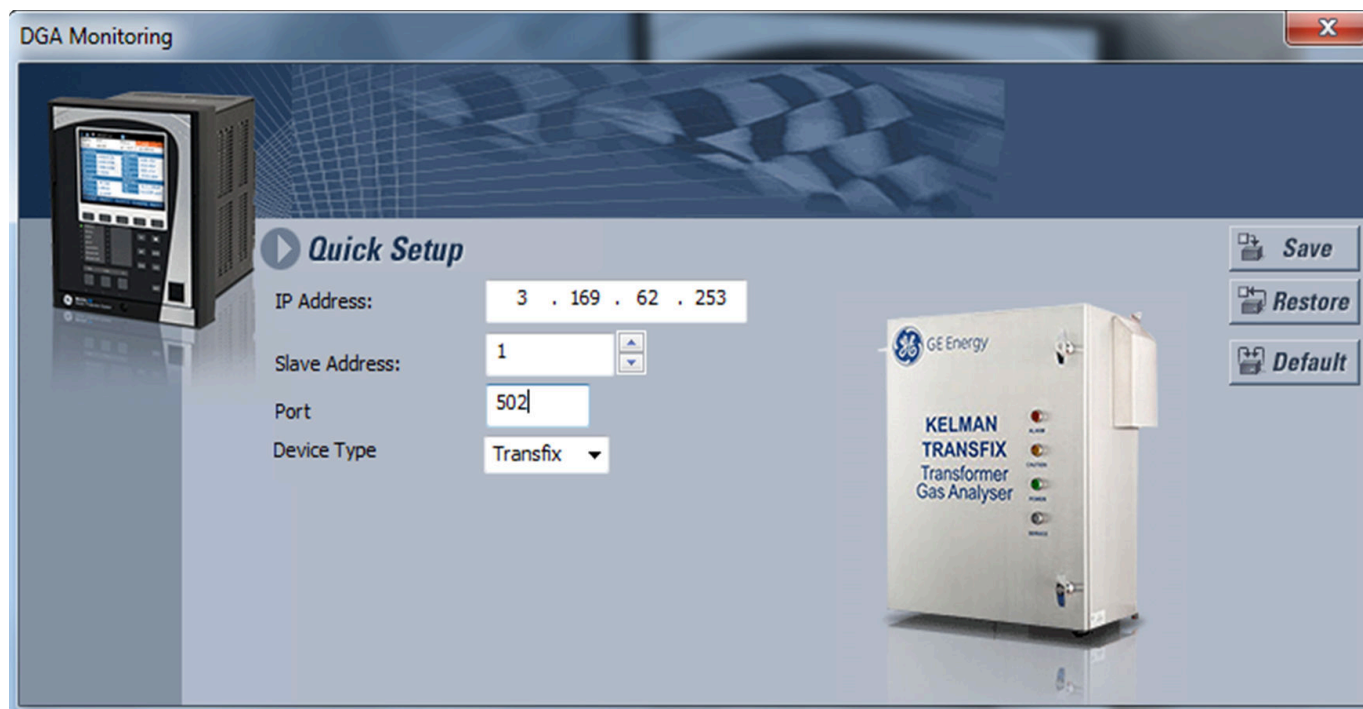

The following configuration parameters are used for establishing the communication between the relay and DGA device.

IP ADDRESS

Range: standard IPv4 address

Default: 0.0.0.0

This setting specifies the IP address of the M&D DGA device that communicates with the relay.

SLAVE ADDRESS

Range: 0 to 254

Default: 0

This setting is the slave ID field (unit ID) within the Modbus protocol. It is the ID of the M&D device, and each M&D device in general has a unique ID.

PORT

Range: 0 to 10000

Default: 502

This setting is the standard port setting of the Modbus protocol. Port setting 502 is the setting most often used for all Modbus based communications.

DEVICE TYPE

Range: None, Transfix, DGA 500, DGA 900, Minitrans, HM2

Default: None

This setting defines the type of M&D DGA device being used with the relay on the Modbus protocol. Supported device types include Transfix, DGA 500, DGA 900, Minitrans and HM2.

17.4 DEVICE DATA

The Device Data menu item provides the device ID and serial number of the DGA device connected to the relay.

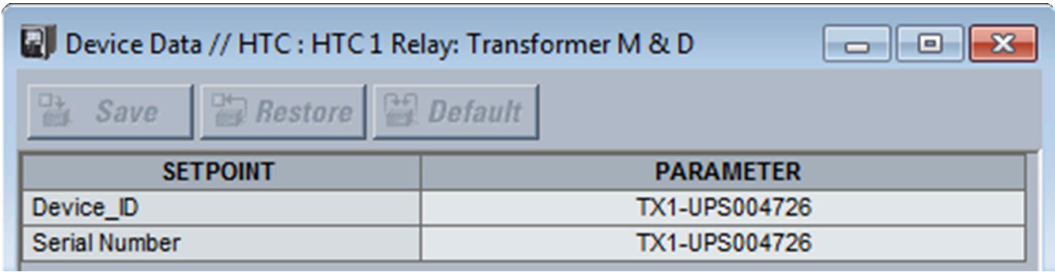


Figure 287: Device Data

17.5 DISSOLVED GAS ANALYSIS

The relay reads gas ppm values at regular intervals of time based on the DGA device type and displays the latest gas ppm values along with a measurement date/timestamp.

For HM2 DGA device types, data is read at 15 minute intervals. For Transfix, DGA 500 and Minitrans device types, data is read based on the scheduler configuration in the device. In addition to gas ppm data, basic diagnostic information on DGA device hardware and components is also provided.

GAS VARIABLE NAME	LATEST VALUE	ALARM LIMIT
Hydrogen (H2)	27.400 ppm	50.000 ppm
Carbon Dioxide (CO2)	424.044 ppm	500.000 ppm
Carbon Monoxide (CO)	5.327 ppm	150.000 ppm
Ethylene (C2H4)	5.151 ppm	20.000 ppm
Ethane (C2H6)	9.828 ppm	40.000 ppm
Methane (CH4)	8.433 ppm	30.000 ppm
Acetylene (C2H2)	4.639 ppm	25.000 ppm
Moisture (H2O)	23.166 ppm	1000.000 ppm
Oxygen (O2)	4233.275 ppm	1500.000 ppm
TDCG	60.781 ppm	500.000 ppm
Nitrogen (N2)	0.000 ppm	0.000 ppm
Ambient Temperature	26 °C	
Measurement Date/Timestamp	08/11/15 10:30:00	

Figure 288: Dissolved Gas

17.6 LEARNED DATA RECORDS

The Learned Data recorder measures and records up to 365 data record sets from actual transformer operation. This data can be used to evaluate the changes/trends over time in transformer models. The records can only be retrieved using the EnerVista D&I Setup. Learned Data records are calculated each day at mid-night 12:00:00 AM with a total of 365 records supported based on the FIFO concept.

File Name: C:\Users\Public\Documents\GE Power Management\8SeriesPC\Data\Device Files\HTC 1 Relay\ldr20150806_133028.ldr

Date / Time of Last Clear: Thursday, August 06, 2015 13:30:28

Records Since Last Clear: 5



Record Number	Date	Item Name	Value	Value
5	Aug 11 2015	Xfmr Phase A energization peak inrush current (Amp)	208.9710	0.0000
4	Aug 10 2015	Xfmr Phase B energization peak inrush current (Amp)	0.0000	0.0000
3	Aug 09 2015	Xfmr Phase C energization peak inrush current (Amp)	0.0000	0.0000
2	Aug 08 2015	Xfmr Phase A energization 2nd harmonic inrush current (Amp)	0.000	0.000
1	Aug 07 2015	Xfmr Phase B energization 2nd harmonic inrush current (Amp)	0.000	0.000
		Xfmr Phase C energization 2nd harmonic inrush current (Amp)	0.000	0.000
		Breaker 1 Total Arcing Current (kA2-Cycle)	0.00	0.00
		Breaker 2 Total Arcing Current (kA2-Cycle)	0.00	0.00
		Aging Factor (p.u.)	0.0	0.0
		Xfmr Loss of Life (Hours)	0.007	0.002
		Winding Hottest Spot Temperature (deg. C)	35	35
		Top Oil Temperature (deg. C)	35	35
		Ambient Temperature (deg. C)	30	30
		Frequency (Hz)	60.002	60.004
		Winding 1 Phase A 2nd Harmonic(%)	0.0	0.3
		Winding 1 Phase B 2nd Harmonic(%)	0.0	0.0
		Winding 1 Phase C 2nd Harmonic(%)	0.0	0.0
		Winding 1 Phase A 5th Harmonic(%)	0.0	0.0
		Winding 1 Phase B 5th Harmonic(%)	0.0	0.0
		Winding 1 Phase C 5th Harmonic(%)	0.0	0.0
		Winding 1 Phase A Total Harmonic Distortion (%)	0.0	5.2
		Winding 1 Phase B Total Harmonic Distortion (%)	0.0	0.0

Figure 289: Learned data records

17.7 ENERGIZATION RECORDS

The relay generates a Transformer Energization record for every successful transformer energization event. The energization record can only be retrieved using EnerVista D&I Setup. The relay supports the six latest energization records on a FIFO basis.

Each energization record contains:

- Transient record data with 10 cycles of user configured energization winding source voltage, and current waveform data of each phase sampled at 64 samples/cycle
- Computed energization parameters through data captured in the metering module from the initial 10 cycles of captured raw data during an energization event and downsampling this data to 64 samples/cycle.
- The latest available calculated, measured or monitored values for the selected winding source after successful energization.

Energization Record	
Record Number	1
Date	Aug 10 2015
Timestamp	10:31:51.354495
Phase A Peak Inrush Current (Amp)	208.9710
Phase B Peak Inrush Current (Amp)	0.0000
Phase C Peak Inrush Current (Amp)	0.0000
Phase A 2nd harmonic inrush current (Amp)	0.000
Phase B 2nd harmonic inrush current (Amp)	0.000
Phase C 2nd harmonic inrush current (Amp)	0.000
Phase A 2nd harmonic inrush current (%)	0.0
Phase B 2nd harmonic inrush current (%)	0.1
Phase C 2nd harmonic inrush current (%)	0.1
Phase A 5th harmonic inrush current (Amp)	0.000
Phase B 5th harmonic inrush current (Amp)	0.000
Phase C 5th harmonic inrush current (Amp)	0.000
Phase A 5th harmonic inrush current (%)	0.0
Phase B 5th harmonic inrush current (%)	0.1
Phase C 5th harmonic inrush current (%)	0.1
Frequency (Hz)	0.000
Phase A RMS Current (Amp)	149.414
Phase B RMS Current (Amp)	0.000
Phase C RMS Current (Amp)	0.000
Energization Winding Source	J1
Energization Winding Average Current (Amp)	49.805
Ground Current (Amp)	0.000
Phase A Total Harmonic Distortion(%)	0.0
Phase B Total Harmonic Distortion(%)	0.0
Phase C Total Harmonic Distortion(%)	0.0
Xfmr Status	Energized

Figure 290: Energization records

17.8 DIGITAL FAULT RECORDS

The relay generates a Transformer Digital fault record for every successful transformer trip event that occurs. The recorder can only be retrieved using the EnerVista D&I Setup. The relay supports the six latest energization records on a FIFO basis.

Each Digital fault record contains:

- Oscillography and pre/post configured electrical phasor data generated during a trip condition
- Pre and post fault gas ppm data
- Electrical and thermal data captured during fault
- DGA models computed with pre/post fault gas ppm data, and
- A PDF report capturing integrated fault data

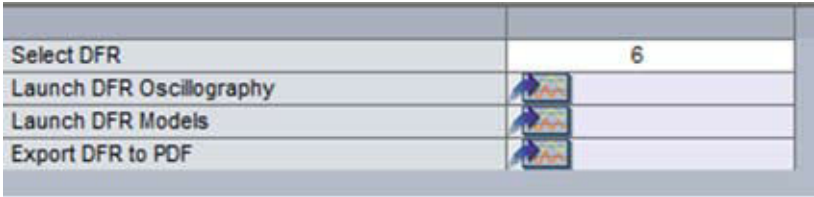


Figure 291: Digital fault records

17.9 MODELS

Models consist of transformer operational data represented in a constructive manner using electrical, thermal and DGA data. This section contains transformer models and DGA models.

17.9.1 TRANSFORMER MODELS

Transformer models represent transformer operational electrical, thermal and DGA data based on learned data in the form of a trend chart. Each trend chart consists of computed or monitored parameter trends, classified based on relevancy as a group of 10 parameters.

The Data correlation model in this section is a customized trend chart where the user can select the required parameter trends to display.

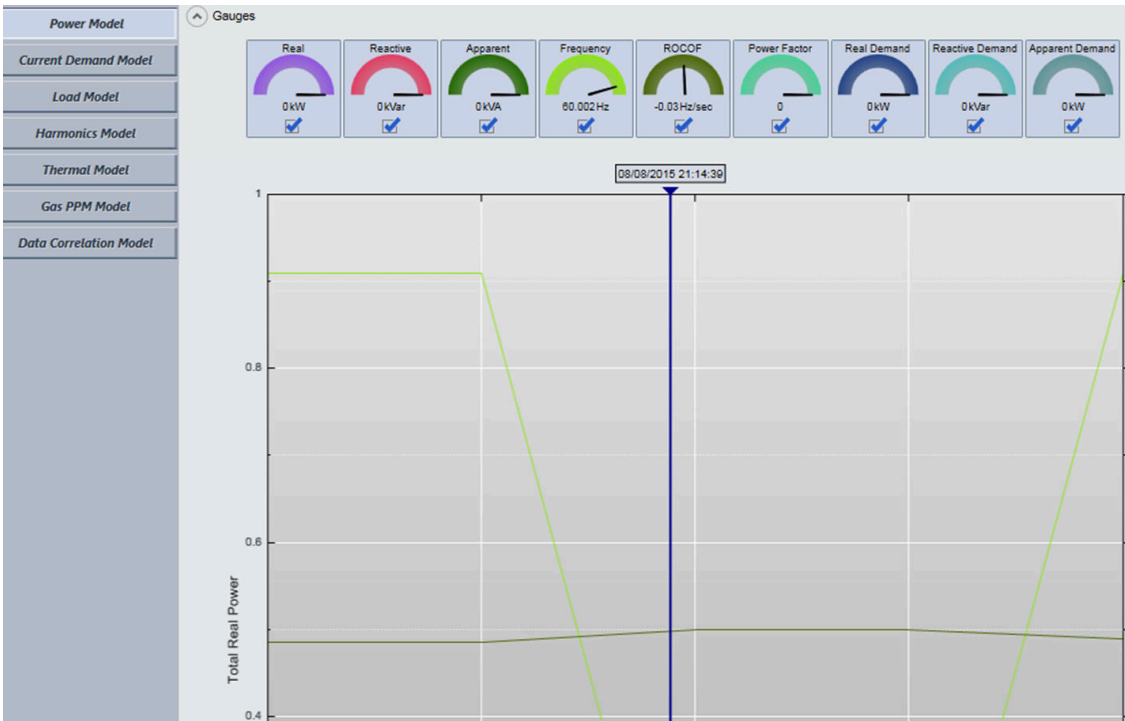


Figure 292: Transformer models

17.9.2 DGA MODELS

DGA models consist of the standard Duval Triangle and Gas Ratios model which is computed based on the latest 50 DGA data samples. The Key Gas model is computed based on the latest DGA data.

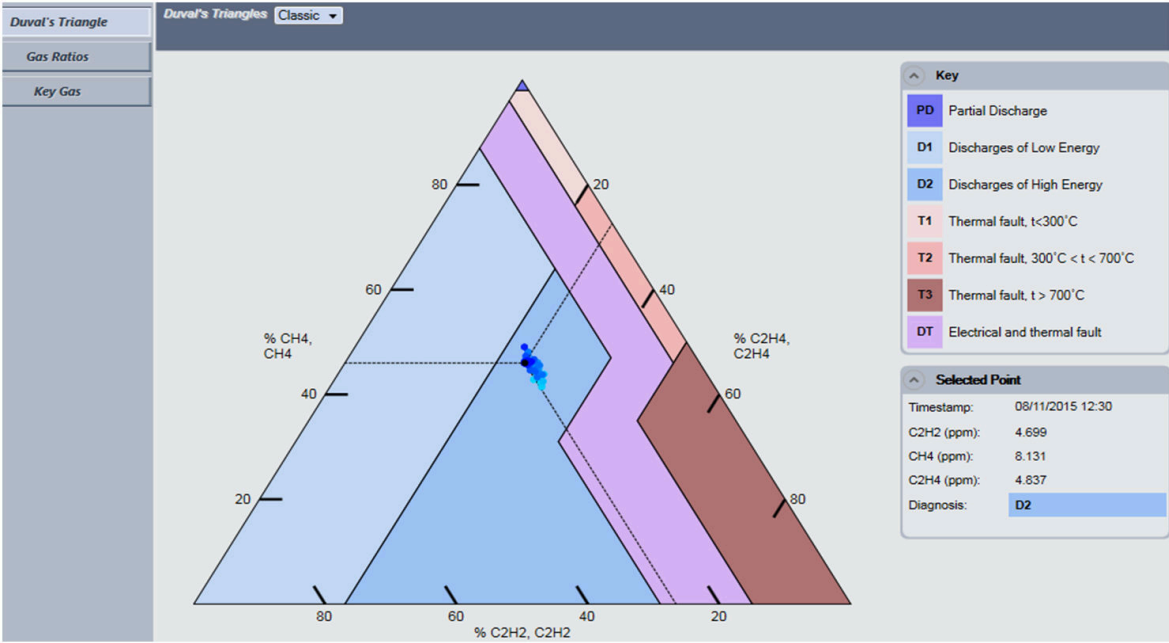


Figure 293: DGA models

17.10 HISTORICAL MAXIMUM RECORD

The Historical maximum record consists of lifetime operational maximum values along with a time stamp of the parameter.

Historical Max Record			
Date Time	Parameter	Value	Phase
Aug 10 2015 11:47:39	Xfmr Energization Peak inrush current (Amp)	908.1450	C
Aug 10 2015 12:47:50	Xfmr Energization 2nd harmonic inrush current (Amp)	3278.806	C
Aug 11 2015 12:21:15	Winding 1 2nd Harmonic(%)	31.0	B
Aug 10 2015 11:24:56	Winding 1 5th Harmonic(%)	60.3	B
Aug 11 2015 12:21:15	Winding 1 Total Harmonic Distortion (%)	84.5	B
Aug 11 2015 13:57:40	Winding 1 Harmonic Derating Factor	1.00	N/A
Aug 11 2015 12:40:1	Winding 1 Average Phase Current (Amp)	498.047	N/A
Aug 11 2015 12:40:1	Winding 1 Transformer overload (%)	115.0	N/A
Aug 11 2015 12:40:1	Breaker 1 Total Arcing Current (kA2-Cycle)	14358495.06	N/A
Aug 11 2015 14:1:24	Winding 2 2nd Harmonic(%)	20.2	C
Aug 11 2015 13:52:44	Winding 2 5th Harmonic(%)	30.0	C
Aug 11 2015 14:1:24	Winding 2 Total Harmonic Distortion (%)	36.0	C

Figure 294: Historical maximum record

17.11 TRANSFORMER HEALTH REPORT

The Transformer health report gives an executive summary on transformer operational data within a user-selectable date/times range in the form of a PDF report. The health report PDF consists of report data, online DGA status, nameplate data, energization summary, protection events summary, key learned data parameter trends, historical maximum data, DGA data and DGA models based on the order code.

The screenshot shows a 'Health Report' dialog box with the following fields and options:

- PDF File Name:** C:\Users\Public\Documents\GE Power Management\8SeriesPC\HTC 1f ...
- Report Created By:** XYZ
- Transformer Name:** 132/33 kV Industrial #1
- Utility/Substation Name:** ABC
- Area:** Canada
- Create a Report for the period of time:**
 - Select:** Custom Dates
 - From:** Aug 10, 2015 00:00
 - To:** Aug 11, 2015 14:59
- Buttons:** Create Report, Close

Figure 295: Transformer health report

17.12 DGA HISTORICAL TREND

DGA historical trend provides a trend chart of DGA parameters with the latest 100 gas ppm values displayed as a varying trend based on the DGA device type.

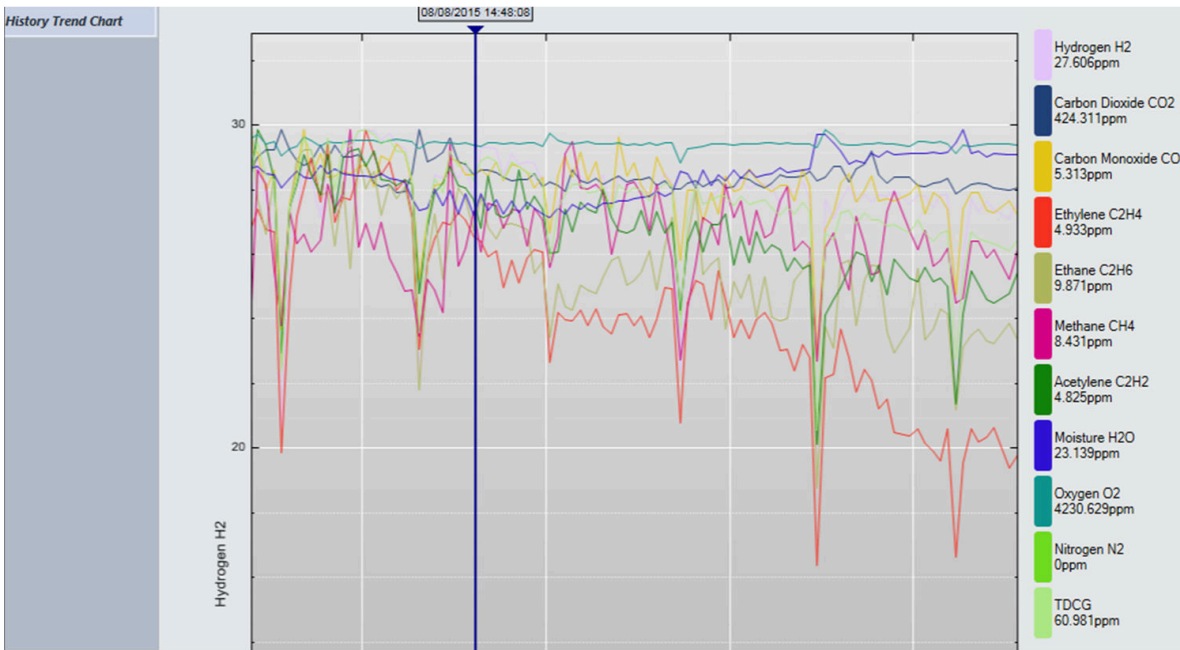


Figure 296: DGA historical trend

CHAPTER 18

MAINTENANCE

18.1 CHAPTER OVERVIEW

This chapter provides some information about the device maintenance.

This chapter contains the following sections:

Chapter Overview	698
Environmental Health Report	699
General maintenance	701

18.2 ENVIRONMENTAL HEALTH REPORT

Prolonged exposure to harsh environments and transient conditions that exceed those stated in the device specifications will reduce the life of the product. The relay has a patented Environmental Awareness Module (EAM) to record environmental data over the life of the product. The module measures temperature, humidity, surge pulses and accumulates the events every hour in pre-determined threshold buckets over a period of 15 years. Using EnerVista D&I Setup, you can retrieve this data in the form of a histogram. This will help you to quickly identify any changes in the operating condition of installed products and arrange necessary remedial action. An example of a report is provided below.

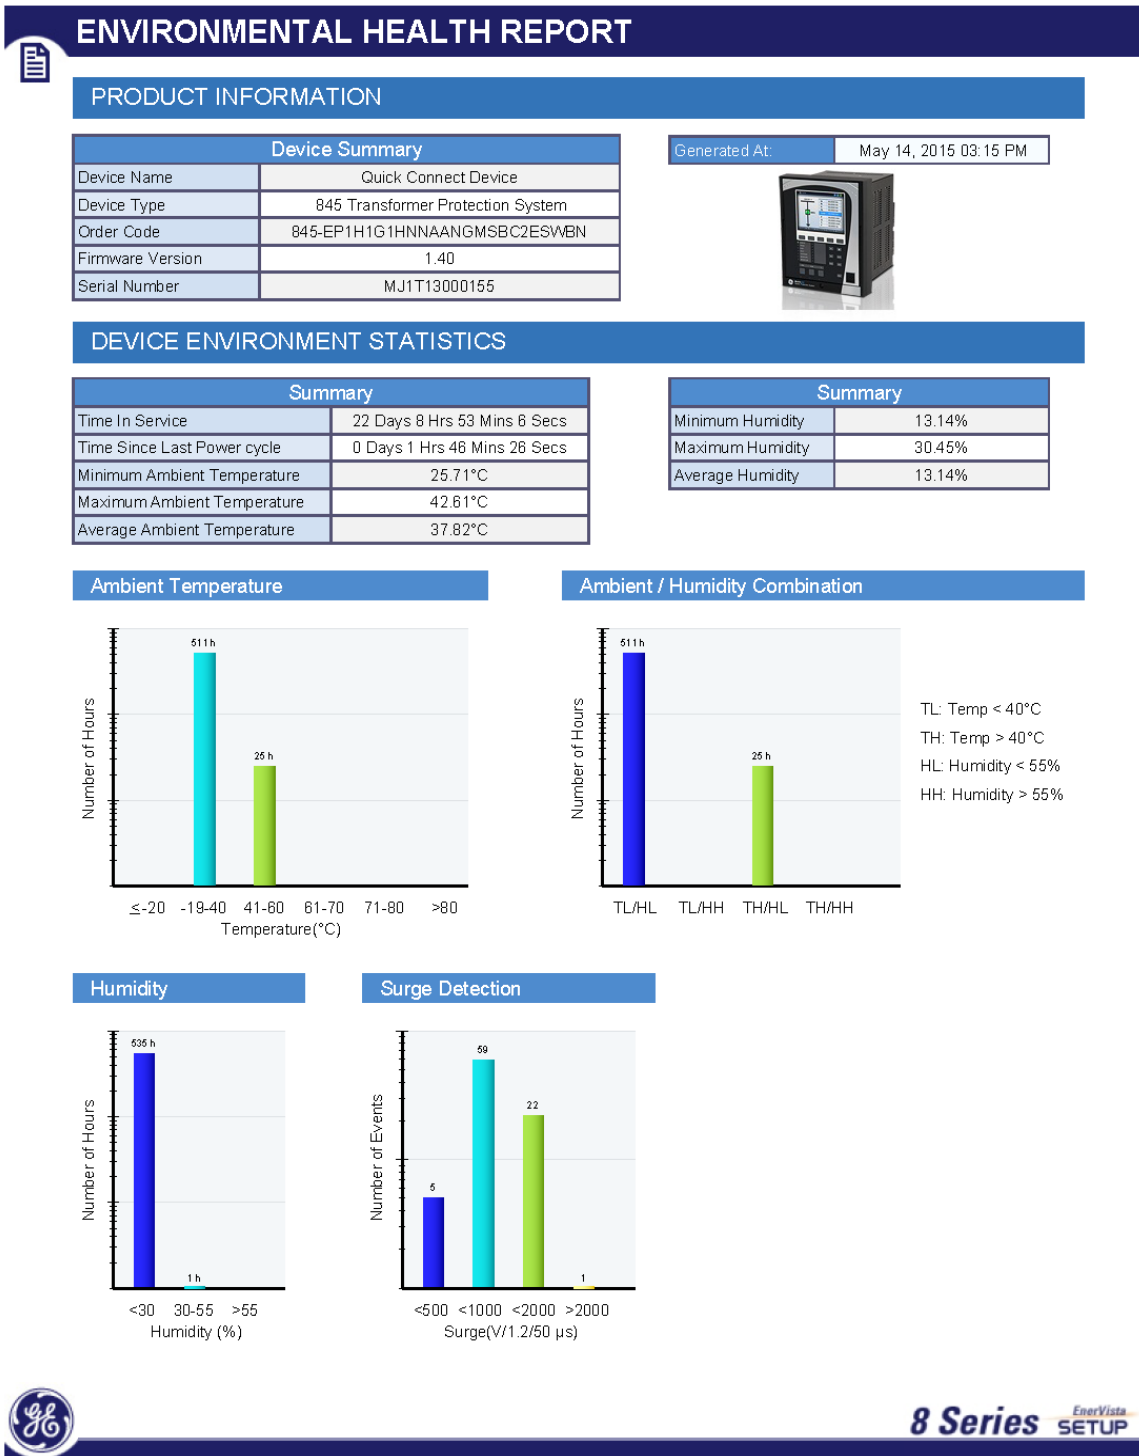


Figure 297: Environmental Report

18.3 GENERAL MAINTENANCE

As the relay is microprocessor-based, its characteristics do not change over time. In addition, the relay has continuous self-monitoring during operation, reporting any issues detected. For these reasons, routine maintenance of the relay is not required. When used in a controlled indoor environment with electrical conditions compliant with the specifications, the expected service life is 20 years, if manufactured after June 2014.

We appreciate that some customer maintenance practices stipulate routine maintenance of products in excess of the manufacturer's recommendation. Should this be your organization's policy, you might consider the following maintenance options:

In-service maintenance

- Visual verification of the analog values integrity, such as voltage and current (in comparison to other devices on the corresponding system).
- Visual verification of active alarms, relay display messages, and LED indications.
- LED test.
- Visual inspection for any damage, corrosion, dust, or loose wires.
- Event recorder file download with further events analysis.

Out-of-service maintenance

- Check wiring connections for firmness.
- Analog values (currents, voltages, RTDs, analog inputs) injection test and metering accuracy verification. Calibrated test equipment is required.
- Protection elements setting verification (analog values injection or visual verification of setting file entries against relay settings schedule).
- Contact inputs and outputs verification. This test can be conducted by direct change of state forcing or as part of the system functional testing.
- Visual inspection for any damage, corrosion, or dust.
- Event recorder file download with further events analysis.
- LED Test and pushbutton continuity check.

Note:

To avoid deterioration of electrolytic capacitors, power up units that are stored in a de-energized state once per year, for one hour continuously.

Unscheduled maintenance (system interruption)

View the event recorder and oscillography or fault report for correct operation of inputs, outputs, and elements.

18.3.1 IN-SERVICE MAINTENANCE

In-service maintenance consists of the following activities:

1. Visual verification of the analog values integrity, such as voltage and current (in comparison to other devices on the corresponding system).
2. Visual verification of active alarms, relay display messages, and LED indications.
3. Visual inspection for any damage, corrosion, dust, or loose wires.
4. Event recorder file download with further events analysis.

18.3.2 OUT-OF-SERVICE MAINTENANCE

Out-of-service maintenance consists of the following activities:

1. Check wiring connections for firmness.
2. Analog values (currents, voltages, RTDs, analog inputs) injection test and metering accuracy verification. Calibrated test equipment is required.
3. Protection elements setting verification (analog values injection or visual verification of setting file entries against relay settings schedule).
4. Contact inputs and outputs verification. This test can be conducted by direct change of state forcing or as part of the system functional testing.
5. Visual inspection for any damage, corrosion, or dust.
6. Event recorder file download with further events analysis.

18.3.3 UNSCHEDULED MAINTENANCE (SYSTEM INTERRUPTION)

Unscheduled maintenance consists of the following activities:

- Viewing the event recorder and oscillography for correct operation of inputs, outputs, and elements.

CHAPTER 19

SPECIFICATIONS

19.1 **DEVICE**

19.1.1 **ANNUNCIATOR PANEL**

ANNUNCIATOR PANEL	
Number of Elements:	1 (36 indicators)
Layout:	Grid of 2x2 or 3x3
Data Storage:	Non-volatile memory
Mode:	Self-reset, latched, acknowledgeable
Display Text:	3 lines of 15 characters maximum
Visual Indication:	Flashing: 2Hz @ 50% duty cycle

19.1.2 **CUSTOM CONFIGURATIONS**

CUSTOM CONFIGURATIONS	
Config Mode:	Simplified, Regular

19.2 PROTECTION ELEMENTS

To obtain the total operating time, i.e. from the presence of a trip condition to initiation of a trip, add 8 ms output relay time to the operate times listed below.

19.2.1 TRANSFORMER PERCENT DIFFERENTIAL PROTECTION

TRANSFORMER PERCENT DIFFERENTIAL PROTECTION (87T)	
Differential/Restraint Characteristic:	Dual Slope, Dual Breakpoint
Minimum Pickup level:	0.05 to 1.00 x CT in steps of 0.01
Slope 1 range:	1 to 100% in steps of 1%
Slope 2 range:	1 to 100% in steps of 1%
Breakpoint 1:	0.50 to 2.00 x CT in steps of 0.01
Breakpoint 2:	2.00 to 30.00 x CT in steps of 0.01
2 nd harmonic inhibit level:	0.1 to 40.0% in steps of 0.1%
2 nd harmonic inhibit mode:	Per-phase, Average, 2-out-of-3, 1-out-of-3
5 th harmonic inhibit level:	1.0 to 40.0% in steps of 0.1%
Dropout level:	97 to 98% of Pickup
Operate time:	< 16/22 ms at >3 x Pickup @60Hz (harmonic inhibits disabled/enabled) < 18/26 ms at >3 x Pickup @50Hz (harmonic inhibits disabled/enabled)
Level accuracy:	±0.5% of reading current, or ±1% of rated

19.2.2 TRANSFORMER INTER-TURN FAULT DETECTION

TRANSFORMER INTER-TURN FAULT DETECTION	
Operating Parameter:	Compensated differential current per phase
Number of Stages:	2
Pickup threshold:	0.010 to 0.500 x CT in steps of 0.001
Pickup Level Accuracy:	0.002 x CT for <1 x CT current
Hysteresis:	5% or 0.001 pu whichever is greater
Timer Accuracy:	±3% of settable delay setting or ±¼ cycle (whichever is greater) from pickup to operate
Number of Instances:	1

19.2.3 TRANSFORMER OVERLOAD

TRANSFORMER OVERLOAD	
Operating Parameter:	Winding 1, 2, 3 loads
Pickup level:	50 to 300% in steps of 1%
Dropout level:	97 to 98% of Pickup
Level Accuracy:	Per current input
Operate time:	<25 ms at >3 x Pickup at 60 Hz <30 ms at >3 x Pickup at 50 Hz
Timer Accuracy:	±3% of delay setting or ± ¼ cycle (whichever is greater) from pickup to operate

19.2.4 INSTANTANEOUS PHASE DIFFERENTIAL FUNCTION

INSTANTANEOUS PHASE DIFFERENTIAL FUNCTION (50/87)	
Pickup level:	3.00 to 30.00 per unit in steps 0.01
Dropout level:	97 to 98% of Pickup
Operate time:	<12 ms at >3 x Pickup@60Hz <15 ms at >3 x Pickup@50Hz

19.2.5 RESTRICTED GROUND FAULT (87G)

RESTRICTED GROUND (EARTH) FAULT (87G)	
Operating Parameter:	Ia, Ib, Ic and Ig (Fundamental Phasor Magnitude)
Pickup Level:	0.050 to 30.000 x CT in steps of 0.001 x CT (phase CT)
Ground Supervision Level:	0.050 to 30.000 x CT in steps of 0.001 x CT (ground CT)
Dropout Level:	97 to 98% of Pickup
Slope Range:	0 to 100% in steps of 1%
Pickup Delay:	0.000 to 6000.000 s in steps of 0.001 s
Level Accuracy:	For 0.1 to 2.0 x CT: $\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater. For > 2.0 x CT: $\pm 1.5\%$ of reading
Operate Time:	<25 ms at 1.1 x slope x I _{max} at 60 Hz, typically <30 ms at 1.1 x slope x I _{max} at 50 Hz, typically
Timing Accuracy:	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater) from pickup to operate

19.2.6 PHASE DIRECTIONAL OVERCURRENT (67P)

PHASE DIRECTIONAL OVERCURRENT (67P)	
Relay Connection:	90°(Quadrature)
Quadrature Voltage:	ABC phase seq.: phase A (V _{bc}), phase B (V _{ca}), phase C (V _{ab}) ACB phase seq.: phase A (V _{cb}), phase B (V _{ac}), phase C (V _{ba})
Polarizing Voltage Threshold (up to FW 3.xx):	0.050 to 3.000 x VT in steps of 0.001 x VT
Polarizing Voltage Threshold (from FW 4.10):	0.015 to 3.000 x VT in steps of 0.001 x VT
Current Sensitivity Threshold:	0.05 x CT
Characteristic Angle:	0° to 359° in steps of 1°
Angle Accuracy:	$\pm 3^\circ$
Operation Time (FlexLogic™ operands):	Reverse to Forward transition: < 12 ms, typically. Forward to Reverse transition: <8 ms, typically.

19.2.7 NEUTRAL DIRECTIONAL OVERCURRENT (67N)

NEUTRAL DIRECTIONAL OVERCURRENT (67N)	
Directionality:	Co-existing forward and reverse
Polarizing:	Voltage, Current, Dual
Polarizing Current:	I _g
Operating Current:	I ₀
Level Sensing:	3 x (I ₀ – K x I ₁), I _g
Restraint, K:	0.000 to 0.500 in steps of 0.001

NEUTRAL DIRECTIONAL OVERCURRENT (67N)

Characteristic Angle:	-90° to 90° in steps of 1°
Limit Angle:	40° to 90° in steps of 1°, independent for forward and reverse
Angle Accuracy:	±3° (both voltage and current (1A/5A only) polarizing signals)
Pickup Level:	0.050 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Operate Time (no direction transition):	< 16 ms at 3 x Pickup at 60 Hz < 20 ms at 3 x Pickup at 50 Hz

19.2.8 GROUND DIRECTIONAL OVERCURRENT (67G)**GROUND DIRECTIONAL OVERCURRENT (67G)**

Directionality:	Co-existing forward and reverse
Polarizing (845):	Voltage
Polarizing (850, 889):	Voltage, Current, Dual
Polarizing Voltage:	V ₀ or VX
Polarizing Current:	I _{pol}
Operating Current:	I _g
Level Sensing:	I _g , I _{pol}
Characteristic Angle:	-90° to 90° in steps of 1°
Limit Angle:	40° to 90° in steps of 1°, independent for forward and reverse
Angle Accuracy:	±3°
Pickup Level (up to FW 3.xx)	0.050 to 30.000 x CT in steps of 0.001
Pickup Level (from FW 4.10)	0.010 to 30.000 x CT in steps of 0.001
Dropout Level:	97 to 98%
Operate Time (no direction transition):	< 12 ms typical at 3 x Pickup at 60 Hz < 15 ms typical at 3 x Pickup at 50 Hz

19.2.9 PHASE INSTANTANEOUS OVERCURRENT (50P)**PHASE INSTANTANEOUS OVERCURRENT (50P)**

Operating Parameter	I _a , I _b , I _c (Fundamental Phasor Magnitude or RMS)
Pickup Level:	0.010 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: ±0.5% of reading or ±0.4% of rated, whichever is greater, for > 2.0 x CT: ±1.5% of reading. (For Neutral IOC, I _{op} = 3 * (I ₀ - K * I ₁) where K = 1/16 and I ₀ = 1/3 * I _n)
Operate Time:	<12 ms typical at 3 × Pickup at 60 Hz <15 ms typical at 3 × Pickup at 50 Hz (Phase/Ground IOC)
Timer Accuracy	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate

19.2.10 NEUTRAL INSTANTANEOUS OVERCURRENT (50N)**NEUTRAL INSTANTANEOUS OVERCURRENT (50N)**

Operating Parameter	Fundamental Phasor Magnitude
---------------------	------------------------------

NEUTRAL INSTANTANEOUS OVERCURRENT (50N)	
Pickup Level:	0.010 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: $\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater, for > 2.0 x CT: $\pm 1.5\%$ of reading. (For Neutral IOC, $lop = 3 * (I_{-0} - K * I_{-1})$ where $K = 1/16$ and $ I_{-0} = 1/3 * In $)
Operate Time:	<16 ms typical at 3 x Pickup at 60 Hz (Neutral IOC) <20 ms typical at 3 x Pickup at 50 Hz
Timer Accuracy	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater) from pickup to operate

19.2.11 GROUND INSTANTANEOUS OVERCURRENT (50G)

GROUND INSTANTANEOUS OVERCURRENT (50G)	
Operating Parameter	Ig Fundamental Phasor Magnitude
Pickup Level:	0.010 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy (for 0.1 to 2.0 x CT):	$\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater
Level Accuracy (for > 2.0 x CT):	$\pm 1.5\%$ of reading.
Operate Time:	<12 ms typical at 3 x Pickup at 60 Hz
Timer Accuracy from pickup to operate	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater)

19.2.12 PHASE TIME OVERCURRENT (51P/V)

PHASE TIME OVERCURRENT (51P/V)	
Current:	Phasor or RMS
Pickup Level:	0.010 to 30.000 in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: $\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater. For > 2.0 x CT: $\pm 1.5\%$ of reading 50:0.025A CT: For 0.5A to 4A: $\pm 0.1A$; For $> 4A$: $\pm 0.2A$ (889 only)
Curve Shape:	Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I ² t, I ⁴ t, Rapid Inverse, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D
Curve Multiplier	
TDM:	0.01 to 28800.00 in steps of 0.01
TMS:	0.025 – 1.200 in steps of 0.005
K (RI):	0.10 – 10.00 in steps of 0.01
Time Delay:	0.01 to 28800.00 in steps of 0.01
Reset Char:	DT, Inverse
Reset Time:	0.000 to 28800.000s in steps of 0.001 s
Reset Time:	Instantaneous, Timed
Curve Timing Accuracy:	Currents > 1.03 to 20 x pickup: $\pm 3\%$ of operate time or $\pm 1/2$ cycle (whichever is greater) from pickup to operate

PHASE TIME OVERCURRENT (51P/V)

Voltage Dependent OC (51V):	VCO (Voltage Controlled Overcurrent), VRO (Voltage Restraint Overcurrent)
-----------------------------	---

19.2.13 NEUTRAL/GROUND TIME OVERCURRENT (51N/G)**NEUTRAL/GROUND TIME OVERCURRENT (51N/G)**

Operating Parameter:	I_n/I_g (RMS or Fundamental)
Pickup Level:	0.010 to 30.000 in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy for 0.1 to 2.0 x CT	±0.5% of reading or ±0.4% of rated, whichever is greater
Level Accuracy for > 2.0 x CT:	±1.5% of reading
Curve Shape:	Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I^2t , I^4t , Rapid Inverse, IDG, EPATR B, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D
Time Delay:	0.000 – 200.000 in steps 0.001
Curve Multiplier	
TDM:	0.01 to 600.00 in steps of 0.01
TMS:	0.025 – 1.200 in steps of 0.005
K (RI):	0.10 – 10.00 in steps of 0.01
IDG Is:	1.0 -4.0 in steps of 0.1
IDG Time:	1.00-2.00 in steps of 0.01
Reset Char:	DT, Inverse
Reset Time:	0.000 – 100.000 in steps of 0.001 s
Curve Timing Accuracy:	Currents > 1.03 to 20 x pickup: ±3% of operate time or ±½ cycle (whichever is greater) from pickup to operate

19.2.14 NEGATIVE SEQUENCE INSTANTANEOUS OVERCURRENT**NEGATIVE SEQUENCE INSTANTANEOUS OVERCURRENT (50_2)**

Current:	I_{-2} Fundamental Phasor Magnitude
Pickup Level:	0.0020 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy for 0.1 to 2.0 x CT:	±0.5% of reading or ±0.4% of rated, whichever is greater,
Level Accuracy for > 2.0 x CT:	±1.5% of reading. (For $I_{op} = I_{-2} - K * I_{-1} $, where $K = 1/8$)
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Overreach:	< 2%
Operate Time:	< 12 ms typical at 3 x Pickup at 60 Hz < 15 ms typical at 3 x Pickup at 50 Hz
Timer Accuracy:	±3% of delay setting or ±½ cycle (whichever is greater) from pickup to operate

19.2.15 NEGATIVE SEQUENCE TIME OVERCURRENT

NEGATIVE SEQUENCE TIME OVERCURRENT (51_2)	
Operating Parameter:	I ₂ (Fundamental Phasor Magnitude)
Pickup Level:	0.020 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 2.0 x CT: $\pm 0.5\%$ of reading or $\pm 0.4\%$ of rated, whichever is greater, for > 2.0 x CT: $\pm 1.5\%$ of reading
Curve Shape (from FW 4.10):	Definite Time, IEC Curve A, IEC Curve B, IEC Curve C, IEC Short Inverse, Long Time Inverse, Rectifier, SI(1.3s), BPN EDF, IEEE Mod Inverse, IEEE Very Inverse, IEEE Extr. Inverse, US Inverse, US ST Inverse, ANSI Extr. Inverse, ANSI Very Inverse, ANSI Norm Inverse, ANSI Mod Inverse, IAC Extr. Inverse, IAC Very Inverse, IAC Inverse, IAC Short Inverse, I ² t, I ⁴ t, Rapid Inverse, FlexCurve A, FlexCurve B, FlexCurve C, FlexCurve D
Time Delay:	0.000 – 200.000 in steps 0.001
Curve Multiplier	
TDM:	0.01 – 600.00 in steps of 0.01
TMS:	0.025 – 1.200 in steps of 0.005
K (RI):	0.10 – 10.00 in steps of 0.01
Reset Char:	DT, Inverse
Reset Time:	0.000 – 600.000 s in steps of 0.001 DT, Inverse
Curve Timing Accuracy:	Currents > 1.03 to 20 x pickup: $\pm 3\%$ of curve delay or $\pm 1/2$ cycle (whichever is greater) from pickup to operate

19.2.16 PHASE OVERVOLTAGE (59P)

PHASE OVERVOLTAGE (59P)	
Voltage:	Fundamental Phasor Magnitude
Pickup Level:	0.02 to 3.00 x VT in steps of 0.01 x VT
Dropout Level (up to 3.xx):	97 to 98% of Pickup
Dropout Level (from 4.10):	Configurable: Either 97 to 98% of pickup or 95 to 97% of pickup
Level Accuracy:	$\pm 0.5\%$ of reading from 10 to 208 V
Phases Required for Operation:	Any one, Any two, All three
Curves:	Definite Time, Inverse Time, Flex Curves A/B/C/D
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001s (Definite Time)
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001s (Definite Time)
Reset mode:	Definite Time, Dependent Time
Pickup Accuracy:	Per phase voltage input channel error
Operate Time:	< 30 ms at 1.1 x pickup at 60Hz < 35 ms at 1.1 x pickup at 50Hz
Curve Timing Accuracy	at >1.1 x PKP: 3.5% of operate time or $\pm 1/2$ cycle (whichever is greater) from pickup to operate
Timer Accuracy:	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater) from pickup to operate

19.2.17 NEUTRAL OVERVOLTAGE (59N)

NEUTRAL OVERVOLTAGE (59N)	
Operating Parameter:	3V_0 calculated from phase to ground voltages
Pickup Level:	0.02 to 3.00 x VT in steps of 0.01 x VT
Dropout Level:	Configurable: Either 97 to 98% of Pickup, or 95 to 98% of Pickup.
Level Accuracy:	±0.5% of reading from 10 to 208 V
Neutral Overvoltage Curves:	Definite time, FlexCurve A/B/C/D, Inverse time (from FW 4.10)
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s (Definite Time)
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s (Definite Time)
Operate Time:	< 30 ms at 1.1 x pickup at 60Hz < 35 ms at 1.1 x pickup at 50Hz
Curve Timing Accuracy:	at > 1.1 x Pickup: ±3% of curve delay or ±1 cycle (whichever is greater) from pickup to operate

19.2.18 AUXILIARY OVERVOLTAGE (59X)

AUXILIARY OVERVOLTAGE (59X)	
Operating Parameter:	Vx (Phasor)
Pickup Level:	0.00 to 3.00 x VT in steps of 0.01 x VT
Dropout Level (up to 3.xx):	97 to 98% of Pickup
Dropout Level (from 4.10):	Configurable: Either 97 to 98% of pickup or 95 to 97% of pickup
Level Accuracy:	±0.5% of reading from 10 to 240 V
Overvoltage Curves:	Definite Time, Inverse Time, FlexCurves A/B/C/D
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Pickup Accuracy:	Auxiliary voltage input channel error
Operate Time:	< 30 ms at 1.1 x pickup at 60Hz
Curve Timing Accuracy:	at >1.1 x PKP: 3.5% of operate time ±½ cycle (whichever is greater) from pickup to operate
Timer Accuracy:	±3% of operate time or ±½ cycle (whichever is greater)

19.2.19 NEGATIVE SEQUENCE OVERVOLTAGE (59_2)

NEGATIVE SEQUENCE OVERVOLTAGE (59_2)	
Operating Parameter:	V_2
Pickup Level:	0.00 to 3.00 x VT in steps of 0.01 x VT
Dropout Level (up to 3.xx):	97 to 98% of Pickup
Dropout Level (from 4.10):	Configurable: Either 97 to 98% of pickup or 95 to 97% of pickup
Level Accuracy:	±0.5% of reading from 10 to 208 V
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Operate Time:	< 25 ms at 1.1 x pickup at 60 Hz < 30 ms at 1.1 x pickup at 50 Hz

NEGATIVE SEQUENCE OVERVOLTAGE (59_2)

Timer Accuracy:	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater) from pickup to operate
-----------------	---

19.2.20 PHASE UNDERVOLTAGE (27P)**PHASE UNDERVOLTAGE (27P)**

Voltage:	Fundamental Phasor Magnitude
Minimum Voltage:	0.00 to 1.50 x VT in steps of 0.01 x VT
Pickup Level:	0.00 to 1.50 x VT in steps of 0.01 x VT
Dropout Level:	Selectable. Either 101 to 103% of pickup or 103 to 105% of pickup
Level Accuracy:	$\pm 0.5\%$ of reading from 10 to 208 V
Phases Required for Operation:	Any one, Any two, All three
Undervoltage Curves:	Definite Time, Inverse Time, FlexCurves A/B/C/D
Pickup Time Delay:	0.020 to 6000.000 s in steps of 0.001s
Pickup Accuracy:	Per phase voltage input channel error
Reset Time Delay:	0.000 – 6000.00 s in steps of 0.001s
Reset Mode:	Definite Time, Dependent Time
Operate Time:	< 20 ms at 0.90 x pickup at 60 Hz < 25 ms at 0.90 x pickup at 50 Hz
Curve Timing Accuracy:	At < 0.90 x pickup: $\pm 3.5\%$ of curve delay or $\pm 1/2$ cycle (whichever is greater) from pickup to operate

19.2.21 AUXILIARY UNDERVOLTAGE (27X)**AUXILIARY UNDERVOLTAGE (27X)**

Operating Parameter:	Vx (Phasor)
Minimum Voltage:	0.00 to 1.50 x VT in steps of 0.01 x VT
Pickup Level:	0.00 to 1.50 x VT in steps of 0.01 x VT
Dropout Level:	102 to 103% of Pickup
Level Accuracy:	$\pm 0.5\%$ of reading from 10 to 208 V
Undervoltage Curves:	Definite Time, GE IAV Inverse Time or FlexCurves A/B/C/D
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Operate Time:	< 20 ms at 0.90 x pickup at 60 Hz < 25 ms at 0.90 x pickup at 50 Hz
Curve Timing Accuracy:	At < 0.90 x pickup: $\pm 3.5\%$ of curve delay or $\pm 1/2$ cycle (whichever is greater) from pickup to operate

19.2.22 VOLTAGE INTERRUPTION**NEUTRAL OVERVOLTAGE (59N)**

Operating Parameter:	V1
Minimum Voltage	0.00 to 1.50 x VT in steps of 0.01 VT
Pickup Level:	0.02 to 3.00 x VT in steps of 0.01 VT
Dropout Level:	101 to 104% of Pickup

19.2.23 VOLTS PER HERTZ (24)

VOLTS PER HERTZ (24)	
Voltages:	Phasor only
Pickup Level:	0.80 to 4.00 in steps of 0.01 pu
Dropout Level:	97 to 98% of pickup
Level Accuracy:	±0.02 pu
Timing Curves:	Definite Time; IEC Inverse A/B/C; FlexCurves A, B, C, and D
TD Multiplier:	0.05 to 600.00 s in steps of 0.01
Reset Delay:	0.00 to 6000.000 s in steps of 0.01
Timer Accuracy:	Typically, ±3% of operate time or ±15 cycles (whichever is greater) for values greater than 1.1 x pickup
Operate Time:	< 2 cycles
Number of Elements:	6

19.2.24 OVERFREQUENCY (81O)

OVERFREQUENCY (81O)	
Pickup Level Normal Frequency:	20.00 to 65.00 Hz in steps of 0.01
Pickup Level High Frequency:	40.00 to 65.00 Hz in steps of 0.01
Dropout Level:	Pickup -0.03 Hz
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Minimum Operating Voltage:	0.000 to 1.250 x VT in steps of 0.001 x VT
Level Accuracy Normal Frequency (40 to 70 Hz)	±0.01 Hz
Level Accuracy High Frequency (40 to 70 Hz)	±0.02 Hz
Timer accuracy	± 3% of delay setting or ± ¼ cycle (whichever is greater) from pickup to operate
Operate Time:	Typically 7.5 cycles at 0.1 Hz/s change. Typically 7 cycles at 0.3 Hz/s change. Typically 6.5 cycles at 0.5 Hz/s change.

Note:

Typical times are average Operate Times including variables such as frequency change instance, test method, etc., and may vary by ±0.5 cycles.

19.2.25 UNDERFREQUENCY (81U)

UNDERFREQUENCY (81U)	
Pickup Level:	20.00 to 65.00 Hz in steps of 0.01
High-speed Frequency Input	40.00 to 65.00 Hz in steps of 0.01
Dropout Level:	Pickup +0.03 Hz
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001s
Minimum Operating Voltage:	0.000 to 1.250 x VT in steps of 0.001 x VT

UNDERFREQUENCY (81U)	
Minimum Operating Current:	0.000 to 30.000 x CT in steps of 0.001 x CT
Level Accuracy (Normal Frequency Input):	±0.01 Hz
Level Accuracy (High-speed Frequency Input):	±0.02 Hz
Timer Accuracy:	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate
Operate Time:	Typically 7.5 cycles at 0.1 Hz/s change. Typically 7 cycles at 0.3 Hz/s change. Typically 6.5 cycles at 0.5 Hz/s change.

Note:

Typical times are average Operate Times including variables such as frequency change instance, test method, etc., and may vary by ±0.5 cycles.

19.2.26 RATE OF CHANGE OF FREQUENCY (81R)

FREQUENCY RATE OF CHANGE (81R)	
df/dt Trend:	Increasing, Decreasing, Bi-directional
df/dt Pickup Level:	0.10 to 15.00 Hz/s in steps of 0.01 Hz/s
df/dt Dropout Level:	96% of Pickup Level
df/dt Level Accuracy:	80 mHz/s or 3.5%, whichever is greater
Frequency (normal):	20.00 to 80.00 Hz in steps of 0.01 Hz
Frequency (high-speed):	40.00 to 70.00 Hz in steps of 0.01 Hz
Minimum Voltage Threshold:	0.000 to 1.250 x VT in steps of 0.001 x VT
Minimum Current Threshold:	0.000 to 30.000 x CT in steps of 0.001 x CT
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Timer Accuracy:	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate
95% Settling Time for df/dt:	< 24 cycles
Typical Operate Time:	6.5 cycles at 2 × Pickup 5.5 cycles at 3 × Pickup 4.5 cycles at 5 × Pickup

19.2.27 DIRECTIONAL POWER

DIRECTIONAL POWER (32)	
Measured Power	3-phase
Number of Stages	2
Characteristic Angle	0° to 359° in steps of 1°
Calibration Angle	0.00° to 0.95° in steps of 0.05°
Power Pickup Range	−1.200 to 1.200 x Rated Power in steps of 0.001
Pickup Level Accuracy	±1% or ±0.001 x Rated Power, whichever is greater
Hysteresis	2% or 0.001 x Rated Power, whichever is greater
Pickup Time Delay	0.000 to 6000.000 s in steps of 0.001 s
Operate Time	< 55 ms at 1.1 x pickup at 60 Hz < 65 ms at 1.1 x pickup at 50 Hz

DIRECTIONAL POWER (32)

Timer Accuracy	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater) from pickup to operate
----------------	---

19.2.28 RTD PROTECTION**RTD PROTECTION**

Pickup:	1°C to 250°C in steps of 1°C
Hysteresis:	2°C
Timer Accuracy:	<2 s
Elements:	Trip and Alarm

19.2.29 ARC FLASH HS PHASE/GROUND INSTANTANEOUS OVERCURRENT (50P/50G)**ARC FLASH HS PHASE/GROUND INSTANTANEOUS OVERCURRENT HS 50P/50G**

Current:	Phasor Magnitude (special high speed algorithm)
Pickup Level:	0.050 to 30.000 x CT in steps of 0.001 x CT
Dropout Level:	97 to 98% of Pickup
Level Accuracy:	For 0.1 to 0.2 x CT: $\pm 0.2\%$ of reading or 1.5% of rated, whichever is greater For > 0.2 x CT: $\pm 1.5\%$ of reading
Operate Time:	2ms for light-only detection using FlexLogic operands 4 ms at > 6 x Pickup at 60 Hz 5 ms at > 6 x Pickup at 50 Hz 4-6 ms at > (3-6) x Pickup at 60 Hz 4-8 ms at > (3-6) x Pickup at 50 Hz All above operate time accuracy : +/- 1ms (SSR operate time is included)
Seal-in Time	0.00 to 10.00 Seconds

19.3 CONTROL

19.3.1 SYNCHROCHECK

SYNCHROCHECK (25)	
Maximum Frequency Difference:	0.01 to 5.00 Hz in steps of 0.01 Hz for frequency window of $f_{nom} \pm 5$ Hz
Maximum Angle Difference:	1° to 100° in steps of 1°
Maximum Voltage Difference:	10 to 600000 V in steps of 1 V
Hysteresis for Maximum Frequency Difference:	0.01 to 0.10 Hz in steps of 0.01 Hz
Breaker Closing Time:	0.000 to 6000.000 s in steps of 0.001 s
Dead Source Function:	None, LB & DL, DB & LL, DB & DL, DB OR DL, DB XOR DL
Dead/Live Levels for Bus and Line:	0.00 to 1.50 x VT in steps of 0.01 x VT

19.3.2 BREAKER CONTROL

BREAKER CONTROL	
Operation:	Asserted FlexLogic Operands
Function:	Opens/closes, blocks, bypasses blocks to the feeder breaker

19.3.3 LOCAL CONTROL MODE

LOCAL CONTROL MODE	
Number of Elements:	1
Select Before Operate Mode:	Disabled, Enabled
Mode:	Local Mode ON, Local Mode OFF
Display Status:	LM (local mode) displayed in banner
Tagging:	Disabled, Enabled

19.3.4 SWITCH CONTROL

SWITCH CONTROL	
Operation:	Local (PB control and SLD) and Remote (asserted FlexLogic operands)
Function:	Opens/Closes the disconnect switch
Timers:	0.000 to 6000.000 s in steps of 0.001 s

19.3.5 TRIP BUS

TRIP BUS	
Number of Elements:	6
Number of Inputs:	16
Pickup Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Operate Time:	< 2 ms at 60 Hz

TRIP BUS	
Timer Accuracy:	$\pm 3\%$ of delay time or $\pm 1/4$ cycle (whichever is greater) from pickup to operate

19.3.6 DIGITAL ELEMENTS

DIGITAL ELEMENTS	
Number of elements:	64
Operating signal:	Any FlexLogic operand
Operate time:	Digital Elements are processed once per cycle (16 ms at 60 Hz, 20 ms at 50 Hz)
Pickup Delay:	0.000 to 6000.000 s in steps of 0.001 s
Dropout Delay:	0.000 to 6000.000 s in steps of 0.001 s
Timer accuracy	$\pm 3\%$ of delay setting or $\pm 1/4$ cycle (whichever is greater) from pickup to operate 20 ms at 50 Hz)

19.4 MONITORING

19.4.1 WINDING HOTTEST SPOT

WINDING HOTTEST-SPOT	
Operating Quantity:	Computed temperature in °C
Pickup Level:	50 to 300°C in steps of 1°C (122°F to 572°F in steps of 1°F)
Dropout Level:	1°C below pickup
Pickup Delay:	0 to 60000 minutes in steps of 1 min

19.4.2 AGING ACCELERATION FACTOR

AGING ACCELERATION FACTOR	
Operating Quantity:	Computed Aging Acceleration Factor, per-unit
Pickup Level:	1 pu to 10 pu in steps of 0.1 pu
Pickup Delay:	0 to 60000 minutes in step of 1 min

19.4.3 TRANSFORMER LOSS OF LIFE

XFMR LOSS OF LIFE	
Operating Quantity:	Computed Accumulated Transformer Loss of Life, hours
Pickup Level:	0 to 300000 hours in steps of 1 hour

19.4.4 HARMONIC DERATING

HARMONIC DERATING	
Timer Accuracy:	±3% of delay setting or ±3 cycle (whichever is greater) from pickup to operate

19.4.5 TAP CHANGER FAILURE

TAP CHANGER FAILURE	
Operating Parameter:	Tap Changer Position
Time Delay:	0.00 to 600.00 s
Timer Accuracy:	±3% of delay setting or ±2 cycles (whichever is greater) from pickup to operate

19.4.6 POWER FACTOR (55)

POWER FACTOR (55)	
Switch-In Level:	0.01 Lead to 1 to 0.01 Lag in steps of 0.01
Dropout Level:	0.01 Lead to 1 to 0.01 Lag in steps of 0.01
Delay:	0.000 to 6000.000 s in steps of 0.001 s
Minimum Operating Voltage:	0.00 to 1.25 x VT in steps of 0.01 x VT
Timer Accuracy:	±3% of delay setting or ±1¼ cycle (whichever is greater) from pickup to operate

19.4.7 BREAKER ARCING CURRENT

BREAKER ARCING CURRENT	
Mode:	3-pole
Principle:	accumulates breaker duty (I^2t) during fault
Initiation:	any operand
Alarm Threshold:	0 to 50000 kA ² -cycle in steps of 1 kA ² -cycle
Timer Accuracy:	±3% of delay setting or ±1 cycle (whichever is greater) from pickup to operate

19.4.8 BREAKER FAILURE

BREAKER FAILURE	
Mode:	3-pole
Current Supervision:	phase and neutral current (fundamental phasor magnitude)
Current Supervision Pickup:	0.050 to 30.000 x CT in steps of 0.001 x CT
Current Supervision Dropout:	97 to 98% of pickup
Current Supervision Accuracy:	For 0.1 to 2.0 x CT: ±0.5% of reading or ±0.4% of rated (whichever is greater) For > 2.0 x CT: ±1.5% of reading
Time Delay:	0.000 to 6000.000 s in steps of 0.001 s
Timer Accuracy:	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate
Reset Time:	19 to 30 ms at 1.5 to 20 x Pickup

19.4.9 BREAKER HEALTH

BREAKER HEALTH	
Timer Accuracy:	±3% of delay setting or ±1 cycle (whichever is greater) from pickup to operate

19.4.10 TRIP CIRCUIT MONITORING

TRIP CIRCUIT MONITOR (TCM)	
Applicable Voltage:	20 to 250 VDC
Trickle Current:	1 to 2.5 mA
Timing Accuracy:	±3 % or ±4 ms, whichever is greater

19.4.11 CLOSE CIRCUIT MONITORING

CLOSE CIRCUIT MONITOR (CCM)	
Applicable Voltage:	20 to 250 VDC
Trickle Current:	1 to 2.5 mA
Timing Accuracy:	±3 % or ±4 ms, whichever is greater

19.4.12 DEMAND

DEMAND	
Measured Values:	Phase A/B/C present and maximum current, three-phase present, maximum real/reactive/apparent power, minimum real/reactive/apparent power
Measurement Type:	Thermal Exponential, 90% response time (programmed): 5 to 90 min in steps of 1 min. Block Interval / Rolling Demand, time interval (programmed): 5 to 90 min in steps of 1 min.
Current Pickup Level (845, 850, 889):	10 to 10000 in steps of 1 A
Dropout Level:	96-98% of Pickup level
Level Accuracy:	±2%

19.4.13 HARMONIC DETECTION

HARMONIC DETECTION	
Operating Parameter:	Current 2 nd , 3 rd , 4 th , 5 th harmonic or THD per phase
Timer Accuracy:	Harmonics: ±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate. THD: ±3% of delay setting or ±3 cycles (whichever is greater) from pickup to operate

19.5 RECORDING

19.5.1 TRANSIENT RECORDER

TRANSIENT RECORDER	
Default AC Channels:	12 currents + 4 voltages
Configurable Channels:	16 analog and 64 digital channels
Sampling Rate:	128/c, 64/c, 32/c, 16/c, 8/c
Trigger Source:	Any element pickup, dropout or operate, digital input or output change of state, FlexLogic operand
Trigger Position:	0 to 100%
Storage Capability:	Non-volatile memory

19.5.2 EVENT DATA

EVENT DATA	
Number of Records:	1024 (matches the existing Event Recorder)
Data Storage:	Non-volatile memory
Time-tag Accuracy:	One microsecond
Settings:	64 Configurable FlexAnalog parameters, Event Selector
Actuals:	Selected Event Number, Timestamp of Selected Event, Cause of Selected Event, 64 Configurable FlexAnalog values
Commands:	None (using existing Clear Event Recorder)

19.5.3 DATA LOGGER

DATA LOGGER	
Data Logger channels:	16
Data Logger Rate:	1 cycle, 1 sec., 30 sec., 1 min., 15 min., 30 min., 1 hour, 6 hours, 8 hours, 12 hours, 24 hours
Inputs:	Any analog parameter from the list of available analog parameters
Data Collection Mode:	Continuous, Triggered
Trigger Source:	Any digital flag from the list of digital flags
Trigger Position:	0 to 50% in steps of 1%
Channel 1(16) Mode:	Sample, Min, Max, Mean

19.5.4 EVENT RECORDER

EVENT RECORDER	
Number of events:	1024
Header:	relay name, order code, firmware revision
Content:	any element pickup, any element operate, digital input change of state, digital output change of state, self-test events
Data Storage:	non-volatile memory
Time-tag Accuracy:	to one microsecond

19.5.5 LAST TRIP DATA

LAST TRIP DATA	
Number of Records:	1
Data Storage:	Non-volatile memory
Time-tag Accuracy:	One microsecond
Actuals:	Event Number of Last Trip, Timestamp of Last Trip, Cause of Last Trip, 64 Configurable FlexAnalog values
Commands:	Clear Last Trip Data

19.5.6 FAULT REPORTS

FAULT REPORTS	
Number of Reports:	15
Captured Data:	Pre-fault and fault phasors for all CT and VT banks, pre-fault and fault trigger operands, user-programmable analog channels 1 to 32

19.6 USER-PROGRAMMABLE ELEMENTS

19.6.1 FLEXLOGIC

FLEXLOGIC	
Lines of code:	1024
Supported operations:	NOT, XOR, OR (2 to 16 inputs), AND (2 to 16 inputs), NOR (2 to 16 inputs), NAND (2 to 16 inputs), latch (reset-dominant), edge detectors, timers
Inputs:	any logical variable, contact, or virtual input
Number of timers:	32
Pickup delay:	0 to 60000 (ms, sec., min.) in steps of 1
Dropout delay:	0 to 60000 (ms, sec., min.) in steps of 1
Timer accuracy:	$\pm 3\%$ of delay setting or $\pm \frac{1}{4}$ cycle (whichever is greater) from pickup to operate

19.6.2 FLEXELEMENTS

FLEXELEMENTS	
Number of elements:	8
Operating signal:	Any analog actual value, or two values in a differential mode
Operating signal mode:	Signed, or Absolute value
Operating mode:	Level, Delta
Comparison direction:	Over, Under
Operate time:	FlexElements are processed once per cycle (16 ms at 60 Hz, 20 ms at 50 Hz)
Pickup Level:	-30.000 to 30.000 pu in steps of 0.001 pu
Hysteresis:	0.1 to 50.0% in steps of 0.1%
Delta dt:	40 msec to 45 days
Pickup and dropout delays:	0.000 to 6000.000 s in steps of 0.001 s

19.6.3 FLEXSTATES

FLEXSTATES	
Number of States:	256 logical variables grouped under 16 Modbus addresses
Programmability:	Any FlexLogic operand, any digital input, any virtual input, any remote input

19.6.4 NON-VOLATILE LATCHES

NON-VOLATILE LATCHES	
Type:	Set-dominant or Reset-dominant
Range:	16 individually programmed
Output:	Stored in non-volatile memory
Execution sequence:	As input prior to protection, control and FlexLogic

19.6.5 FLEXCURVES

FLEXCURVES	
Number:	4 (A, B, C, D)
Reset points:	40 (0.00 to 0.98 x pickup)
Operate points:	80 (1.03 to 20.0 x pickup)
Time delay:	0 to 200,000,000 ms in steps of 1 ms
Saturation level:	20 times the pickup level

19.6.6 TAB PUSHBUTTONS

TAB PUSHBUTTONS	
Number of elements:	1 (20 Tab Pushbuttons)
Data Storage:	Non-volatile memory
Mode:	Self-reset, latched
Display Message:	2 lines; 15 characters per line
Dropout Timer:	0.000 to 60.000 s in steps of 0.005
Auto-reset Timer:	0.2 to 600.0 s in steps of 0.1
Hold Timer:	0.1 to 10.0 s in steps of 0.1
Timer Accuracy:	±3% of delay setting or ±¼ cycle (whichever is greater) from pickup to operate

19.6.7 USER-PROGRAMMABLE LEDS

USER-PROGRAMMABLE LEDS	
Number:	17 (14 + 3 PB LEDS)
Programmability:	any logic variable, contact, or virtual input
Reset mode:	self-reset or latched

19.6.8 USER-PROGRAMMABLE PUSHBUTTONS

USER-PROGRAMMABLE PUSHBUTTONS	
Number of pushbuttons:	3 (Membrane and Rugged Front Panels)
Mode:	Self-reset, latched
Display message:	2 lines of 13 characters on each line
Dropout timer:	0.000 to 60.000 s in steps of 0.005
Auto-reset timer:	0.2 to 600.0 s in steps of 0.1
Hold timer:	0.0 to 10.0 s in steps of 0.1

19.7 METERING

19.7.1 RMS PARAMETERS

Currents	
Parameters:	Phase A, B, C, Neutral, Ground
Accuracy:	$\pm 0.25\%$ of reading or $\pm 0.2\%$ of rated (whichever is greater) from 0.1 to $2.0 \times CT$ $\pm 1\%$ of reading $> 2.0 \times CT$

Voltages	
Parameters:	Wye VTs: A-n, B-n, C-n, A-B, B-C, C-A, Average Phase, Neutral and Residual. Delta VTs: A-B, B-C, C-A, Neutral and Residual
Accuracy:	$\pm 0.5\%$ of reading from 15 to 208 V $\pm 2\%$ for open Delta connections

Sensitive Ground	
Parameter:	I _{sg}
Accuracy (from 0.01 to $0.2 \times CT$):	$\pm 1.30\%$ of rated
Accuracy ($> 0.2 \times CT$):	$\pm 0.30\%$ of reading or $\pm 0.60\%$ of rated (whichever is greater)

Real Power (Watts)	
Range:	-214748364.8 kW to 214748364.7 kW
Parameters:	Wye VTs: 3-phase and per phase. Delta VTs: 3-phase only
Accuracy:	$\pm 1.0\%$ of reading or 0.2 kW (whichever is greater) at $-0.8 < PF \leq -1.0$ and $0.8 < PF < 1.0$

Reactive Power (Vars)	
Range:	-214748364.8 kvar to 214748364.7 kvar
Parameters:	Wye VTs: 3-phase and per phase. Delta VTs: 3-phase only
Accuracy:	$\pm 1.0\%$ of reading or 0.2 kvar (whichever is greater) at $-0.2 < PF \leq 0.2$

Apparent Power (VA)	
Range:	0 kVA to 214748364.7 kVA
Parameters:	Wye VTs: 3-phase and per phase. Delta VTs: 3-phase only
Accuracy:	$\pm 1.0\%$ of reading or 0.2 kVA (whichever is greater)

Power Factor	
Parameters:	3-phase; per phase if VT is Wye
Range:	0.01 Lag to 1.00 to 0.01 Lead
Accuracy:	± 0.02 for 50 Hz and 60 Hz; ± 0.05 for 25 Hz

Watt-hours (positive and negative)	
Range:	0.000 MWh to 4294967.295 MWh
Parameters:	3-phase only
Update Rate:	50 ms
Accuracy:	±2.0% of reading

Var-hours (positive and negative)	
Range:	0.000 Mvarh to 4294967.295 Mvarh
Parameters:	3-phase only
Update Rate:	50 ms
Accuracy:	±2.0% of reading

19.7.2 PHASORS

Current	
Parameters:	Phase A, B, C, Neutral and Ground
Magnitude Accuracy:	±0.5% of reading or ±0.2% of rated (whichever is greater) from 0.1 to 2.0 x CT ±1.0% of reading > 2.0 x CT
Angle Accuracy:	2° (3° for 25 Hz)

Voltages	
Parameters:	Wye VTs: A-n, B-n, C-n, A-B, B-C, C-A, Average Phase, Neutral and Residual Delta VTs: A-B, B-C, C-A, Neutral and Residual
Magnitude Accuracy:	±0.5% of reading from 15 to 208 V ±1% for open Delta connections ±10% for 25 Hz with 150 V < V < 208V
Angle Accuracy:	0.5° (15 V < V < 208 V)

19.7.3 FREQUENCY

FREQUENCY	
Range:	2.000 to 90.000 Hz
Accuracy at:	V = 15 to 208 V: ±0.01 Hz (input frequency 15 to 70 Hz); I = 0.1 to 0.4 x CT: ±0.020 Hz (input frequency 15 to 70 Hz); I > 0.4 x CT: ±0.01 Hz (input frequency 15 to 70 Hz)

19.7.4 CURRENT AND VOLTAGE HARMONICS

CURRENT AND VOLTAGE HARMONICS	
Parameters:	Magnitude of each harmonic and THD
Range:	2 nd to 25 th harmonic: per-phase displayed as % of f ₁ fundamental frequency THD: per-phase displayed as % of f ₁

19.8 INPUTS

19.8.1 TAP CHANGER INPUT

TAP CHANGER INPUT	
Operating Parameter:	BCD, ohms In 1, Analog Ip 1
Tap Changer Range:	-19 to +39
Accuracy:	Per Input accuracy

19.8.2 AC CURRENTS

AC CURRENTS	
CT Rated Primary (3.xx):	1 to 20000 A
CT Rated Primary (4.10):	1 to 50000 A
CT Rated Secondary:	1 A or 5 A based on relay ordering
Burden:	< 0.2 VA at rated secondary
Short Term CT Withstand:	1 second at 100 x rated current 2 seconds at 40 x rated current Continuous 3 x rated current

19.8.3 AC VOLTAGES

AC VOLTAGE	
VT Range:	10 to 260 V
Nominal Frequency:	20 to 65 Hz
Burden:	<0.0042 VA at 120 V
Conversion Range:	1 to 275 V
Voltage Withstand:	continuous at 260 V to neutral. 1 min/hr at 420 V to neutral

19.8.4 ANALOG INPUTS

ANALOG INPUTS	
Current Input (mA DC):	0 to 1mA, 0 to 5mA, 0 to 10mA, 0 to 20mA, 4 to 20mA (configurable)
Input Impedance:	375 Ω $\pm$ 10%
Conversion range:	0 to +21 mA DC
Accuracy:	$\pm$ 1% of full scale,
Type:	Passive
Sampling Interval:	Typically 500 ms
Cable:	Twisted-pair shielded cable

19.8.5 FREQUENCY

FREQUENCY	
Nominal frequency setting:	50 Hz, 60 Hz

FREQUENCY	
Sampling frequency:	64 samples per power cycle. 128 samples per power cycle (available for transient recorder)
Tracking frequency range:	3 to 72 Hz

19.8.6 ARC FLASH SENSOR/FIBER

ARC FLASH SENSOR/FIBER	
Number of Point Sensors:	8 (Point and/or Loop sensors). 4 sensors per instance
Detection Radius:	180 degrees
Fiber Length (Point Sensor):	35 m
Fiber Length (Loop Sensor):	70 m
Fiber Size:	1000 um
Mode:	Multi-mode
Connector:	Small Media Interface (SMI)
Fiber Type:	Plastic Optical Fiber
Bend Radius:	>25 mm

19.8.7 CONTACT INPUTS

CONTACT INPUTS	
Number of Inputs:	Based on relay order code
Type:	Wet or Dry
Wet Contacts:	300 VDC maximum
Selectable thresholds:	Programmable: 17 VDC (For 24 VDC Operating Voltage) 33 VDC (For 48 VDC and 60 VDC Operating Voltage) 84 VDC (For 110 VDC and 125 VDC Operating Voltage) 166 VDC (For 220 VDC and 250 VDC Operating Voltage)
Tolerance:	17 VDC: Vlow (off) <10V, Vhigh (on) >19V. 33 VDC: Vlow (off) <23V, Vhigh (on) >38V. 84 VDC: Vlow (off) <70V, Vhigh (on) >88V. 166 VDC: Vlow (off) <140V, Vhigh (on) >176V.
Recognition time:	1 ms (typical)
Debounce time:	0.0 to 16.0 ms in steps of 0.5 ms
Continuous current draw (burden):	2 mA
CLOCK	
Setup:	Date and Time, Daylight Saving Time, UTC (Coordinated Universal Time)
Backup Retention:	31 days
Typical clock drift:	+/- 5minutes per month

Note:

For relays with Hardware Revision A, Clock Backup Retention is only 1 hour

19.8.8 IRIG-B INPUT

IRIG-B INPUT	
Auto-detect:	DC and AM

IRIG-B INPUT	
Amplitude Modulation:	1 V to 10 V pk-to-pk
DC Shift:	TTL
Input Impedance:	40 k Ω
Isolation:	2 kV
IRIG-B Format:	IEEE 1344-1995 (with control bits extension)

19.8.9 RTD INPUTS

RTD INPUTS	
Types (3-wire):	100 Ω Platinum, 120 Ω Nickel, 100 Ω Nickel, 10 Ω Copper (RMIO only supports 100 Ω Platinum)
Sensing current:	5 mA
Range:	-40 to +250°C (-40 to +482°F)
Accuracy (onboard):	$\pm 2^{\circ}\text{C}$ ($\pm 4^{\circ}\text{F}$)
Accuracy (using RMIO):	$\pm 3^{\circ}\text{C}$ ($\pm 5.4^{\circ}\text{F}$)
Isolation:	36 V pk-pk (a group of RTDs to ground) 2 kV from base unit (RMIO only)
Lead Resistance:	25 Ω max. per lead for platinum or nickel and 3 Ω max. per lead for copper RTDs
RTD Inputs Available:	6 RTD inputs with one module or 12 inputs with 2 modules (IO cards R or S). 1 RTD input with IO card L.6 to 12 RTD inputs with RMIO modules 1 through 4
Cable:	Three-wire shielded cable

19.8.10 OHMS INPUT

OHMS INPUT	
Type:	Resistance (ohms)
Range:	0 to 500 Ω or 0.5 to 5.1 k Ω
Bias current:	1.9 mA through the full range
Accuracy:	$\pm 1\%$ (of full scale based on input range)

19.8.11 TAP CHANGER INPUT

TAP CHANGER INPUT	
Operating Parameter:	BCD, ohms In 1, Analog Ip 1
Tap Changer Range:	-19 to +39
Accuracy:	Per Input accuracy

19.9 OUTPUTS

19.9.1 ANALOG OUTPUTS

ANALOG OUTPUTS	
Range (configurable):	0 to 1 mA, 0 to 5 mA, 0 to 10 mA, 0 to 20 mA, 4 to 20 mA
Max. load resistance:	10 k Ω @ 1 mA, 600 Ω @ 20 mA
Accuracy:	$\pm 1\%$ of full scale
Isolation:	500V DC for one minute (functional isolation between analog inputs and output group; and each group of chassis)
Driving Signal:	any Analog quantity
Sampling Interval:	Typically 100 ms
Upper and lower limit (for the driving signal):	-90 to 90 pu in steps of 0.001
Cable:	Twisted-pair shielded cable

19.9.2 FORM C OUTPUT RELAYS

FORM C OUTPUT RELAYS	
Maximum Working Voltage:	300VDC/300VAC
Make and short-time carry current:	30A/0.2s per IEEE C37.90
Maximum Continuous Current per contact:	10A
Total maximum current for contacts connected to common potential:	10A
Breaking Capacity (DC inductive) with respect to source voltage, @L/R = 40 ms (10000 Operation, per IEC 60255-1 2009-08):	24 V-1 A; 48 V-0.5 A; 125 V-0.3 A; 250 V-0.2 A
Breaking Capacity (DC resistive) with respect to source voltage:	24 V-10 A; 48 V-1.5 A; 125 V-0.4 A; 250 V-0.3 A
Breaking Capacity (AC inductive) with respect to source voltage, @PF= 0.4 or less:	A300, Pilot duty 720 VA
Breaking Capacity (AC resistive) with respect to source voltage:	277V-10A
Operating Time (coil energization to contact closure, resistive load):	<8ms
Contact Material:	Silver alloy
Mechanical Endurance (no load):	> 10,000
Maximum Frequency of operation:	360/h
Protection Device across contact:	EMI Suppression Cap, 1nF

Note:

For order codes with a combined total of 2 or 3 type A and M I/O cards, the following ratings are applied to meet UL508 requirements: 1 second on / 10 seconds off, 9% duty cycle

19.9.3 FORM A VOLTAGE MONITOR

FORM-A VOLTAGE MONITOR	
Applicable voltage:	20 to 250 VDC
Trickle current:	1 to 2.5 mA
Timer accuracy:	±3% of operate time or ±¼ cycle (whichever is greater)

19.9.4 SOLID STATE RELAYS

SOLID STATE RELAYS ON I/O CARD M	
Maximum Working Voltage:	300 VDC
Make and short-time carry current:	30A/0.2 s per IEEE C37.90
Maximum Continuous Current per contact:	10 A
Total maximum current for contacts connected to common potential:	10 A
Breaking Capacity (DC inductive) with respect to source voltage, @L/R = 40 ms (10000 Operation, per IEC 60255-1 2009-08):	250 VDC - 10 A (or 2.5 kW) (Maximum 10 A and 300 VDC)
Breaking Capacity (DC resistive) with respect to source voltage:	250 V - 30 A (or 7500 W)
Breaking Capacity (AC inductive) with respect to source voltage, @PF= 0.35 or less:	N/A
Breaking Capacity (AC resistive) with respect to source voltage:	N/A
Operating Time (coil energization to contact closure, resistive load):	<0.2 ms
Contact Material:	Hybrid
Mechanical Endurance (no load):	> 10,000
Maximum Frequency of operation:	360/h
Protection Device across contact:	MO V, rated @ 250 VAC/320 VDC

19.9.5 PULSED OUTPUTS

PULSED OUTPUTS	
Mode:	3-phase positive and negative active energy measurement, 3-phase positive and negative reactive energy measurements
Principle:	Pulsed output is energized for one second and then de-energized for one second after the programmed energy increment.

19.9.6 COIL ACTUATOR OUTPUTS

COIL ACTUATOR OUTPUTS	
No. of Coil Actuators:	3 (1 per phase)
Open Maximum Current:	5 to 20 A
Close Maximum Current:	5 to 20 A
Open Pulse Time:	15 to 100 ms
Close Pulse Time:	15 to 100 ms
Operate Time:	< 8 ms

COIL ACTUATOR OUTPUTS	
Intervals between full sequence operation:	Minimum 60 s between two consecutive full sequence operations. Minimum 30 mins after 6 consecutive full sequence operations with minimum interval.

19.10 POWER SUPPLY

19.10.1 VOLTAGE SUPPLIES

(FOR H AND R OPTIONS ONLY)	
Nominal DC Voltage:	125 to 250 V
Minimum DC Voltage:	88 V
Maximum DC Voltage:	300 V
Nominal AC Voltage:	100 to 240 V at 50/60 Hz
Minimum AC Voltage:	88 V at 50 to 60 Hz
Maximum AC Voltage:	265 V at 50 to 60 Hz

(FOR L DC OPTION ONLY)	
Nominal DC Voltage:	24 V to 48 V
Minimum DC Voltage:	20 V
Maximum DC Voltage:	60 V

19.10.2 POWER CONSUMPTION

POWER CONSUMPTION	
Typical:	20 W / 40 VA
Maximum:	34 W / 70 VA

19.10.3 VOLTAGE LOSS RIDE-THROUGH

VOLTAGE LOSS RIDE THROUGH	
Typical (at typical power consumption):	50 ms
For R order code:	200 ms

19.11 COMMUNICATIONS

19.11.1 ETHERNET

μETHERNET – BASE OFFERING (“SE” OPTION)

Modes:	10/100 Mbps
One Port:	RJ45
Protocol:	Modbus TCP, DNP
Cable type:	CAT 5 or CAT 6 Shielded Twisted Pair

ETHERNET – CARD OPTION “C” - 2X COPPER (RJ45) PORTS

Modes:	10/100 MB
Two Ports:	RJ45 (with this option both enabled ports are on the communications card; the Ethernet port located on the base CPU is disabled)
Protocols:	Modbus TCP, DNP3.0, IEC60870-5-104, IEC 61850 Ed.2, IEC 61850 Ed.2 GOOSE, IEEE 1588 (PTP version 2), SNTP, IEC 62439-3 clause 4 (PRP)

ETHERNET – CARD OPTION “S” - 2X ST FIBER PORTS

Emitter, fiber type:	1300 nm Multi-mode (see table below)
Two Ports:	ST (with this option both enabled ports are on the communications card; the Ethernet port located on the base CPU is disabled)
Protocols:	Modbus TCP, DNP3.0, IEC60870-5-104, IEC 61850 Ed.2, IEC 61850 Ed.2 GOOSE, IEEE 1588 (PTP version 2), SNTP, IEC 62439-3 clause 4 (PRP), OPC-UA
Wavelength:	1310nm
Typical link distance:	4 km

ETHERNET – CARD OPTION “S” - 2X ST FIBER PORTS

Emitter, fiber type	Cable type	Transmit power	Received sensitivity	Power budget max	Optical input power
1300 nm Multi-mode	62.5/125 μm	-20 dBm	-31 dBm	11 dBm	-14 dBm
	50/125 μm	-23 dBm	-31 dBm	7.5 dBm	-14 dBm

19.11.2 USB

USB

Standard specification:	Compliant with USB 2.0
Protocols:	Modbus TCP, TFTP

19.11.3 SERIAL

SERIAL

RS485 port:	Isolated
Baud rates:	Supports 9600, 19200, 38400, 57600, and 115200 kbps

SERIAL	
Response time:	10 ms typical
Parity:	None, Odd, Even
Protocol:	Modbus RTU, DNP 3.0, IEC 60870-5-103
Maximum distance:	1200 m (4000 feet)
Isolation:	2 kV
Cable:	24 AWG stranded, shielded twisted-pair

19.11.4 WIFI

WIFI	
Standard specification:	IEEE802.11bgn
Range:	30 ft (direct line of sight)

19.11.5 REMOTE MODBUS

REMOTE MODBUS DEVICE PROFILE	
Device Name:	BSG3 (13 alphanumeric characters maximum)
IP Address:	0.0.0.0 – standard Ethernet address
Slave Address:	254 (1 to 254)
Modbus Port:	502 (0 to 10000, default 502)
Poll Rate:	1 minute (OFF, 1 to 120 minutes), the continuous mode poll interval is defined as the poll rate interval
Trigger:	Off (any FlexLogic Operand), the trigger mode is based on the FlexLogic operand designed to trigger the poll

19.11.6 CONTROLLER AREA NETWORK

CAN (RMIO)	
Maximum Distance:	250 m (820 ft)
Cable Type:	Shielded twisted pair
Cable Gauge:	24 AWG for distances up to 100m; 22 AWG for distances up to 250 m.

19.12 CERTIFICATIONS AND APPROVALS

19.12.1 APPROVALS

	APPLICABLE COUNCIL DIRECTIVE	ACCORDING TO
CE compliance	Low voltage directive	EN60255-27
	EMC Directive	EN60255-26
	R&TTE Directive	ETSI EN300 328, ETSI EN301 489-1, ETSI EN301-489-17,
	RoHS Directive	RoHS Directive 2011/65/EU, 2015/863
North America	cULus	UL508, e57838 NKCR, NRGU
		CSA C22.2.No 14, e57838 NKCR7, NRGU7
ISO	Manufactured under a registered quality program	ISO9001

19.12.2 TESTING AND CERTIFICATION

Testing and Certification

TEST	REFERENCE STANDARD	TEST LEVEL
Dielectric voltage withstand	EN60255-5/IEC60255-27	2.3 kV
Impulse voltage withstand	EN60255-5/IEC60255-27	5 kV
Insulation resistance	IEC60255-27	500 VDC
Damped Oscillatory	IEC61000-4-18	2.5 kV CM, 1 kV DM, 1 MHz
Electrostatic Discharge	EN61000-4-2	Level 4
RF immunity	EN61000-4-3	Level 3
Fast Transient Disturbance	EN61000-4-4	Class A and B
Surge Immunity	EN61000-4-5	Level 3
Conducted RF Immunity	EN61000-4-6	Level 3
Power Frequency Immunity	IEC60255-26	Class A & B
Voltage variation, interruption and Ripple DC	IEC60255-26	PQT levels based on IEC61000-4-29, IEC61000-4-11 and IEC61000-4-17
Radiated & Conducted Emissions	CISPR11 /CISPR22	Class A
Sinusoidal Vibration	IEC60255-21-1	Class 1
Shock & Bump	IEC60255-21-2	Class 1
Seismic	IEC60255-21-3	Class 2
Power magnetic Immunity	IEC61000-4-8	Level 5
Pulse Magnetic Immunity	IEC61000-4-9	Level 4
Damped Magnetic Immunity	IEC61000-4-10	Level 4
Voltage Dip & interruption	IEC61000-4-11	0, 40, 70, 80% dips, 250/300 cycle interrupts
Harmonic Immunity	IEC61000-4-13	Class 3
Conducted RF Immunity 0-150kHz	IEC61000-4-16	Level 4
Ingress Protection	IEC60529	IP54 front

TEST	REFERENCE STANDARD	TEST LEVEL
Environmental (Cold)	IEC60068-2-1	-40C 16 hrs
Environmental (Dry heat)	IEC60068-2-2	85C 16hrs
Relative Humidity Cyclic	IEC60068-2-30	6 day humidity variant 2
EFT	IEEE/ANSI C37.90.1	4kV, 5 kHz
Damped Oscillatory	IEEE/ANSI C37.90.1	2.5 kV, 1 MHz
Dielectric Between contacts	IEEE C37.90	1500Vrms
Make and Carry	IEEE C37.90	30A /200 ops
Electrostatic Discharge (ESD)	IEEE/ANSI C37.90.3	8kV DC/ 15 kV AD
Product Safety	IEC60255-27	As per standard
Rated Burden,	IEC60255-1	Sec 6.10
Contact Performance	IEC60255-1	Sec 6.11

Note:

May contain components with FCC ID: XF6-RS9110N1122 and IC ID: 8407A-RS9110N1122

19.13 ENVIRONMENTAL

AMBIENT TEMPERATURES	
Storage/Shipping:	-40°C to 85°C
Operating:	-40°C to 60°C
Humidity	Operating up to 95% (non condensing) @ 55°C (As per IEC60068-2-30 Variant 2, 6 days)
Altitude:	2000m (standard base reference evaluated altitude) 5000m (maximum achievable altitude)
Pollution Degree:	II
Overvoltage Category:	II
Ingress Protection:	IP54 Front (845,850, 869, 889) IP 50 Front (859)
Insulation Class:	1
Noise:	0 dB

19.14 LONG-TERM STORAGE

The device should be stored in an environment that is dry, corrosive-free, and not in direct sunlight.

Correct storage will prevent premature component failures caused by environmental factors such as moisture or corrosive gases. Exposure to high humidity or corrosive environments will prematurely degrade the electronic components in any electronic device regardless of its use or manufacturer, unless specific precautions, such as those mentioned in the Environmental section, are taken.

We recommend that you power up all stored relays once per year, for one hour continuously, to avoid deterioration of electrolytic capacitors and subsequent relay failure.

CHAPTER 20

APPENDICES

20.1 ABBREVIATIONS

Abbreviation	Meaning
A	Ampere
AC	Alternating Current
A/D	Analog to Digital
AE	Accidental Energization, Application Entity
AMP	Ampere
ANG	Angle
ANSI	American National Standards Institute
APDU	Application Protocol Data Unit
AR	Automatic Reclosure
ARP	Address Resolution Protocol
ASDU	Application-layer Service Data Unit
ASYM	Asymmetry
AUTO	Automatic
AUX	Auxiliary
AVG	Average
AWG	American Wire Gauge
BCD	Binary-Coded Decimal
BCS	Best Clock Selector
BER	Bit Error Rate
BF	Breaker Fail
BFI	Breaker Failure Initiate
BKR	Breaker
BLK	Block
BLKG	Blocking
BNC	Bayonet Neill-Concelman
BPNT	Breakpoint of a characteristic
BRKR	Breaker
CA	Certificate Authority
CAP	Capacitor
CC	Coupling Capacitor
CCVT	Coupling Capacitor Voltage Transformer
CFG	Configure / Configurable
.CFG	Filename extension for oscillography files
CHK	Check
CHNL	Channel
CID	Configured IED Description
CLS	Close
CLSD	Closed
CMND	Command

Abbreviation	Meaning
CMPRSN	Comparison
CO	Contact Output
COM	Communication
COMM	Communications
COMP	Compensated, Comparison
ConfRev	Configuration Revision
CONN	Connection
CONT	Continuous, Contact
CO-ORD	Coordination
CPU	Central Processing Unit
CRC	Cyclic Redundancy Code/Check
CRL	Certificate Revocation List
CRT, CRNT	Current
CSA	Canadian Standards Association
CT	Current Transformer
CVT	Capacitive Voltage Transformer
D/A	Digital to Analog
DA	Data Attribute
DANH	Doubly Attached Node with HSR
DANP	Doubly Attached Node with DANP
DC (dc)	Direct Current
DCE	Data Communications Equipment
DCS	Distributed Control System
DD	Disturbance Detector
DFLT	Default
DGNST	Diagnostics
DIFF	Differential
DIR	Directional
DISCREP	Discrepancy
DIST	Distance
DMD	Demand
DNP	Distributed Network Protocol
DPO	Dropout
DPS	Double-Point Status
DSP	Digital Signal Processor
DST	Daylight Savings Time
dt	Rate of Change
DTT	Direct Transfer Trip
DUTT	Direct Under-reaching Transfer Trip
EAD	Expert Arc Detector
EGD	Ethernet Global Data

Abbreviation	Meaning
ENCRMNT	Encroachment
EPRI	Electric Power Research Institute
.EVT	Filename extension for event recorder files
EXT	Extension, External
F	Field
FAIL	Failure
FCDA	Functional Constraint Data Attributes
FD	Fault Detector
FDH	Fault Detector high-set
FDL	Fault Detector low-set
FIR	Finite Impulse Response
FLA	Full Load Current
FO	Fiber Optic
FPGA	Field-programmable Gate Array
FREQ	Frequency
FSK	Frequency-Shift Keying
FTP	File Transfer Protocol
FxE	FlexElement™
FWD	Forward
G	Generator
GCM	Galois Counter Mode
GDOI	Group Domain of Interpretation
GFP	Graphical Front Panel
GIS	Gas Insulated Switchgear
GND	Ground
GNTR	Generator
GoCB	GOOSE Control Block
GOOSE	General Object Oriented Substation Event
GPS	Global Positioning System
GSU	Generator Step-Up
HARM	Harmonic / Harmonics
HCT	High Current Time
HGF	High-Impedance Ground Fault (CT)
HIZ	High-Impedance and Arcing Ground
HMI	Human-Machine Interface
HSR	High-availability Seamless Redundancy
HTTP	Hyper Text Transfer Protocol
HV	High Voltage
HYB	Hybrid
Hz	Hertz

Abbreviation	Meaning
I	Instantaneous
I ₀	Zero Sequence current
I ₁	Positive Sequence current
I ₂	Negative Sequence current
IA	Phase A current
IAB	Phase A minus B current
IB	Phase B current
IBC	Phase B minus C current
IC	Phase C current
ICA	Phase C minus A current
ICD	IED Capability Description
ID	Identification
IED	Intelligent Electronic Device
IEC	International Electrotechnical Commission
IEEE	Institute of Electrical and Electronic Engineers
IG	Ground (not residual) current
Igd	Differential Ground current
IGMP	Internet Group Management Protocol
IID	Instantiated IED Capability Description
IN	CT Residual Current (3I ₀) or Input
INC SEQ	Incomplete Sequence
INIT	Initiate
INST	Instantaneous
INV	Inverse
I/O	Input/Output
IOC	Instantaneous Overcurrent
IOV	Instantaneous Overvoltage
IRC	Inter-Relay Communication
IRIG	Inter-Range Instrumentation Group
ISO	International Standards Organization
IUV	Instantaneous Undervoltage
K ₀	Zero Sequence Current Compensation
kA	kiloAmpere
KDC	Key Distribution Center
kV	kiloVolt
LCD	Liquid Crystal Display
LDBN	Bias Neutral Level Detector
LED	Light Emitting Diode
LEO	Line End Open
LFT BLD	Left Blinder

Abbreviation	Meaning
LOOP	Loopback
LPU	Line Pickup
LRA	Locked-Rotor Current
LTC	Load Tap-Changer
LV	Low Voltage
M	Machine
M2M	Machine to Machine
mA	MilliAmpere
MAG	Magnitude
MAN	Manual / Manually
MAX	Maximum
Mb	Megabit
MIC	Model Implementation Conformance
MIN	Minimum, Minutes
MMI	Man Machine Interface
MMS	Manufacturing Message Specification
MRT	Minimum Response Time
MSG	Message
MTA	Maximum Torque Angle
MTR	Motor
MU	Merging Unit
MVA	MegaVolt-Ampere (total 3-phase)
MVA_A	MegaVolt-Ampere (phase A)
MVA_B	MegaVolt-Ampere (phase B)
MVA_C	MegaVolt-Ampere (phase C)
MVAR	MegaVar (total 3-phase)
MVAR_A	MegaVar (phase A)
MVAR_B	MegaVar (phase B)
MVAR_C	MegaVar (phase C)
MVARH	MegaVar-Hour
MW	MegaWatt (total 3-phase)
MW_A	MegaWatt (phase A)
MW_B	MegaWatt (phase B)
MW_C	MegaWatt (phase C)
MWH	MegaWatt-Hour
N	Neutral
N/A, n/a	Not Applicable
NCIT	Non-conventional instrument transformer
NEG	Negative
NMPLT	Nameplate
NOM	Nominal

Abbreviation	Meaning
NTR	Neutral
O	Over
OC, O/C	Overcurrent
OCSP	Online Certificate Status Protocol
OF	Overload Factor
O/P, Op	Output
OP	Operate
OPER	Operate
OPERATG	Operating
O/S	Operating System
OSI	Open Systems Interconnect
OSB	Out-of-Step Blocking
OUT	Output
OV	Overvoltage
OVERFREQ	Overfrequency
OVL	Overload
P	Phase
PB	Process Bus
PBM	Process Bus Module
PC	Phase Comparison, Personal Computer
PCNT	Percent
PF	Power Factor (total 3-phase)
PF_A	Power Factor (phase A)
PF_B	Power Factor (phase B)
PF_C	Power Factor (phase C)
PFLL	Phase and Frequency Lock Loop
PHS	Phase
PICS	Protocol Implementation & Conformance Statement
PKI	Public Key Infrastructure
PKP	Pickup
PLC	Power Line Carrier
POS	Positive
POTT	Permissive Over-reaching Transfer Trip
PP	Power Profile
PPP	Point-to-Point
PPS	Pulse per Second
PRESS	Pressure
PRI	Primary
PROT	Protection
PRP	Parallel Redundancy Protocol
PSEL	Presentation Selector

Abbreviation	Meaning
PTP	Precision Time Protocol
pu	Per Unit
PUIB	Pickup Current Block
PUIT	Pickup Current Trip
PUSHBTN	Pushbutton
PUTT	Permissive Under-reaching Transfer Trip
PWM	Pulse Width Modulated
PWR	Power
QUAD	Quadrilateral
R	Rate, Reverse
RA	Registration Authority
RCA	Reach Characteristic Angle
RedBox	Redundancy Box
REF	Reference
REM	Remote
REV	Reverse
R-GOOSE	Routable GOOSE
RI	Reclose Initiate
RIP	Reclose In Progress
RGT BLD	Right Blinder
RMA	Return Materials Authorization
RMS	Root Mean Square
ROCOF	Rate of Change of Frequency
ROD	Remote Open Detector
RRTD	Remote Resistance Temperature Detector
RST	Reset
RSTR	Restrained
RTD	Resistance Temperature Detector
RTU	Remote Terminal Unit
RX (Rx)	Receive, Receiver
s	second
S	Sensitive
SAN	Singly Attached Node
SAT	CT Saturation
SBO	Select Before Operate
SCADA	Supervisory Control and Data Acquisition
SCC	Serial Communication Controller
SCD	System Configuration Description
SCL	Substation Configuration Language
SCEP	Simple Certificate Enrollment Protocol

Abbreviation	Meaning
SEC	Secondary
SEL	Select / Selector / Selection
SENS	Sensitive
SEQ	Sequence
SFTP	Secure Shell (SSH) File Transfer Protocol, Secure File Transfer Protocol
SIR	Source Impedance Ratio
SmpSynch	Samples Synchronized
SNTP	Simple Network Time Protocol
SRC	Source
SSB	Single Side Band
SSEL	Session Selector
STATS	Statistics
SUPN	Supervision
SUPV	Supervise / Supervision
SV	Supervision, Service, Sampled Value
SYNC	Synchrocheck
SYNCHCHK	Synchrocheck
T	Time, transformer
TC	Thermal Capacity
TCP	Transmission Control Protocol
TCU	Thermal Capacity Used
TD MULT	Time Dial Multiplier
TEMP	Temperature
TFTP	Trivial File Transfer Protocol
TGFD	Transient Ground Fault Detection
THD	Total Harmonic Distortion
TMR	Timer
TOC	Time Overcurrent
TOV	Time Overvoltage
TRANS	Transient
TRANSF	Transfer
TSEL	Transport Selector
TUC	Time Undercurrent
TUV	Time Undervoltage
TX (Tx)	Transmit, Transmitter
U	Under
UC	Undercurrent
UCA	Utility Communications Architecture
UDP	User Datagram Protocol
UL	Underwriters Laboratories
UNBAL	Unbalance

Abbreviation	Meaning
UR	Universal Relay
URC	Universal Recloser Control
.URS	Filename extension for settings files
UV	Undervoltage
V/Hz	Volts per hertz
V_0	Zero Sequence voltage
V_1	Positive Sequence voltage
V_2	Negative Sequence voltage
VA	Phase A voltage
VAB	Phase A to B voltage
VAG	Phase A to Ground voltage
VARH	Var-hour voltage
VB	Phase B voltage
VBA	Phase B to A voltage
VBG	Phase B to Ground voltage
VC	Phase C voltage
VCA	Phase C to A voltage
VCG	Phase C to Ground voltage
VF	Variable Frequency
VIBR	Vibration
VT	Voltage Transformer
VTFF	Voltage Transformer Fuse Failure
VTLOS	Voltage Transformer Loss Of Signal
WDG	Winding
WH	Watt-hour
w/ opt	With Option
WGS	World Geodetic System
WRT	With Respect To
X	Reactance
XDUCER	Transducer
XFMR	Transformer
Z	Impedance, Zone

20.2 REVISION HISTORY

MANUAL PART NUMBER	RELEASE DATE
1601-0651-A1	May 2015
1601-0651-A2	August 2015
1601-0651-A3	February 2016
1601-0651-A4	December 2016
1601-0651-A5	July 2017
1601-0651-A6	February 2018
1601-0651-A7	March 2018
1601-0651-A8	July 2018
1601-0651-A9	December 2018
1601-0651-AA	May 2019
1601-0651-AB	January 2020
1601-0651-AC	August 2020
1601-0651-AD	June 2021
1601-0651-AE	December 2022
1601-0651-B300-1	September 2023
845-1601-0651-C410-1	September 2023
845-1601-0651-C420-1	February 2025
845-1601-0651-C430-1	June 2025
845-1601-0651-C430-2	December 2025
845-1601-0651-C430-3	March 2026

For information on the updates included in this release of the Instruction Manual, please refer to the latest release notes online.



GE VERNOVA

© 2024 General Electric. All rights reserved. Information contained in this document is indicative only. No representation or warranty is given or should be relied on that it is complete or correct or will apply to any particular project. This will depend on the technical and commercial circumstances. It is provided without liability and is subject to change without notice. Reproduction, use or disclosure to third parties, without express written authority, is strictly prohibited.