### **Grid Solutions**

# **MODELS 600 & 601**

## **Current Transformers with Split Core**

Window Sizes 2.00" x 5.50", 4.50"x 4.50"



#### **Application**

For energy management systems and instrumentation.

#### Frequency

50-400 Hz.

#### **Insulation Level**

600 Volts, 10 kV BIL full wave.

#### Model 600

CATALOG NUMBER	CURRENT RATIO	V.A. ± 1% CLASS	ANSI METERING CLASS AT 60 Hz			
			B0.1	B0.2	В0.5	
600-401	400:5	1.5	2.4	4.8	-	
600-501	500:5	2.0	2.4	4.8	_	
600-601	600:5	2.5	2.4	2.4	-	
600-801	800:5	5.0	1.2	1.2	2.4	
600-102	1,000:5	7.5	1.2	1.2	2.4	
600-122	1,200:5	15.0	0.6	1.2	1.2	
600-152	1,500:5	20.0	0.6	0.6	1.2	
600-162	1,600:5	20.0	0.6	0.6	1.2	
600-202	2,000:5	30.0	0.6	0.6	0.6	

#### **Continuous Thermal Current Rating Factor**

1.33 at 30°C. amb., 1.0 at 55°C. amb.

Terminals are 8-32 brass studs with one flatwasher, lockwasher, and regular nut.

Flexible leads UL 1015, 105°C, CSA approved, #16 AWG, 24" long are available.

Approximate Weight 1.5 lbs.

#### Model 601

CATALOG NUMBER	CURRENT RATIO	V.A. ± 1% CLASS	ANSI METERING CLASS AT 60 Hz		
			B0.1	B0.2	В0.5
601-401	400:5	1.0	4.8	-	-
601-501	500:5	1.5	4.8	4.8	_
601-601	600:5	2.0	2.4	4.8	-
601-801	800:5	2.5	1.2	2.4	4.8
601-102	1,000:5	5.0	1.2	1.2	4.8
601-122	1,200:5	10.0	1.2	1.2	2.4
601-152	1,500:5	15.0	1.2	1.2	1.2
601-162	1,600:5	15.0	1.2	1.2	1.2
601-202	2,000:5	20.0	0.6	0.6	1.2






#### Models 600 & 601 Split Core

These transformers are designed for assembly to an existing electrical installation without the need for dismantling the primary bus or cables.

#### **Caution:**

Proper safety precautions must be followed during installation by a trained electrician. Never install while bus is energized. The current transformer must have its secondary terminals short circuited or the burden connected, before energizing the primary circuit.

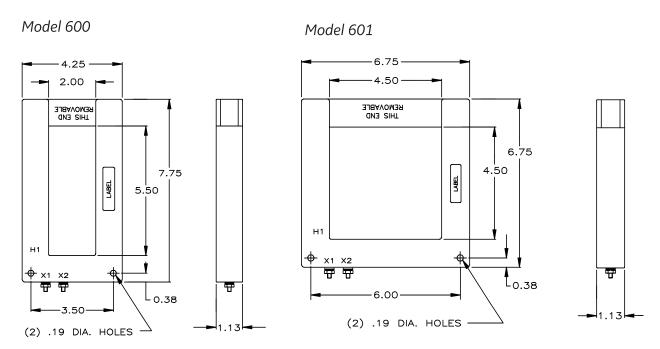

# For more information, visit **gevernova.com/grid-solutions**

