Grid Solutions

HAA AUXILIARY OR ANNUNCIATOR

Current or voltage operated units for annunciation and target applications.

Description

Generally two specific forms of the HAA are available, a current operated unit and a voltage operated unit. Example: HAA15A4 is 0.2/2 A DC and the HAA15B5 is a 125 VDC unit. Also, two general case designs are available. The single units such as HAA 15 use a molded plastic case with glass window and all others the standard drawout case.

The HAA relays contain a standard target unit which is a small hinged armature type relay with a "U" shaped magnet frame, a fixed pole piece, an armature which operates the normally open contacts and the target, and an operating coil.

Applications

The HAA auxiliary relay may be used whenever a target is required. Also, each unit has at least one set of contacts available for alarm or other similar use. See Selection Guide and Fig. 1 on next page for contact arrangements.


A typical application would be to obtain a local annunciation of an abnormal condition and to relay the alarm to a central annunciator. With this arrangement the abnormal condition would operate one of the HAA coil circuits dropping the target and causing the associated unit contacts to relay the alarm to the remote annunciator.

The HAA16B, HAA16C, and HAA19A relays are special high-speed DC voltage relays with a pickup of 1 cycle or less at rated voltage for use with transformer pressure relays for increased security. The connections of the HAA16B and HAA16C are shown in Fig. 2. Its coil is shorted by a normally closed contact of the transformer pressure relay to prevent the HAA relay from operating in case a voltage surge should flash over the normally closed contacts of the pressure relay.

Contact Ratings

The contacts will make and carry 30 A momentarily and will carry 6 A continuously.

For resistance values, pickup values and the current carrying ability of all the current operated HAA relays, refer to the GE Vernova Power Management CD or home page. The appropriate data for the voltage-operated HAA relays may be found in the tables below.

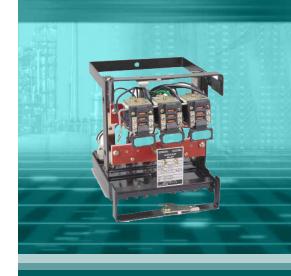

Features and Benefits

- · Current operated units available
- High speed DC voltage operated units available
- · Drawout case available
- Molded case with 3 mounting options available

Applications

- · When a target is required
- When alarm or similar functions required
- Interposing relay in conjunction with transformer SP relay

Protection and Control

Auxiliary contacts and targeting



Application

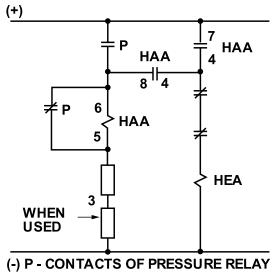


Fig. 2. Schematic for application of HAA16B or HAA16C relay with transformer fault pressure relay

Burdens

Since these are DC relays the burdens may be easily calculated. In the case of voltage operated relays the burden in W may be found by using the following expression:

PDC =
$$\frac{V2}{Rt}$$
 = Burden (W)

V = voltage rating of relay

Rt = total resistance (coil plus external resistance)

For current operated relays use the following expression:

PDC = I2Rt = Burden (W)

I = Applied Current

Voltage Units Resistances

MODEL NUMBER	CONTIN. DC RATING (V)	MAXIMUM PICKUP (VDC)	DROPOUT (VDC)	COIL RESISTANCE (Ohms)	INTERNAL RESISTANCE (Ohms)	EXTERNAL RESISTANCE (Ohms) ^②
1	48	41	4.8	840	_	_
1	125	106	12.5	5600	_	_
1	250	212	25.0	5600	5600	_
HAA16B5 & C5	24	13	2.4	14	75	_
B4 & C4	32	15	3.2	14	100	_
B1 & C1	48	22	4.8	95	350	_
B2 & C2 ②	125	60	12.5	95	350	650 ②
B3 & C3 @	250	120	25.0	95	350	1650 ②
HAA19A2A	48	22	4.8	95	350	_
A1A	125	60	12.5	95	1000	_

① Available on all HAA models except models HAA16 and HAA19

② These resistors are supplied automatically with the relay and should not be ordered separately

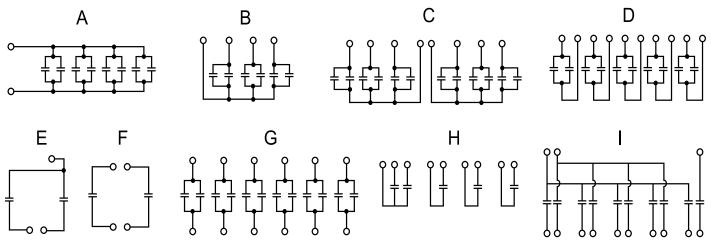


Fig. 1. Contact configurations

Selection Guide

# UNITS PER CASE	CASE	GROUP	VDC	CURRENT DC (A)	CONTACT CONFIGURATION	APPROX. WT. IN lbs (kg)	
						NET	SHIP
1	15A 15A	4 5		0.2/2.0 0.6/2.0		2 (1)	3 (1.4)
	15B 15B 15B 15E	6 5 4 1	48 125 250 —	 0.2/2.0	Figure 1E		
	15F	1	125	_			
	15H 15H 15H	1 2 3	48 125 250	_ _ _	Figure 1F		
	16B 16B 16B 16B	5* 4* 1* 2* 3*	24 32 48 125① 250①	_ _ _ _ _	- Figure 1E	3 (1.4)	4 (1.8)
	16C 16C 16C 16C 16C	5* 4* 1* 2* 3*	24 32 48 125① 250①	_ _ _ _			
	19A 19A	2A 1A	48 125		Figure 1H	8 (3.6)	12 (5.4)
3	14B 14B 14B	3A 2A 1A	48 125 250	_ _ _	Figure 1B	6 (2.7)	10 (4.5)
	14C	1A	_	0.2/2.0			
4	12A 12B 12B 12B	4A 2A 1A 3A	48 125 250	0.2/2.0 — — —	Figure 1A	7 (3.2)	10 (4.5)
	11A 11A	1A 2A		0.2/2.0 0.6/2.0		8 (3.6)	12 (5.4)
5	11B 11B 11B	3A 2A 1A	48 125 250	_ _ _	Figure 1D		
	18A	1A	125	_	Fig. 1I	8 (3.6)	12 (5.4)
	13A	1A	_	0.2/2.0		8 (3.6)	12 (5.4)
6	13B 13B 13B	3A 1A 2A	48 125 250	_ _ _	Figure 1C		
	13D	1A	_	1.0			
	13E	1A	250	_	Fig. 1G		

① Includes external resistor.

^{*} Used as an interposing relay after the transformer sudden pressure relay.

Order Code Breakdown

HAA	***	**	*	
				Contact Option
	11A 11B 12A 12B 13A 13B 13D 13E 14B 14C 15A 15B 15E 15F 15H 16B			S2 Case S2 Case S1 Case S1 Case S2 Case S2 Case S2 Case S2 Case S3 Case S3 Case S4 Case S5 Case S6 Case S8 Case S9 Cas
	18A 19A	XX		S2 Case S2 Case See Group column under Selection Guide
		^^	 	Semi-flush (not for models that use S1/S2 cases) regular mounting

For more information, visit **gevernova.com/grid-solutions**

